


Install Instruction

Shower enclosure

GD011-Y-34x74B

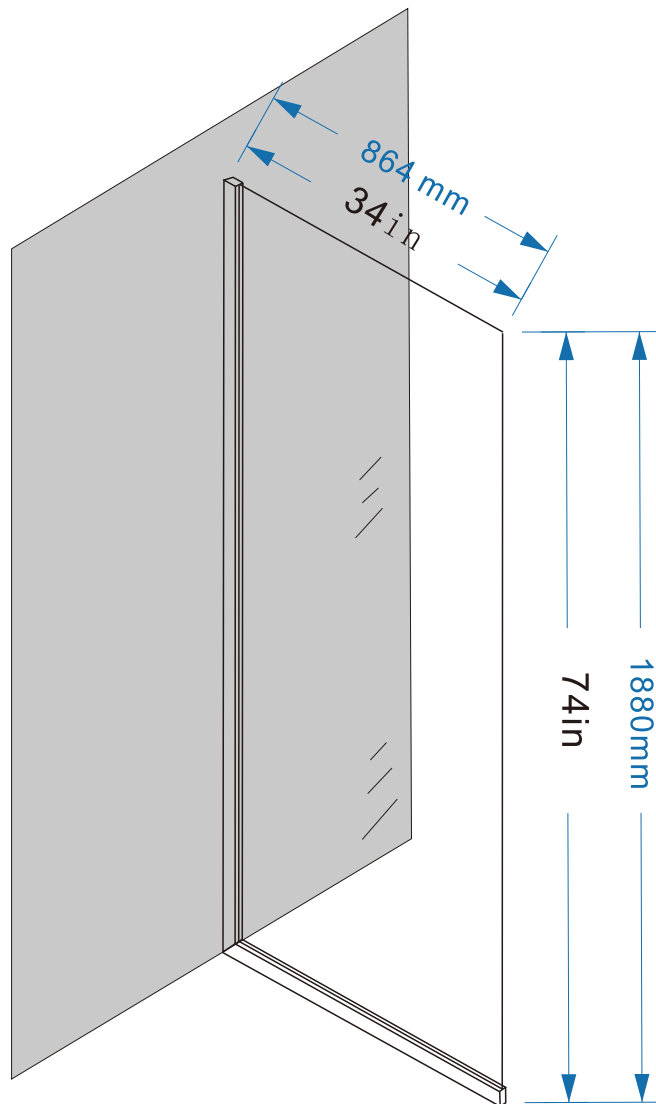

PREPARATION



You will need at least two people to install this unit properly. Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


WARNING

STRONGLY RECOMMENDS THIS INSTALLATION BE COMPLETED BY A LICENSED PROFESSIONAL.
INSTALLATION OF DOOR UNIT REQUIRES AT LEAST TWO PEOPLE.


INSTALLATION OF THE SHOWER DOORS BY AN INEXPERIENCED PERSON MAY RESULT IN GLASS BREAKAGE AND CONSEQUENTLY, CAUSE PERSONAL INJURY OR DEATH.

- Handle fragile items with care to prevent personal injury or material damage.
- The glass panels are tempered and cannot be cut. Never attempt to do so.
- Always rest glass on a level surface.

TOOLS REQUIRED (not supplied)




Silicone Gun




Electric Drill



Allen Key




Phillips Screwdriver



Pencil



Measuring Tape



Spirit Level





Hammer







Installation_Instructions

GD011-Y-34x74B

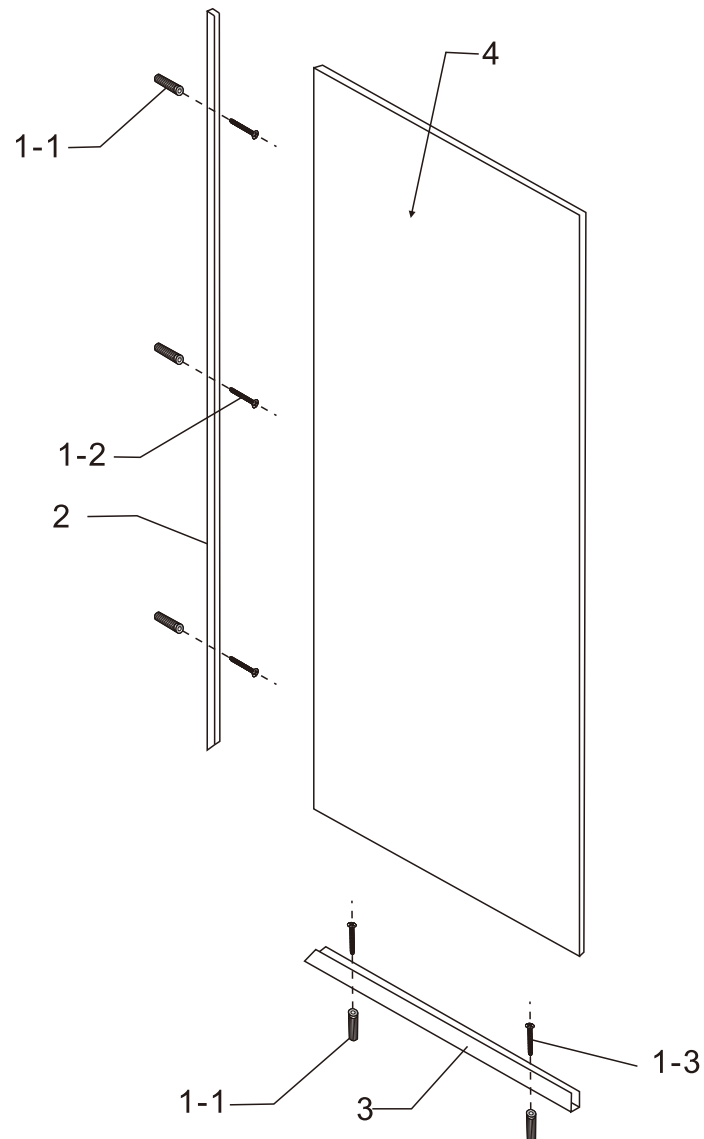

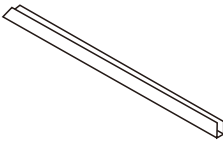1-1 Plastic Anchor  (5 PCS)	1-2 4*30 Screws  (3 PCS)	1-3 4*20 Screws  (2 PCS)
2 Wall U-Channel  (1 PCS)	3 Lower U-Channel  (1 PCS)	4 Stationary Glass Panel  (1 PCS)

Note: Installation must be carried out by a qualified and licensed professional.
The actual quality of accessories used shall be subject to the instruction manual.

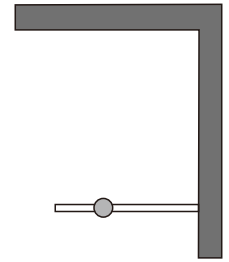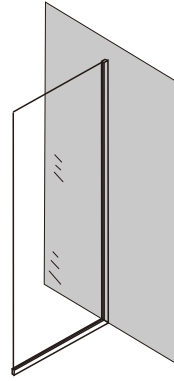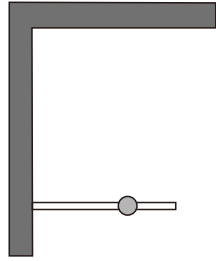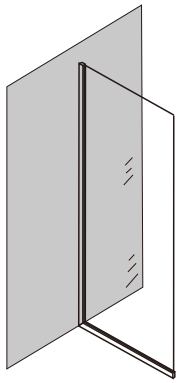

⊘ IMPORTANT


- Fiberglass, acrylic or sheetrock construction might not be sufficiently strong enough to support the shower door enclosure. You should use the wood framing from behind the face edge of the stall to provide a secure mounting to the door. Apply a bead of silicone between the walls and base of the stall.
- For optimum performance, you should install the shower door perfectly level on a level surface. By not leveling the unit during construction the unit may leak causing possible water damage.

BEFORE INSTALLATION: If needed, remove the plastic layer of the base border. Do not remove the plastic layer off the plastic platform of the base. Wall and base joints must be siliconed properly.

PLEASE NOTE:

THE CLEAR GLASS MODEL HAS A REVERSIBLE DOOR AND CAN BE INSTALLED TO THE RIGHT OR LEFT SIDE. (SEE CONFIGURATION DIAGRAM BELOW)

See suggestion of configuration below.

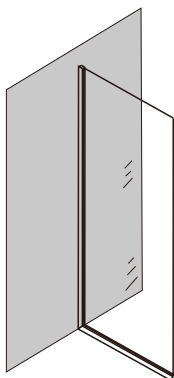

Pay attention to the location of the hole

Stationary
Glass Panel



front

MODEL GD011-Y-34x74B

The two pieces of glass are identical, no matter they are installed in position A or B, the nano-hydrophobic coating is inside the shower enclosure.



贴有此标签面为
纳米图层面


One side of the nano layer is the side with stickers attached

两块玻璃是相同的，无论装在A或B位置，
纳米疏水图层都在淋浴房内

INSTALLATION MANUAL


1

Firstly, adjust the base to ensure that the ground is level and the walls are vertical.
After determining the installation position, mark the screw hole in the Wall U-channel (# 2) with a pencil.
(Note that the sloping edge of the Wall U-channel is located below)

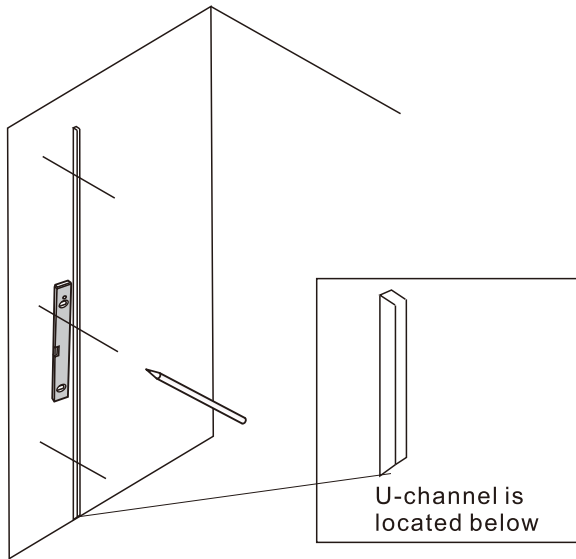


2

a. Make a 6mm hole with a electric drill at the mark.
b. Insert plastic anchor (1-1).

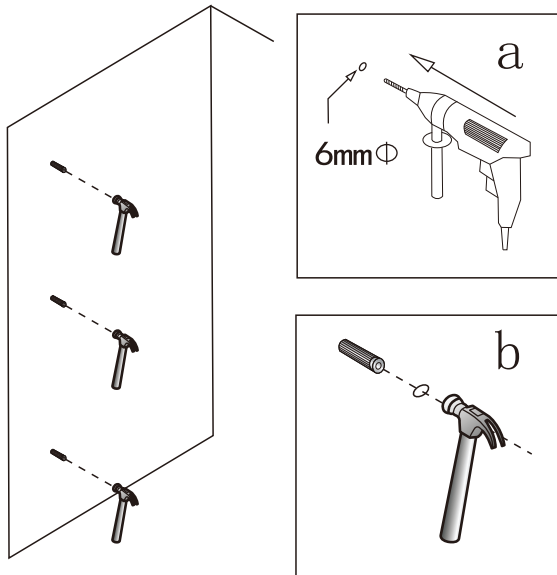

3


Install the wall U-channel (# 2) on the upper wall (note that the diagonal opening is at the bottom).
Secure with 4 * 30 screws (1-2).

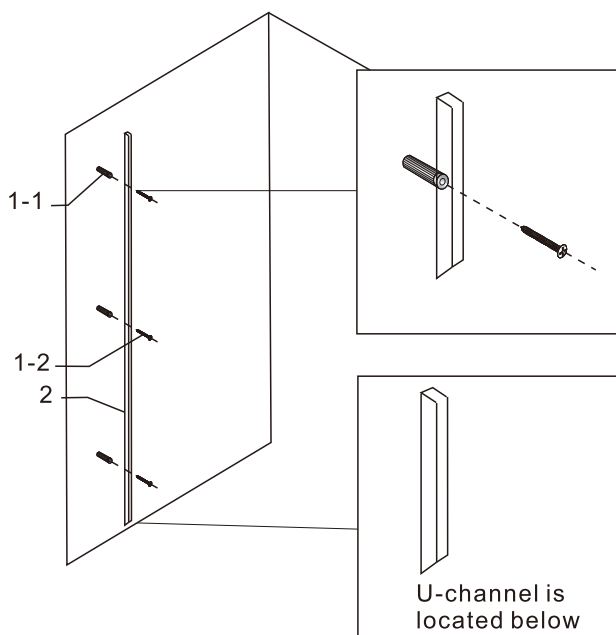

4


Align the lower U-channel (# 3) at an oblique angle, place it in the corresponding position, and ensure it is straight.

Mark the screw hole in the lower U-channel (# 3) with a pencil.

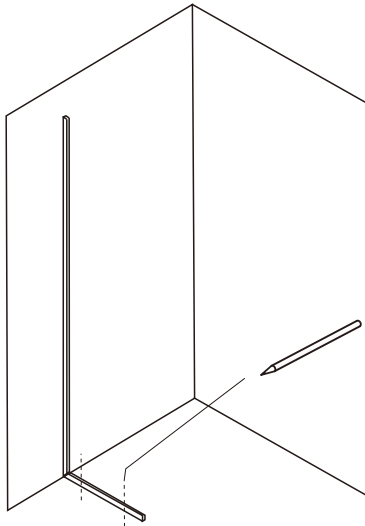


5

a. Drill a 6mm hole at the mark with a b. hand drill and insert the plastic anchor (1-1).

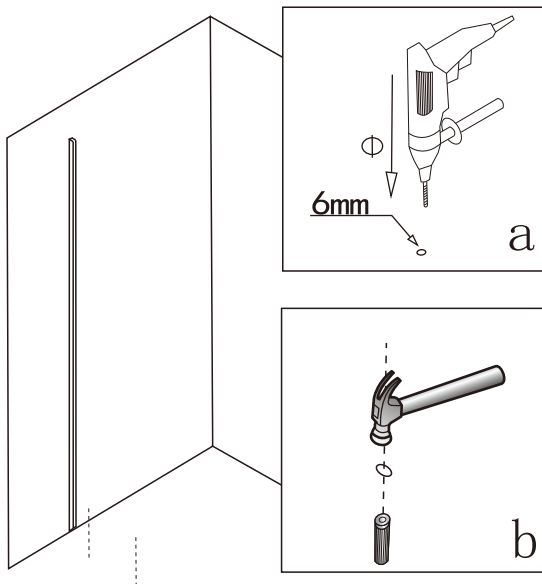

6


Fix the lower U-channel (# 3) with 4 * 20 screws(#1-3).

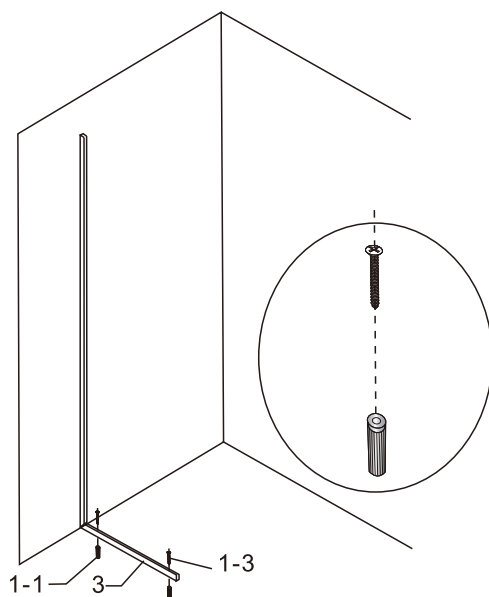


INSTALLATION MANUAL

7

Put a small silicone of glass glue into the wall u-channel(#2) and the lower u-channel(#3).

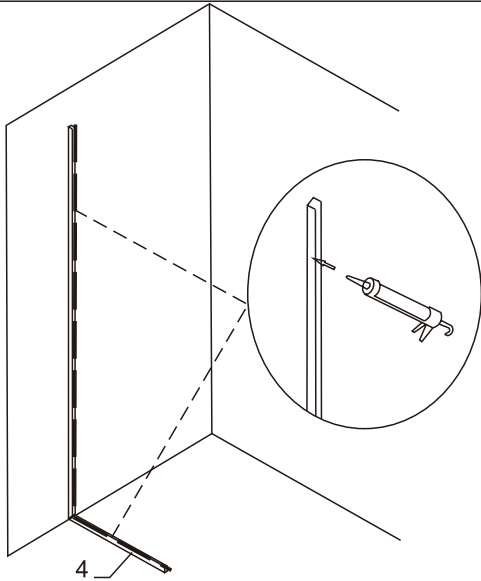

One side of the nano layer is the side with stickers attached

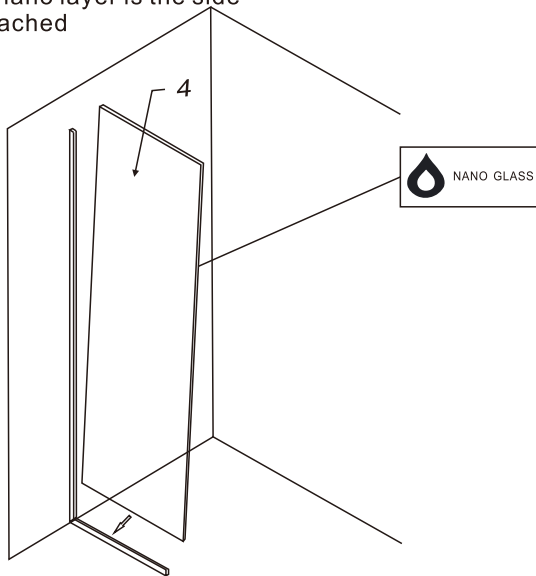


8


Inserting stationary glass panel from above and from the side (#4). Note: The nano-hydrophobic coating faces towards the inside of the shower.

9

Insert glass glue between glass (#4) and wall u-channel (#2). Insert glass glue between glass (#4) and lower u-channel (#3).

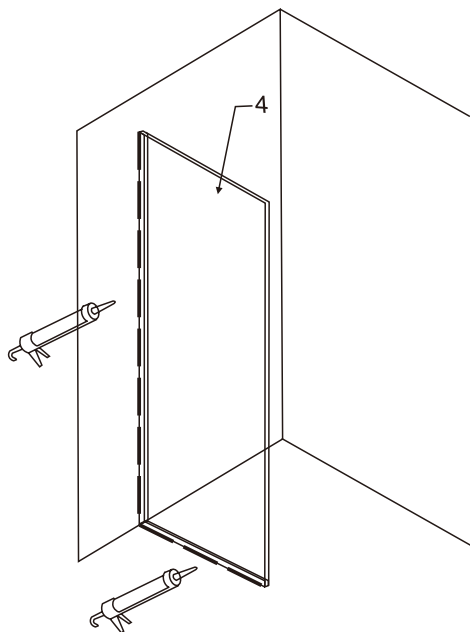

MAINTENANCE AND CARE

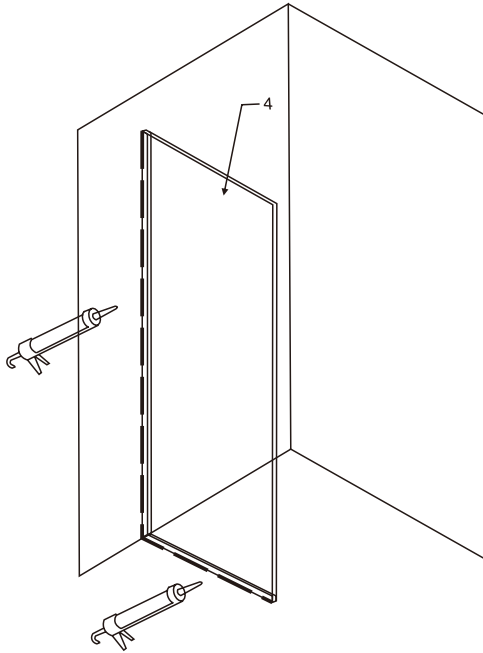

* Do not use the enclosure for at least 24 hours.



Apply glass glue between the floor and the u-channel

IMPORTANT

- WAIT 24 HOURS BEFORE USING SHOWER
 - DO NOT ALLOW WATER TO DIRECTLY HIT DOOR SEAL STRIPS.
- CLEANING INSTRUCTIONS FOR THE SHOWER CABIN AND DOOR PANEL

1. Use a mild liquid household cleaner to keep metal surfaces bright and clean. Rinse well and dry with a soft, clean cloth.
2. Remove dust with a soft, damp cloth.
3. Use a standard household window cleaner to clean the glass panels.
4. A water beading treatment, similar to what you would use on an automobile windshield, can be used on the inside of the glass to keep it looking brand new.
5. Use rubbing alcohol to clean and remove grease, oil, paint and ink.
6. Should you accidentally scratch or stain your shower enclosure, use a liquid automobile polish to remove.

IMPORTANT

1. DO NOT use abrasive cleaners, scrapers, metal brushes or any items that could scratch or dull the surface.
2. DO NOT allow surface to come in contact with acetone (nail polish remover), dry cleaning solution, lacquer thinner, gasoline or other similar products.

REGULAR CARE AND MAINTENANCE OF YOUR SHOWER ENCLOSURE

Your home is a moving entity, shifting and settling over time. We understand this and has designed their shower enclosures with this in mind. It is the responsibility of the homeowner or end user to maintain the integrity of their newly installed enclosure, using the integrated adjustability features. In order to keep your shower enclosure in optimal working condition, recommends regularly inspecting your enclosure and tightening any hardware that may have loosened during use. This simple step will insure optimal results from your shower enclosure for many years to come.