

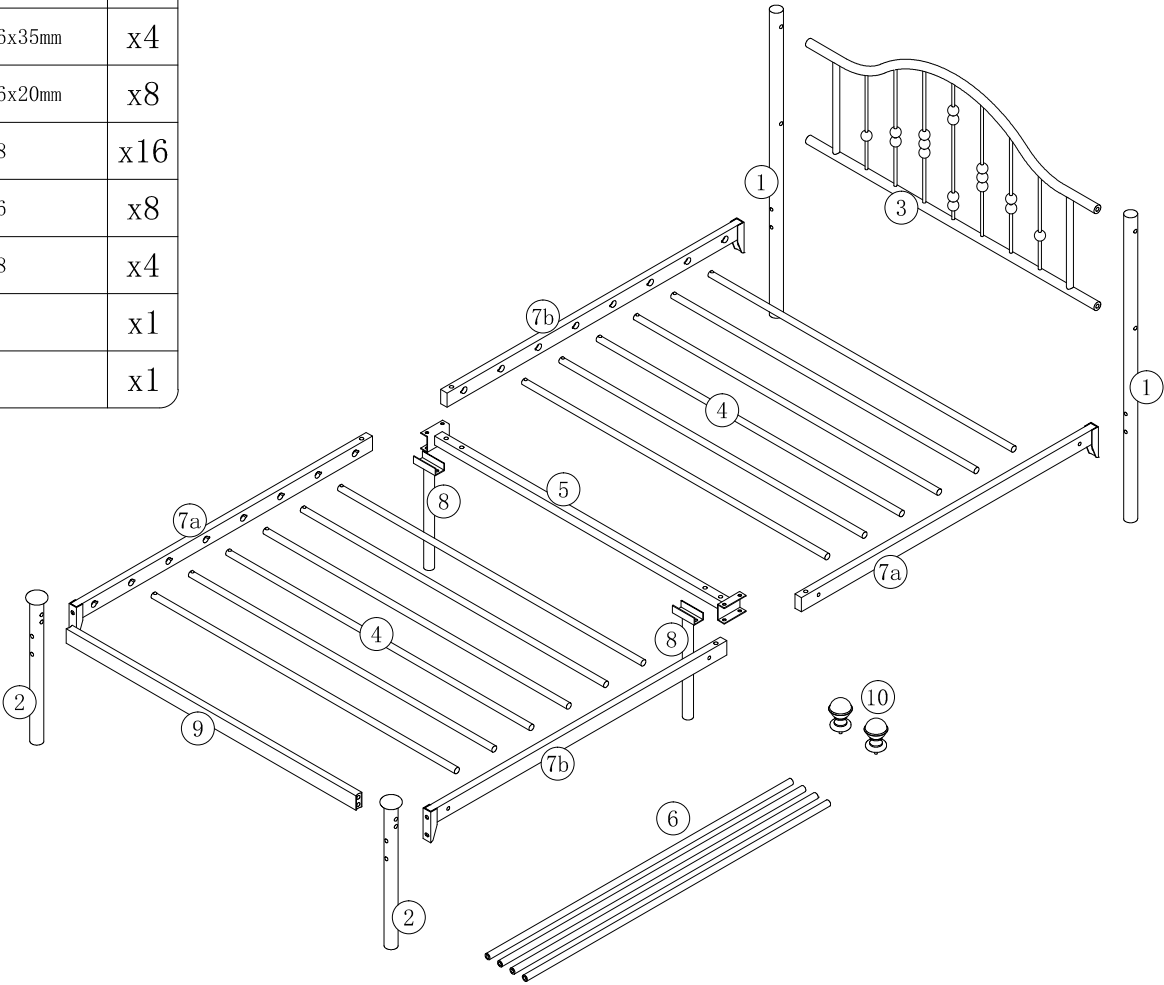
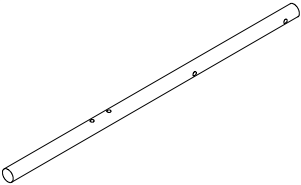

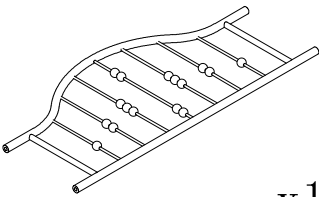
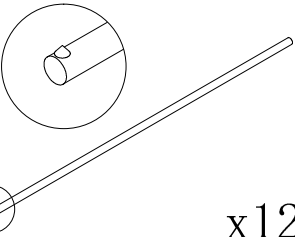
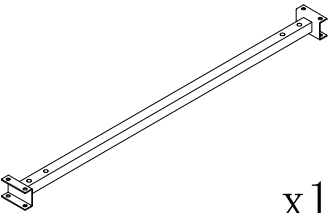
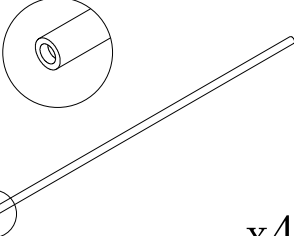
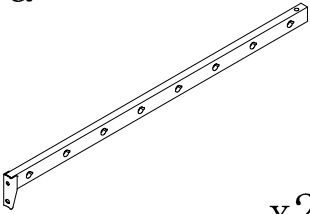
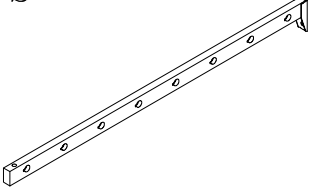
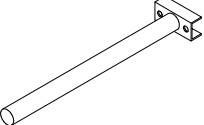



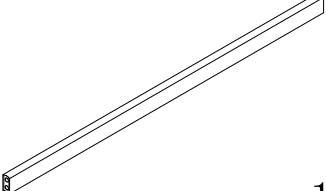


A		M8x45mm	x8
B		M6x50mm	x12
C		M6x35mm	x4
D		M6x20mm	x8
E		M8	x16
F		M6	x8
G		M8	x4
H			x1
I			x1





1  x2	2  x2	3  x1	4  x12
5  x1	6  x4	7a  x2	7b  x2
8  x2	9  x1	10  x2	

STEP 1

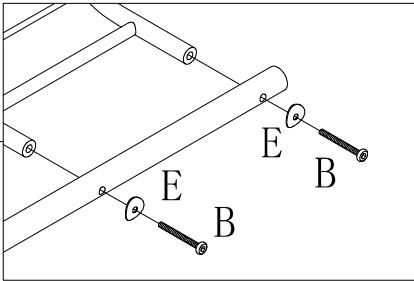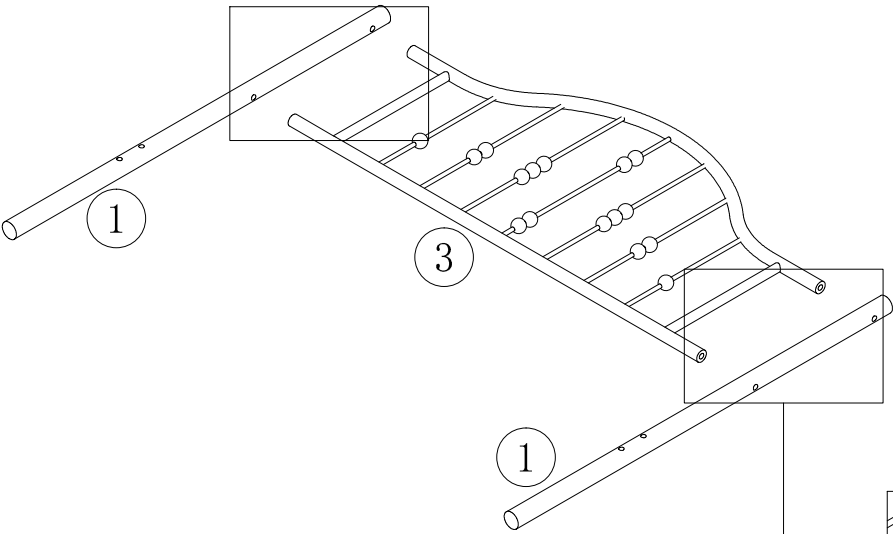


B		x4
E		x4

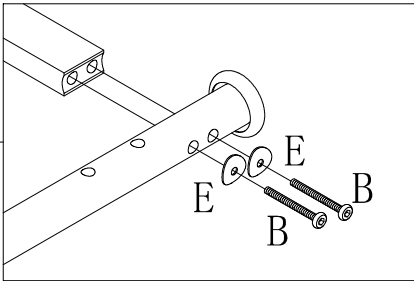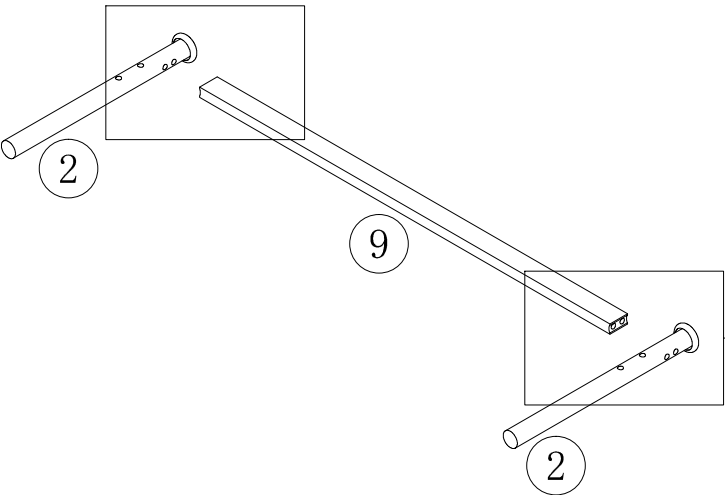

B		x4
E		x4

STEP 2


X2

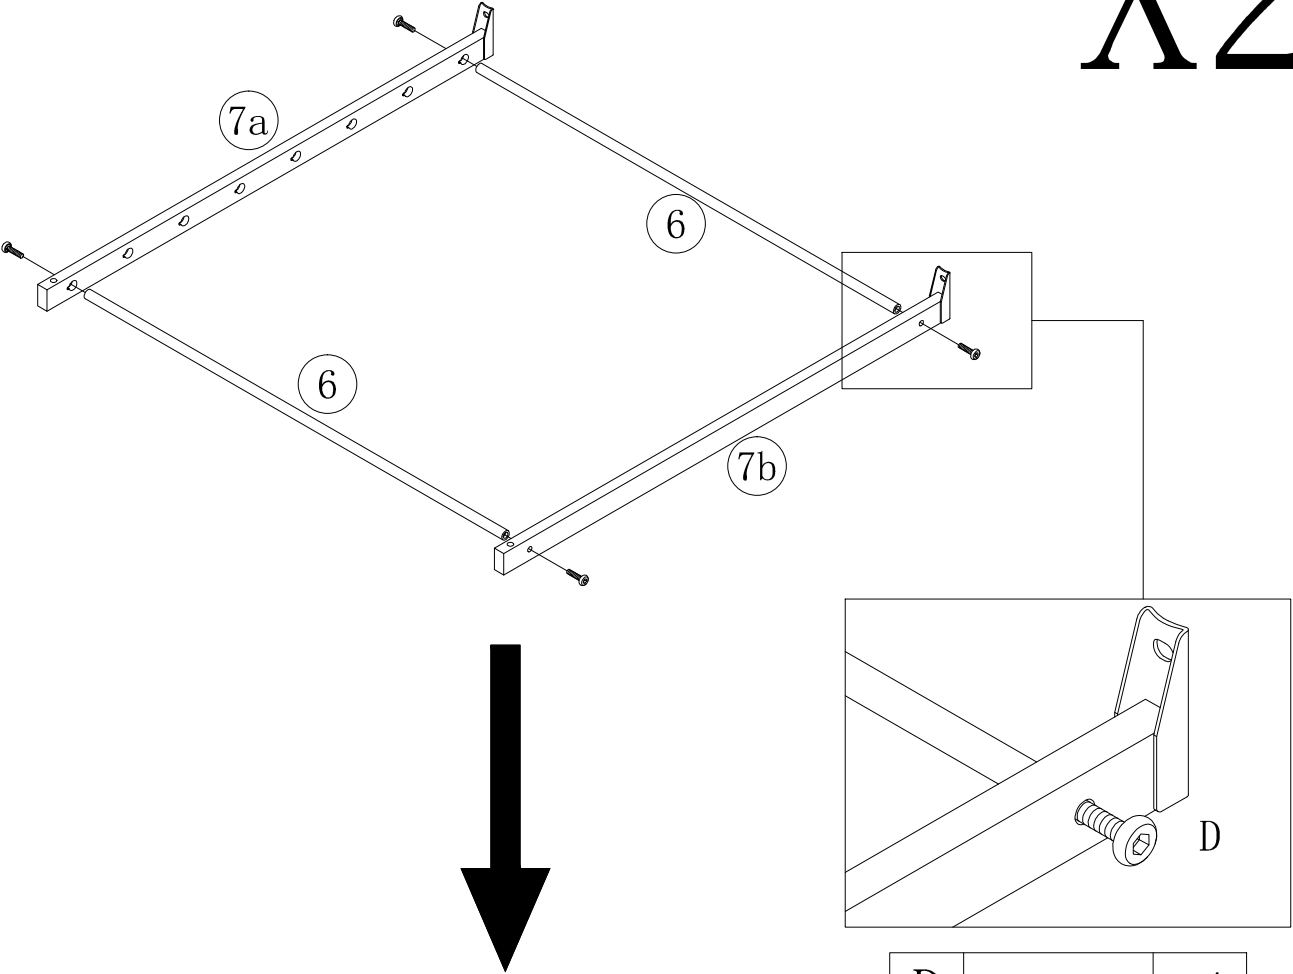

Note: please do lock the screw D directly, do not need to tighten it in this step.



STEP 3

X2

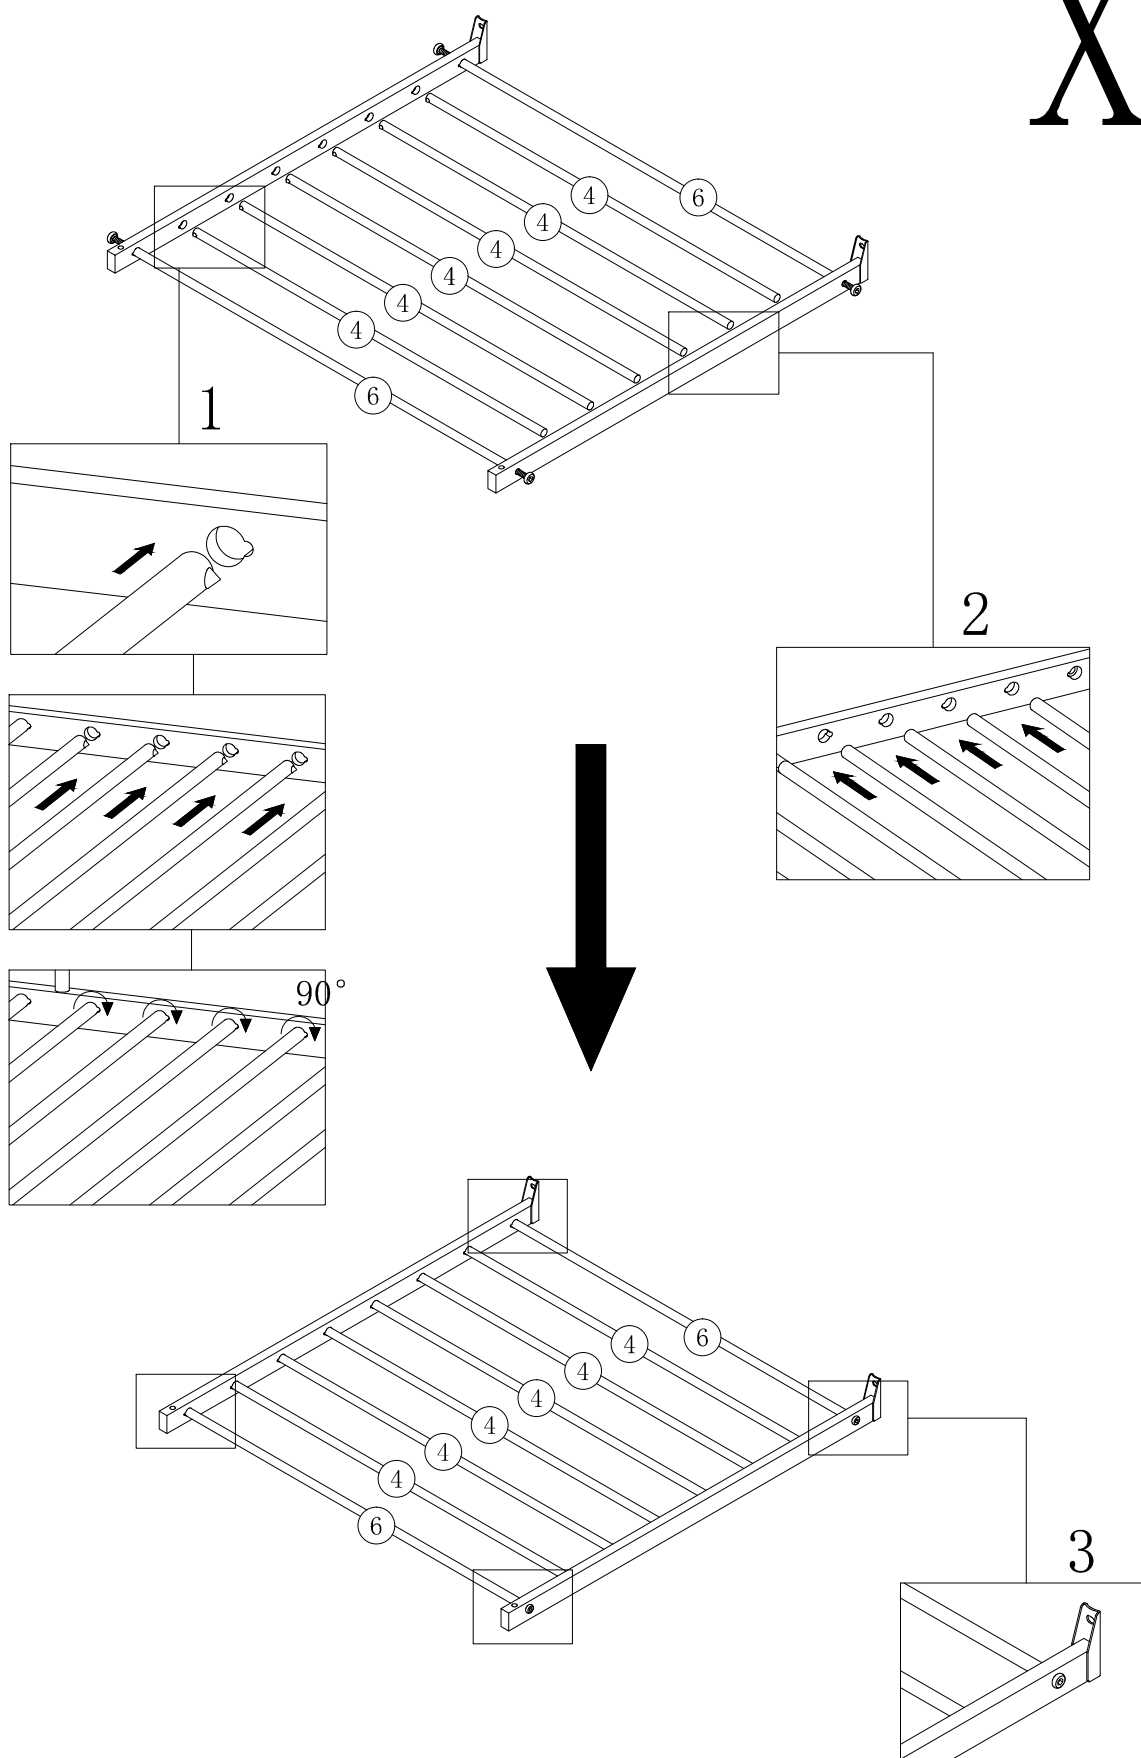


Tighten the screw D after assembling part 4.

STEP 4

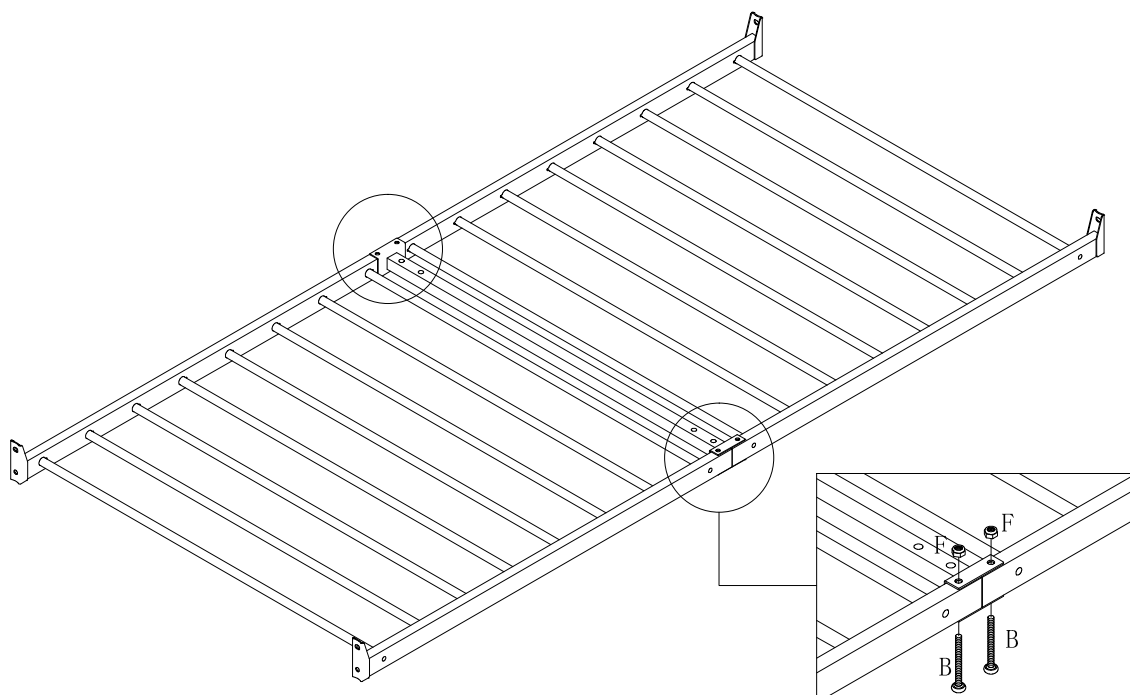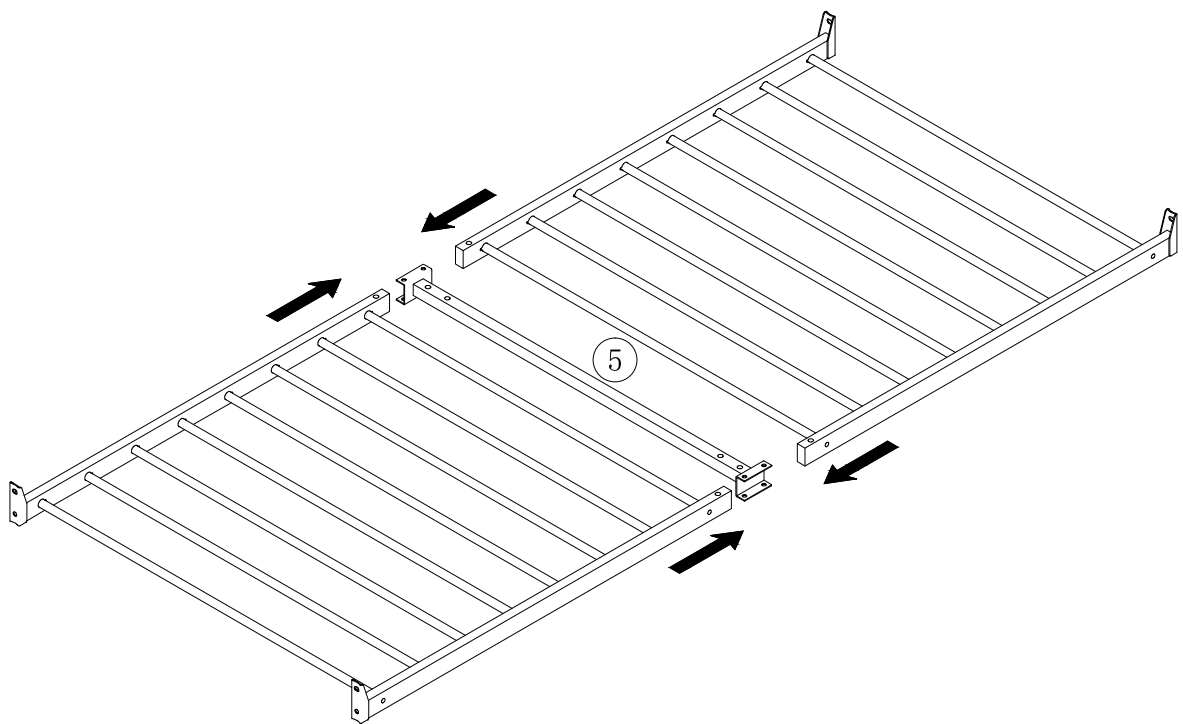

B		x4
F		x4

STEP 5

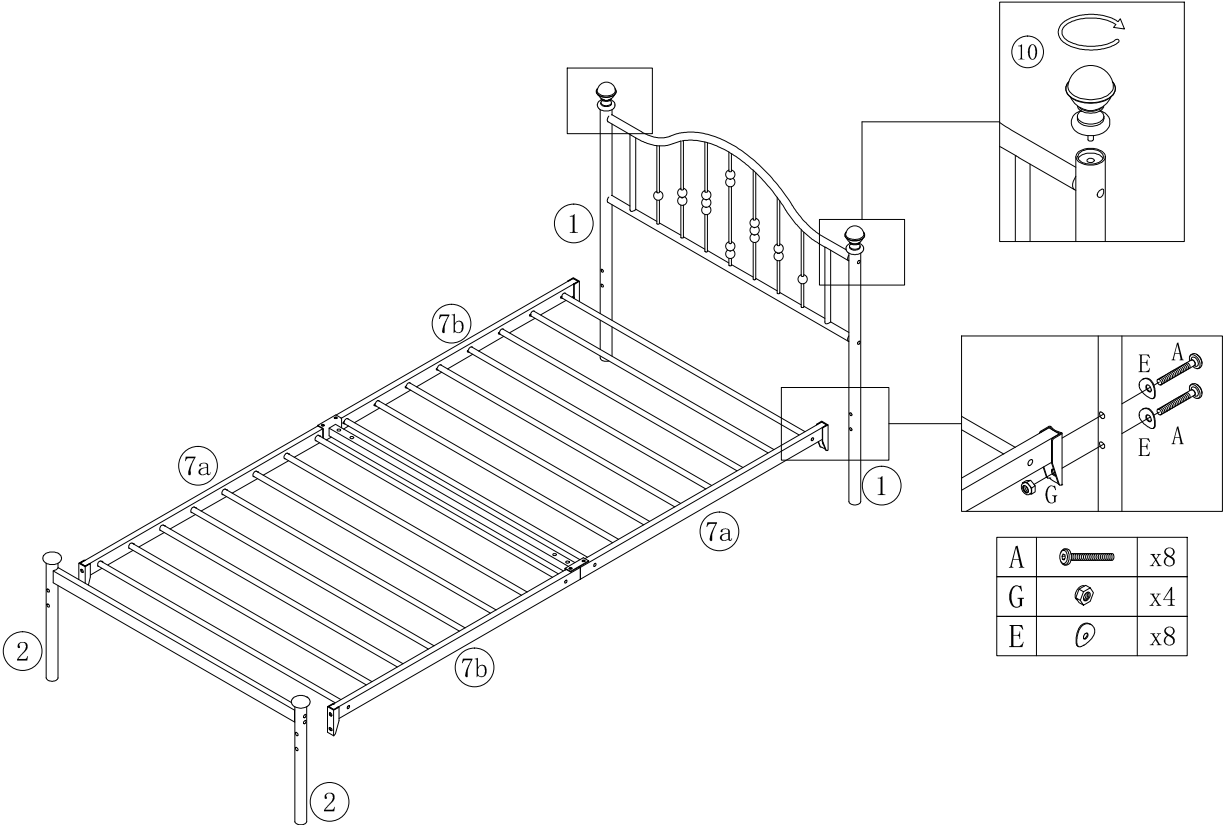

STEP 6

