



ASSEMBLY INSTRUCTIONS

FULL / FULL BUNKBED WITH TRUNDLE

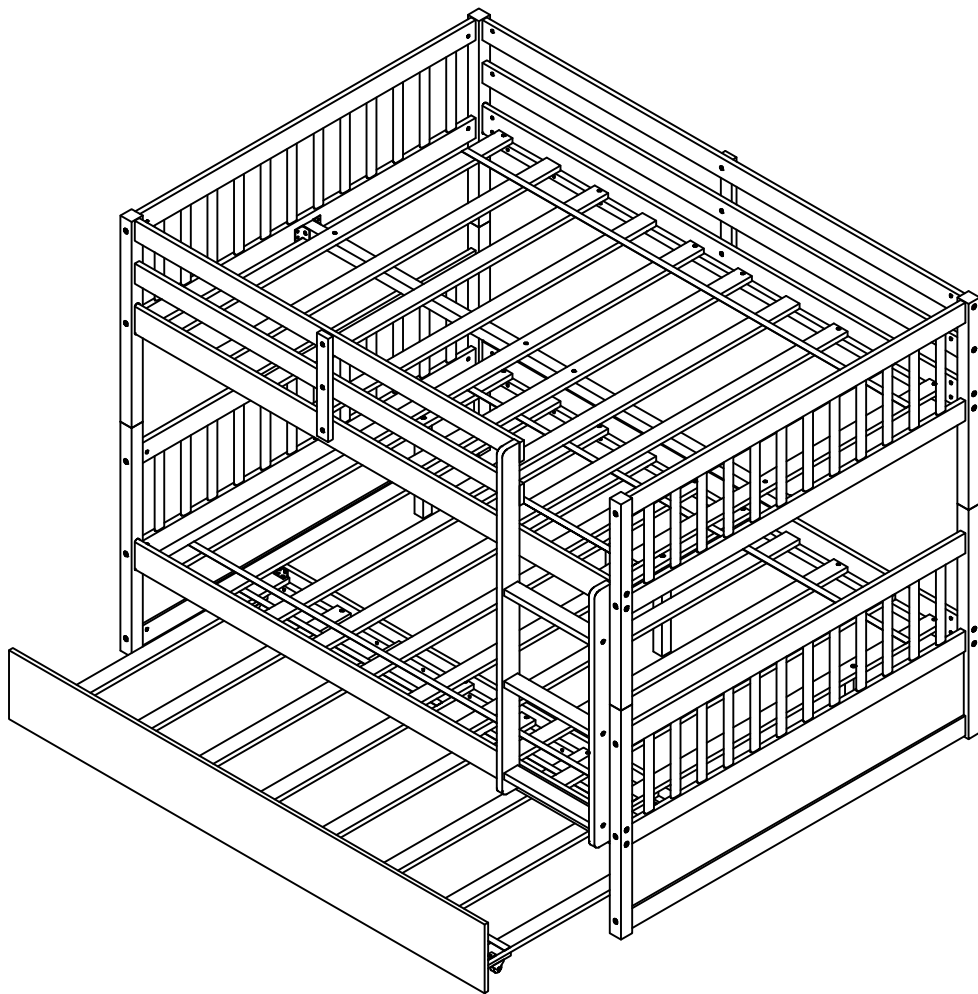




DN11701

Detail View






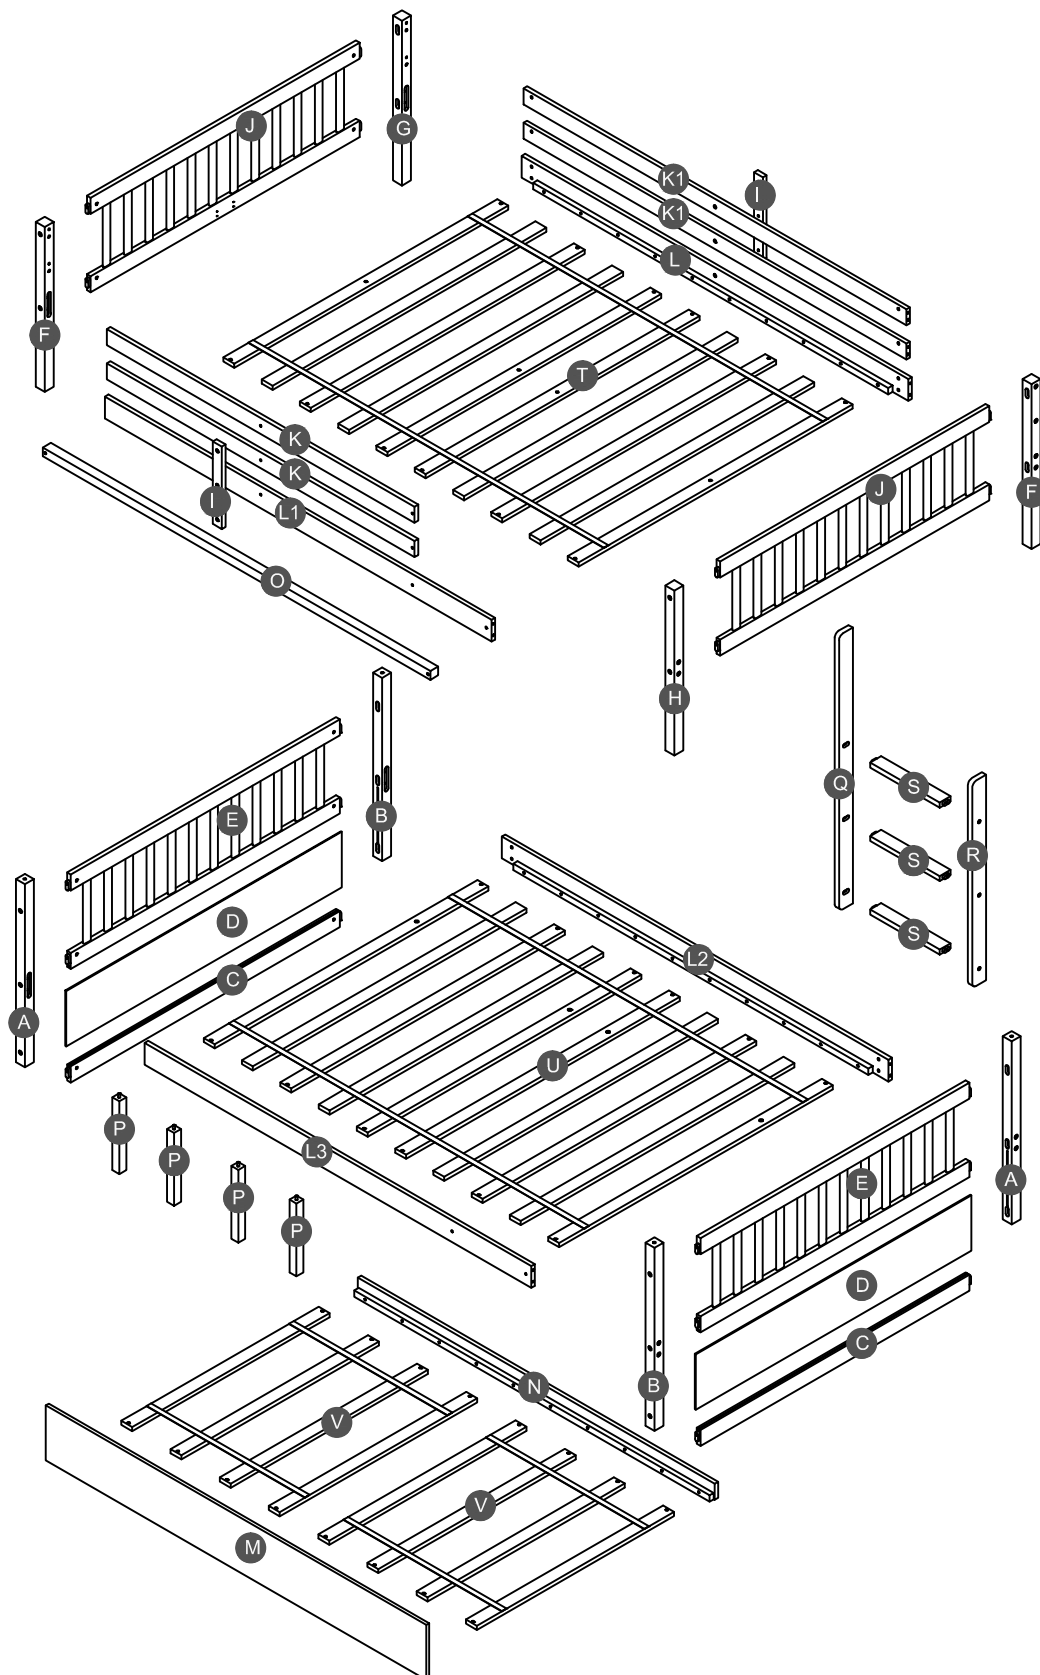


Part List








DN11701(1-2)

A  Lower leg HB&FB (Left)- 2pcs	B  Lower leg HB&FB (Right)- 2pcs	F  Upper leg HB&FB (Left)-2pcs
G  Upper leg HB (Right)-1pc	H  Upper leg FB (Right)-1pc	I  Vertical guard rail - 2pcs
K  Upper Guard rail (front) - 2pcs	K1  Upper Guard rail (back) - 2pcs	L  Upper side rail (back)- 1pc
L1  Upper side rail (front)- 1pc	L2  Lower side rail (back)- 1pc	L3  Lower side rail (front)- 1pc
M  Front panel of trundle - 1pc	N  Back panel of trundle - 1pc	O  Upper slat support - 1pc
P  Lower slat support- 4pcs	V  Trundle Slat - 8pcs	


DN11701(2-2)

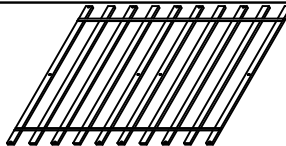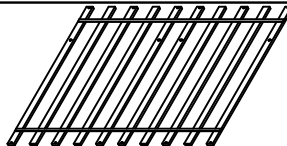C  Horizontal bar - 2pcs	D  Lower Side panel - 2pcs	E  Lower HB&FB (2pcs)
J  Upper HB&FB (2pcs)	Q  Left side ladder - 1pc	R  Right side ladder - 1pc
S  Step ladder - 3pcs	T  Upper Slat - 1set (10pcs)	U  Lower Slat - 1set (10pcs)

Hardware List


1	 Ø10*40mm Wood dowel (6pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (22pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (20pcs)
4	 (Ø12)1/4"*60mm Hex-Head bolts (6pcs)	5	 (Ø12)1/4"*40mm Hex-Head bolts (8pcs)	6	 (Ø12)1/4"*30mm Hex-Head bolts (6pcs)
7	 40*18*18*2mm Metal bracket (2pcs)	8	 1/4"*15 (9.5mm) Horizontal-Hole bolts(48pcs)	9	 Ø9*90mm Connecting bar (4pcs)
10	 (Ø13)1/4" x 9/16" Hex Cap (2pcs)	11	 116*40*27mm Hooks (2pcs)	12	 Ø3.5*15mm Wood screws (8pcs)
13	 100*63*20mm Wheels (4pcs)	14	 Ø4*30mm Wood screws (52pcs)	15	 (1/4")4.5*58mm Allen key (2pcs)
16	 95*95*18*3mm Metal bracket (2pcs)	17	 Ø3.5*15mm Wood screws (16pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !


STEP 1:

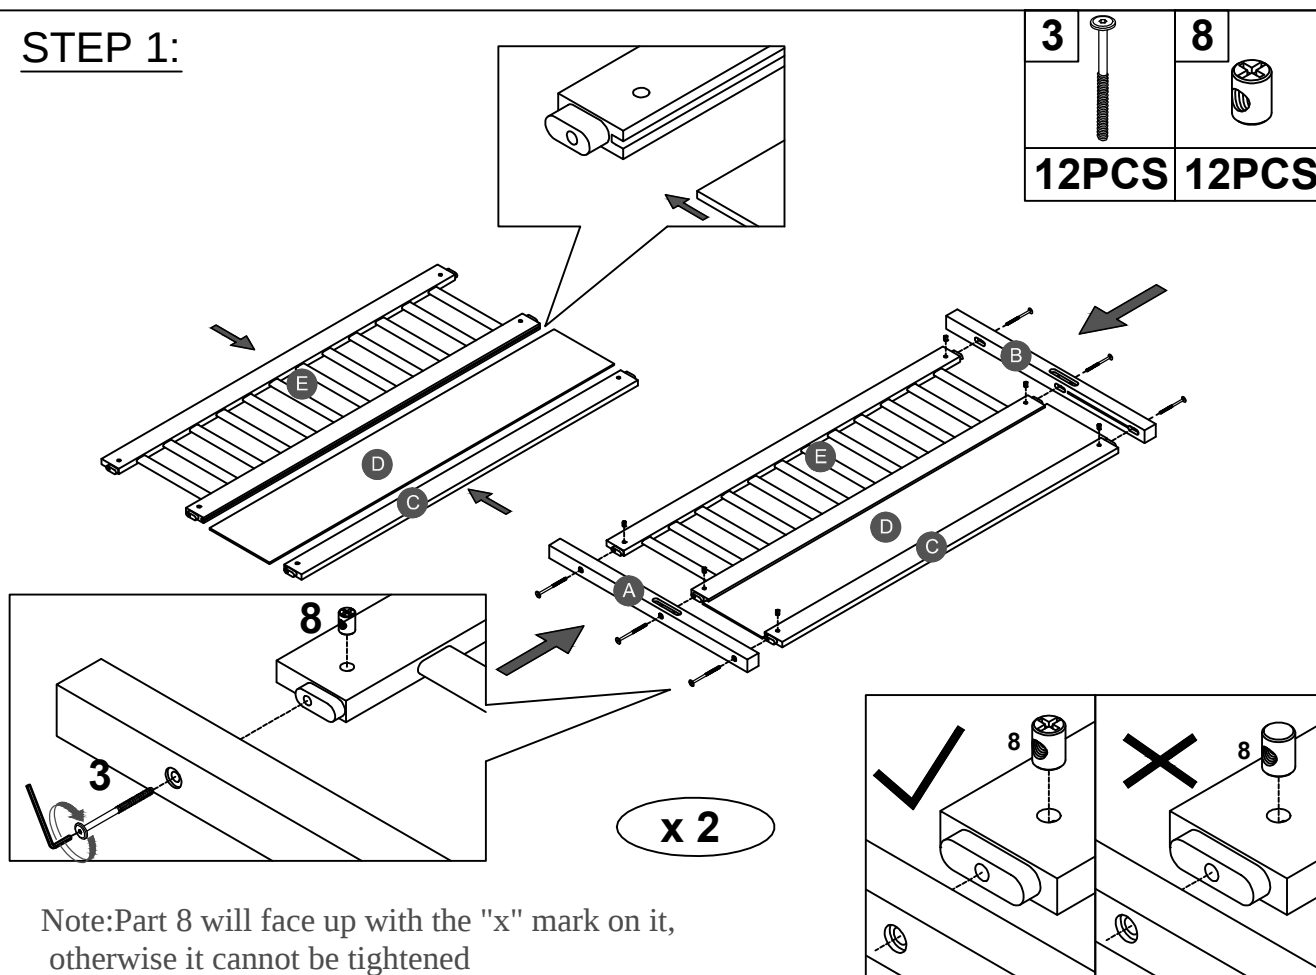

STEP 2:

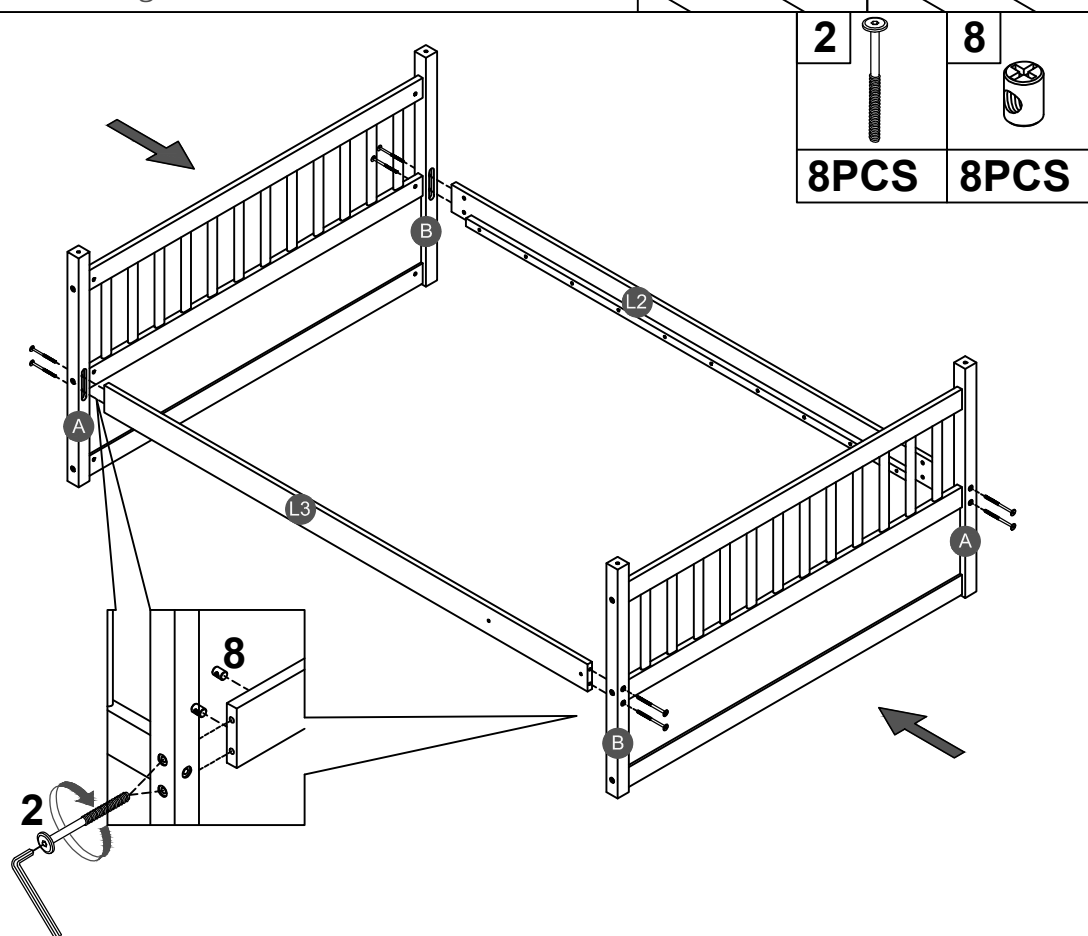


STEP 3:

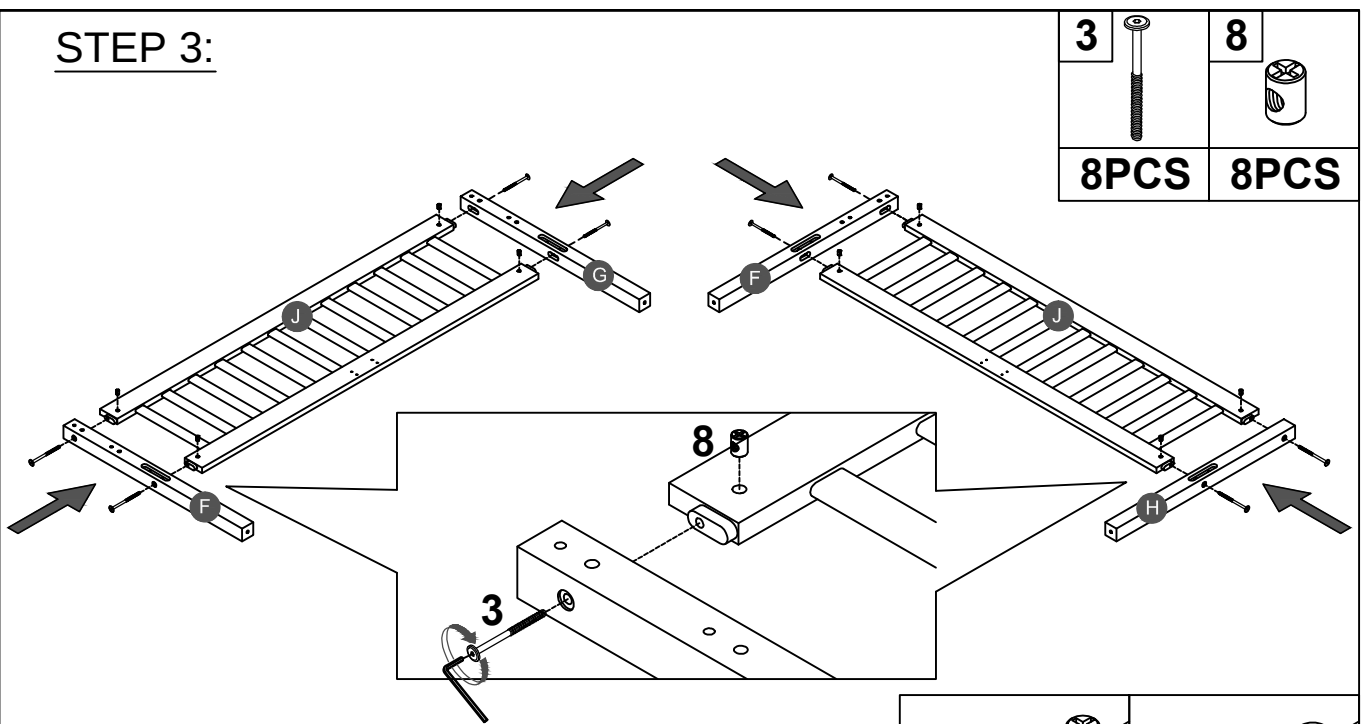


3	8
	
8PCS	8PCS

Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

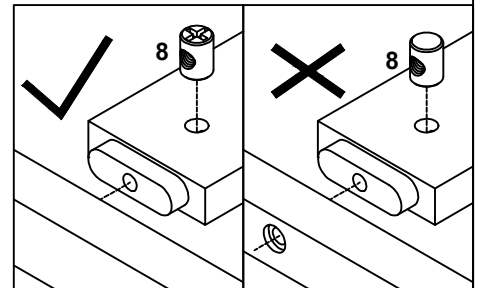


STEP 4:

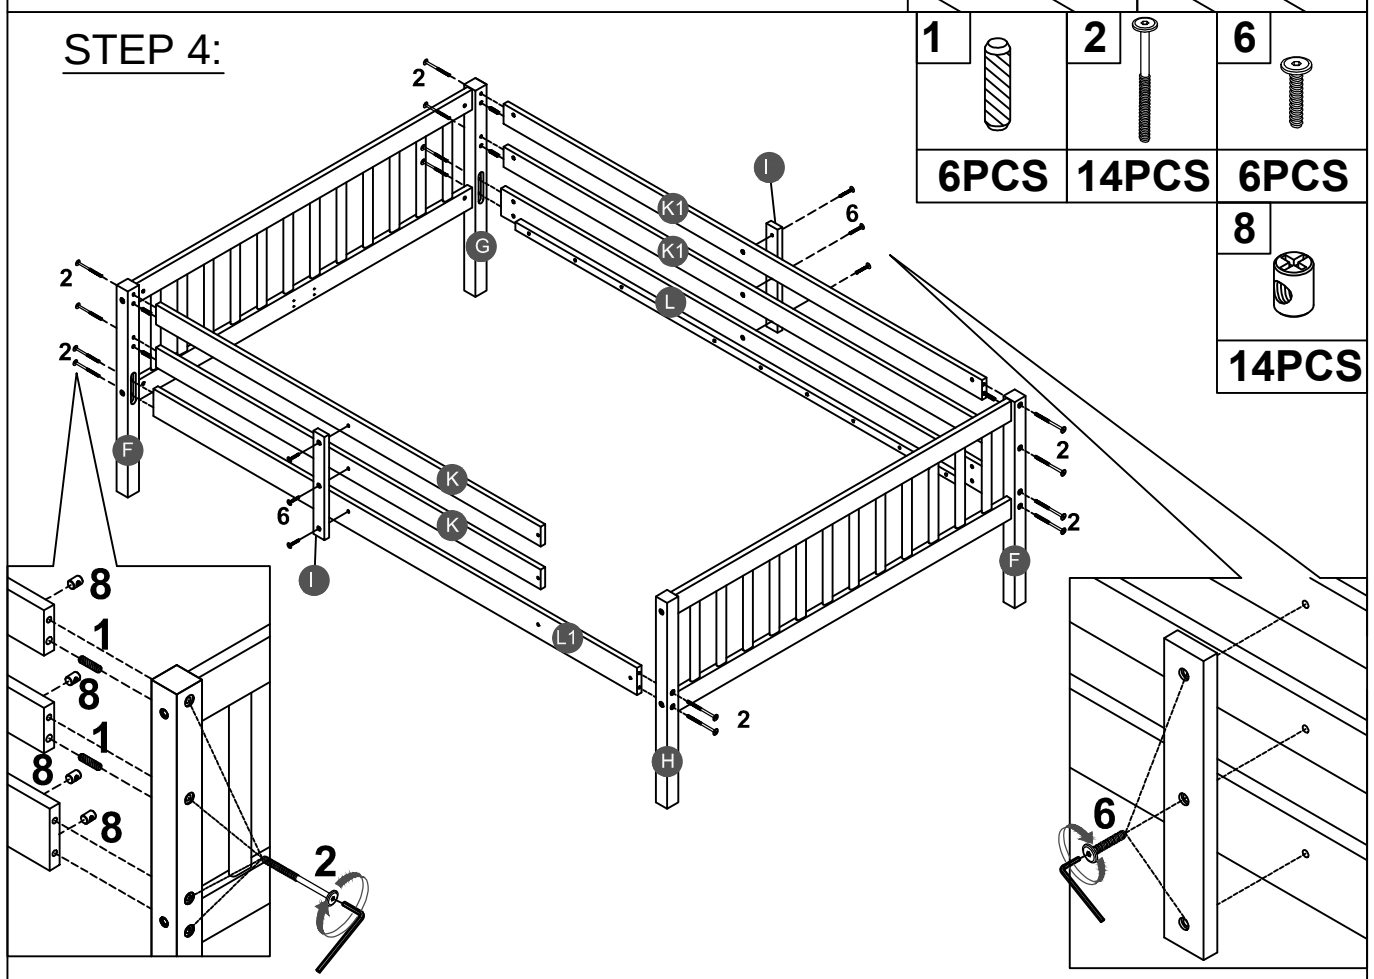


1	2	6
		
6PCS	14PCS	6PCS
		8
		
		14PCS

STEP 5:

9



4PCS

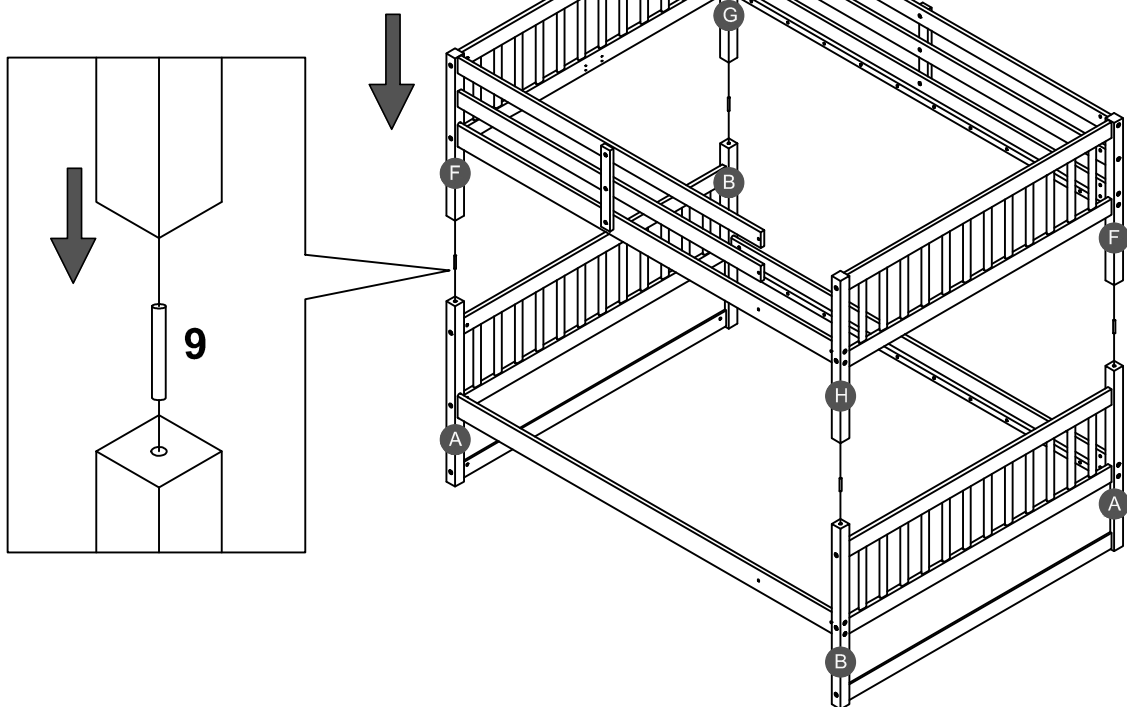

STEP 6:

4




6PCS





8




6PCS

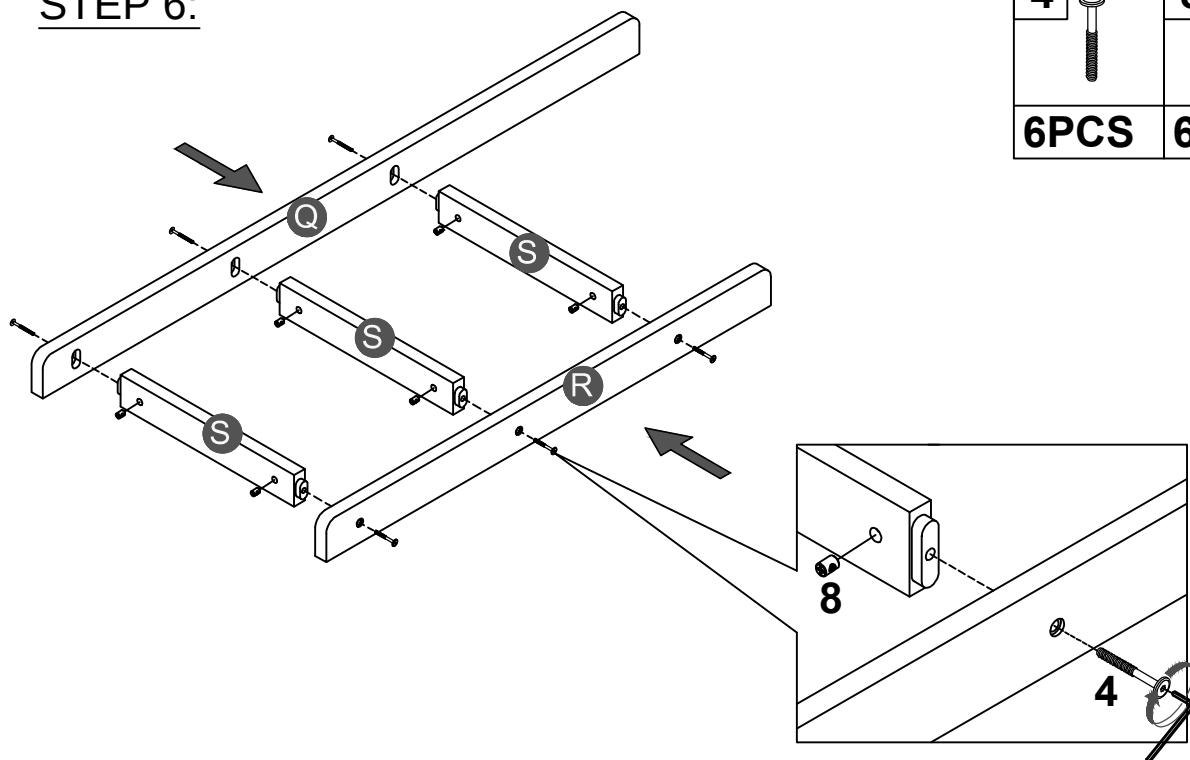


STEP 7:

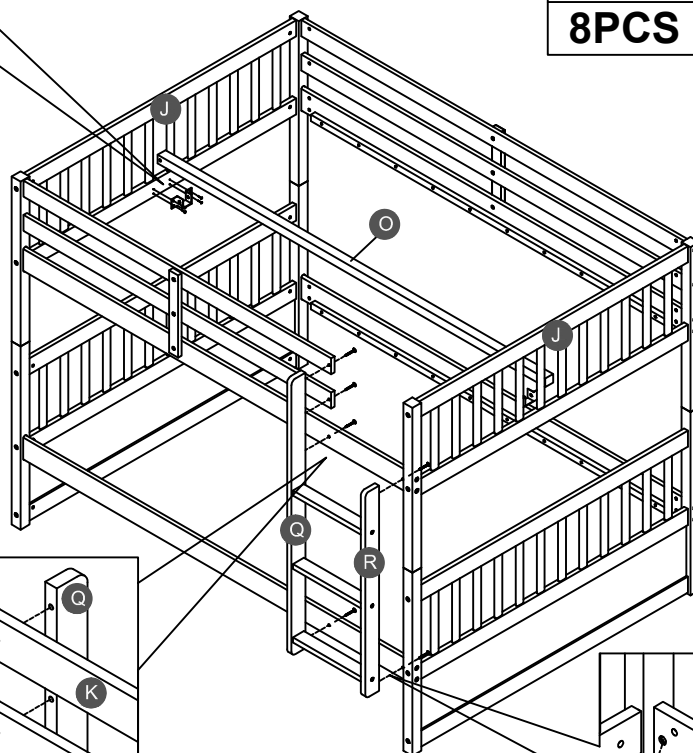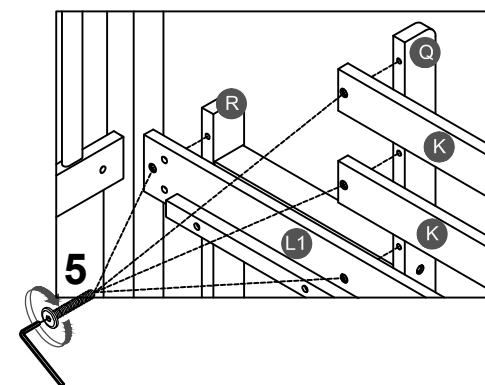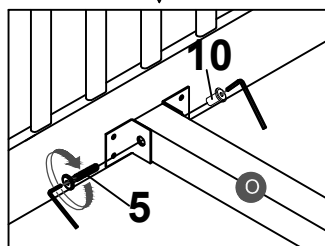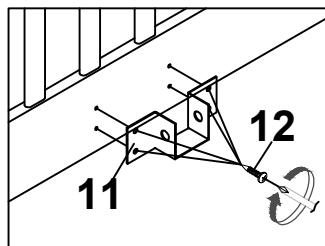



5	10	11
8PCS	2PCS	2PCS
		12
		8PCS

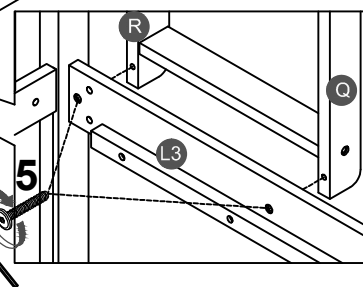

STEP 8:

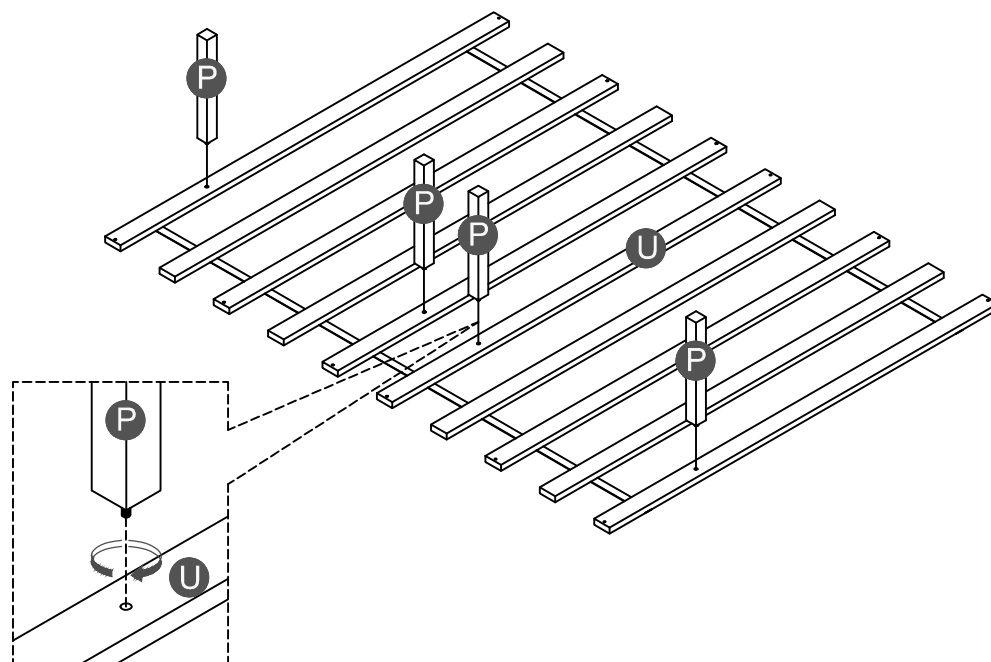




STEP 9:

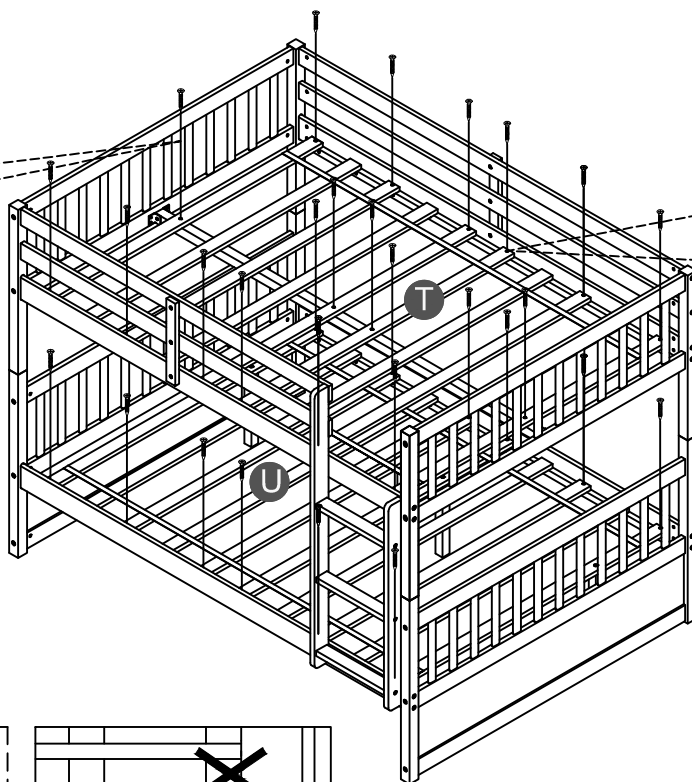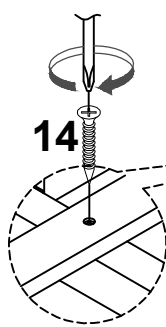

14




28PCS

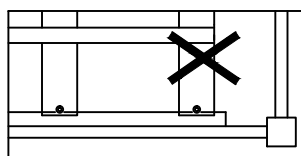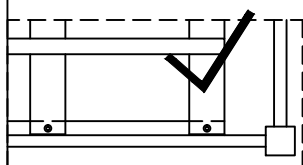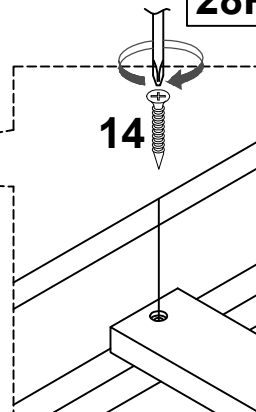

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

STEP 10:

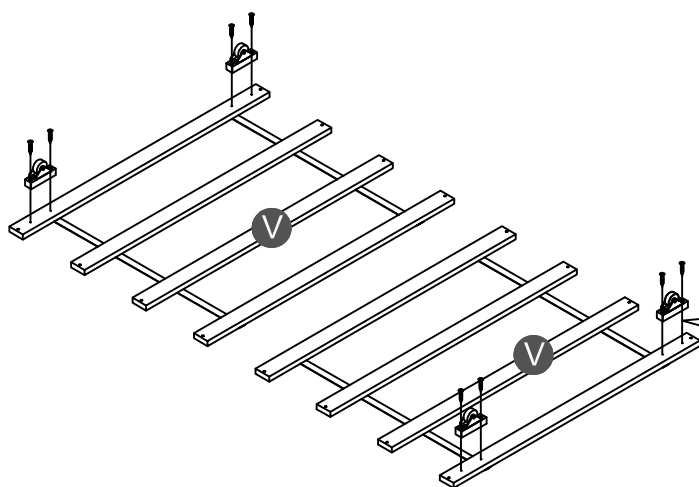

13




4PCS

14



8PCS




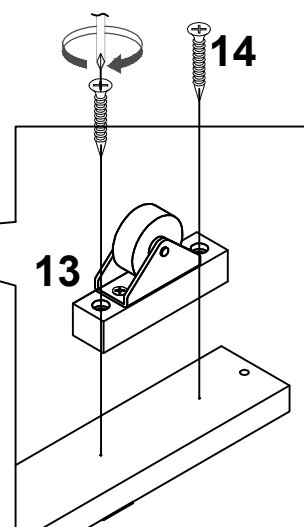


STEP 11:

14



16PCS

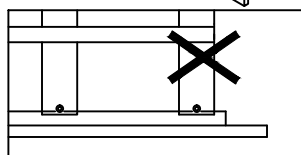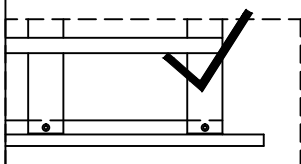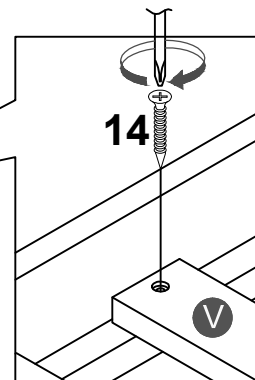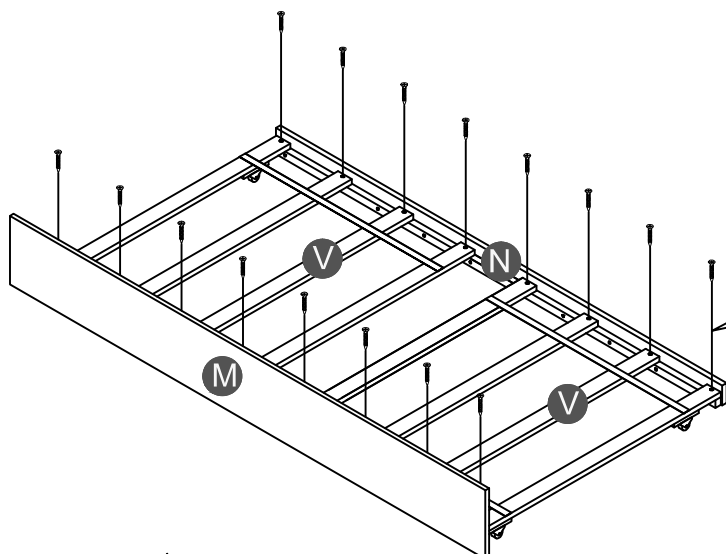

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

STEP 12:

16





2PCS


17



8PCS

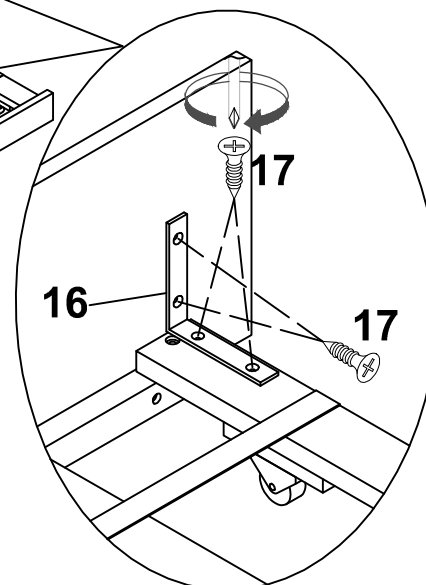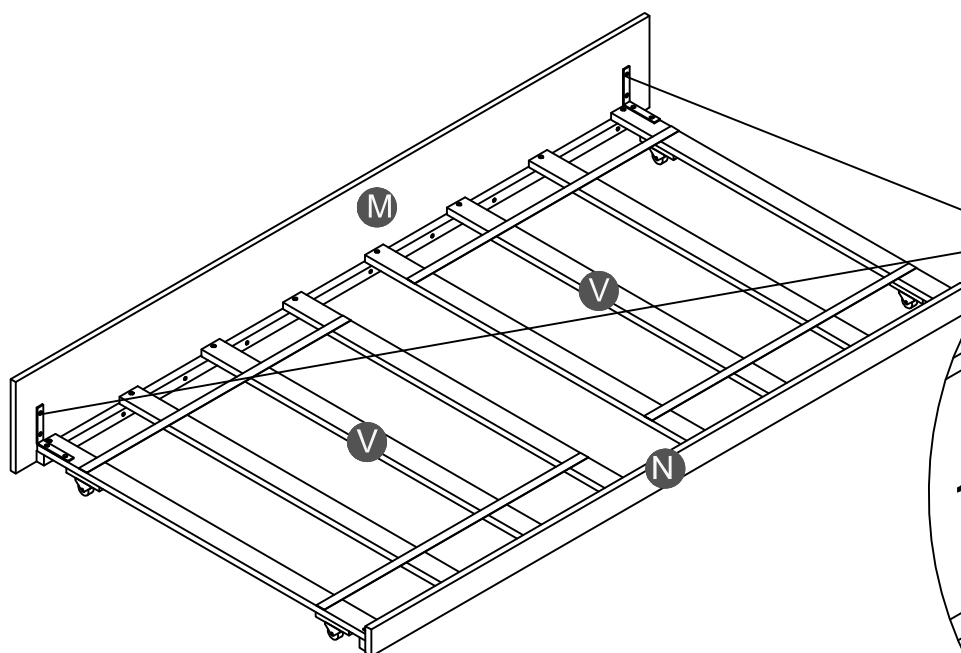


STEP 13:

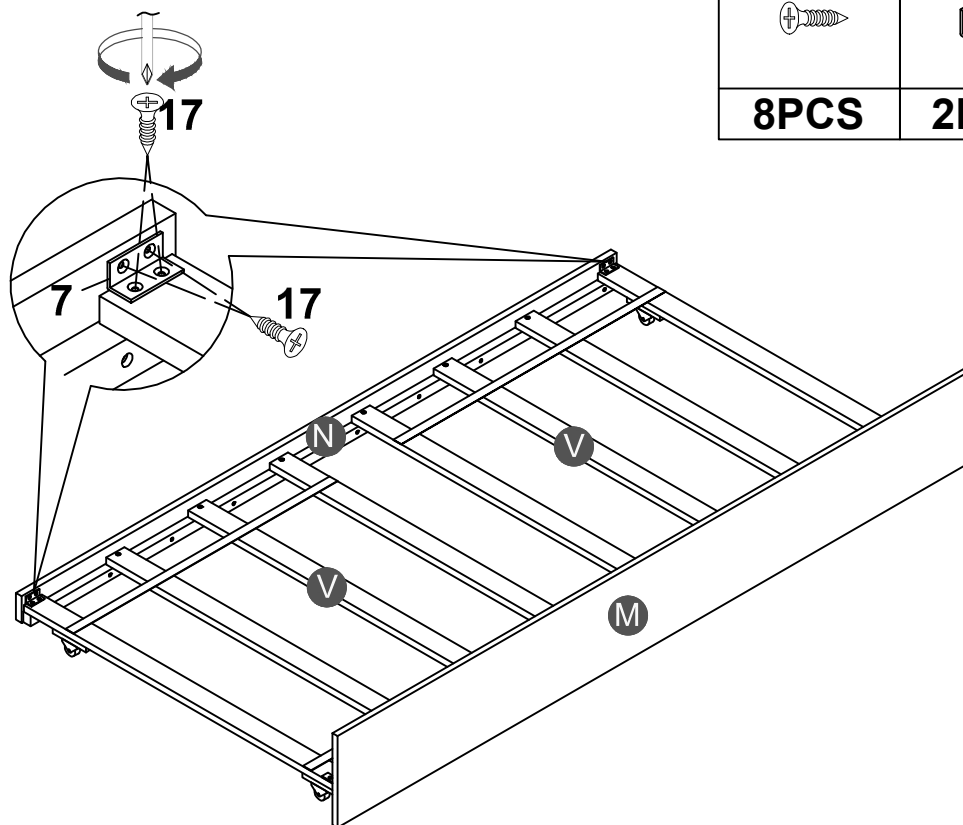

17	7
	
8PCS	2PCS

STEP 14:

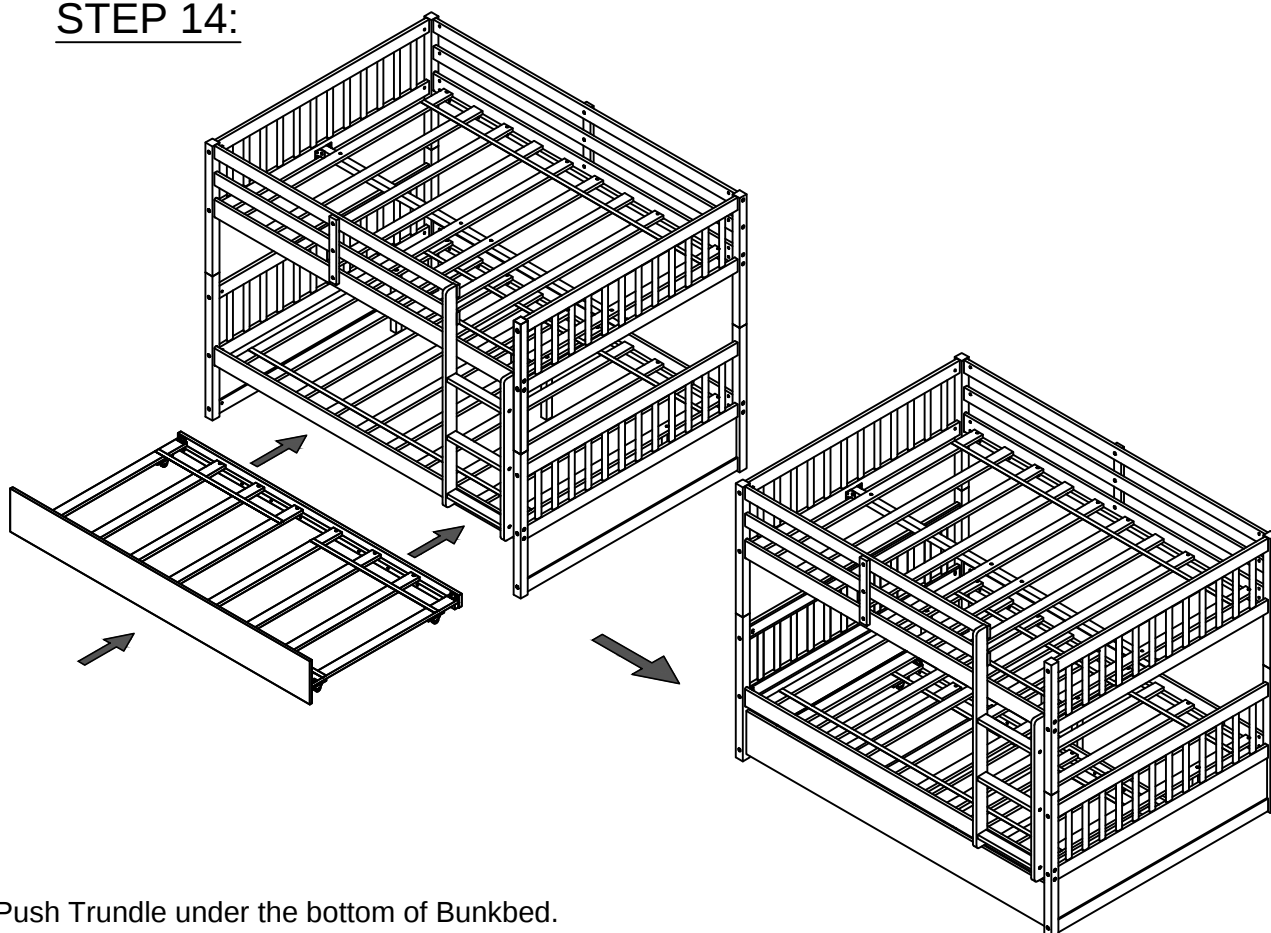

Push Trundle under the bottom of Bunkbed.