
ASSEMBLY INSTRUCTIONS

PATIO SECTIONAL SOFA SET

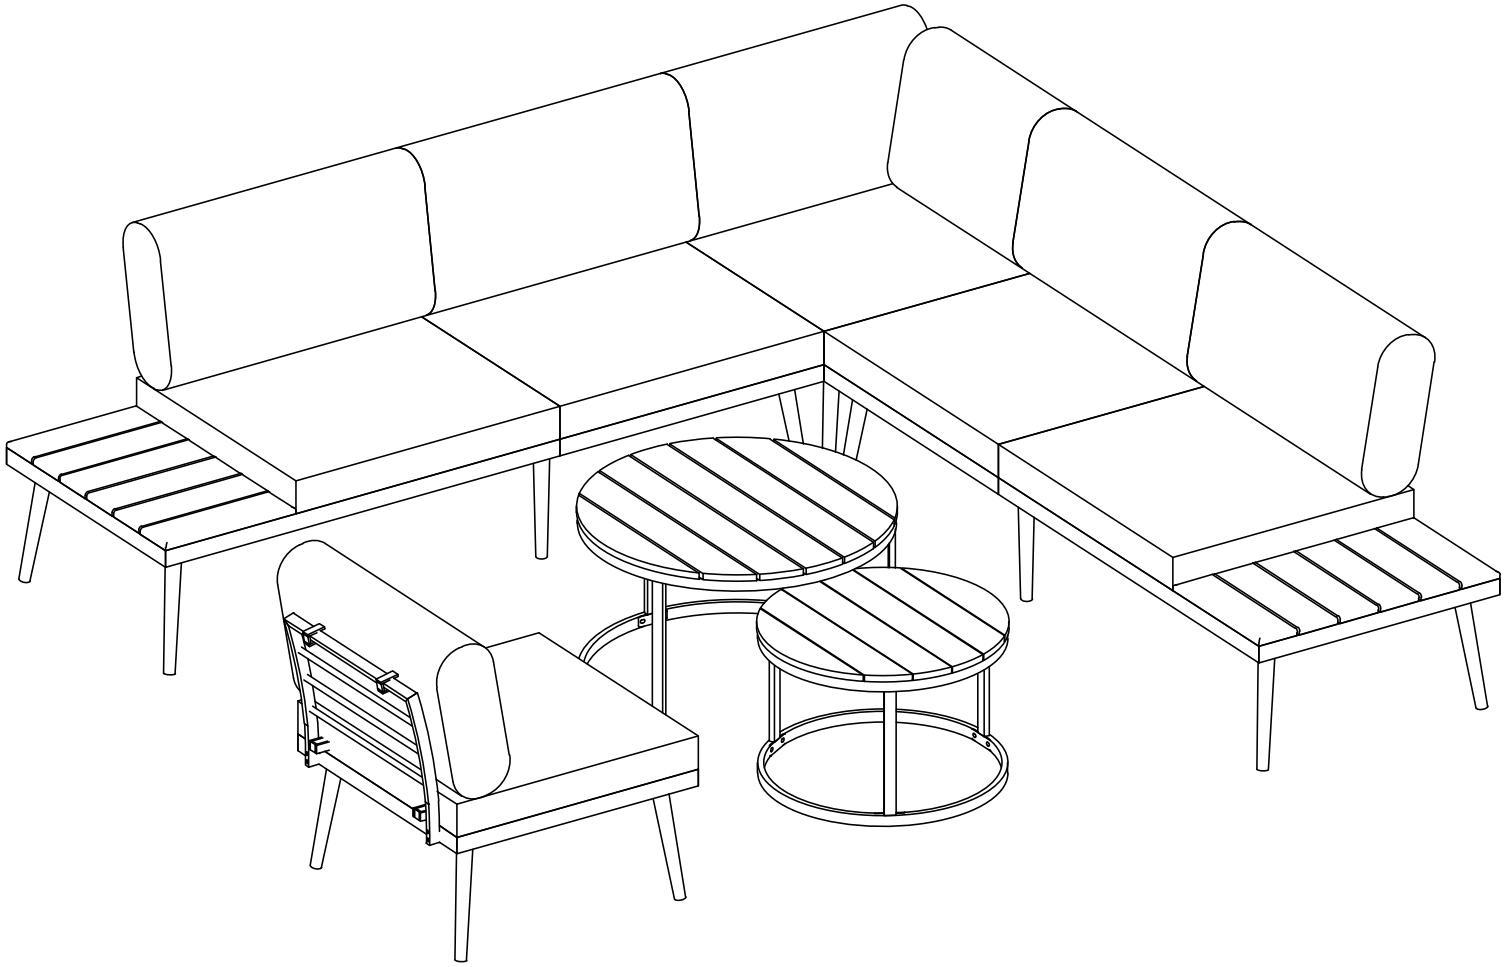


WF317166, WF317167, WF317168

Please read all instructions carefully:


1. **Have 2 adults on hand for assembly.**
2. **50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.**
3. **Place the item on a flat ground to adjust and make sure it remains stable.**
4. **Tighten up all screws with tools gradually.**
5. **If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.**
6. **If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.**
7. **Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.**

Exploded View

● ***Right Bench x1***

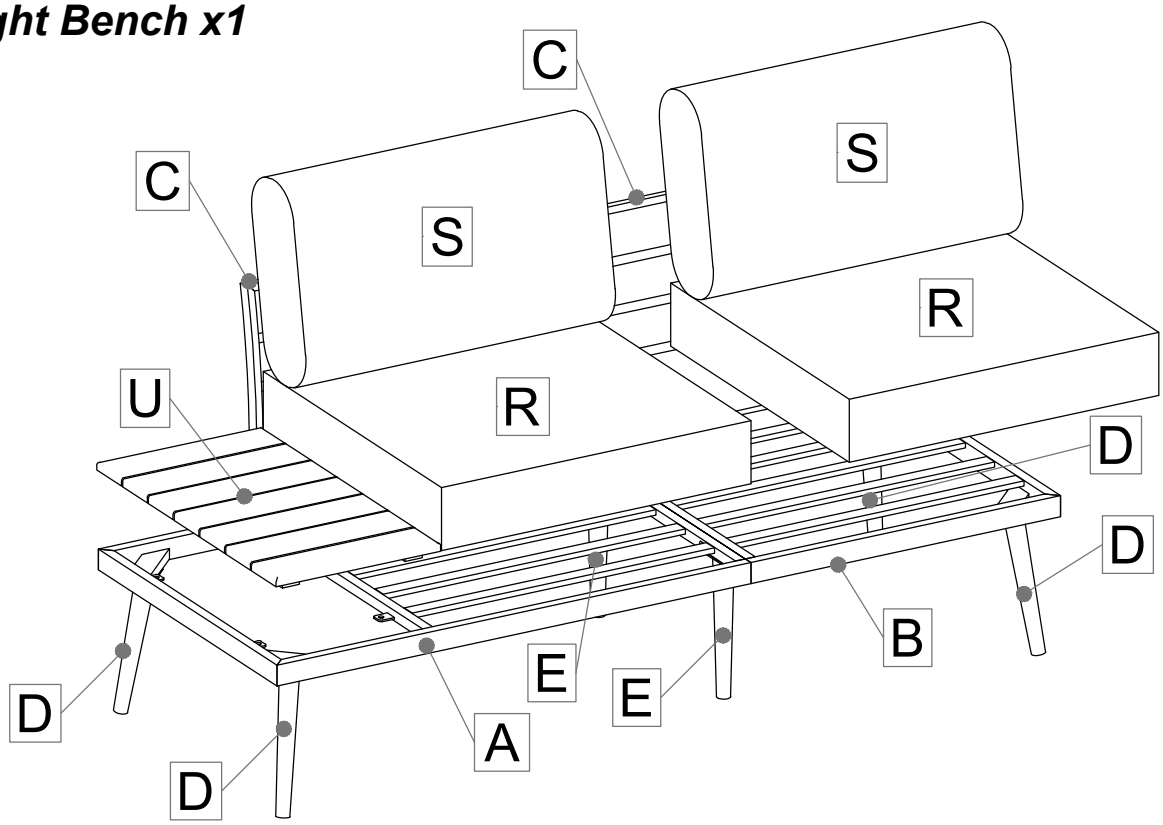


● ***Left Bench x1***

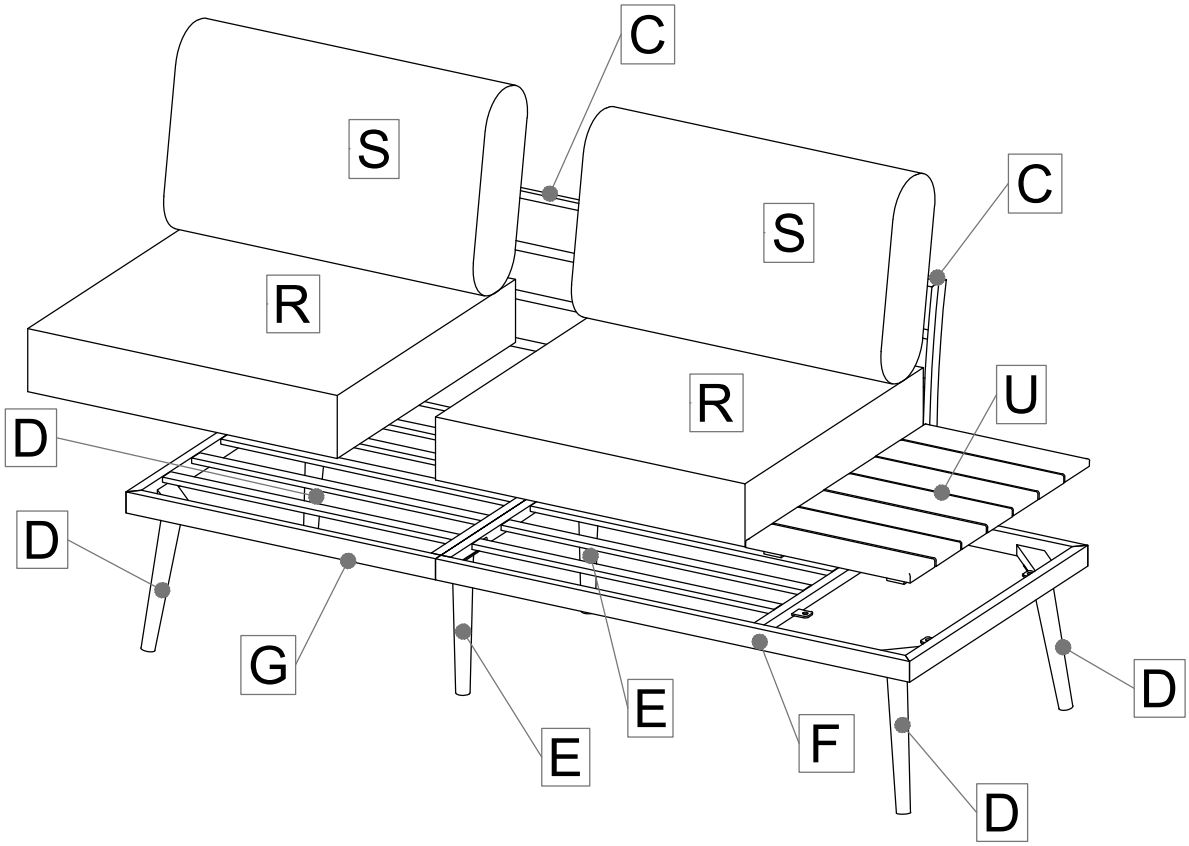


Exploded View


● ***Armless x1***

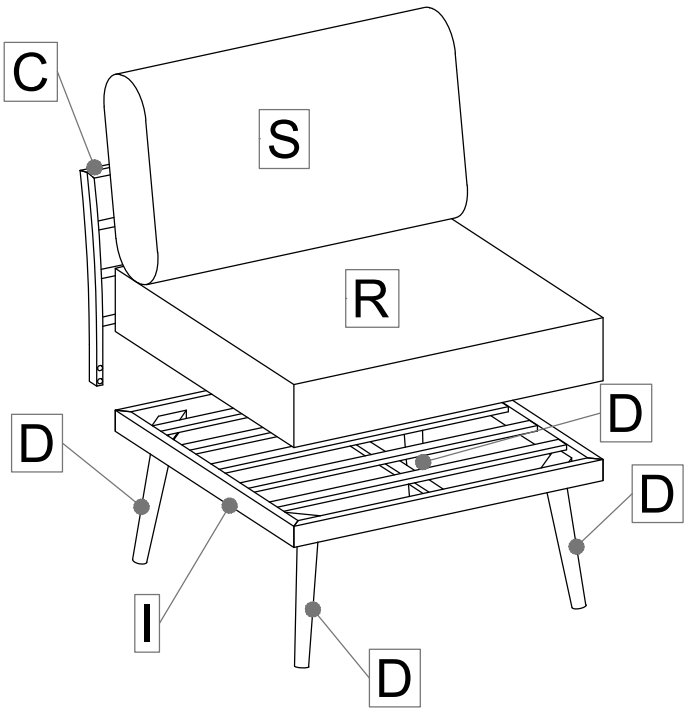


● ***Corner x1***

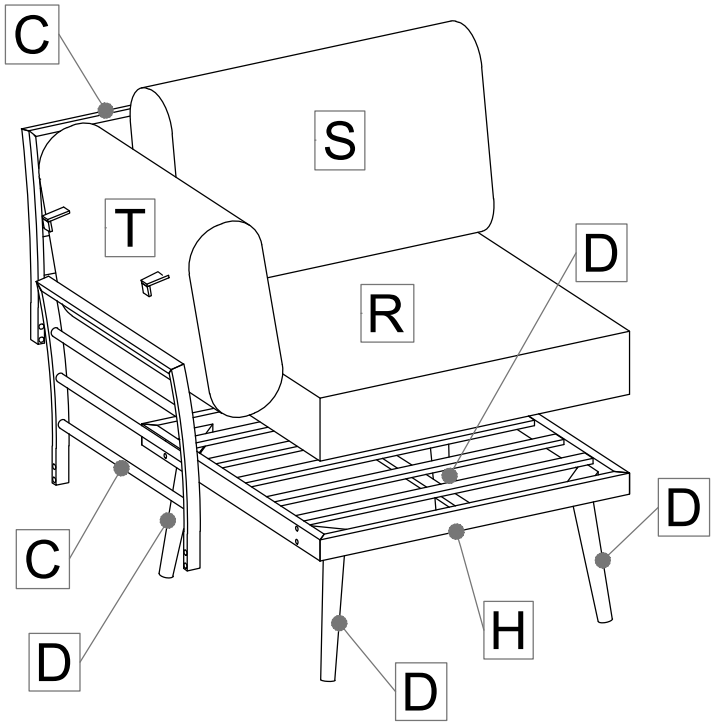

















● ***Table x1***

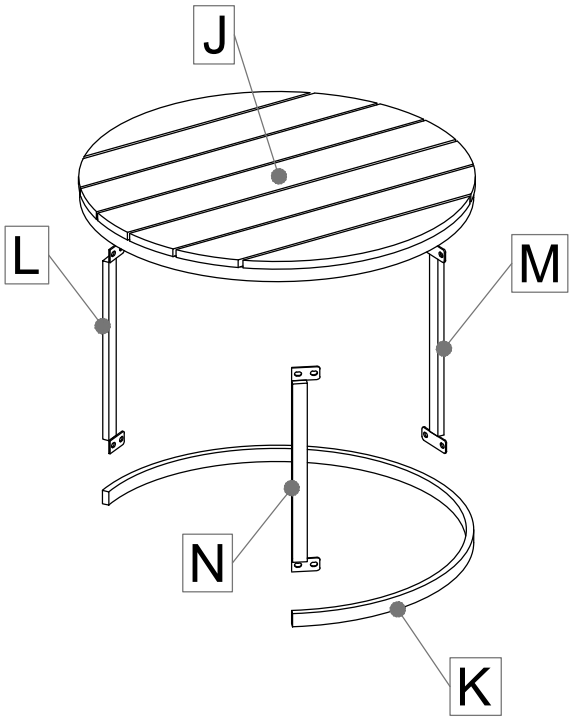





● ***Small Table x1***

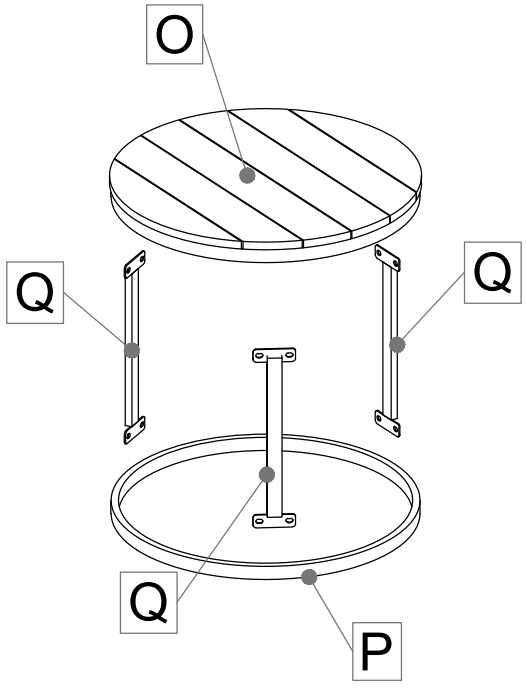

Part list & Hardware List

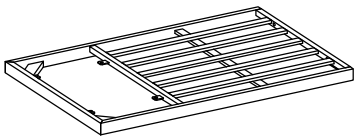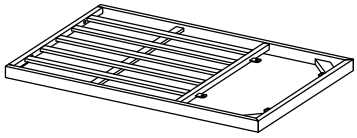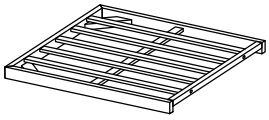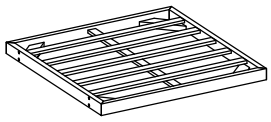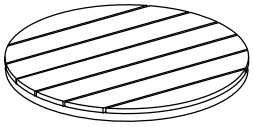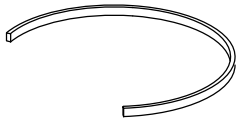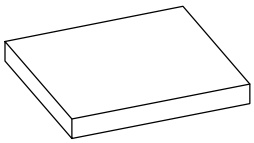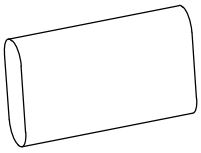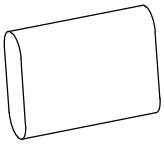A Seat Right Bench (1pc) 	B Side Right Bench (1pc) 	C Back (7pcs) 	D Side Leg (16pcs) 
E Middle leg (4pcs) 	F Seat Left Bench (1pc) 	G Side Left Bench (1pc) 	H Seat Corner (1pc) 
I Seat Chair (1pc) 	J Big Table Top (1pc) 	K Big Table Leg (1pc) 	L Side Left Big Table (1pc) 
M Side Middle Big Table (1pc) 	N Side Right Big Table (1pc) 	O Small Table Top (1pc) 	P Small Table Leg (1pc) 
Q Side Small Table (3pcs) 	R Seat Cushion (6pcs) 	S Back Chair Cushion(6pcs) 	T Small Back Cushion (1pc) 	U Side Table Wooden (2pcs) 


Hardware List

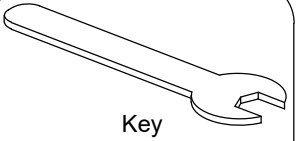 Bolt Ø6x15mm 1 x104+4	 Bolt Ø8x40mm 2 x28+2	 Bolt Ø6x50mm 3 x4+1	 Flat Washer M6 4 x120+5	 Washer M8 5 x28+2
 Nut M6 6 x4+1	 Allen Key 7 x2	 Key 8 x1	 Scew Bolt Ø6x15mm 9 x8+1	


CARTON CONTENT

WF317166

H Seat Corner (1pc)




I Seat Chair (1pc)

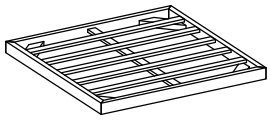

C Back (3pcs)




R Seat Cushion (4pcs)

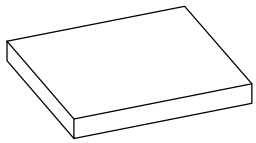


WF317167


A Seat Right Bench (1pc)

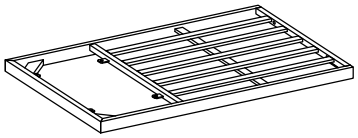


B Side Right Bench (1pc)



F Seat Left Bench (1pc)

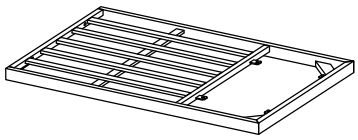

G Side Left Bench (1pc)

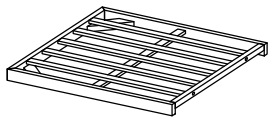

D Side Leg (16pcs)




E Middle leg (4pcs)




C Back (4pcs)



S Back Chair Cushion(6pcs)

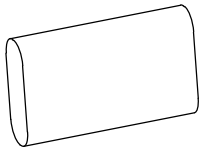


U Side Table Wooden (2pcs)




WF317168


J Big Table Top (1pc)

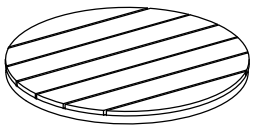

K Big Table Leg (1pc)

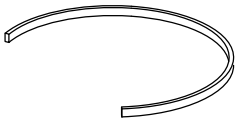


L Side Left Big Table (1pc)




M Side Middle Big Table (1pc)




N Side Right Big Table (1pc)



O Small Table Top (1pc)




P Small Table Leg (1pc)




Q Side Small Table (3pcs)



T Small Back Cushion (1pc)

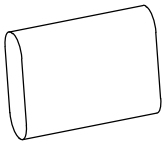

R Seat Cushion (2pcs)

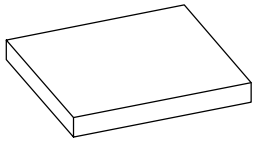

Hardware




Step 1

J X1

L X1

M X1


N X1

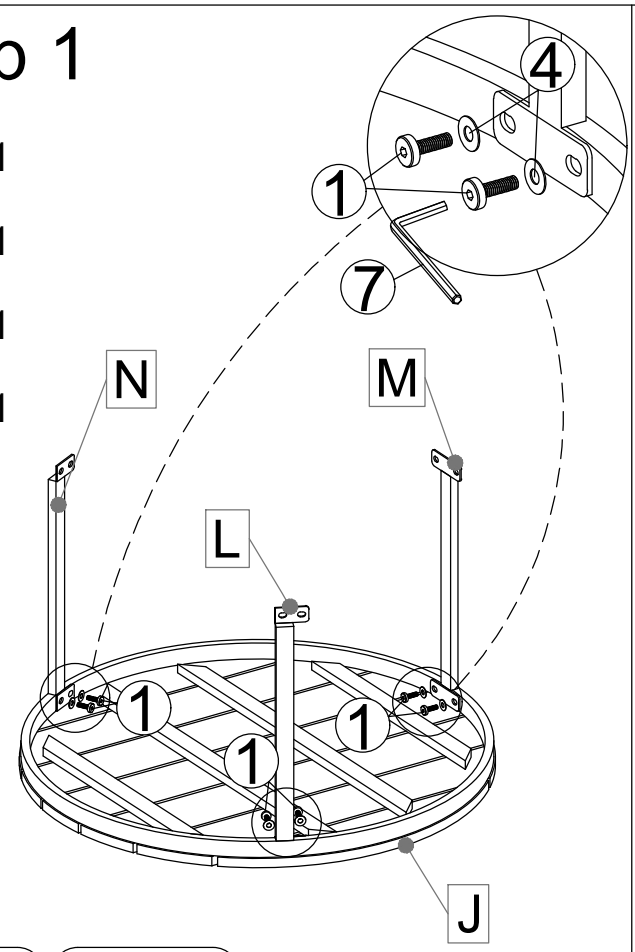

Bolt Ø6x15mm	Flat Washer M6	7
1 x6	4 x6	75%


Step 2

K X1

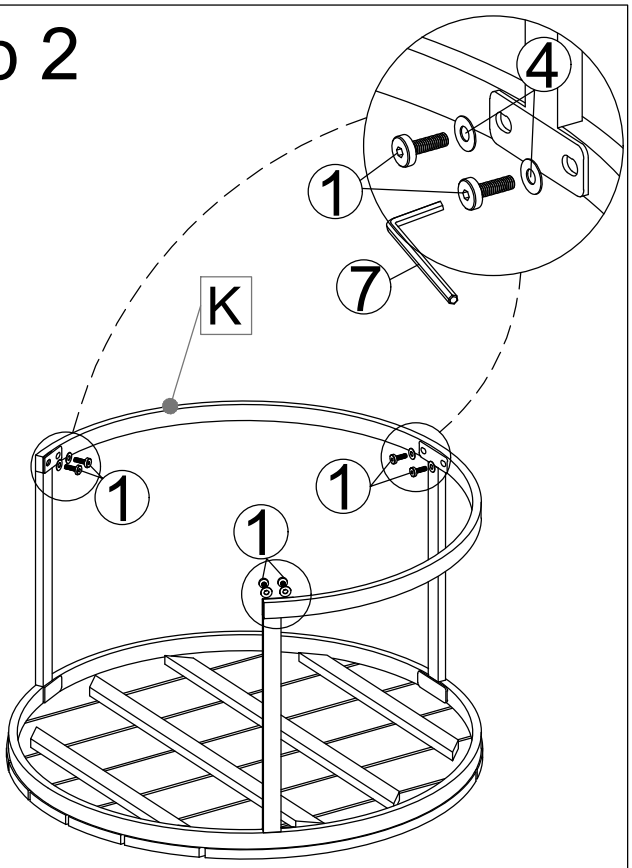

Bolt Ø6x15mm	Flat Washer M6	7
1 x6	4 x6	75%

Step 3

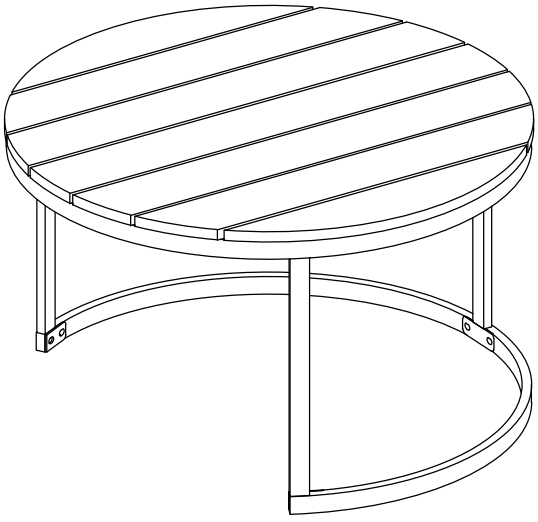


Put the Big Table upright and make sure all legs are level, then firmly tighten Bolts with Allen Key (7) to finish Big Table


7 100%

Step 4

O X1

Q X3

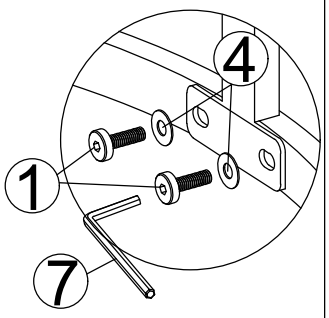


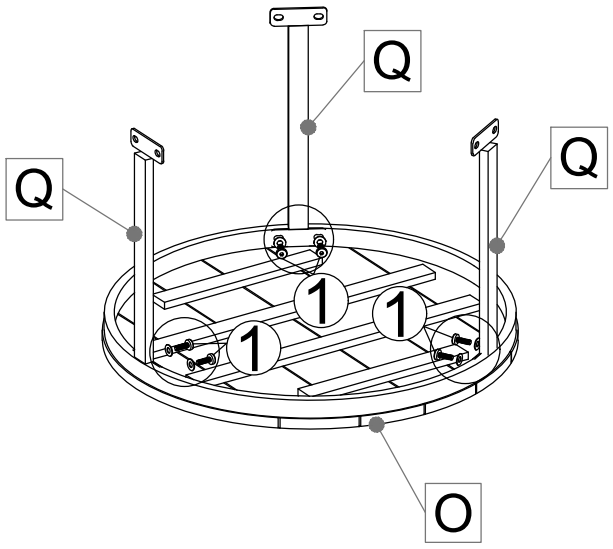

Bolt Ø6x15mm	Flat Washer M6	7
1 x6	4 x6	75%


Step 5

P X1

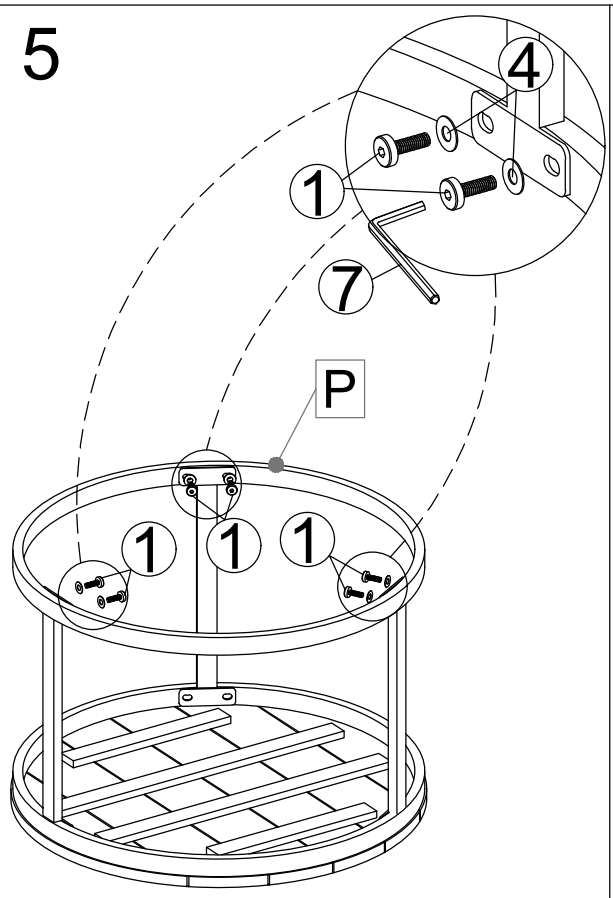

Bolt Ø6x15mm	Flat Washer M6	7
1 x6	4 x6	75%

Step 6

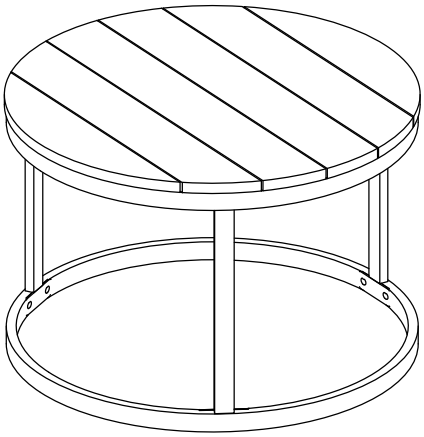


Put the Small Table upright and make sure all legs are level, then firmly tighten Bolts with Allen Key (7)

7
100%

Step 7

I X1


D X4

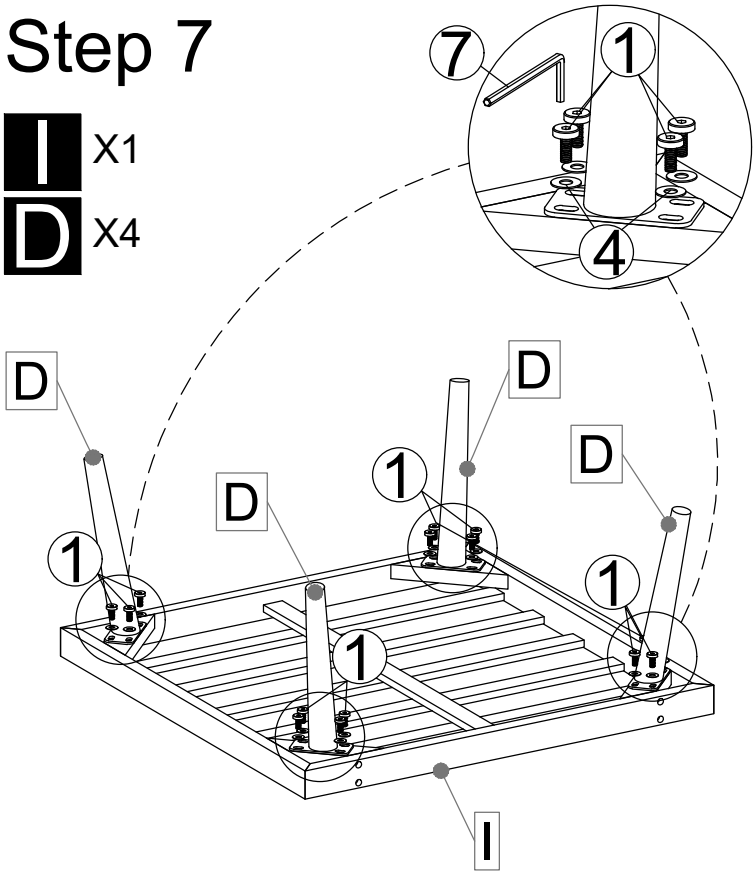

Bolt Ø6x15mm	Flat Washer M6	7
1 x16	4 x16	75%

Step 8

C X1

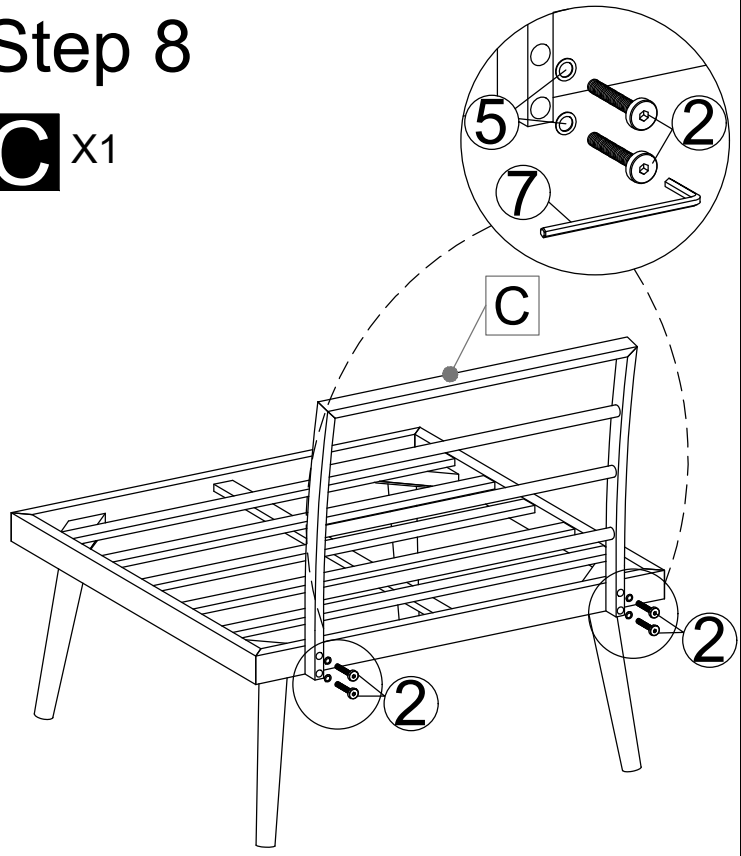


Bolt Ø8x40mm	Washer M8	7
2 x4	5 x4	75%

Step 9

S X1

R X1

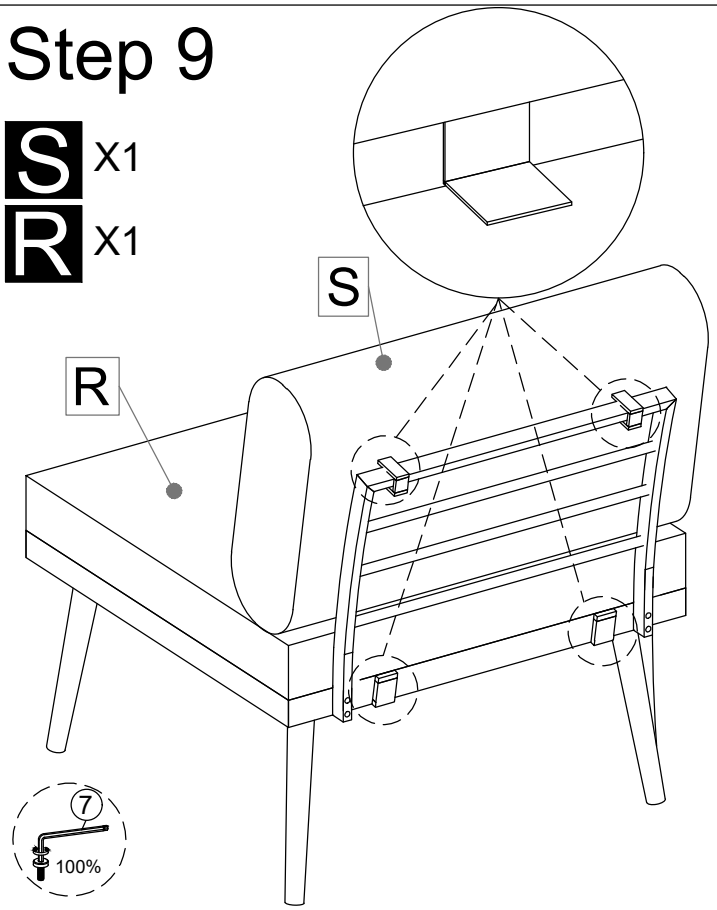


Put the Armless upright and make sure all legs are level, then firmly tighten Bolts with Allen Key (7).
Put on Seat Cushion (R), Back Cushion (S), to Armless. Stick string to Chair to finish Armless.

Step 10

H X1


D X4

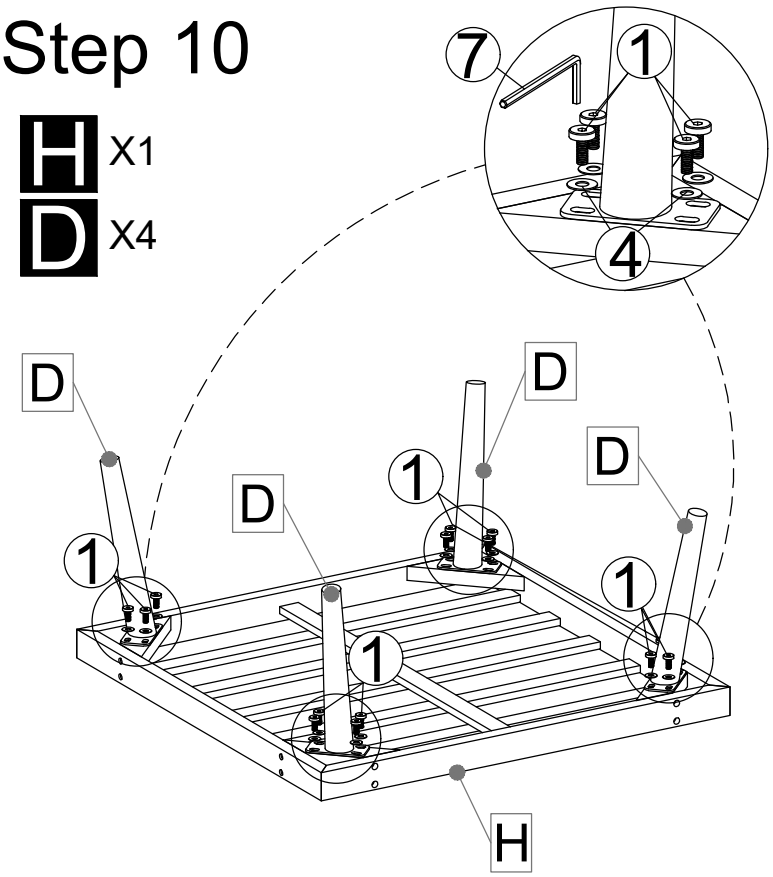

Bolt Ø6x15mm	Flat Washer M6	7
1 x16	4 x16	75%

Step 11

C X2

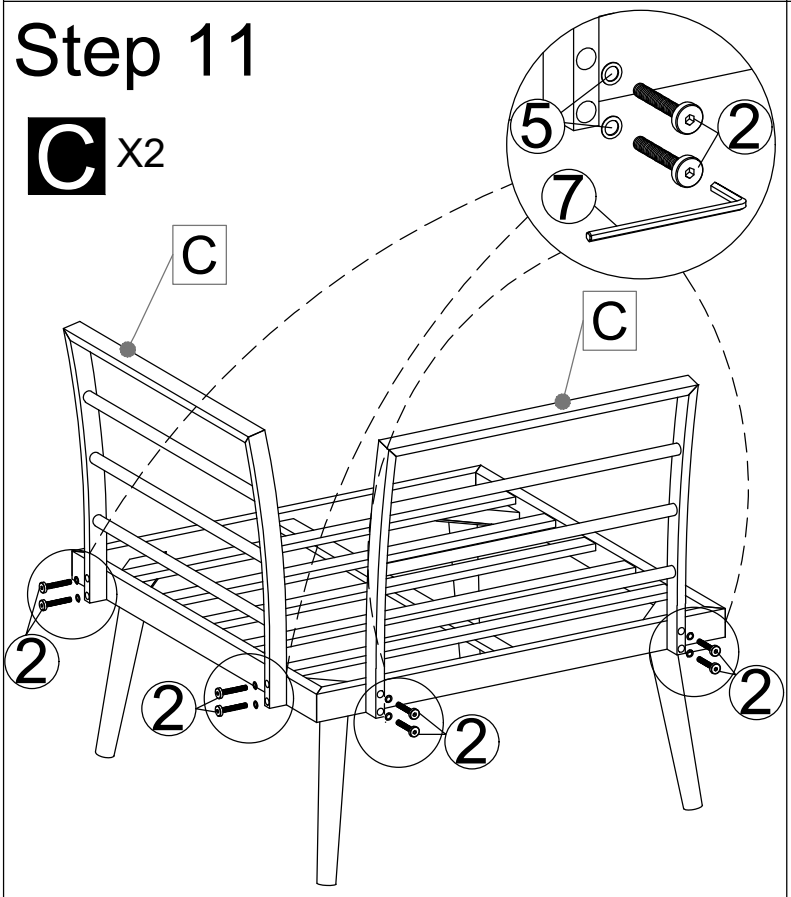


Bolt Ø8x40mm	Washer M8	7
2 x8	5 x8	75%

Step 12

R X1

S X1

T X1

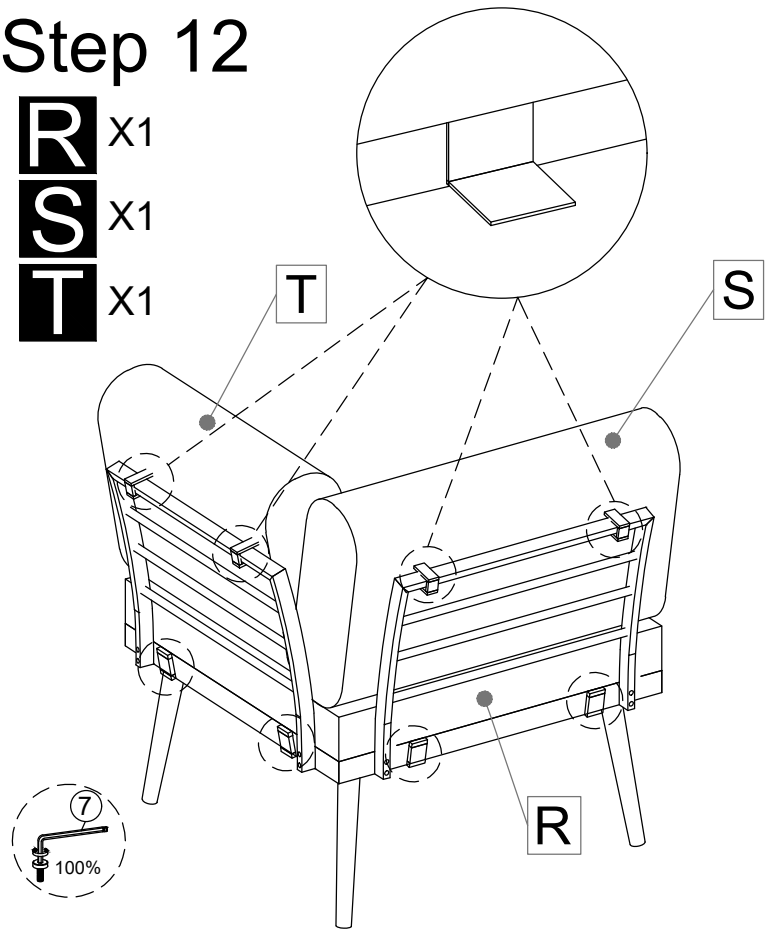


Put the Corner upright and make sure all legs are level, then firmly tighten Bolts with Allen Key (7).
Put on Seat Cushion (R), Back Cushion (S) & Small Back Cushion (T) to Corner. Stick string to Corner to finish Corner.

Step 13

A X1


U X1

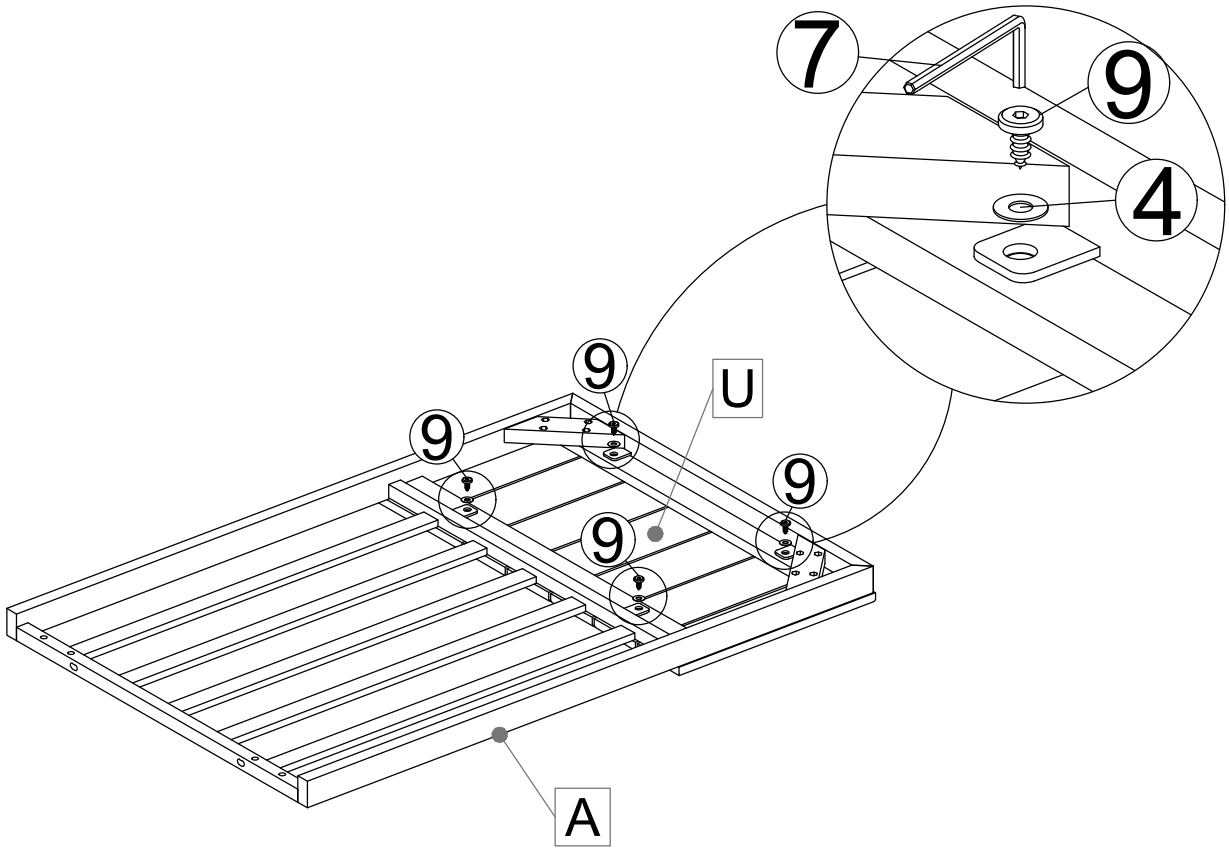

Screw Bolt Ø6x15mm	Flat Washer M6	7
9 x4	4 x4	100%

Step 14

B X1

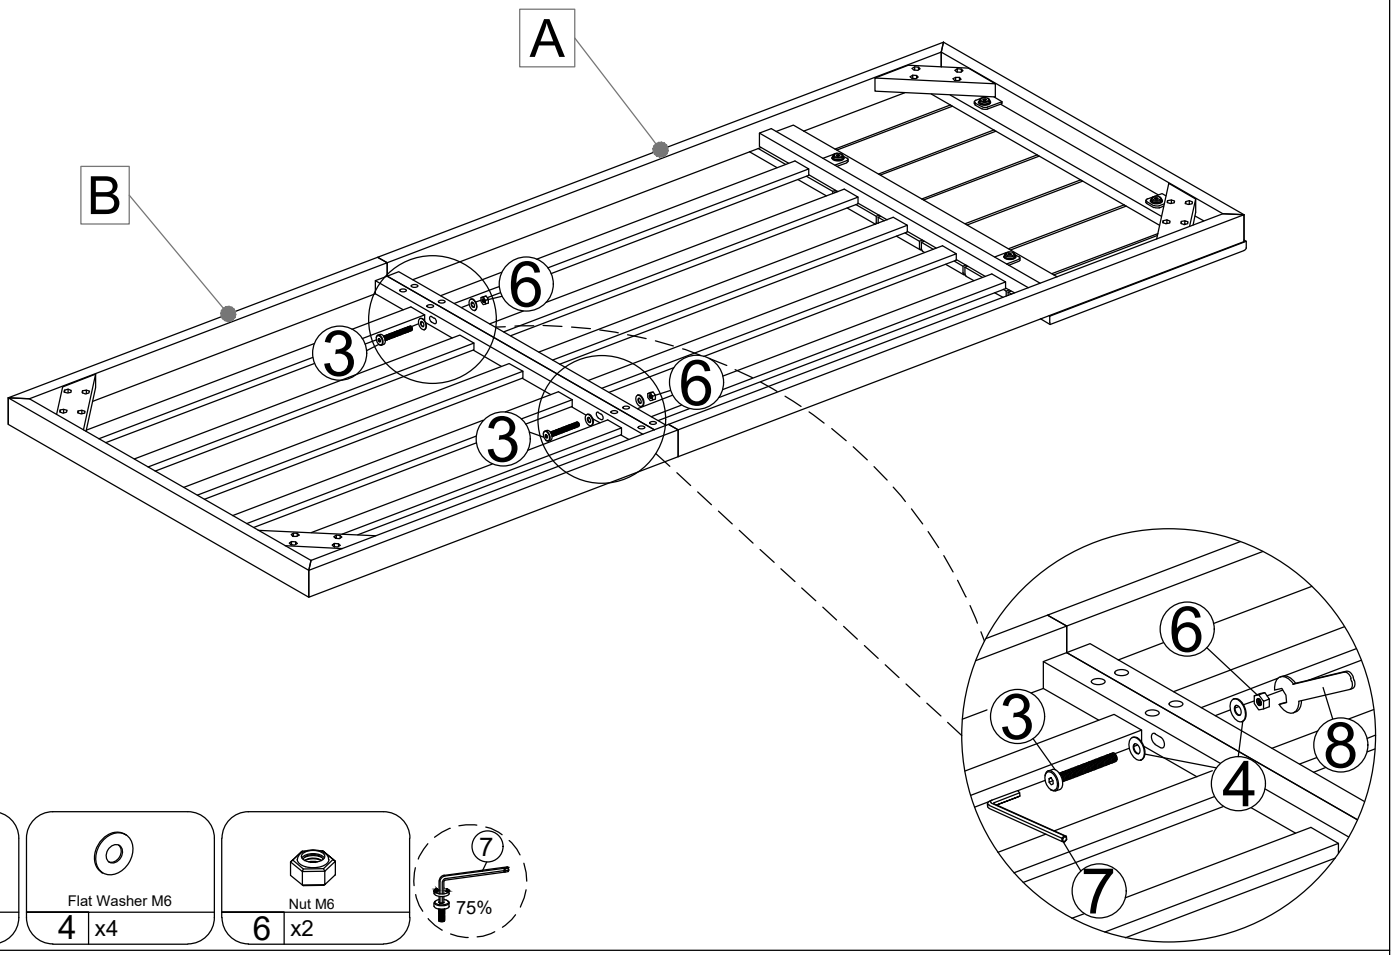


Bolt Ø6x50mm	Flat Washer M6	Nut M6	7
3 x2	4 x4	6 x2	75%

Step 15

D X4


E X2

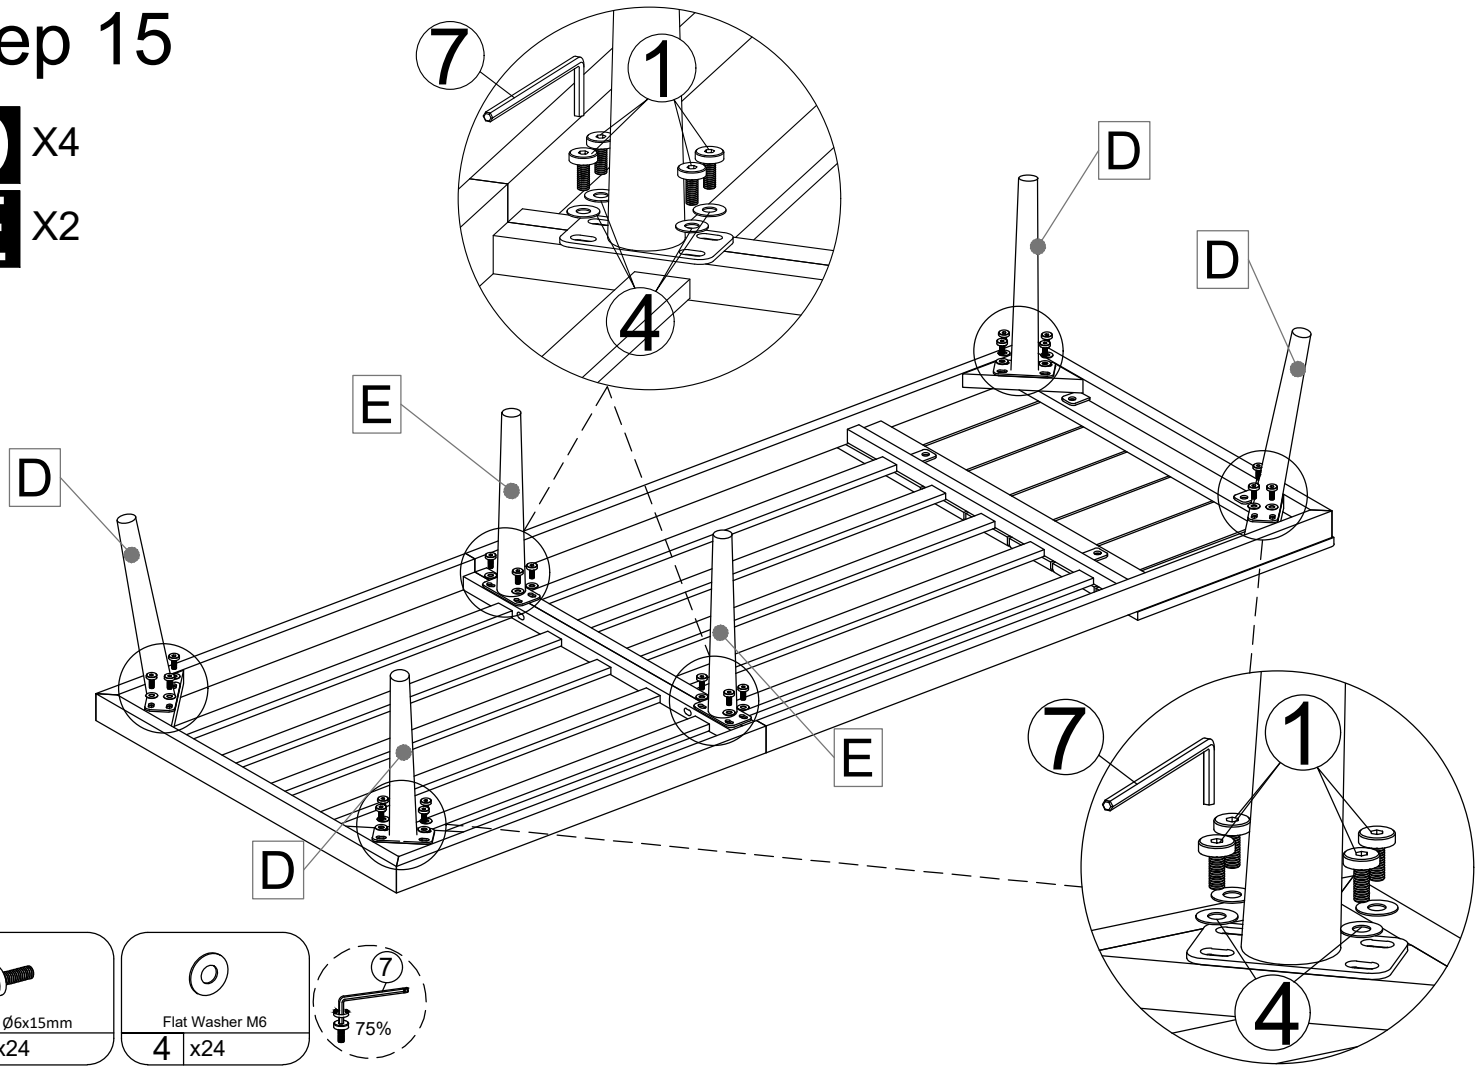

Bolt Ø6x15mm	Flat Washer M6	7
1 x24	4 x24	75%

Step 16

C X2

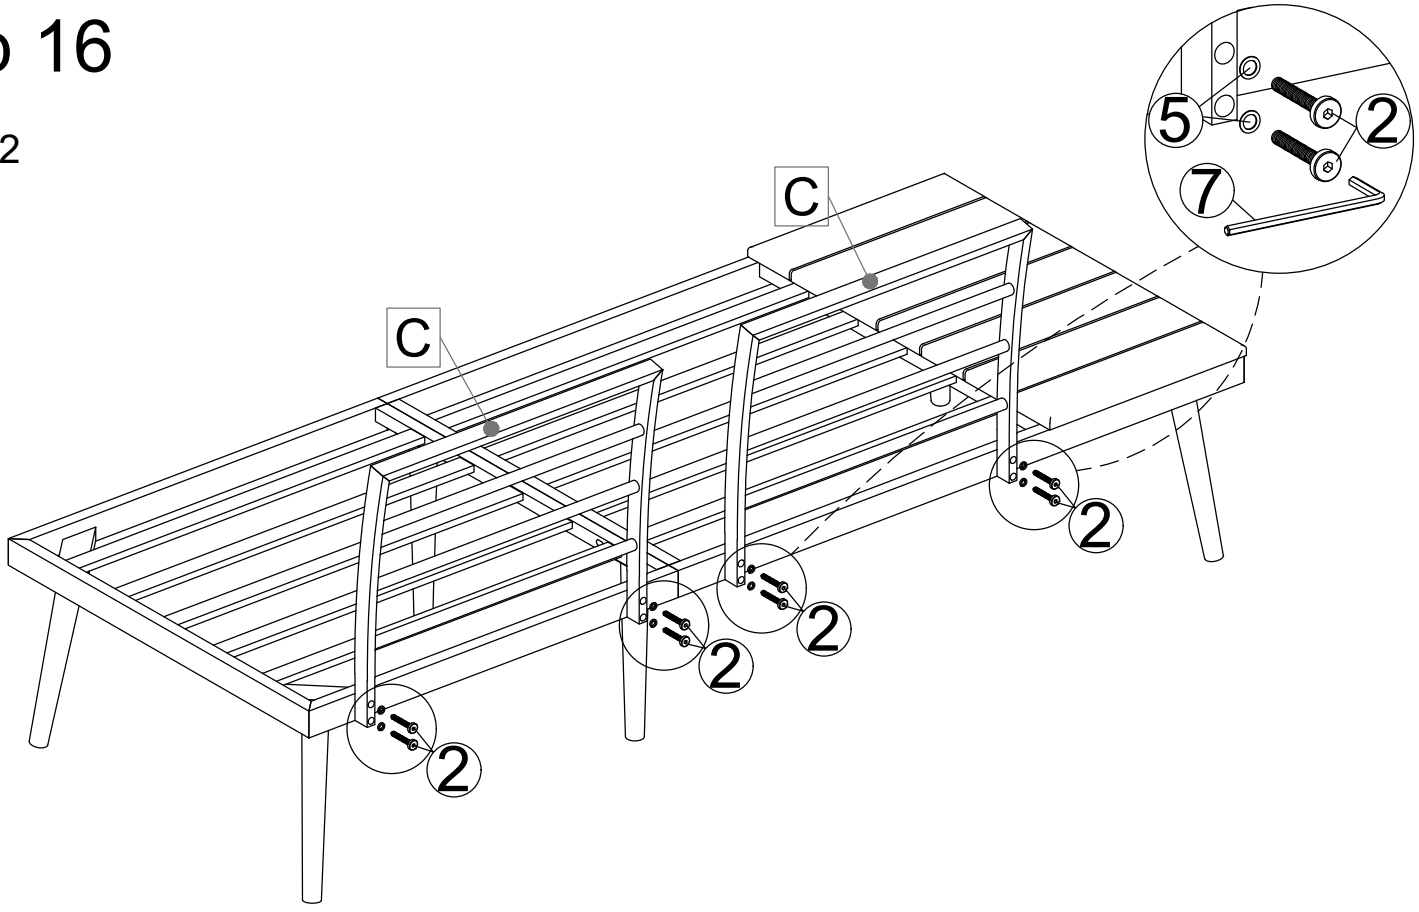


Bolt Ø8x40mm	Washer M8	7
2 x8	5 x8	75%

Step 17

S X2

R X2

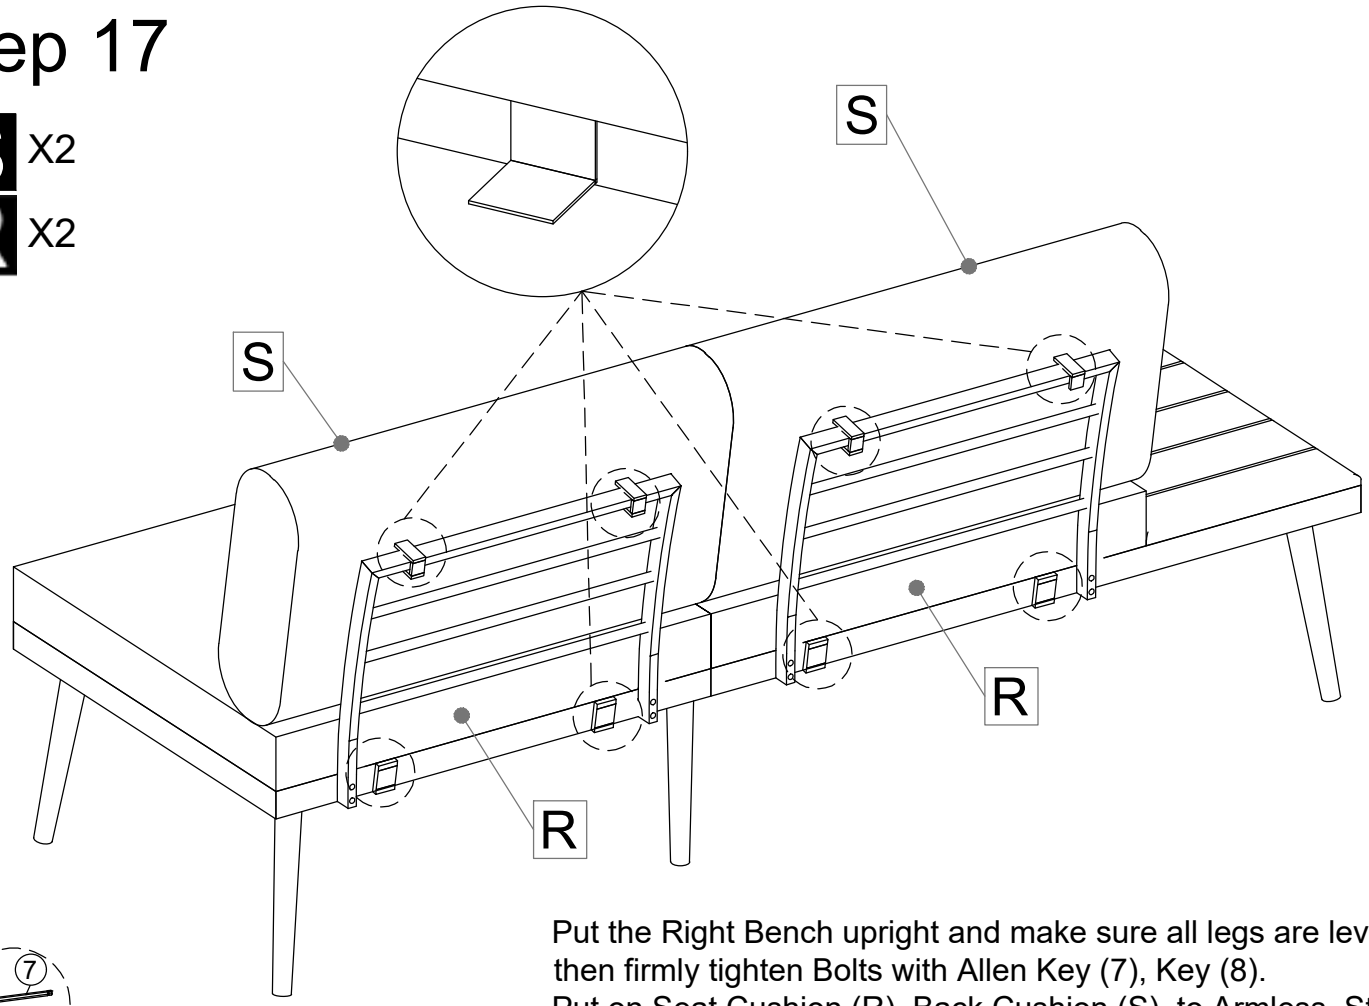




Put the Right Bench upright and make sure all legs are level, then firmly tighten Bolts with Allen Key (7), Key (8).
Put on Seat Cushion (R), Back Cushion (S), to Armless. Stick string to Chair to finish Right Bench.


Step 18


F X1

U X1

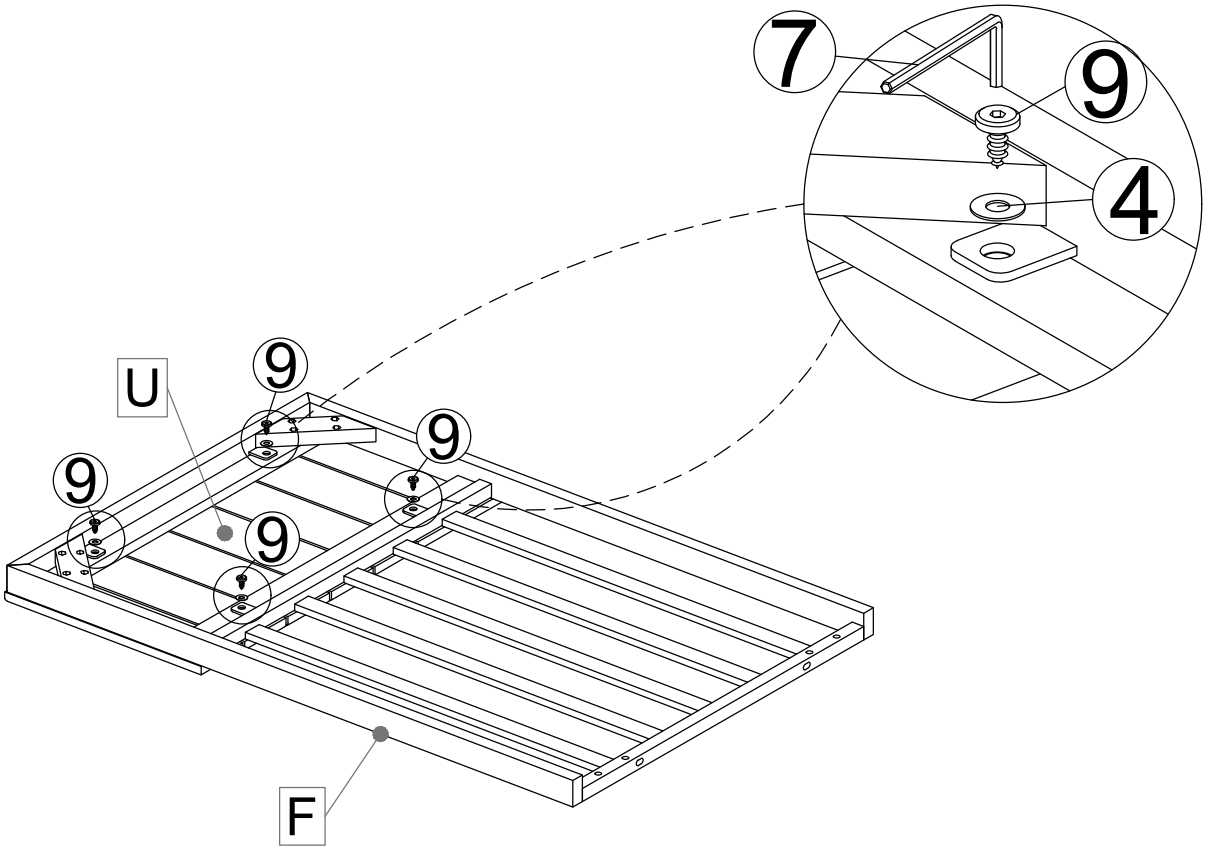






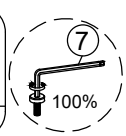

Step 19

G X1

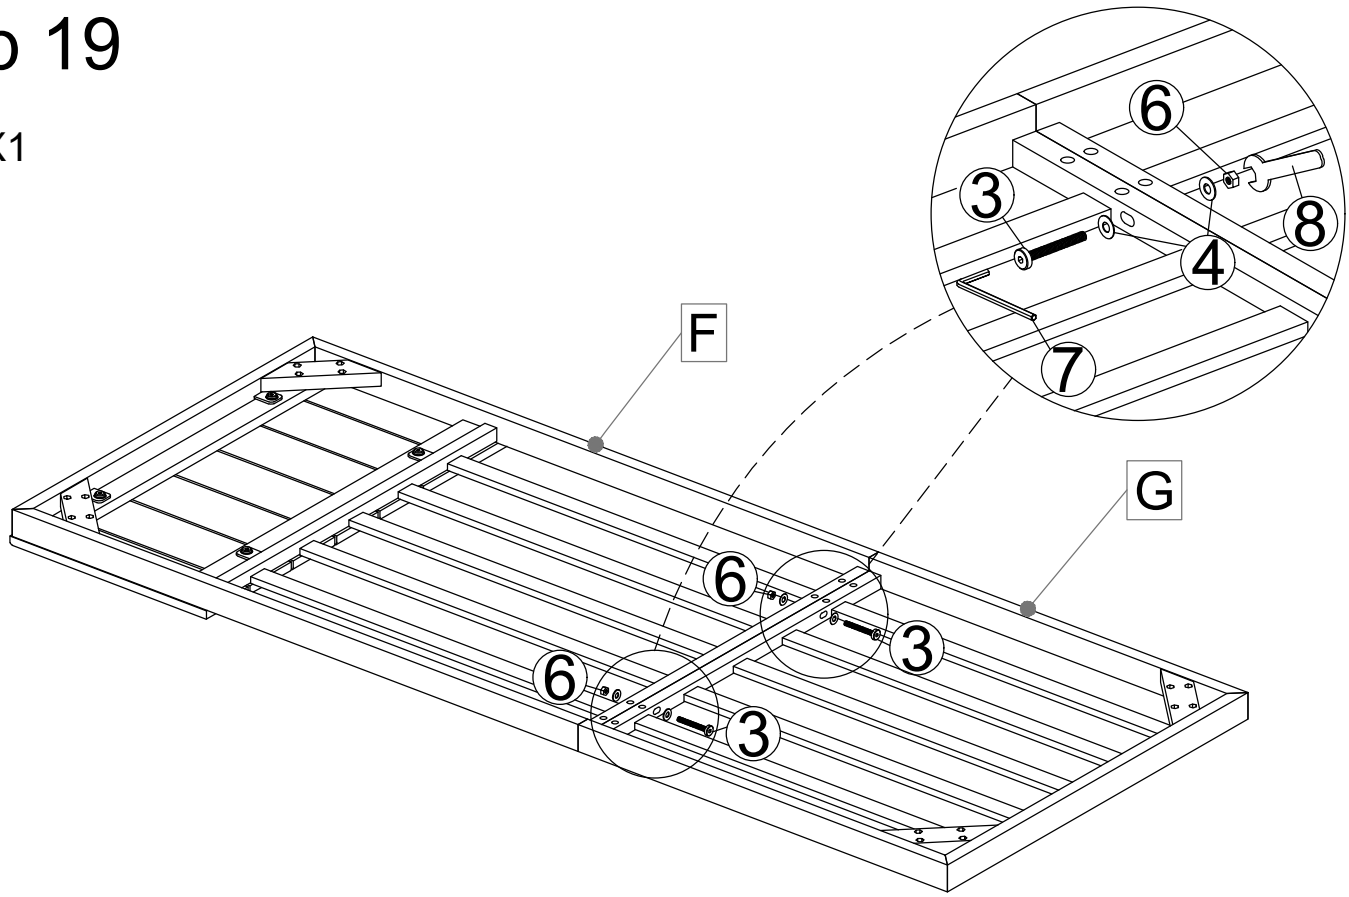


Bolt Ø6x50mm	Flat Washer M6	Nut M6	7 75%
3 x2	4 x4	6 x2	

Step 20

D X4


E X2

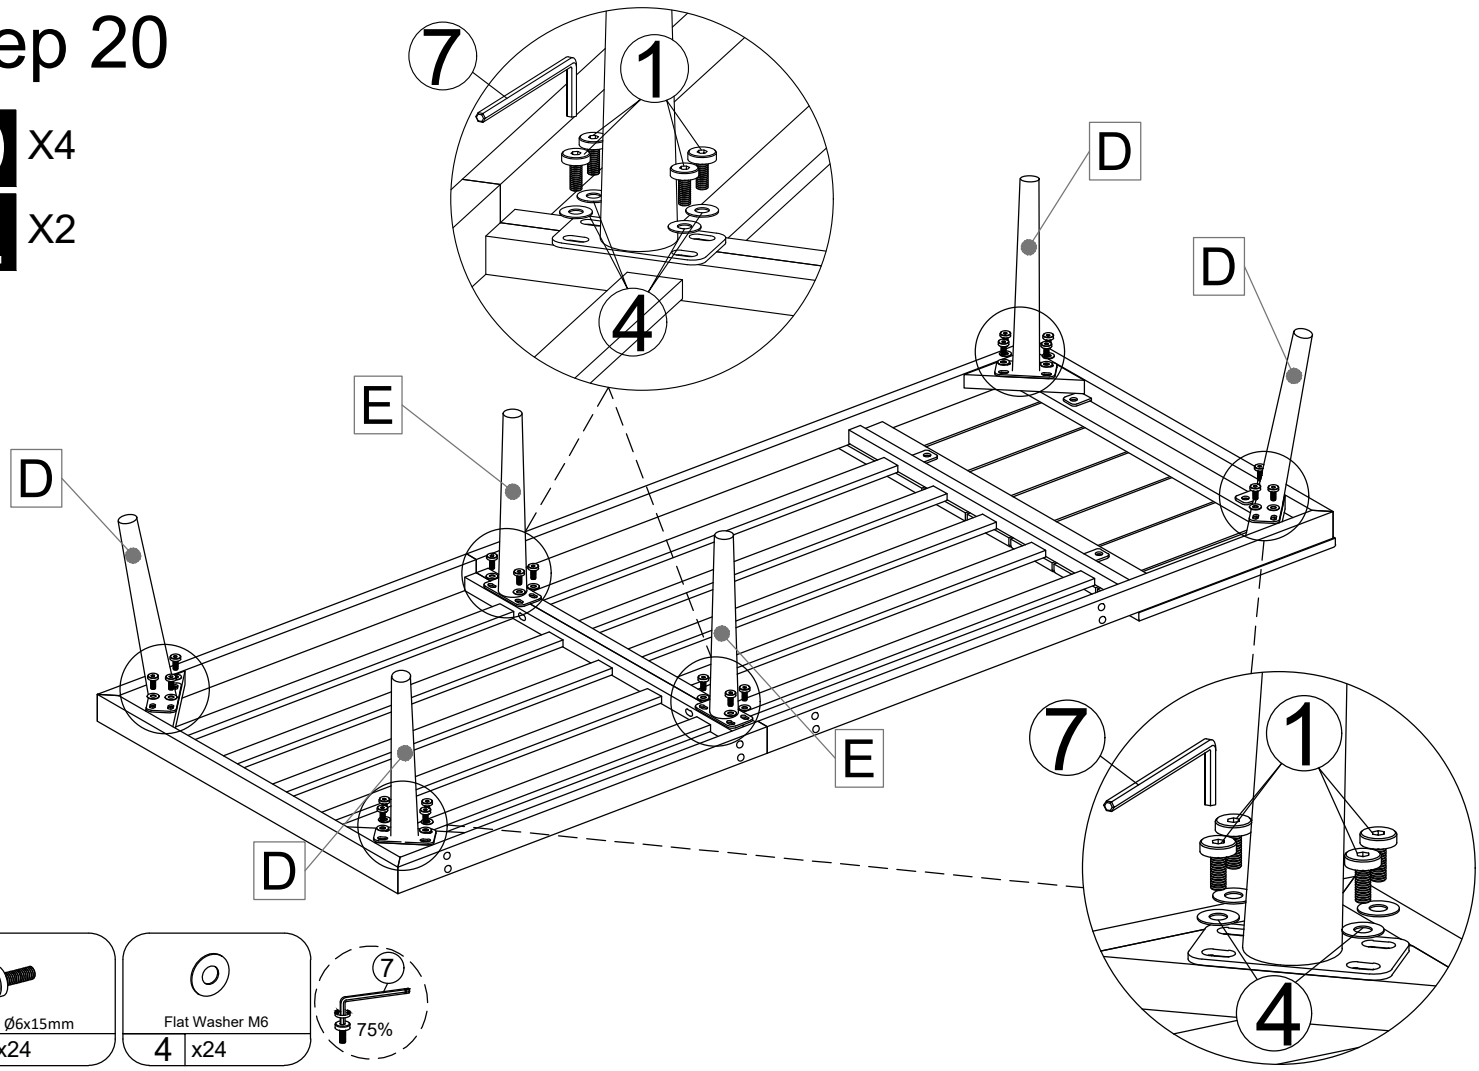

Bolt Ø6x15mm	Flat Washer M6	7 75%
1 x24	4 x24	

Step 21

C X2

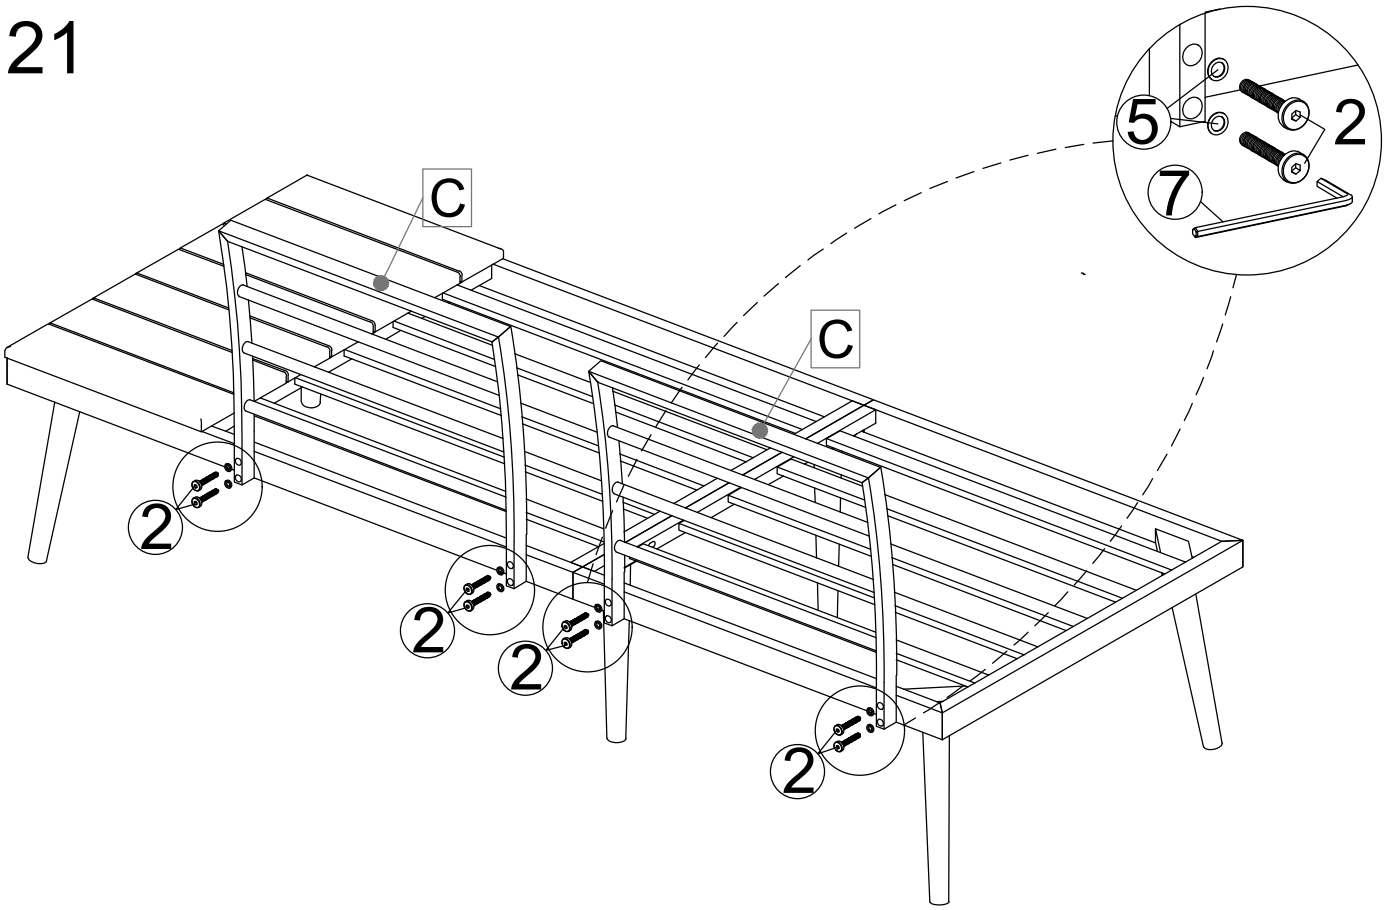


Bolt Ø8x40mm	Washer M8	7
2 x8	5 x8	75%

Step 22

S X2

R X2

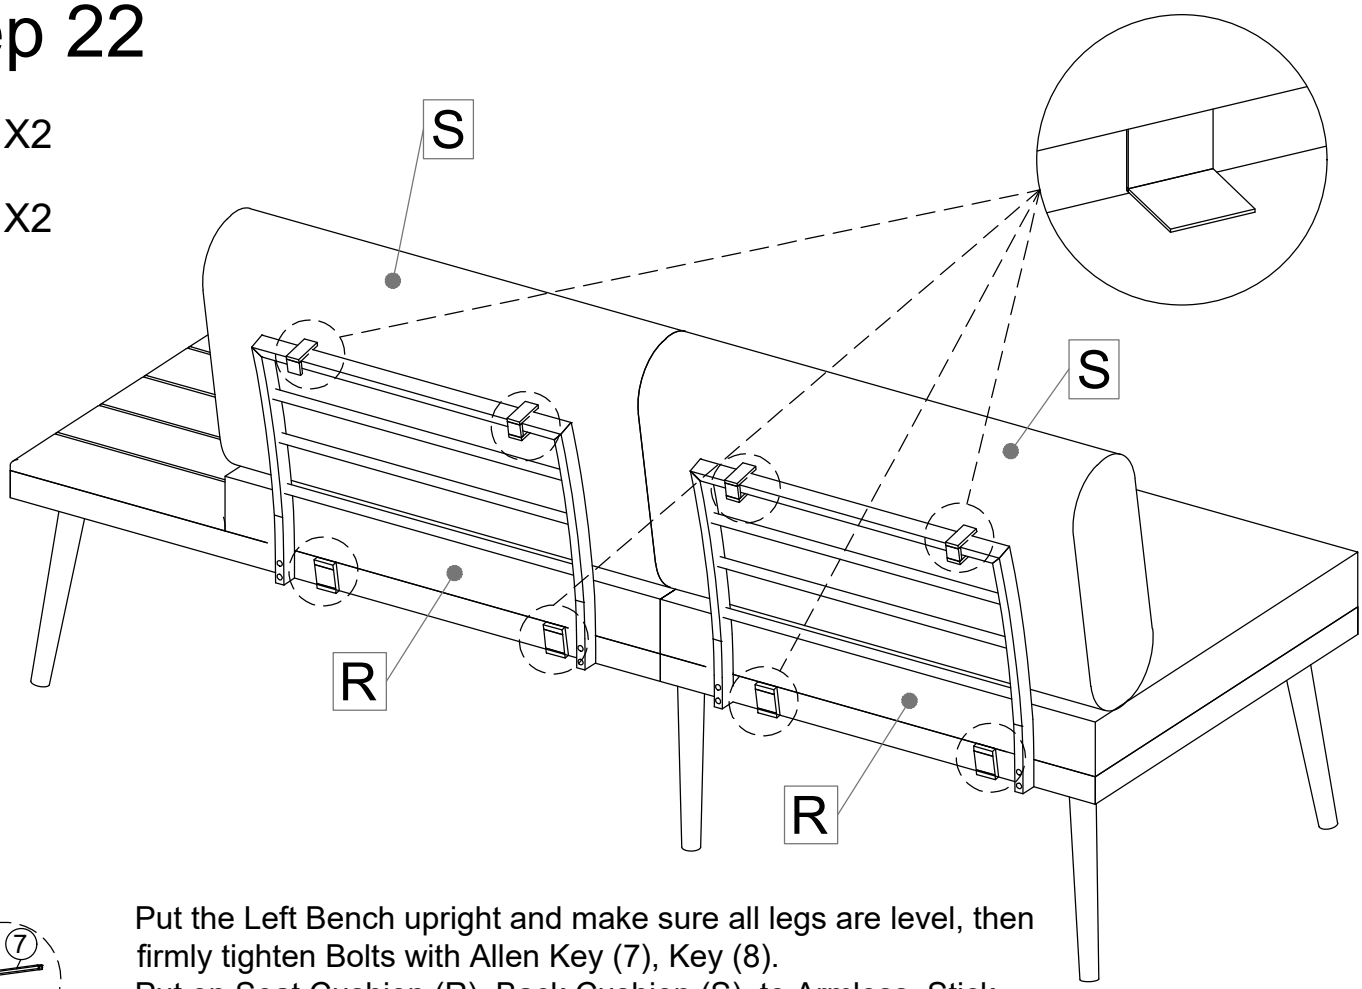

7 100%

Put the Left Bench upright and make sure all legs are level, then firmly tighten Bolts with Allen Key (7), Key (8).
Put on Seat Cushion (R), Back Cushion (S), to Armless. Stick string to Chair to finish Left Bench.

FINISH

