


Assembly Instructions



Luggage Compartment

Model: LC01

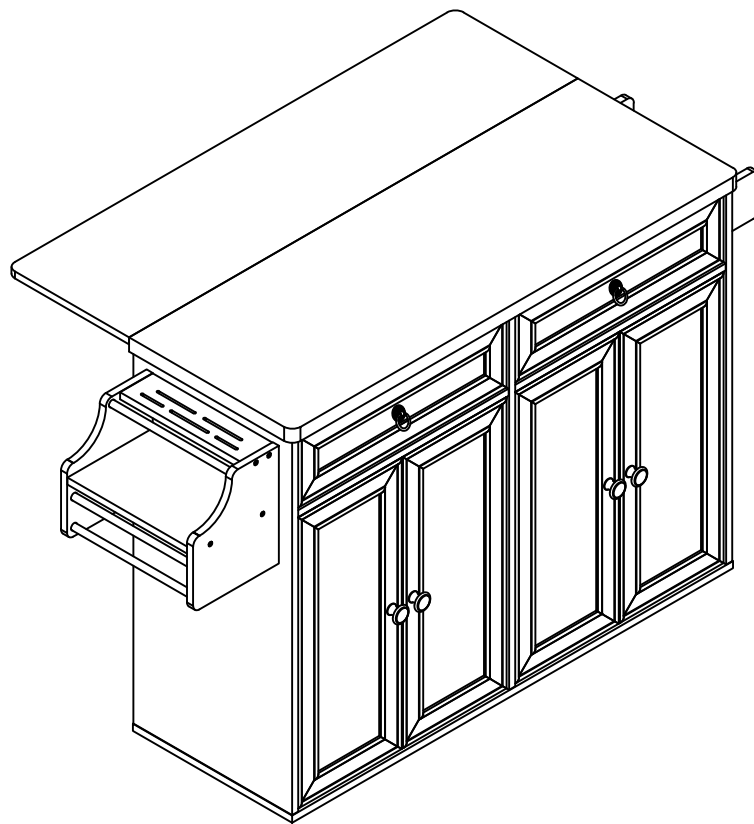


MADE IN P.R.C

Thank you for your purchase. All components are included in a single package. Please follow the instructions step by step for a quicker and smoother installation process. If you encounter any issues, please contact our customer service team service@theyulika.com, and we will be pleased to assist you.

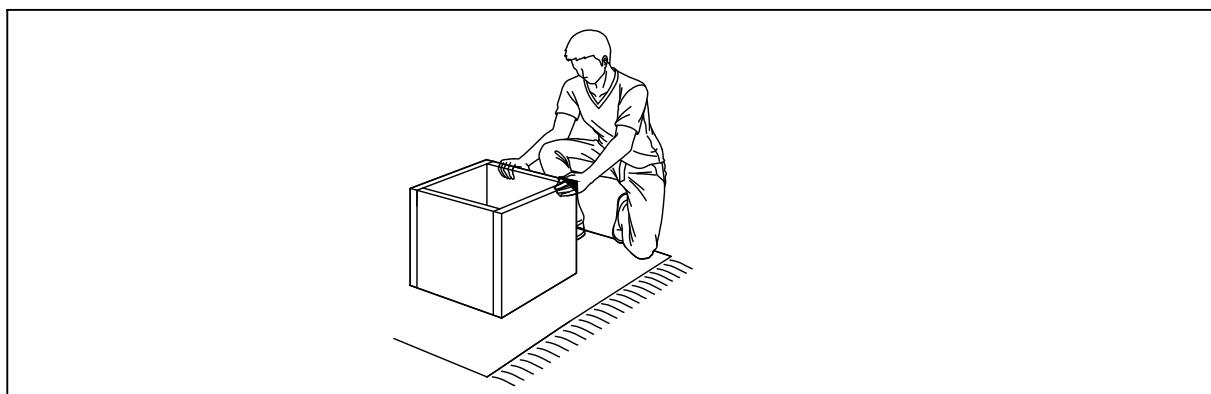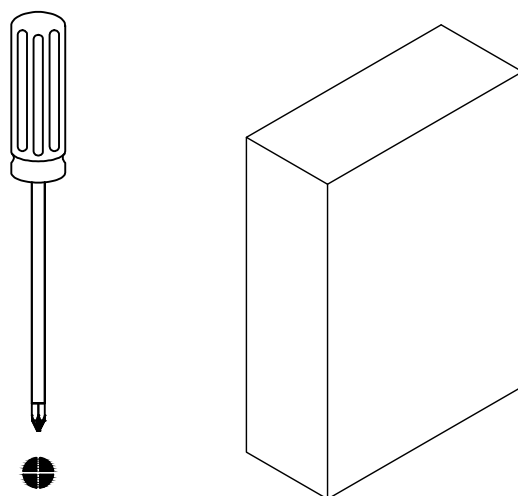


Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.

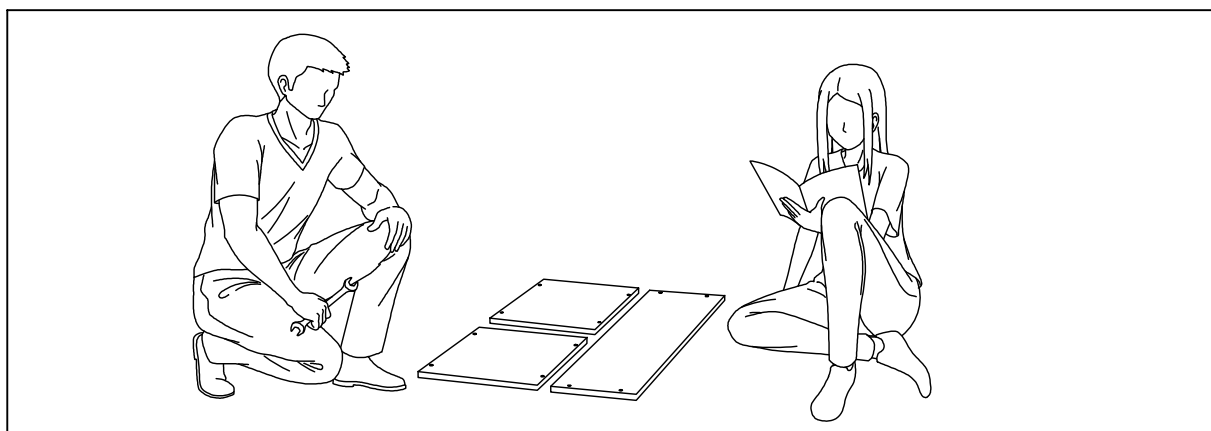

This furniture requires 2 people to assembly.
Make sure no parts are missing or damaged before assembly.


BOARD IDENTIFICATION

Not actual size

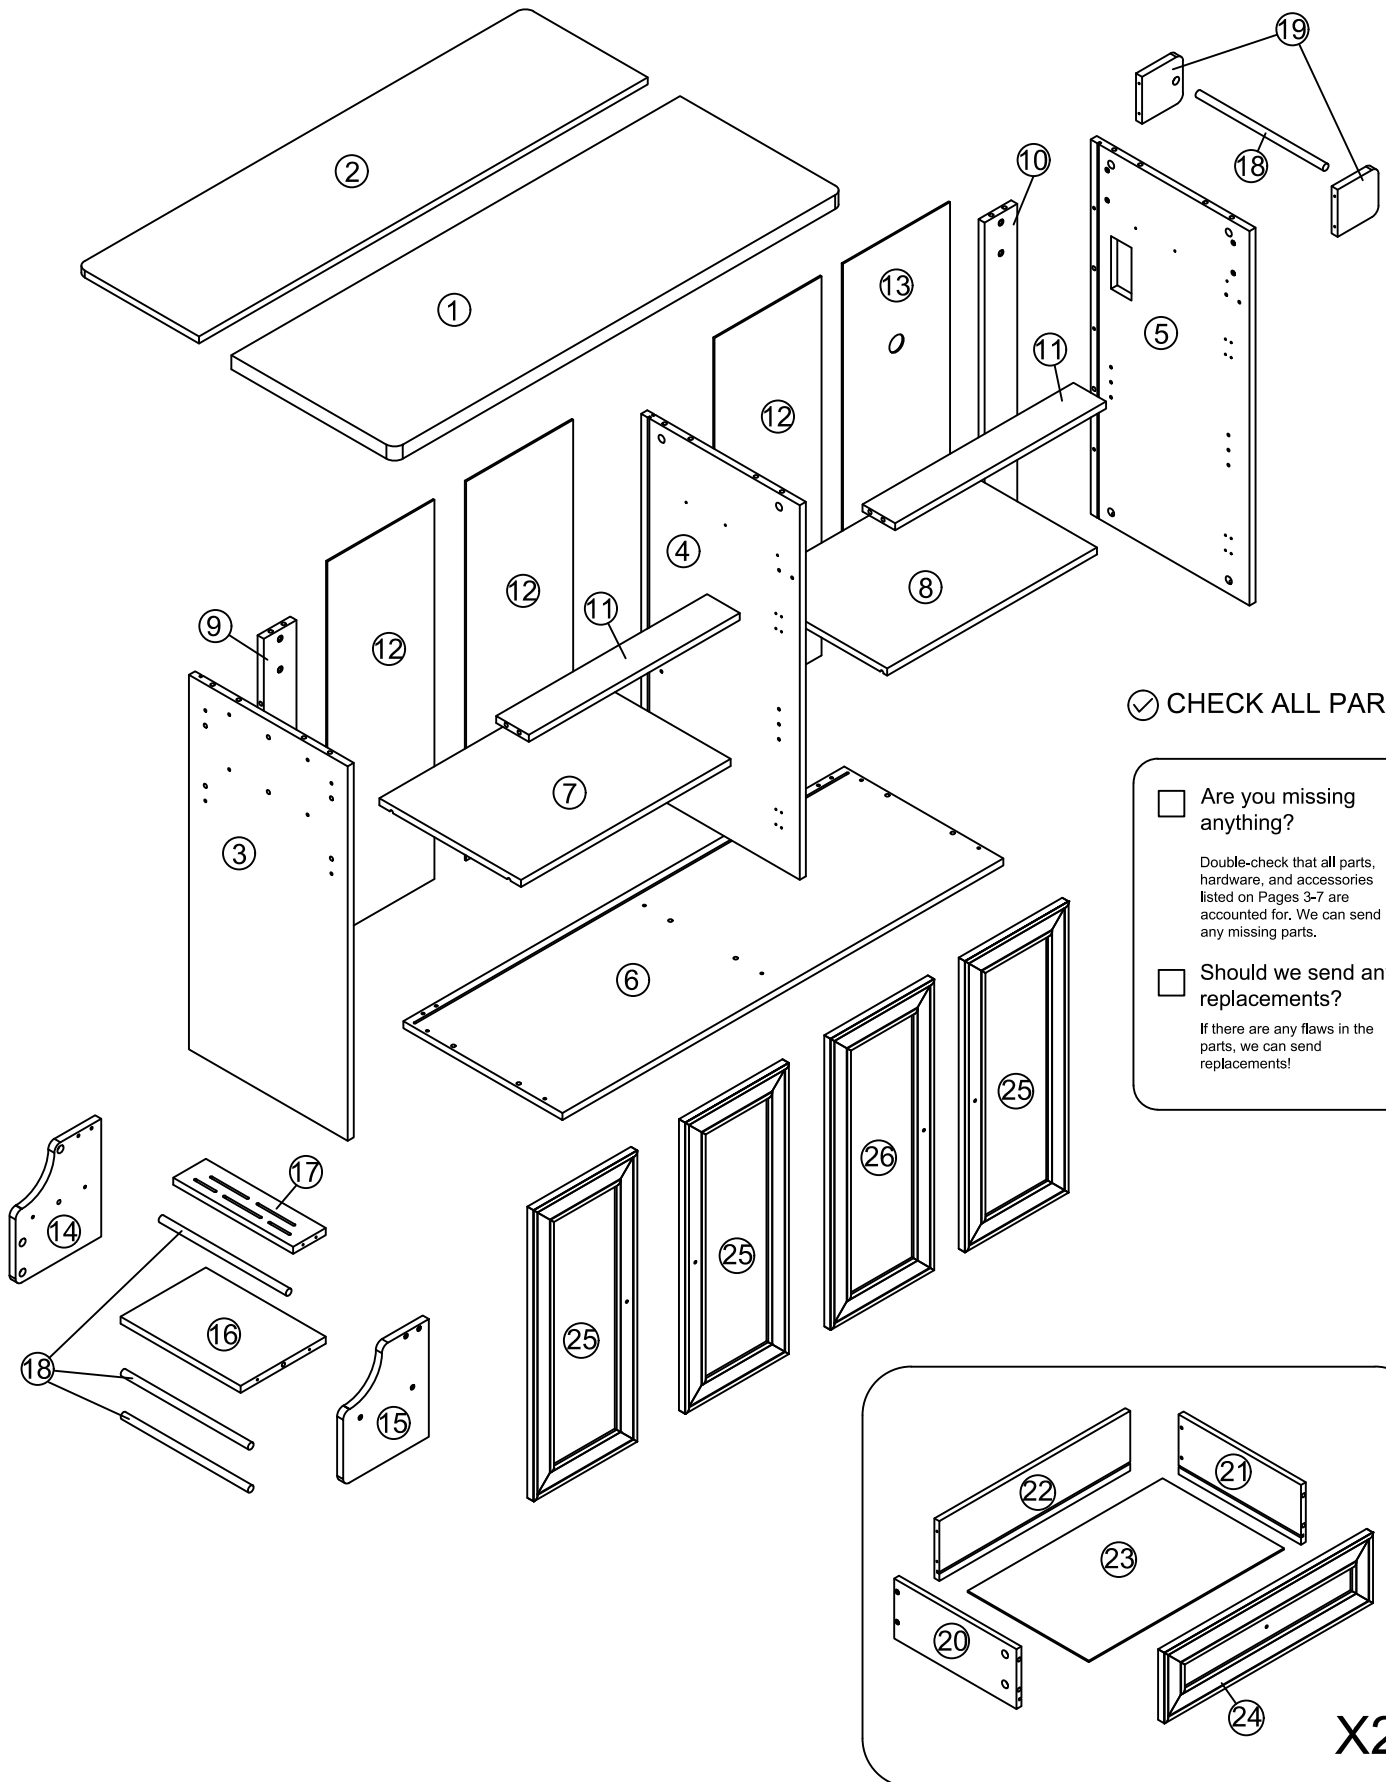


BOARD IDENTIFICATION


Not actual size

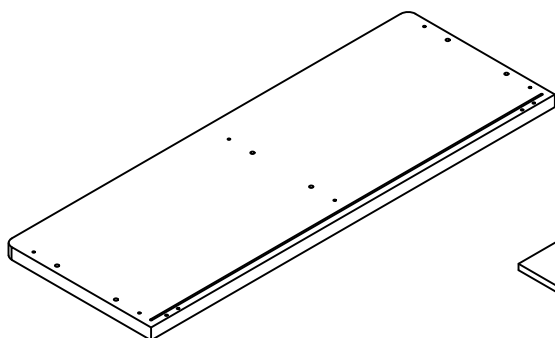


① X1

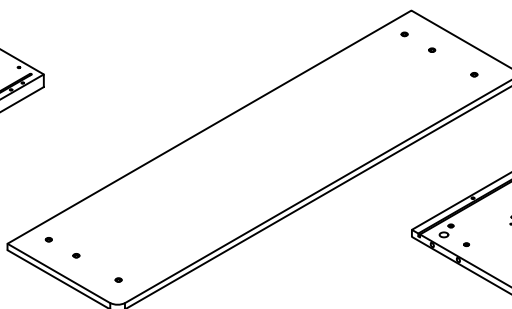


② X1

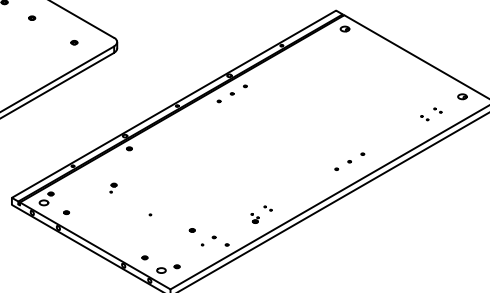


③ X1

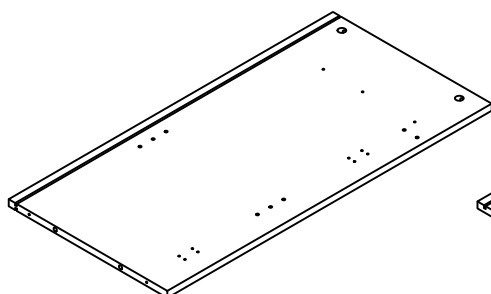


④ X1

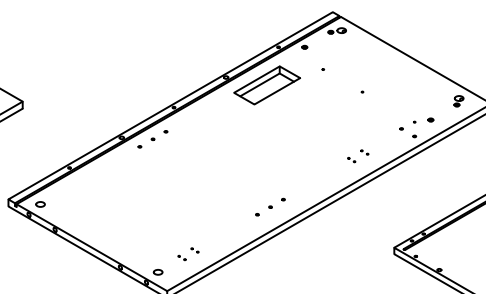


⑤ X1

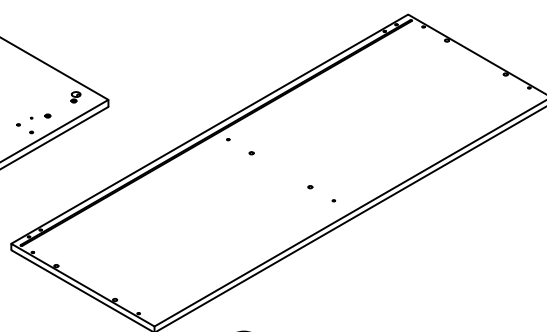


⑥ X1

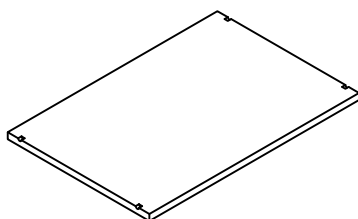


⑦ X1

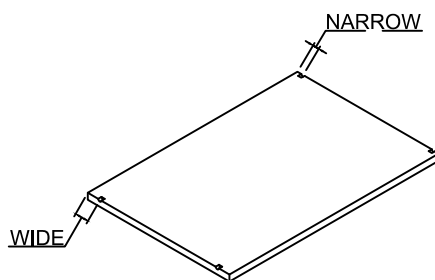


⑧ X1

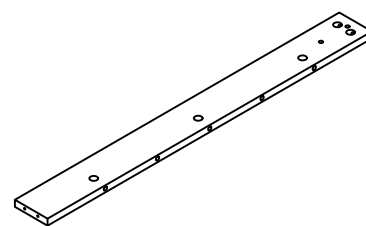


⑨ X1

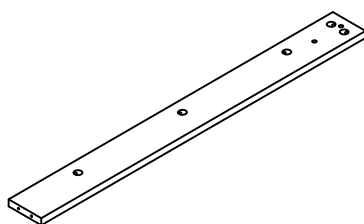

⑩ X1

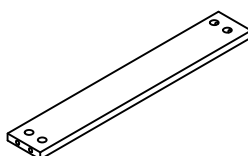


⑪ X2

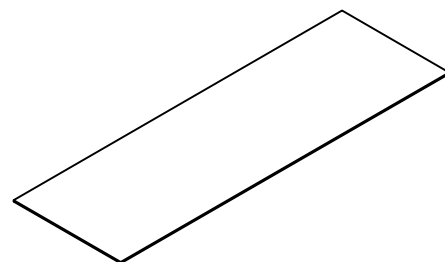


⑫ X3


Not actual size

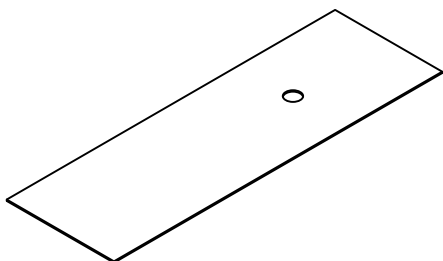


⑬ X1




⑭ X1

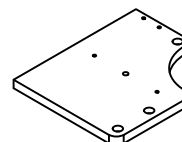


⑮ X1

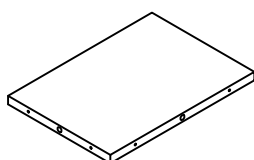


⑯ X1

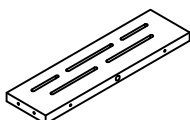


⑰ X1




⑱ X4




⑲ X2

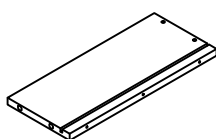


⑳ X2

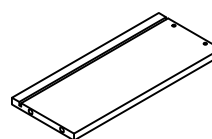


㉑ X2

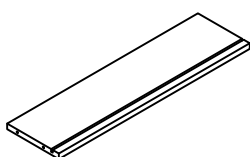

㉒ X2

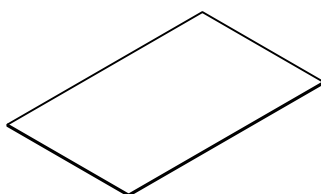


㉓ X2

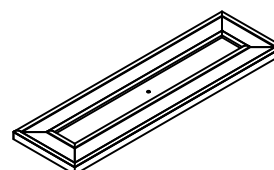


㉔ X2

BOARD IDENTIFICATION

Not actual size
















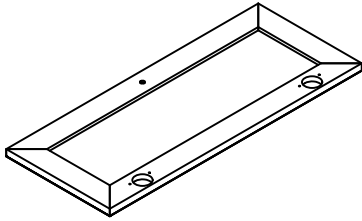











②⑤ X3

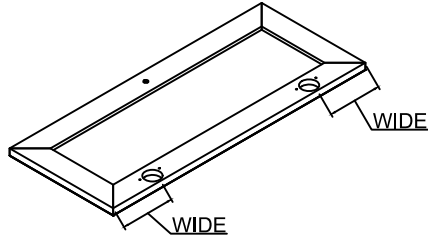

②⑥ X1





HARDWARE PART LIST

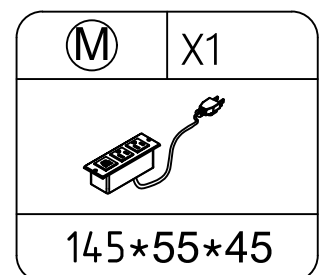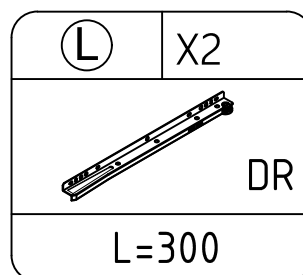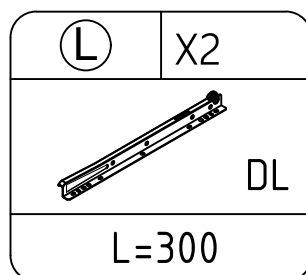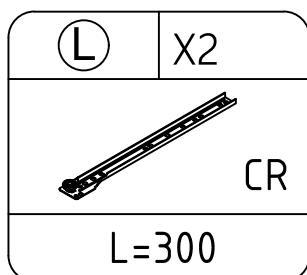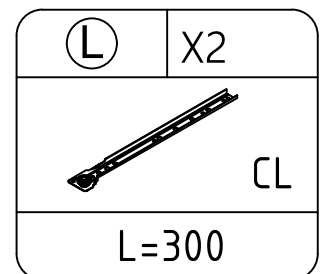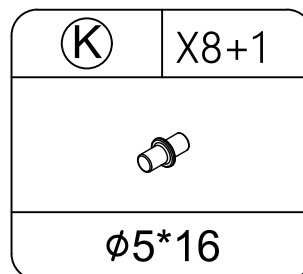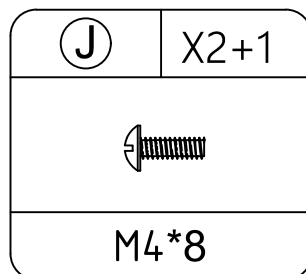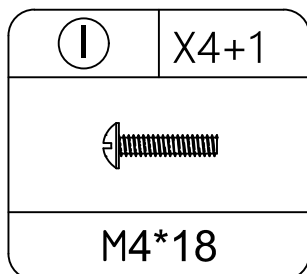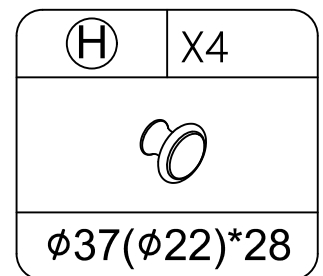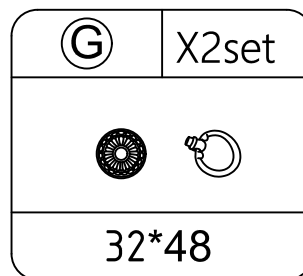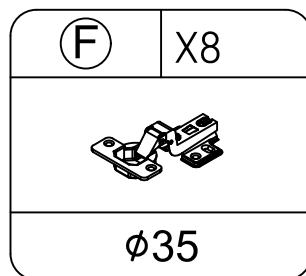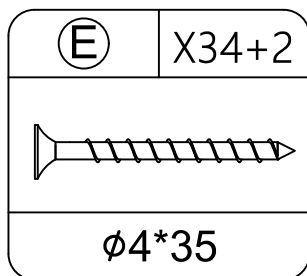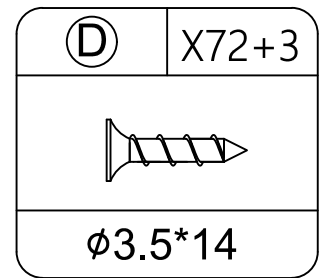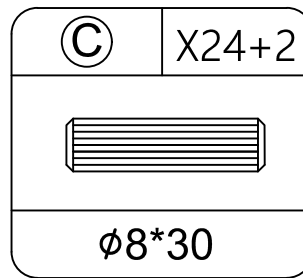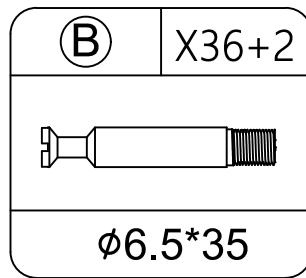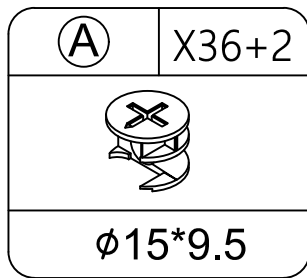

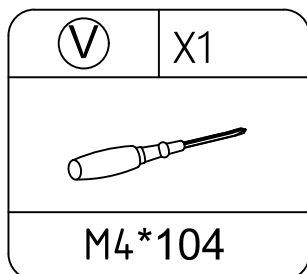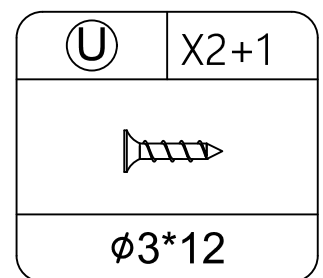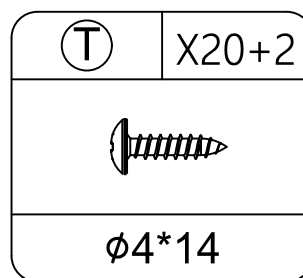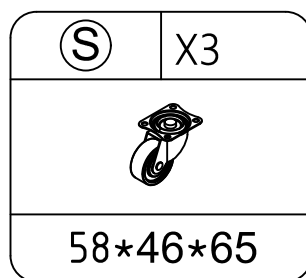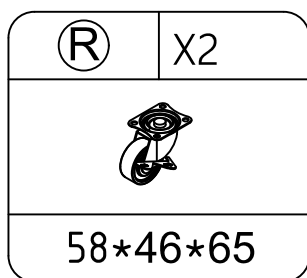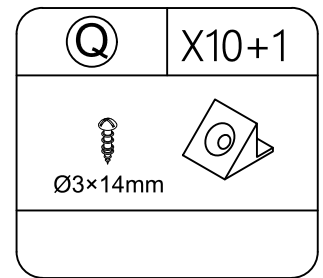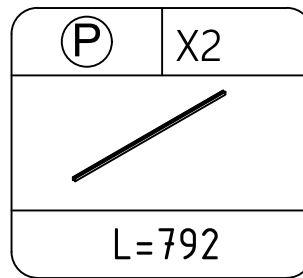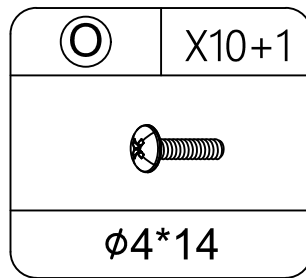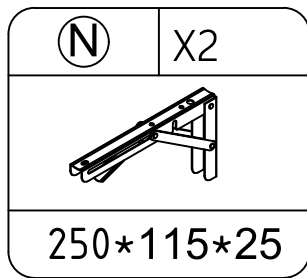



Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

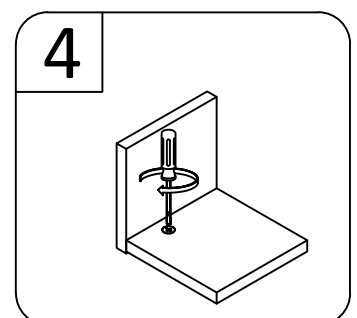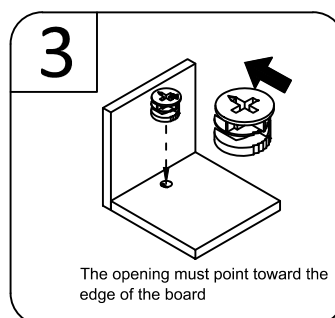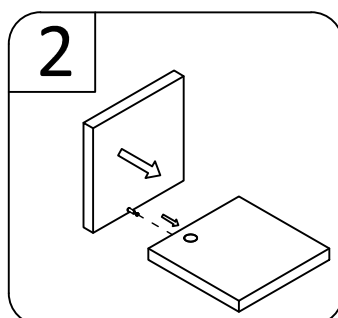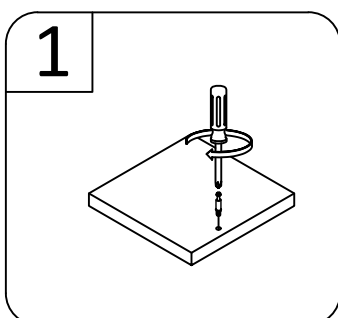



STEP 1

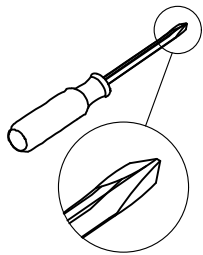


(D)	X6
	
ø3.5*14	


(L)	X1
	
CL	
L=300	


(L)	X1
	
CR	
L=300	

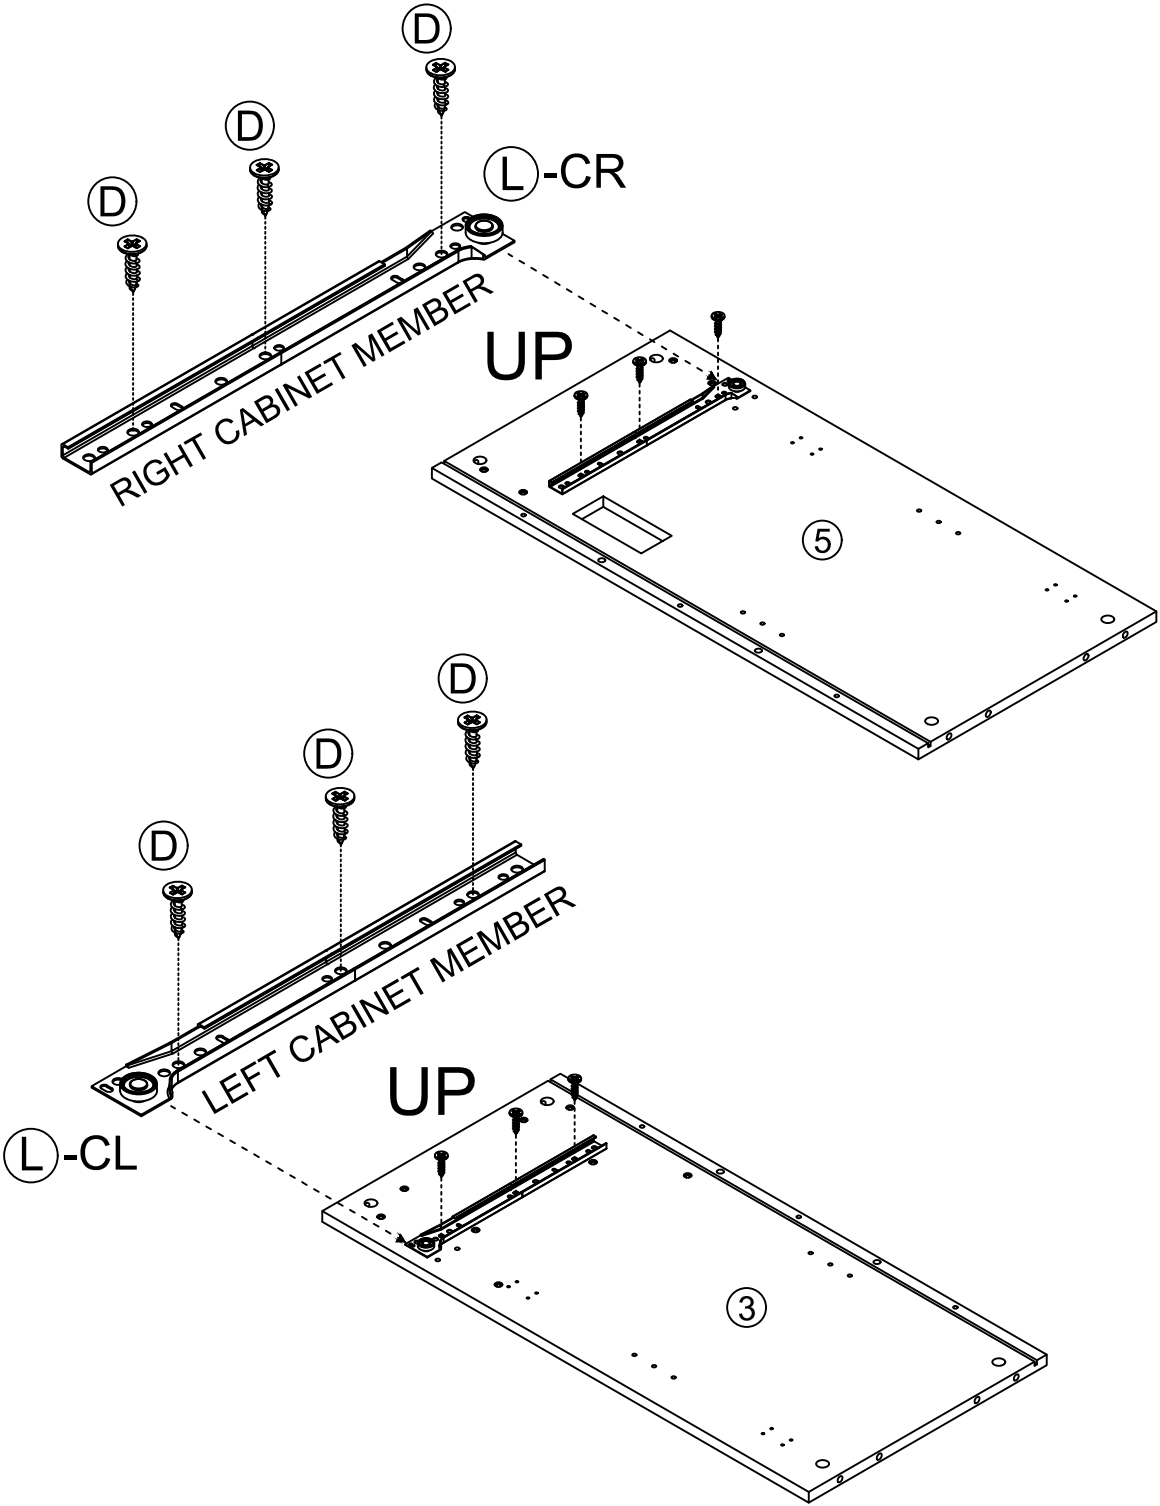


STEP 2

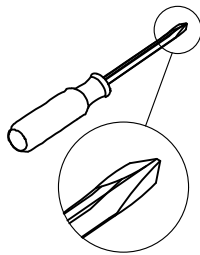






(D)	X6
	
ø3.5*14	

(L)	X1
	
L=300	

(L)	X1
	
L=300	

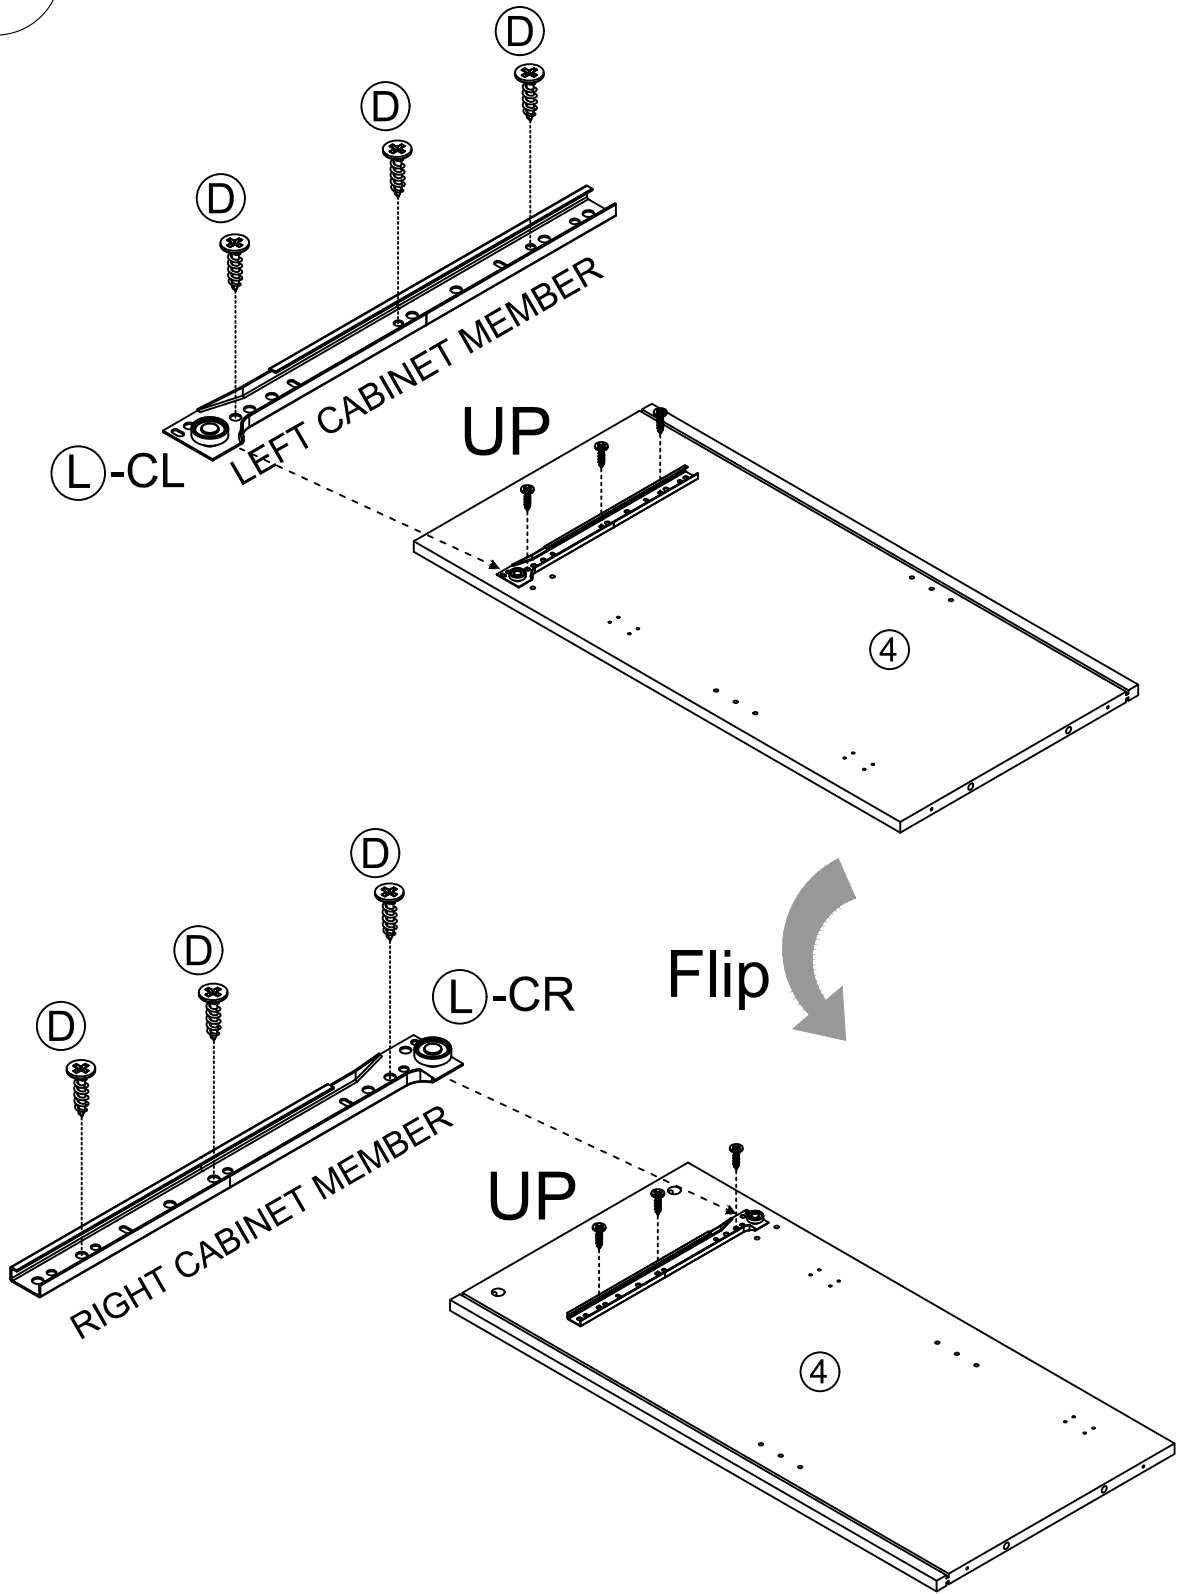


STEP 3

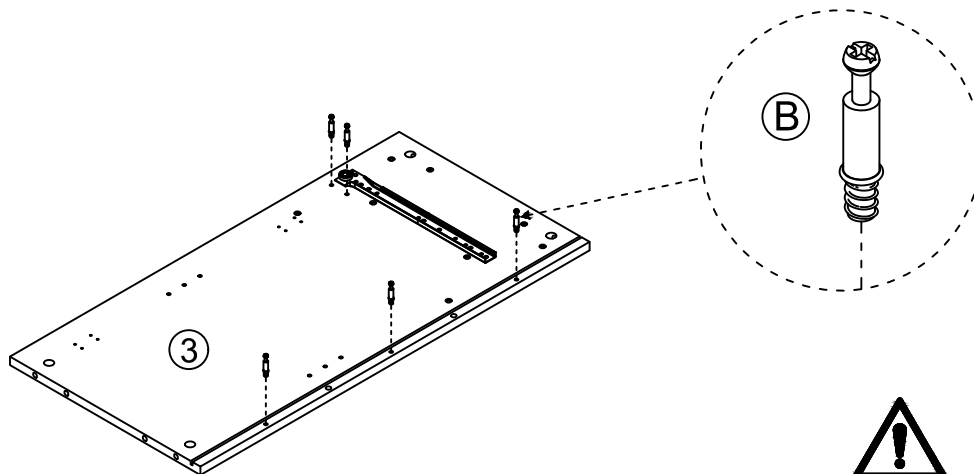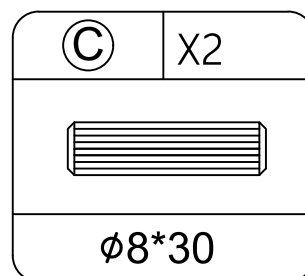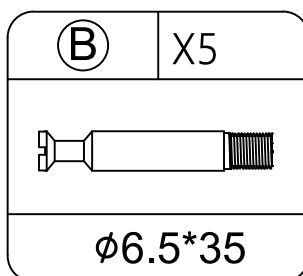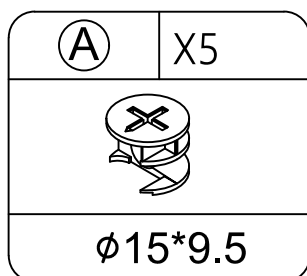
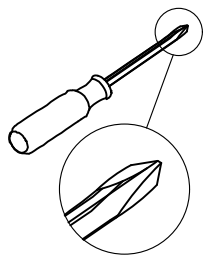


Pay attention to the installation direction of the 11 board.

EDGE BANDING





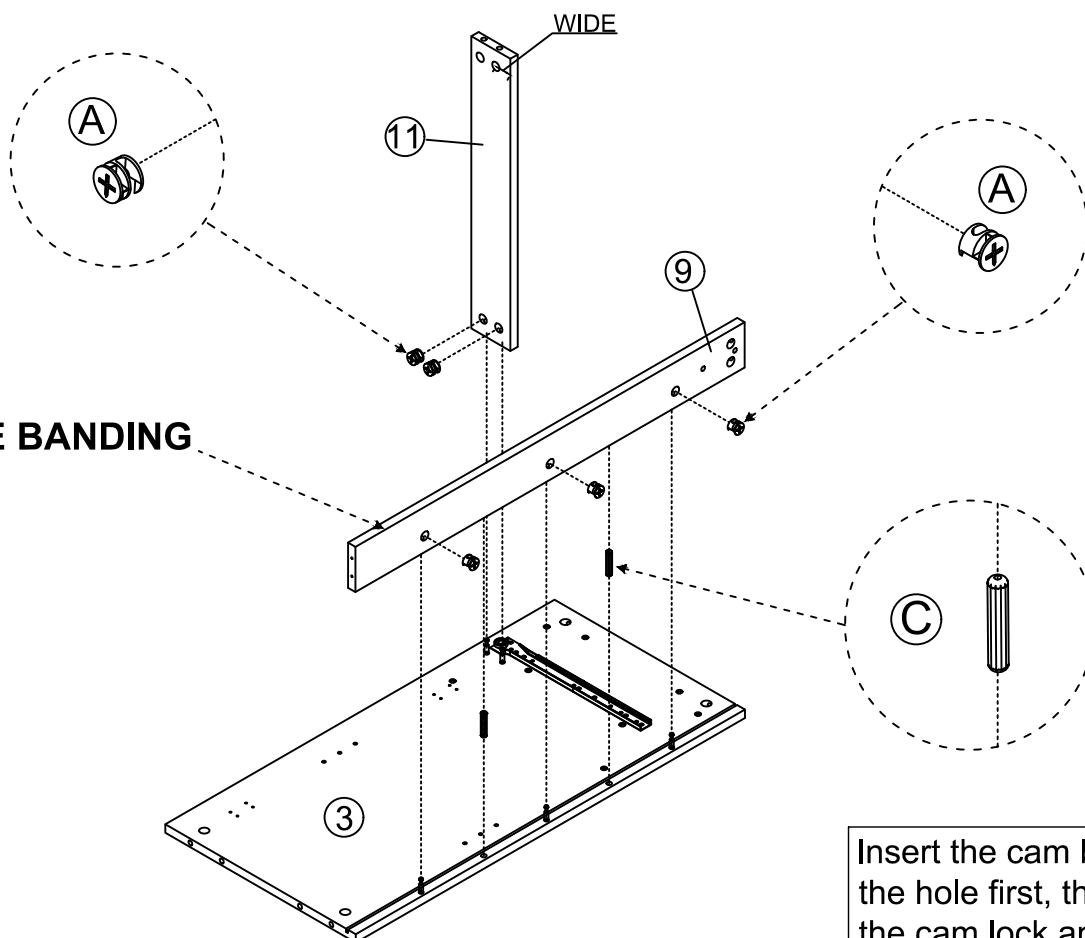


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

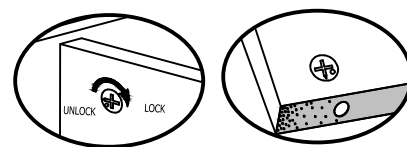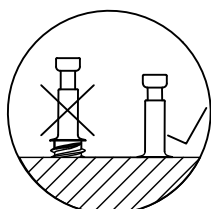


Proper orientation of CAM LOCK

STEP 4

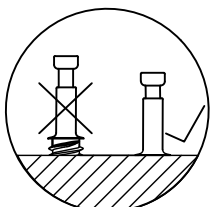
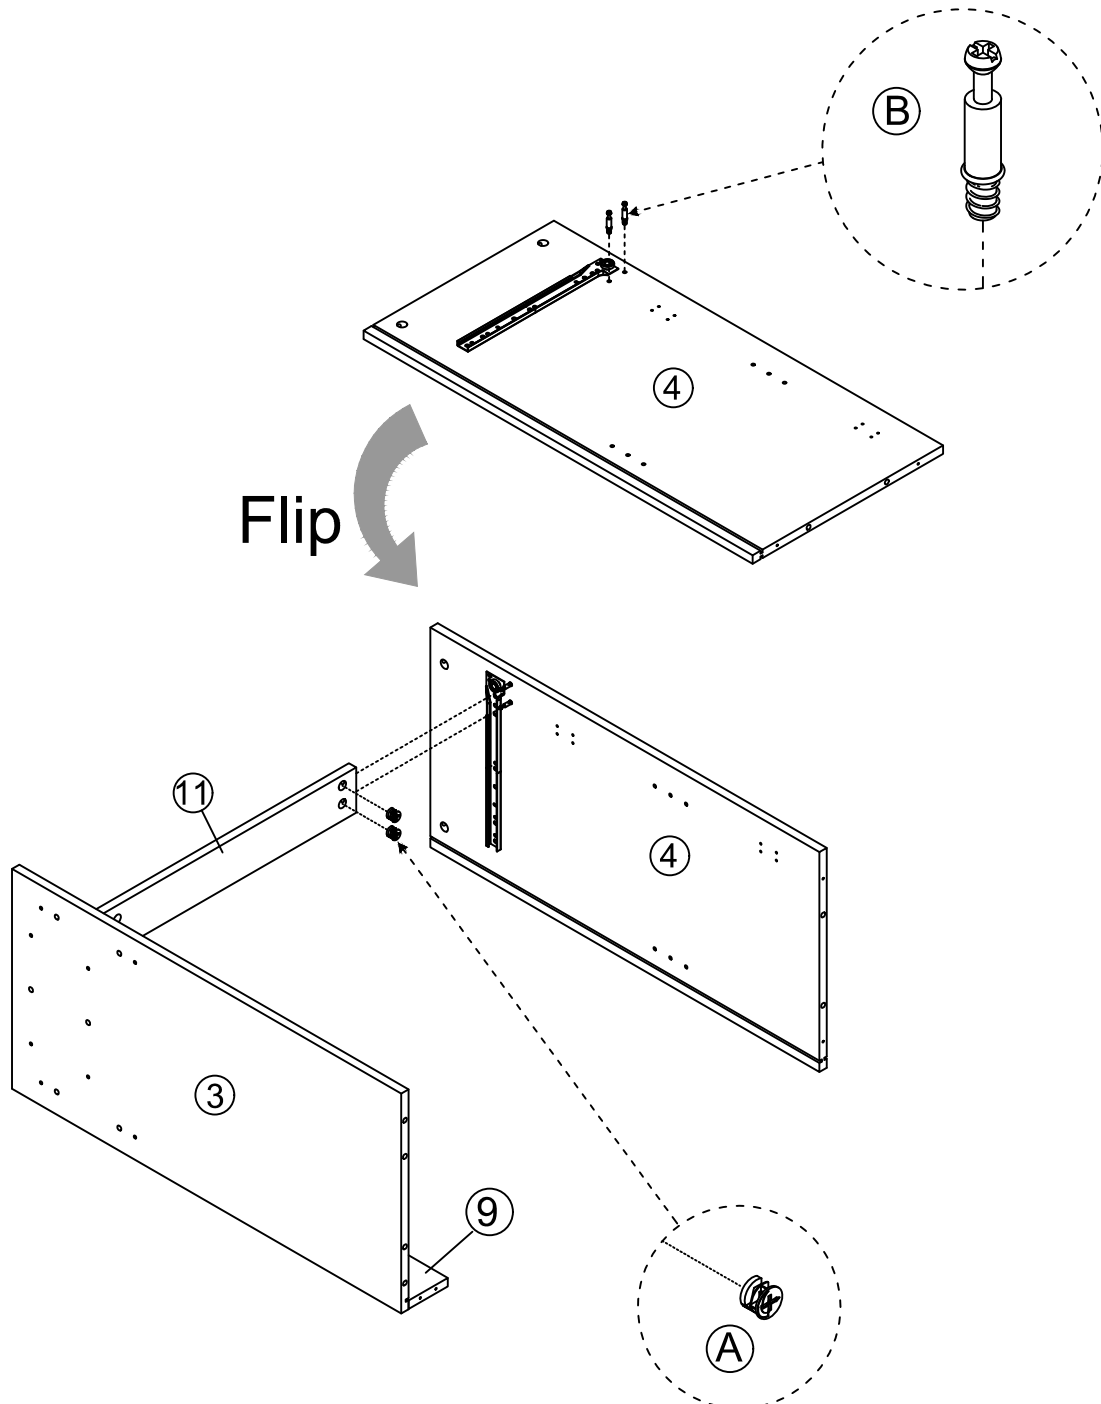
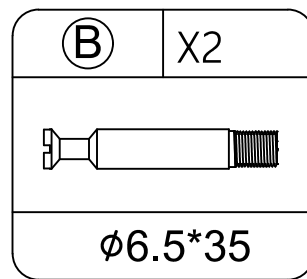
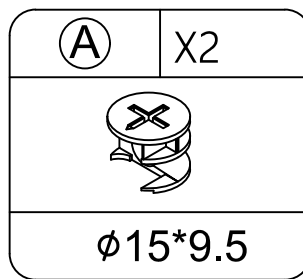
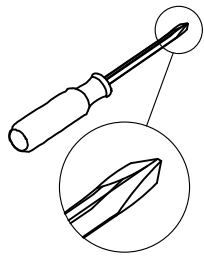


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

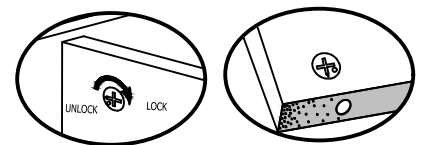


Proper orientation of CAM LOCK


STEP 5

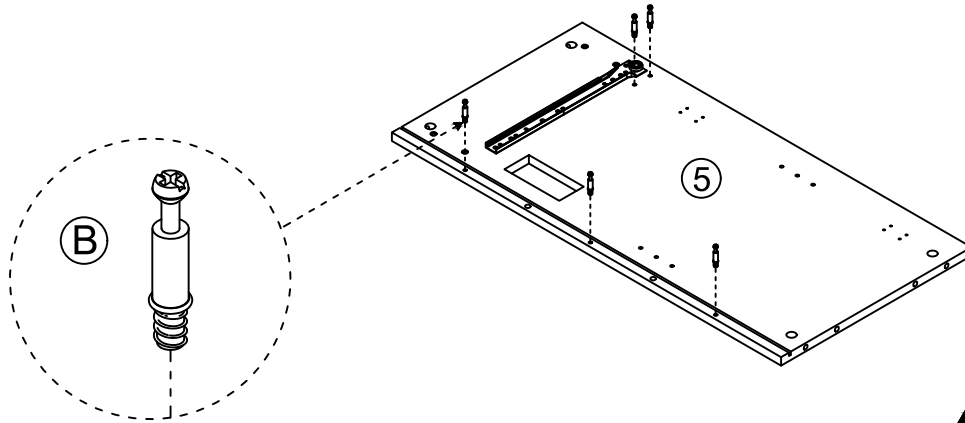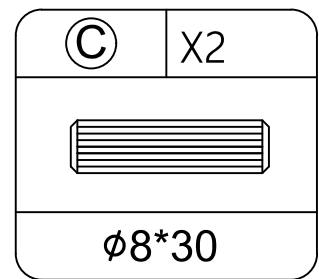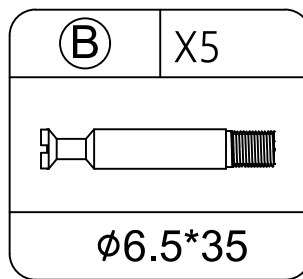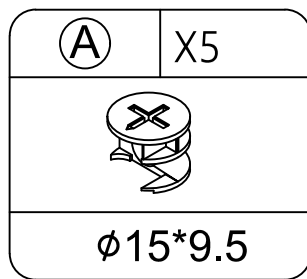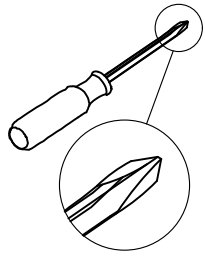


Pay attention to the installation direction of the 11 board.

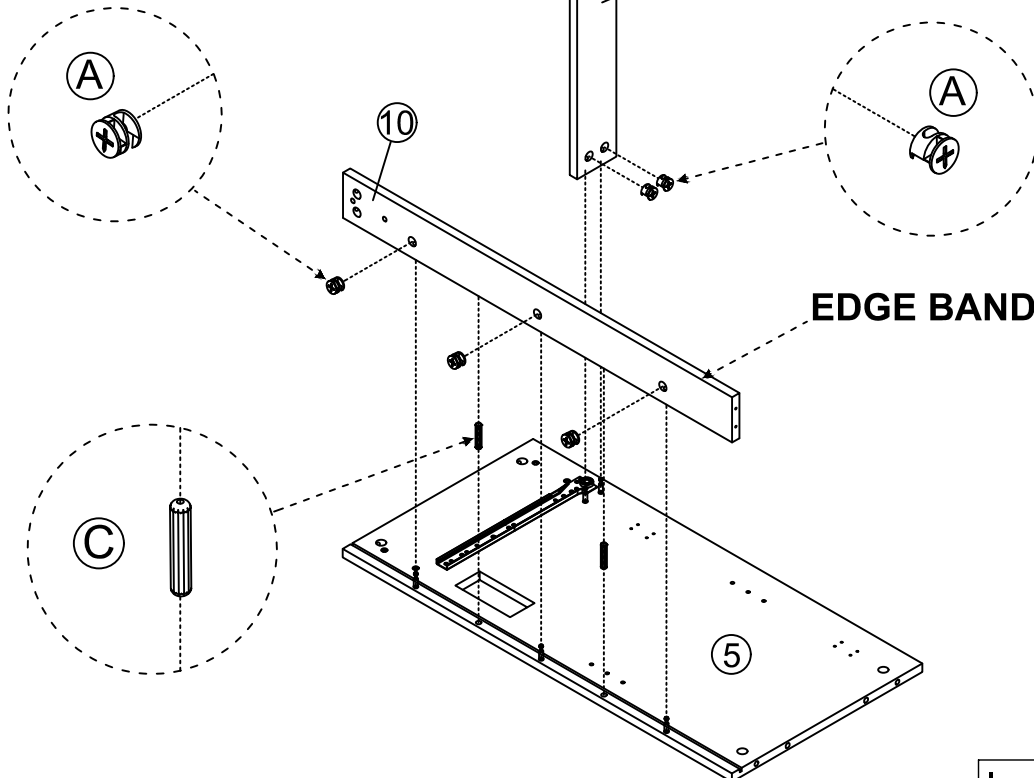

EDGE BANDING







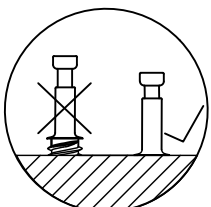


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


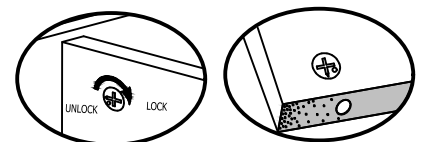


Proper orientation of CAM LOCK

STEP 6

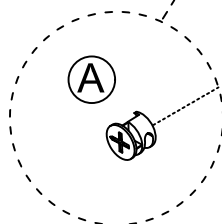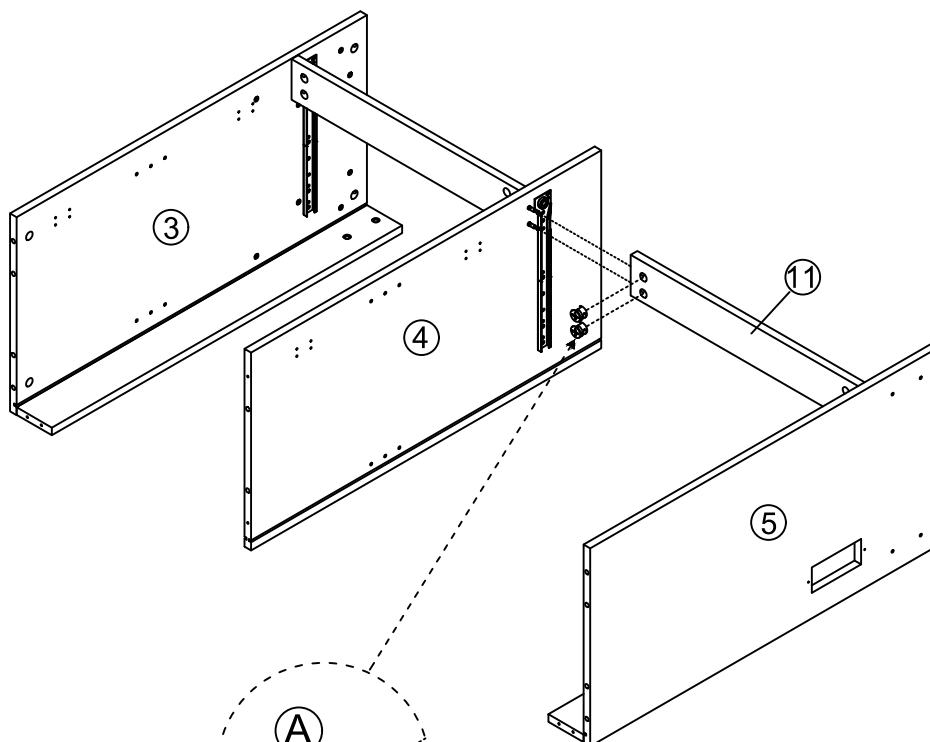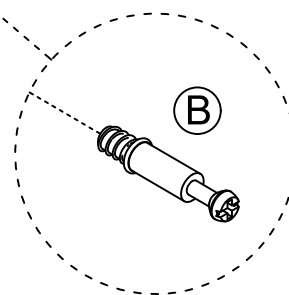
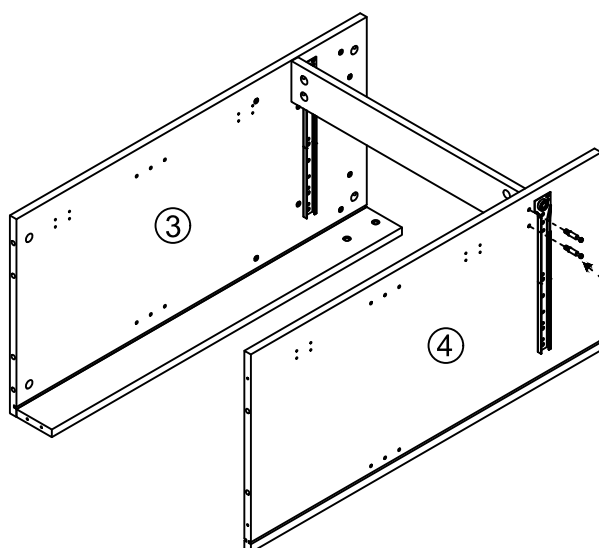
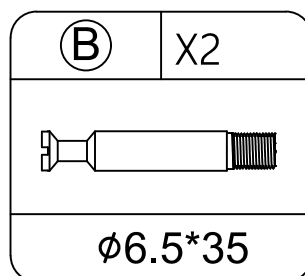
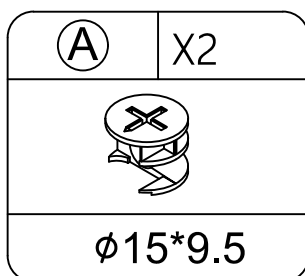
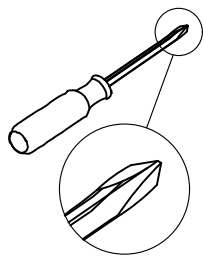


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


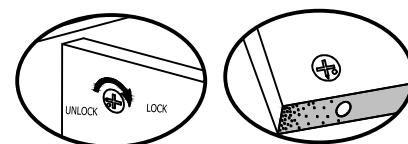
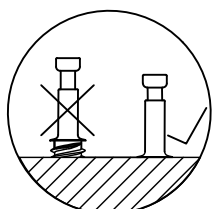


Proper orientation of CAM LOCK



STEP 7

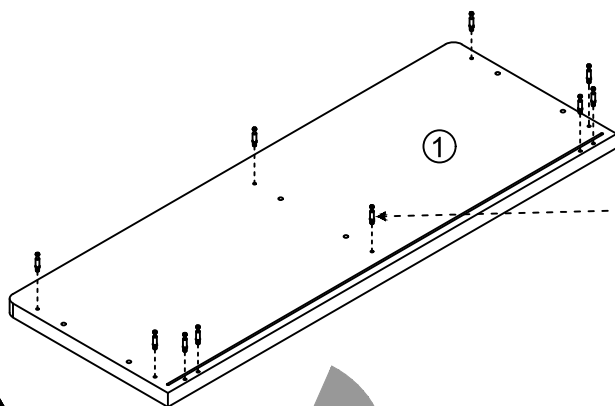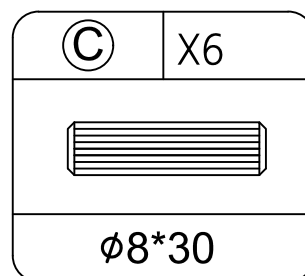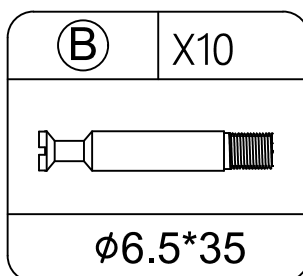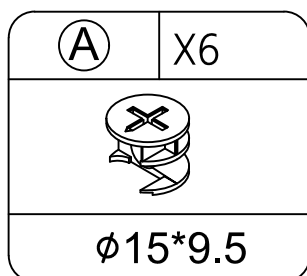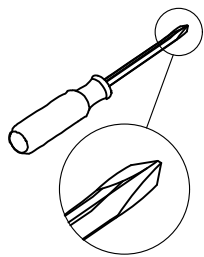

Pay attention to the installation direction of the 1 board.

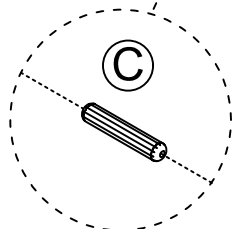
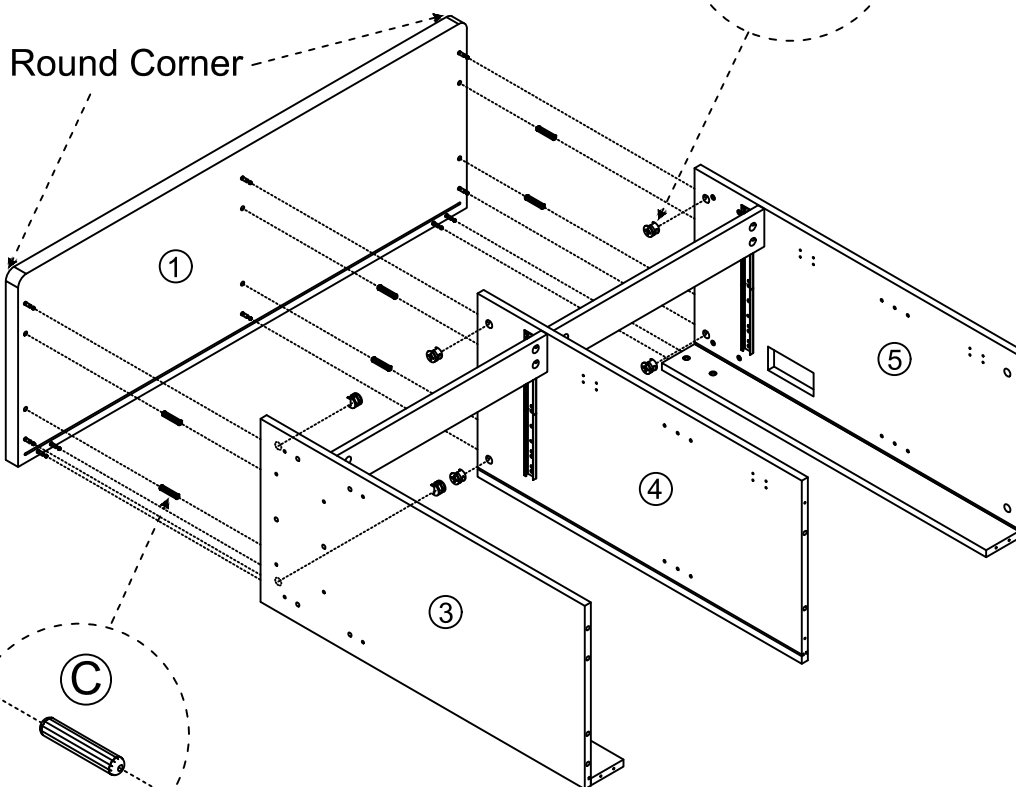
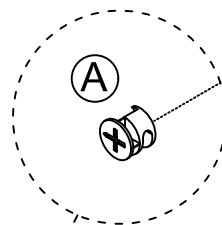


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

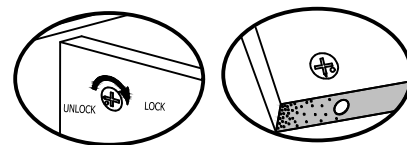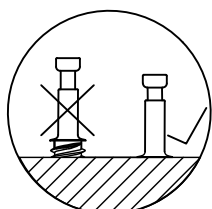


Proper orientation of CAM LOCK

STEP 8

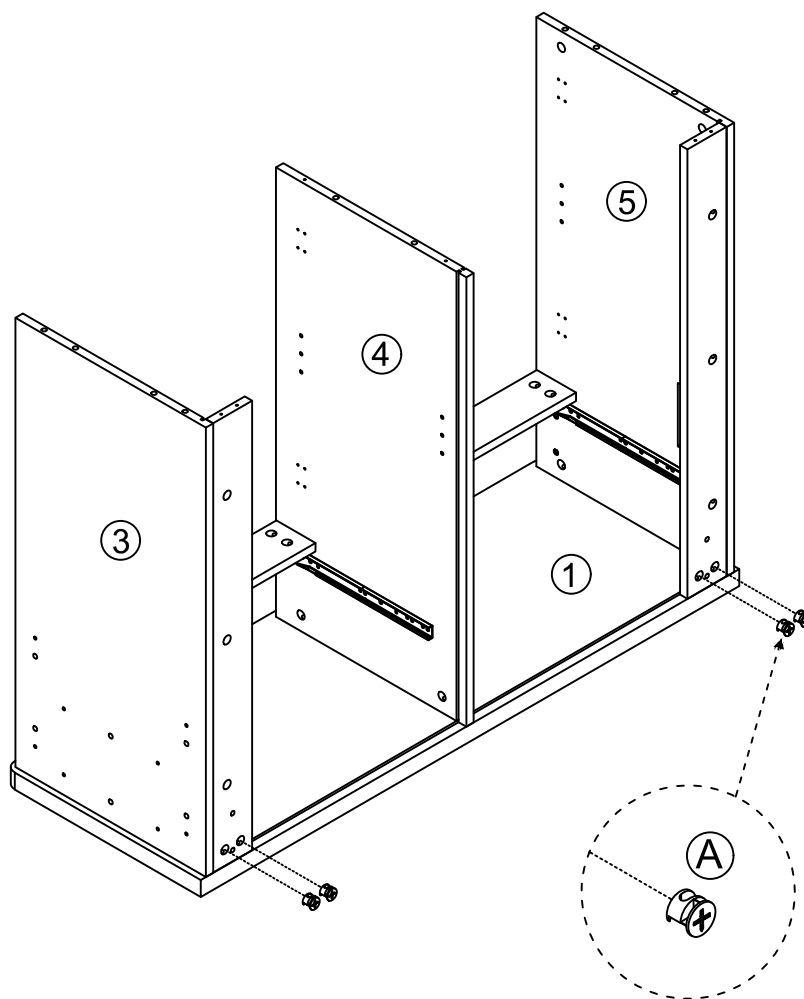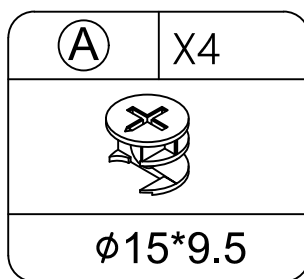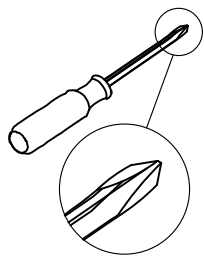


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

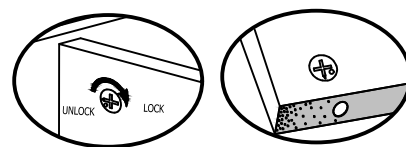


Proper orientation of CAM LOCK


A line drawing of a screwdriver with a cylindrical handle and a long shaft. A circular callout at the tip provides a magnified view of the screwdriver's point, showing its sharp edges and the central flutes.




STEP 10

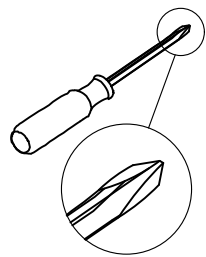



(A)	X4	(B)	X4	(C)	X6	(E)	X6
$\phi 15*9.5$		$\phi 6.5*35$		$\phi 8*30$		$\phi 4*35$	

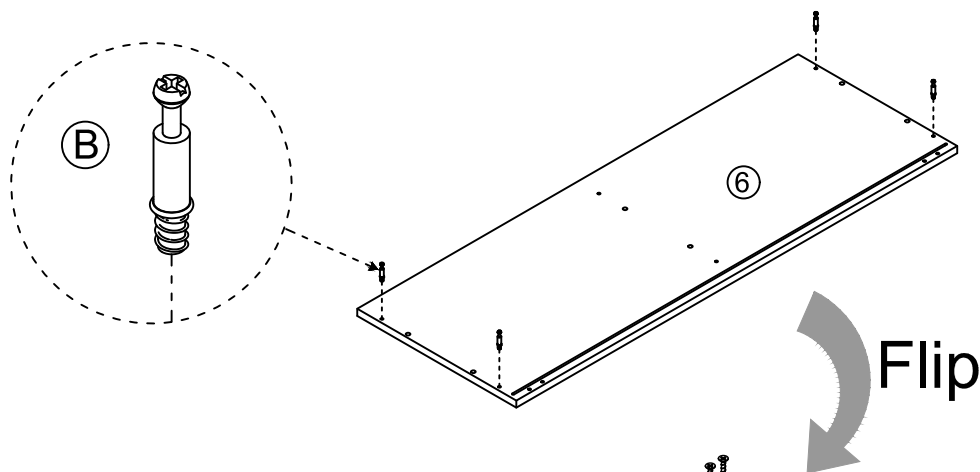

Note the slot on the back.

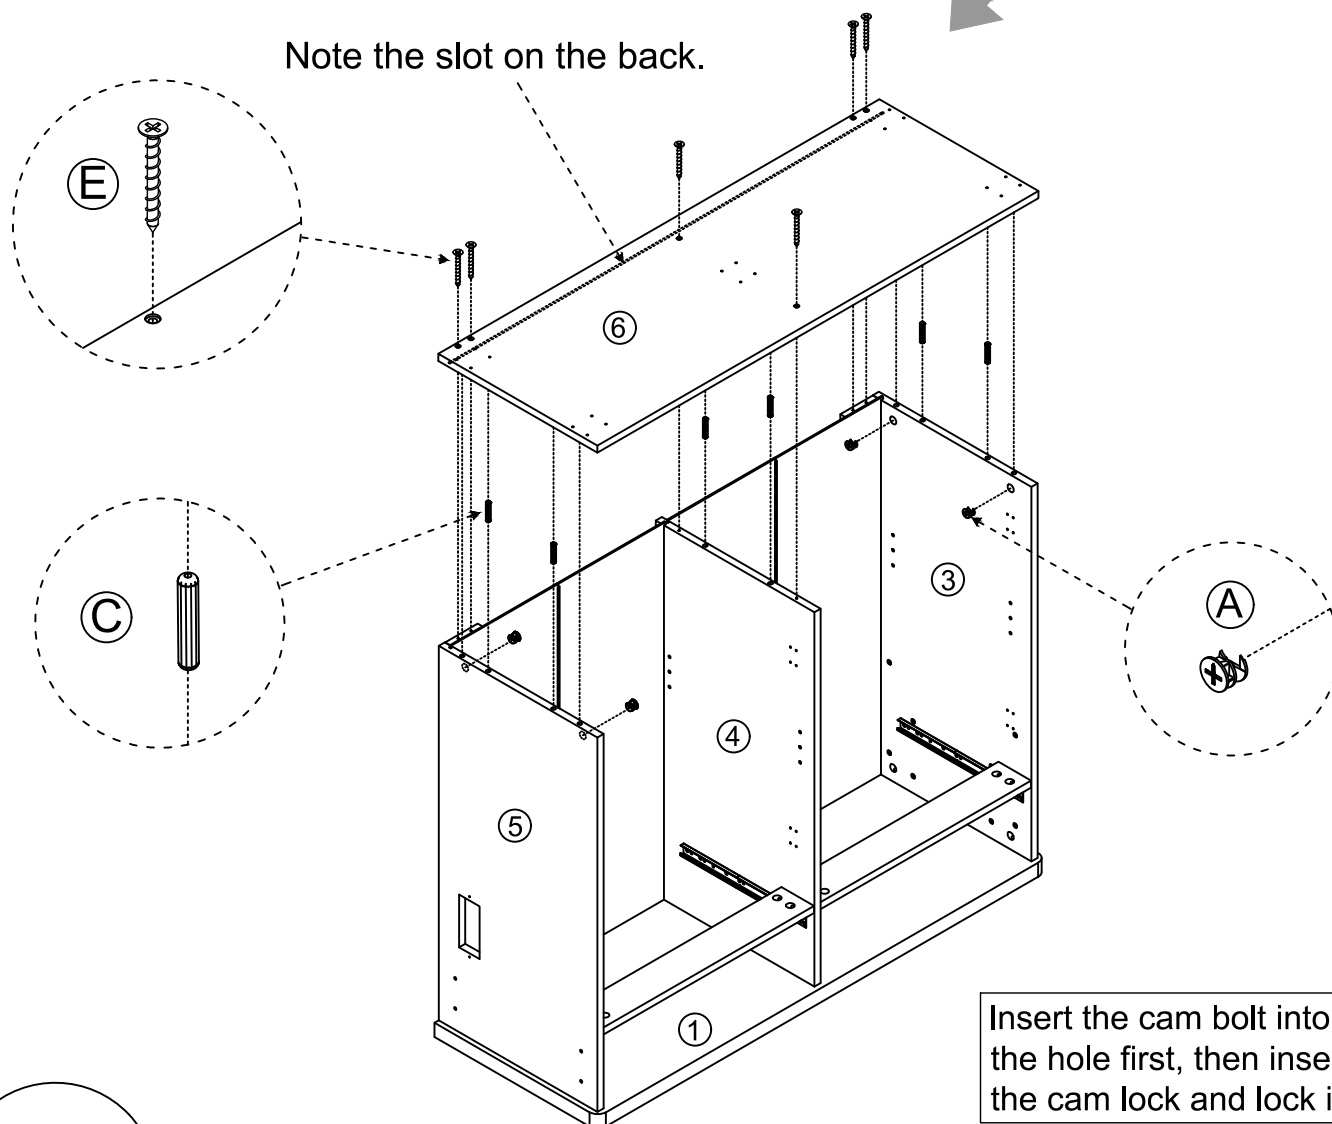



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

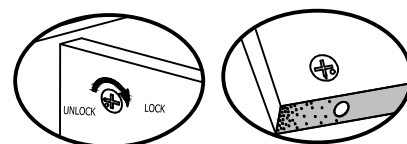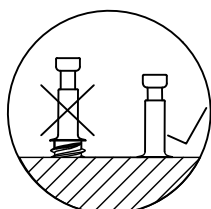


Proper orientation of CAM LOCK


STEP 11

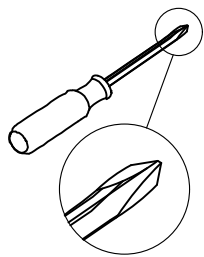



Ⓔ	X4
	
ø4*35	

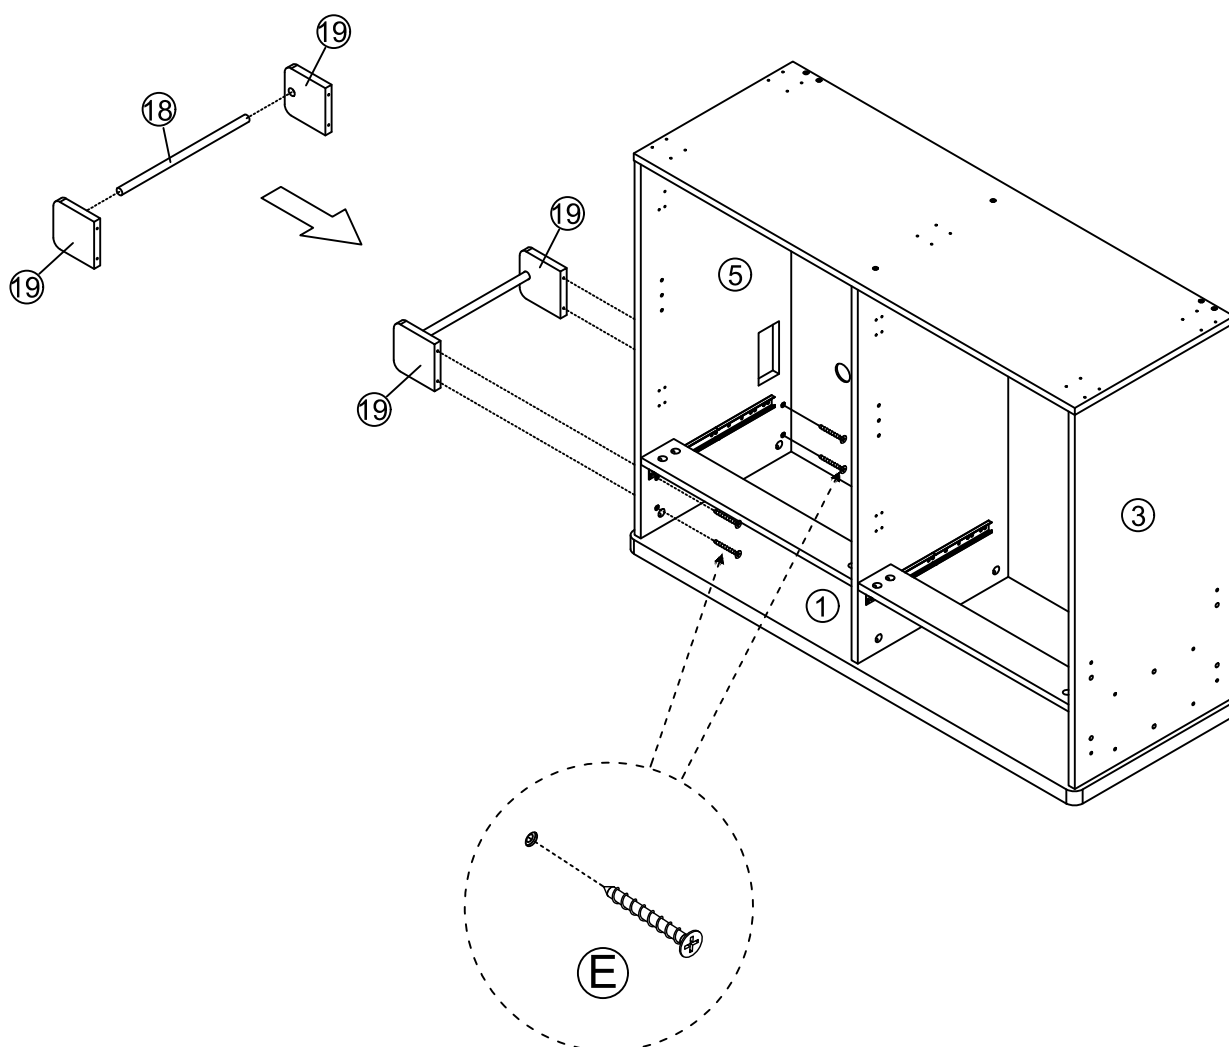





STEP 12

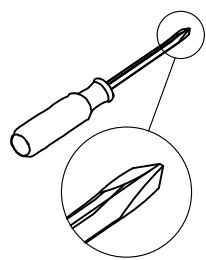


Ⓒ	X2	Ⓔ	X8
			
ø8*30		ø4*35	

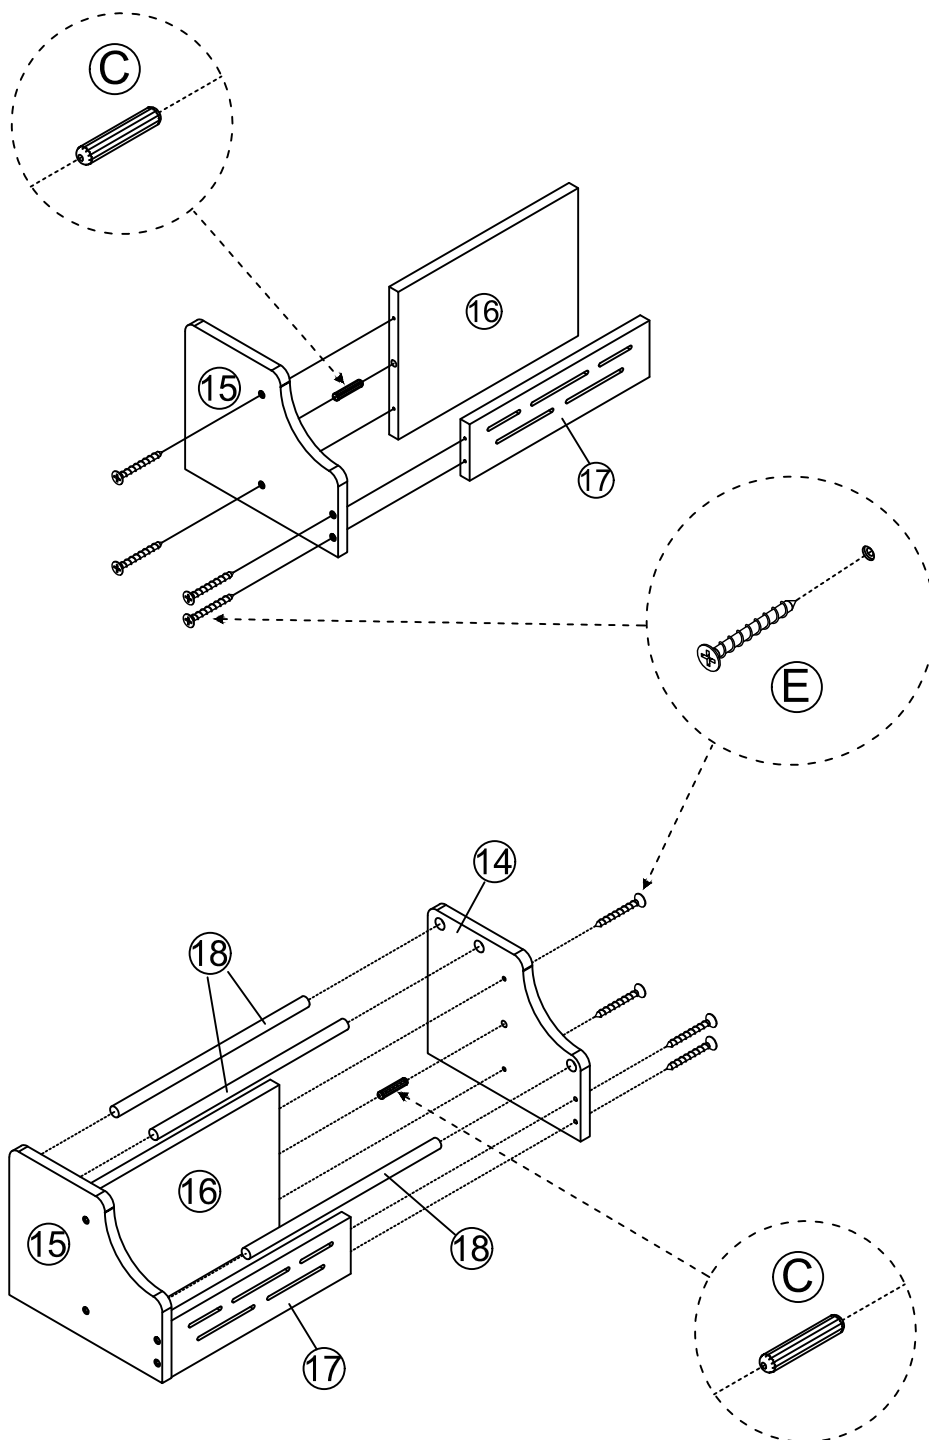

STEP 13

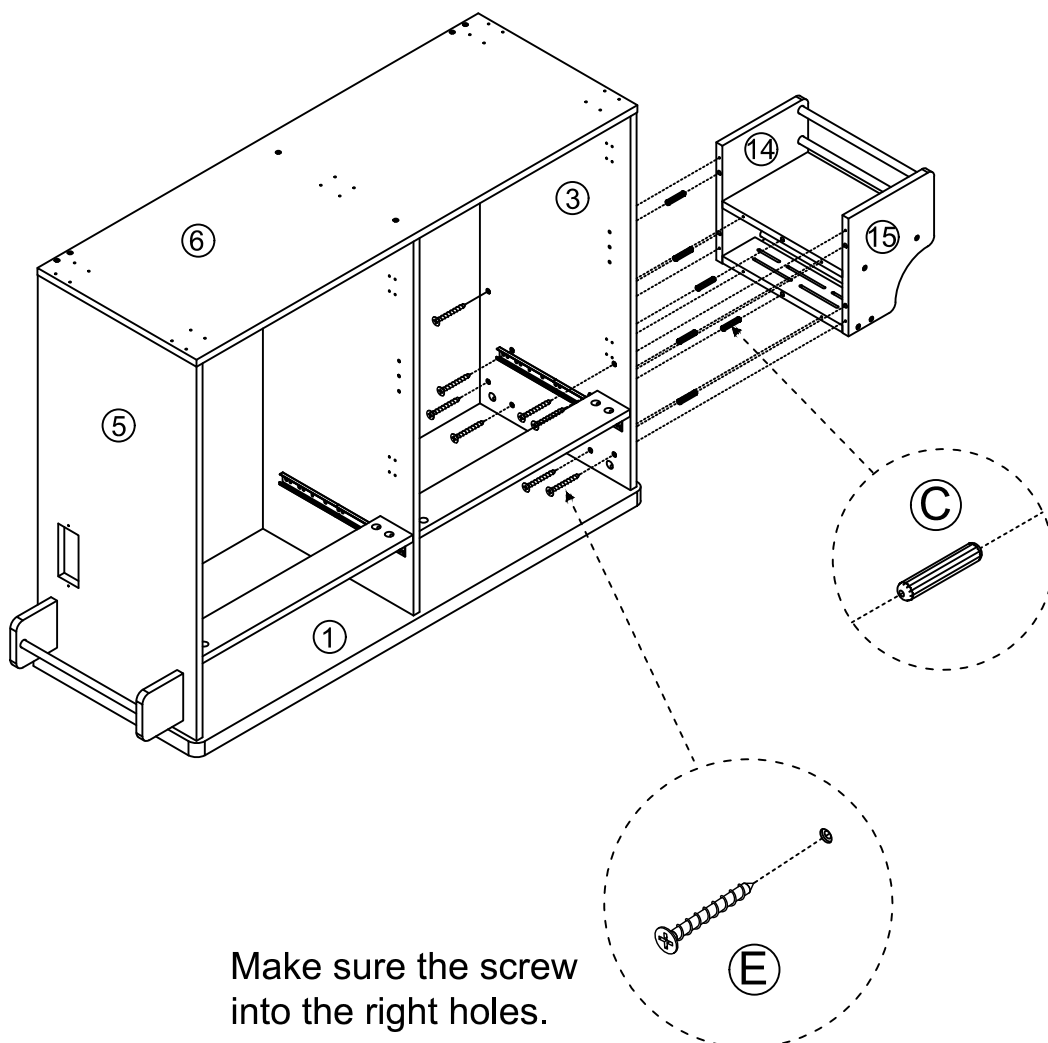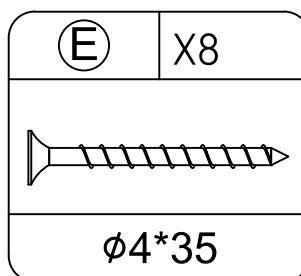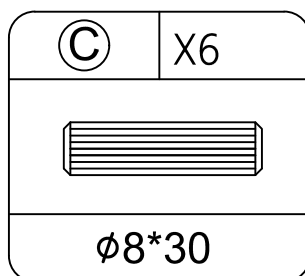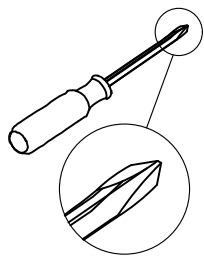


STEP 14

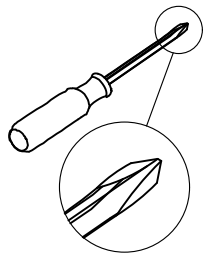


(T)	X20
	
ø4*14	


(R)	X2
	
58*46*65	

(S)	X3
	
58*46*65	


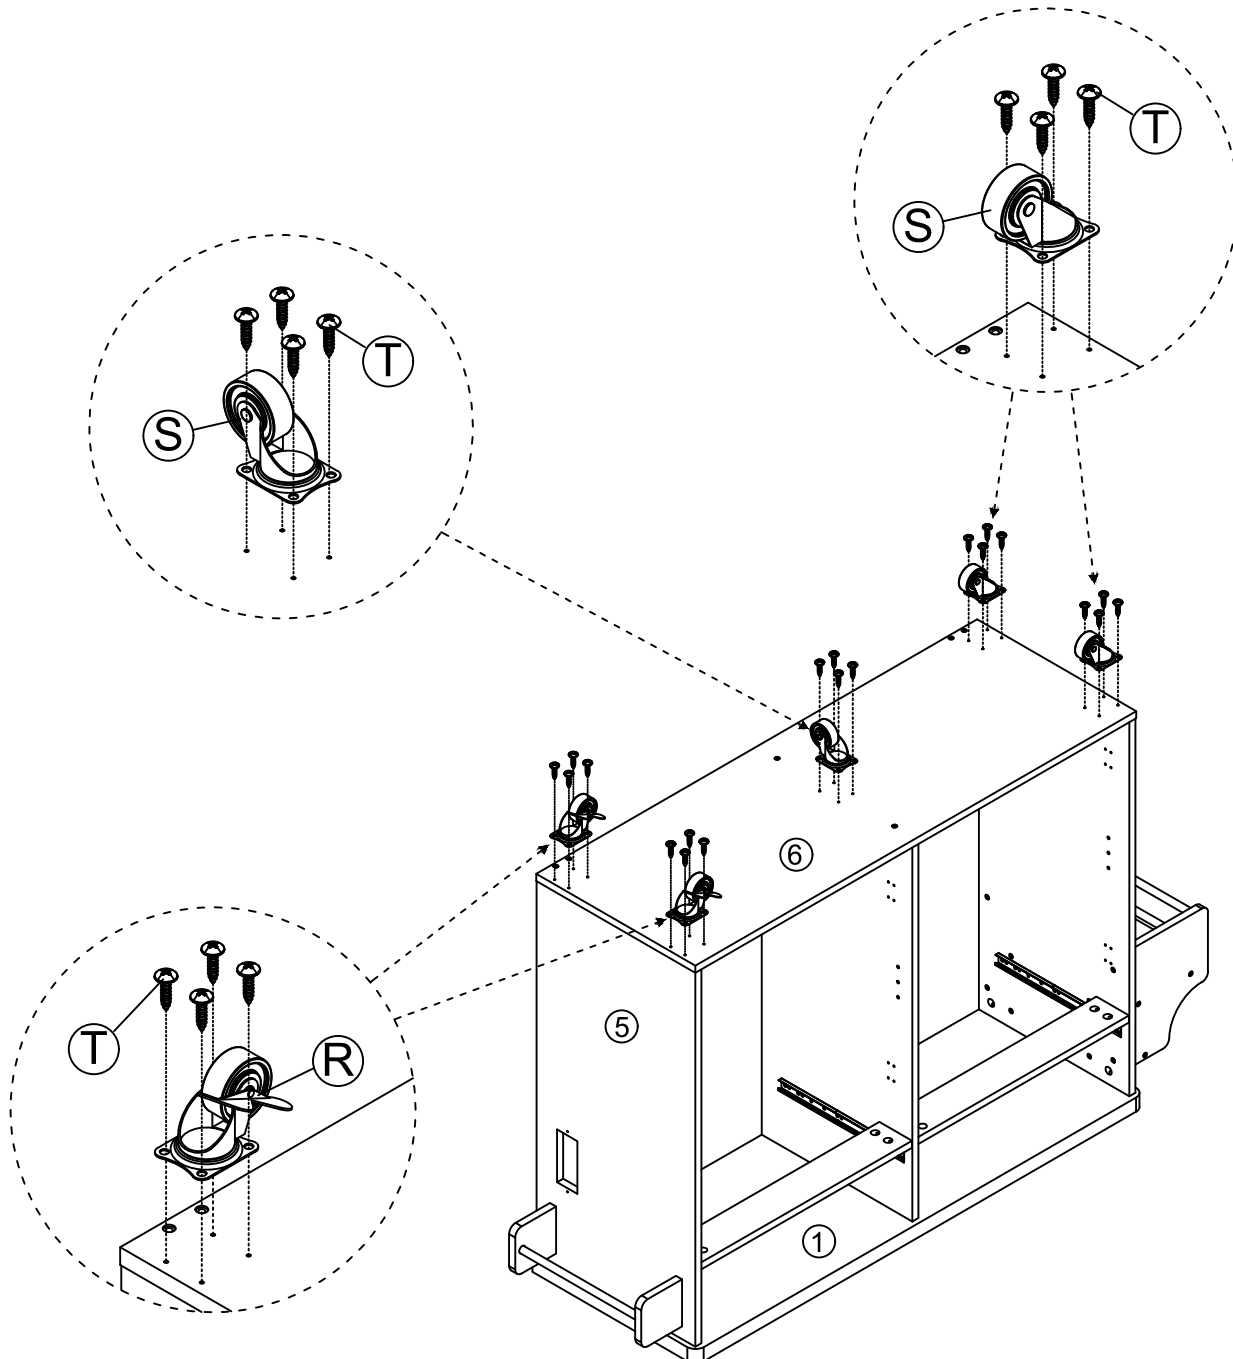


STEP 15



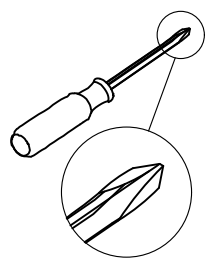


(N)	X2
	
250*115*25	


(O)	X6
	
φ4*14	

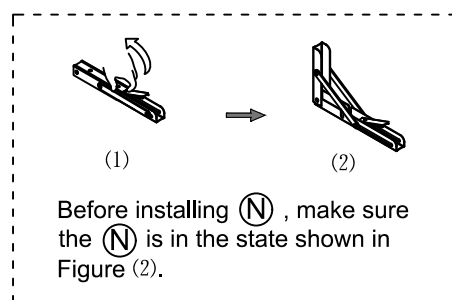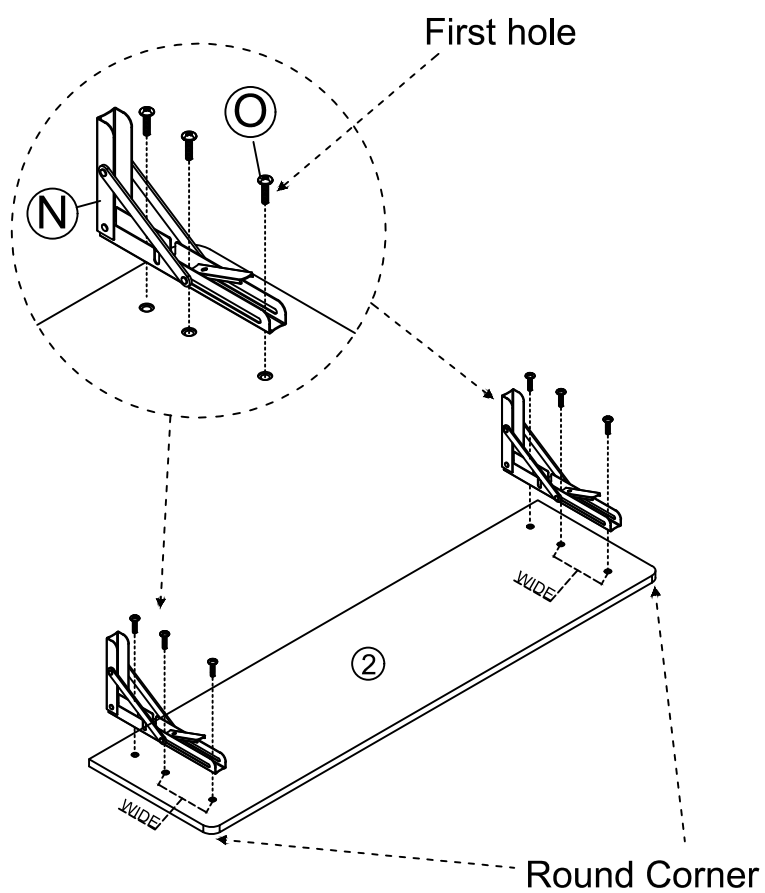



STEP 16

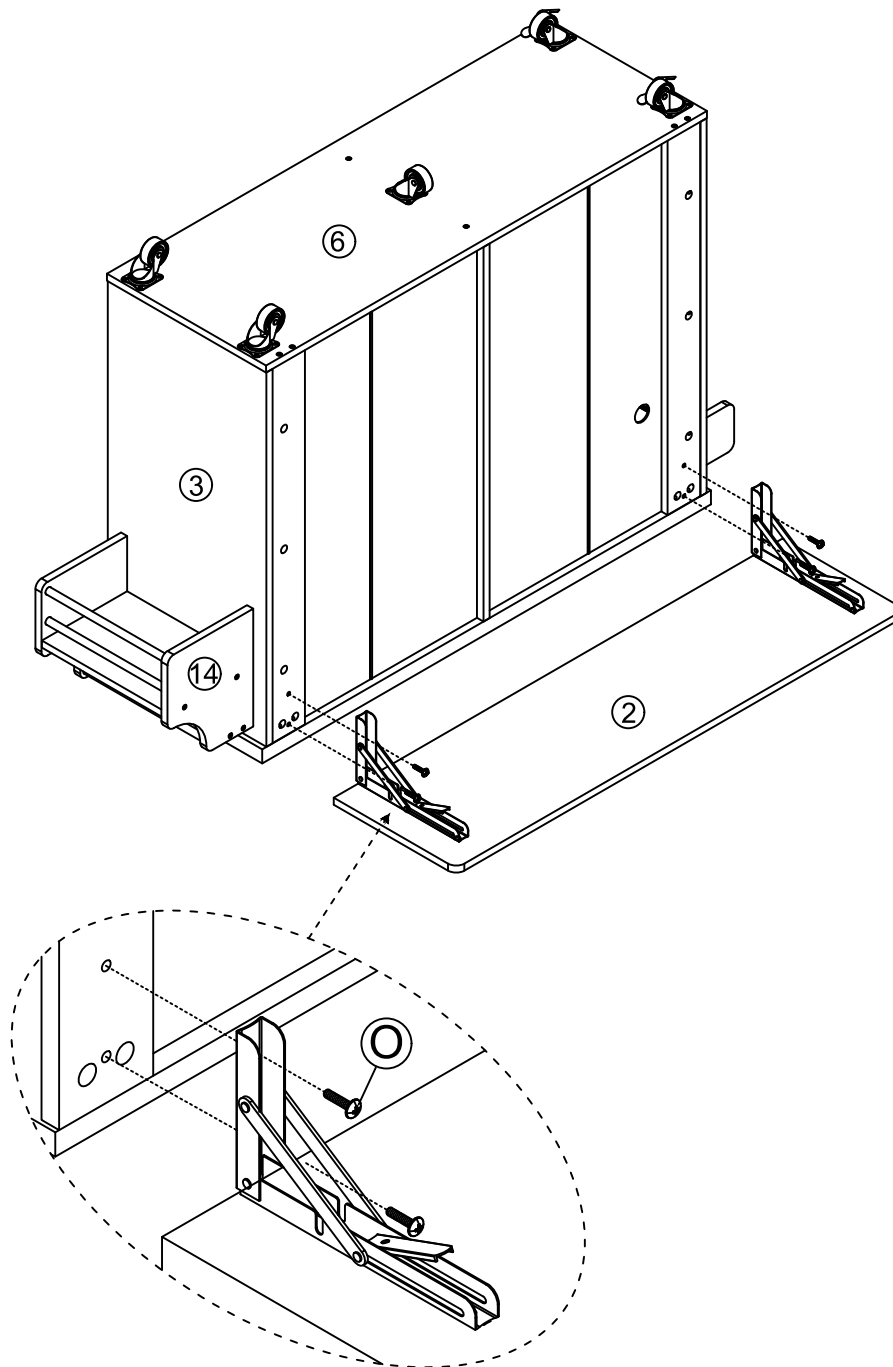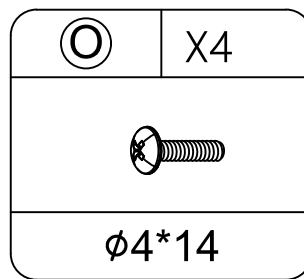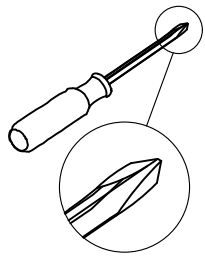

STEP 17


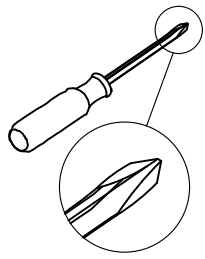


U	X2
	
ø3*12	




M	X1
	
145*55*45	



For this step, you need one helper to flip the cabinet .

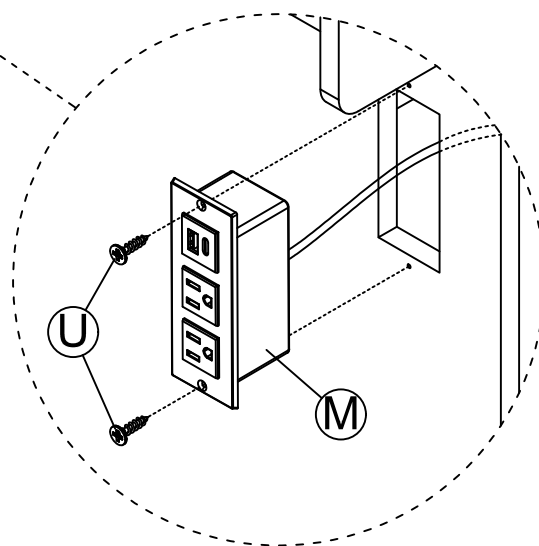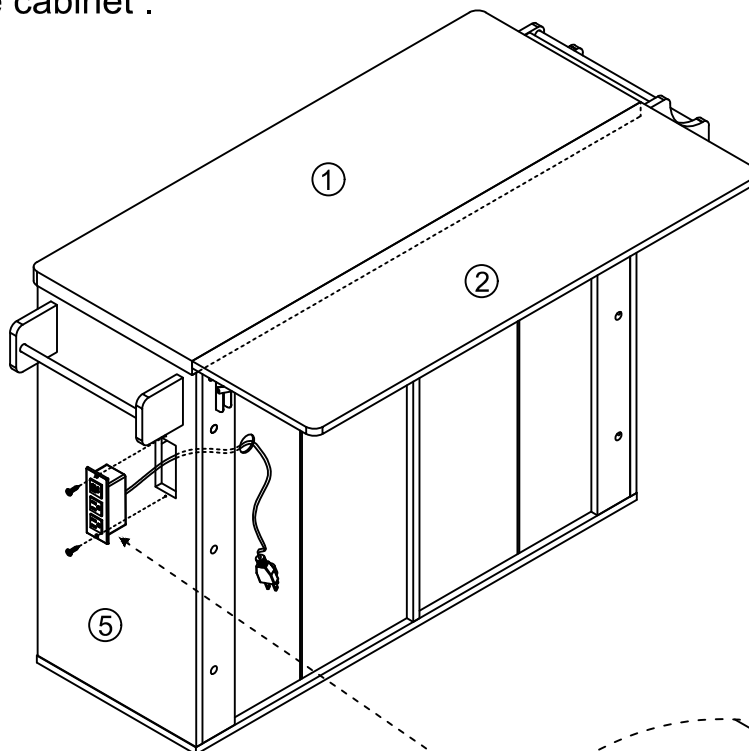


STEP 18

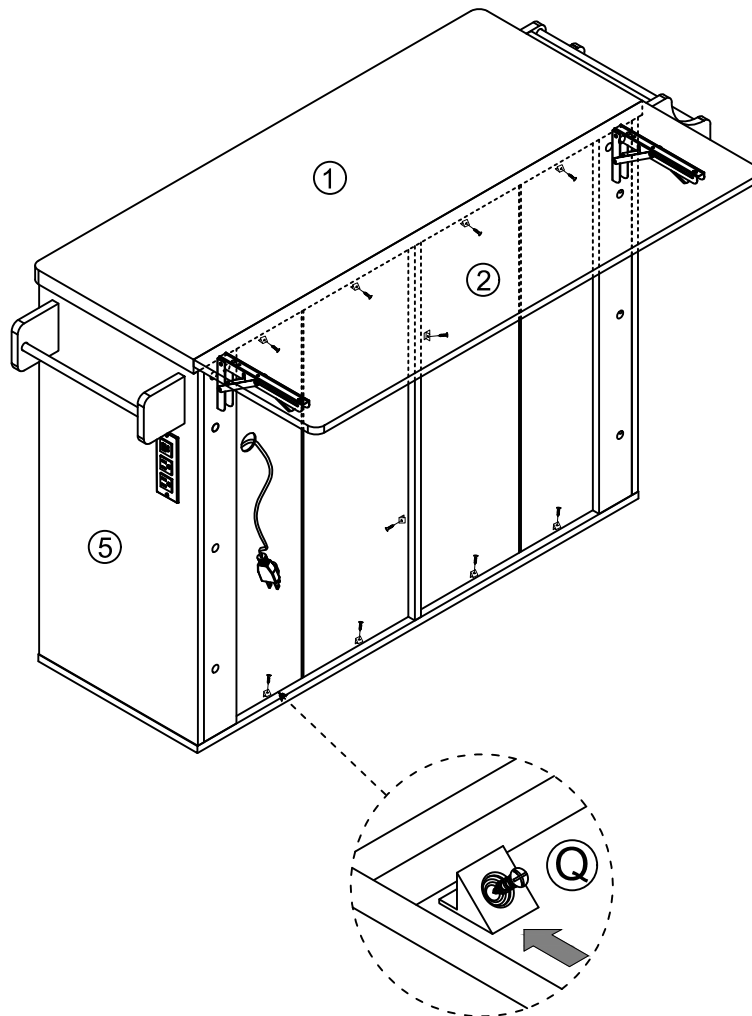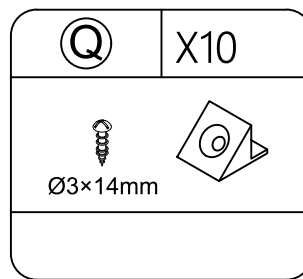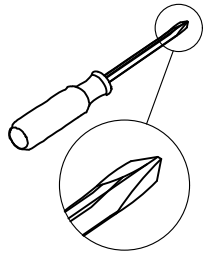


Insert the plastic buckle into the back plate slot , screw through the hole in the plastic buckle and lock it in place.

STEP 19

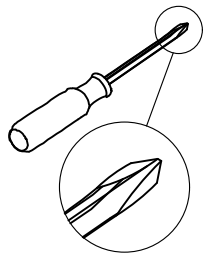


(K)	X8
ø5*16	

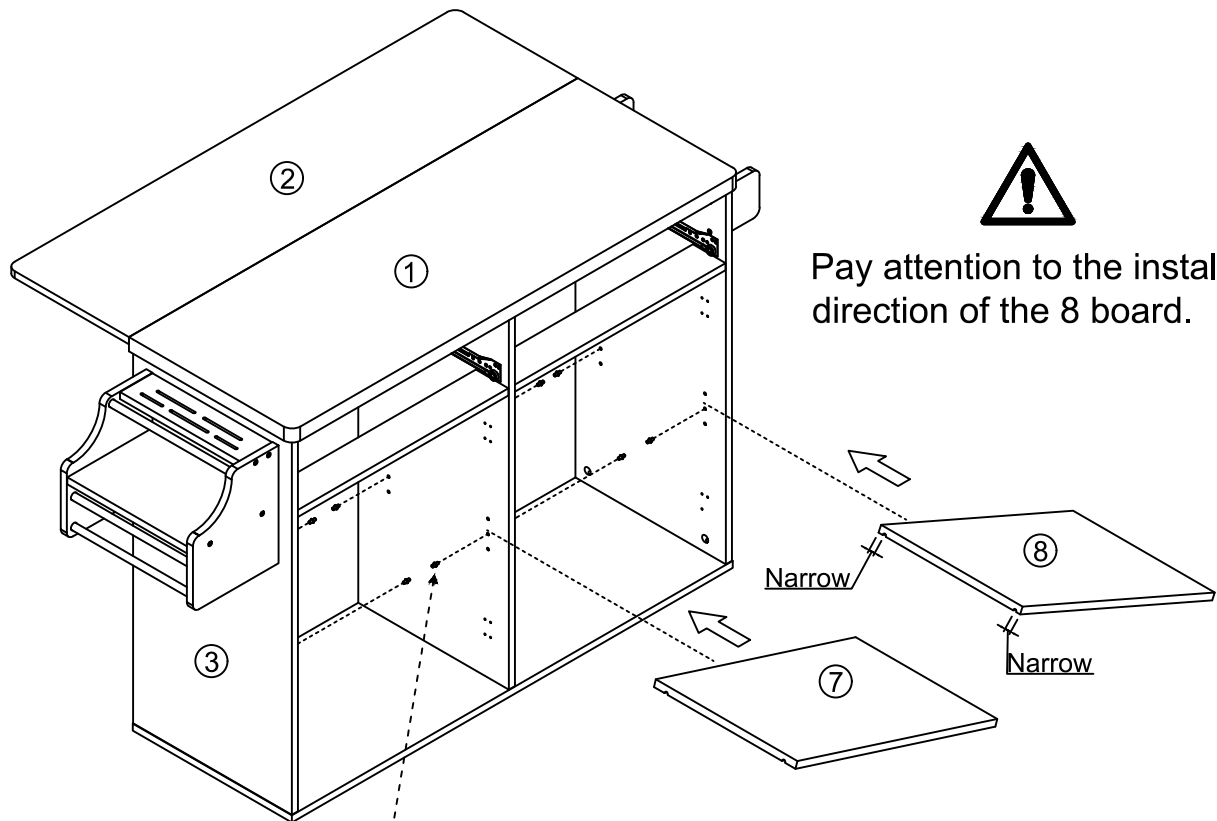


Pay attention to the installation direction of the 8 board.


Step 1
Select the desired height
and put it in

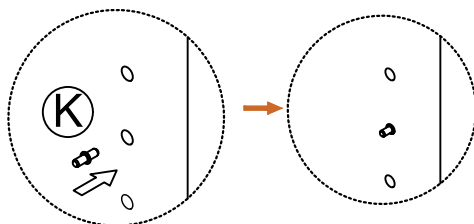



Step 2
Aim the board gaps down

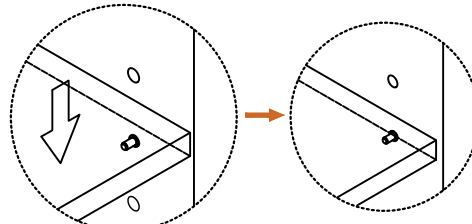


STEP 20

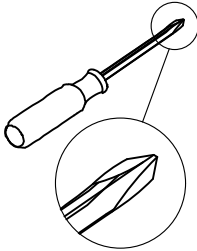


Ⓓ	X16	Ⓕ	X8	Ⓗ	X4	Ⓘ	X4
							
ø3.5*14		ø35		ø37(ø22)*28		M4*18	

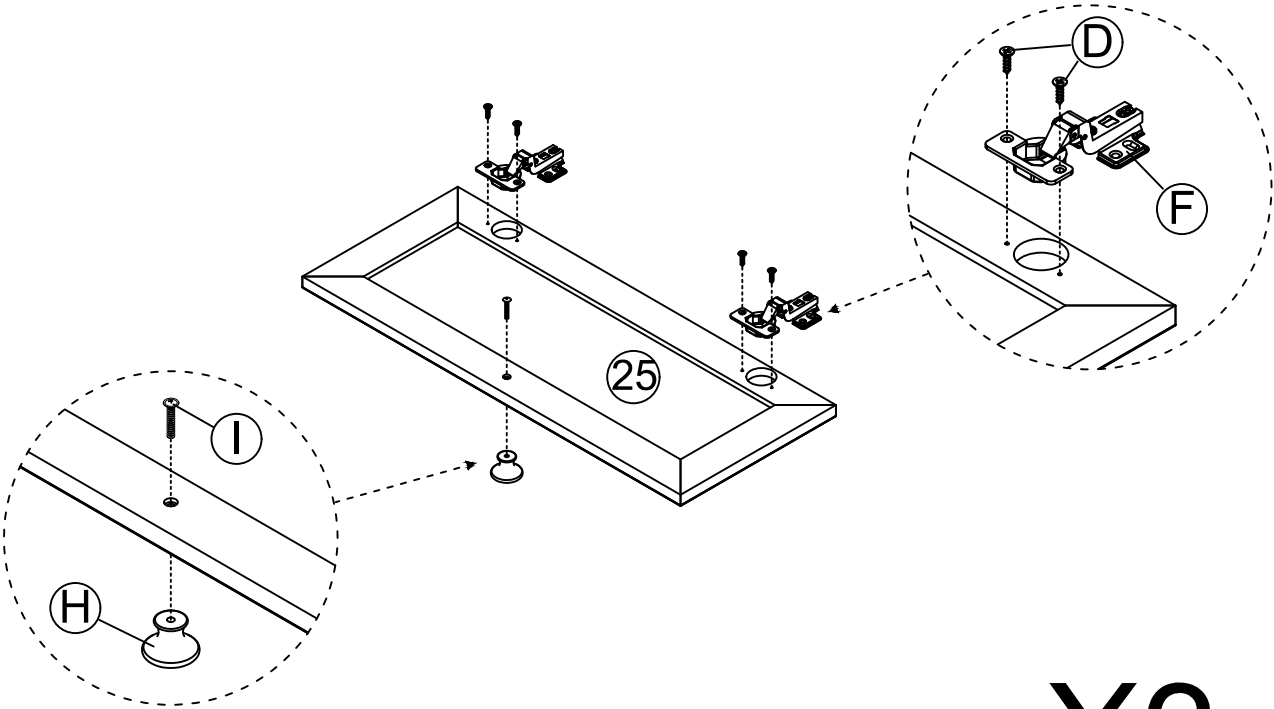



X3

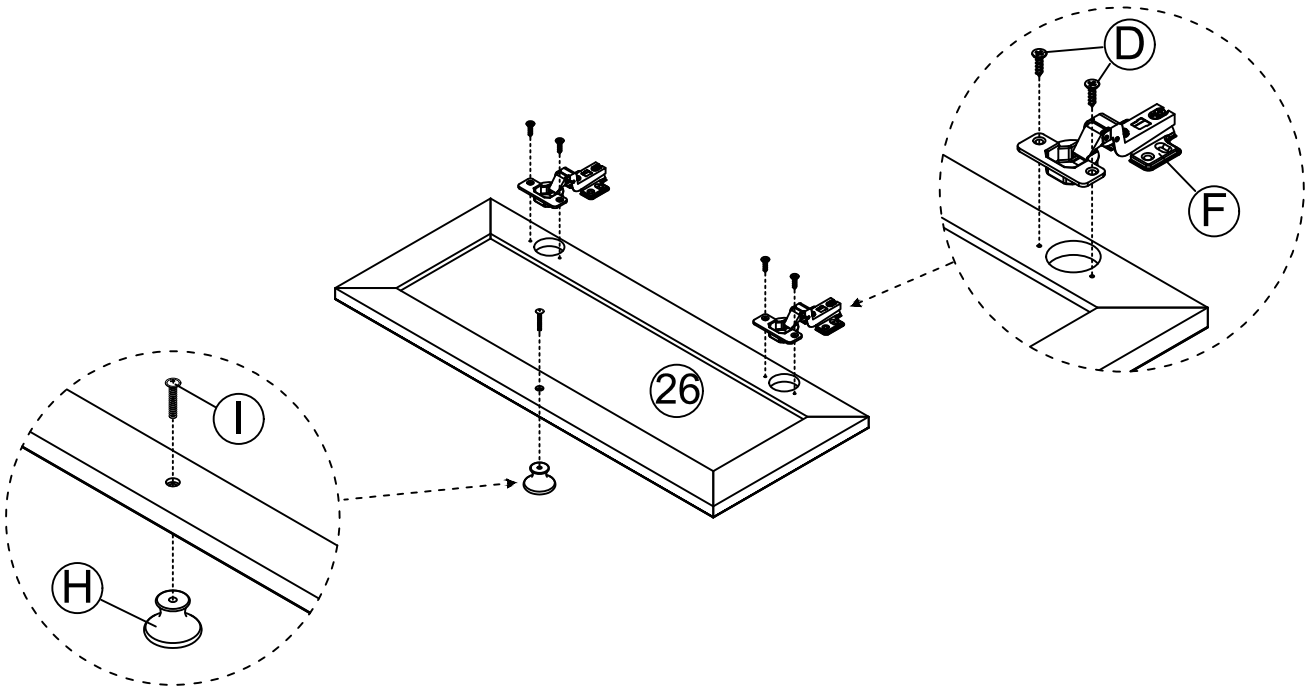


STEP 21

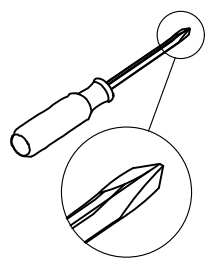



Ⓓ	X16
	
ø3.5*14	

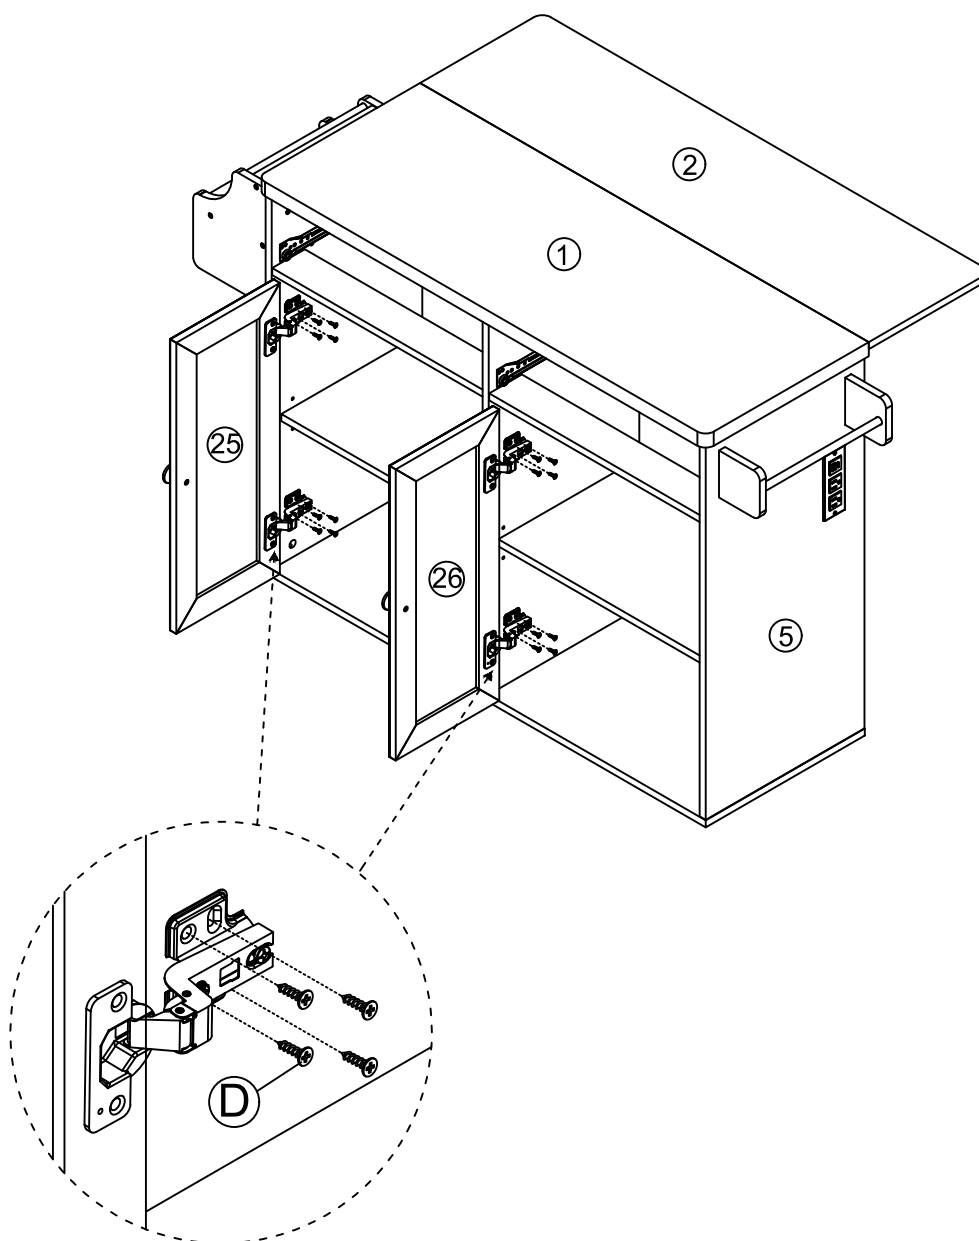



STEP 22

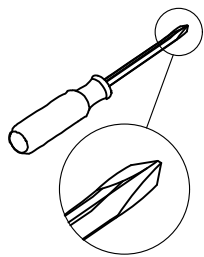

Ⓓ	X16
	
ø3.5*14	

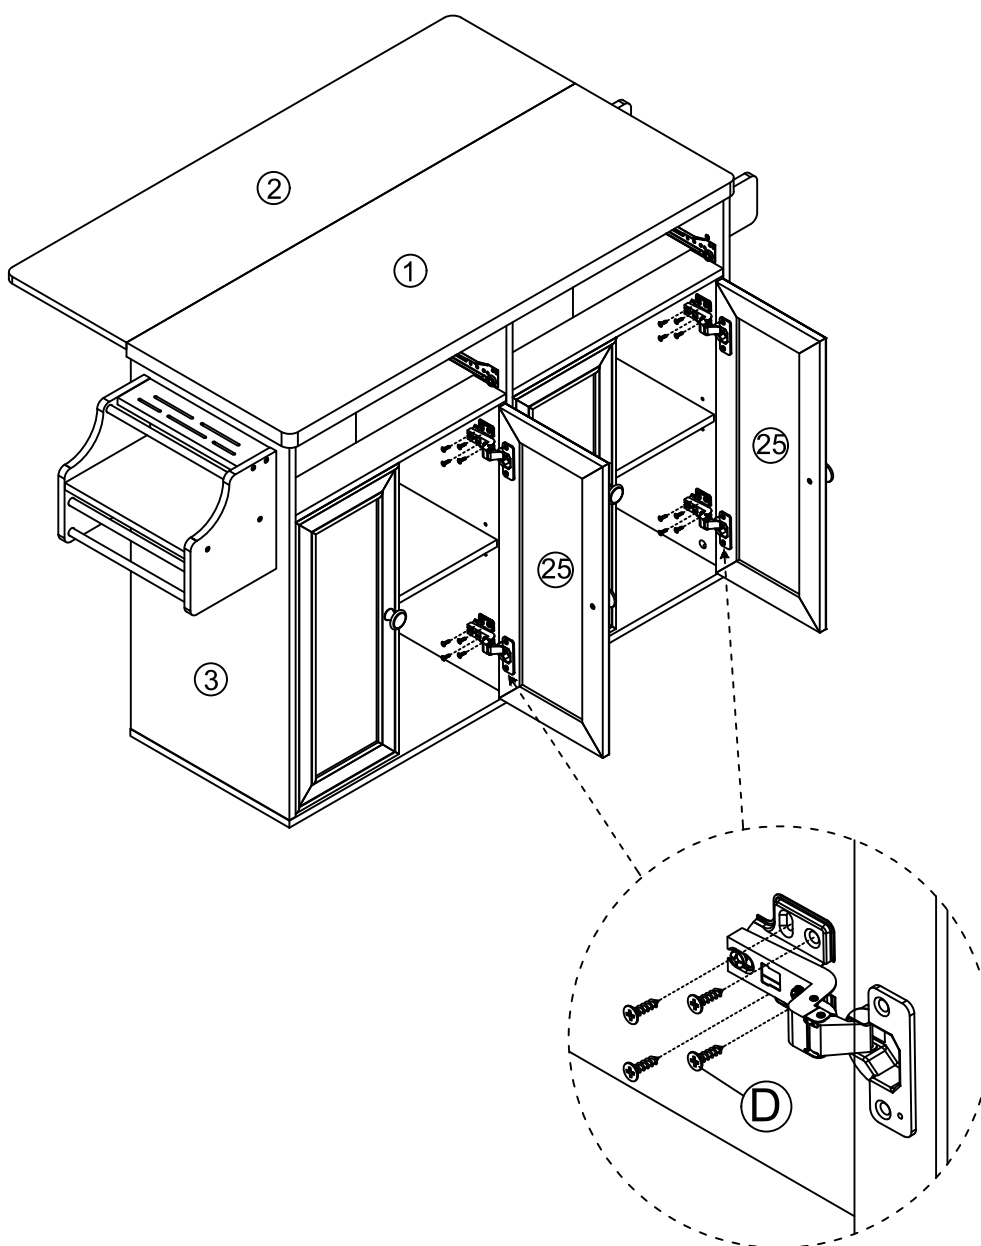


STEP 23

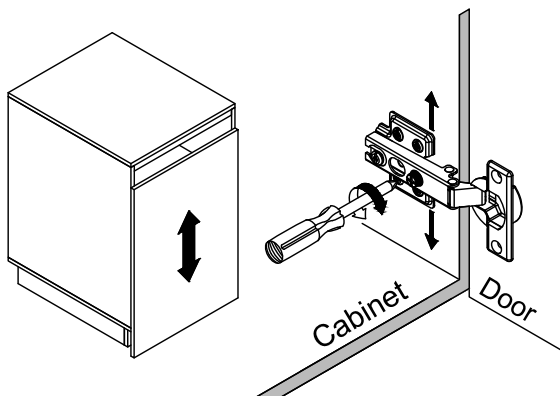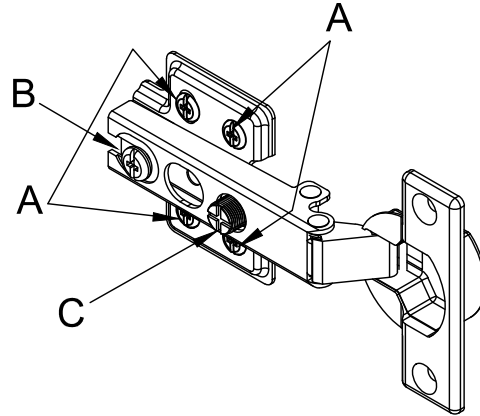


To adjust the vertical height.

Loosen the four screws "A" on both hinge.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

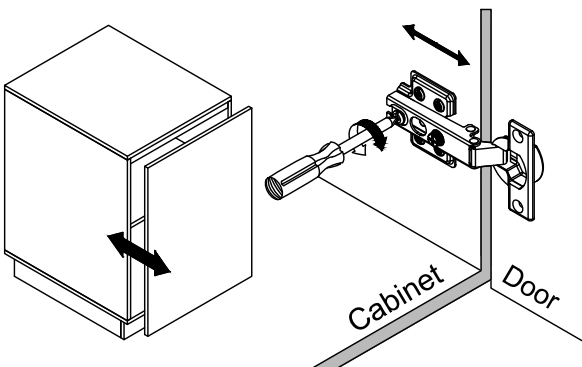

To adjust depth.









Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

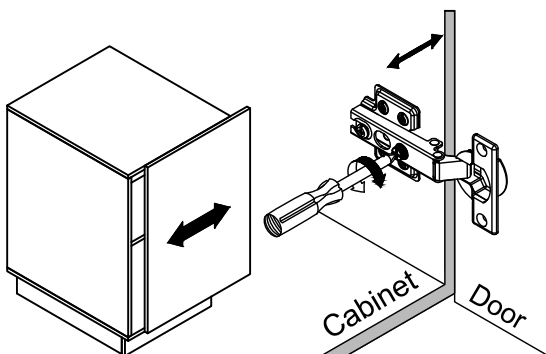

To adjust side ways.



Turning the screw "C" on BOTH hinges on each door.

STEP 24

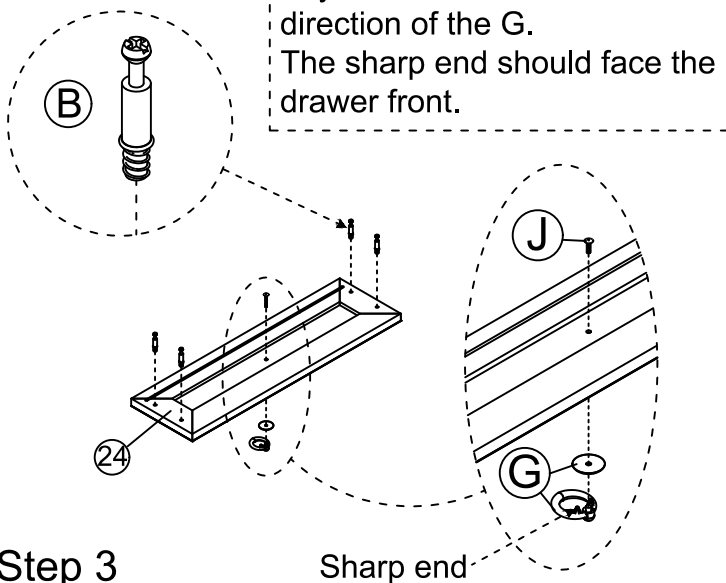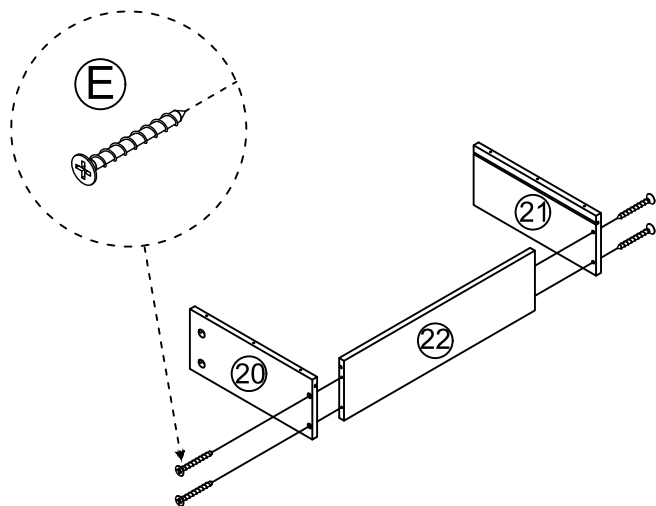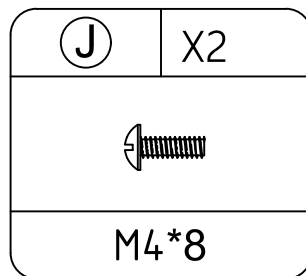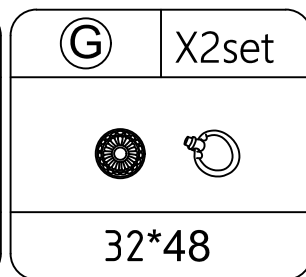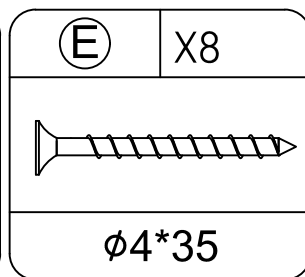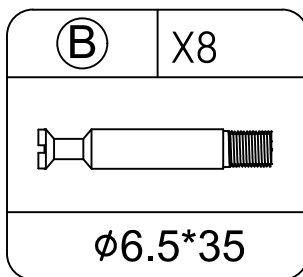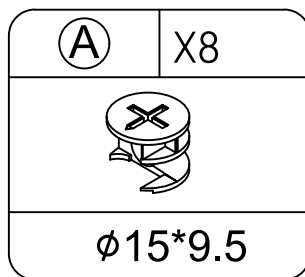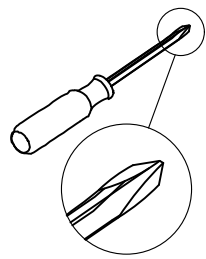


Step 1 Step 3


Step 2 Step 4

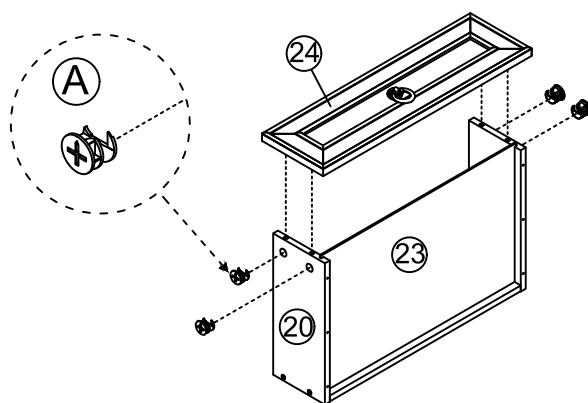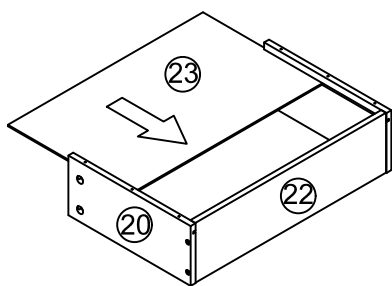

X2

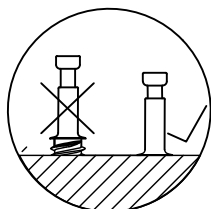



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

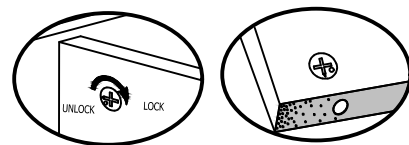



Proper orientation of CAM LOCK


STEP 25

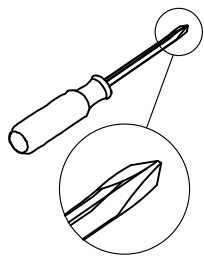

(D)	X12
	
ø3.5*14	


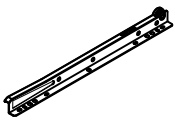
(L)	X2
	DL
L=300	

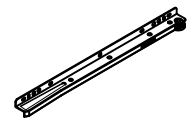(L)	X2
	DR
L=300	

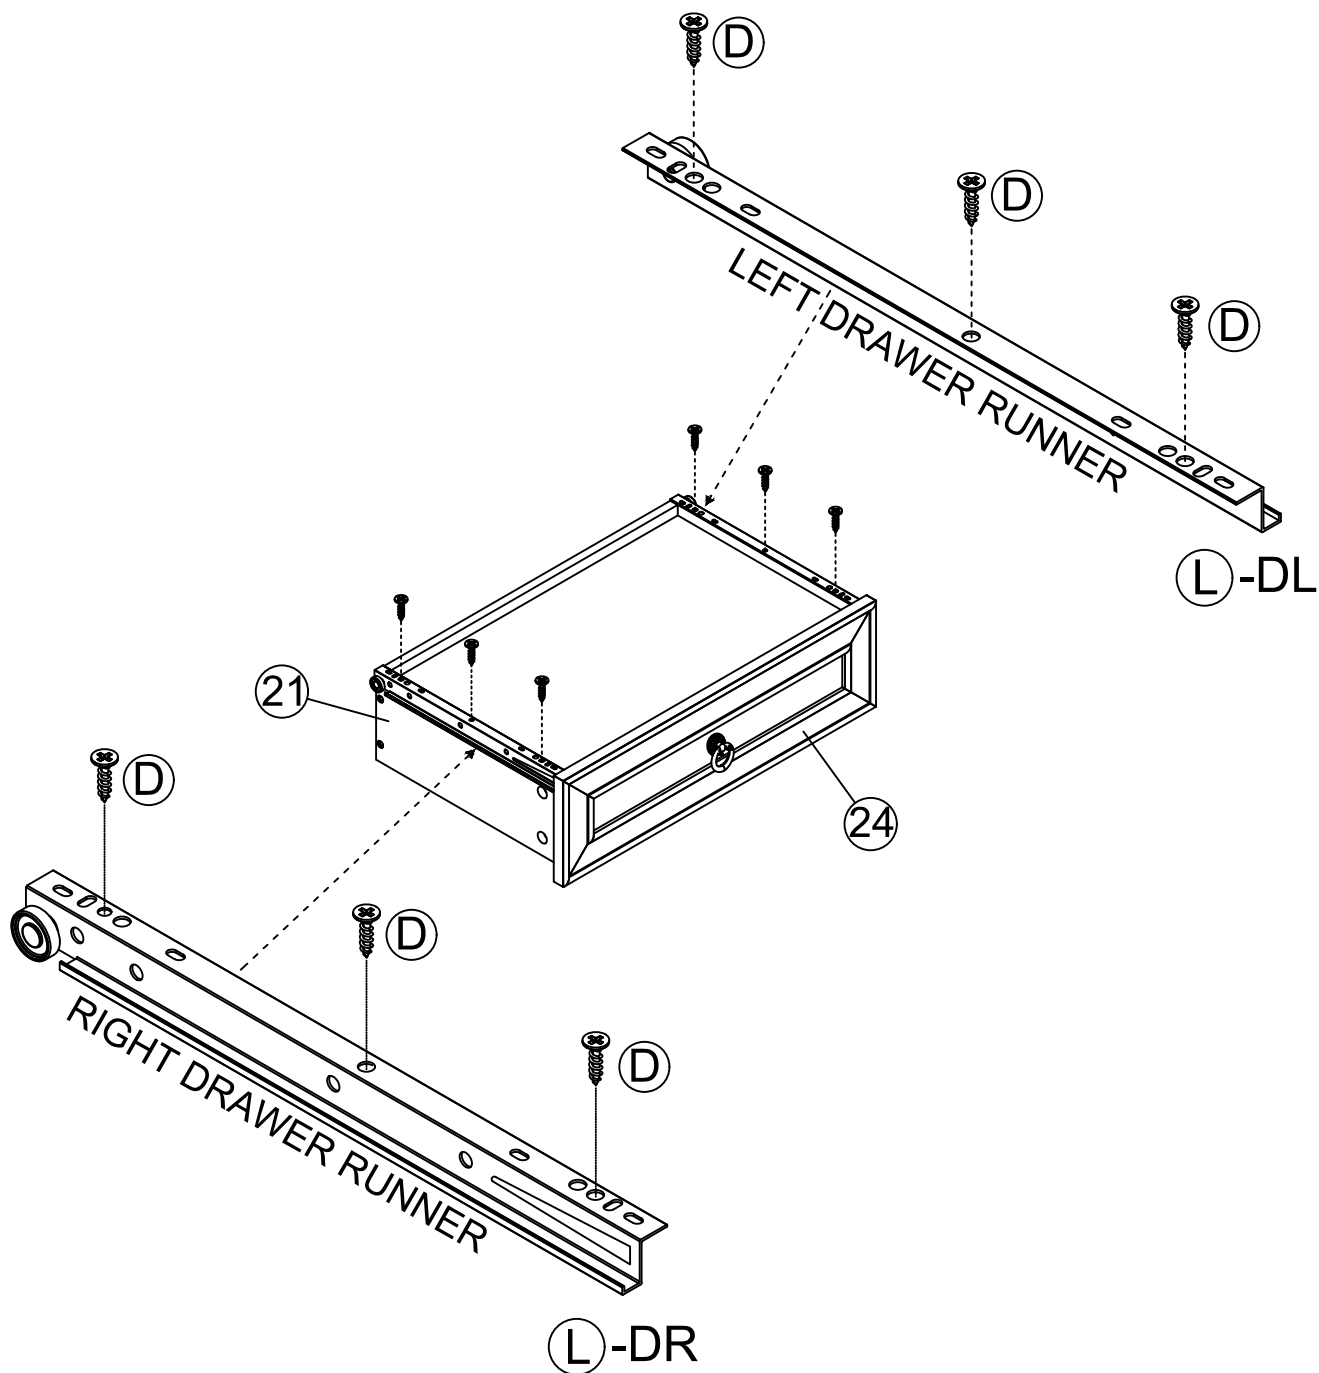


X2

STEP 26

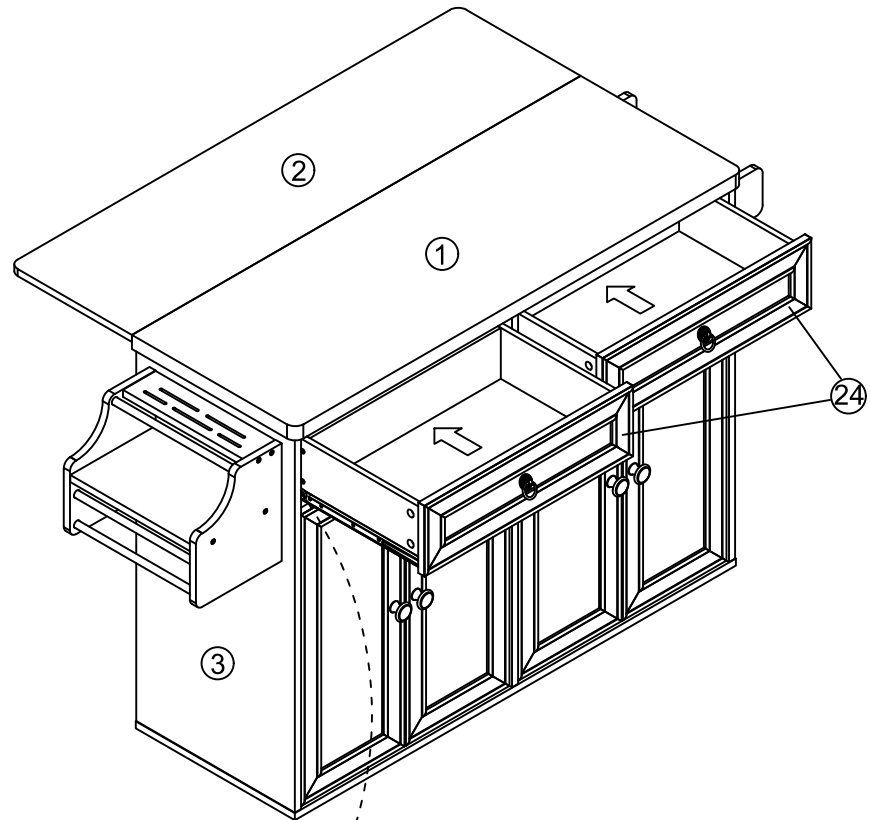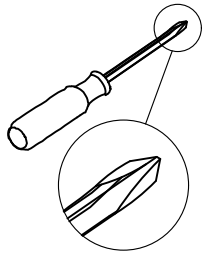

Cabinet Slide

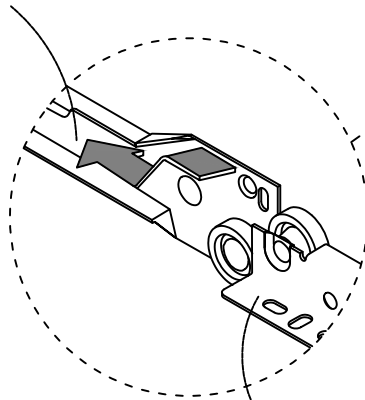

Drawer Slide