

# ASSEMBLY INSTRUCTIONS

ITEM NO : PC5596 COUNTER HEIGHT CHAIR

1/1

## HARDWARE LIST

| NO | PART                                                                                          | Q'TY |
|----|-----------------------------------------------------------------------------------------------|------|
| A  |  Ø5/16"x83mm | 4    |
| B  |  Ø5/16"x57mm | 4    |
| C  |  Ø5/16"x45mm | 2    |
| D  |  Ø5/16"x13mm | 10   |
| E  |  Ø5/16"x19mm | 10   |
| F  |  M4x38mm     | 6    |
| G  |  5mm         | 1    |


## PART LIST

| NO | PART                                                                                               | Q'TY |
|----|----------------------------------------------------------------------------------------------------|------|
| 1  |  Chair back      | 1    |
| 2  |  Seat cushion   | 1    |
| 3  |  Front leg      | 2    |
| 4  |  Front stretcher | 1    |
| 5  |  Right stretcher | 1    |
| 6  |  Left stretcher  | 1    |


TOOLS REQUIRED ( NOT PROVIDED)

 Phillips Screw Driver


STEP 1

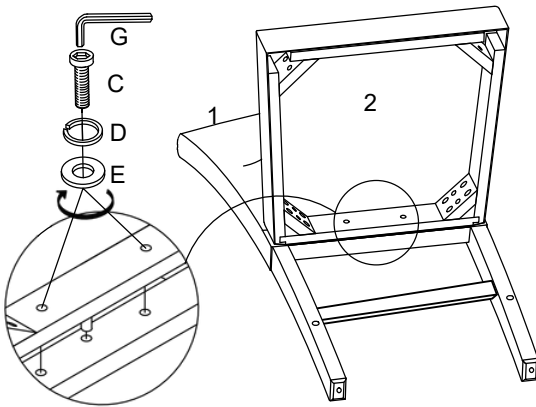


STEP 2

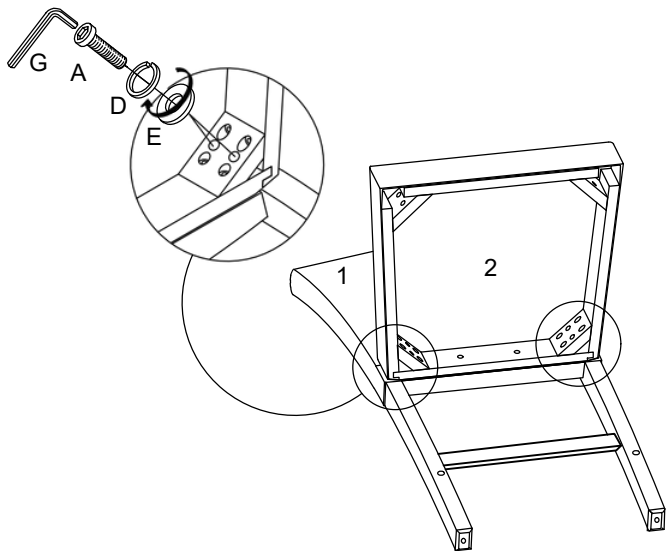

STEP 3

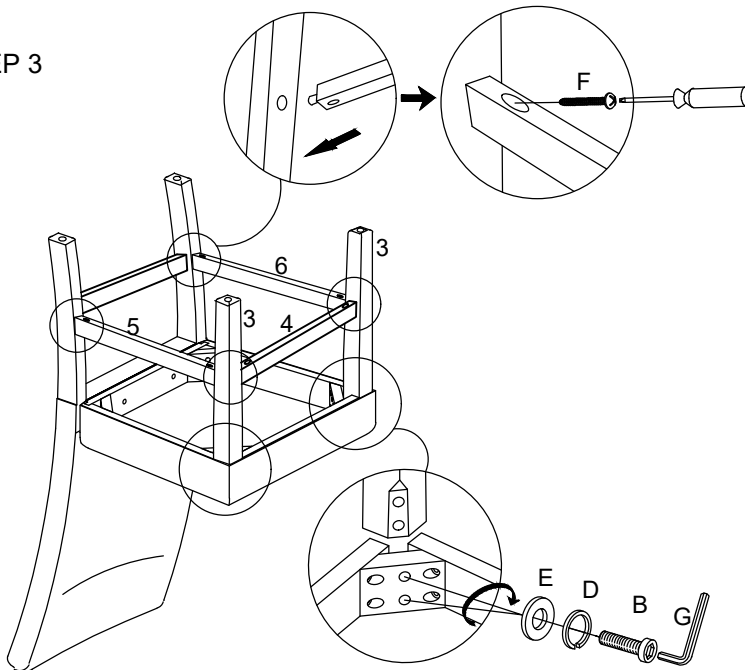

Completed

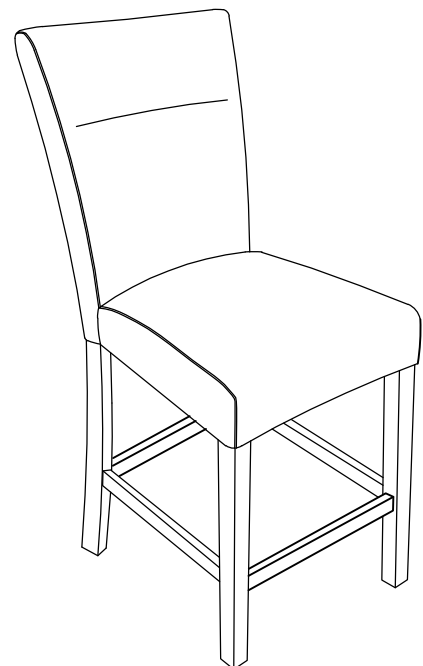

Do not tighten screws until completely assembled.