
ASSEMBLY INSTRUCTIONS

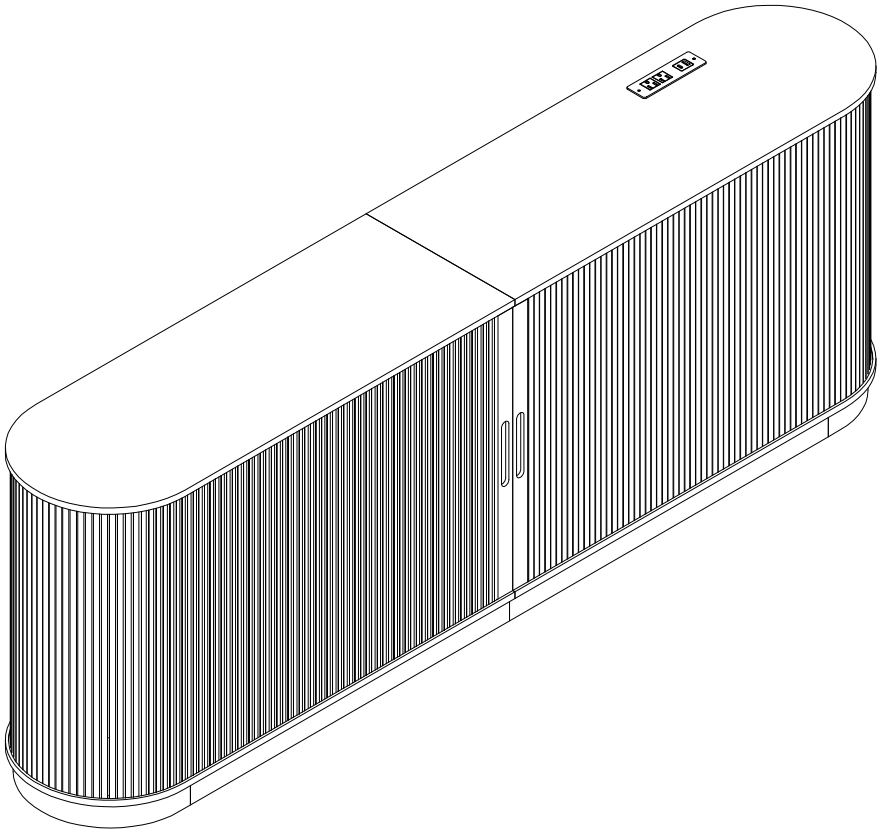

⚠SAFET YTIPS:

Static charge may cause dust on foam-clean with a dry or damp cloth. Small foam strands may be present-handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guideline.

Have an assembly question or need a replacement part?
Please contact with our customer service.

Warnings

Important reminder:

⚠ Please sort and check all accessories before assembly.

⚠ Place the product on an empty cardboard box or on carpet to prevent scratches.

⚠ Please use proper tools for assembly.Using an electric screwdriver can accelerate the assemoly speed, but please do not overtighten the screws.


⚠ Please follow the assembly steps and do not skip any of them.

⚠ lf possible, please find a partner to help you with assembly, which can accelerate assembly.

⚠ Keep all small parts of this product away from children. They may cause serious injury.

⚠ We hope you can retighten the screws 2 weeks after assembly, and check the tightening procedure of the screws every 3 months.

If you meet any difficulty, our friendly customer team are always ready to help you.

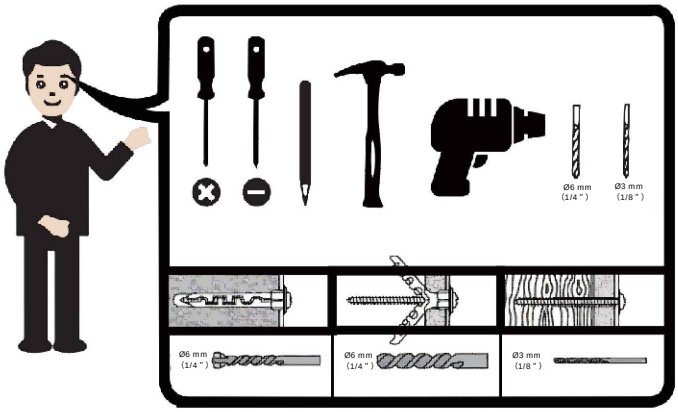

























Warning: 0verturning the product can cause serious crushing injuries. We have a wall connection device attached, please use it to hold the furniture following assembly instructions

Do not change the structure of this product inway. Our products have been testedand meetanyal 1sales specific security measures. We won'tbe responsible for any modifications,whichmay cause significant security risks




Explosion Diagram

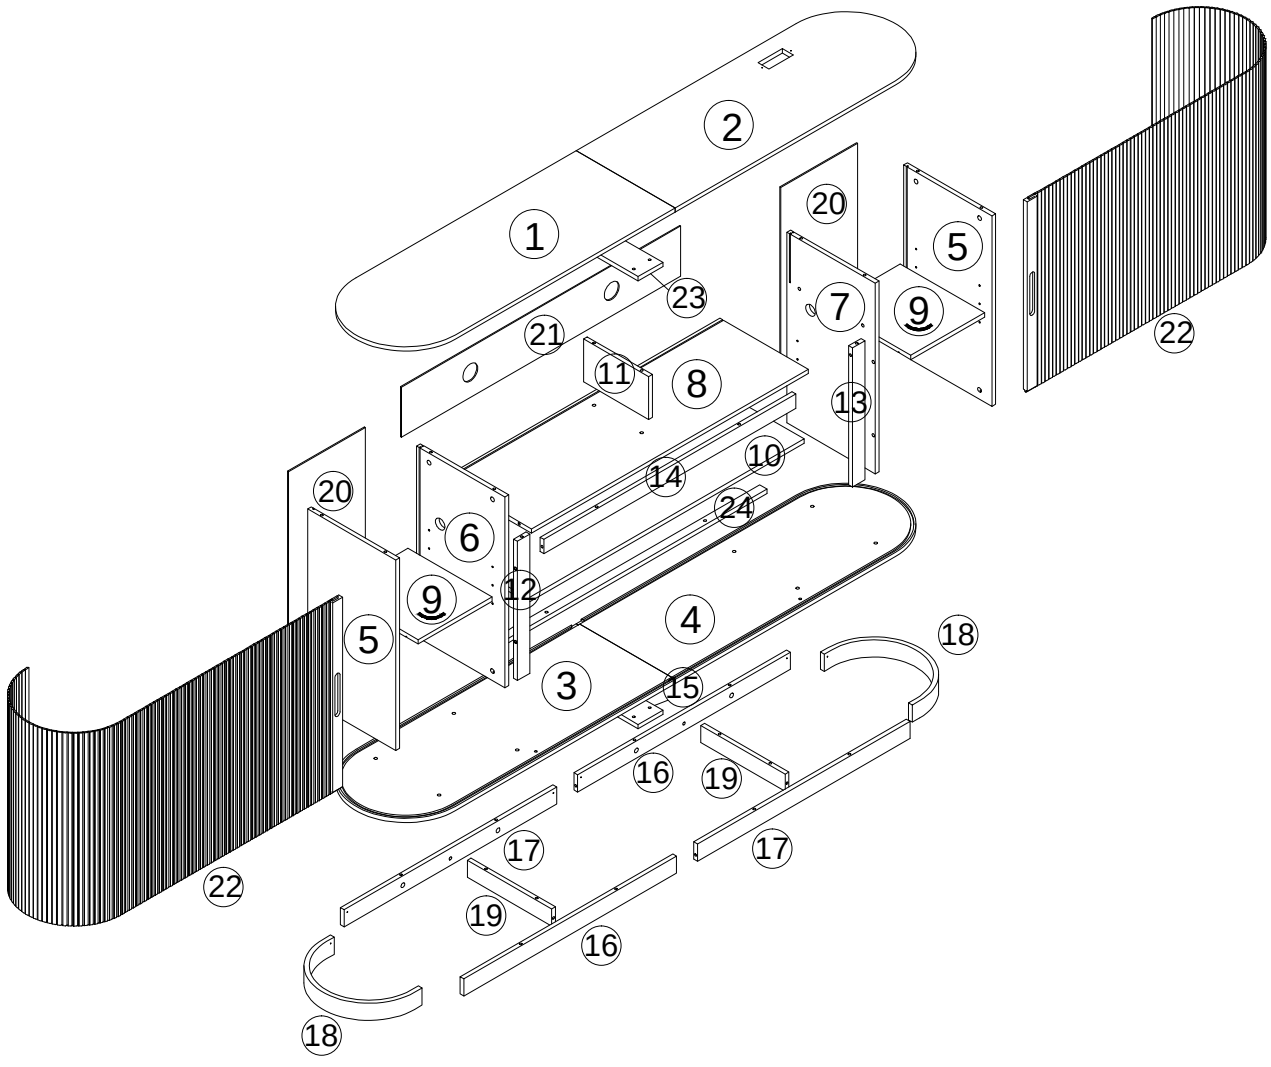


Parts List

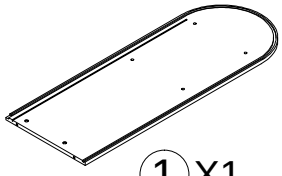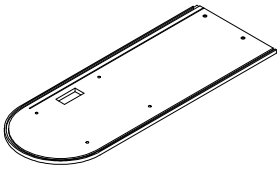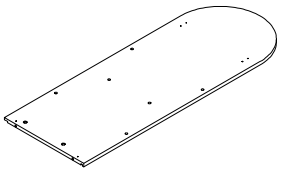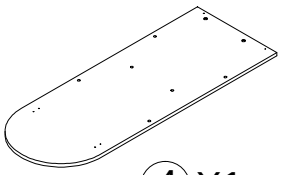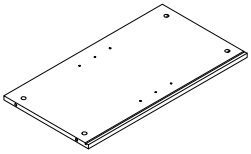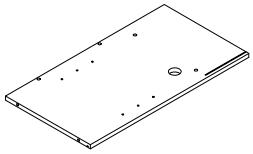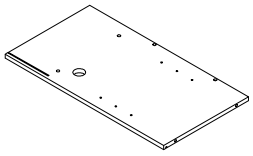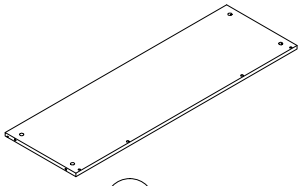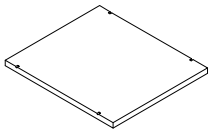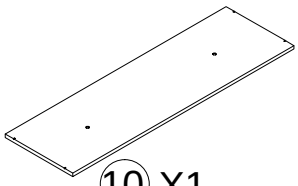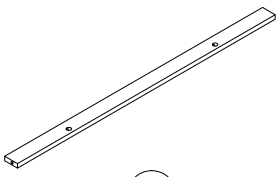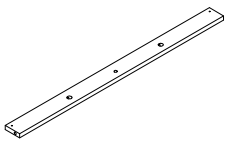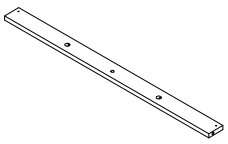 1 X1	 2 X1	 3 X1
 4 X1	 5 X2	 6 X1
 7 X1	 8 X1	 9 X2
 10 X1	 11 X1	 12 X1
 13 X1	 14 X1	 15 X1
 16 X2	 17 X2	 18 X2
 19 X2	 20 X2	 21 X1

Parts List

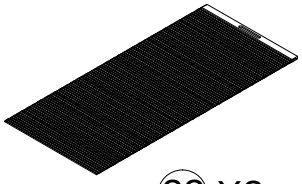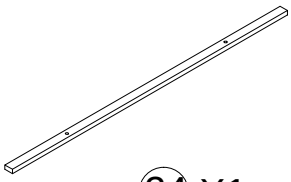 22 X2	 23 X1	 24 X1


Hardware List


No.	Code	Diagram	Description	Quantity	Spare
1	**A**		Ø8 x 30 mm	12	1
2	**B**		Ø15 x 12 mm	46	2
3	**C**		Ø6 x 40 mm	46	2
4	**D**			1	
5	**E**	 BLACK	K3.5 x 14 mm	46	2
6	**F**			6	
7	**G**		Ø21 mm	30	2
8	**H**		M6 x 25 mm	10	1
9	**J**		M4	1	
10	**K**			20	1
11	**L**		Ø5 x 16 mm	12	1
12	**M**			2	1
13	**N**		M6 x 28 mm	2	1
14	**P**		K4 x 30 mm	2	1
15	**Q**		K3.5 x 13 mm	2	1

THE SPARE BAG INCLUED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

Assemble


Step 1

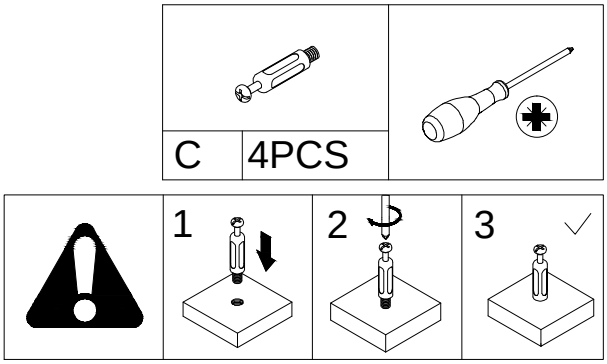


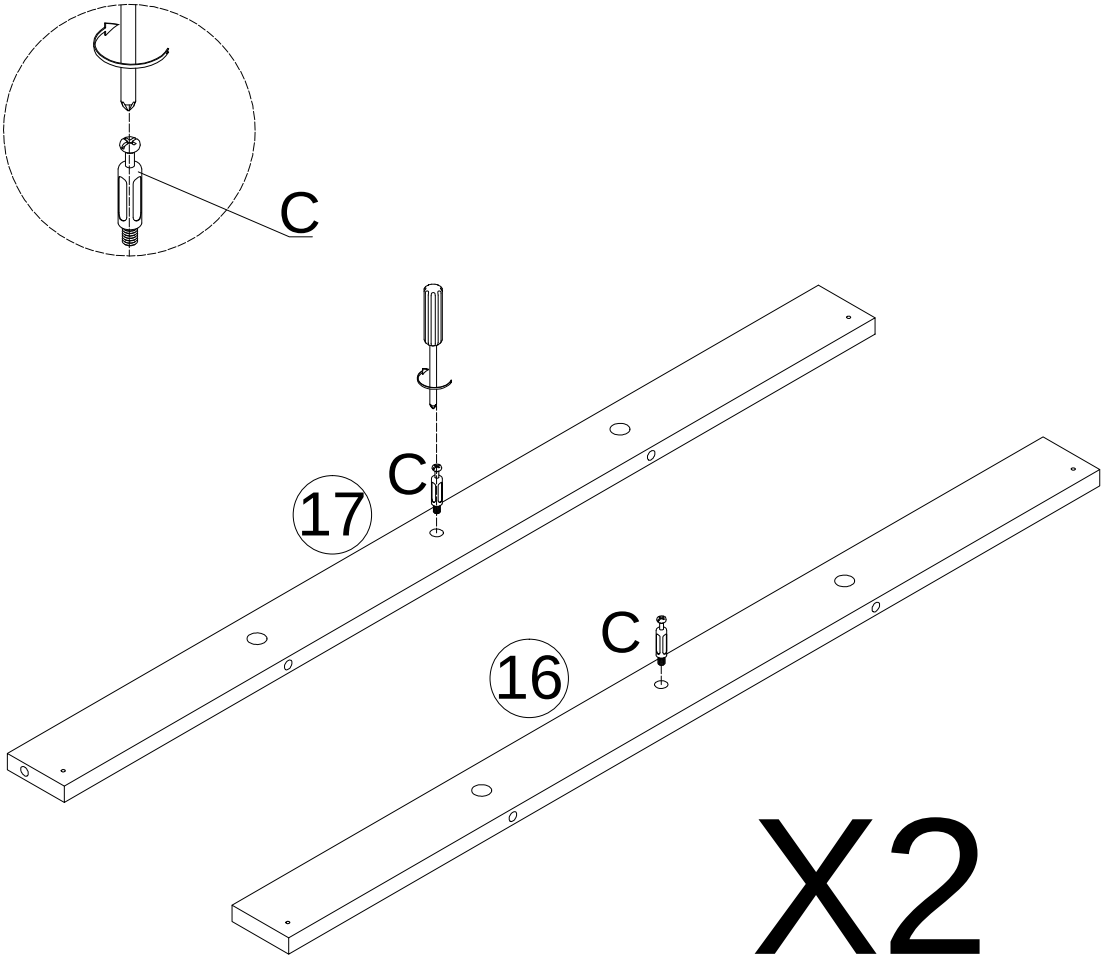

Assemble

Step 2


		
B	4PCS	

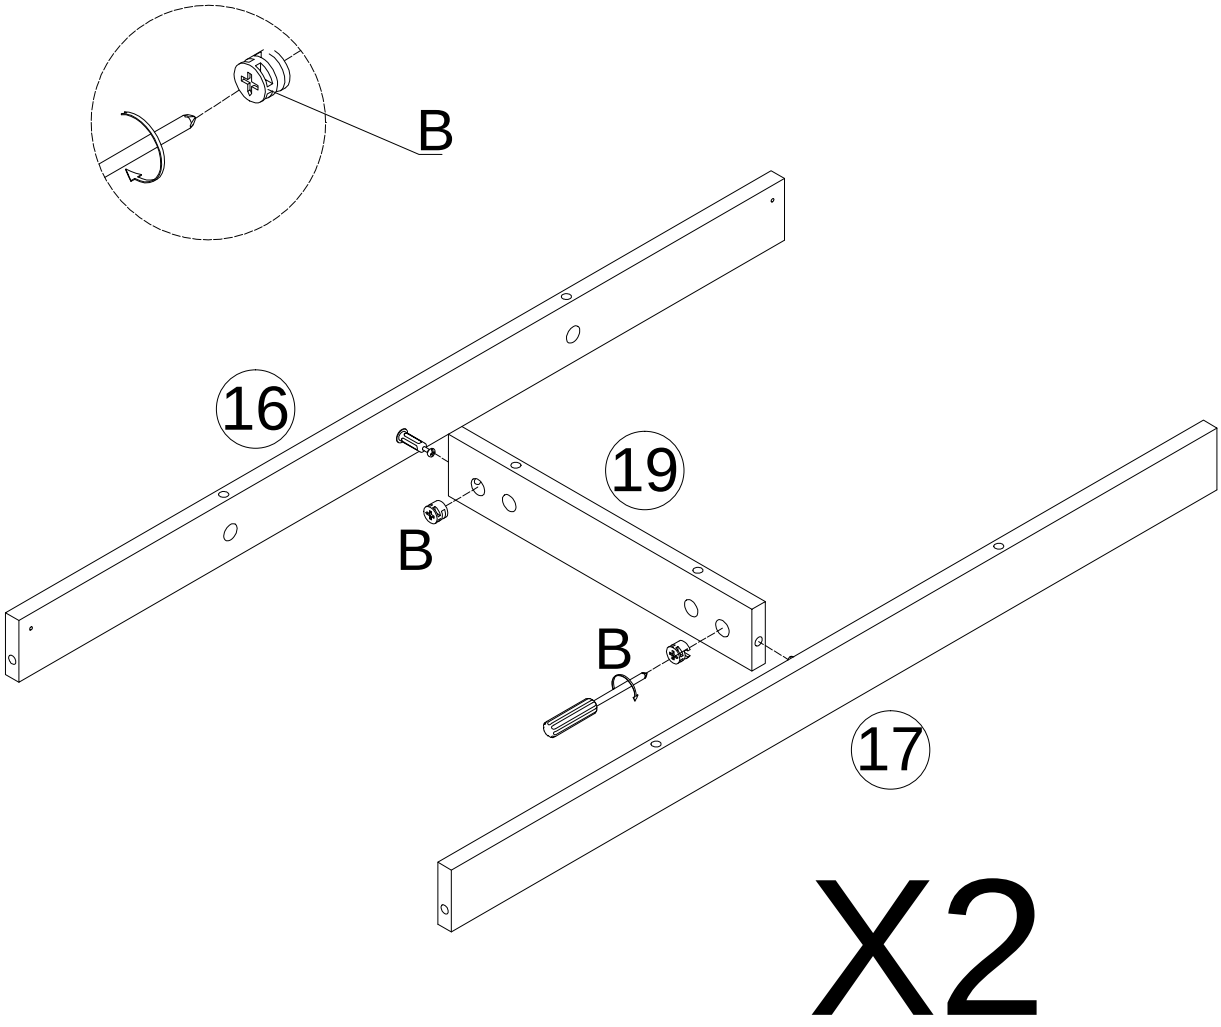



X2


Assemble

Step 3

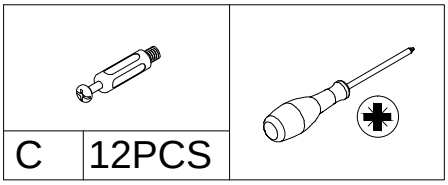

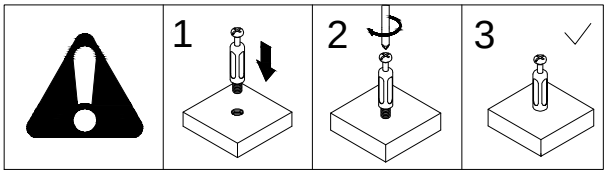


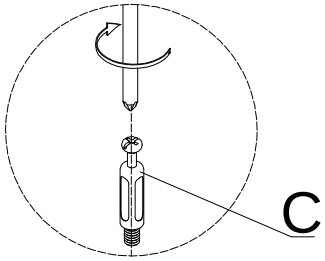


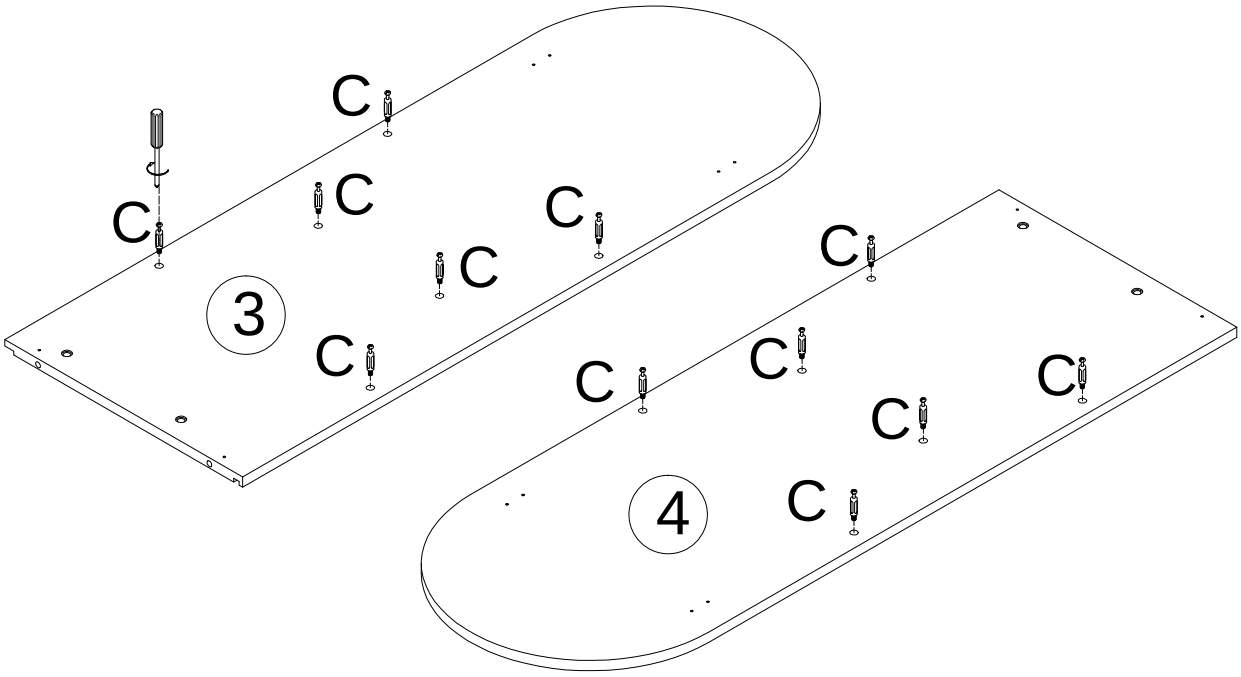

Assemble


Step 4


						
B	12PCS	E	16PCS	F	4PCS	

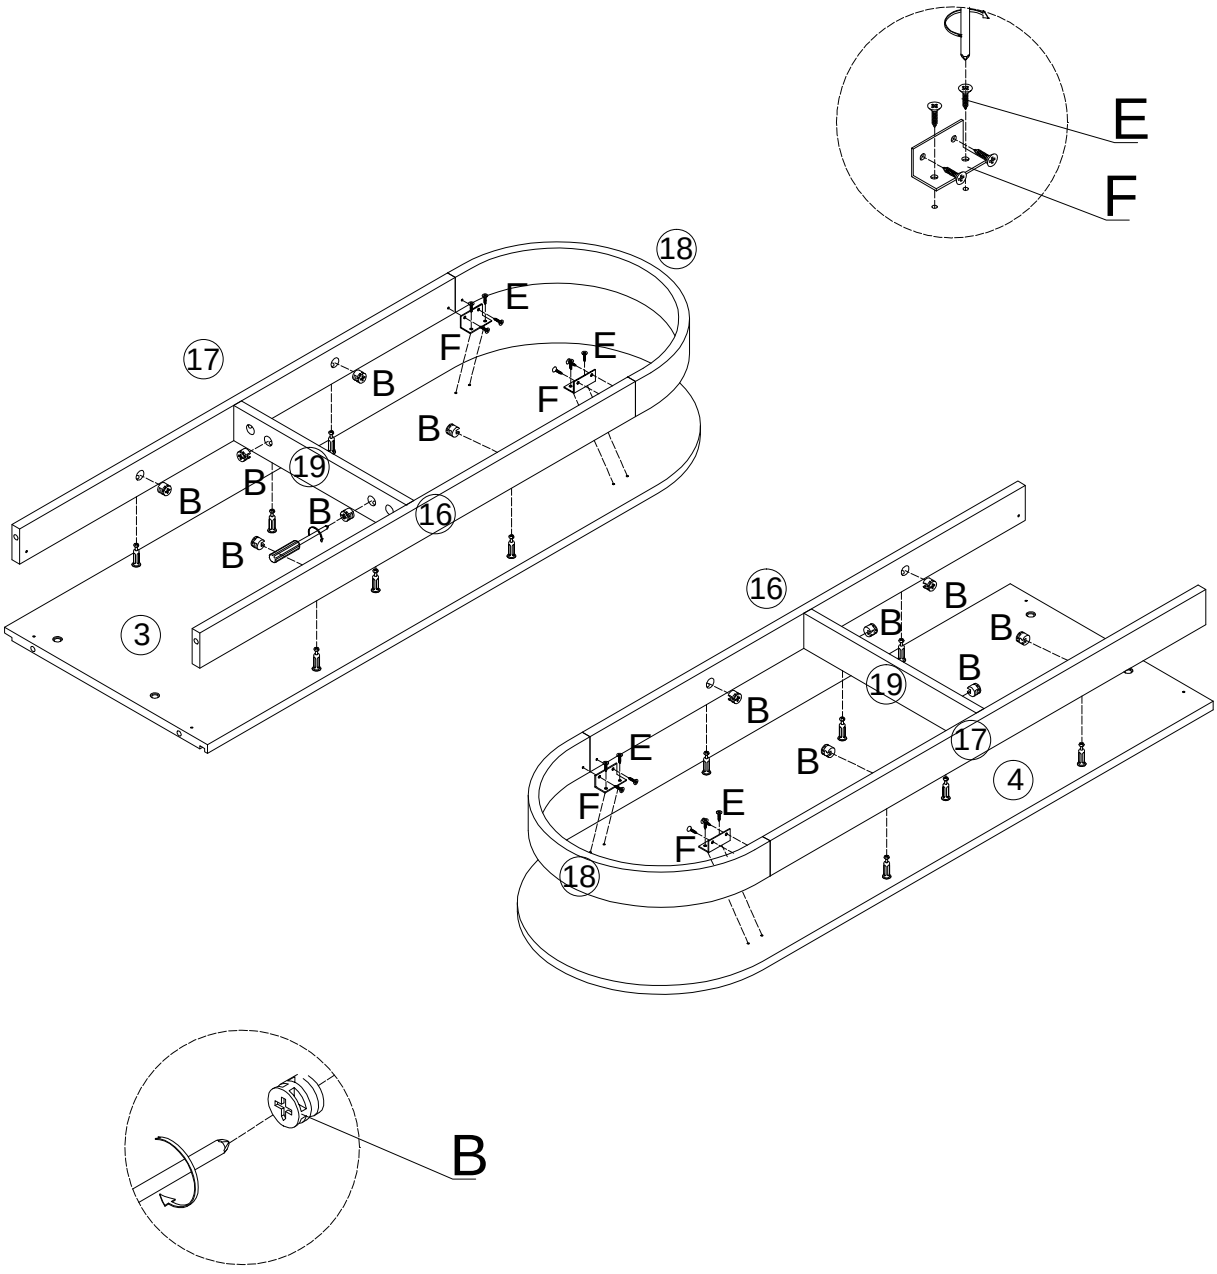

Assemble

Step 5


						
A	4PCS	E	8PCS	F	2PCS	

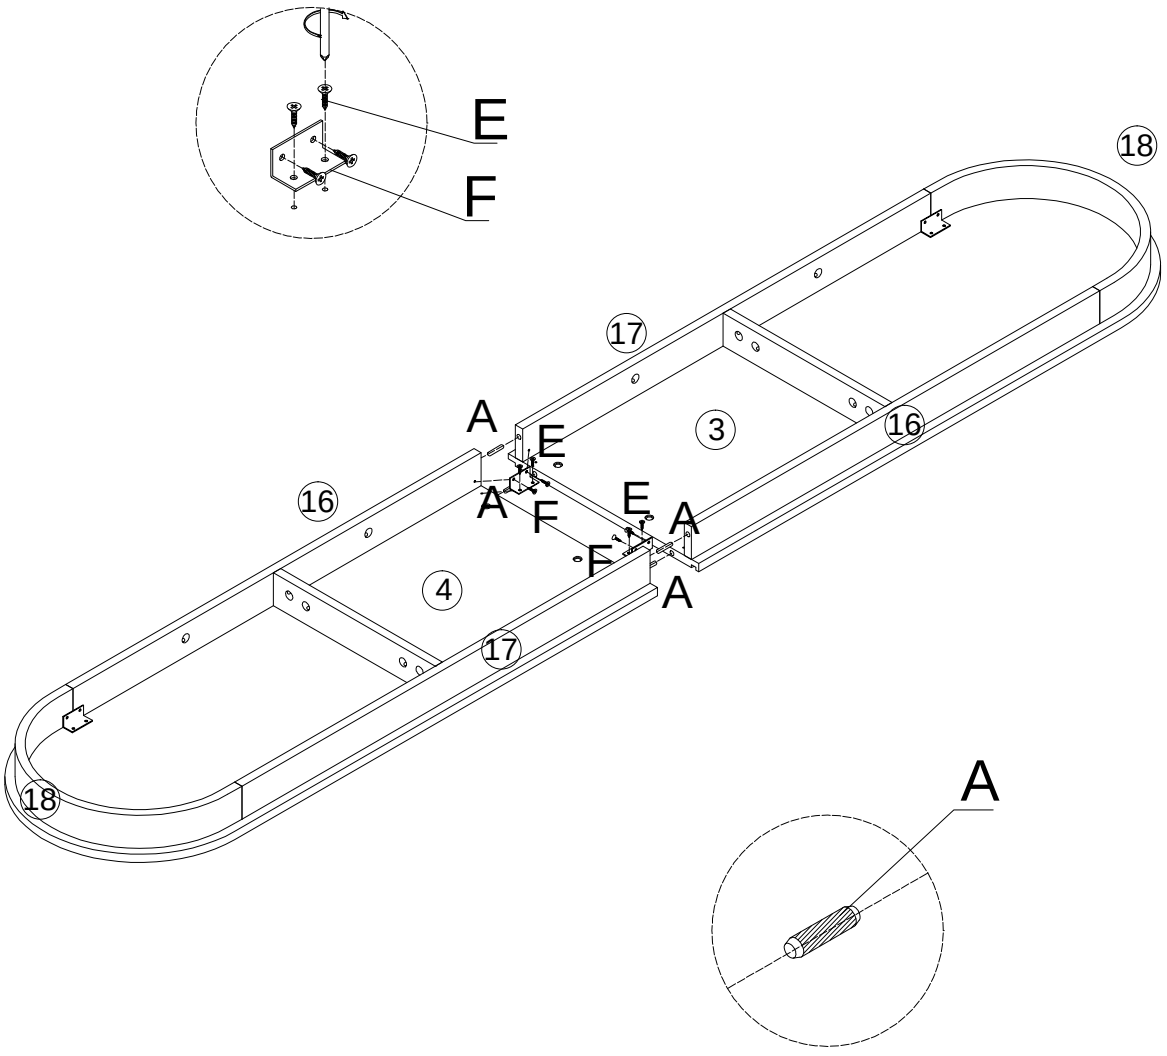

Assemble


Step 6


		
H	4PCS	J

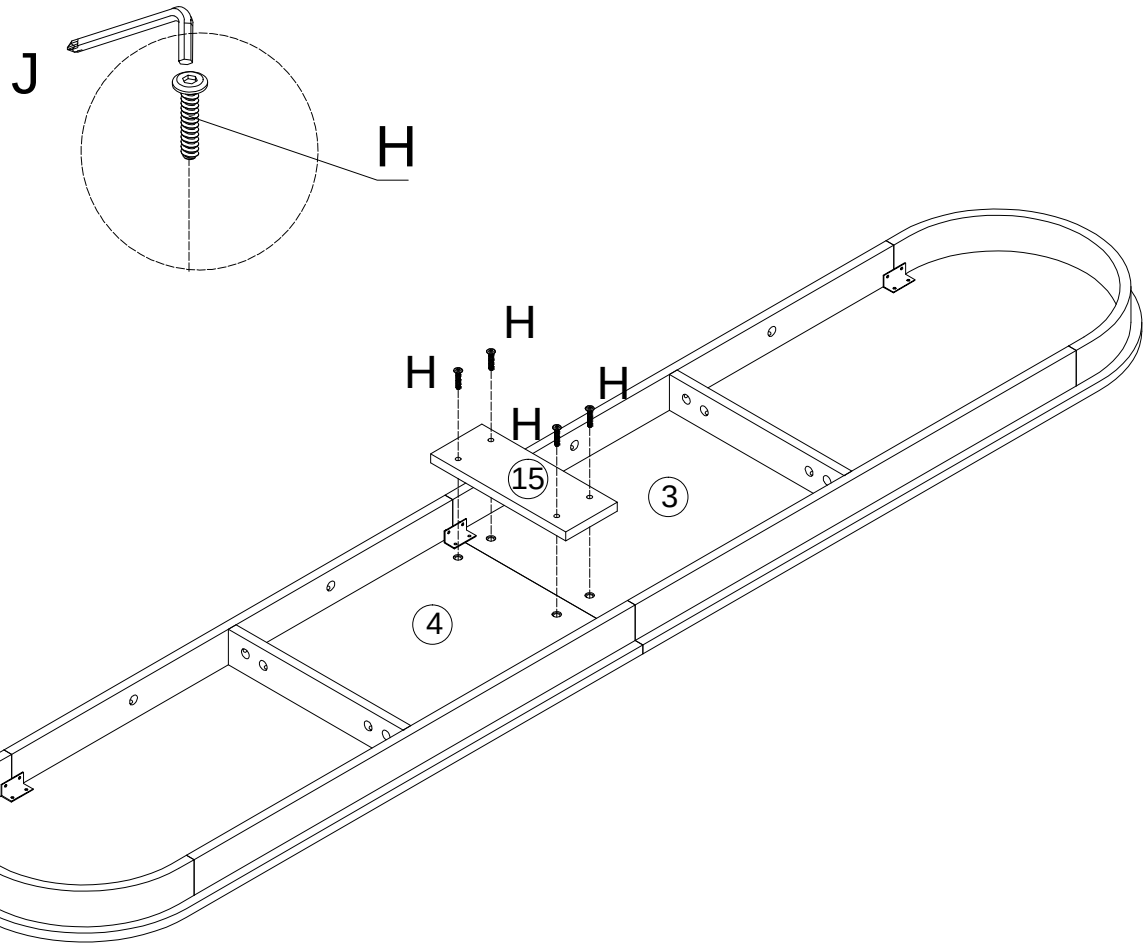

Assemble

Step 7

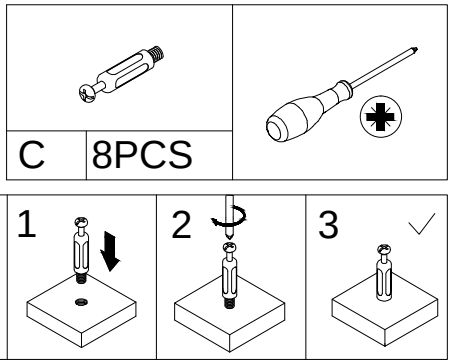

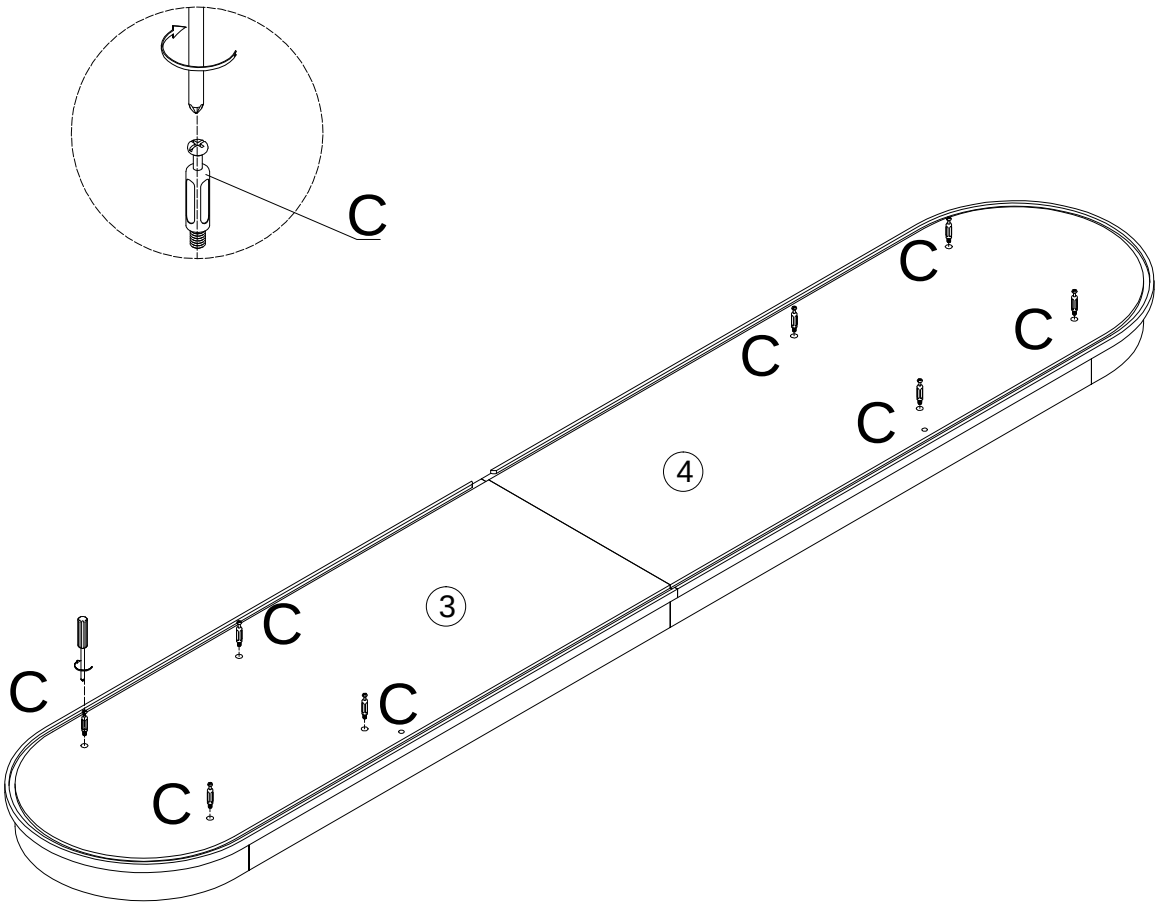



Flip step 6,and then install C

Assemble


Step 8


A	4PCS	B	2PCS	C	2PCS	

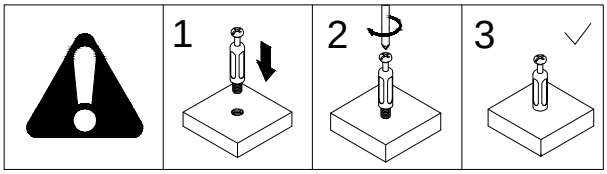


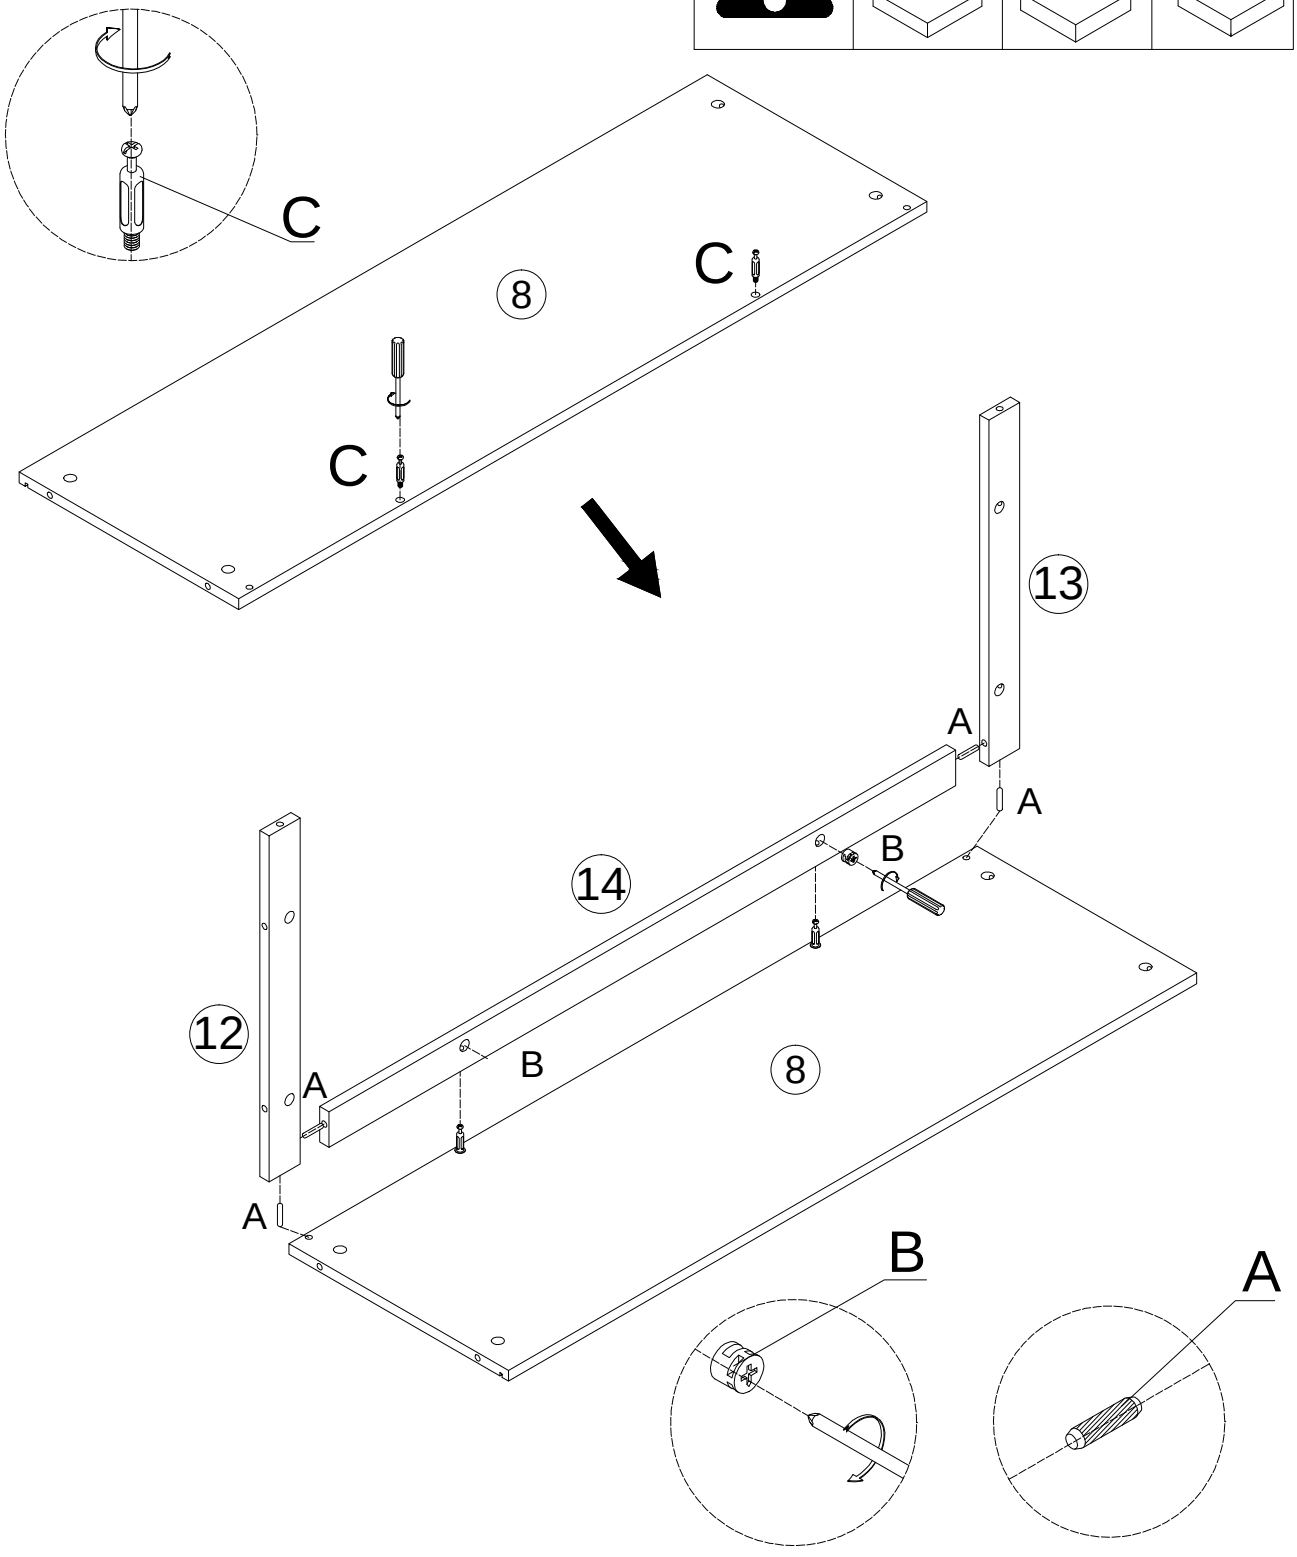

Step 9

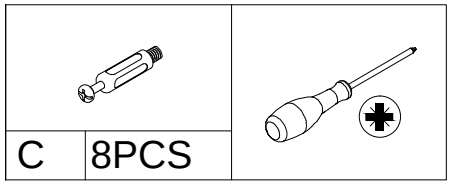


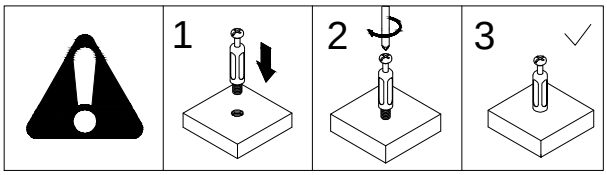


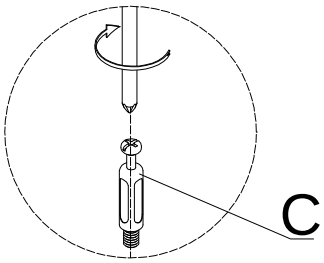

Assemble

Step 10


		
B	8PCS	

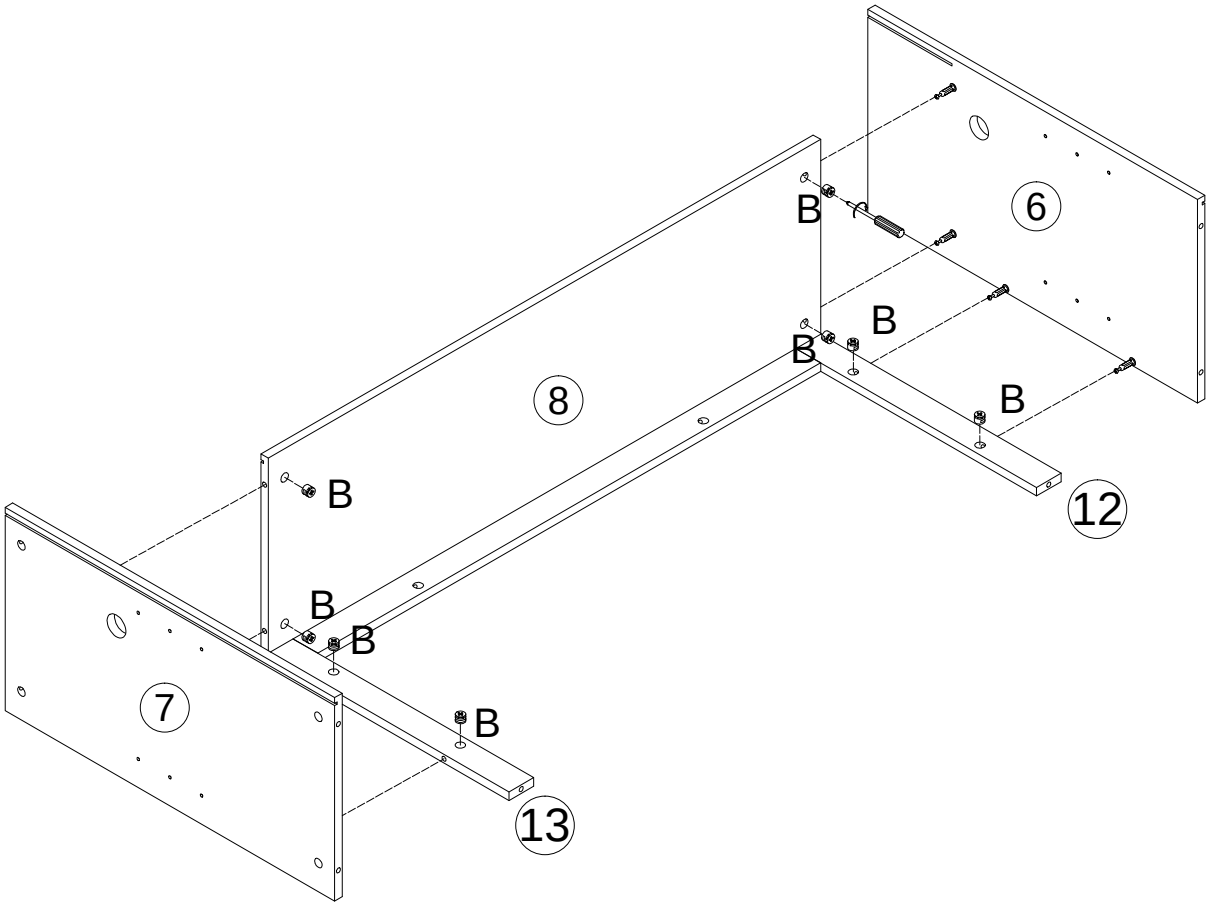



Assemble

Step 11

A	2PCS	B	8PCS	

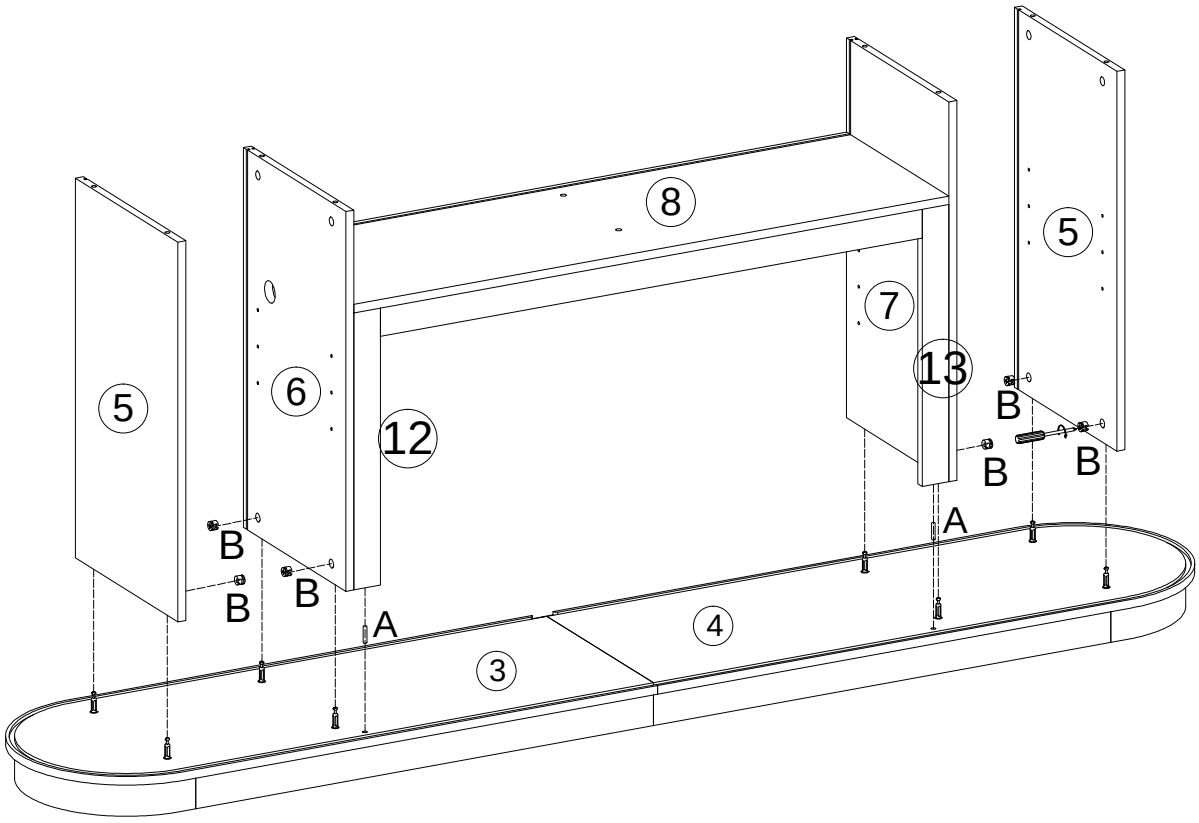


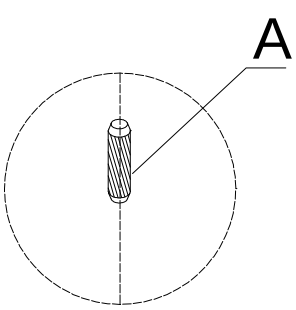

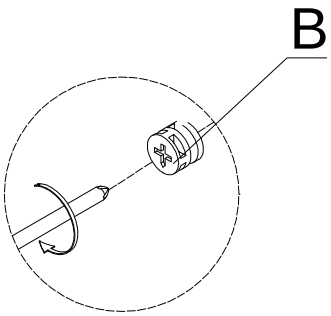

Assemble


Step 12

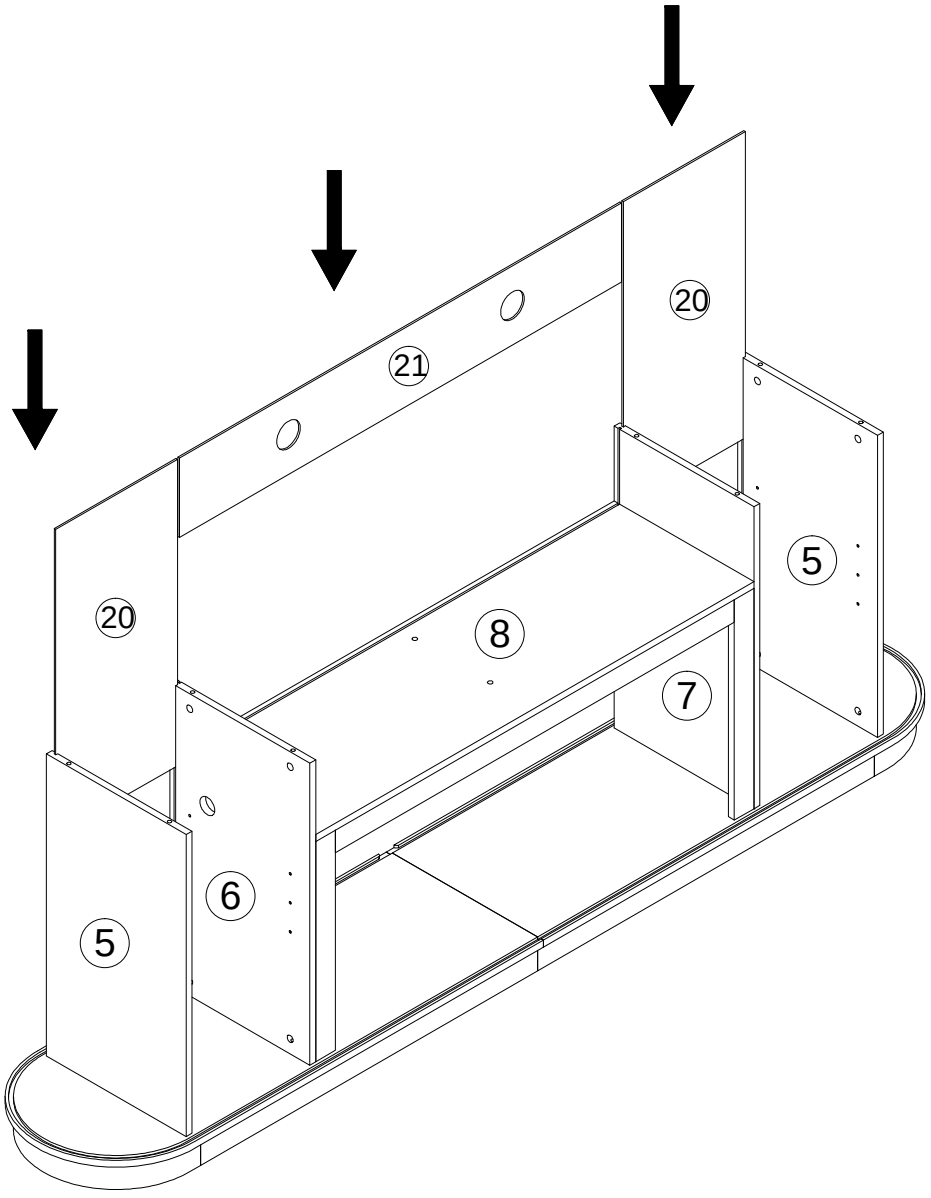



Assemble


Step 13


B	2PCS	C	2PCS

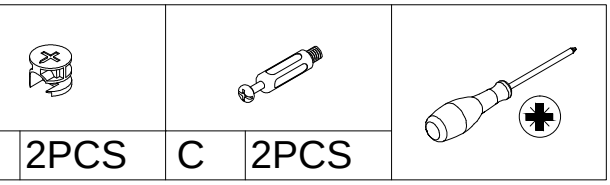


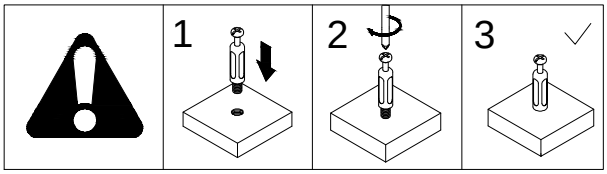

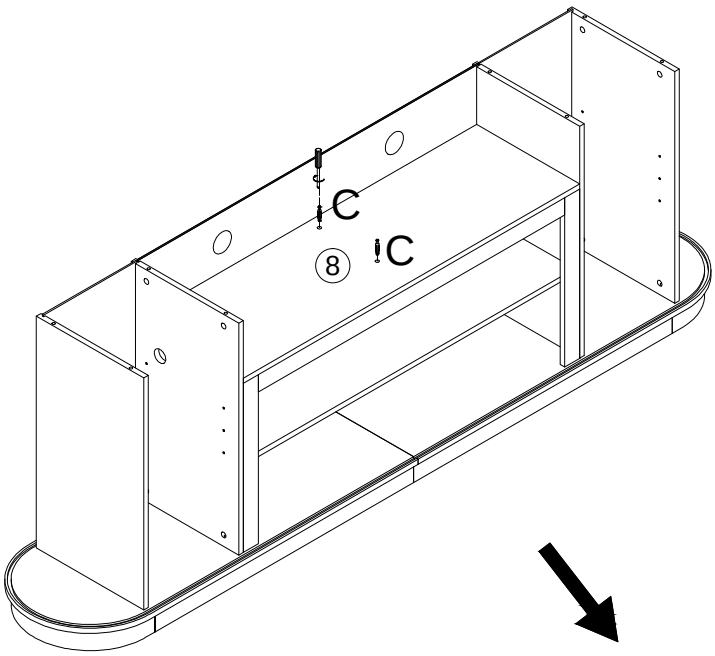

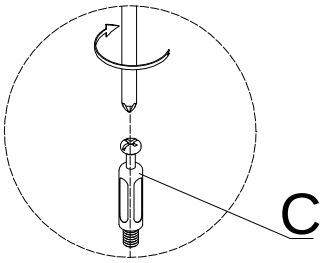

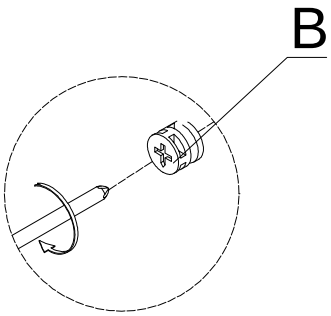


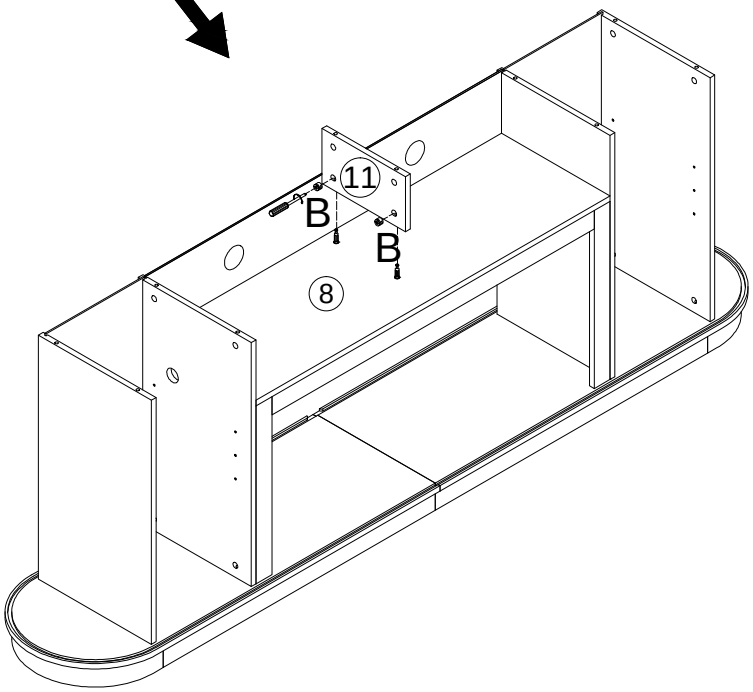



Assemble

Step 14

A	2PCS	C	8PCS

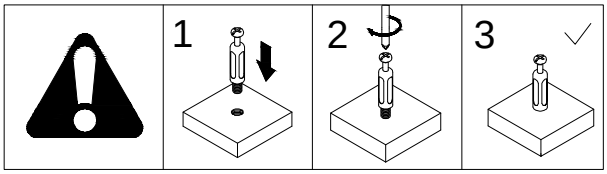

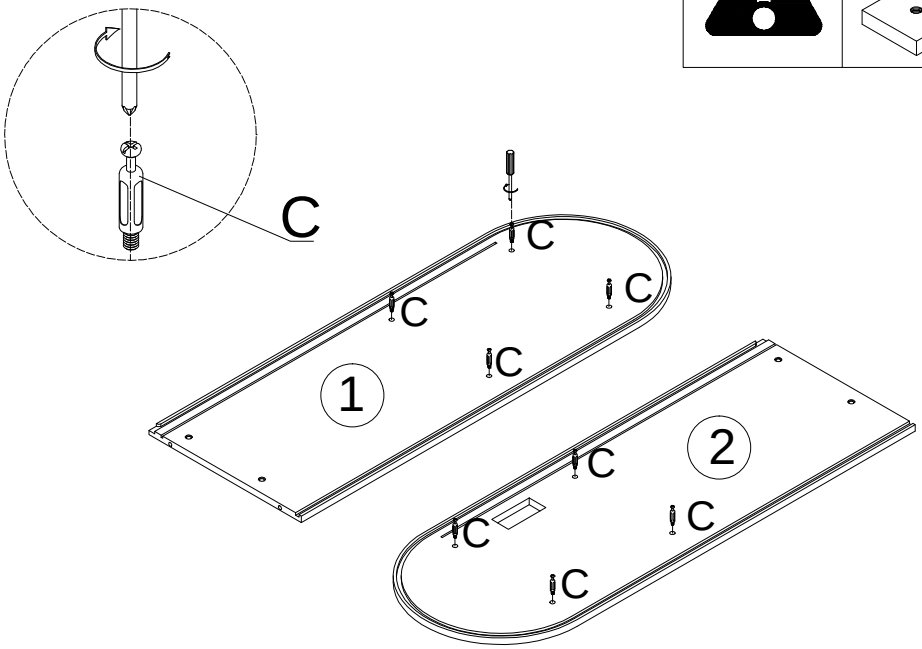


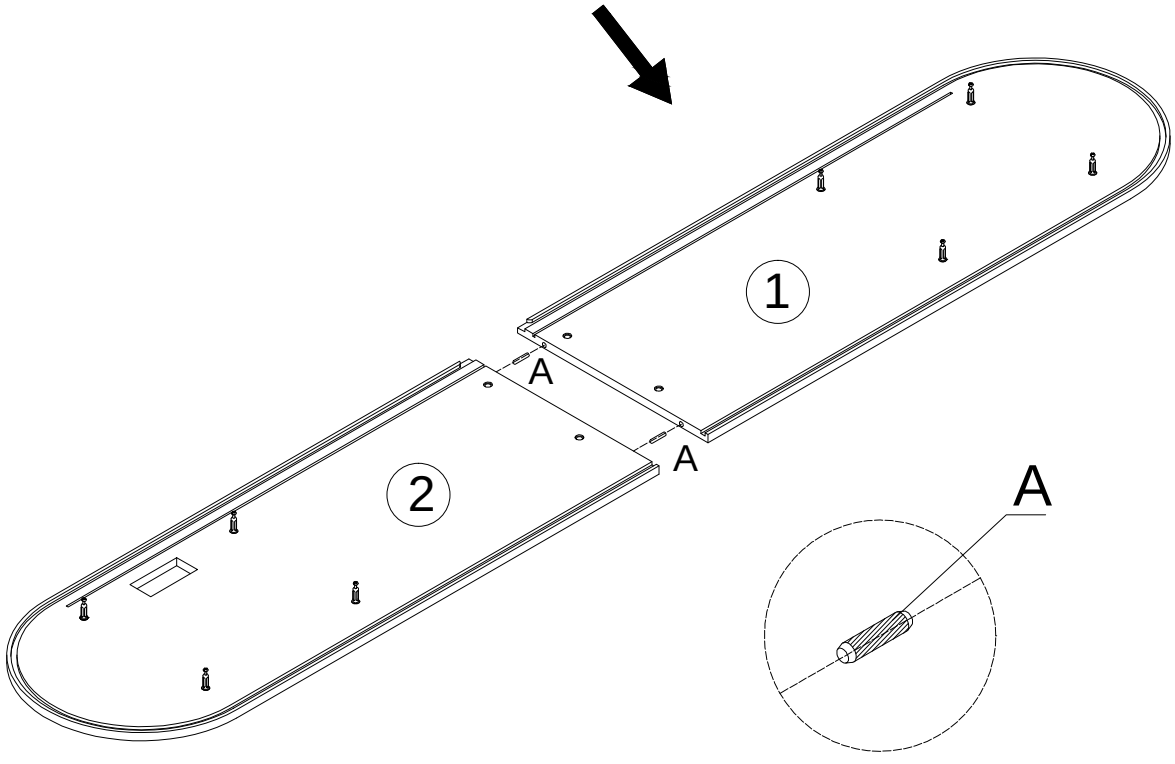



Assemble

Step 15

H	4PCS	J		C	2PCS

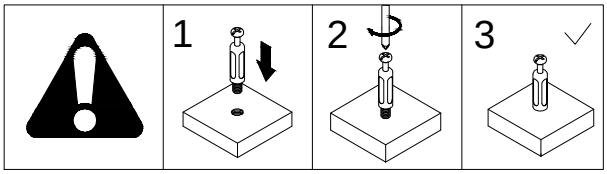


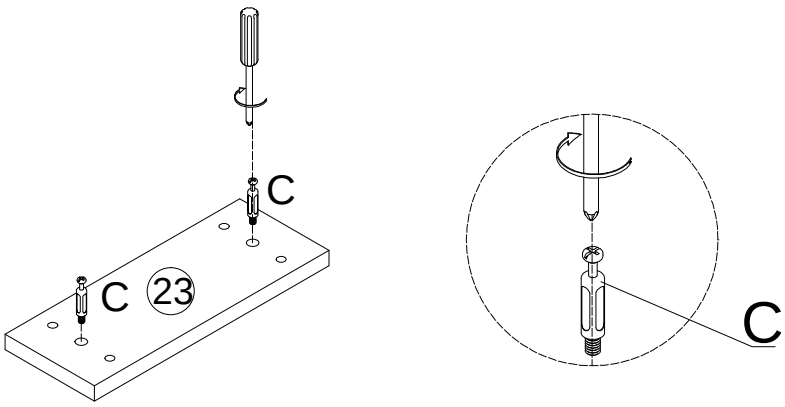


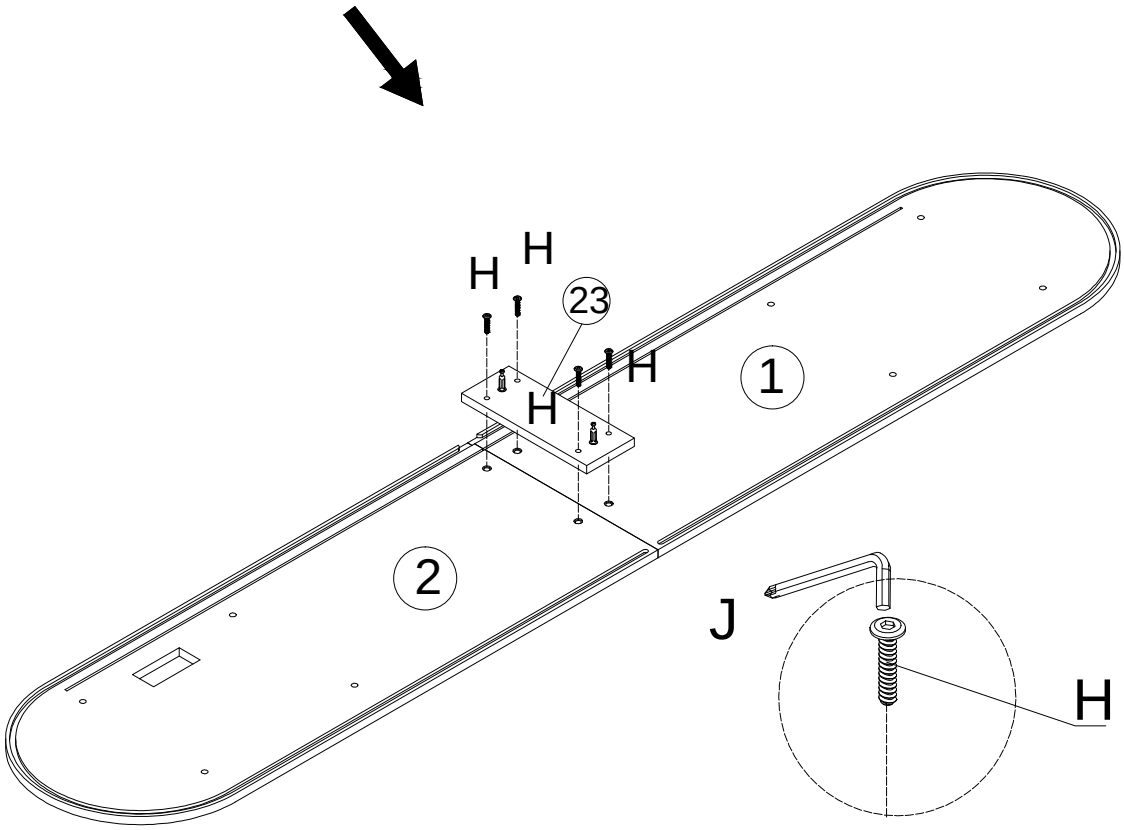

Assemble

Step 16


		
B	10PCS	

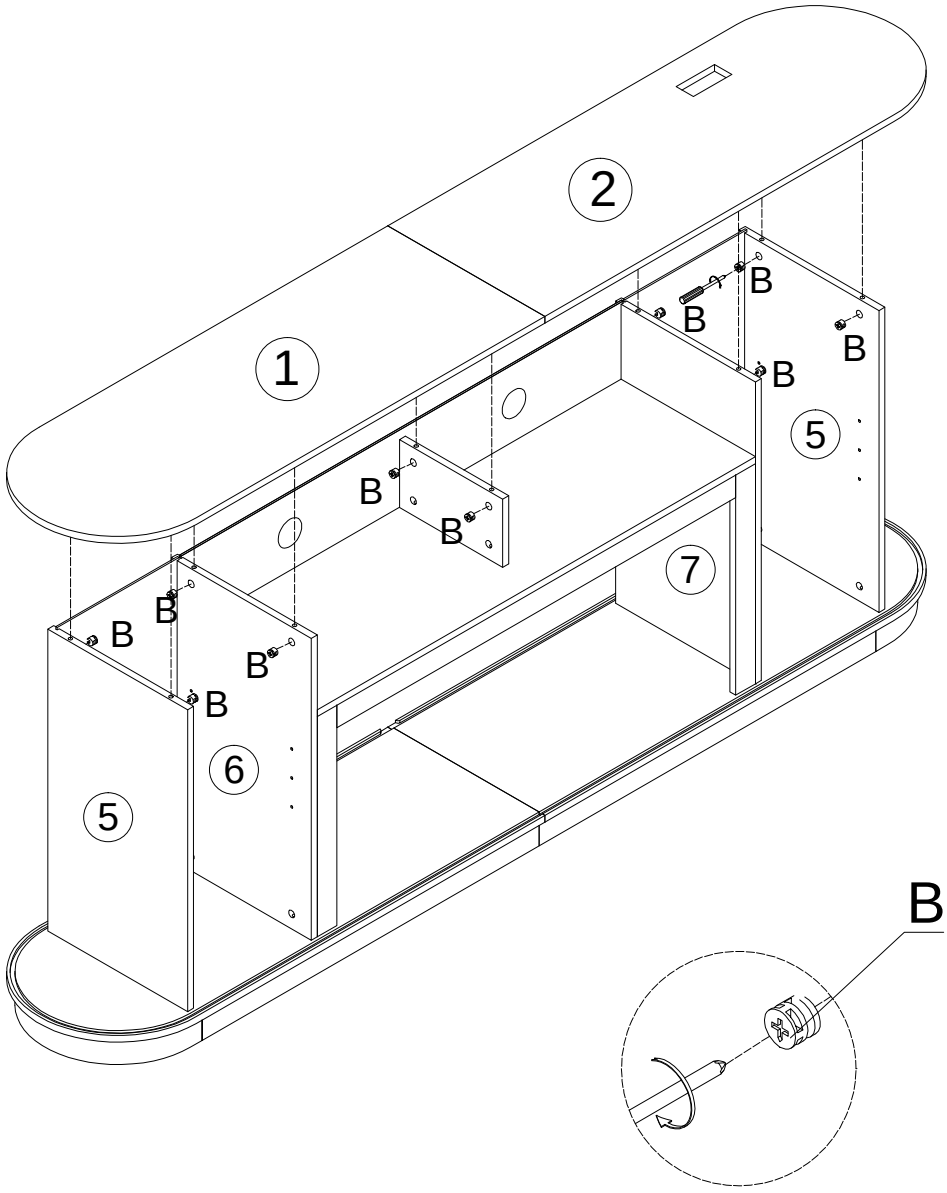

Assemble

Step 17


D	1PC	E	22PCS	K	20PCS	

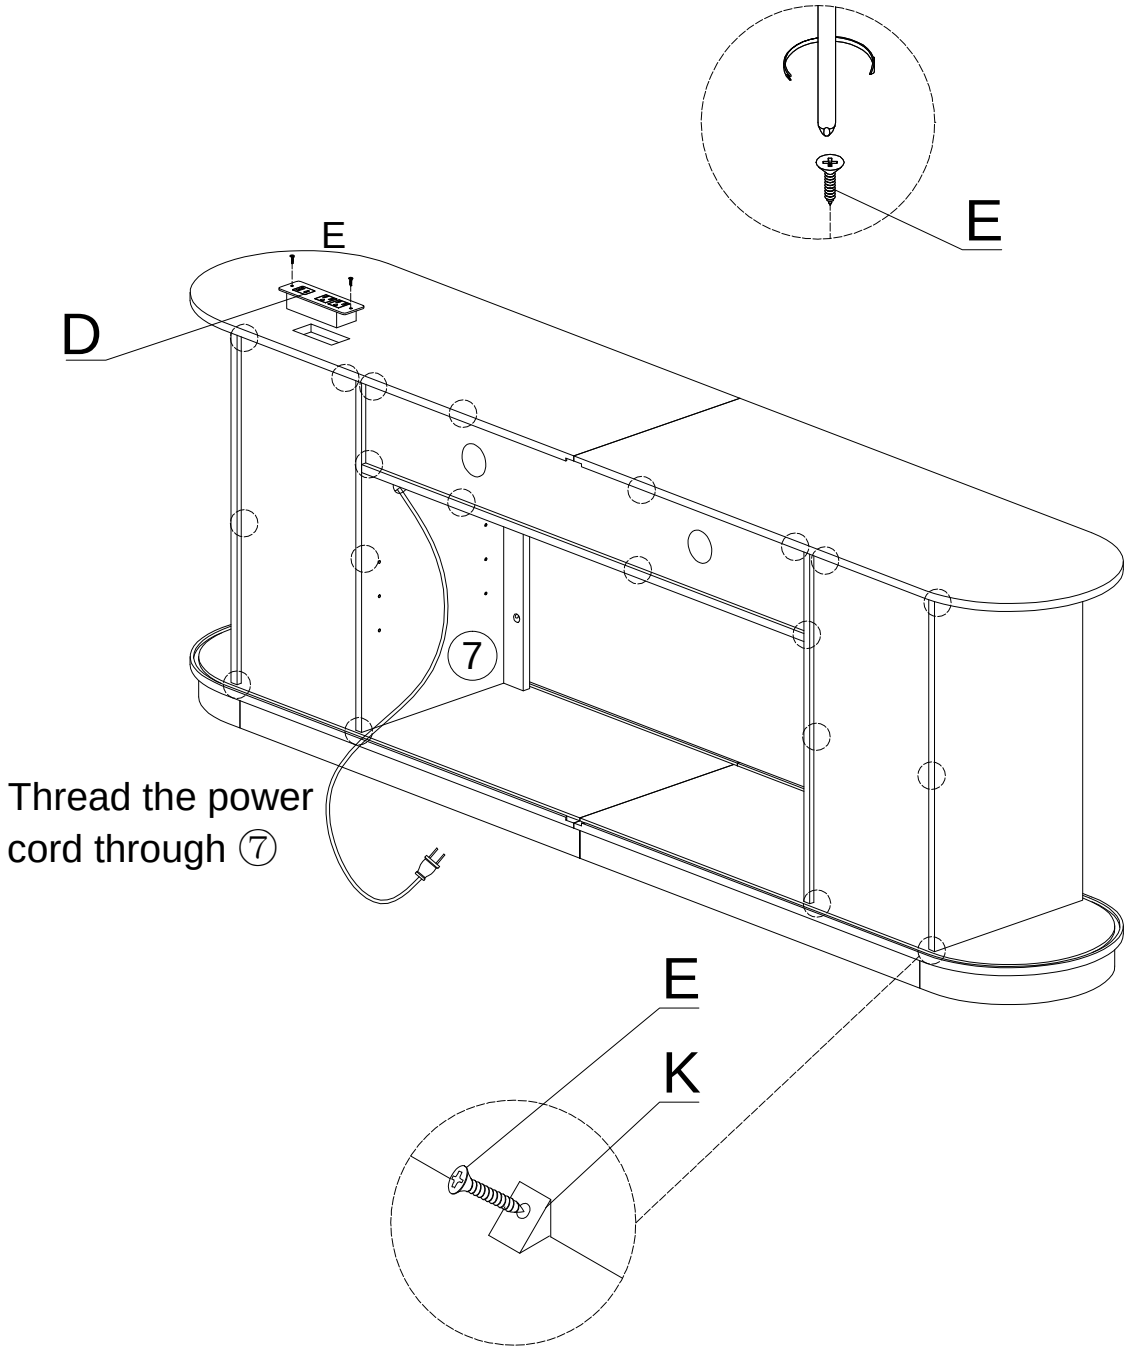

Assemble

Step 18

	
L	8PCS

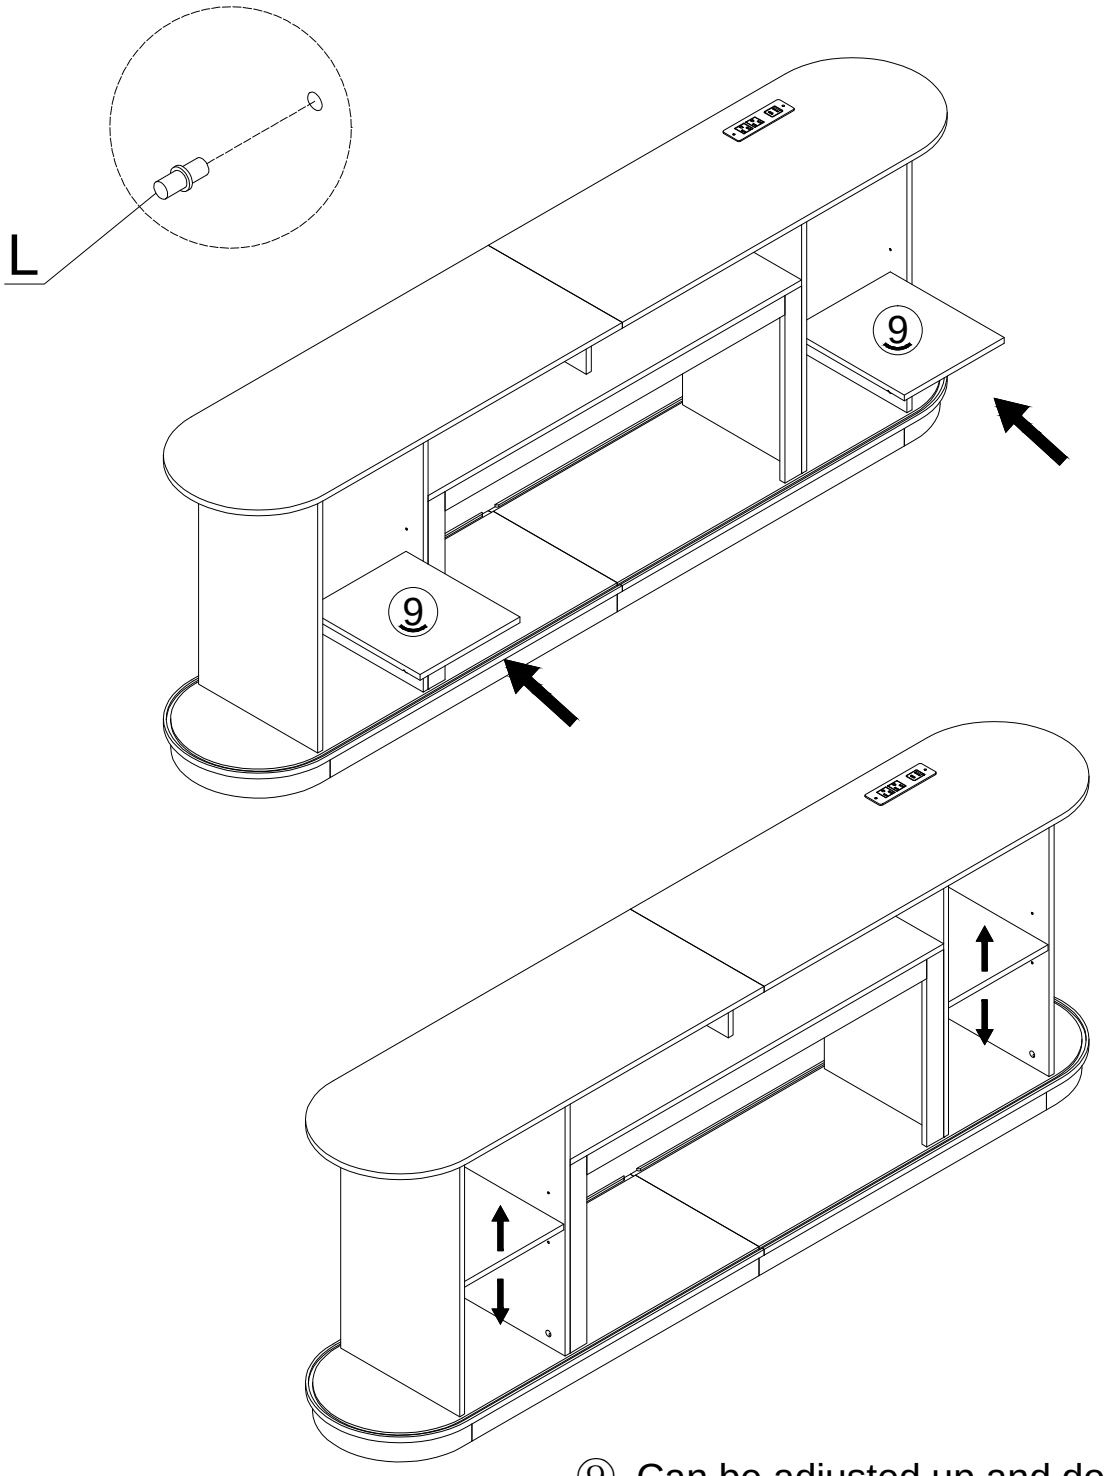


⑨ Can be adjusted up and down

Assemble


Step 19

		
H	2PCS	J

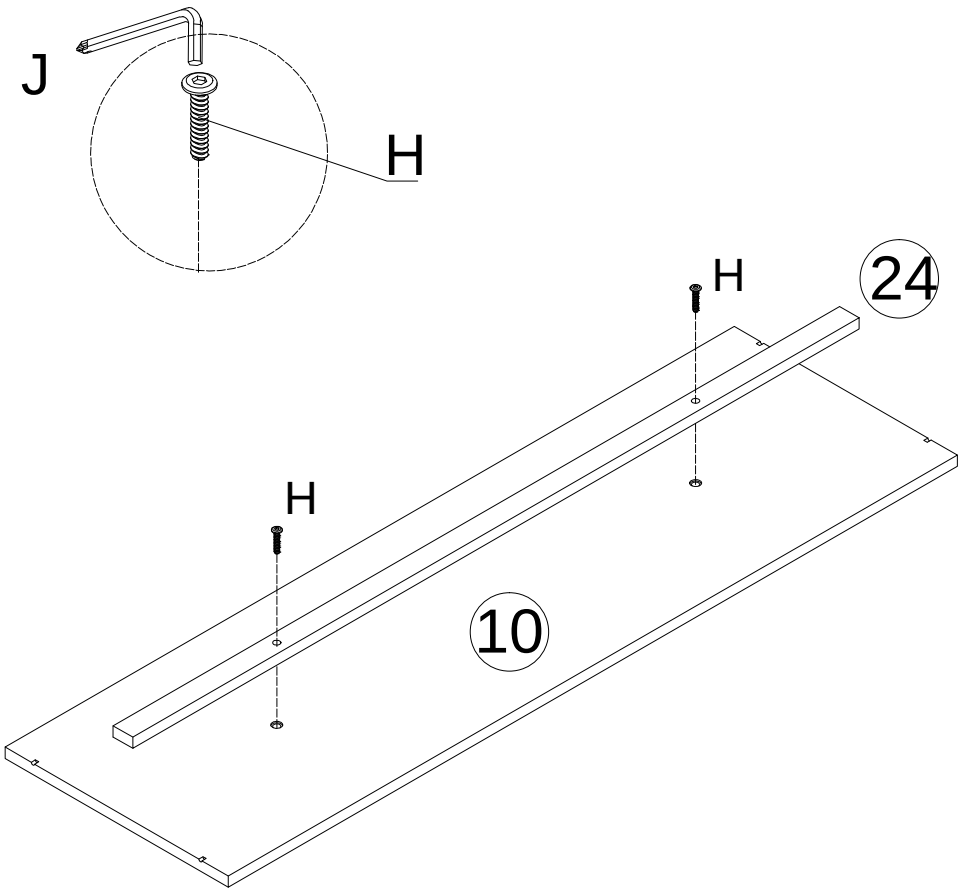


Assemble

Step 20

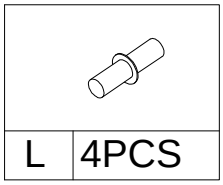


L	4PCS

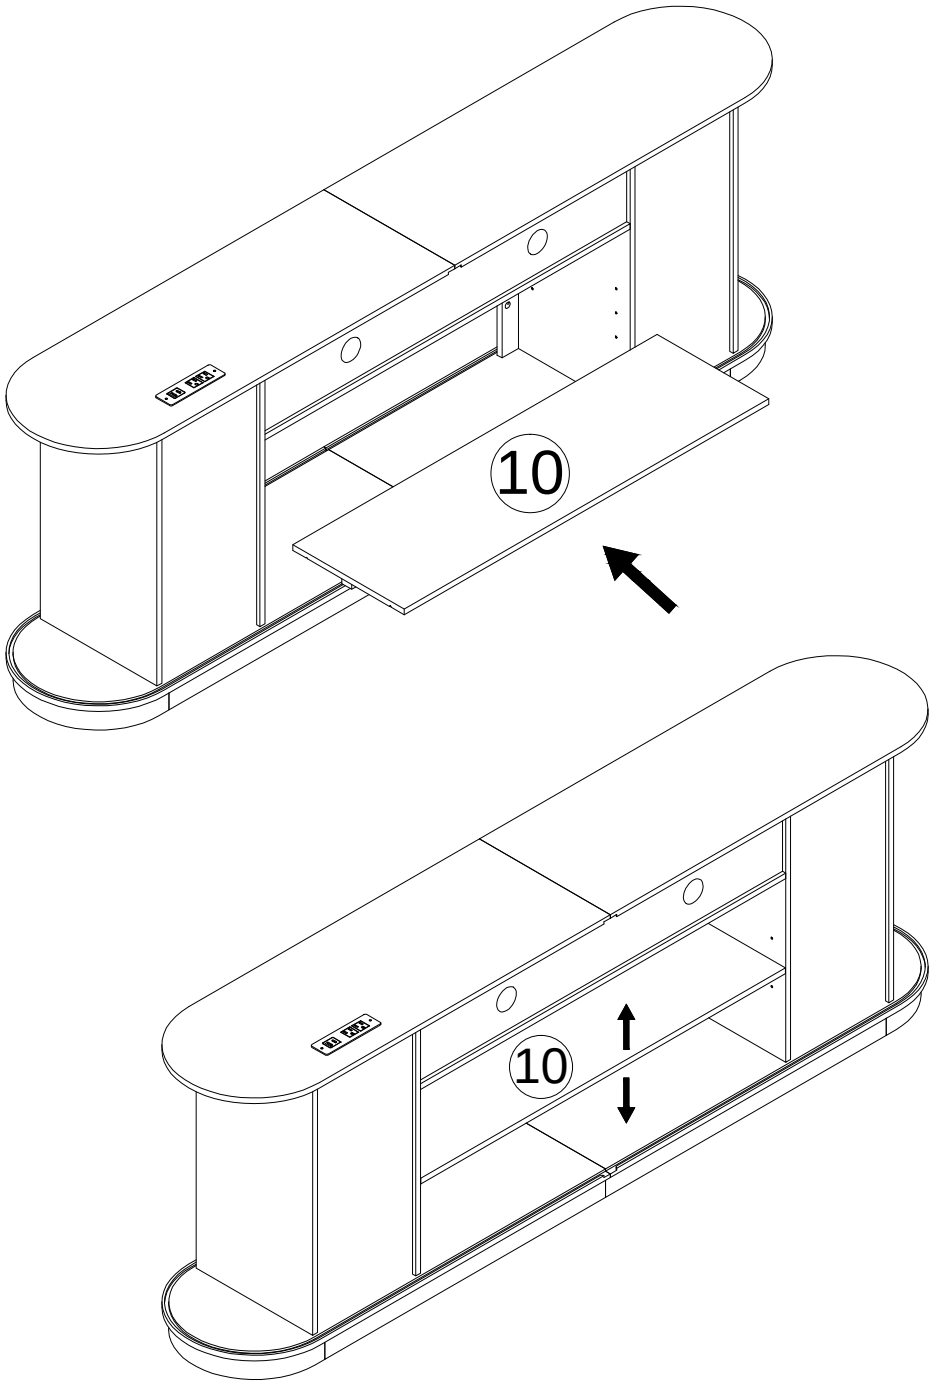


If installing the built-in fireplace, skip this step and do not install .

Step 21

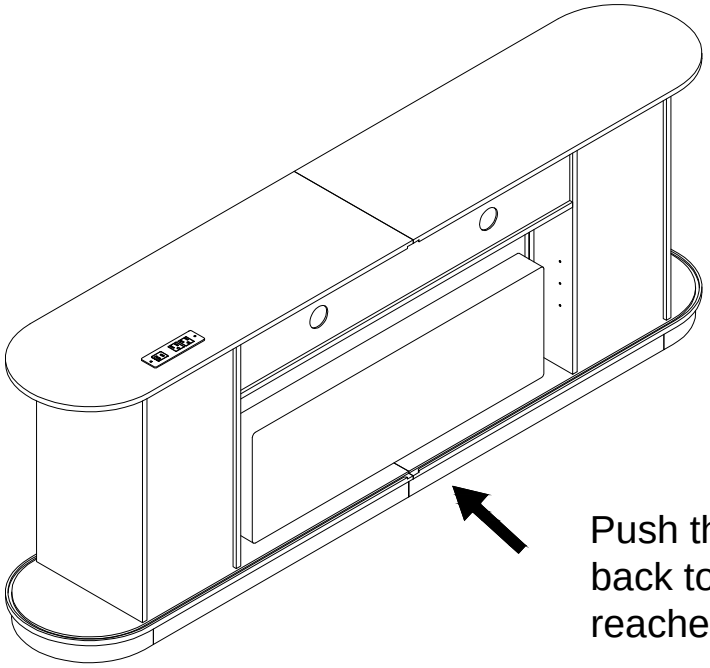


Push the fireplace from the back to the front until it reaches the board.

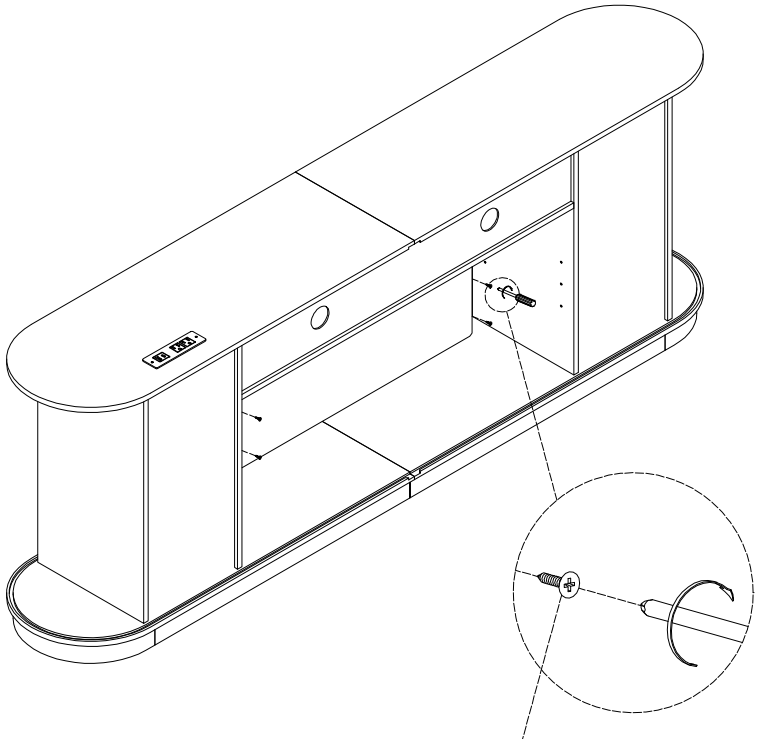


Screws

Step 22

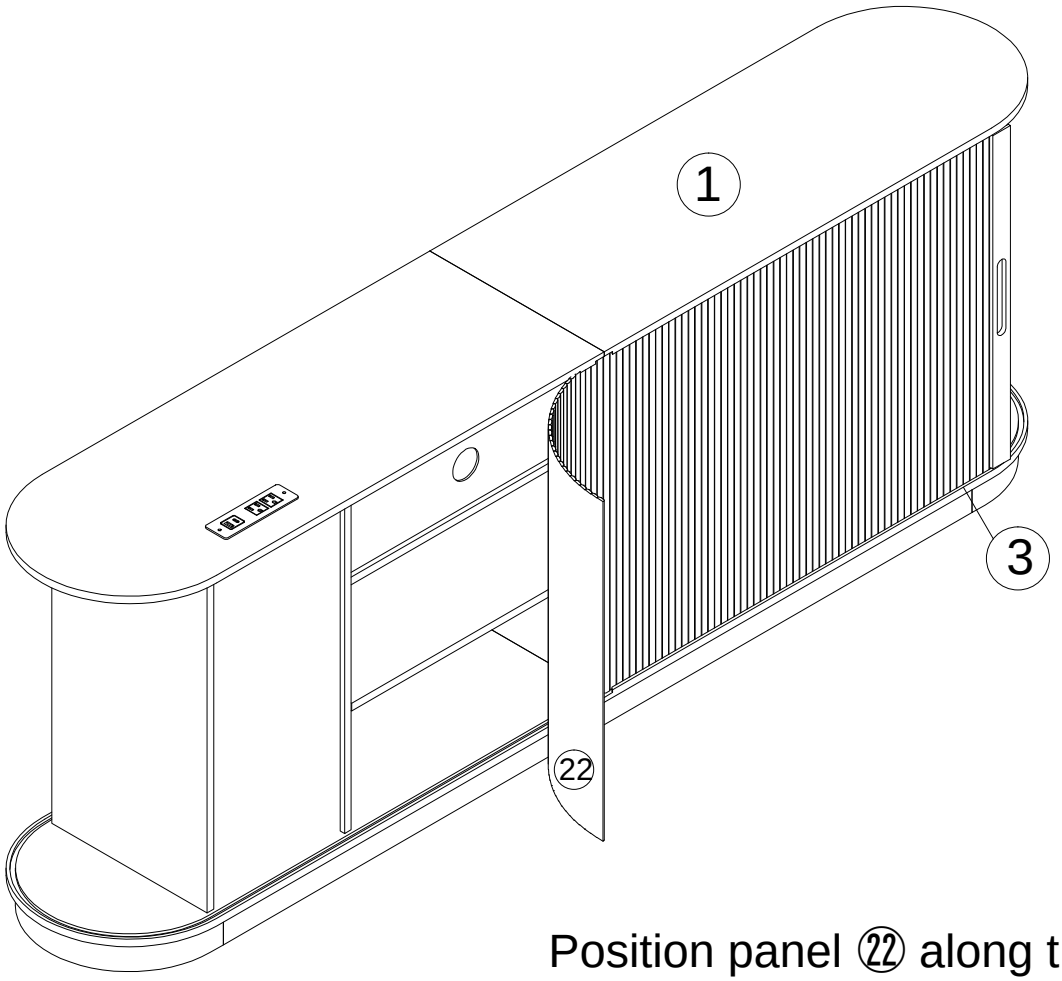

Position panel ㉒ along the slots of ① and ③


Step 23

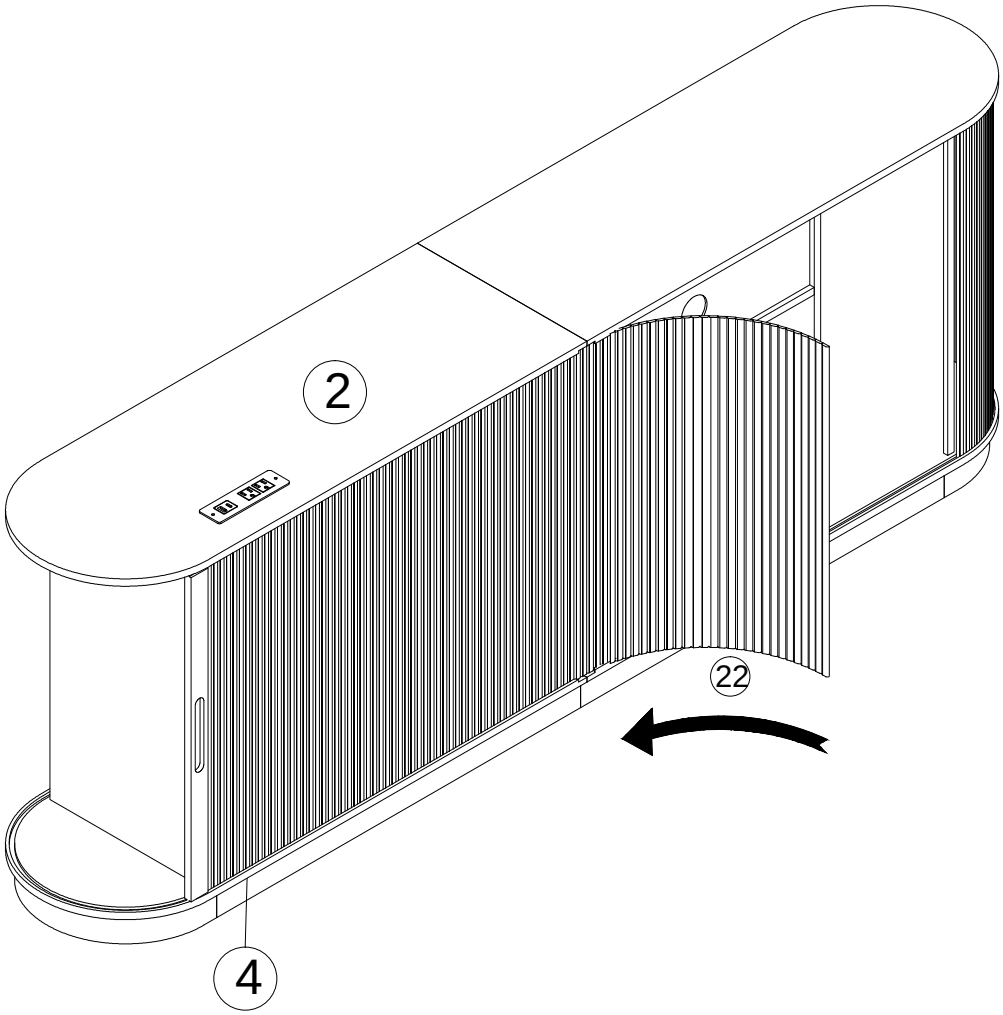


Position panel ㉒ along the slots of ② and ④

Assemble

Step 24

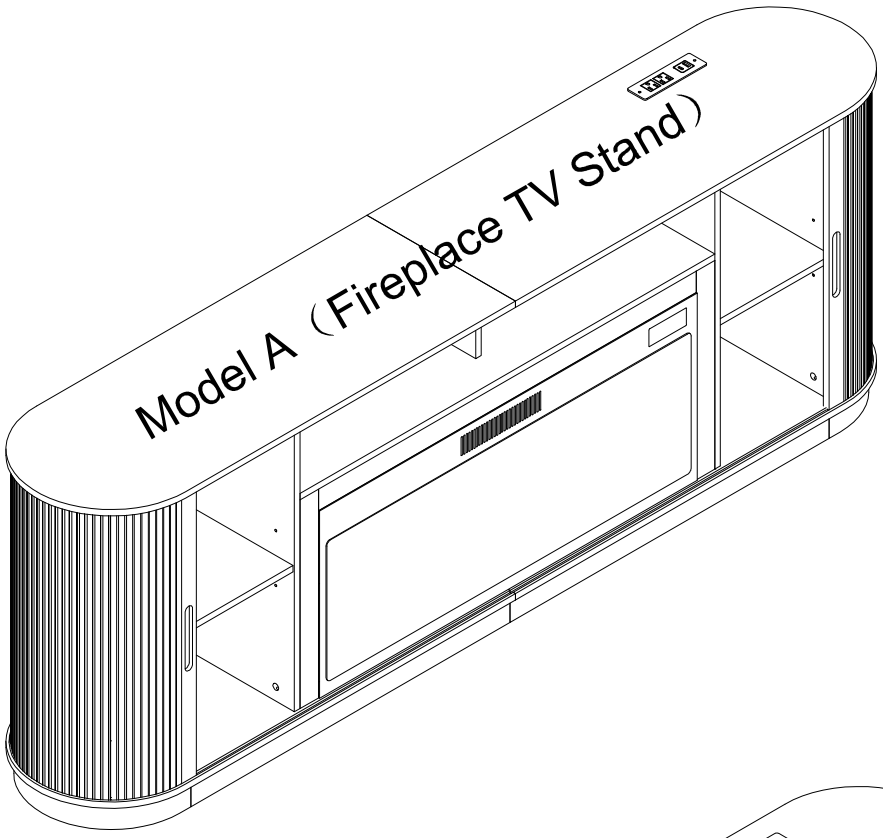

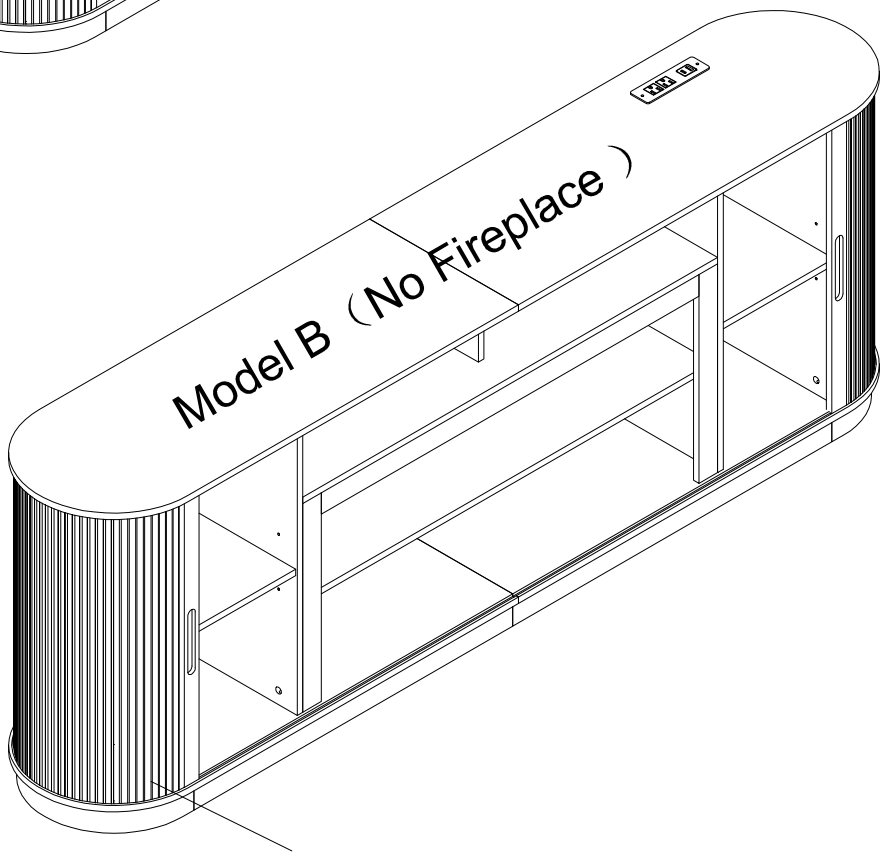



The door requires both hands to push and pull.

Assemble

Step 25

G	30PCS

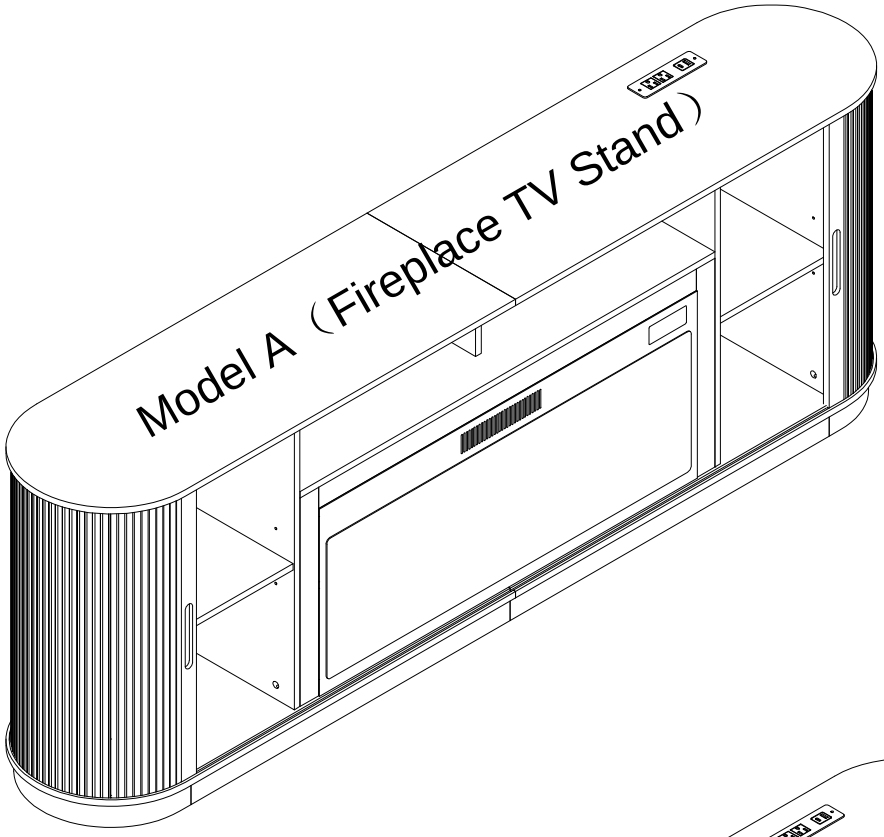

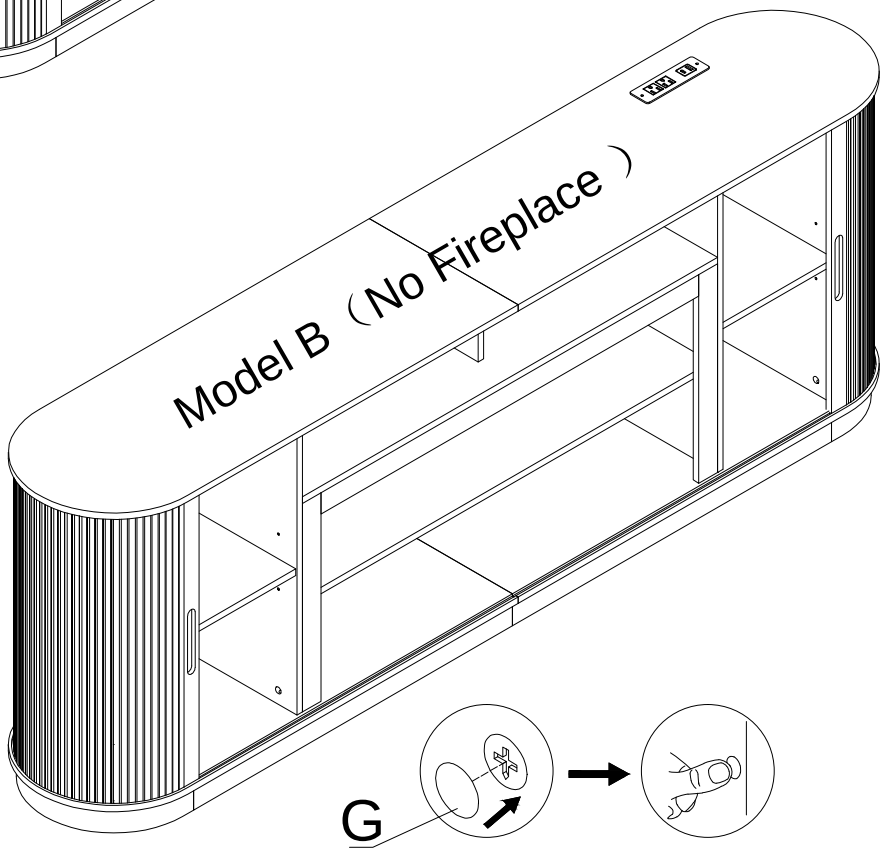

For a more aesthetically pleasing appearance, you can use G to cover the exposed hardware holes as needed.

Assemble

Step 26

							
M	2PCS	N	2PCS	P	2PCS	Q	2PCS

