


ASSEMBLY INSTRUCTION

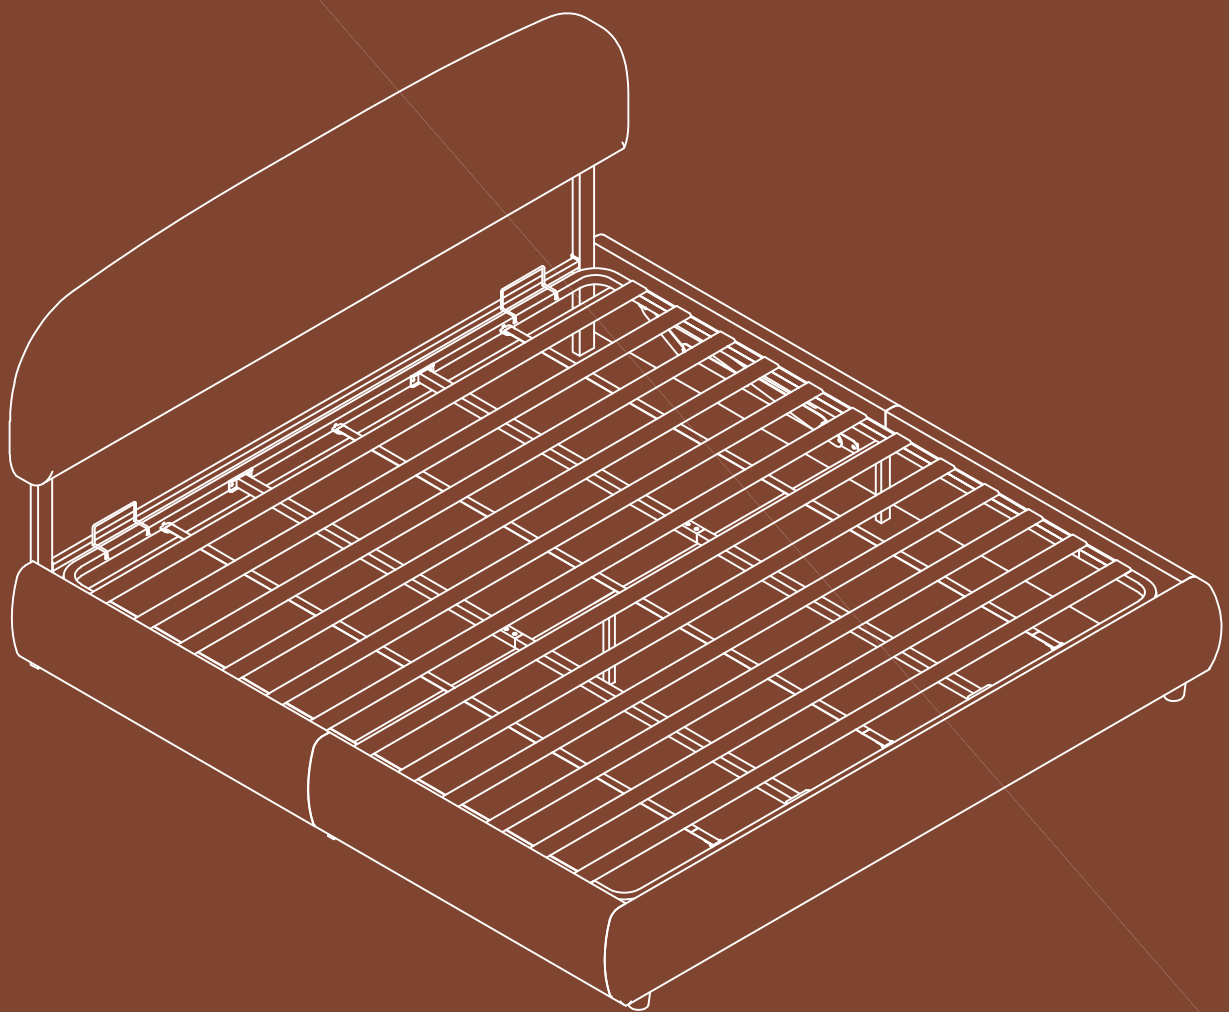

CATALOGUE

Introduction	01
Precautions	01
Parts List	02-03
Hardware List	04
Tool List	05
Tips	06
Assembling Process	07-22

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.

PRECAUTIONS

This package contains numerous components and hardware pieces. Please identify and verify all parts against the parts list before you begin assembly.

WARNING: Choking Hazard. This product contains small items. Keep all parts and hardware out of the reach of children during assembly.

To prevent scratches, assemble the product on a soft, non-abrasive surface such as a carpet, blanket, or the flattened cardboard packaging.










Some components are heavy. For safety, we recommend this product be assembled by two adults.











The unit may be unstable until assembly is fully complete. Do not move the product until all steps are finished.

If you encounter any issues or have questions, please contact our customer service team for assistance.



- * Please be sure to follow the installation steps in the manual to avoid unnecessary losses caused by improper installation.
- * If you need further assistance, please contact the customer service online.

Parts List

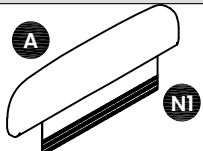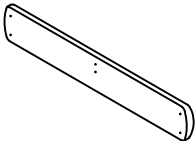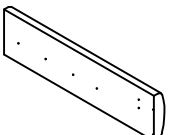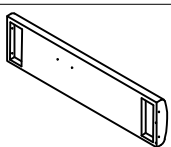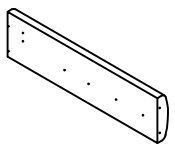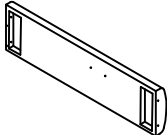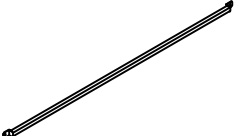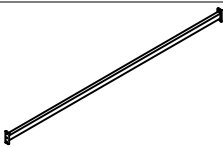
ID	Parts	QTY
A NI		1
B		1
C		1
D		1
E		1
F		1
G		1
H		1
I		1
J		1

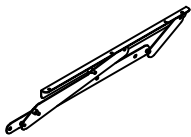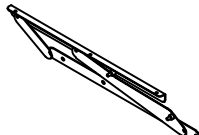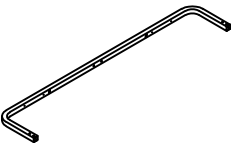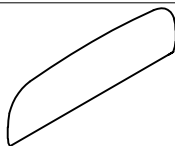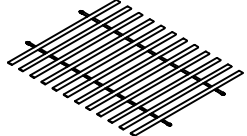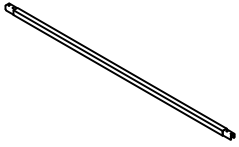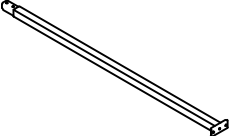ID	Parts	QTY
K		2
L		1
R		1
L1		2
M		1
N		1
O		2
P6		1
Q		2
S		2


Parts List

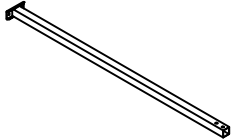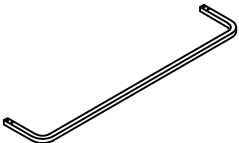ID	Parts	QTY
T		2
U		2
V		2
W		2
X		1
Y		1
Z		2
Z1		1
Z2		1


Hardware List

ID	Parts	QTY
1	 5/16 X 3/4	6
2	 5/16 X 3/4	38
3	 5/16 X 1 9/16	18
4	 5/16 X 2 9/16	4
5	 5/16 X 3 3/16	4
6	 M4*15	4
7	 5/16 Nut	6


Tool List

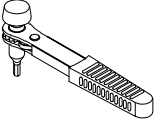ID	Parts	QTY
8		1
9		1
10		1

Required Tool (Not Included)

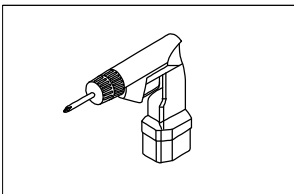

The tool is required for product assembly but not included.


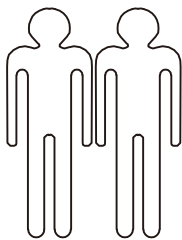


Multi-person installation

Tips


★ How To Use The Ratchet

1. Before assembling the furniture, please adjust the lock tool as needed.

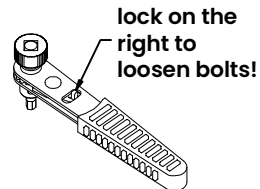
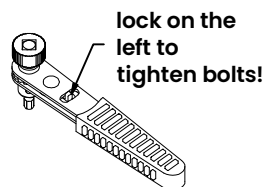


2. Tighten or loosen the bolts

- Tighten bolts : Locate the turncap (picture) and rotate it clockwise to screw the bolt quickly, until it cannot be rotated any more. Then start rotating with the handle clockwise to finalize tightening the bolts.
- Loosen bolts : Rotate the handle counterclockwise to loosen the bolt, Then, to completely remove the bolts, continue rotating with the turncap in the same direction.

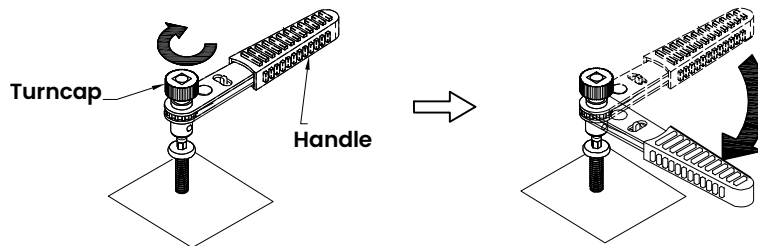


- ★ Don't completely tighten the bolts always, please tighten the bolts per each step details.

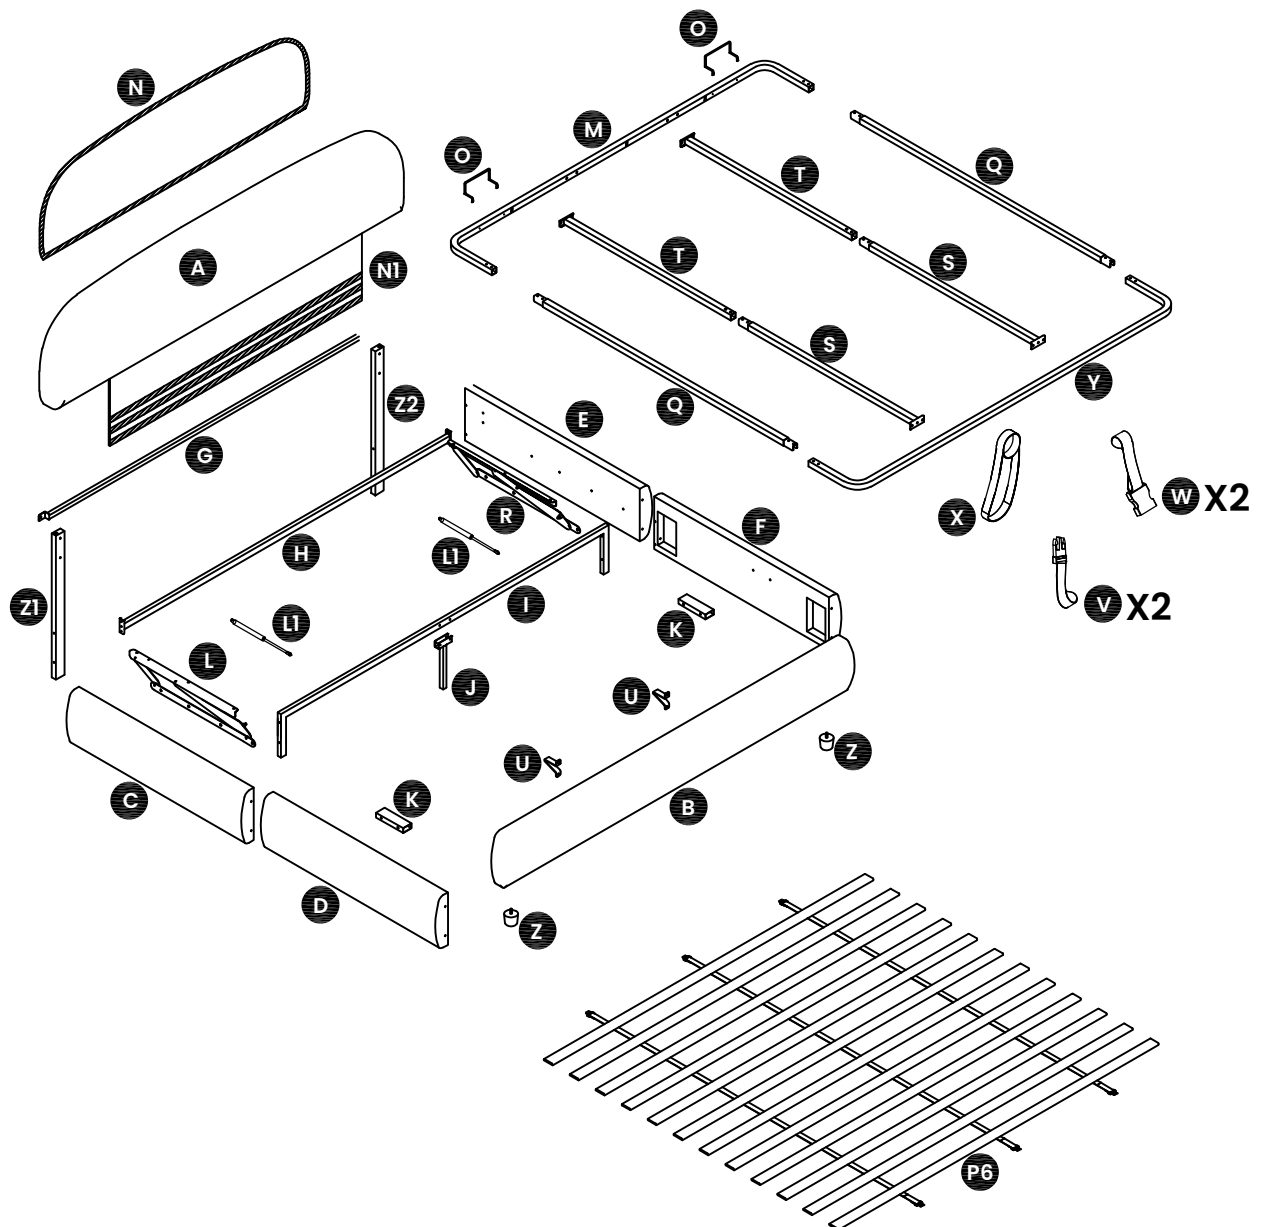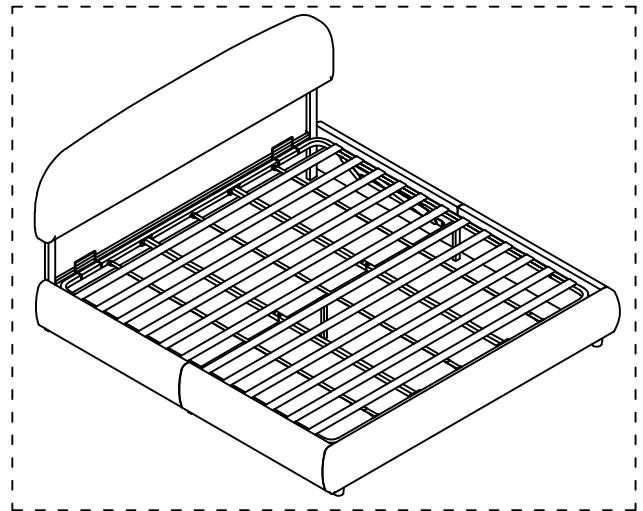


STEP 1

 **3** X4


Headboard height has 3 options, properly choose the one you like.

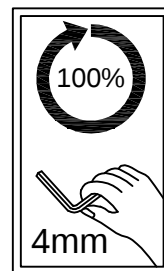




Option 1
Bed Height:
39.37 inch

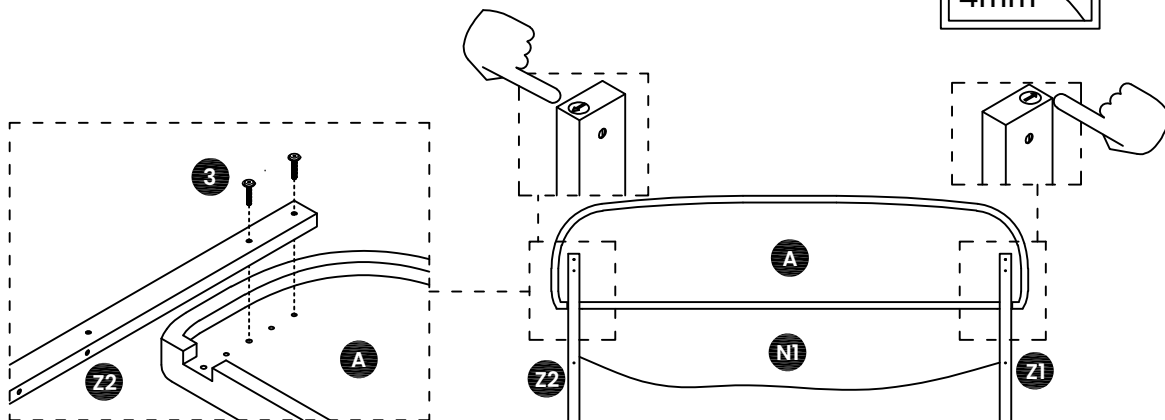

Option 2
Bed Height:
41.34 inch

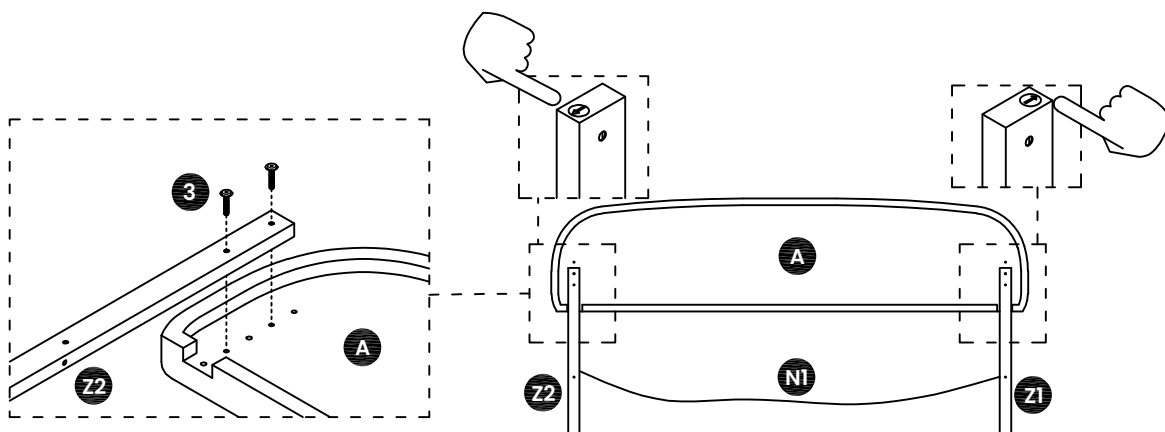

Option 3
Bed Height:
43.31 inch

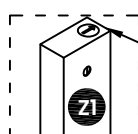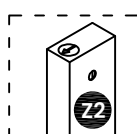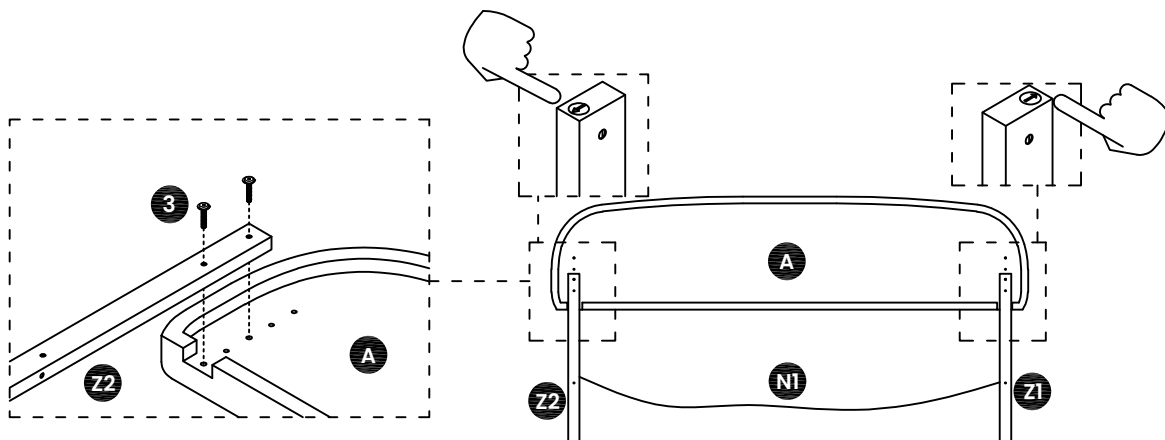


The arrow on legs should be towards outside after assembled!

STEP 2






Attach G to Z1 and Z2 with 2.

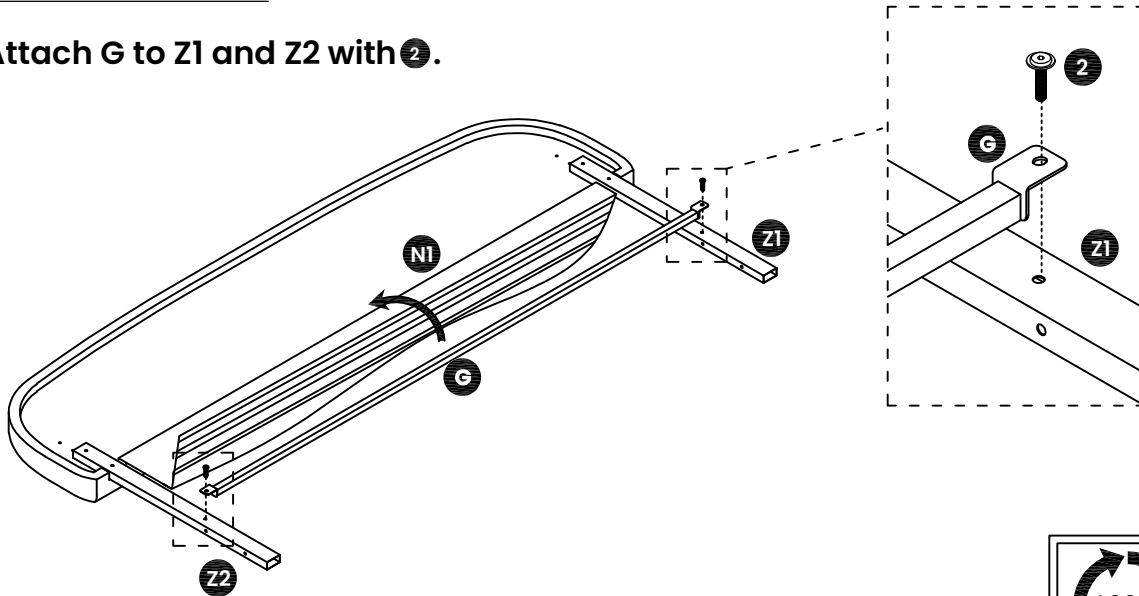

STEP 3



Attach E to F and C to D with 3

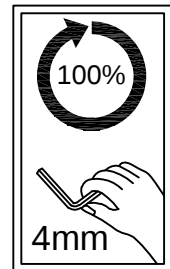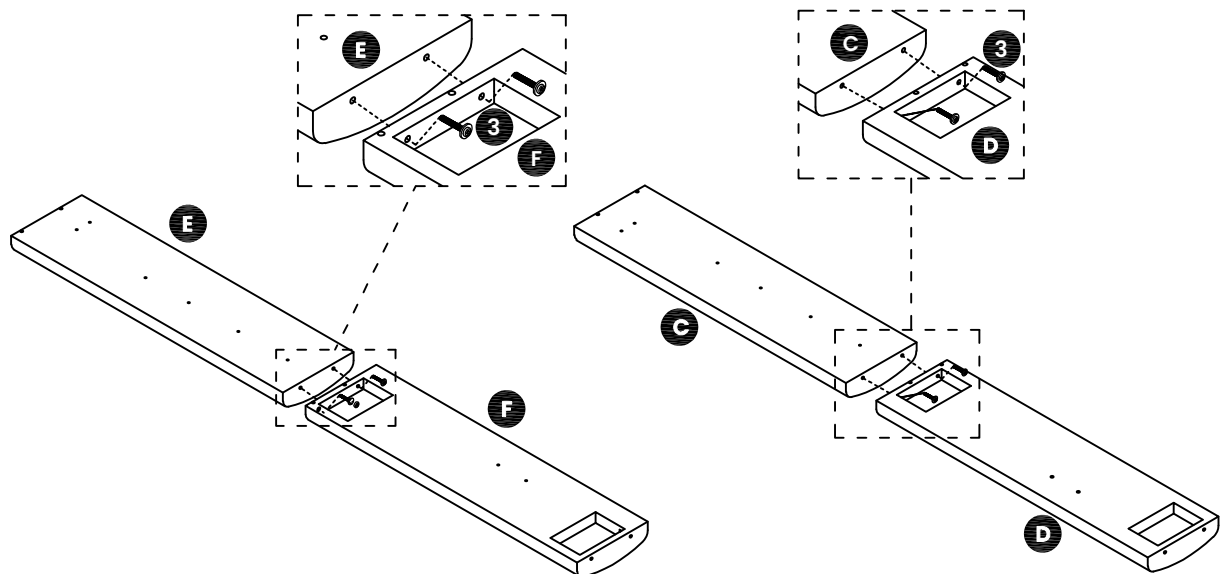



STEP 4

 5 X4

 4 X4

4.1 Attach E & F to Z2, and C&D to Z1 with 5.

4.2 Attach K×2 to F and D with 4.

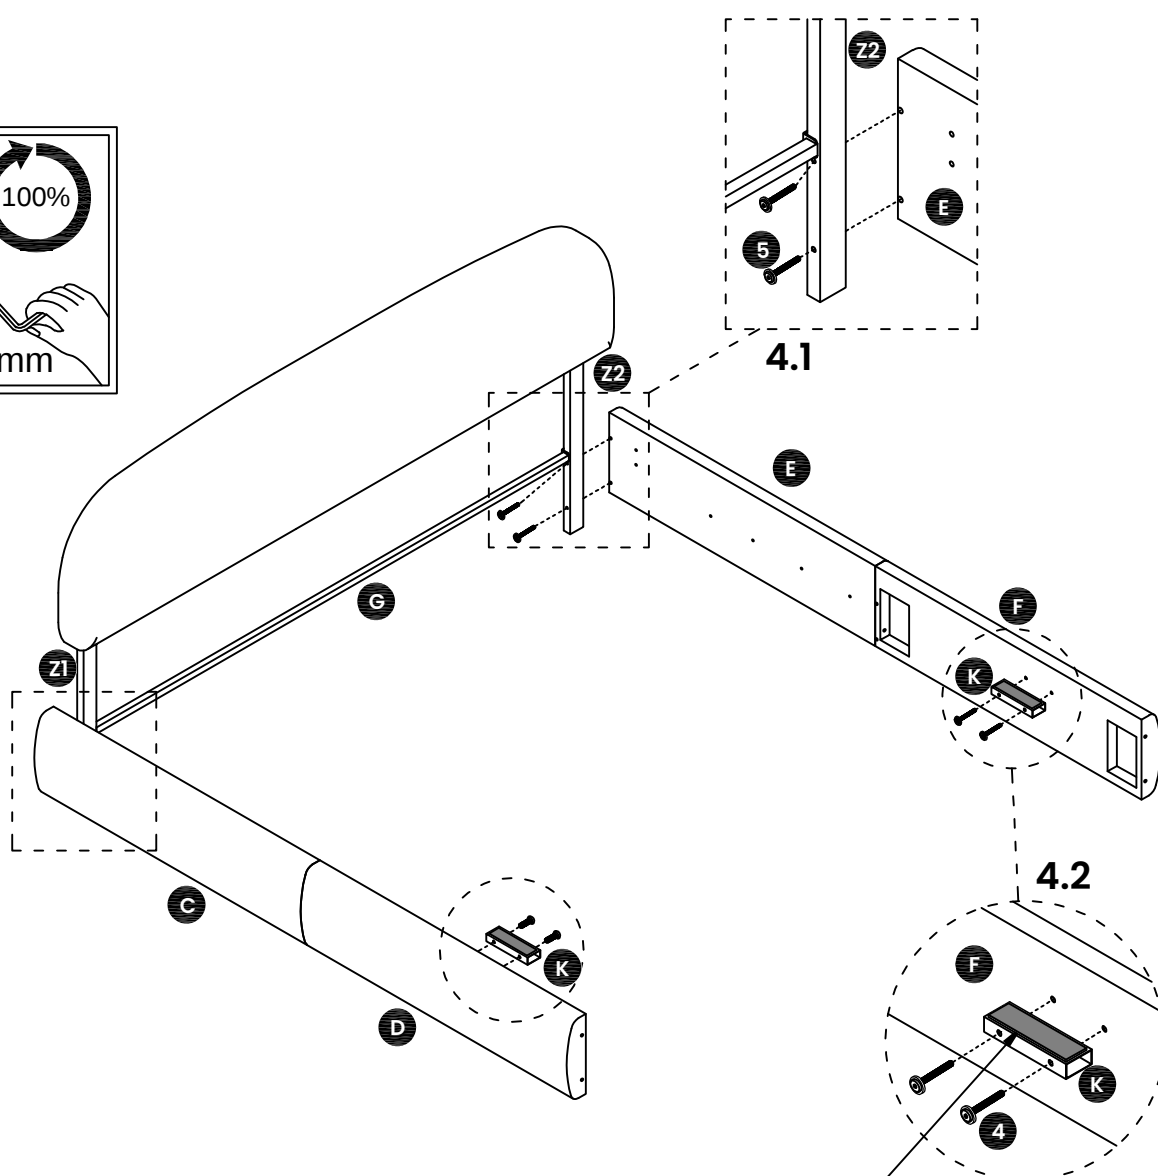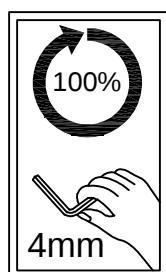



 The EVA side should be towards up.

STEP 5



5.1 Attach Z ×2 to B .

5.2 Hang V ×2 to U ×2 and then attach them to B with 2.

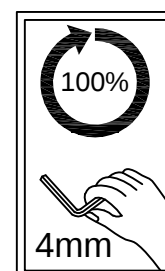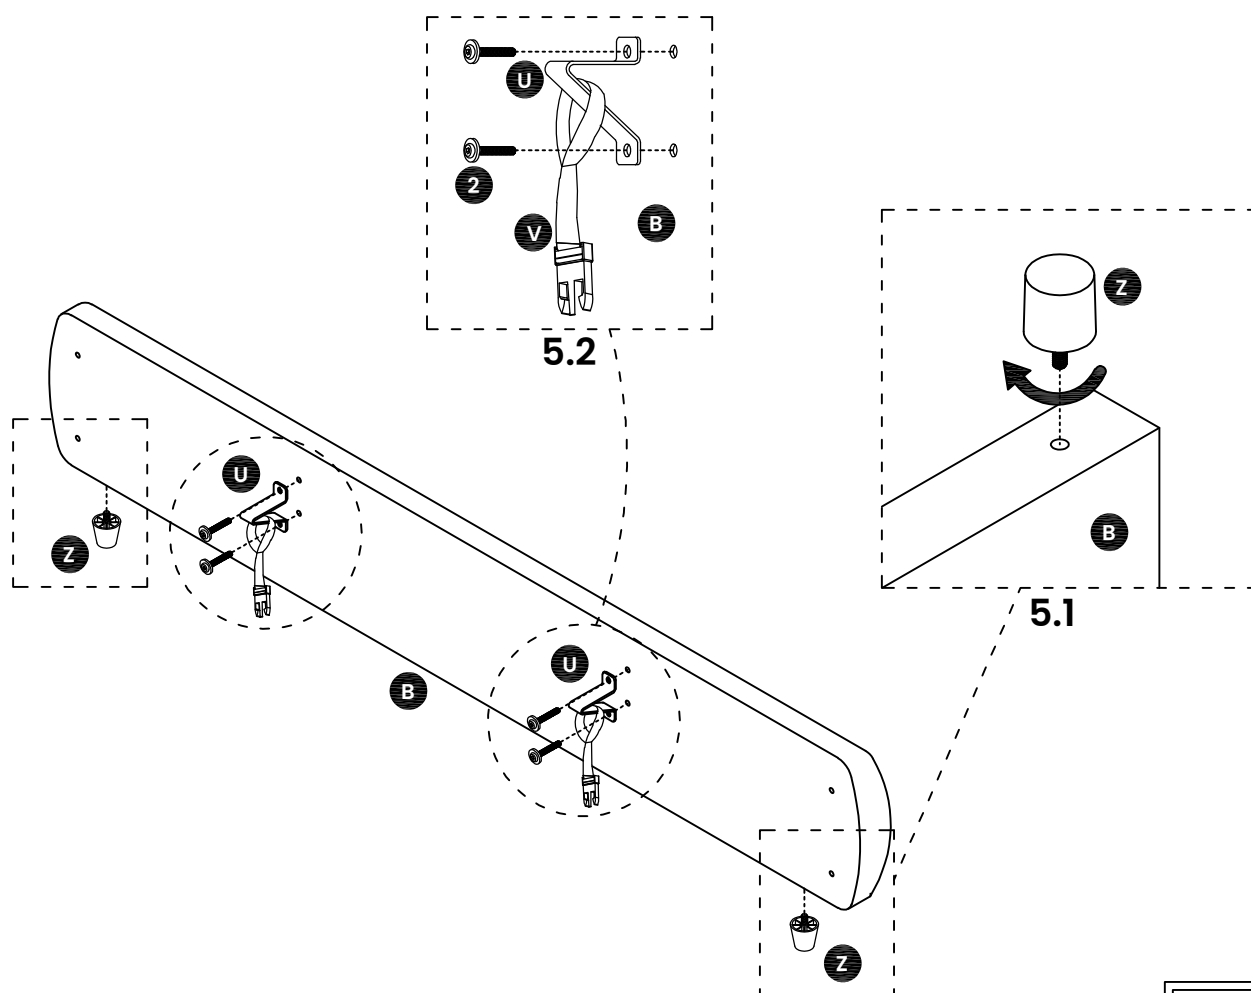


STEP 6



6.1 Attach D and F to B with 3.

6.2 Attach the bottom of N1 to G by velcro. Kindly note the top of N1 is pre-assembled to A by the velcro. If needed, you also can re-assemble the top of N1 to make it match perfectly.

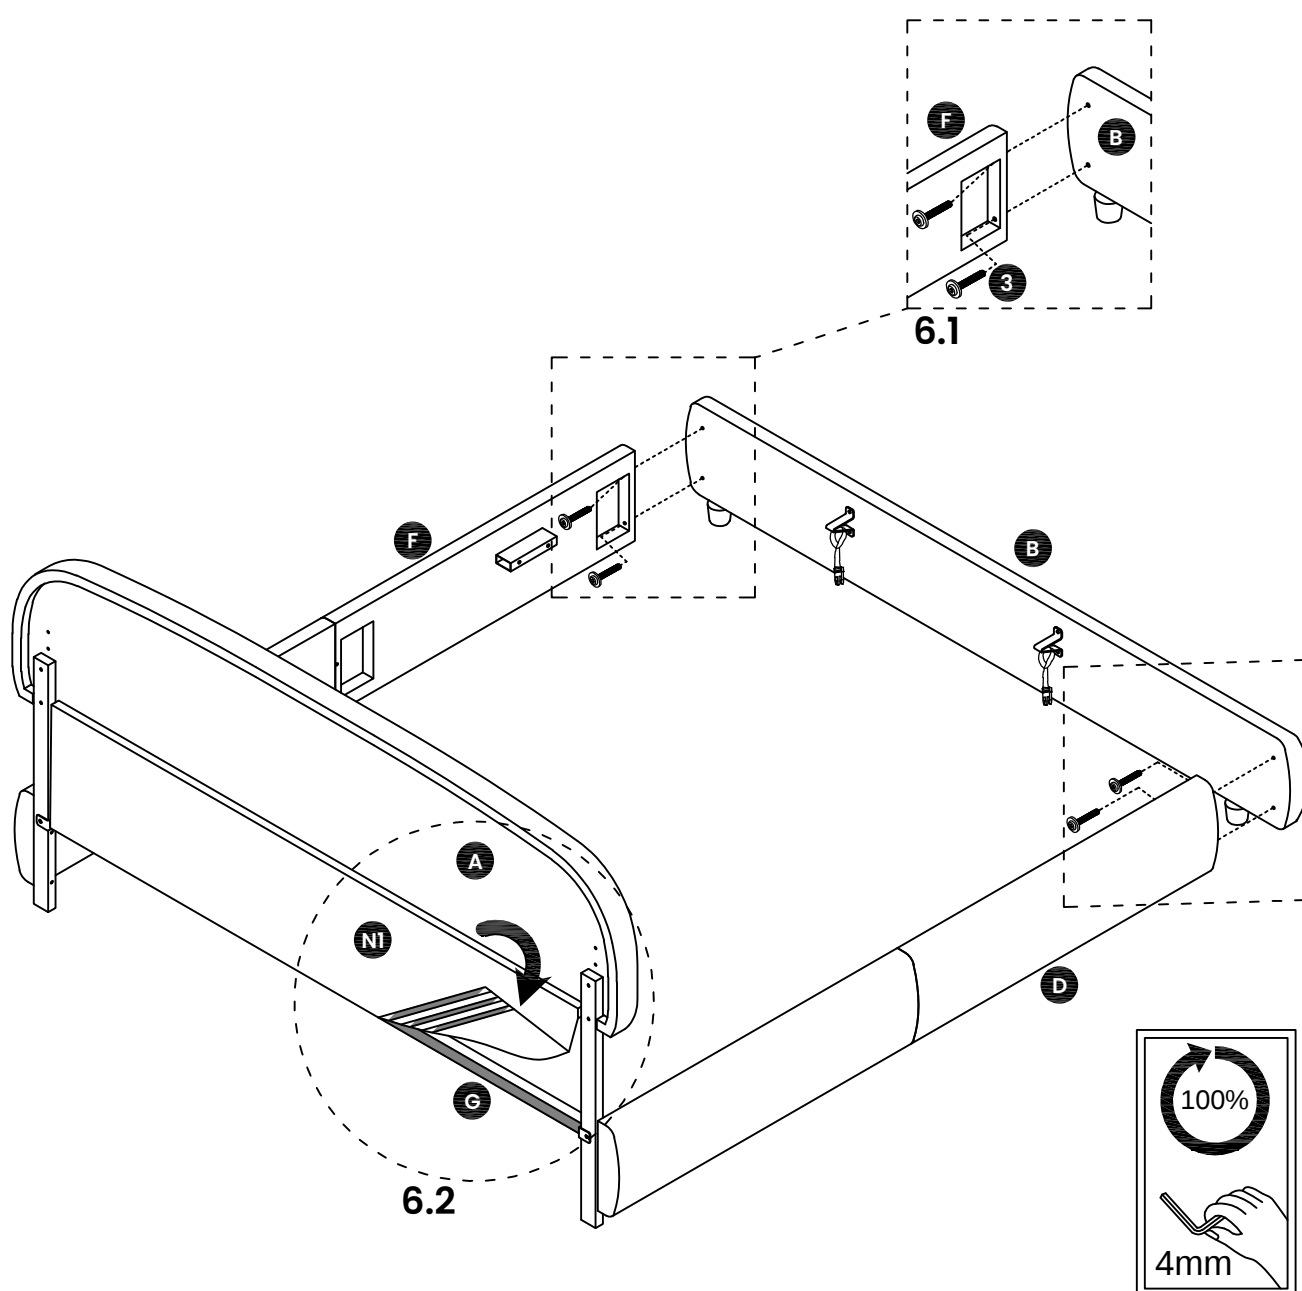



STEP 7

 **3** X2

 **7** X2

Attach J to I with **3** & **7**.

 The EVA side should be towards up.

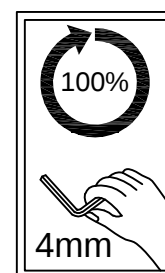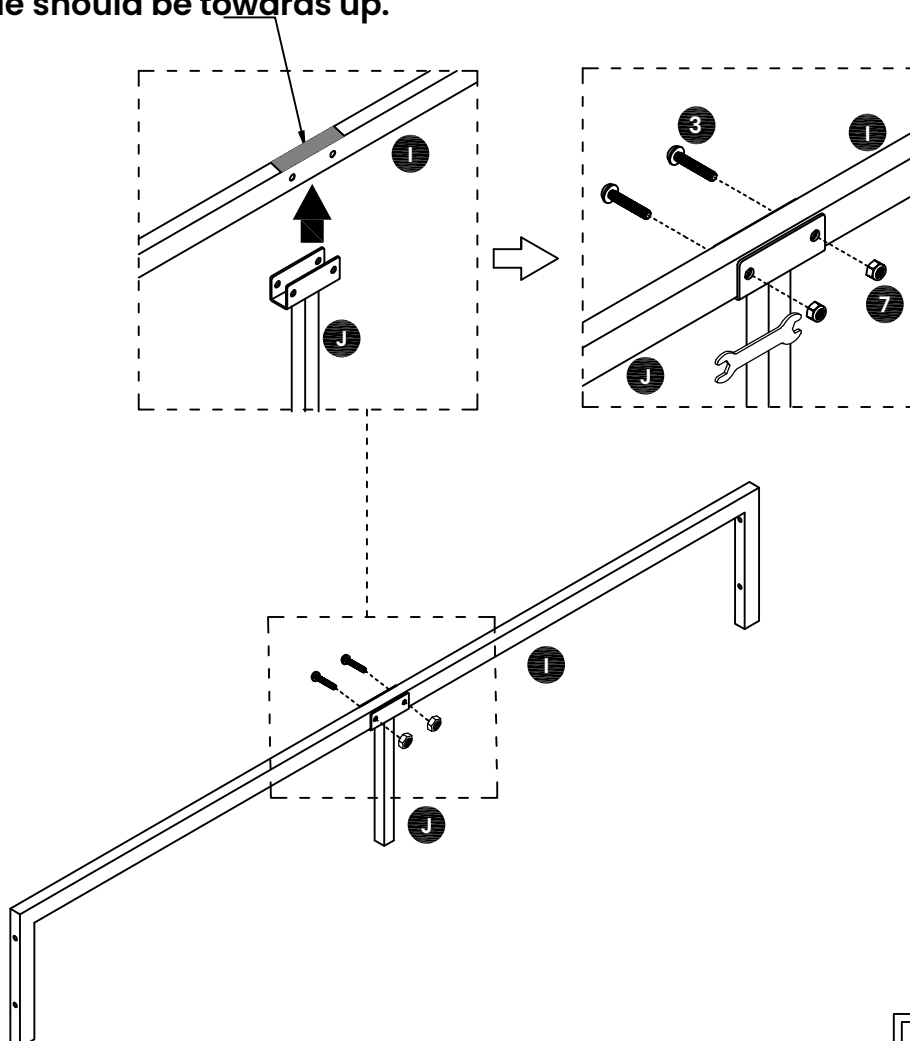



STEP 8



8.1 Attach I to F and D with 3.

8.2 Attach H to C and E with 2.

⚠ The EVA side should be towards up.


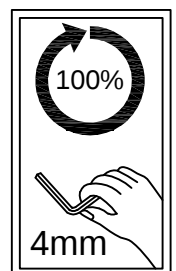
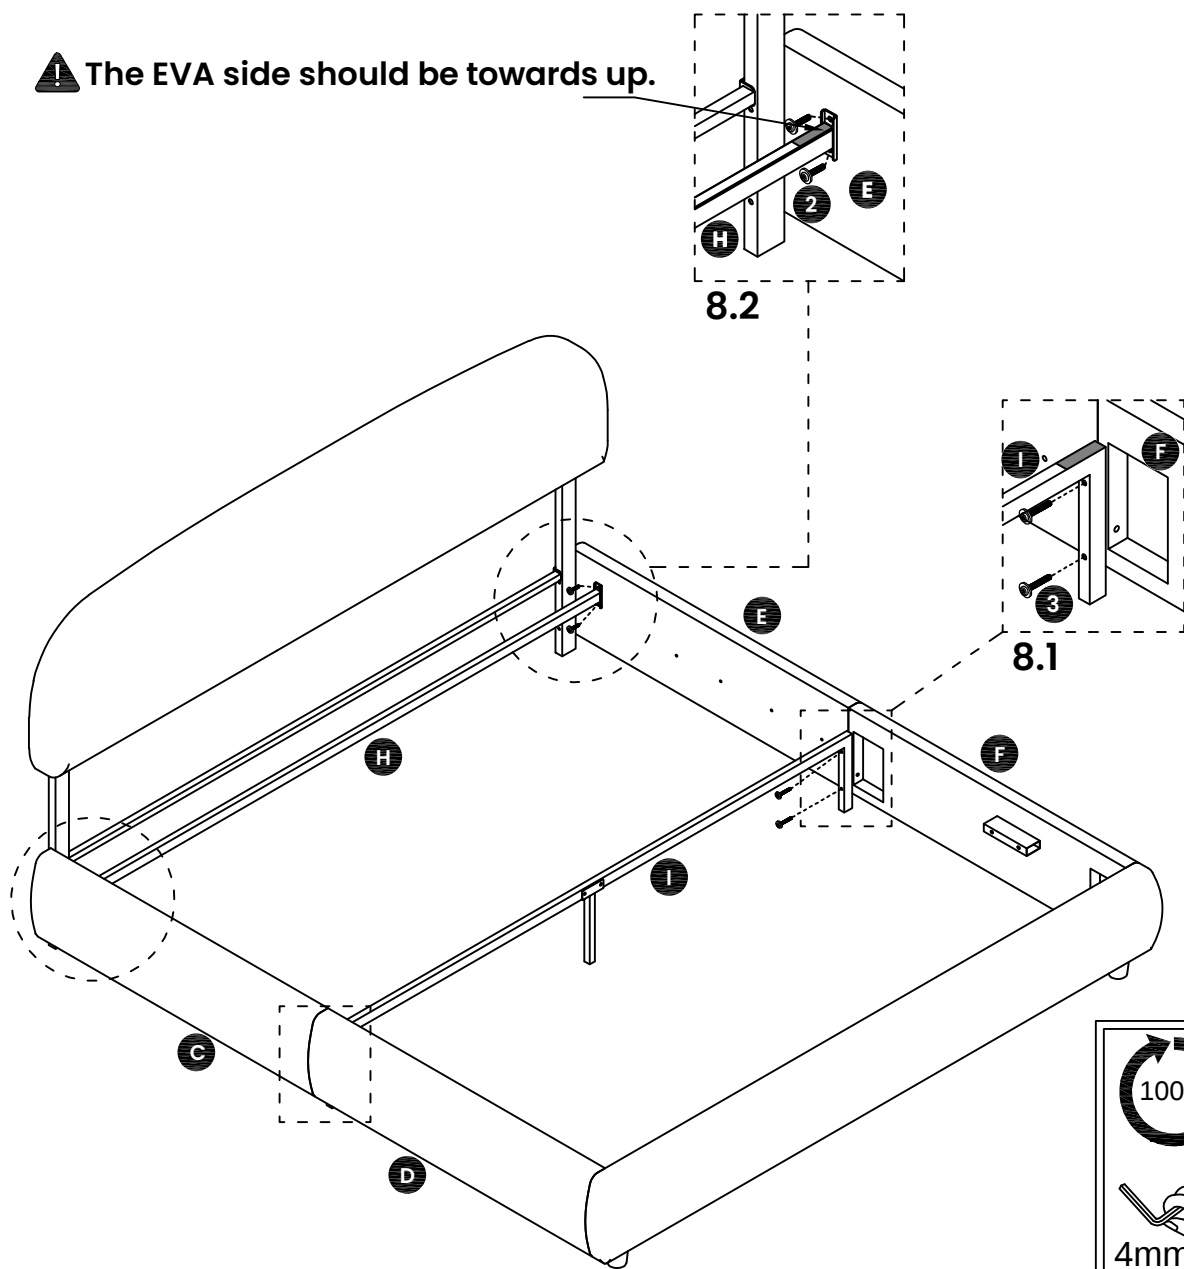


STEP 9



7 X4



Attach one L1 to L with 7, and the other L1 to R with 7.

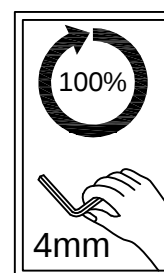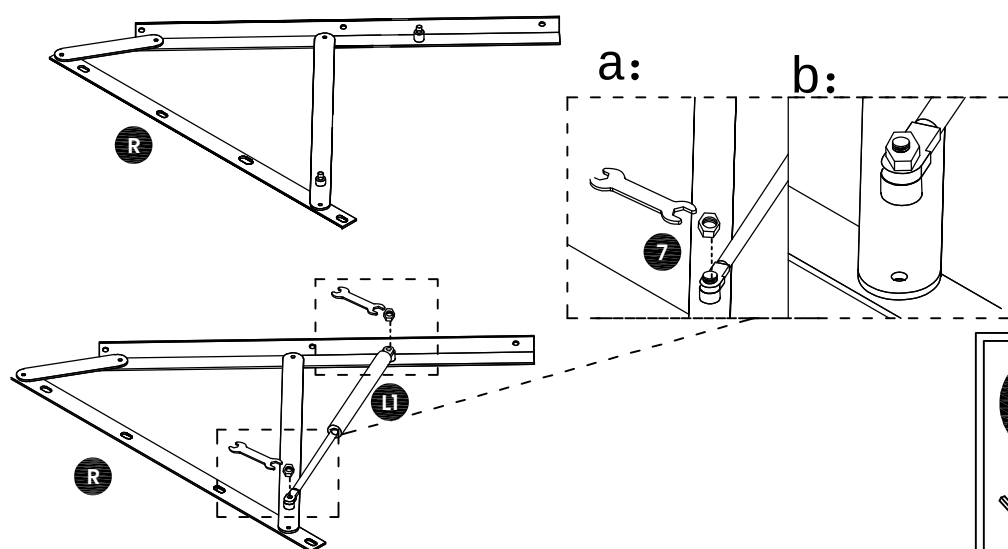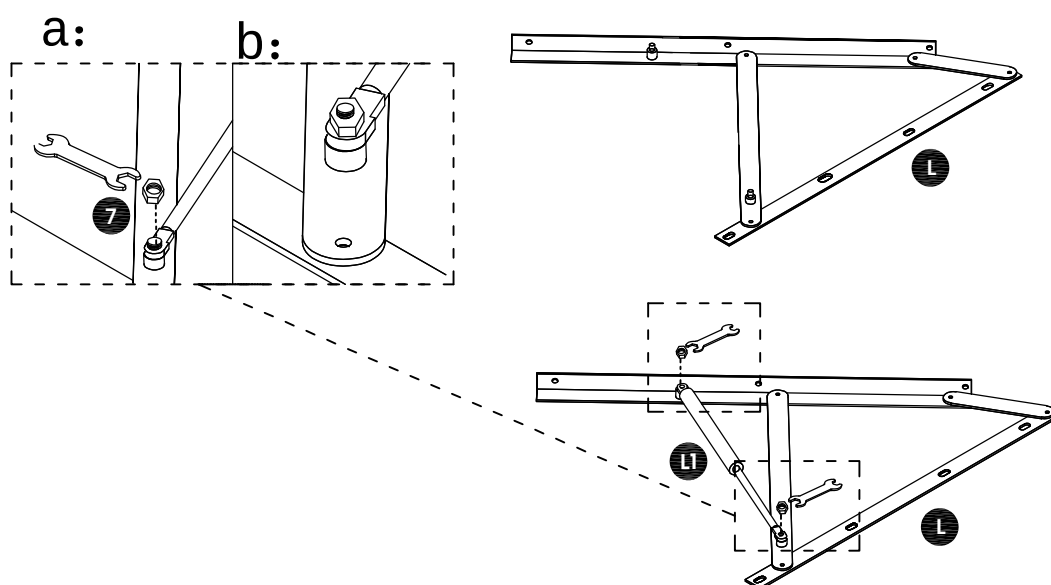


STEP 10



Attach R to E with ②,
Attach L to C with ②.

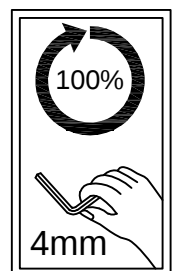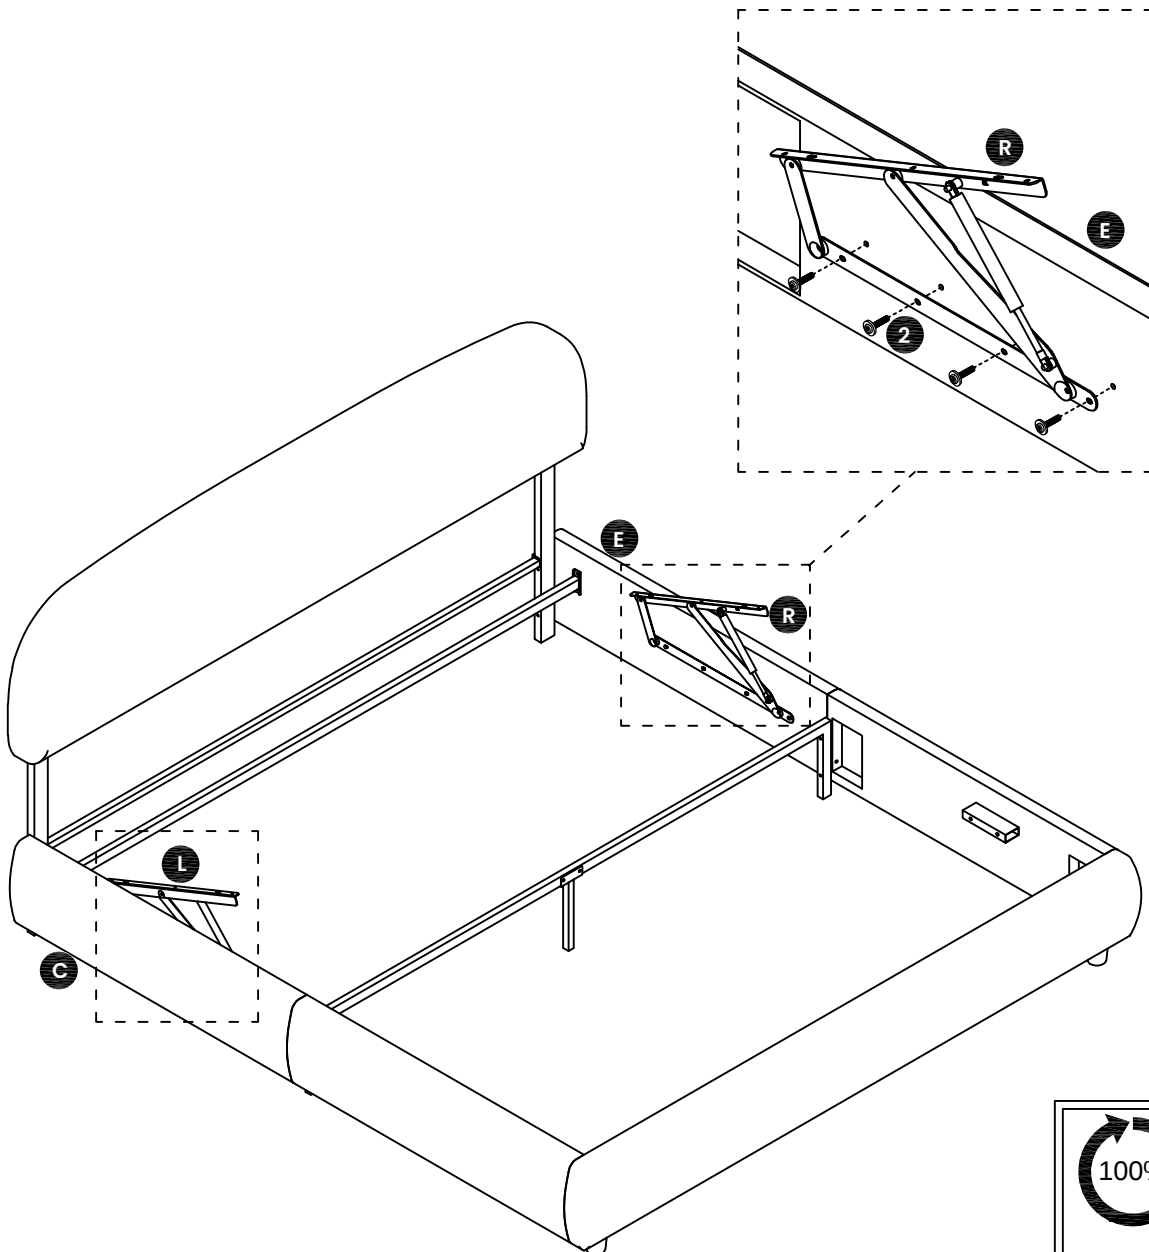


STEP 11



11.1 Attach W×2 to Y, and X to S.

11.2 Attach O×2 to M with 6.


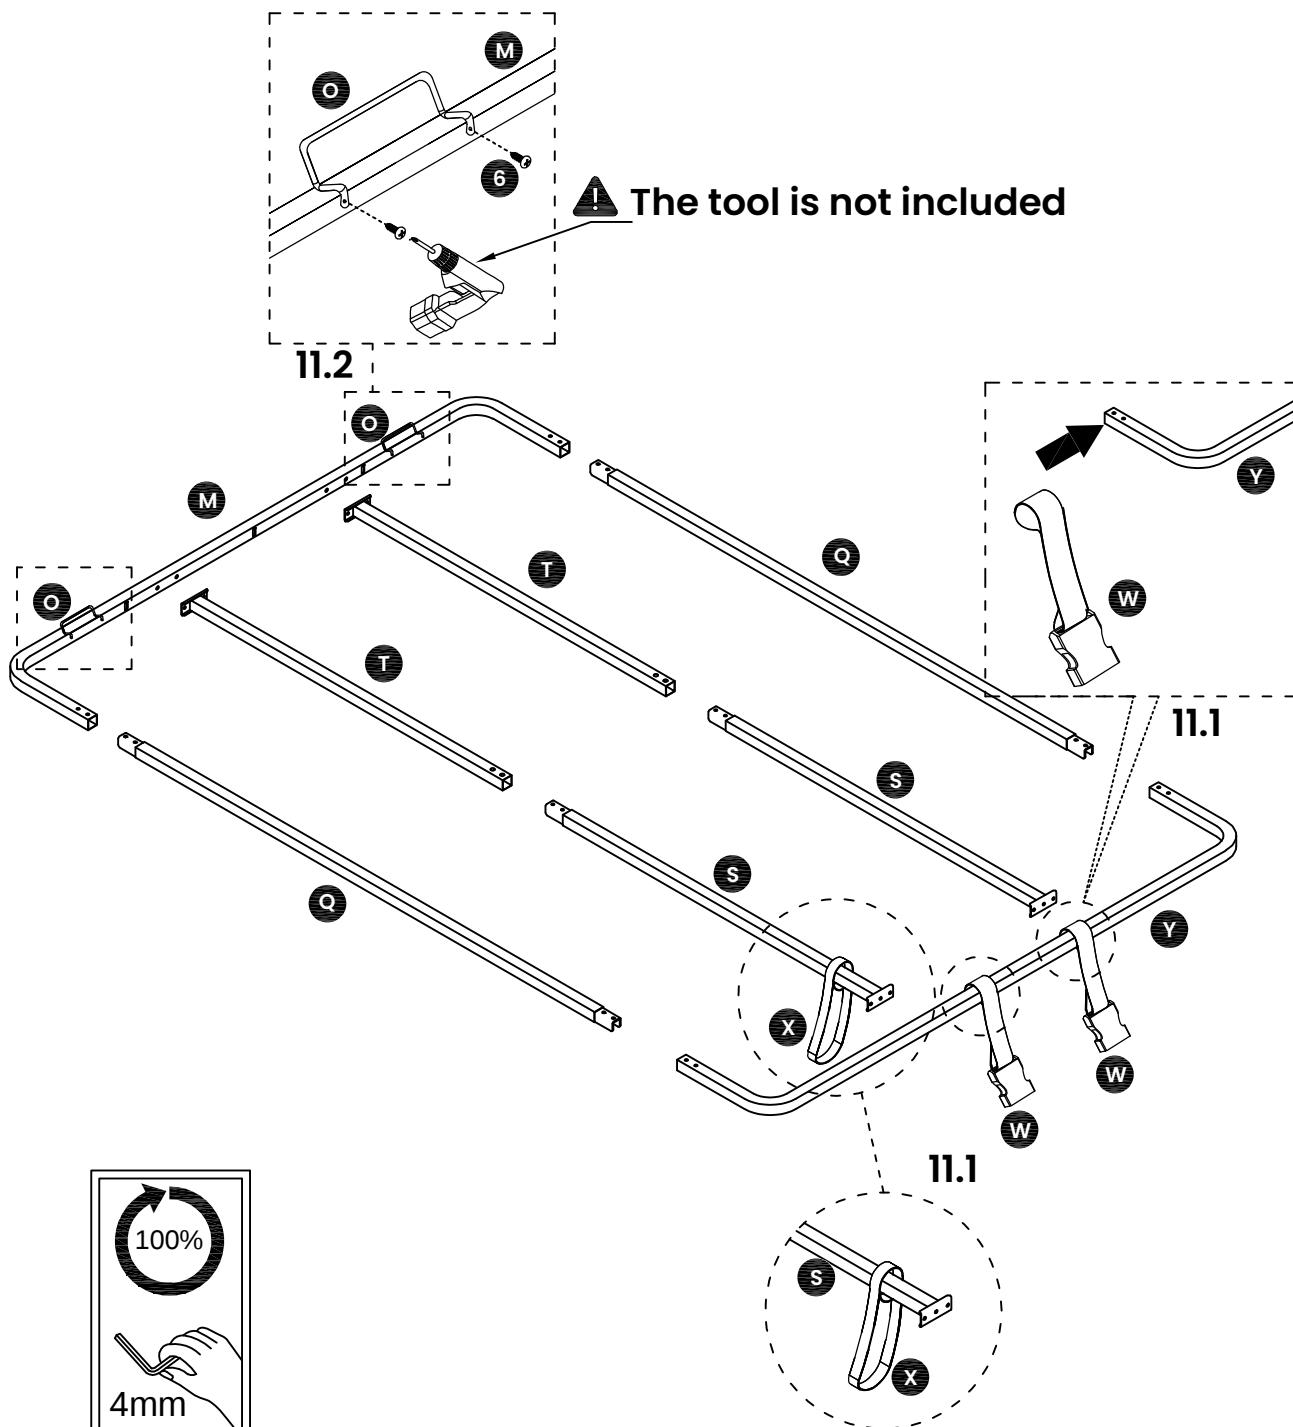


STEP 12




- 12.1 Attach S×2 to T×2 with ② .
 12.2 Attach M and Y to Q×2 with ② .
 12.3 Attach S×2&T×2 to M and Y with ② .

⚠ Note: The holes on ④ are downwards and close to ③ after assembly.


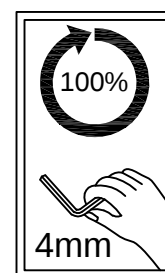
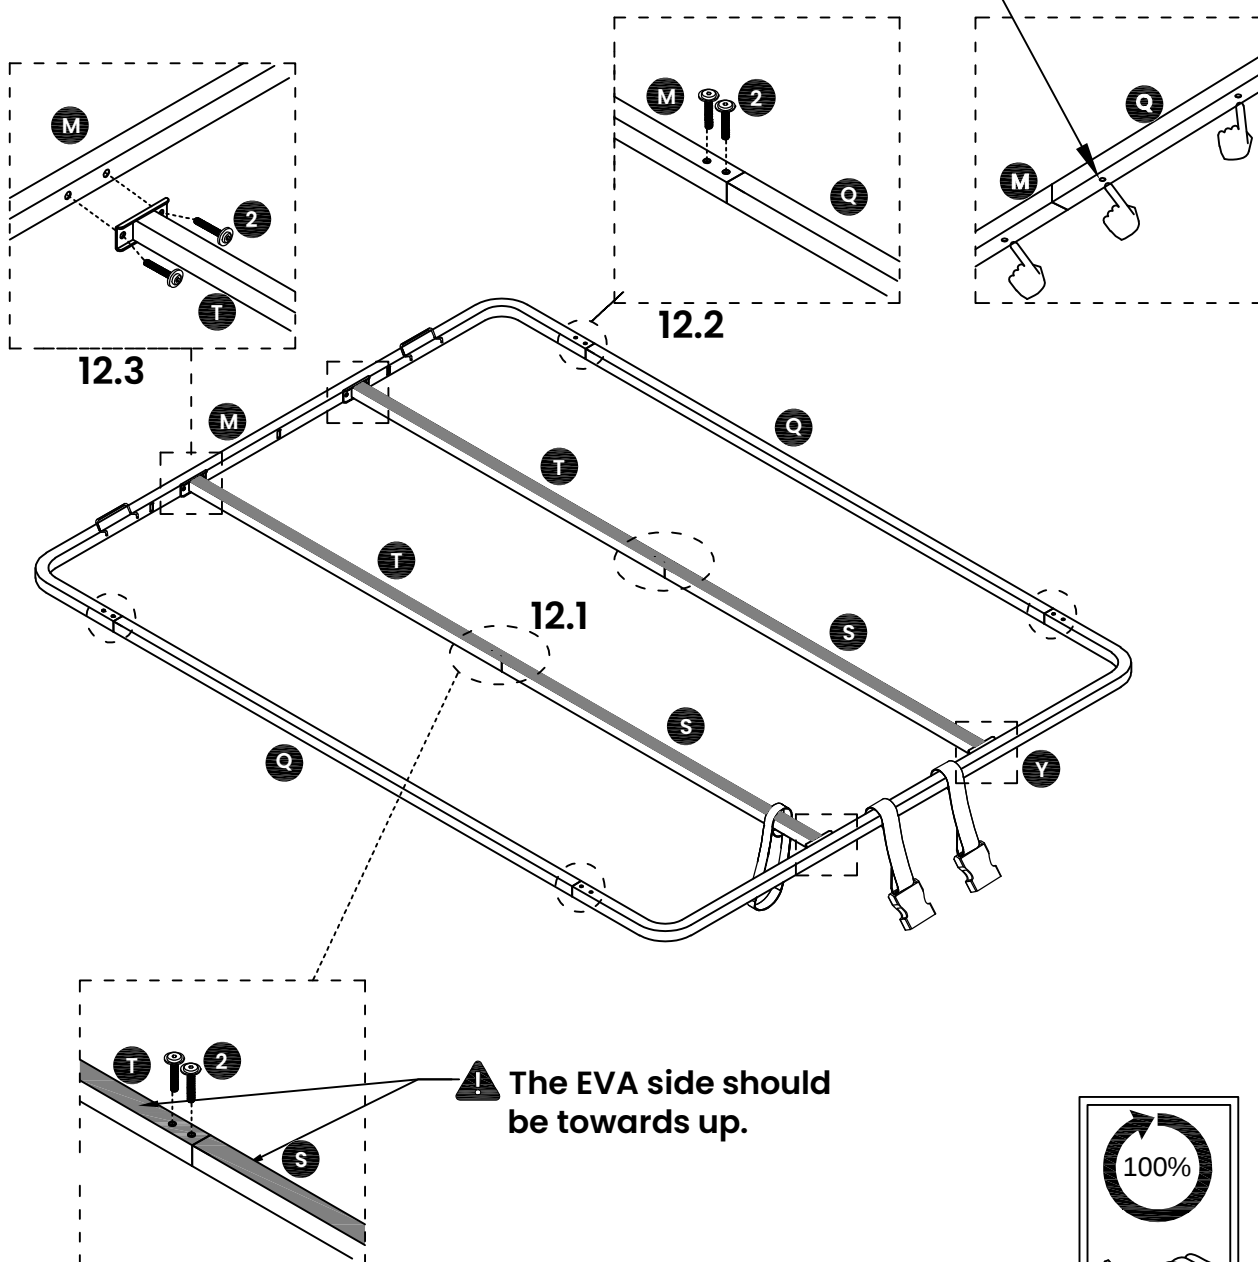


STEP 13



1 X6


Attach Q to R and L with **1**.

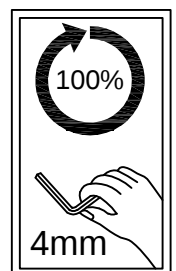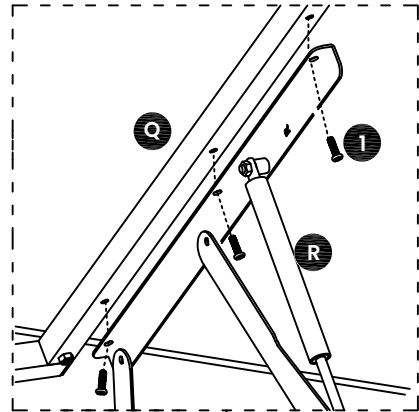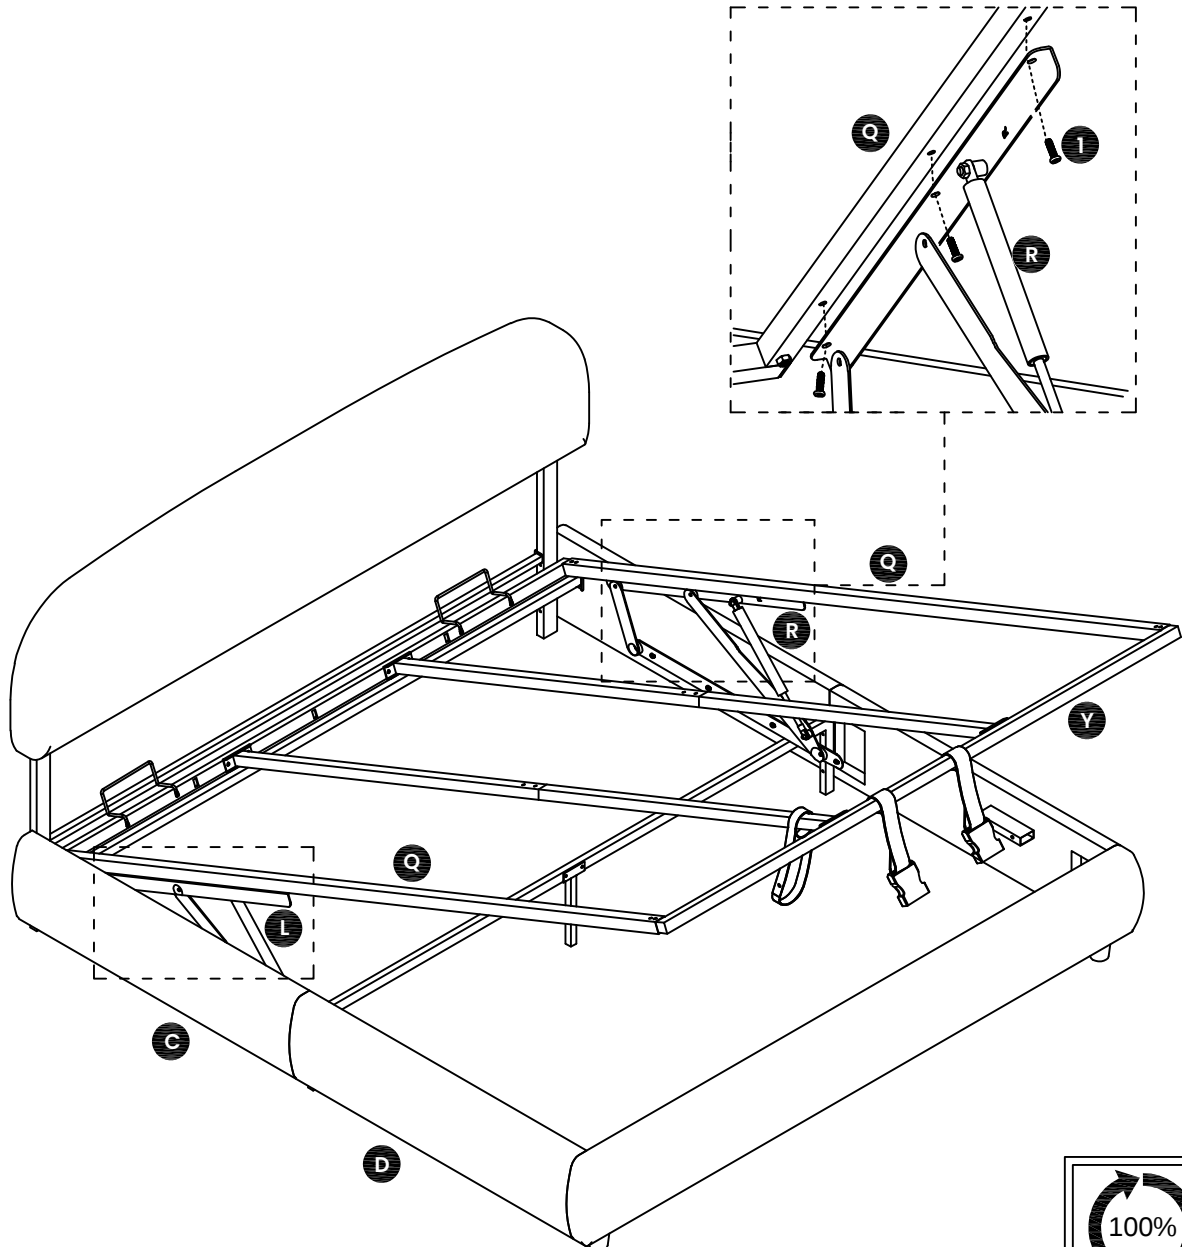


STEP 14

14.1 Attach one end of P6 to M by inserting the tab into the slot and turn it to the level position.


14.2 Spread the slats P6 along the bed with equal spacing, engage the velcro at the end of slat with the counter part on Q.

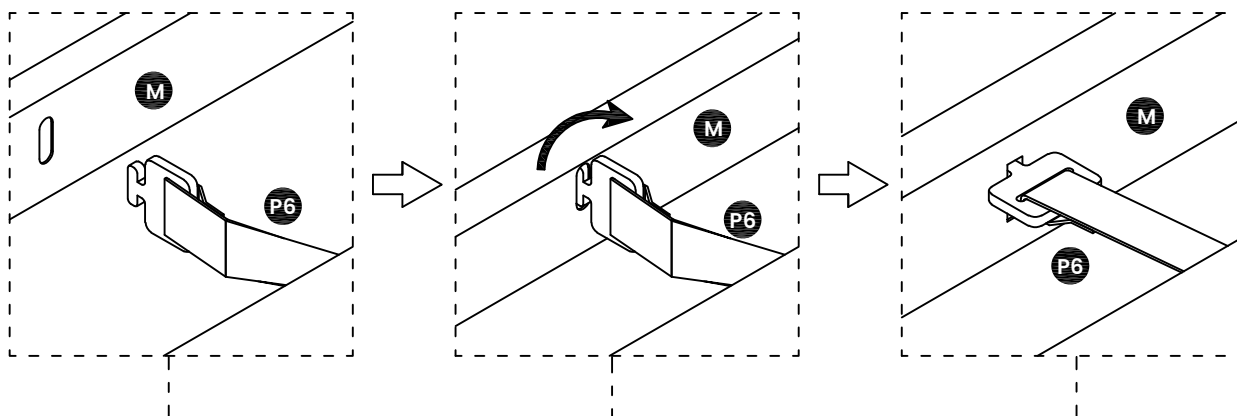

14.1

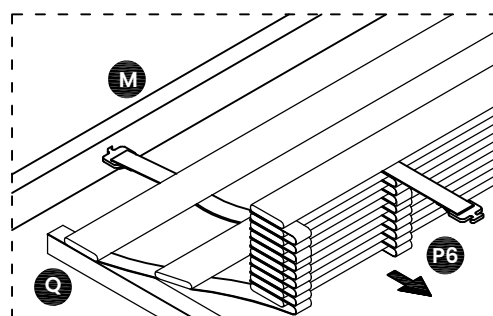


14.2

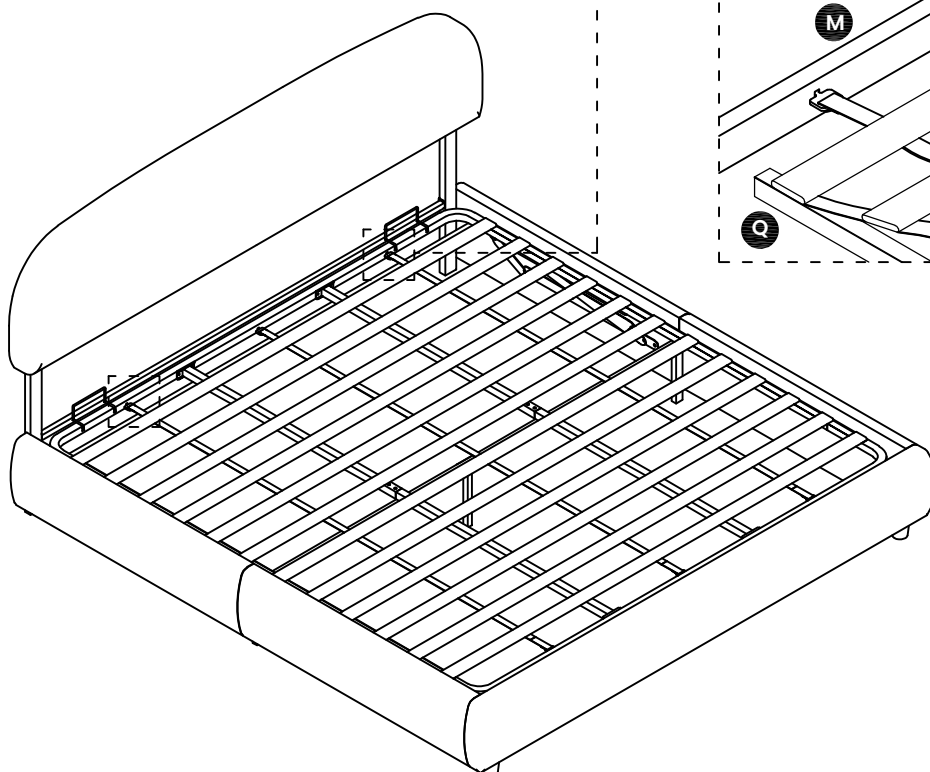


STEP 15


Attach the other end of P6 to Y by inserting the tab into the slot and turn it to the level position.

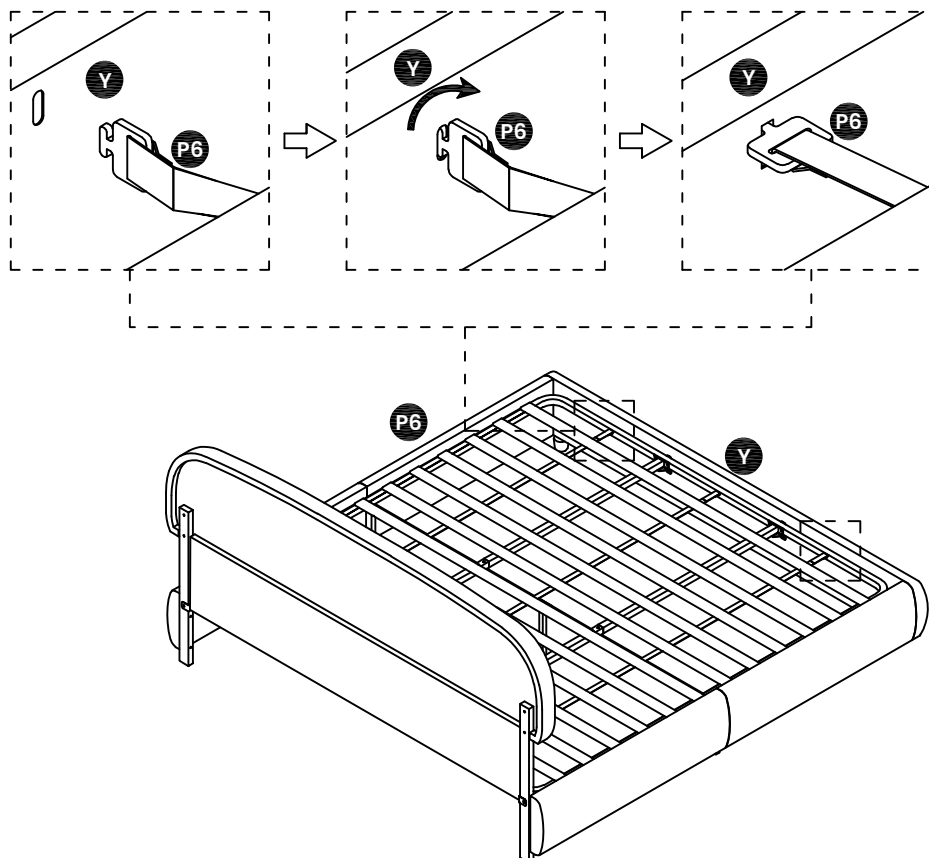

STEP 16

Attach N to A by its velcro.

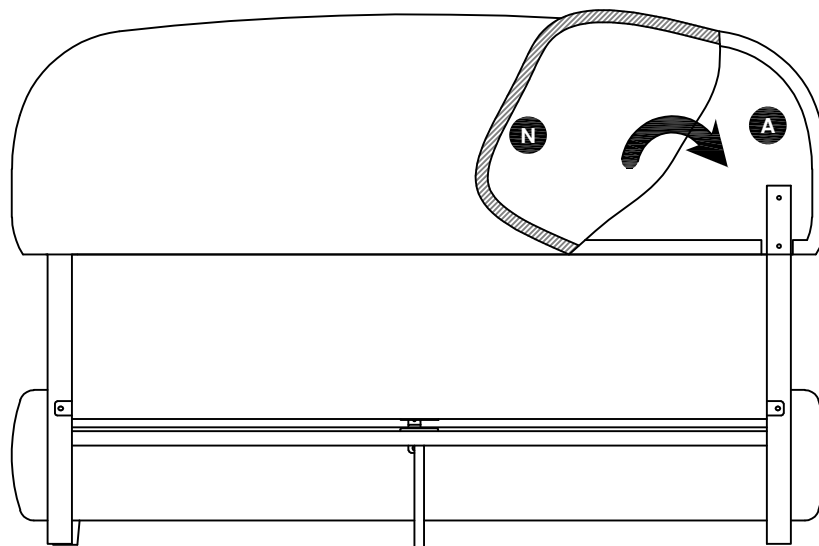


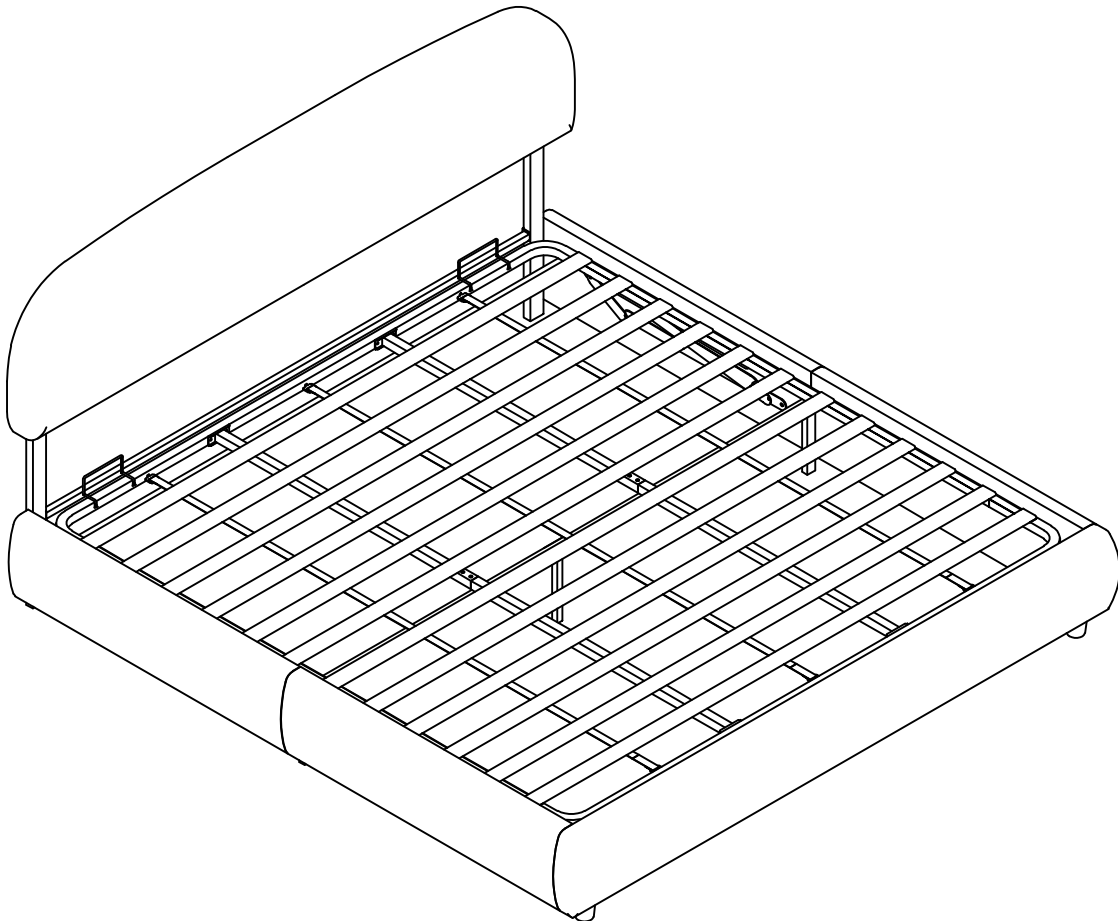

Weight limit:

Bed: 1000LBS/454KG

That's it! You've finished assembling your Bed with Storage!

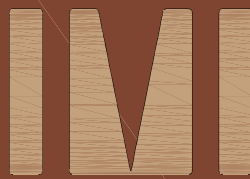

ModernMate