


ASSEMBLY INSTRUCTIONS

CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.

1. SCREW THE THREADED ROD (B) INTO LAMP BODY SECTION (A).
2. PUT WASHER (C) INTO THE THREADED ROD (B).
3. PUT THE SHADE (D) OVER THREADED ROD (B). THEN PUT WASHER (E) ON THE SHADE (D) TOP ,AND TIGHTEN FINIAL (F) SECURING THE SHADE IN PLACE.
4. INSTALL BULB (NOT INCLUDED) INTO THE SOCKET.
- 5.INSERT THE POWER PLUG INTO AN OUTLET AND ENJOY!!
6. NIGHT LIGHT REPLACEMENT:
PULL OUT THE BUTTERFLY NUT WITH SOCKET PART (G) FROM THE BOTTOM OF THE BASE,
CHANGE THE BULB (H).

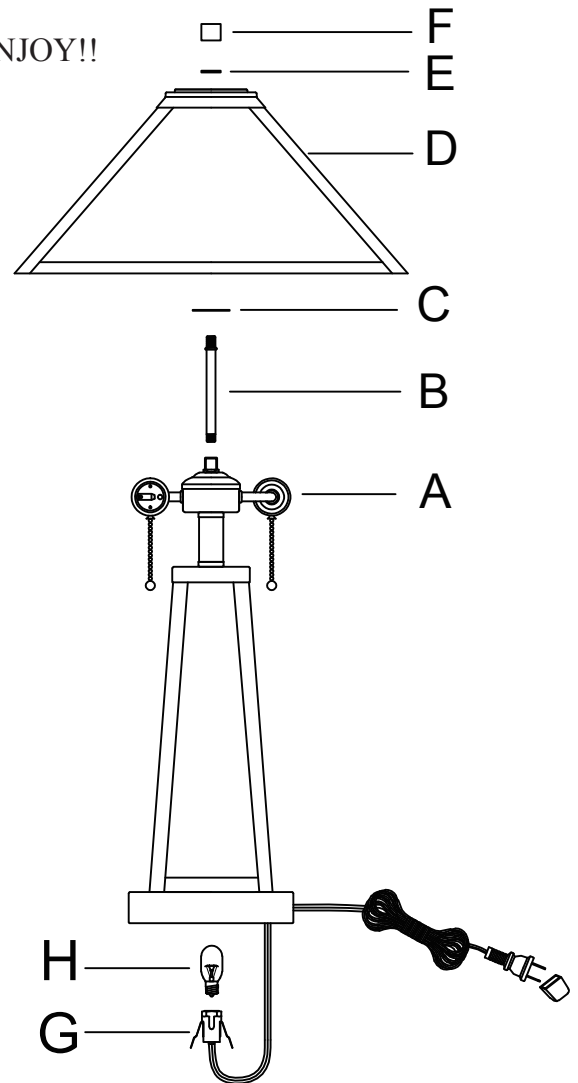

Use MAX 2 x 60 Wattage Type A bulb (bulb not included)
1 x 7W Type C bulb (bulb included)

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.