


Model No.  
Twin Platform  
Bed

CLOTH  
& COMPANY

Components

Please note: actual bed may look different than illustration.

| Item | Description     | QTY | Item | Description                                    | QTY |
|------|-----------------|-----|------|------------------------------------------------|-----|
| A    | Metal corners   | 4   | E    | Center support rail                            | 1   |
| B    | Metal side rail | 2   | F    | Center support leg                             | 1   |
| C    | Metal end rail  | 2   | G    | Upholstered side rail                          | 2   |
| D    | Corner leg      | 4   | H    | Upholstered foot rail                          | 1   |
|      |                 |     | I    | Wooden slat roll<br>(located in headboard box) | 1   |
|      |                 |     | J    | Headboard                                      | 1   |

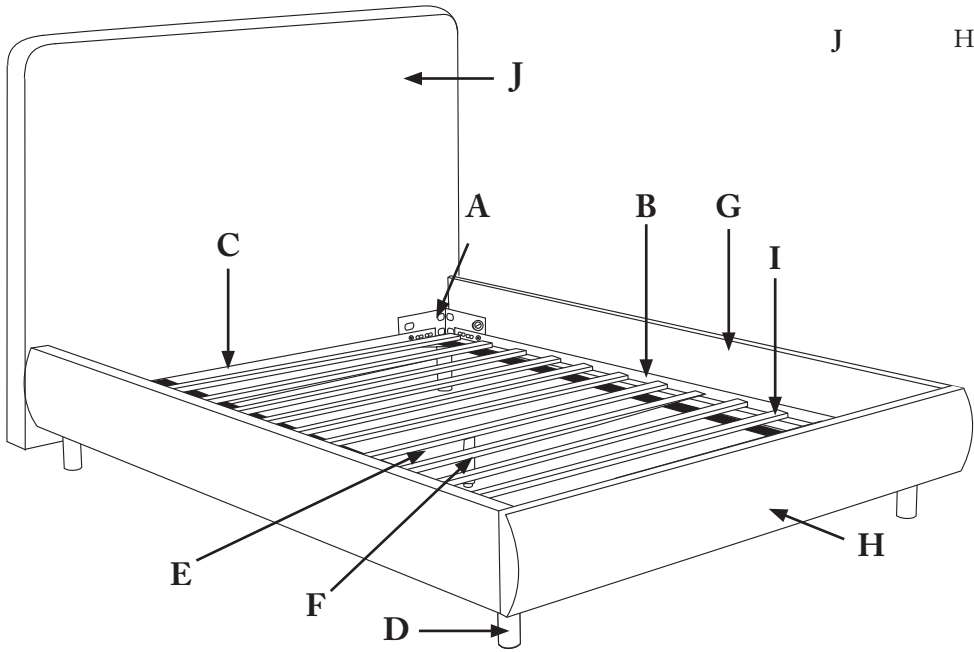

Bed Frame Hardware

|                            |                              |                               |                                     |                            |                                      |                              |
|----------------------------|------------------------------|-------------------------------|-------------------------------------|----------------------------|--------------------------------------|------------------------------|
|                            |                              |                               |                                     |                            |                                      |                              |
| (H1) x 10<br>1/4" bolt     | (H2) x 20<br>1/4" nut        | (H3) x 4<br>3/4" x 5/16" bolt | (H4) x 4<br>3/4" washer larger hole | (H5) x 5<br>1" x 1/4" bolt | (H6) x 7<br>3/4" washer smaller hole | (H7) x 18<br>1" x 5/16" bolt |
|                            |                              |                               |                                     |                            |                                      |                              |
| (H8) x 22<br>1 1/4" washer | (H9) x 1<br>Smaller L wrench | (H10) x 1<br>Larger L wrench  | (H11) x 1<br>Wrench                 | (H12) x 8<br>3/4" screw    | (H13) x 2<br>L bracket               | (H14) x 4<br>3" x 5/16" bolt |


Please note: you will need a flat head screwdriver to assemble your bed frame. This assembly requires two people. 1

Model No.  
**Twin Platform  
Bed**

**CLOTH**  
& COMPANY


**Step 1 - Building the metal bed frame**

---

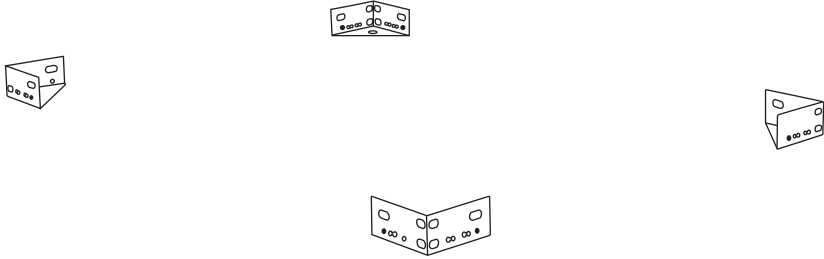


**1.1**

Place (A) metal corners in a rectangular shape roughly the size of your mattress.

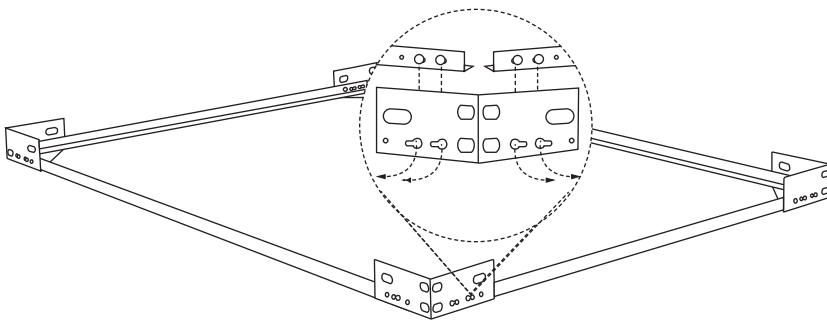

**1.2**

Lay (B) and (C) metal rails into (A) metal corners to create the shape of your bed frame. Snap into place.

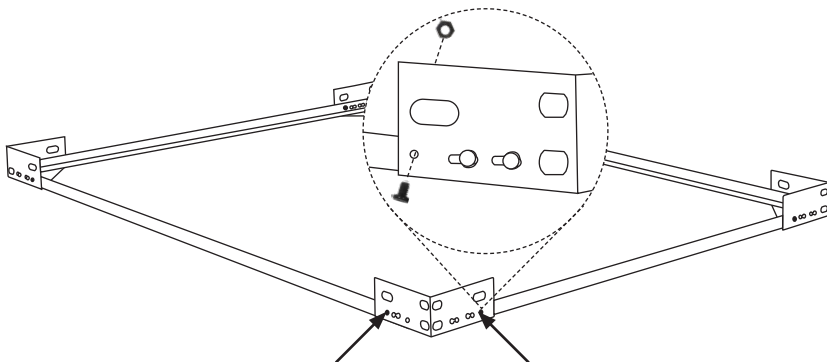

**1.3**

Secure (B, C) metal rails to (A) metal corners using (H1) bolts and (H2) nuts. Tighten using (H9) L wrench and (H11) wrench.


Please note: (H2) nuts should be on the inside of the frame.

Model No.  
**Twin Platform  
Bed**

**CLOTH**  
& COMPANY

**Step 1 - Building the metal bed frame**

---

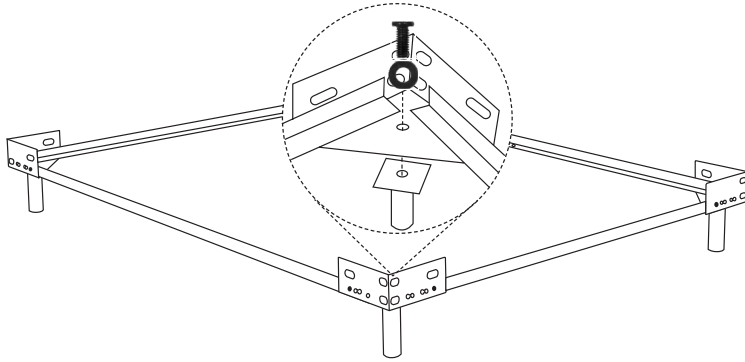


**1.4**

Attach (D) wood legs to (K) headboard and (H) upholstered foot rail using (H8) washer.

**Step 2 - Support frame**


---

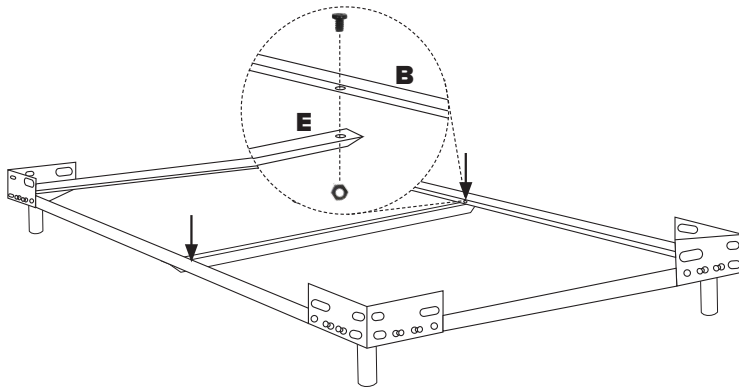

**2.1**

Align holes of (E) center support rail with holes on (B) metal side rails. Attach using (H1) bolts and (H2) nut. Tighten using (H9, H11) wrenches.

Please note: (E) center support rail attaches underneath (B) metal side rails.

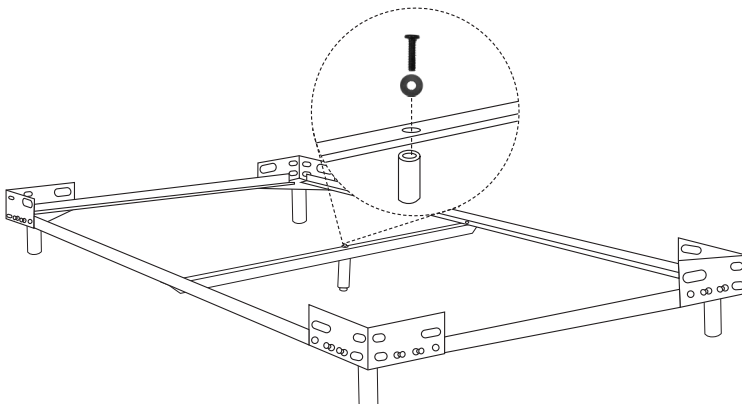

**2.2**


Attach (F) center support legs to (E) center support rail using (H5) bolts and (H6) washer. Tighten using (H9) L wrench.

Model No.  
**Twin Platform  
Bed**

**CLOTH**  
& COMPANY

**Step 2 - Support frame**

---

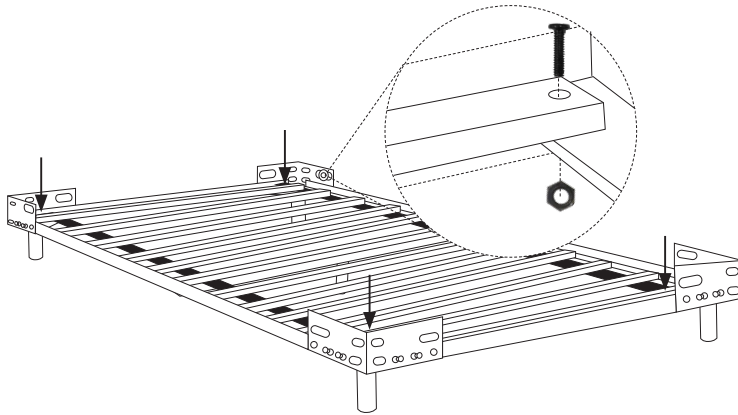

**2.3**

Carefully place the (J) wooden slat roll onto the bed frame. Attach using (H5) bolts and (H2) nuts. Tighten with (H9, H11) wrenches.


Please note: The black band that holds the slats together should face the floor.

Model No.  
**Twin Platform  
Bed**

**CLOTH**  
& COMPANY

**Step 3 - Attaching upholstered side rails and footrail**


---

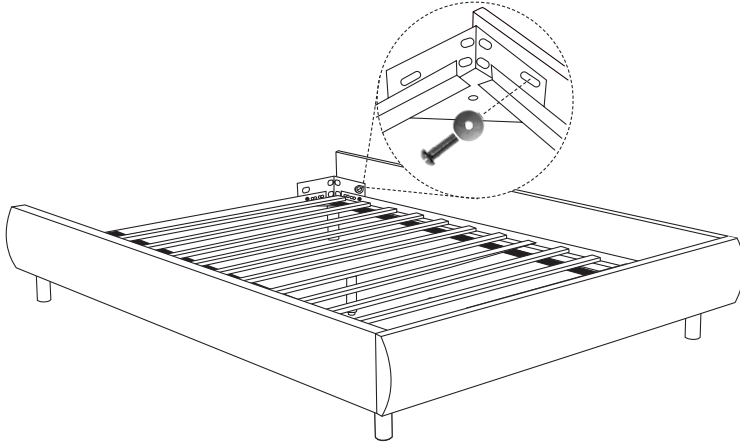

**3.1**


Loosely attach (G, H) upholstered rails to bed frame using (H7) bolts and (H8) washers.

Please note: when attaching, the longer side of (G) rail should face the ground.

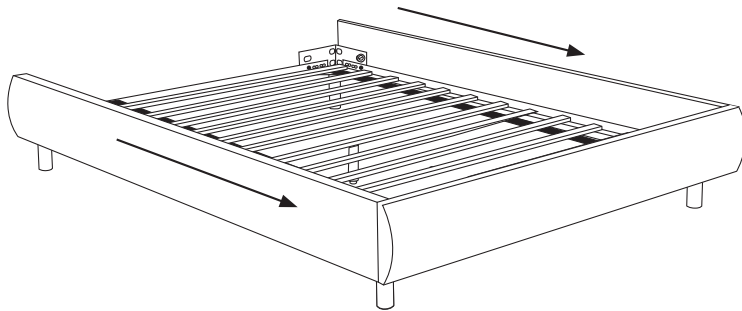

**3.2**

Push (G) upholstered side rails toward (H) upholstered foot rail to eliminate any gaps. Tighten (G) upholstered side rails first, then (H) upholstered foot rail using flat head screwdriver.

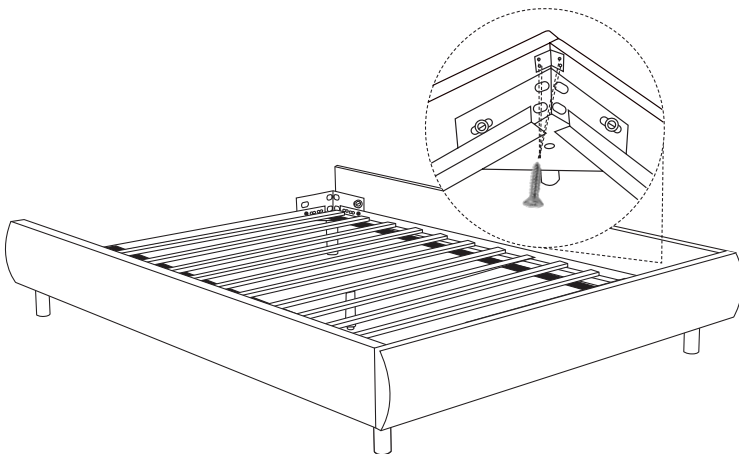

**3.3 (Optional)**

To reinforce stability of (G, H) upholstered rails, use a phillips screwdriver to attach (H13) L brackets using (H12) screws.

Please note: this requires screwing (H12) directly into the upholstered side rail.

Model No.  
**Twin Platform  
Bed**


**CLOTH**  
& COMPANY

**Step 4 - Attaching upholstered headboard**

---

**4.1**

Tightly attach (K) headboard to the metal bed frame using (H14) bolts, (H8) washers and a flat head screwdriver.

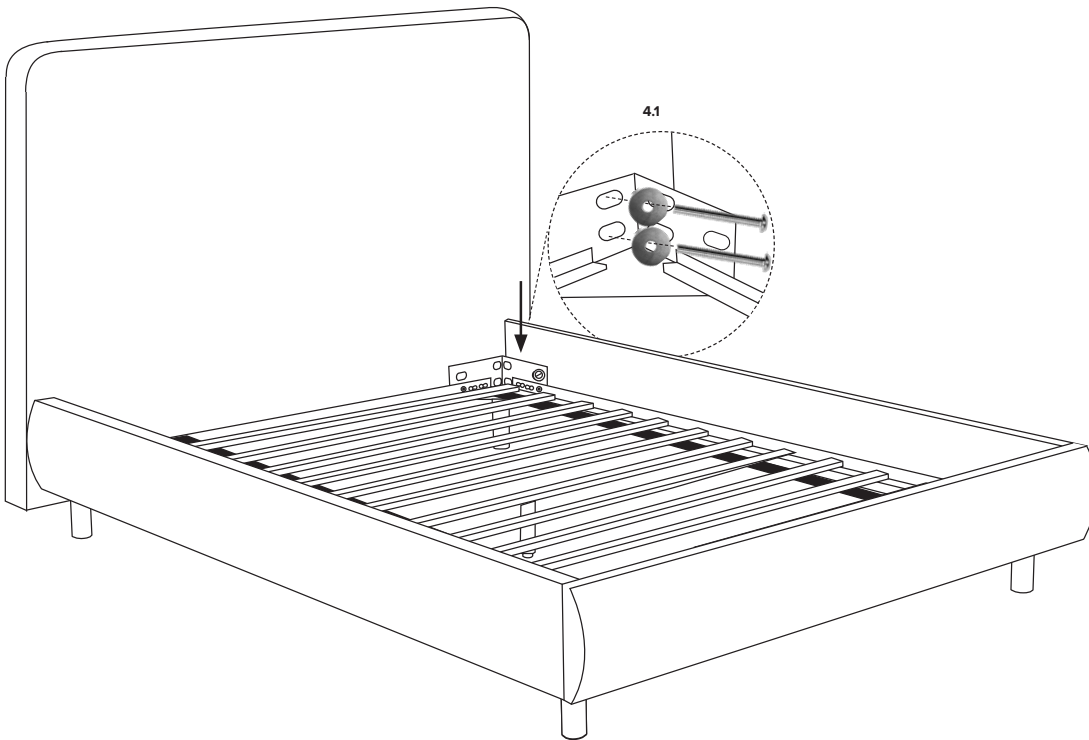

Model No.  
**Twin Platform  
Bed**

**CLOTH**  
& COMPANY

Limited Warranty

Skyline Furniture Inc. guarantees its upholstered furniture against defects in construction for a period of one (1) year. When a structural defect is brought to our attention, we will repair or replace it at our option at no charge to the customer (includes parts and labor, not transportation costs). Fabric wearability for upholstered furniture is not covered by the warranty. Vacuum for regular cleaning.

PLEASE DISPOSE OF PLASTIC BAG(S)  
AND CARTON(S) RESPONSIBLY.

Limite De Garantia

Skyline Furniture Inc. garantiza sus muebles tapizados contra defectos en construcción por un periodo de un (1) año. Cuando un problema de estructura es traído a nuestra atención, nosotros repararemos o remplazaremos sin ningún cargo a nuestro cliente (incluye partes y trabajo, no costo en transportación). Descoloramiento del material de muebles tapizados no es cubierto por la garantía. Regularmente puede aspirar.

POR FAVOR TIRAR BOLSA(S) Y CAJA(S)  
RESPONSABLEMENTE.

Garantie Limitée

Skyline Furniture Inc. garantit ses meubles rembourrés contre les défauts de construction pendant une période d'un (1) an. Lorsqu'un vice de construction nous est signalé, nous réparons ou remplaçons le meuble, selon notre choix, sans frais pour le client (incluant les pièces et la main-d'œuvre, mais excluant les frais de transport). La durabilité du tissu des meubles rembourrés n'est pas couverte par la garantie. Nettoyer régulièrement avec un aspirateur.

VEUILLEZ JETER LE OU LES SAC(S) EN  
PLASTIQUE ET BOÎTE(S) DE FAÇON  
RESPONSABLE.

