




87015 Product Installation Instructions

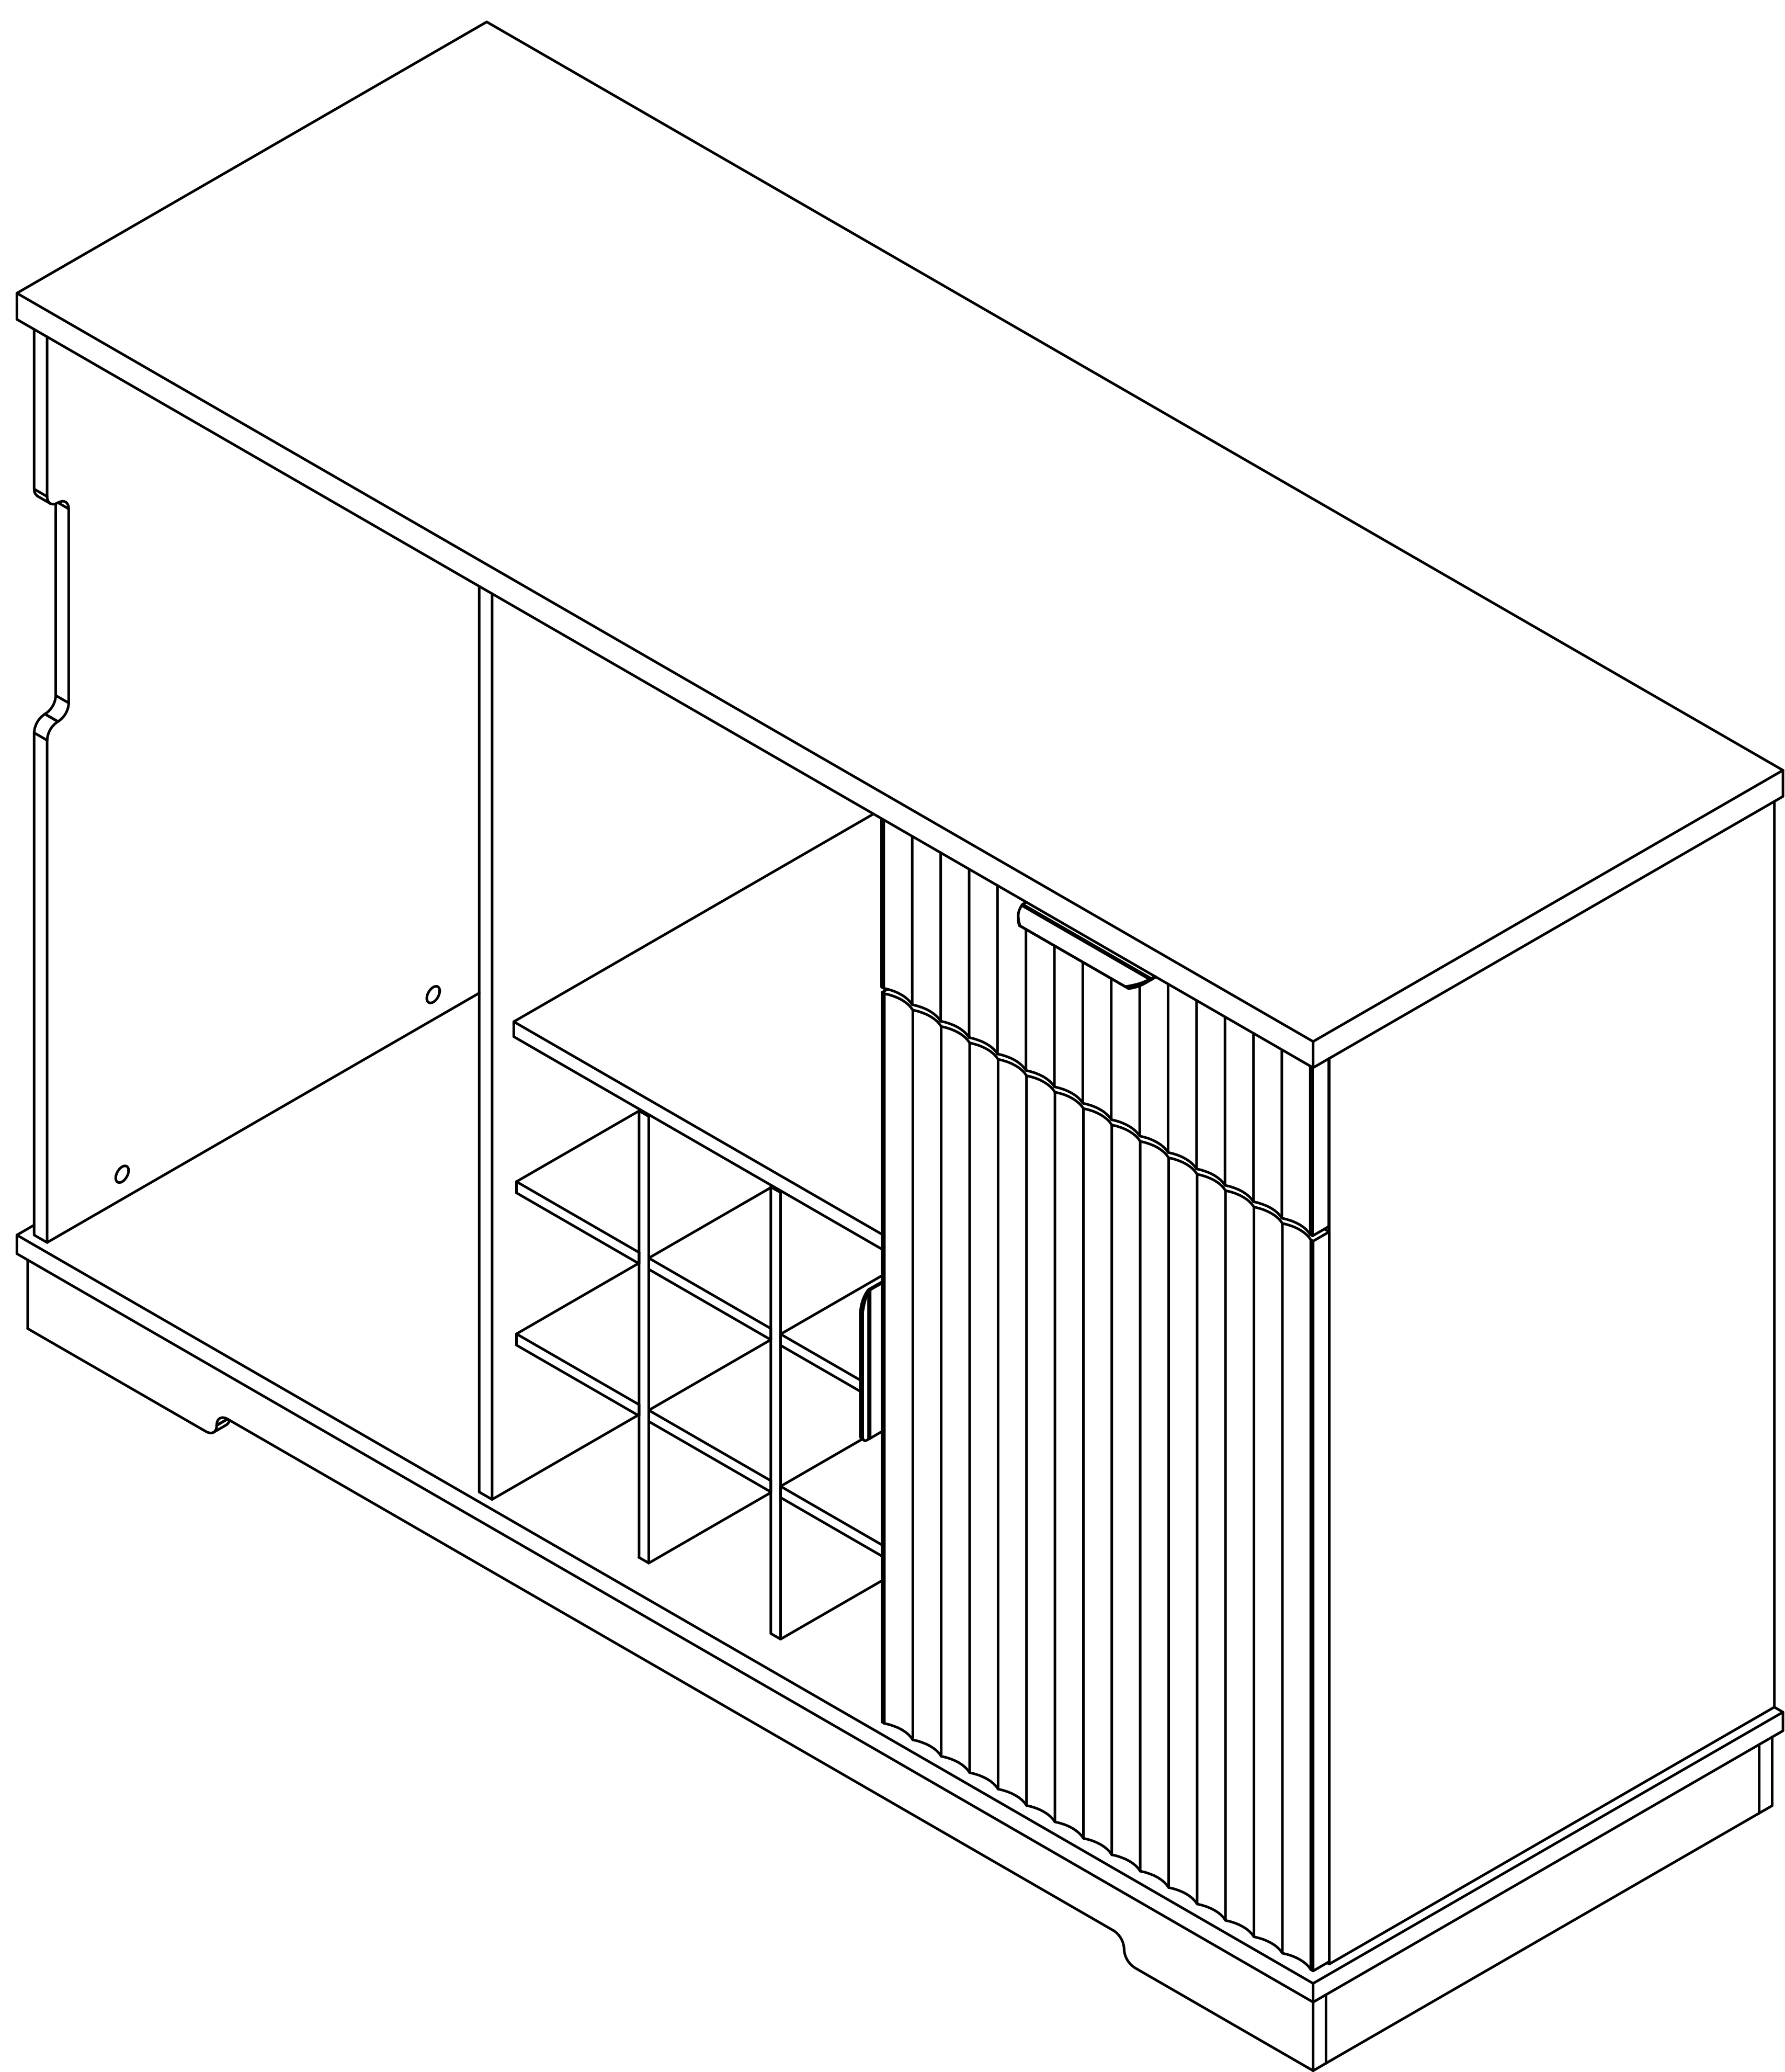


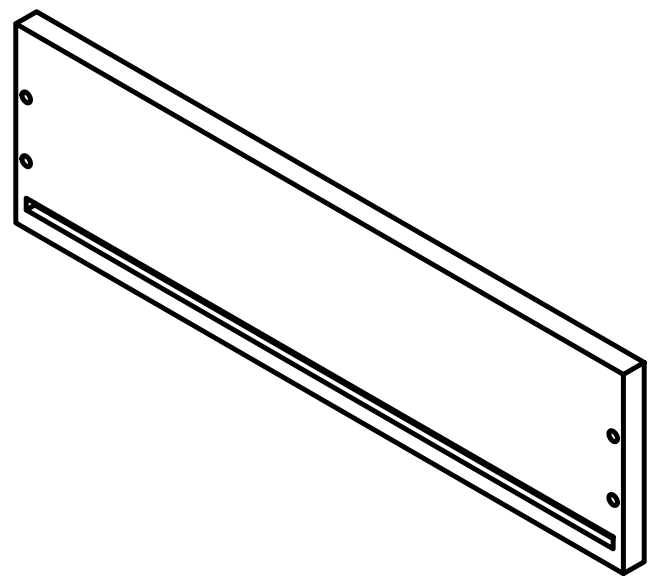


Ax1

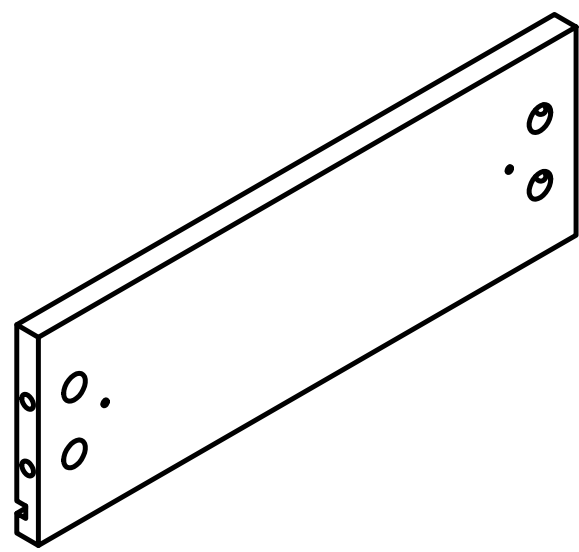


Bx2

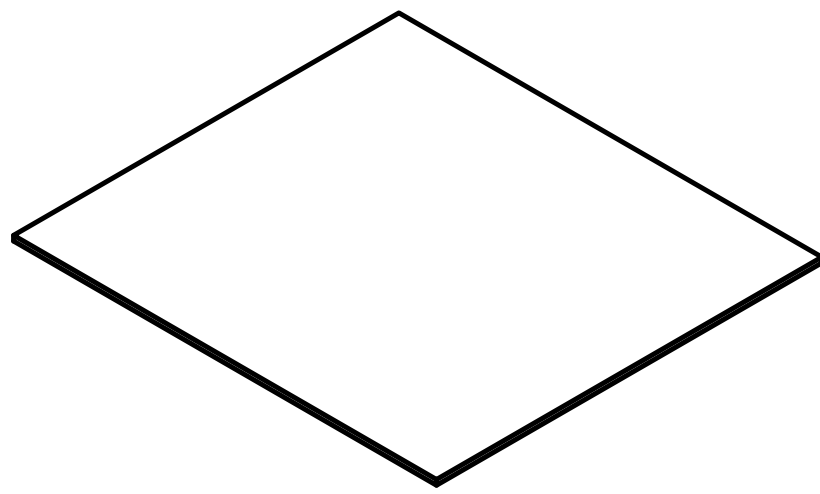


Cx1

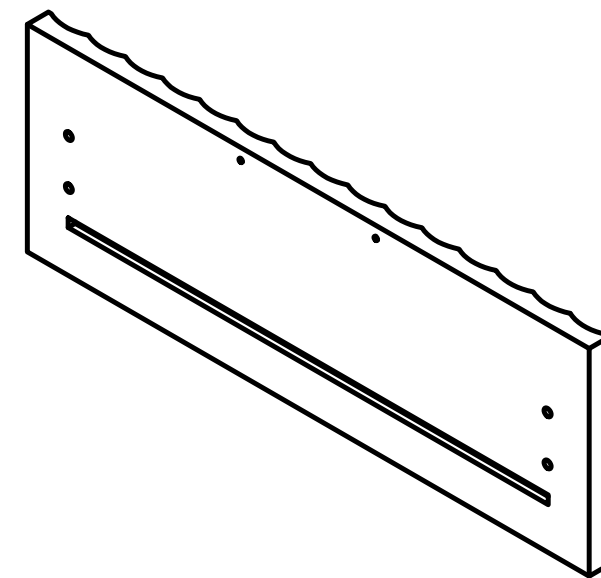


Dx1

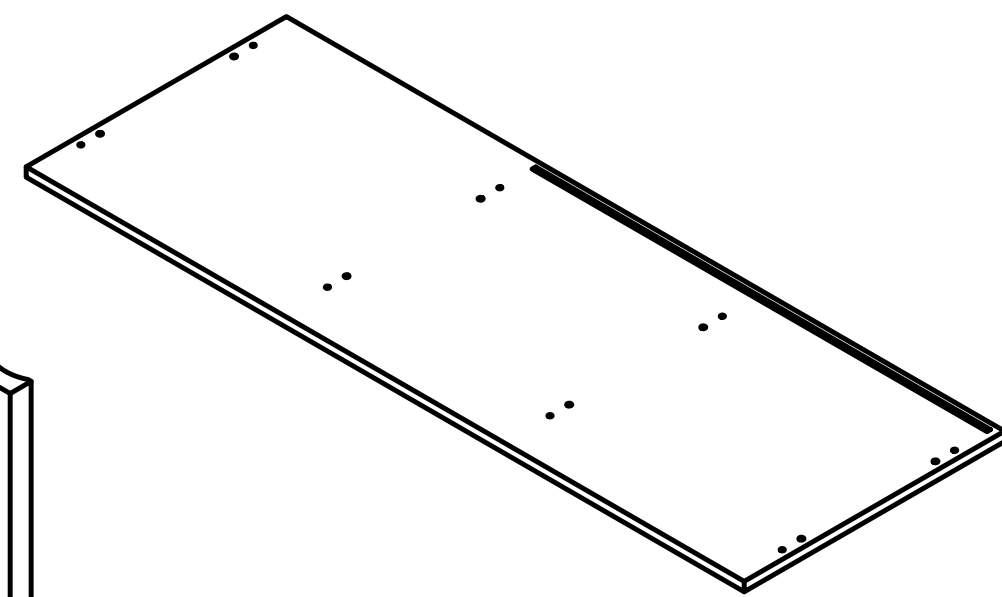


Ex1

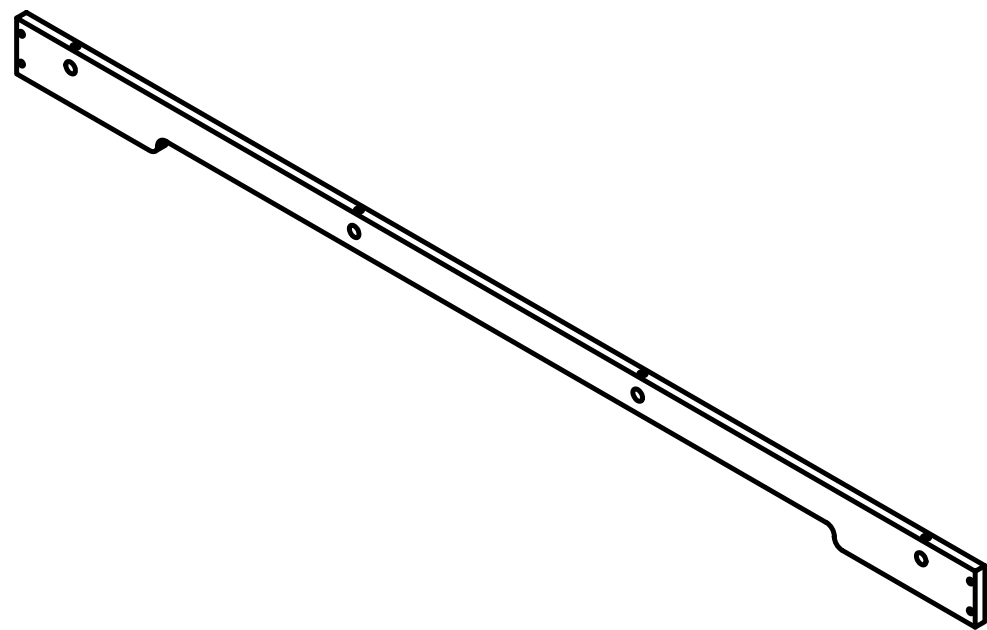


Fx1

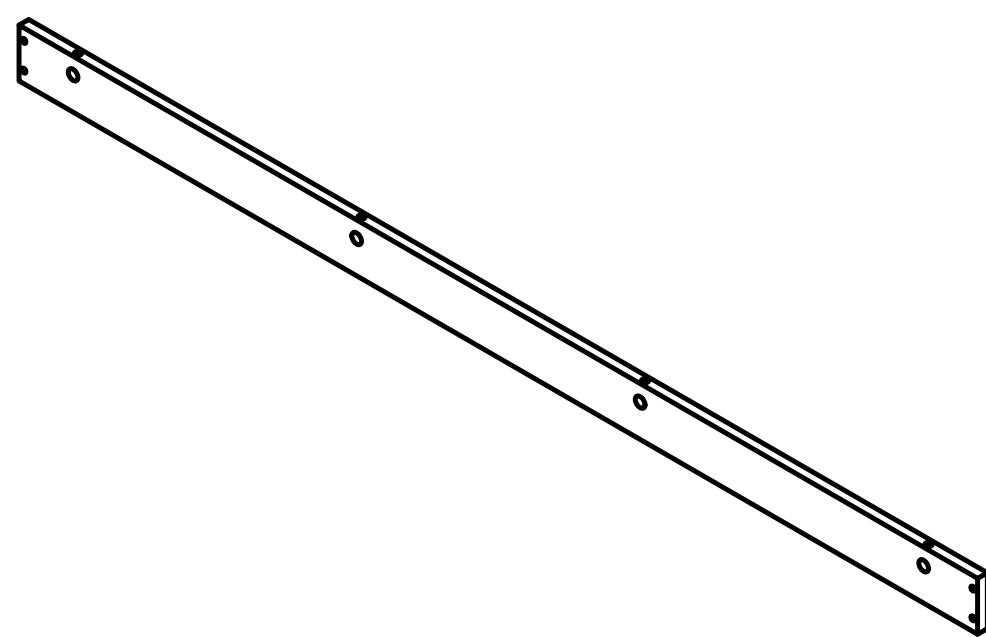


Gx1

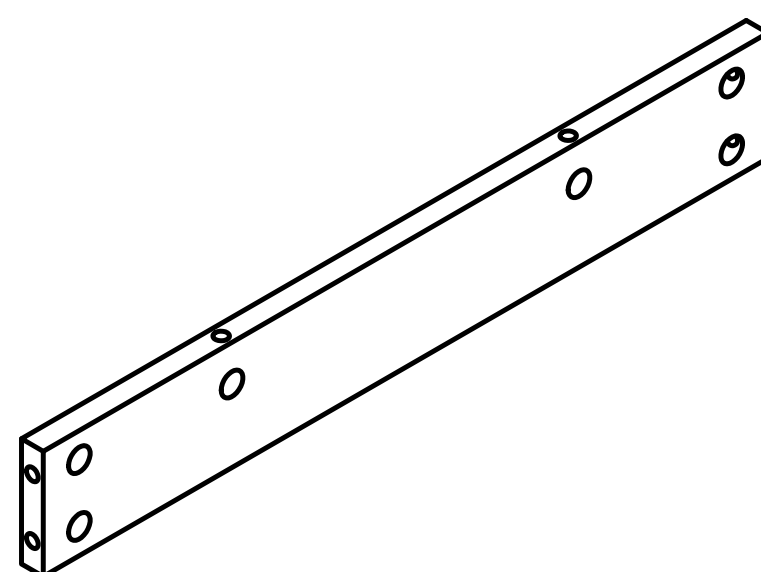


Hx2

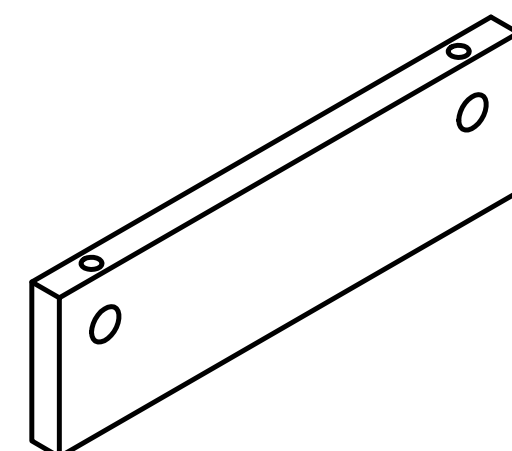


Ix2

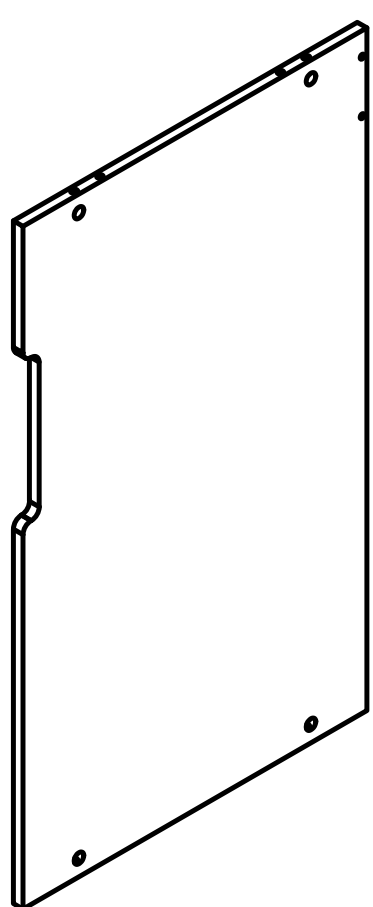


Jx1

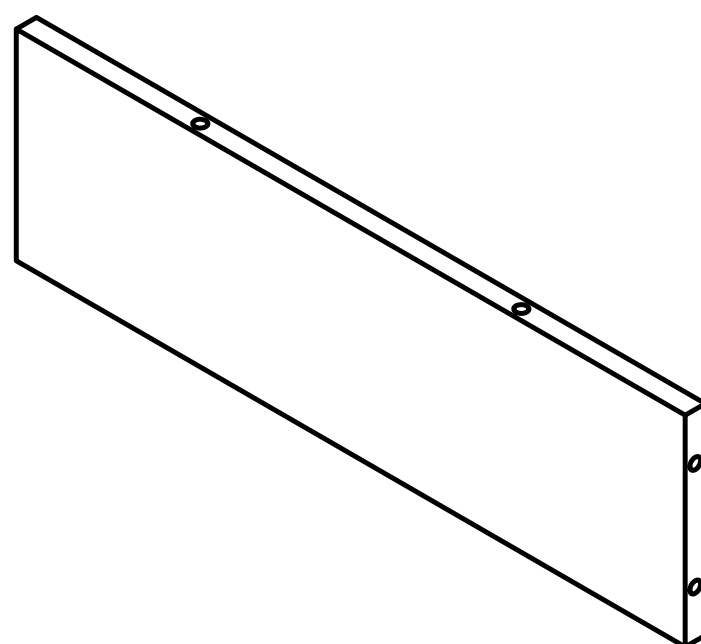


Kx1

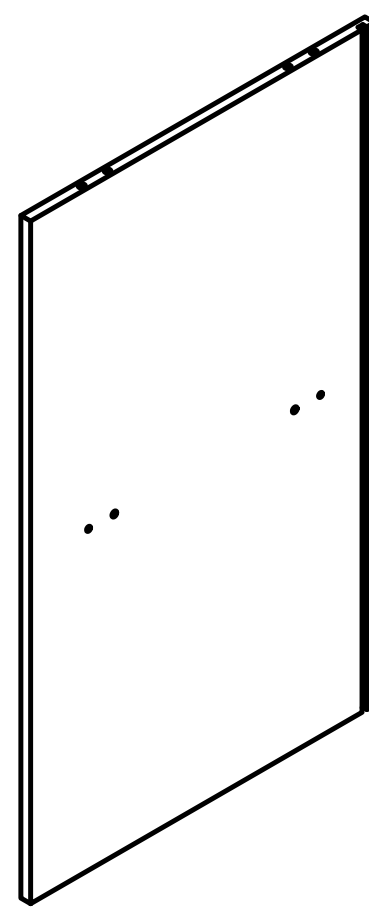


Lx1

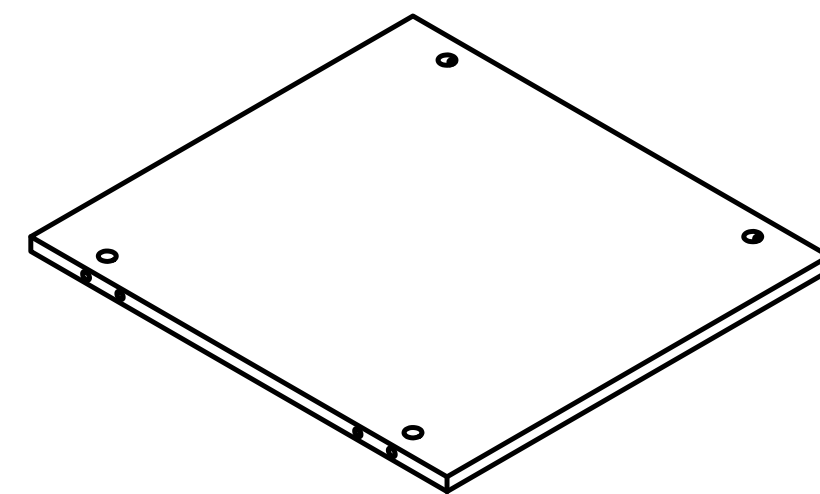


Mx1

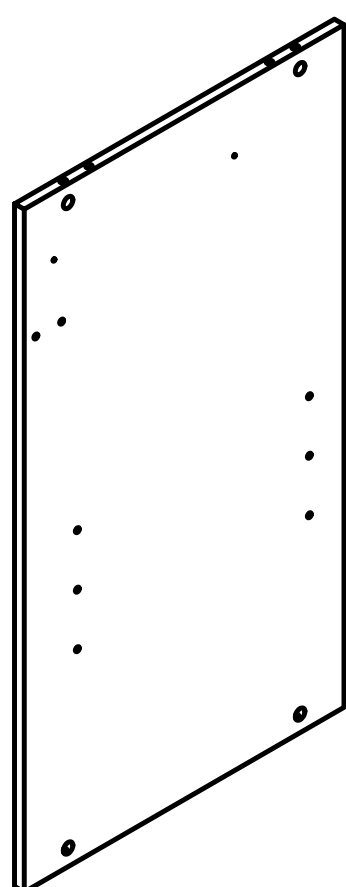


Nx1

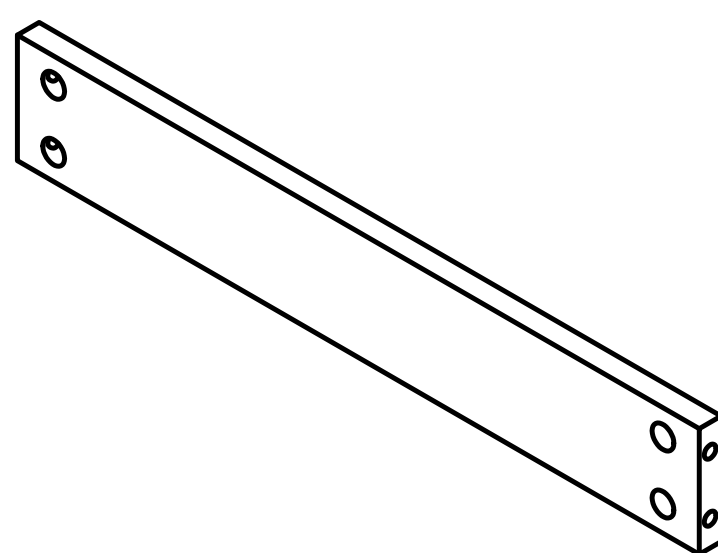


Ox1

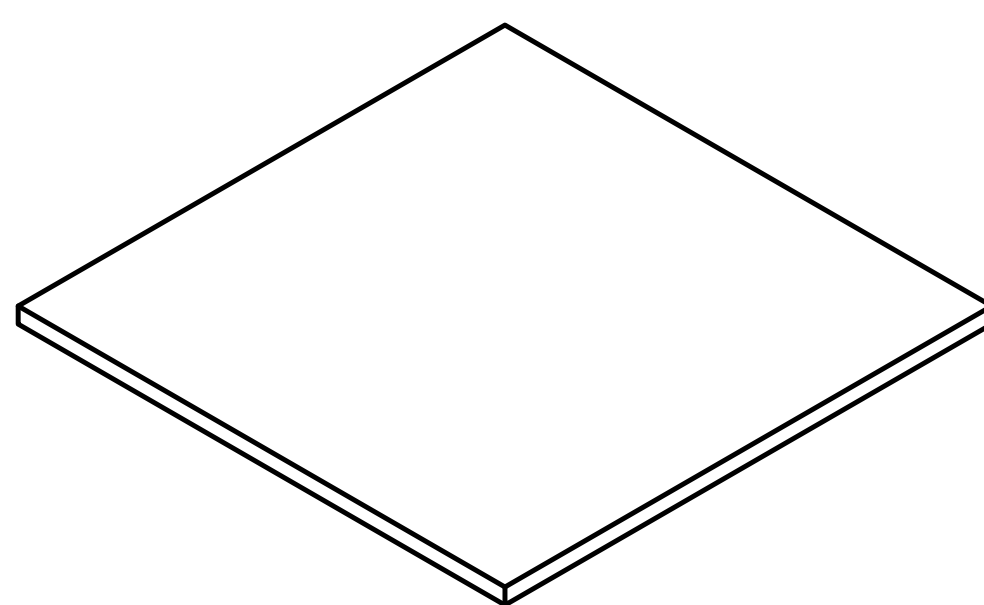


Px1

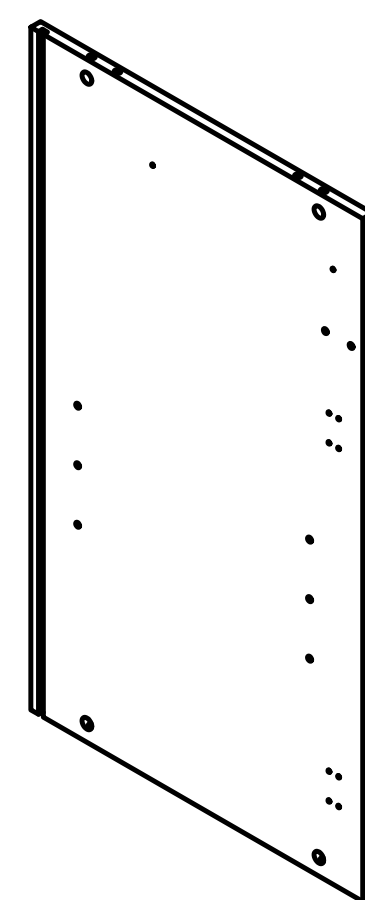


Qx1

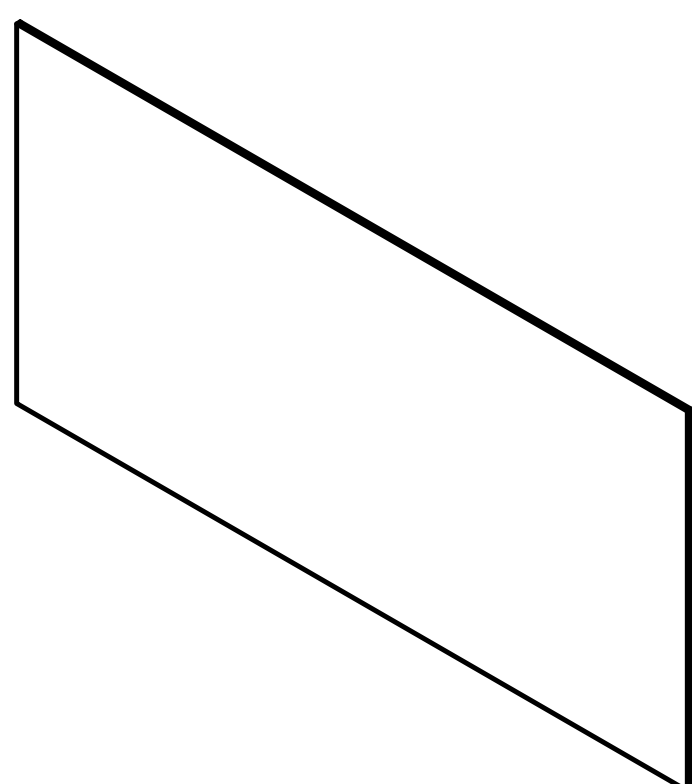


Rx2

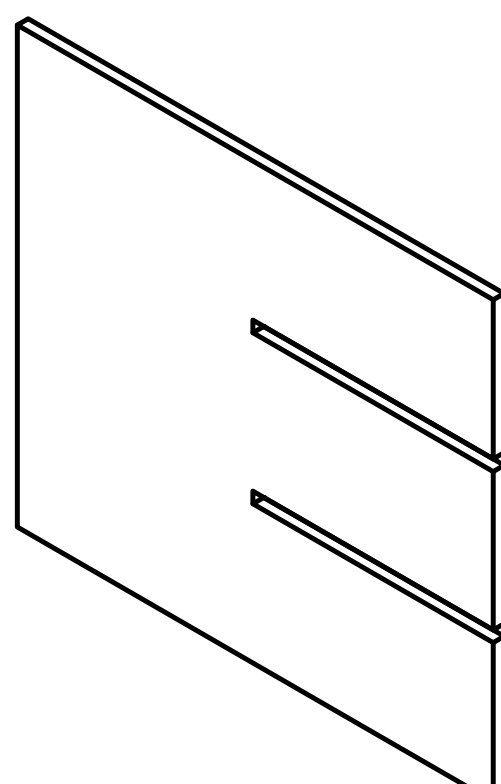


Sx4

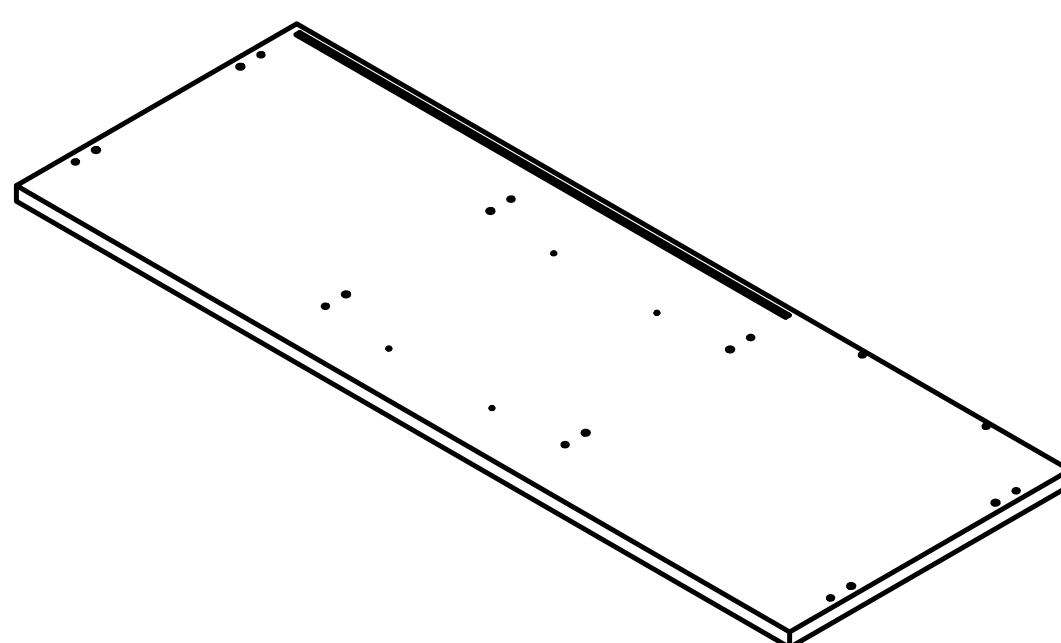












Tx1

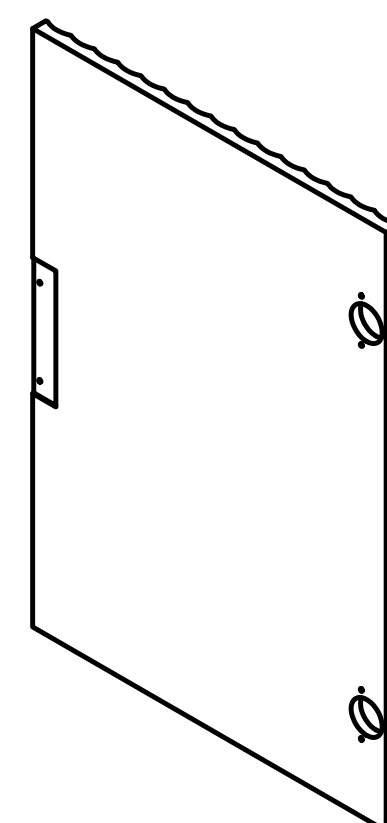


Ux1

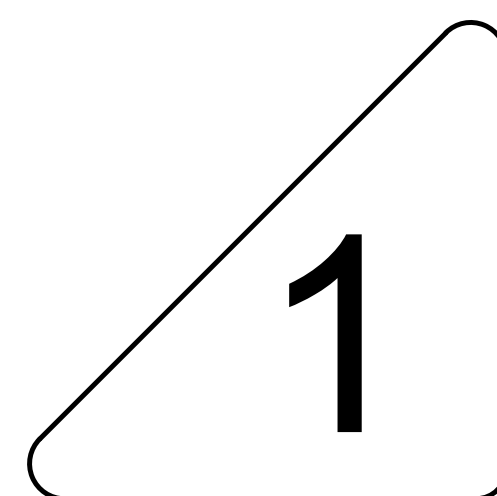


1

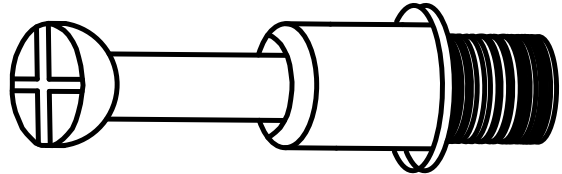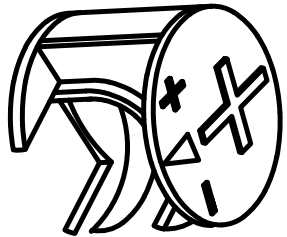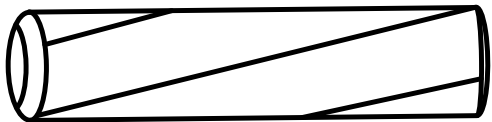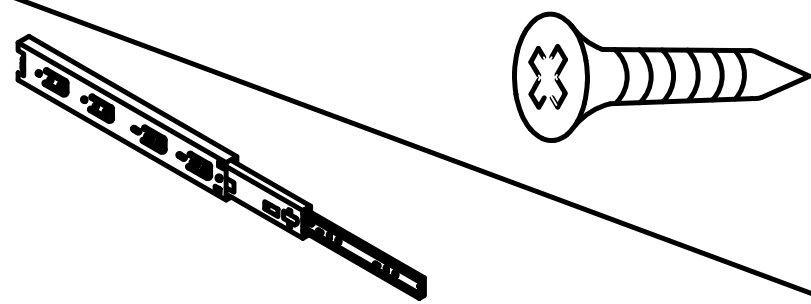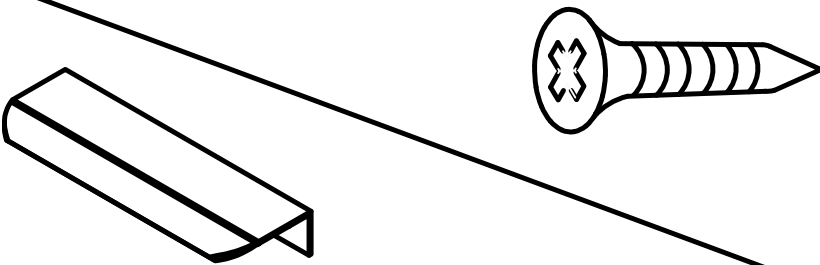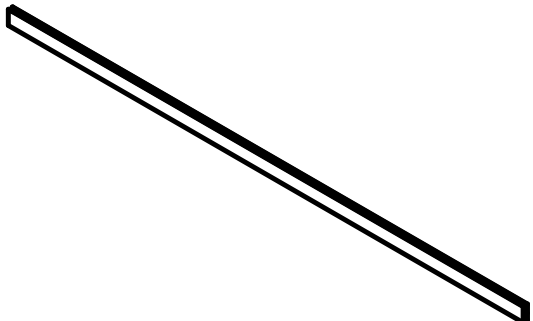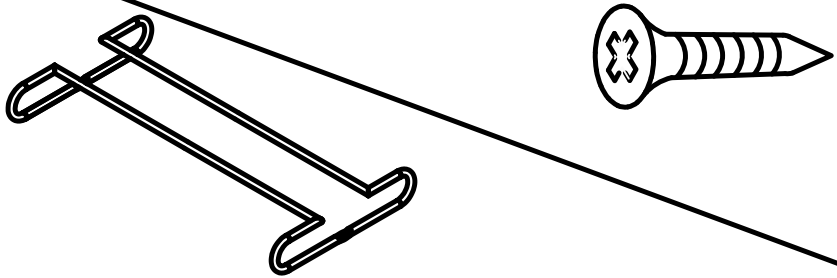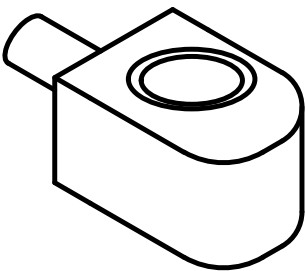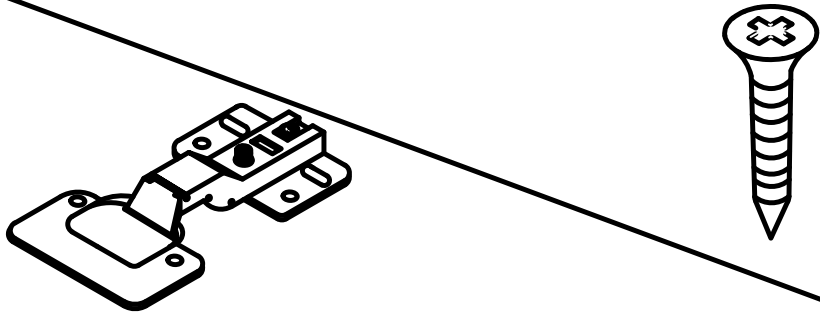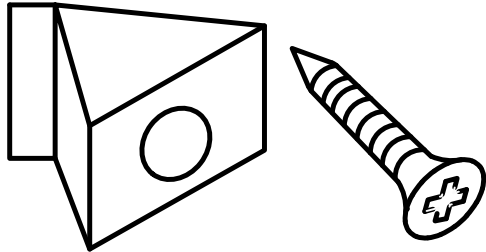Accessories list			
①		Two in one screw (6x28mm)	62pcs +4pcs
②		Two in one nut (10x12mm)	62pcs +4pcs
③		Wood chipping (6x30mm)	20pcs +2pcs
④		Guide & Screw(29cm) (3x12mm)	10pcs +2pcs 2pcs
⑤		Handle & screw (3. 5x12mm)	4pcs +1pcs 2pcs
⑥		Non-slip pads	10pcs +2pcs
⑦		Backboard card strip (746mm)	1pcs
⑧		Wine glass rack & Screw (4x16mm)	4pcs +1pcs 2pcs
⑨		Laminate Support Nail	4pcs +1pcs
⑩		Hinge & Screw (3.5x12mm)	12pcs +2pcs 2pcs
⑪		Fixing clip & screw (3x16mm)	12pcs +1pcs

Double-head screwdriver, use as required

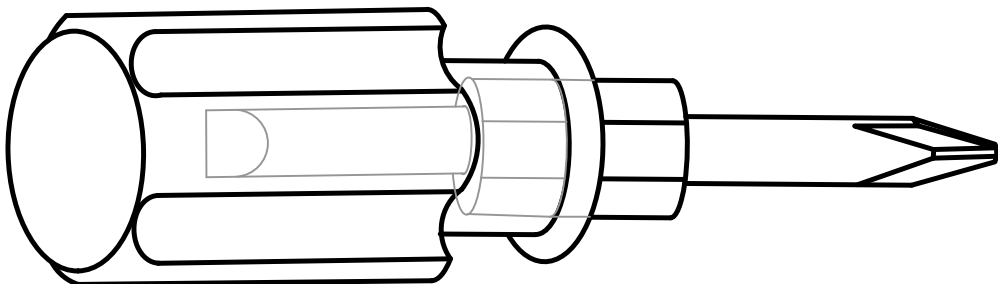








1pcs

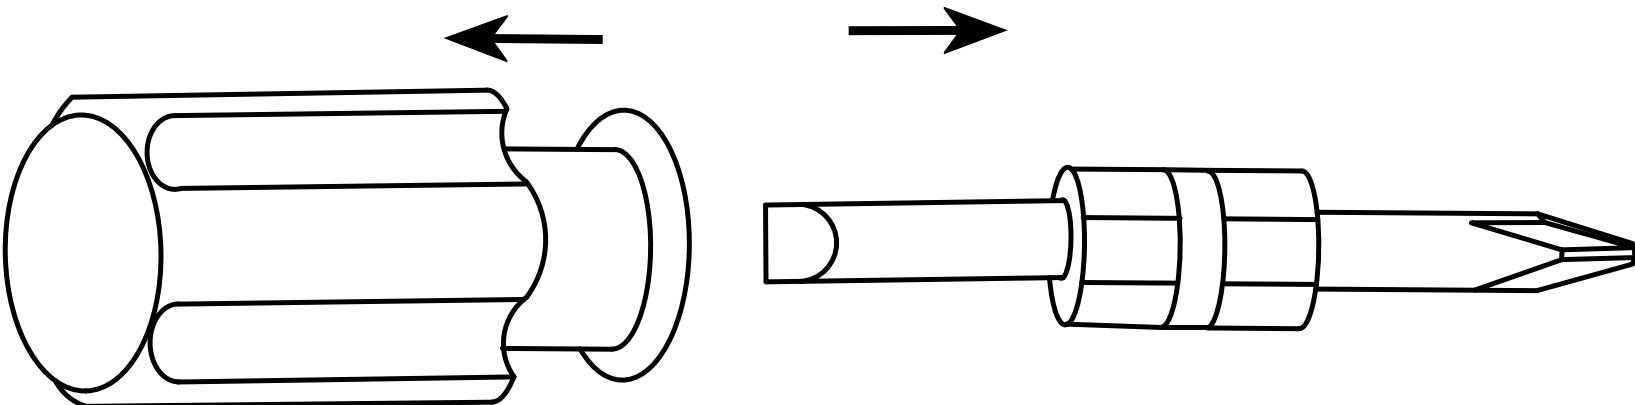


2

Product structure decomposition

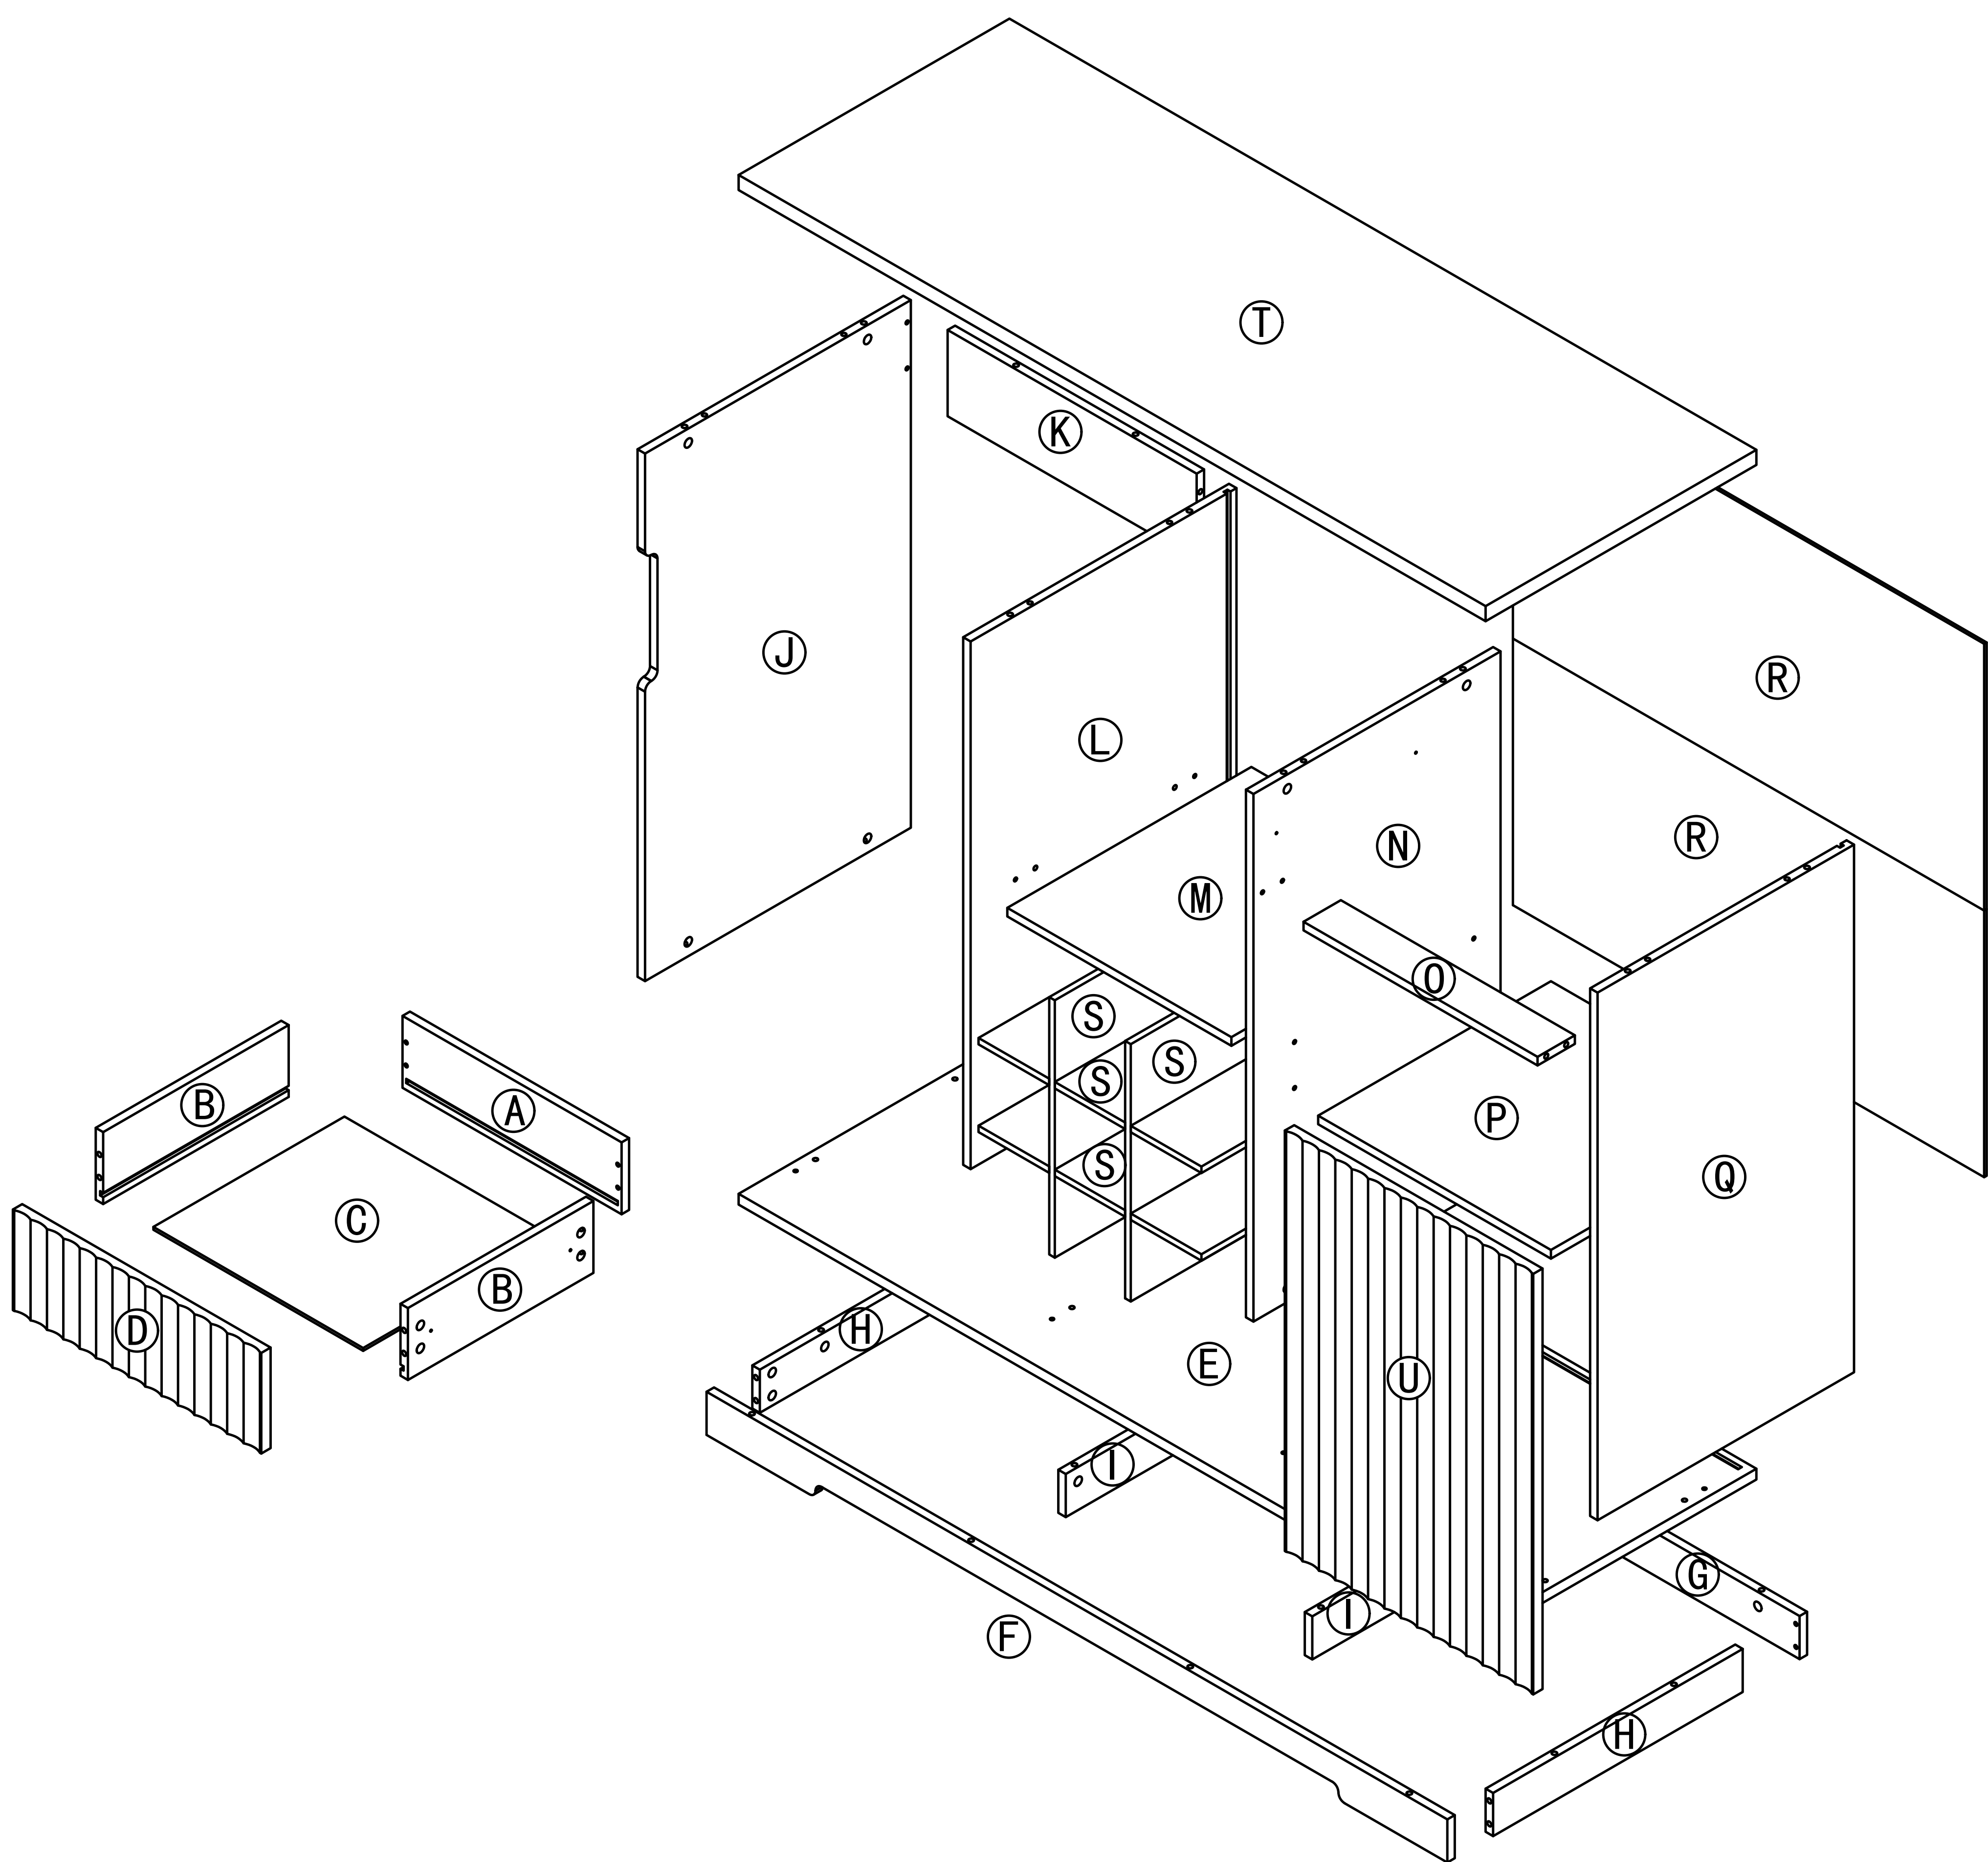


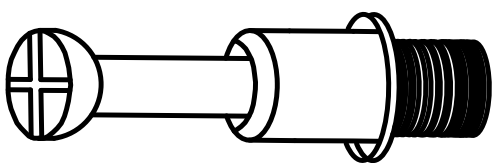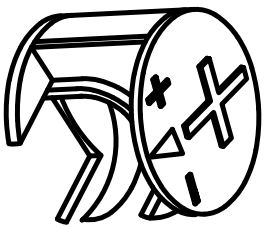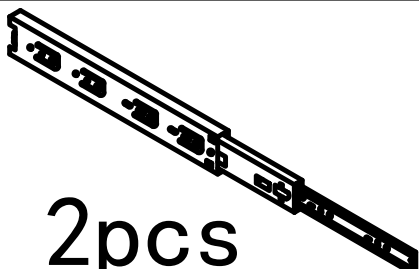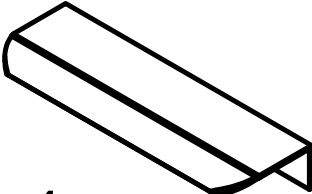1		8pcs	2		8pcs	4		2pcs		4pcs
5		1pcs		2pcs						

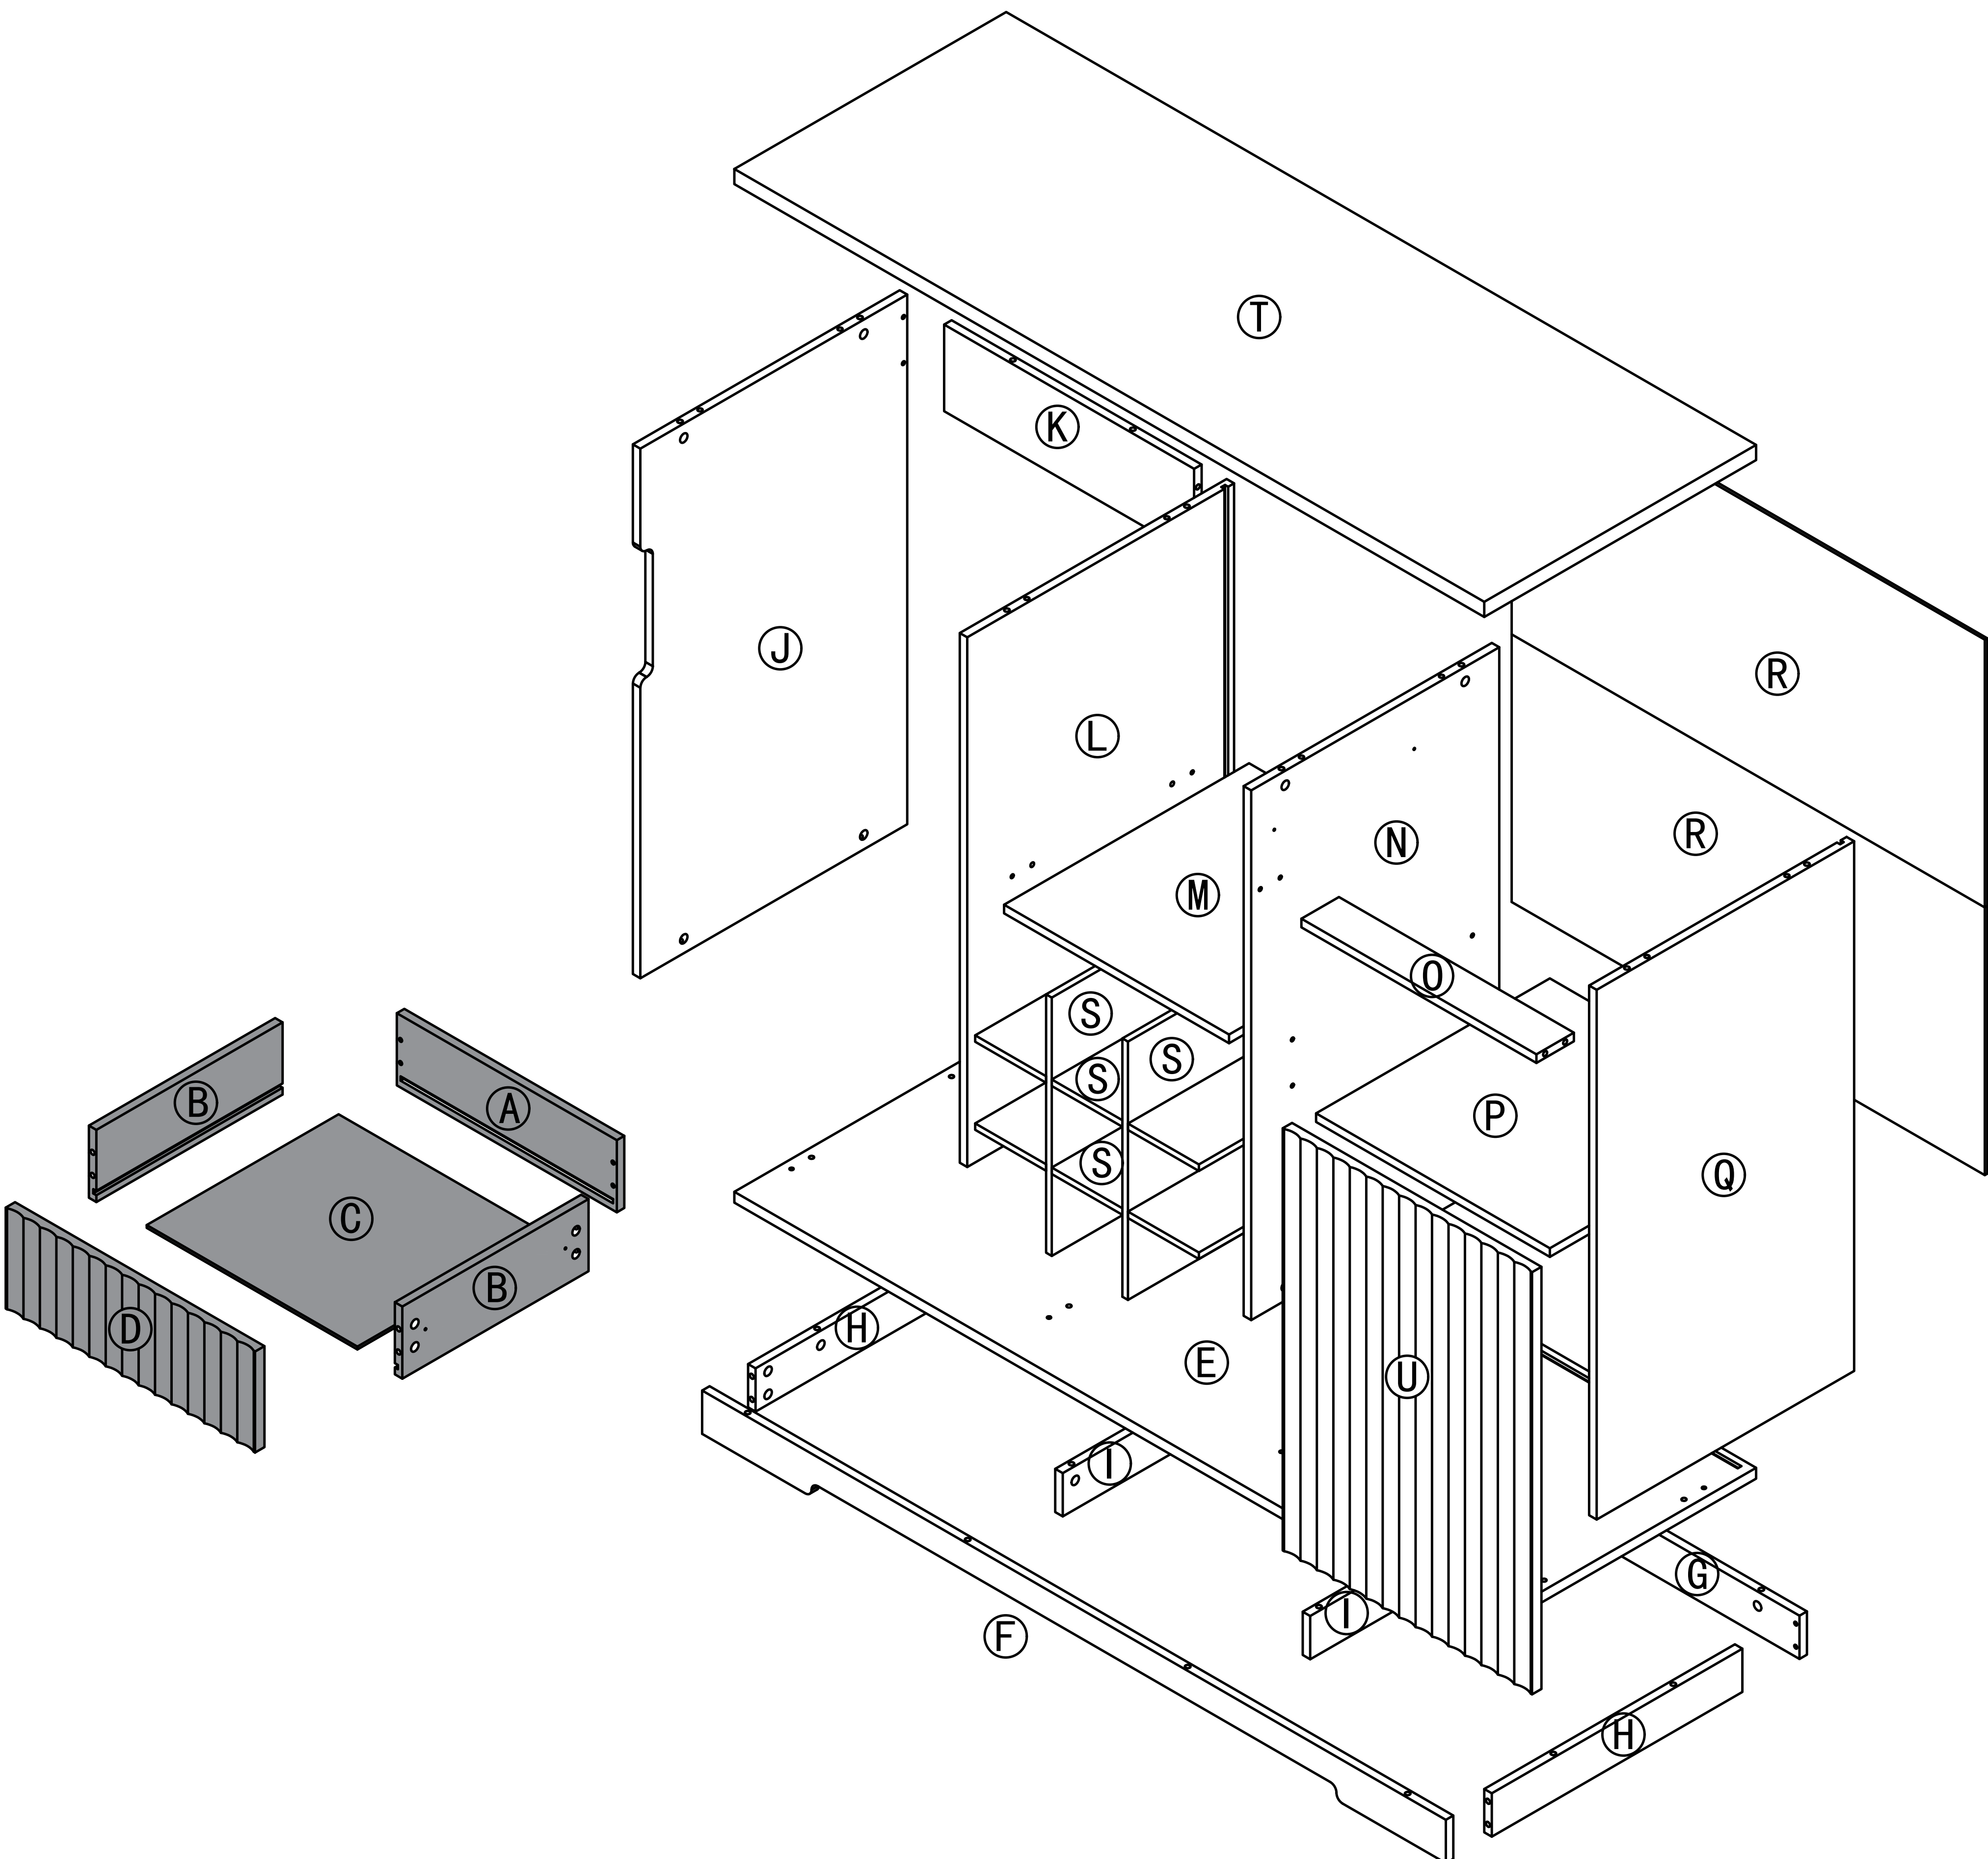


Use parts ① and ②




Step1

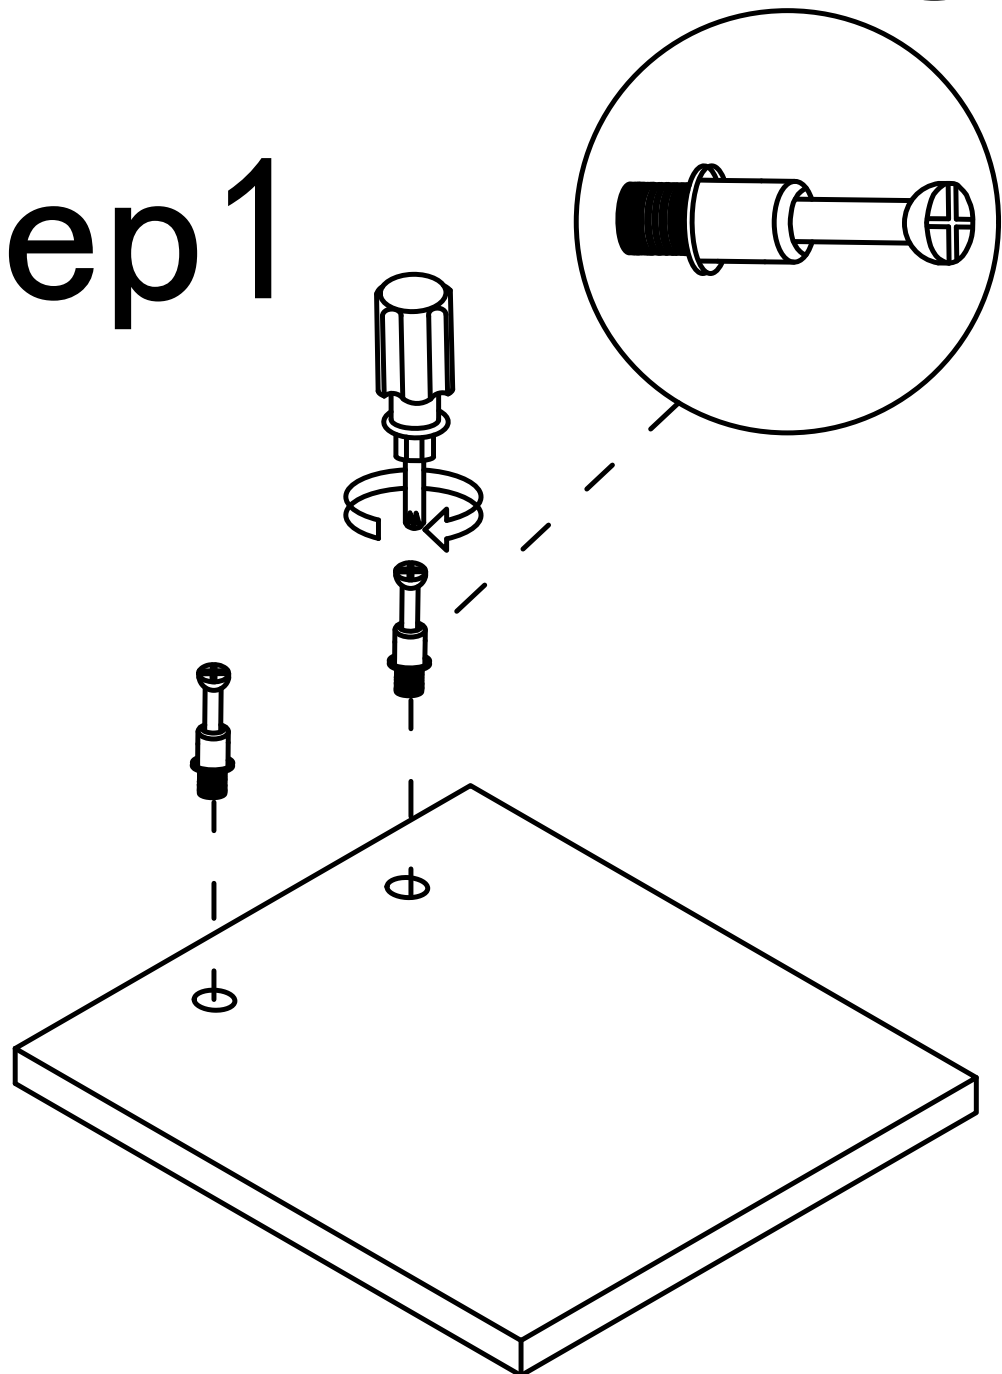

Step2

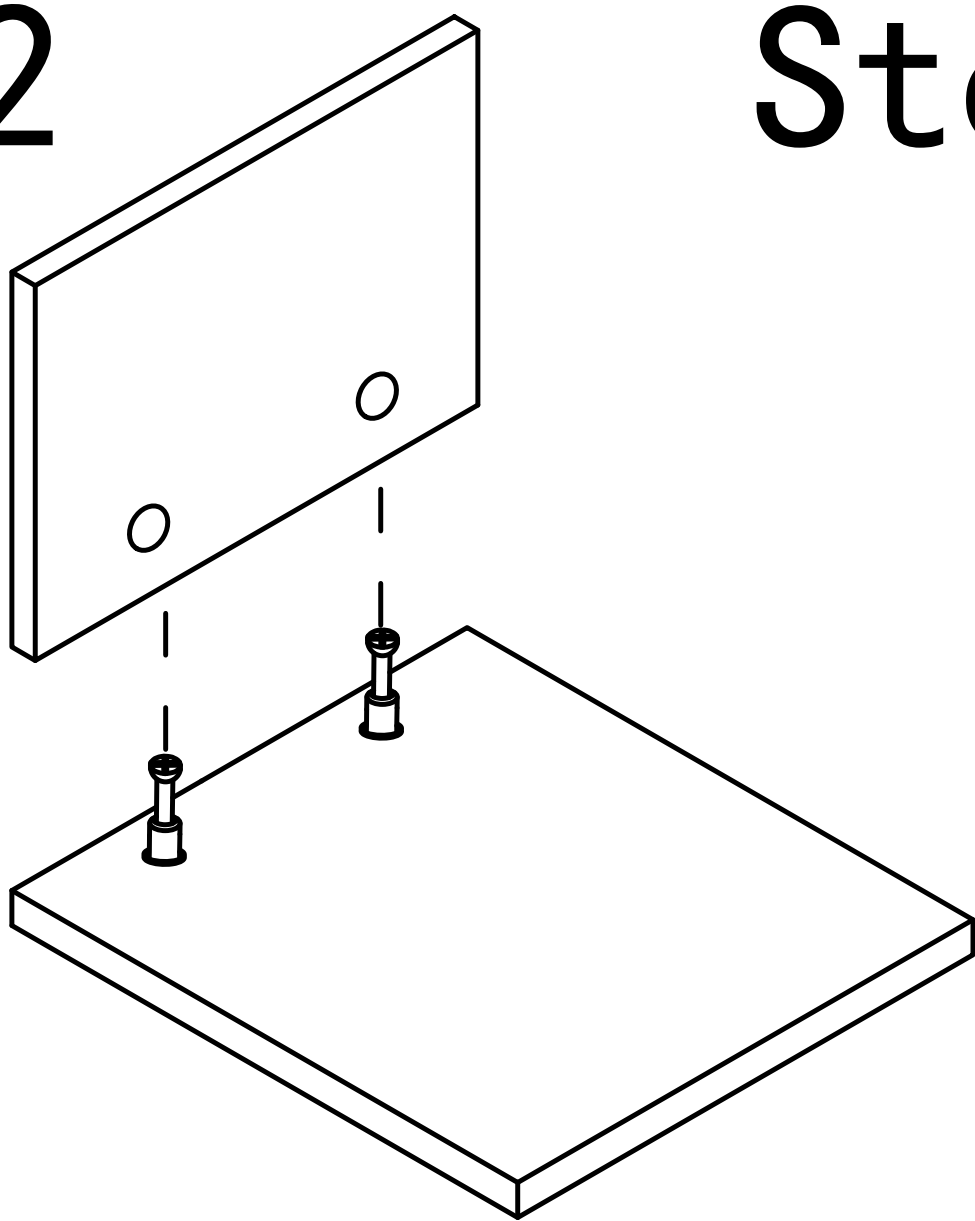



Step3

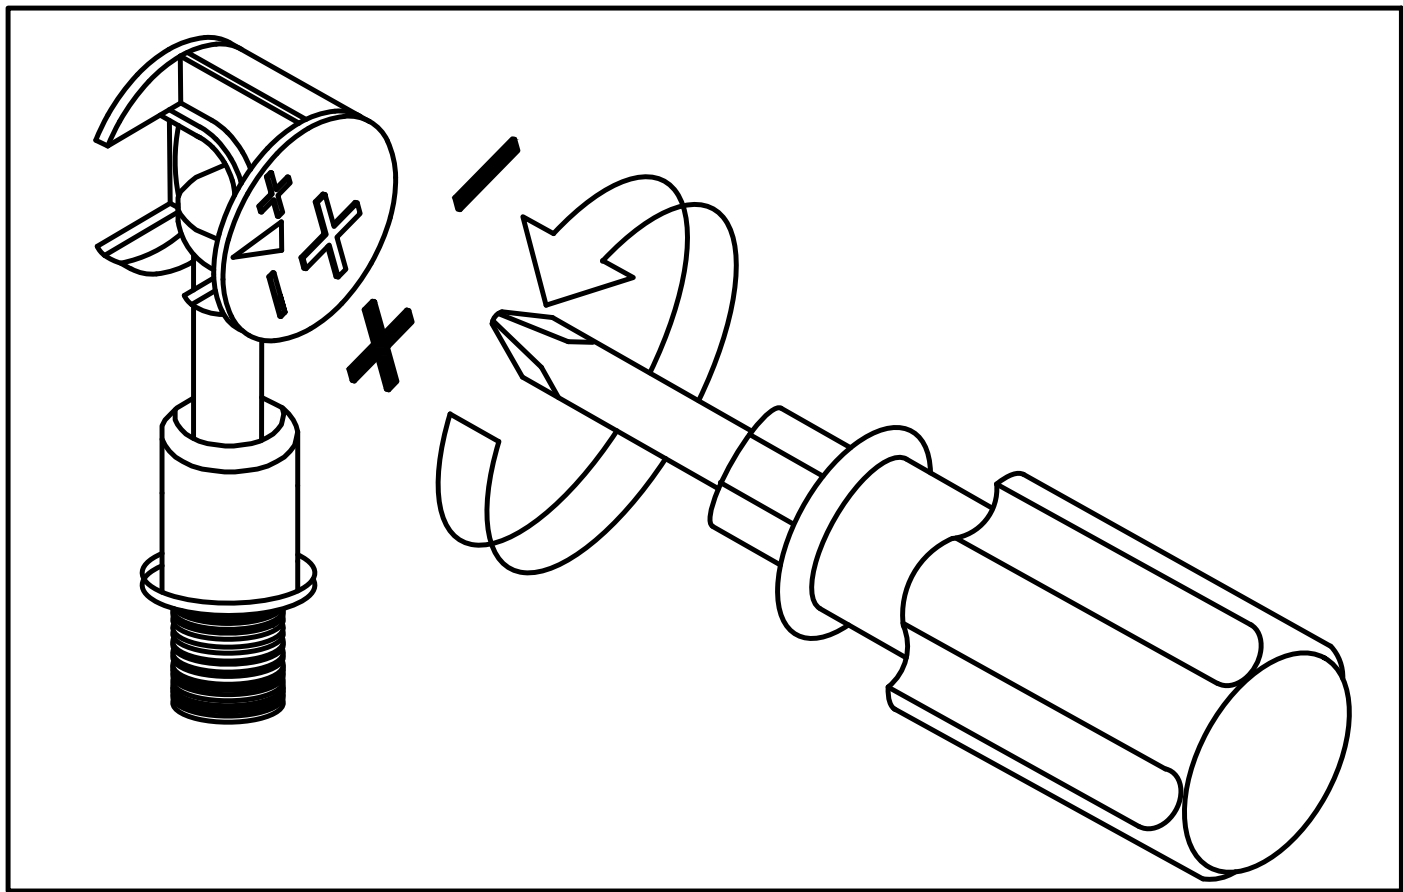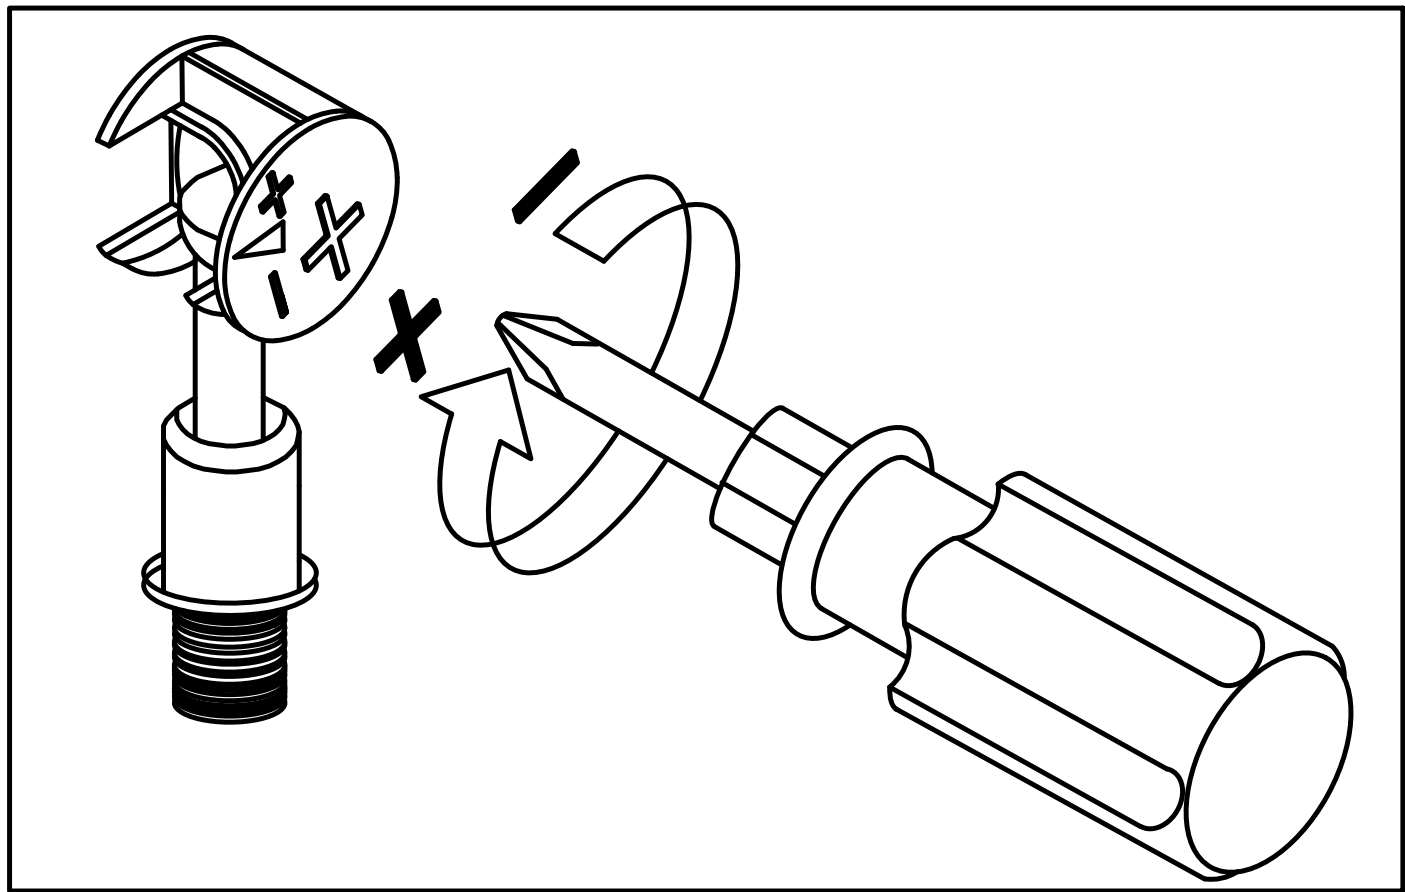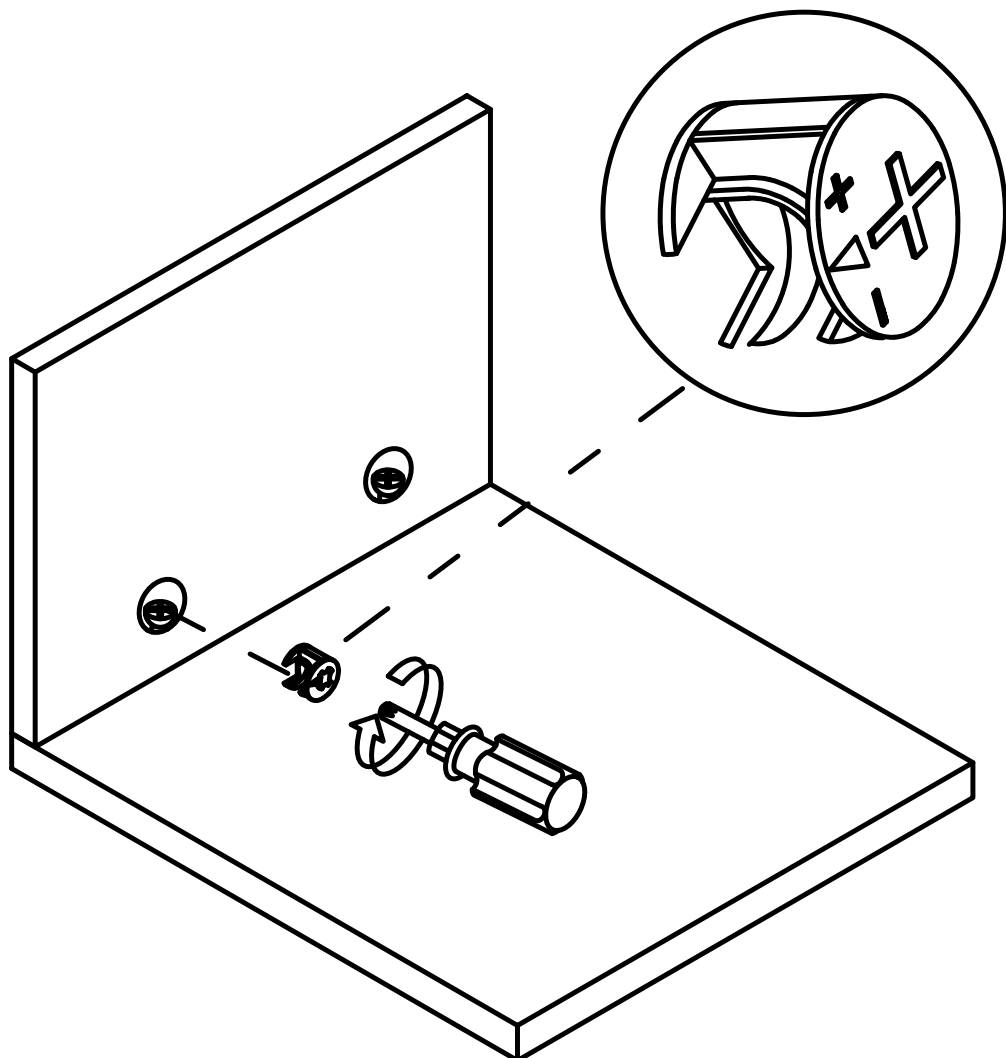


Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign


Step 1

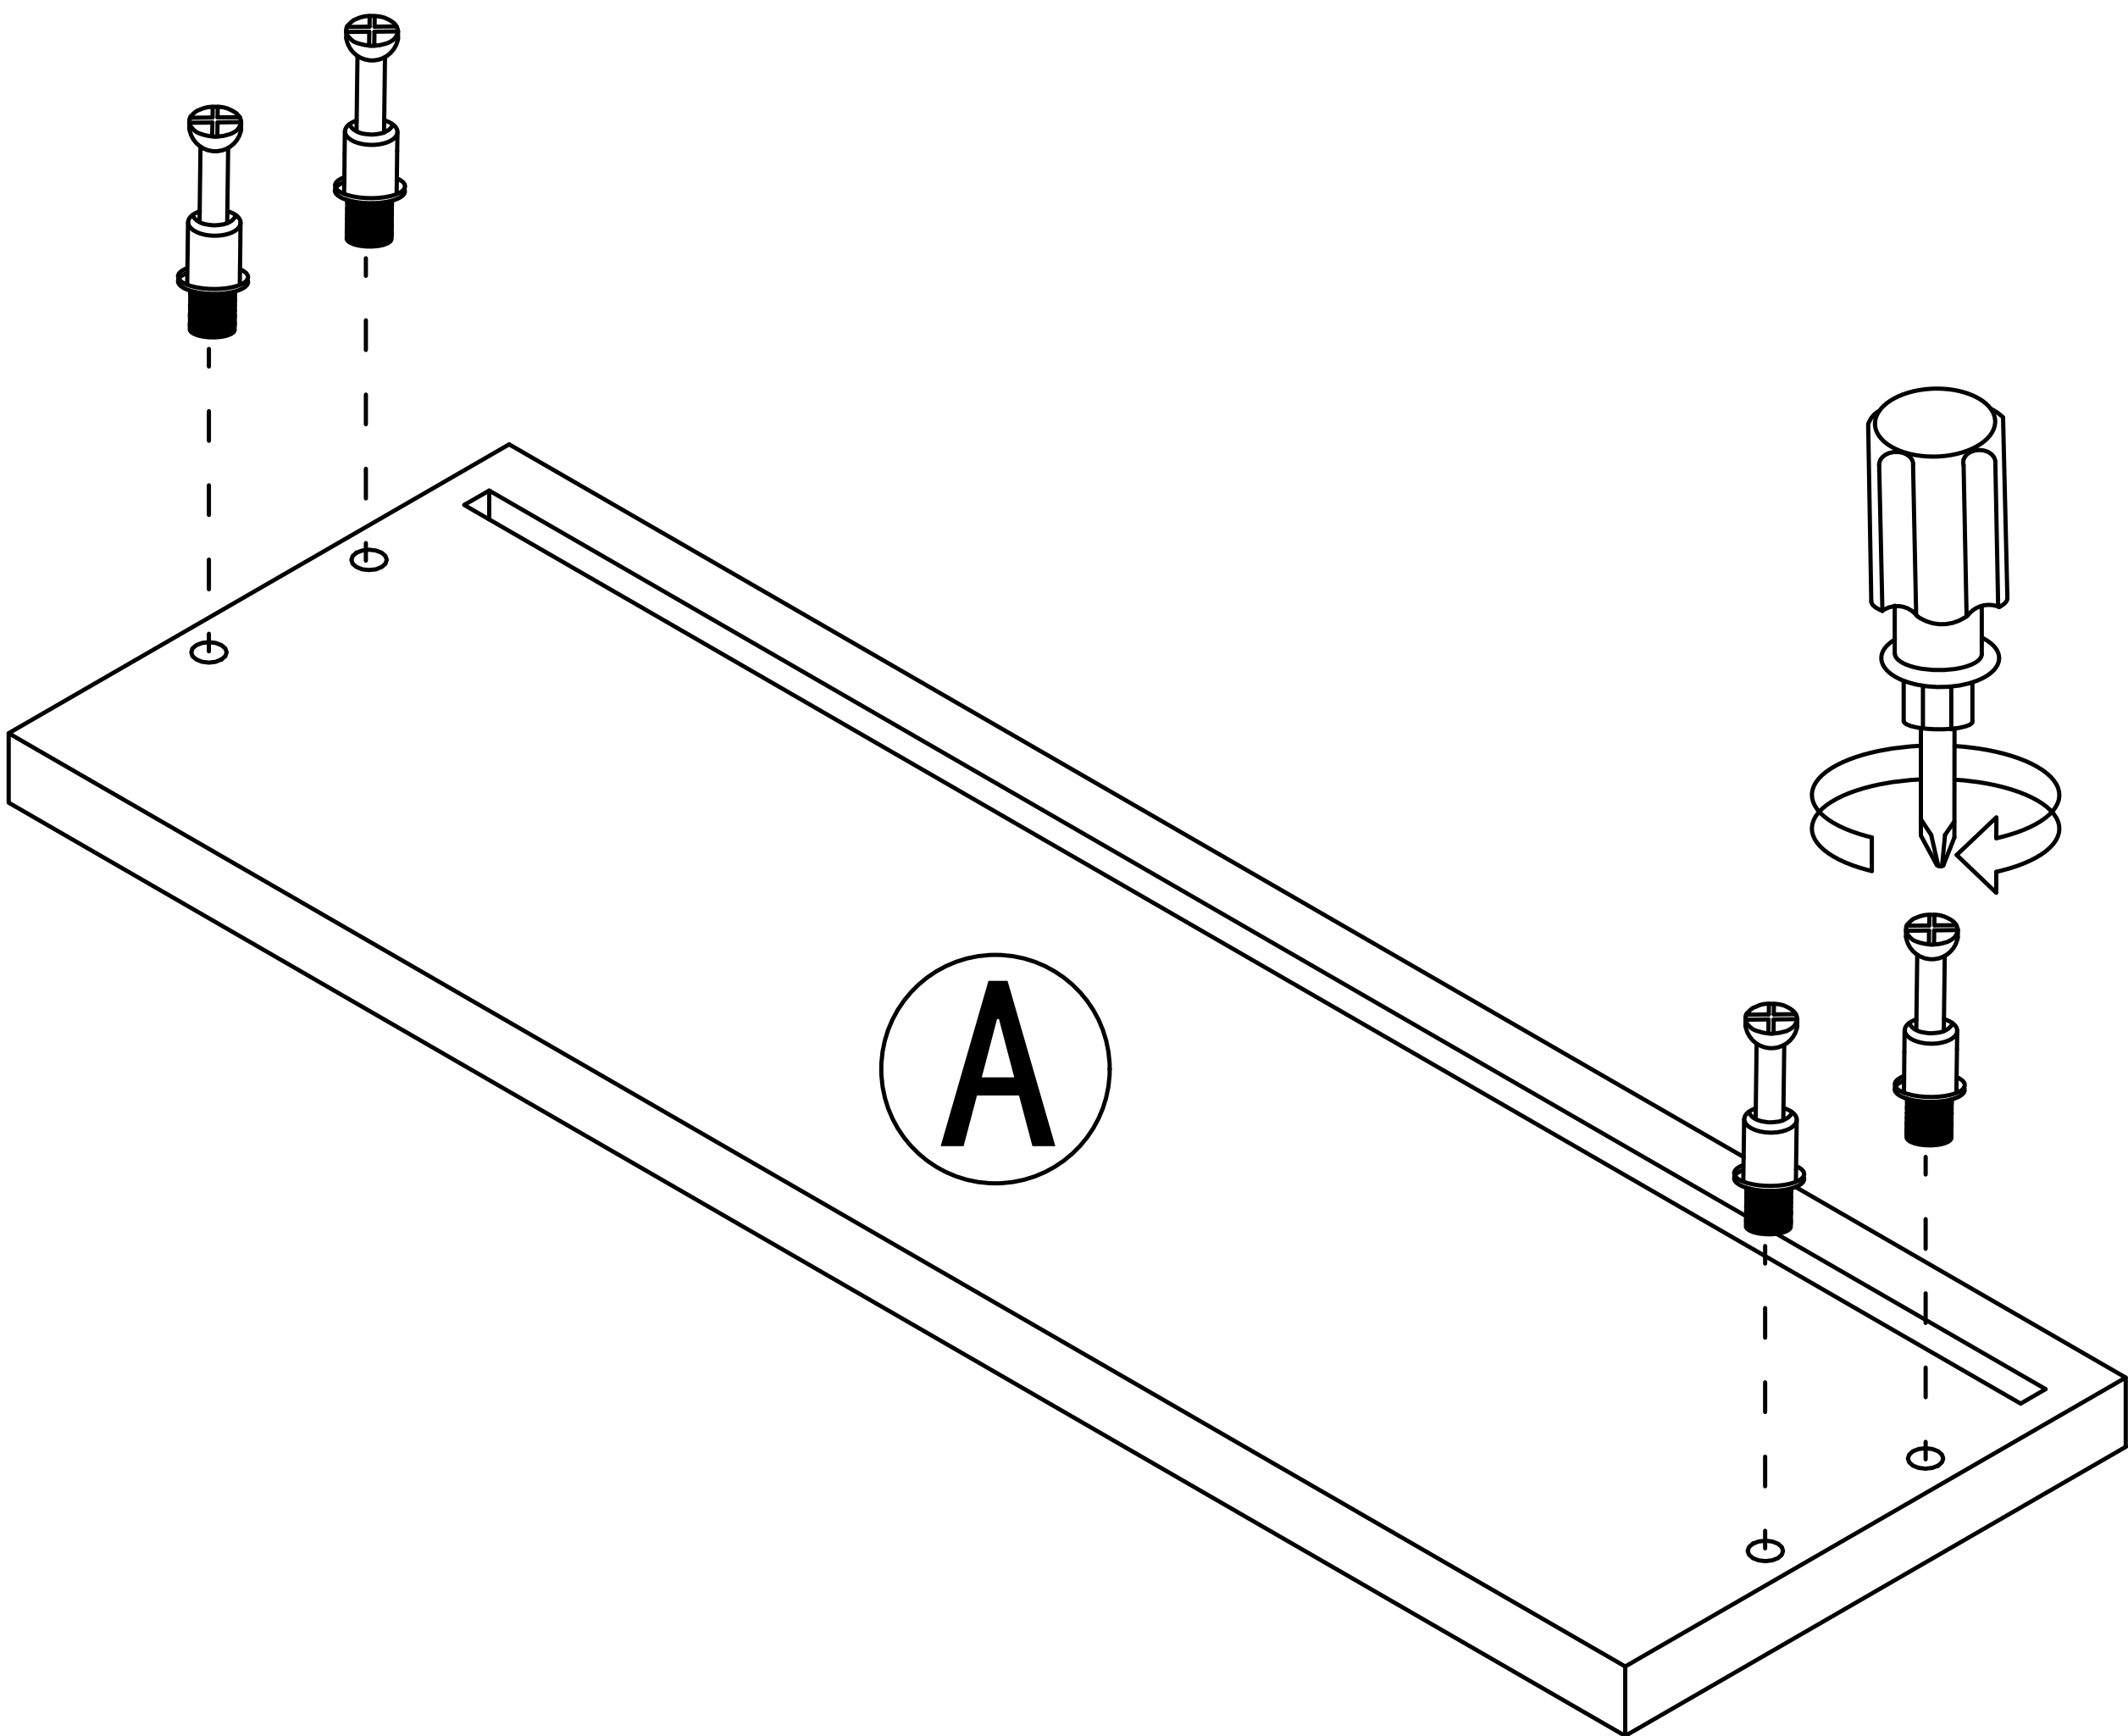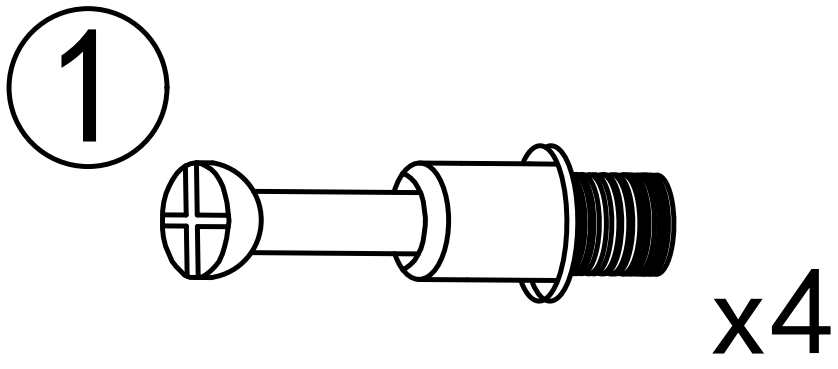



Step 2

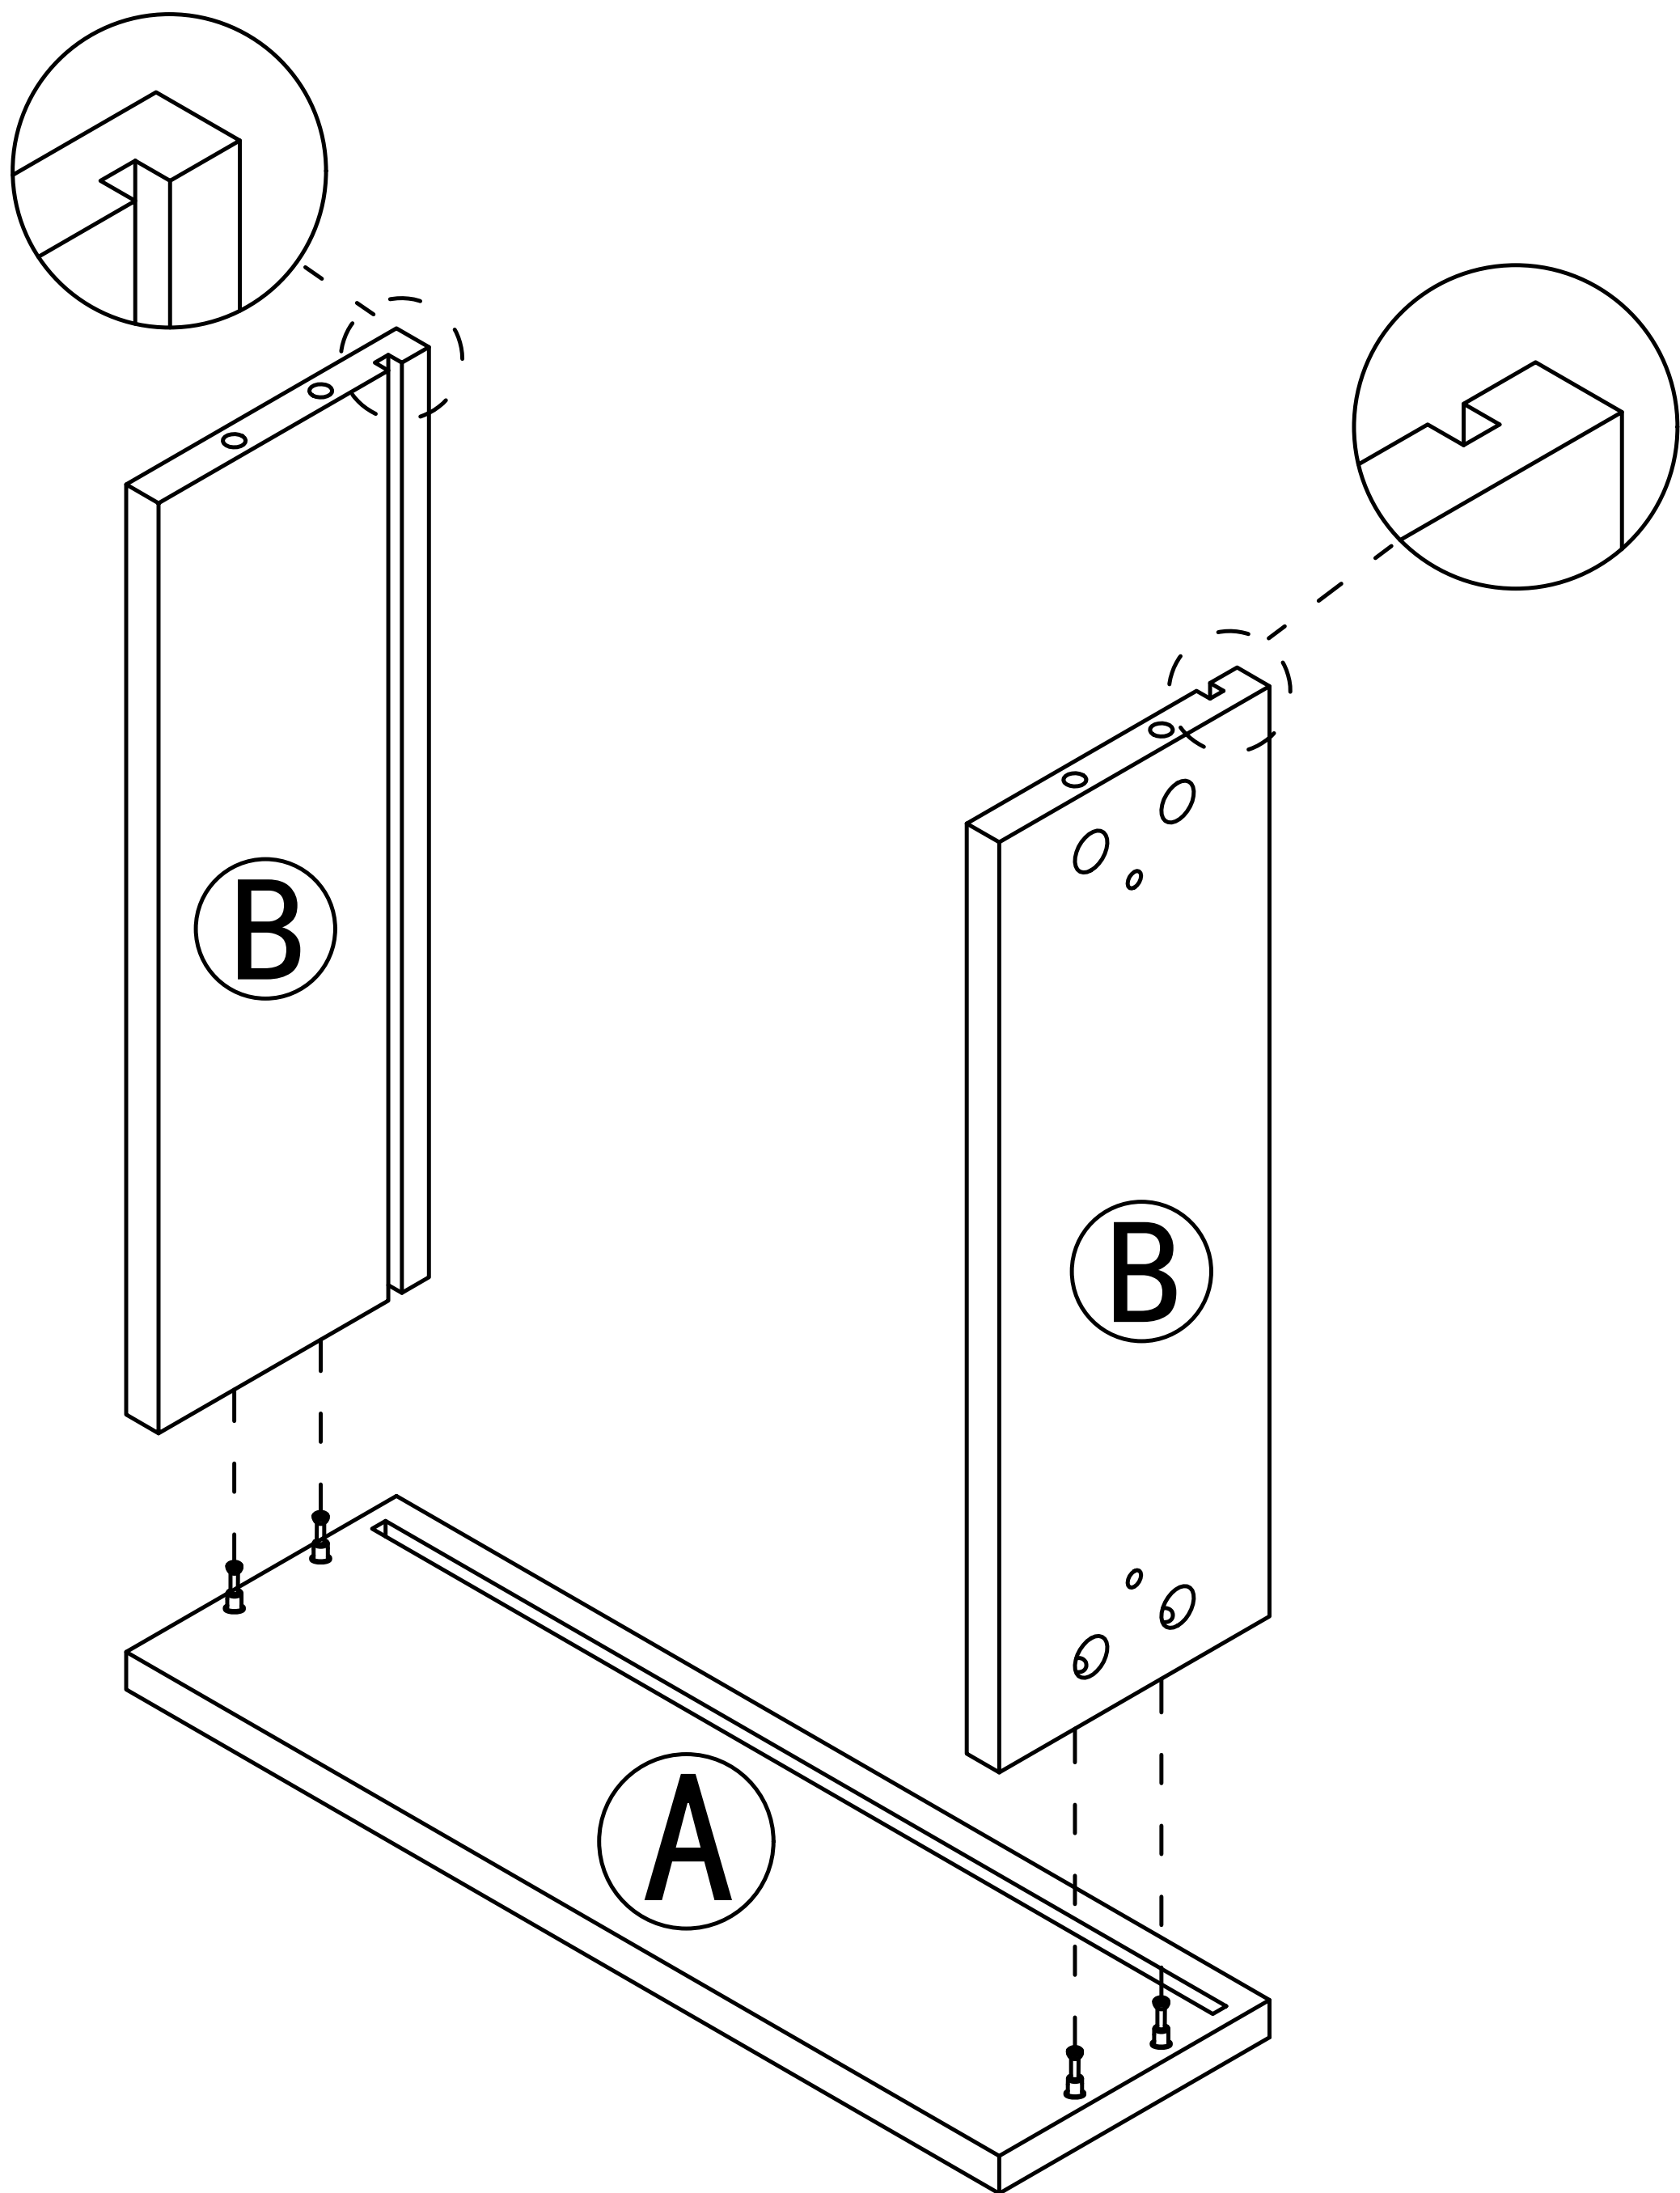



Step 3

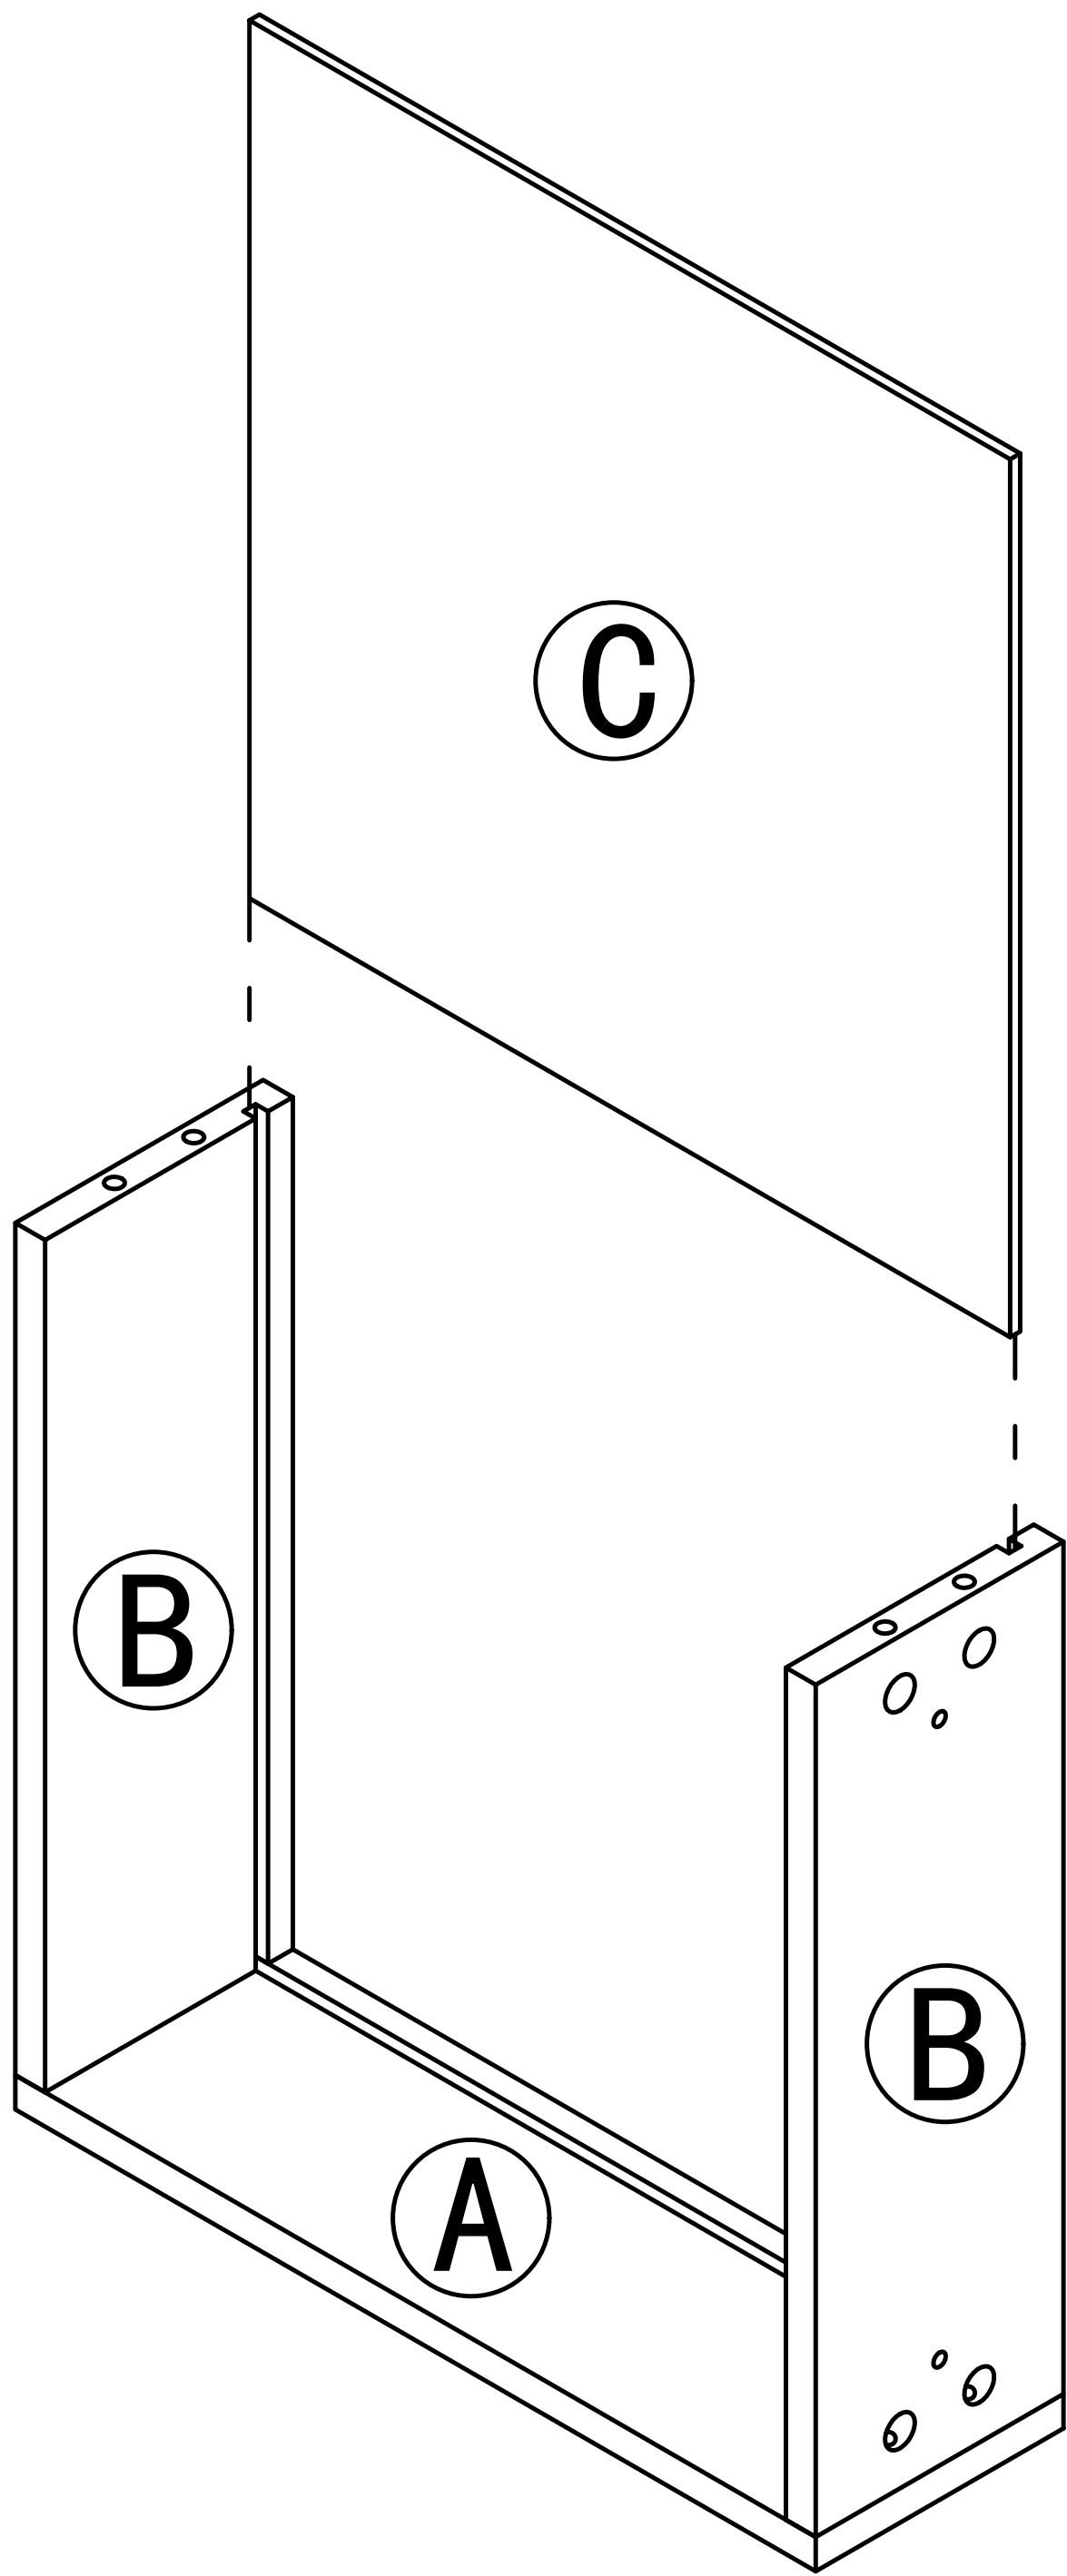

Step 4

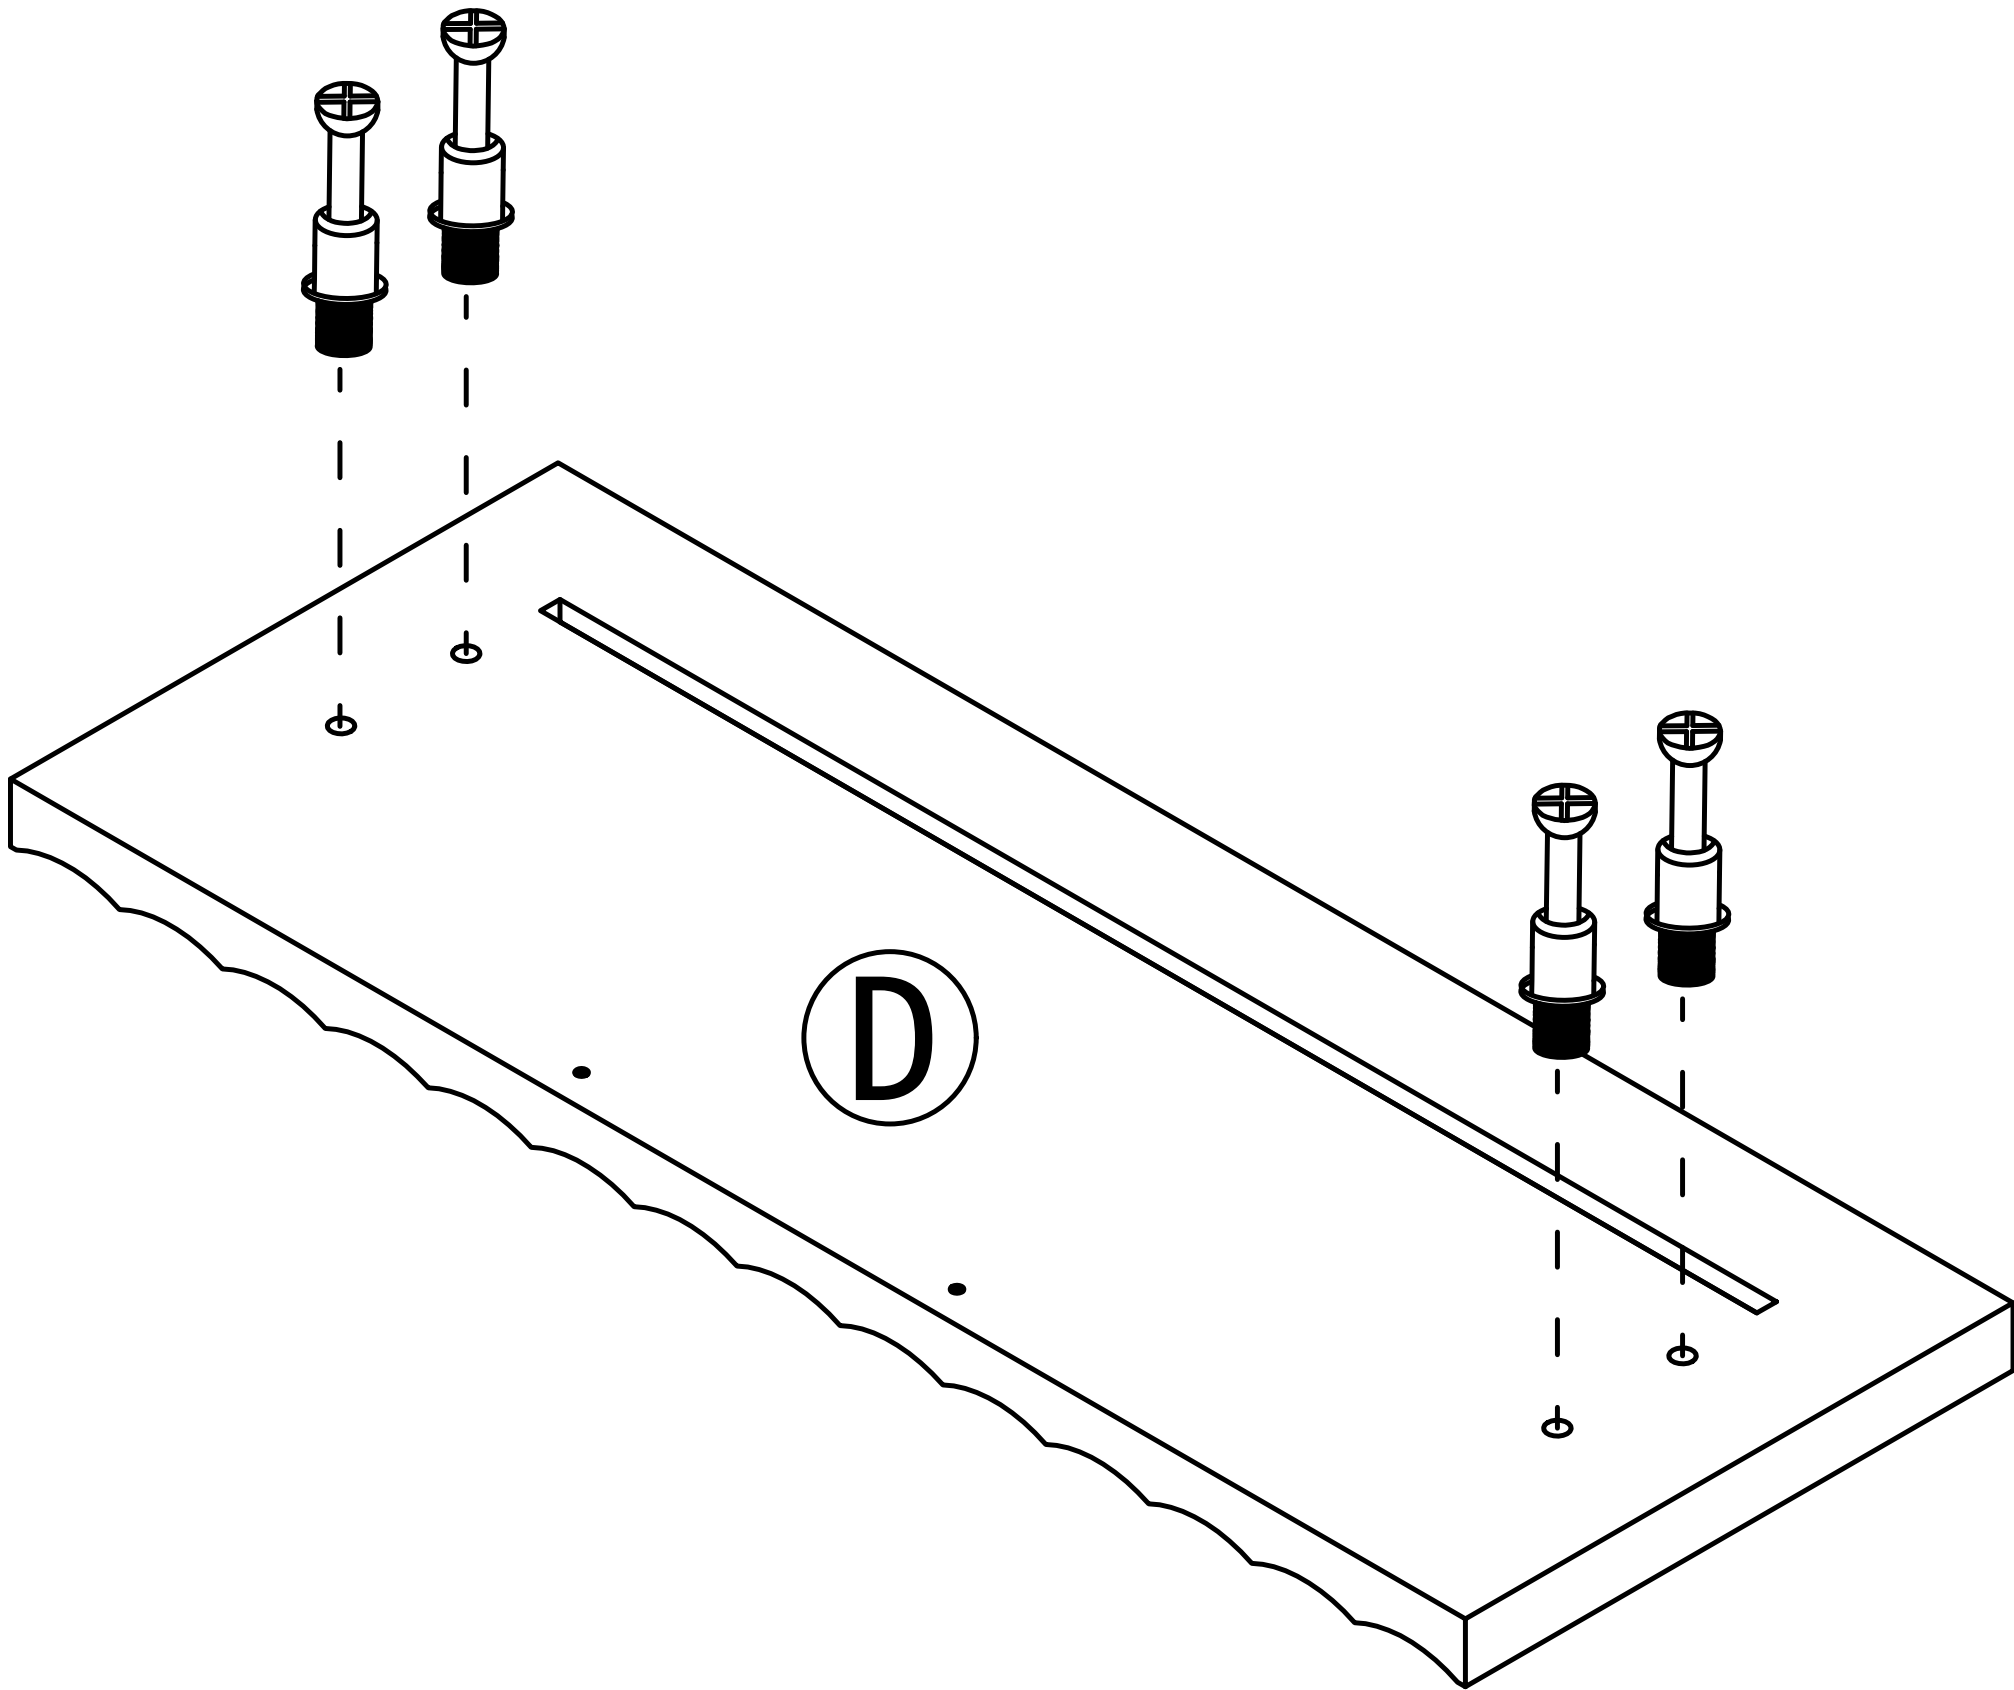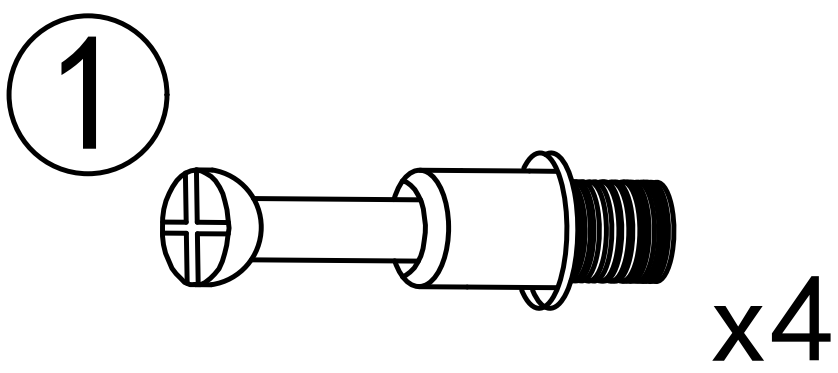


Step 5

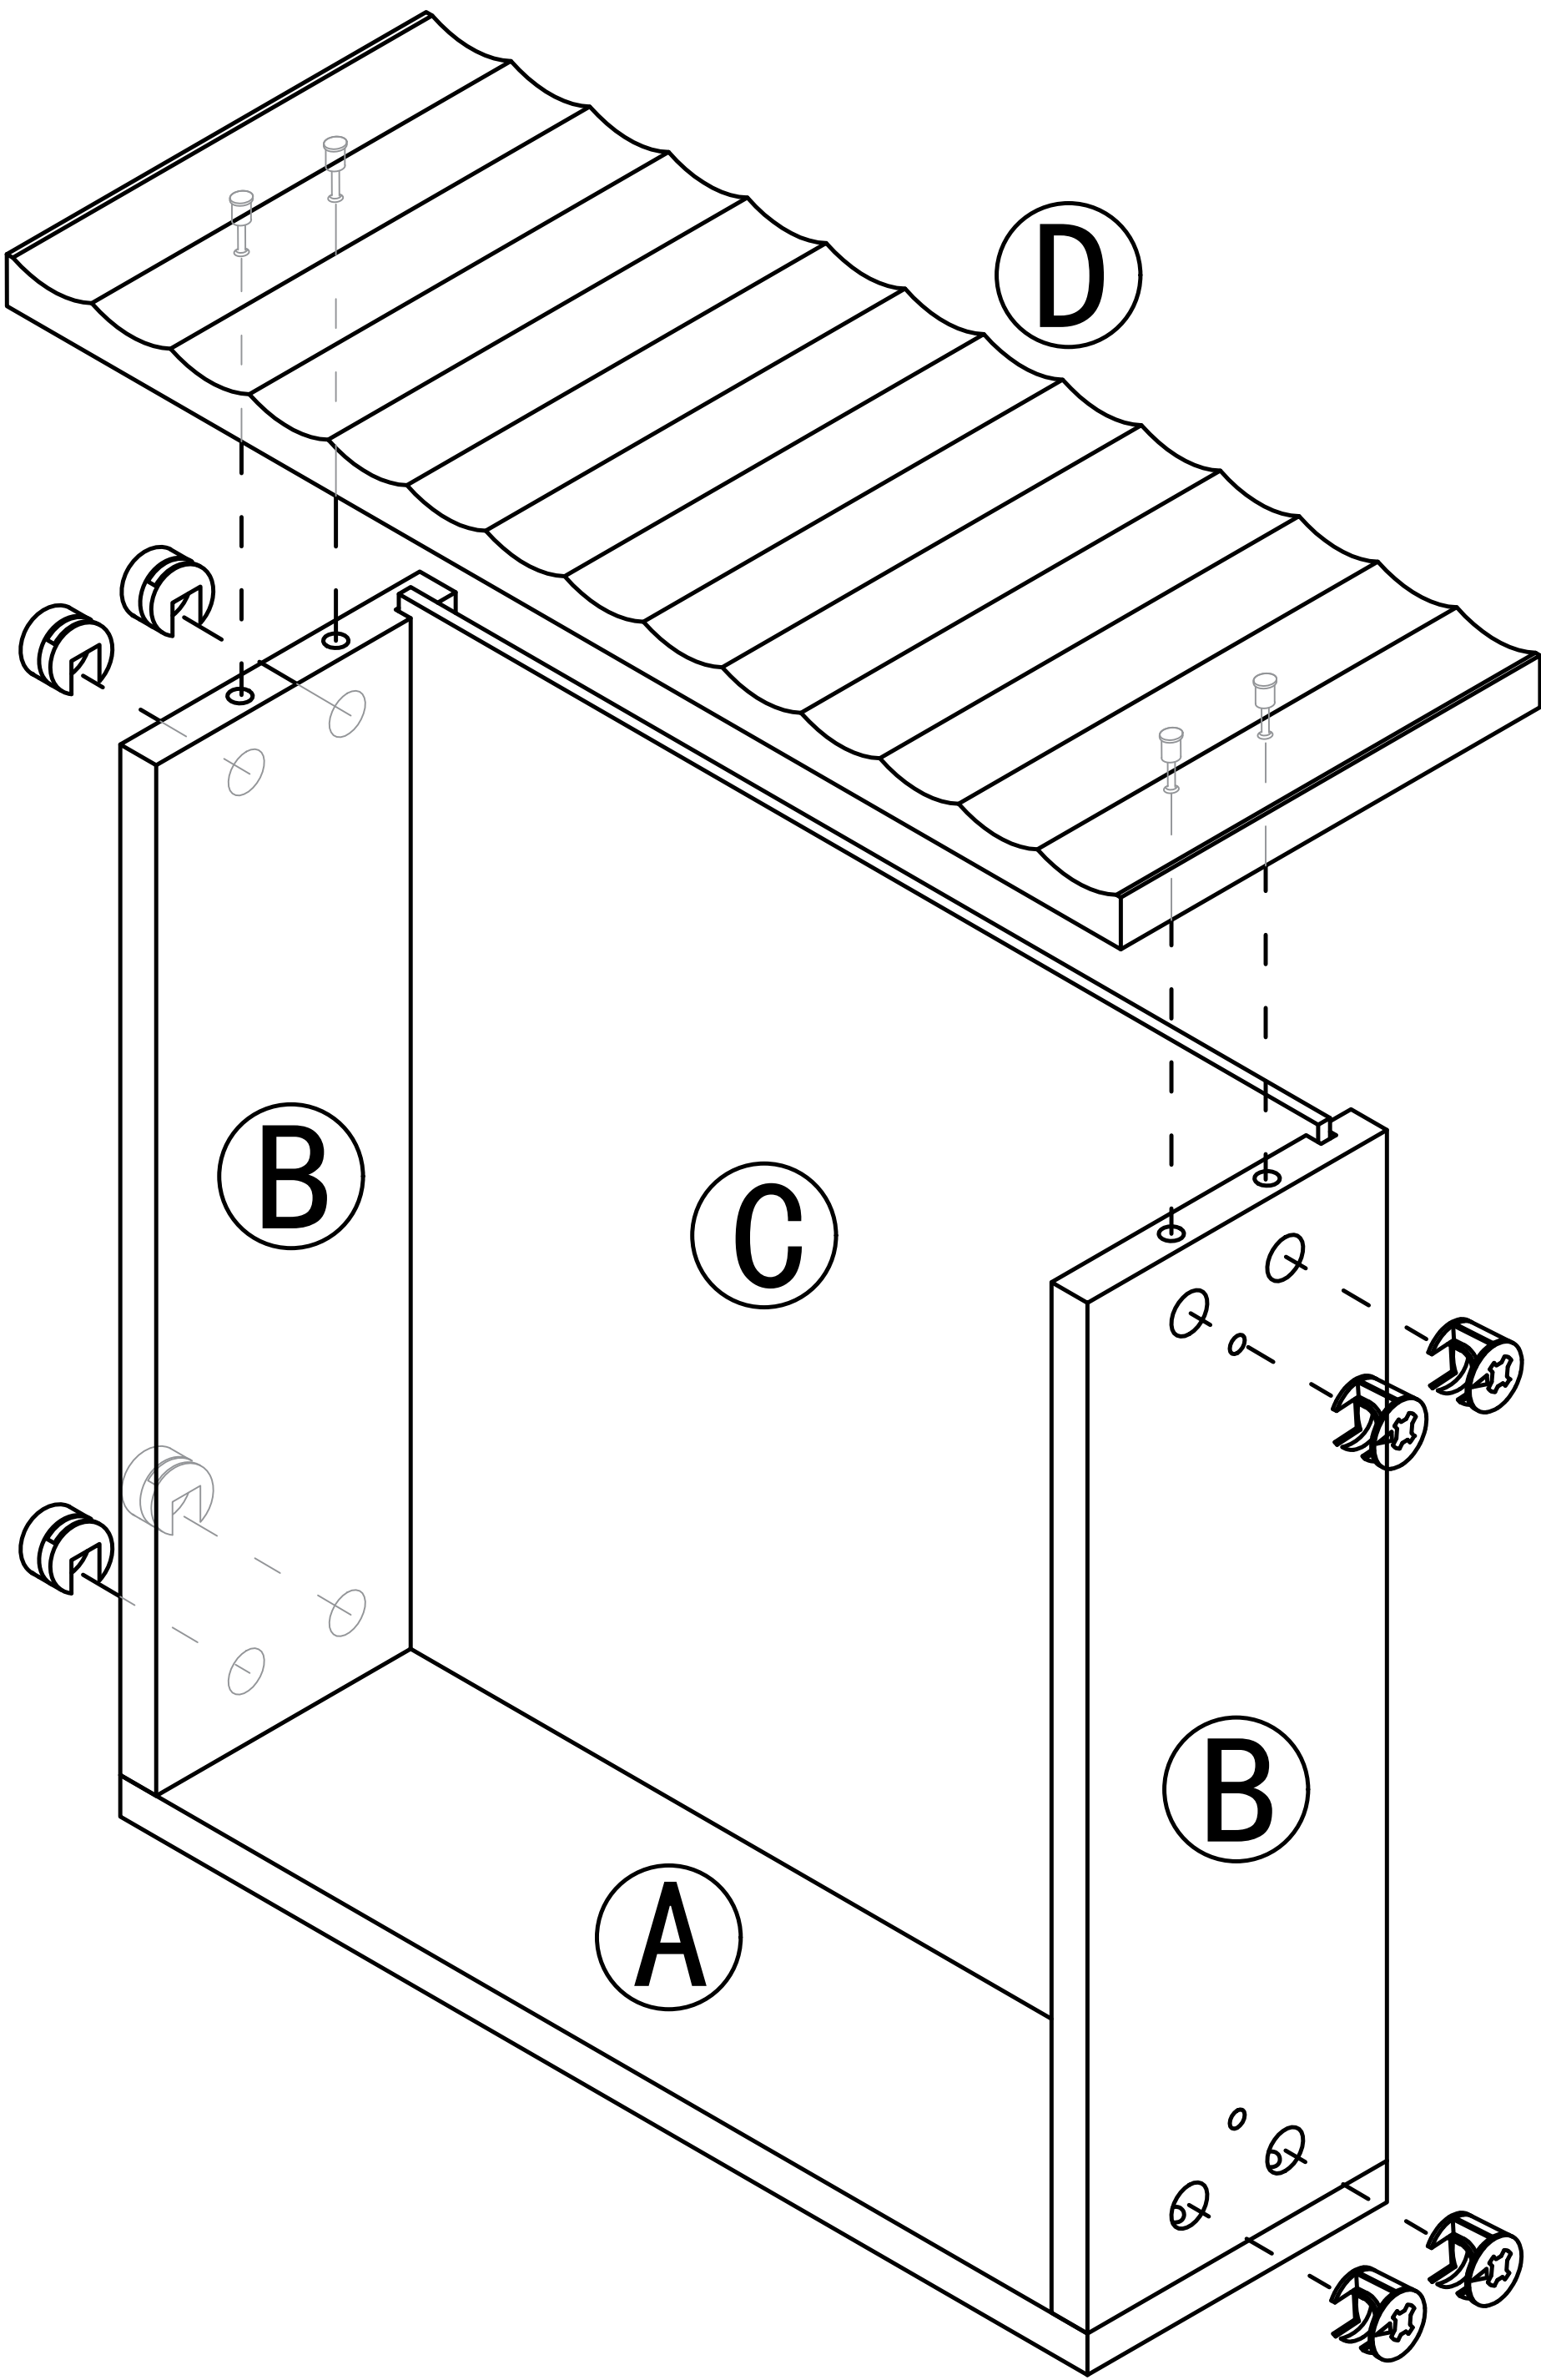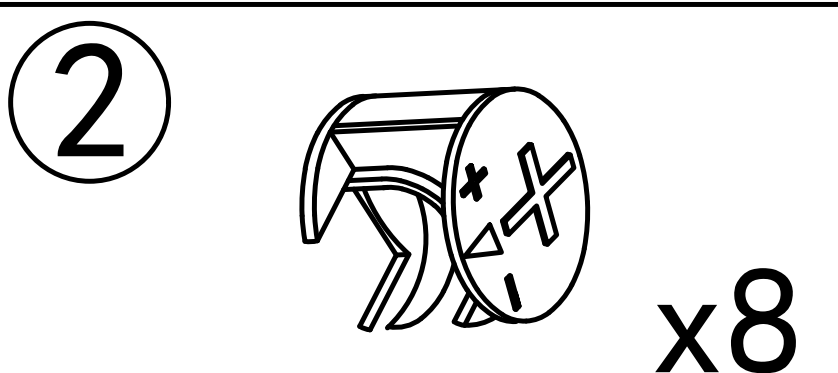


Use parts ④

Drawer rail breakdown diagram

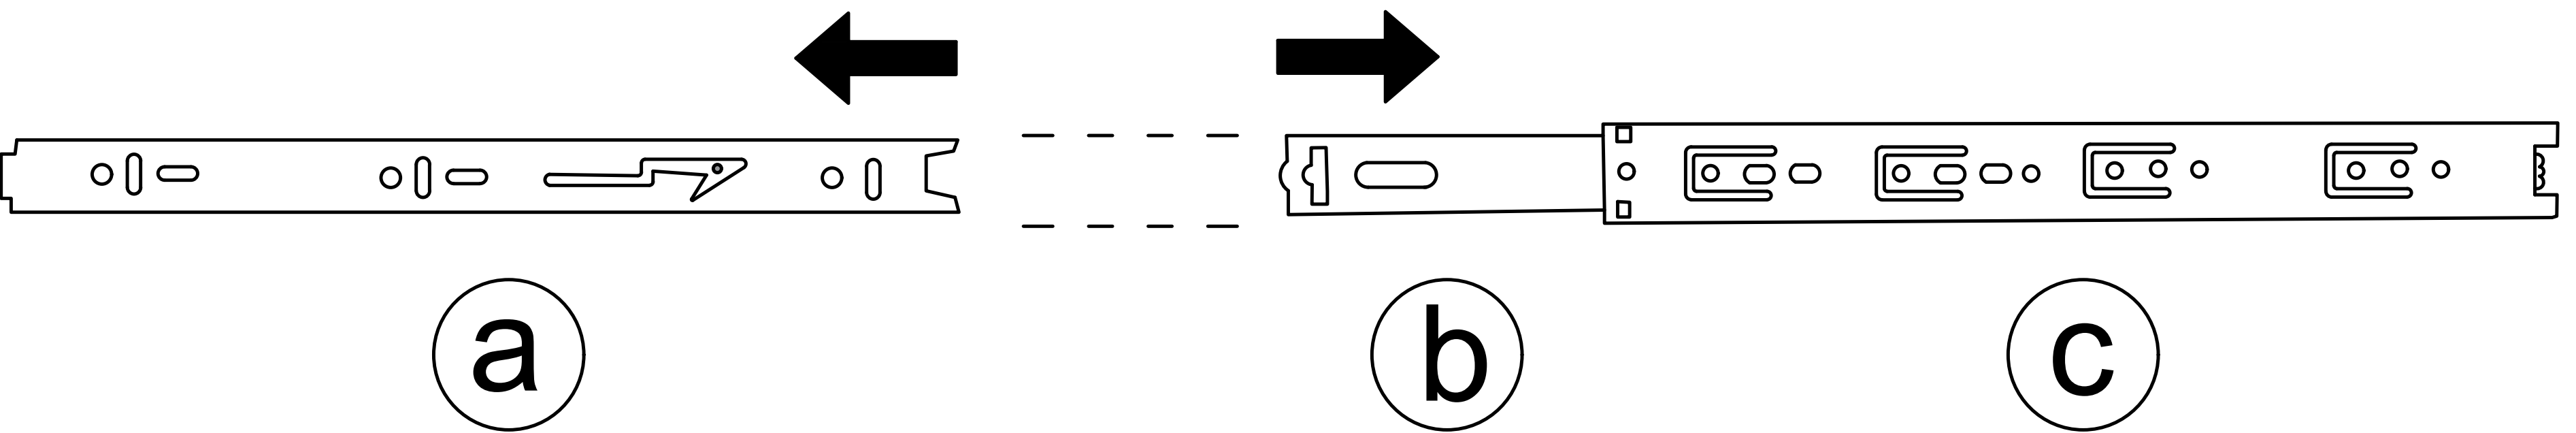


① Dismantle the schematic diagram

Step 1 : Pull the rails apart




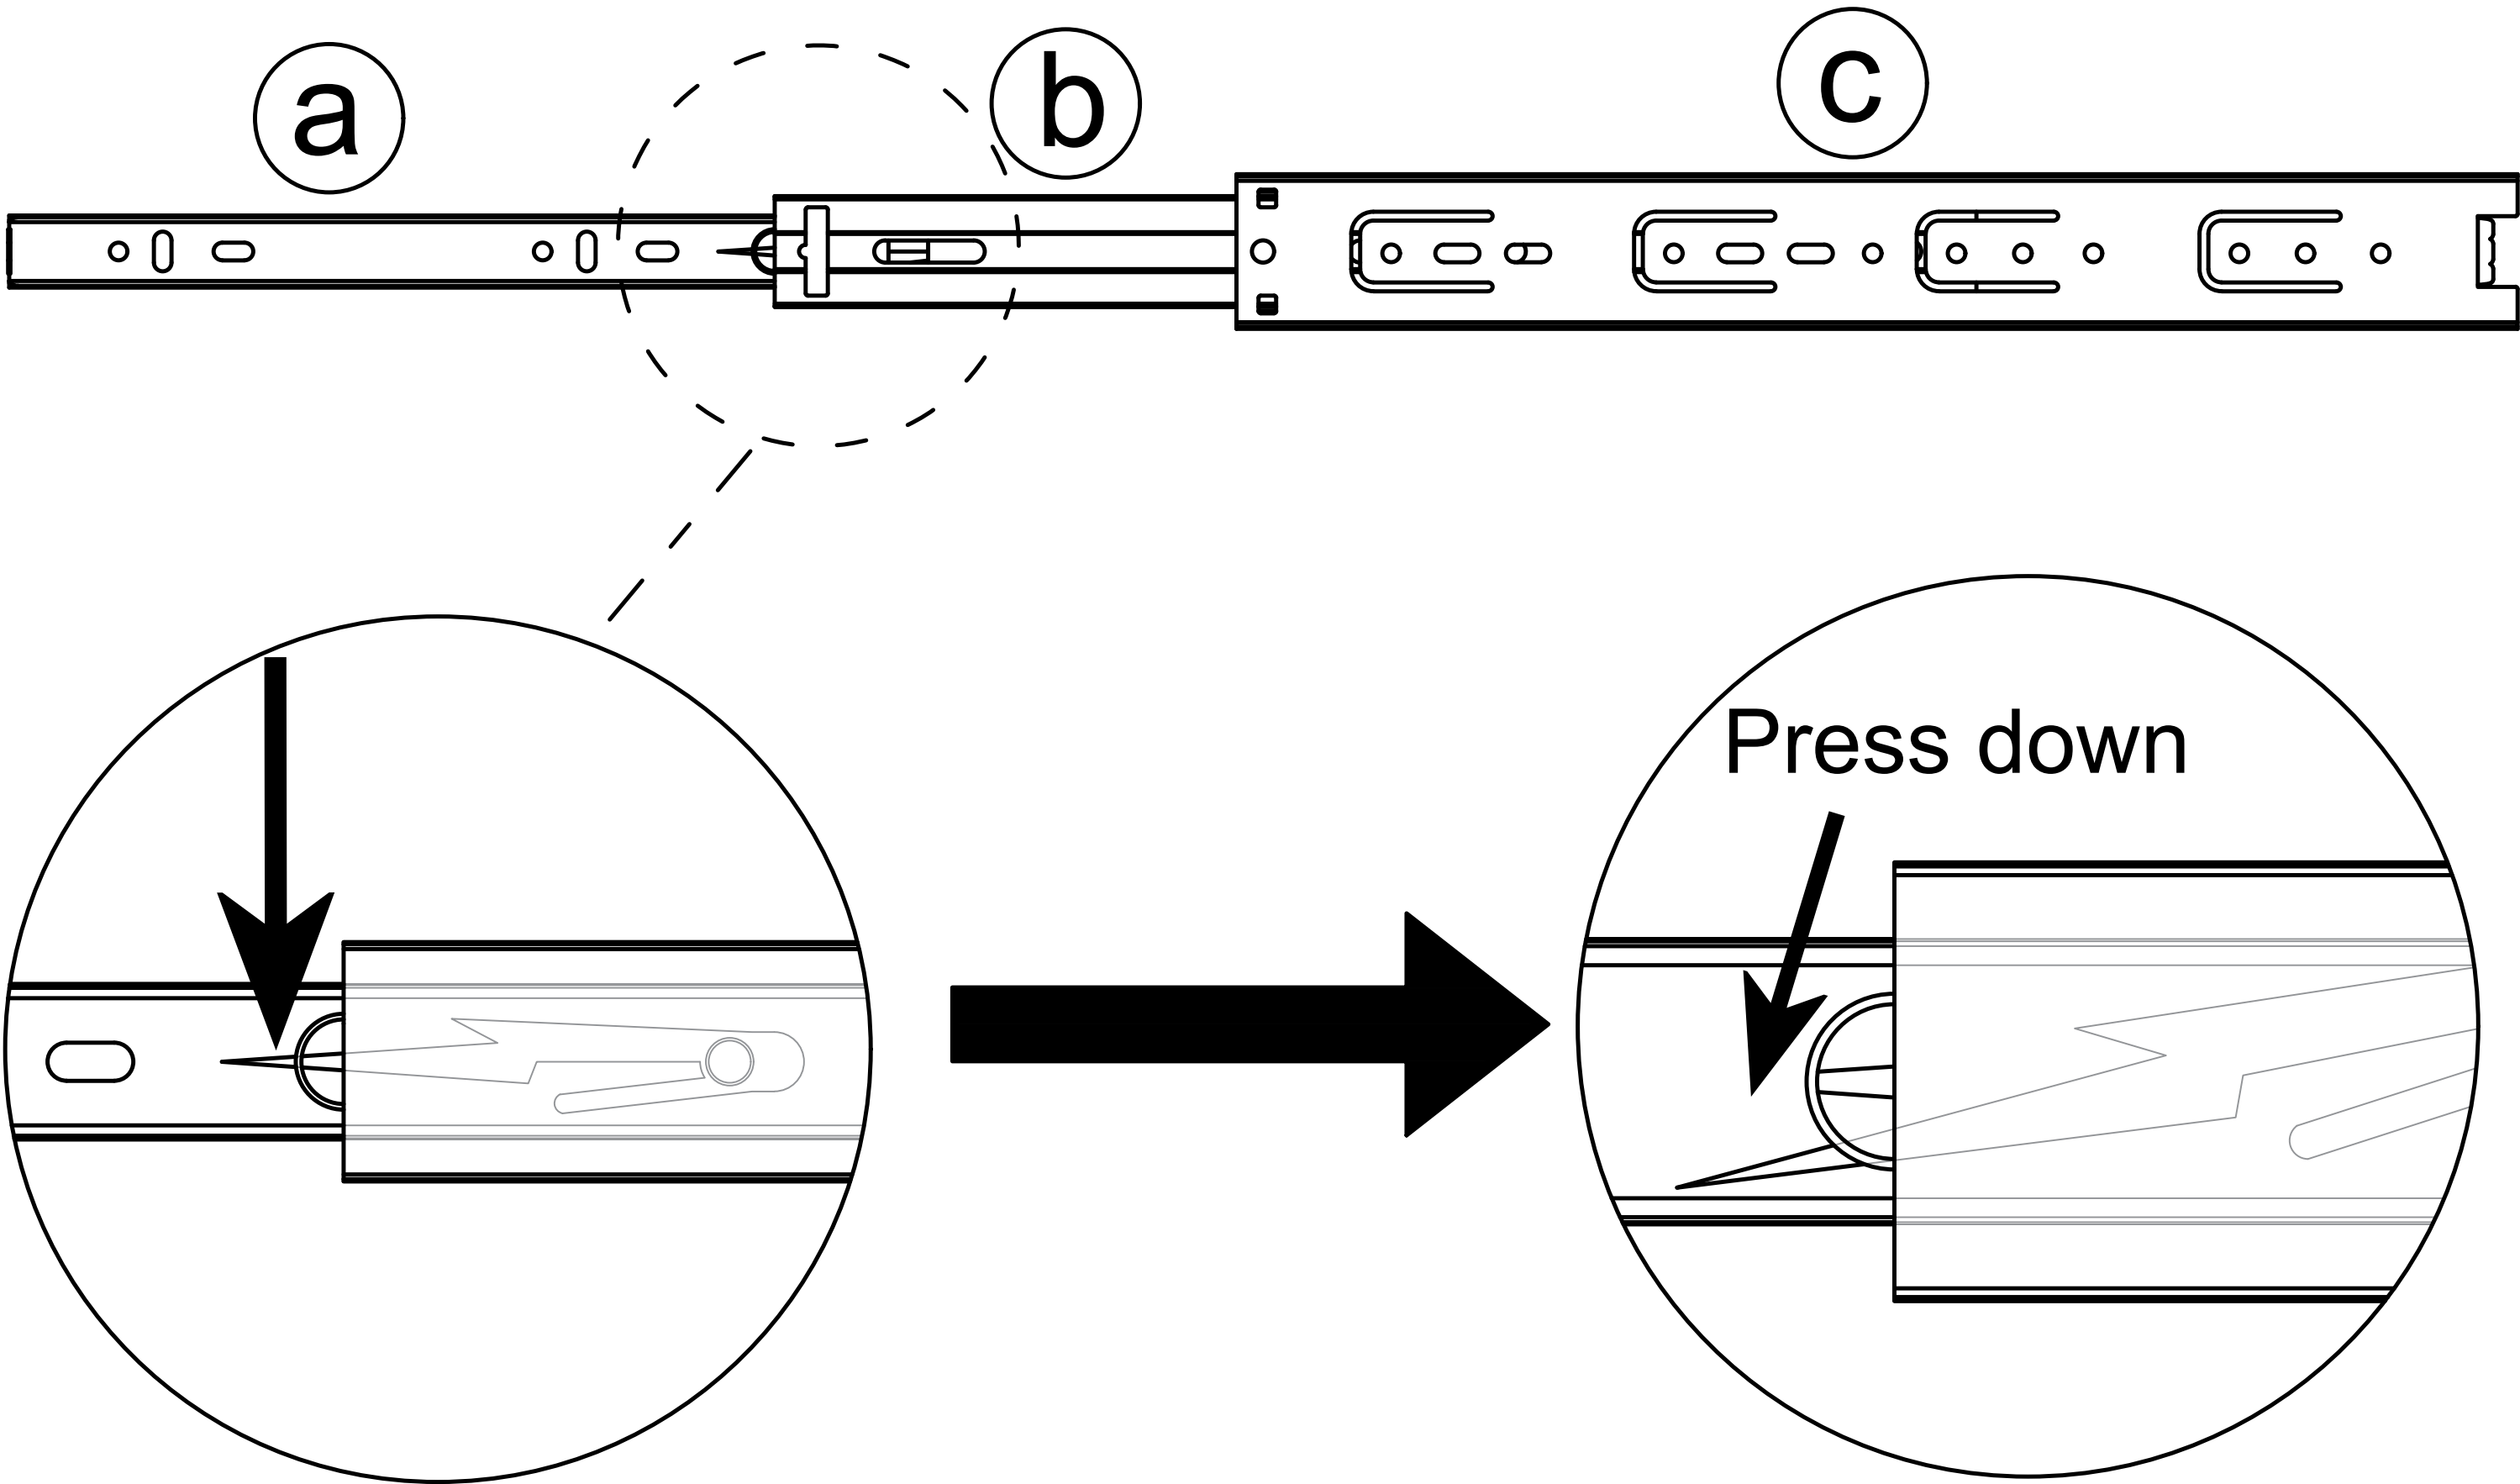


Step 2 : Press the nylon button and pull out (a).




Drawer rail decomposition completed schematic diagram

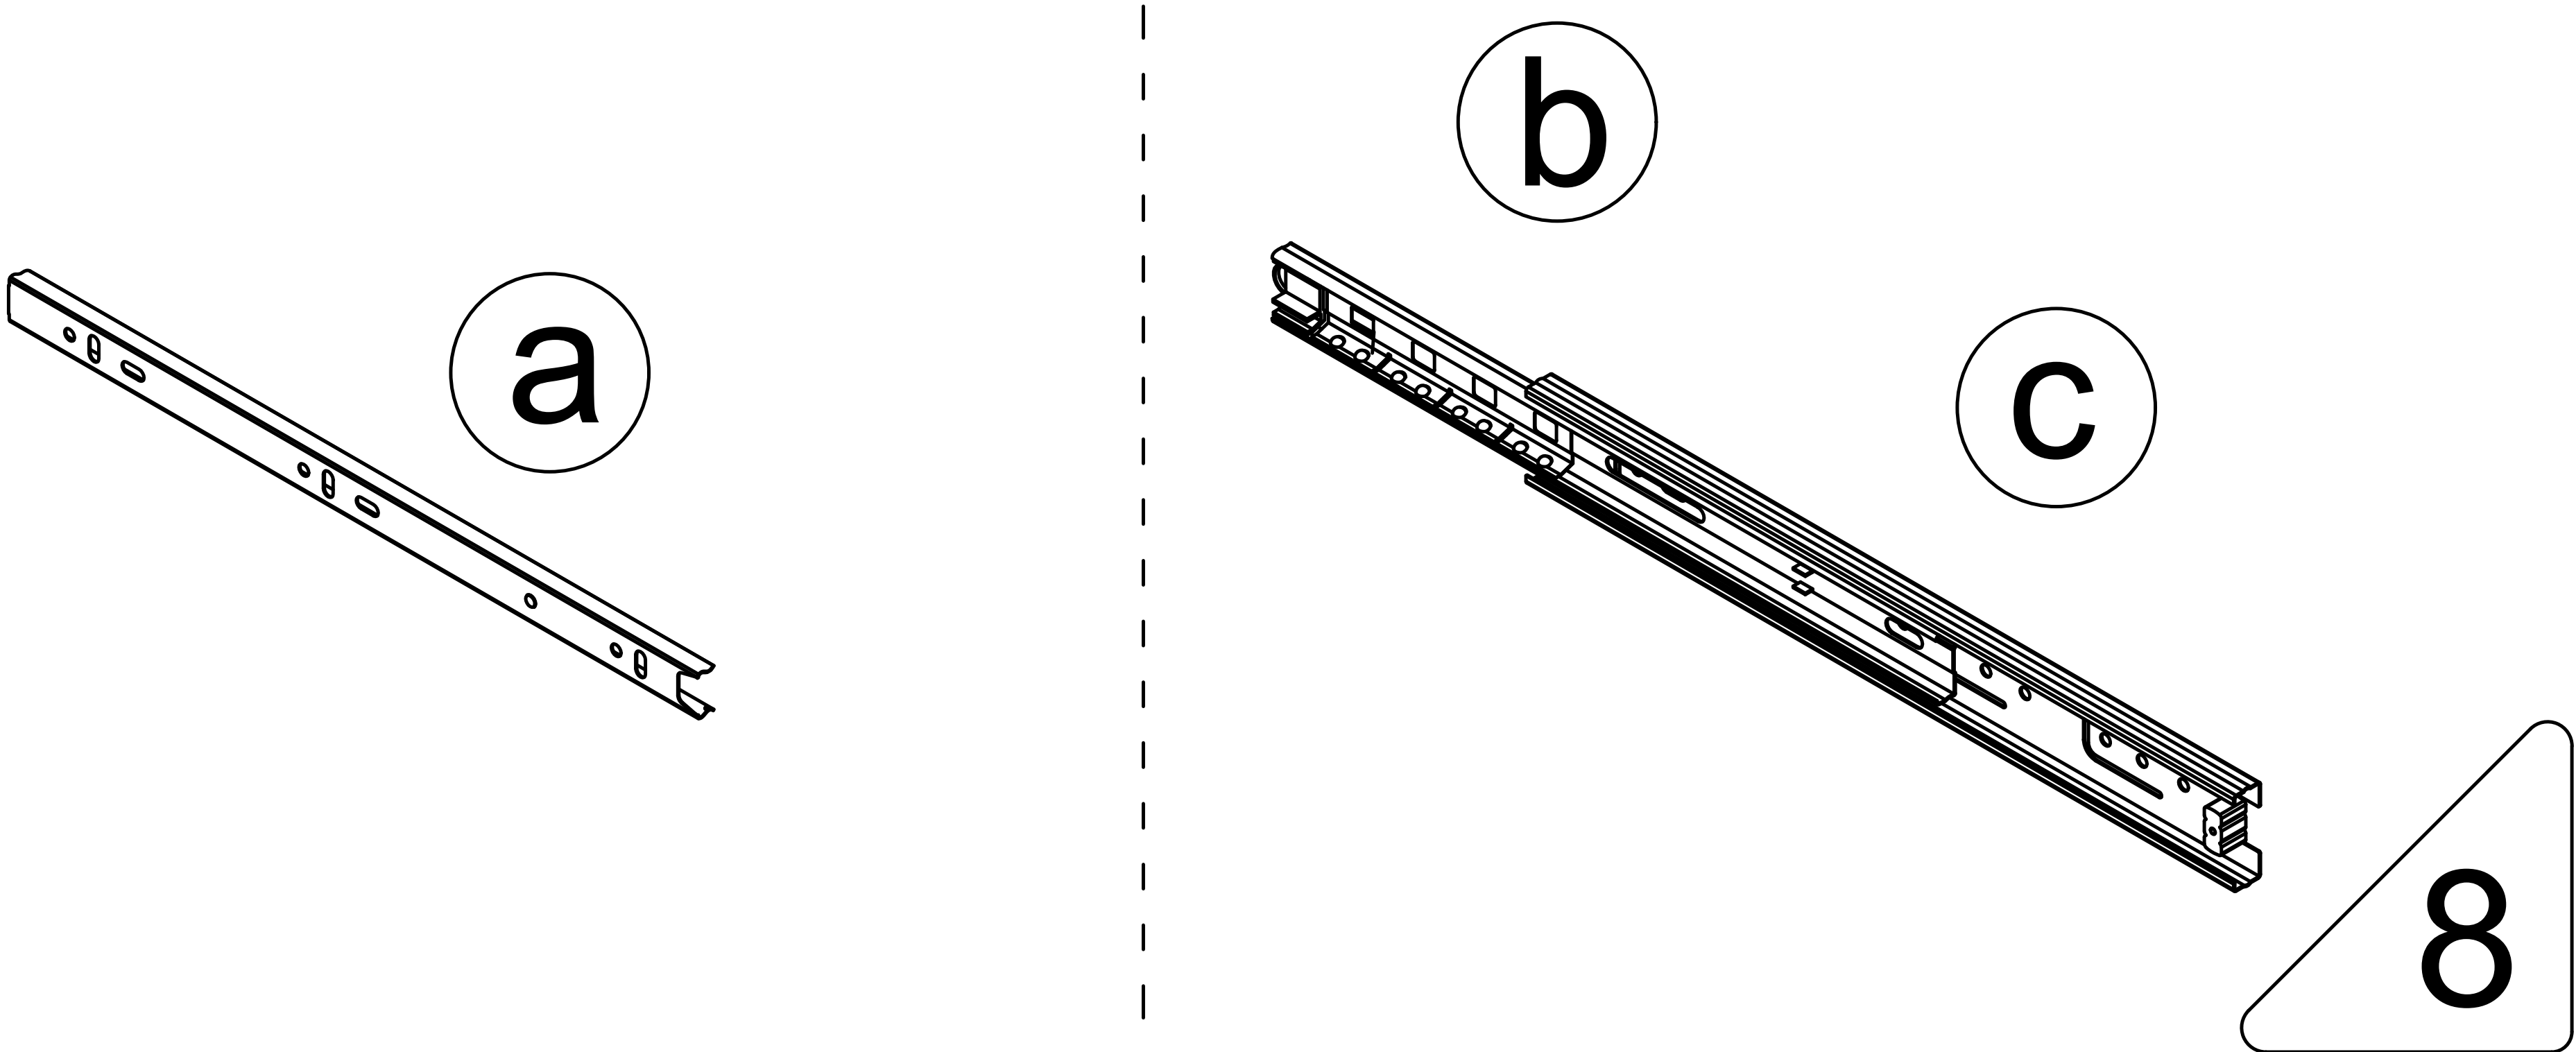



Step 6

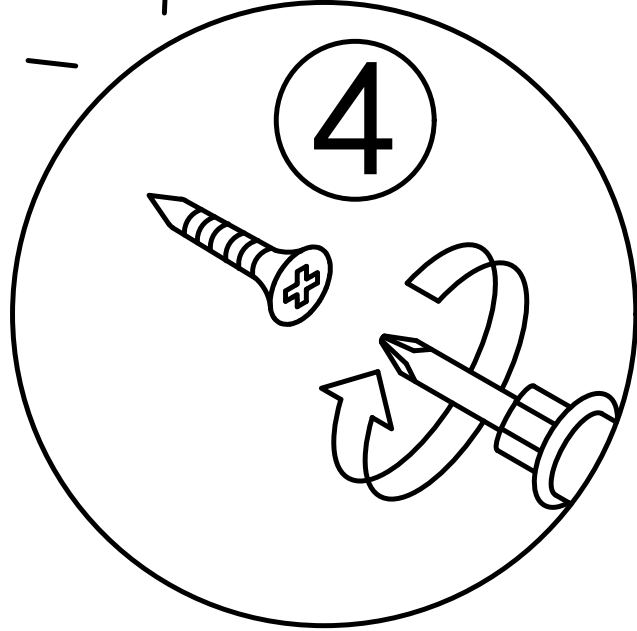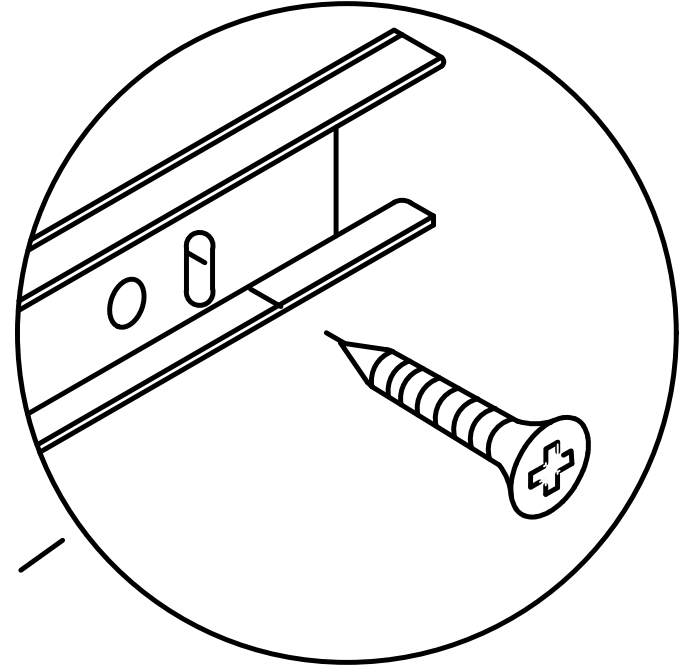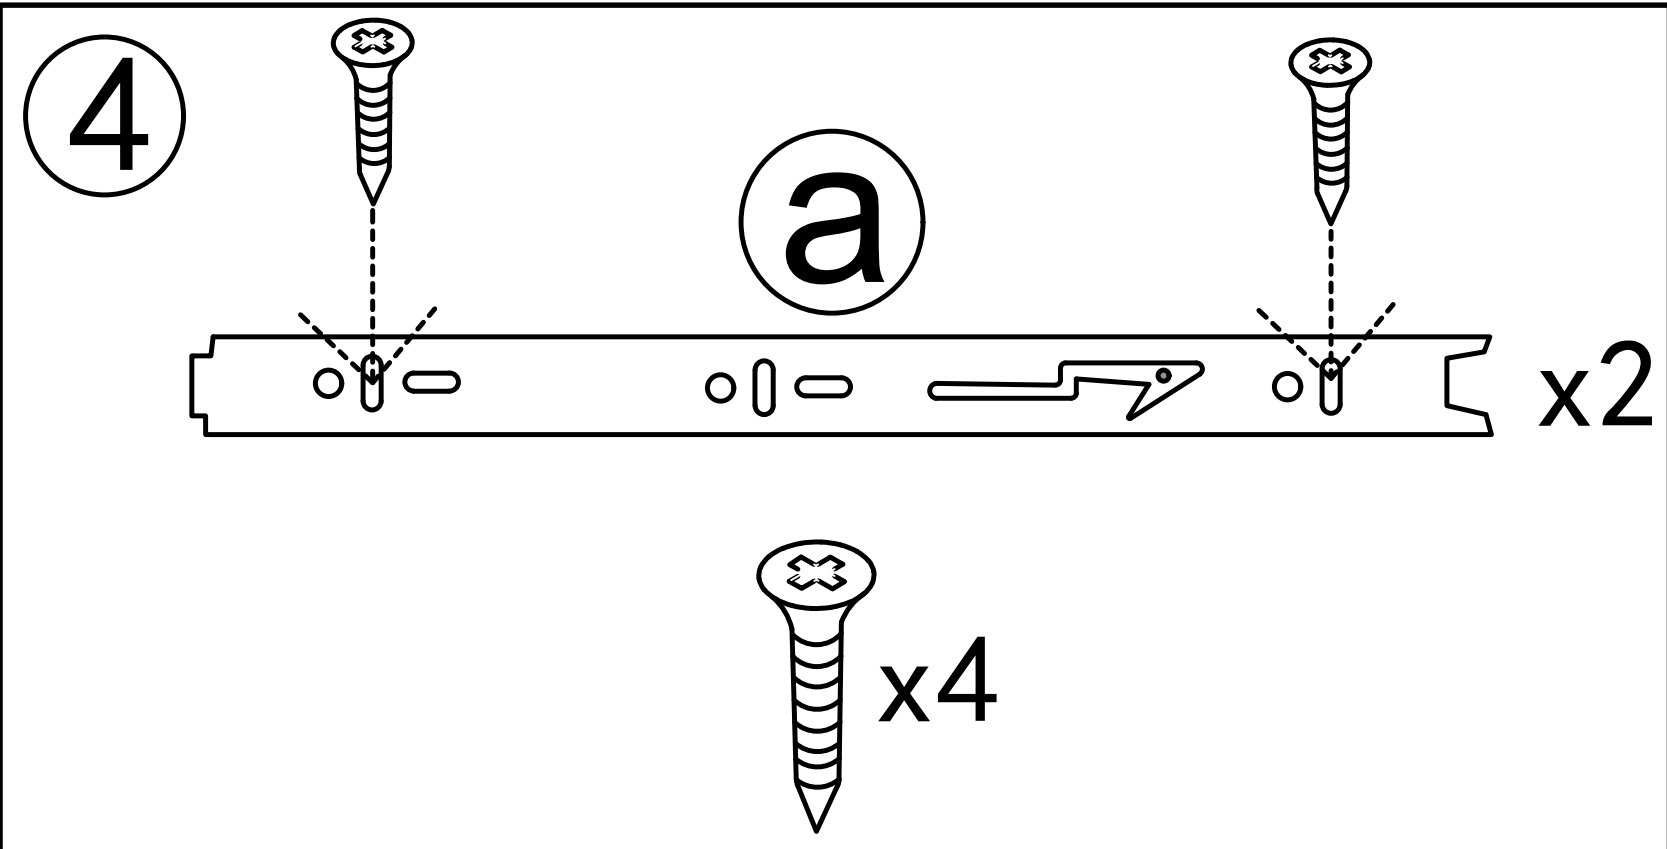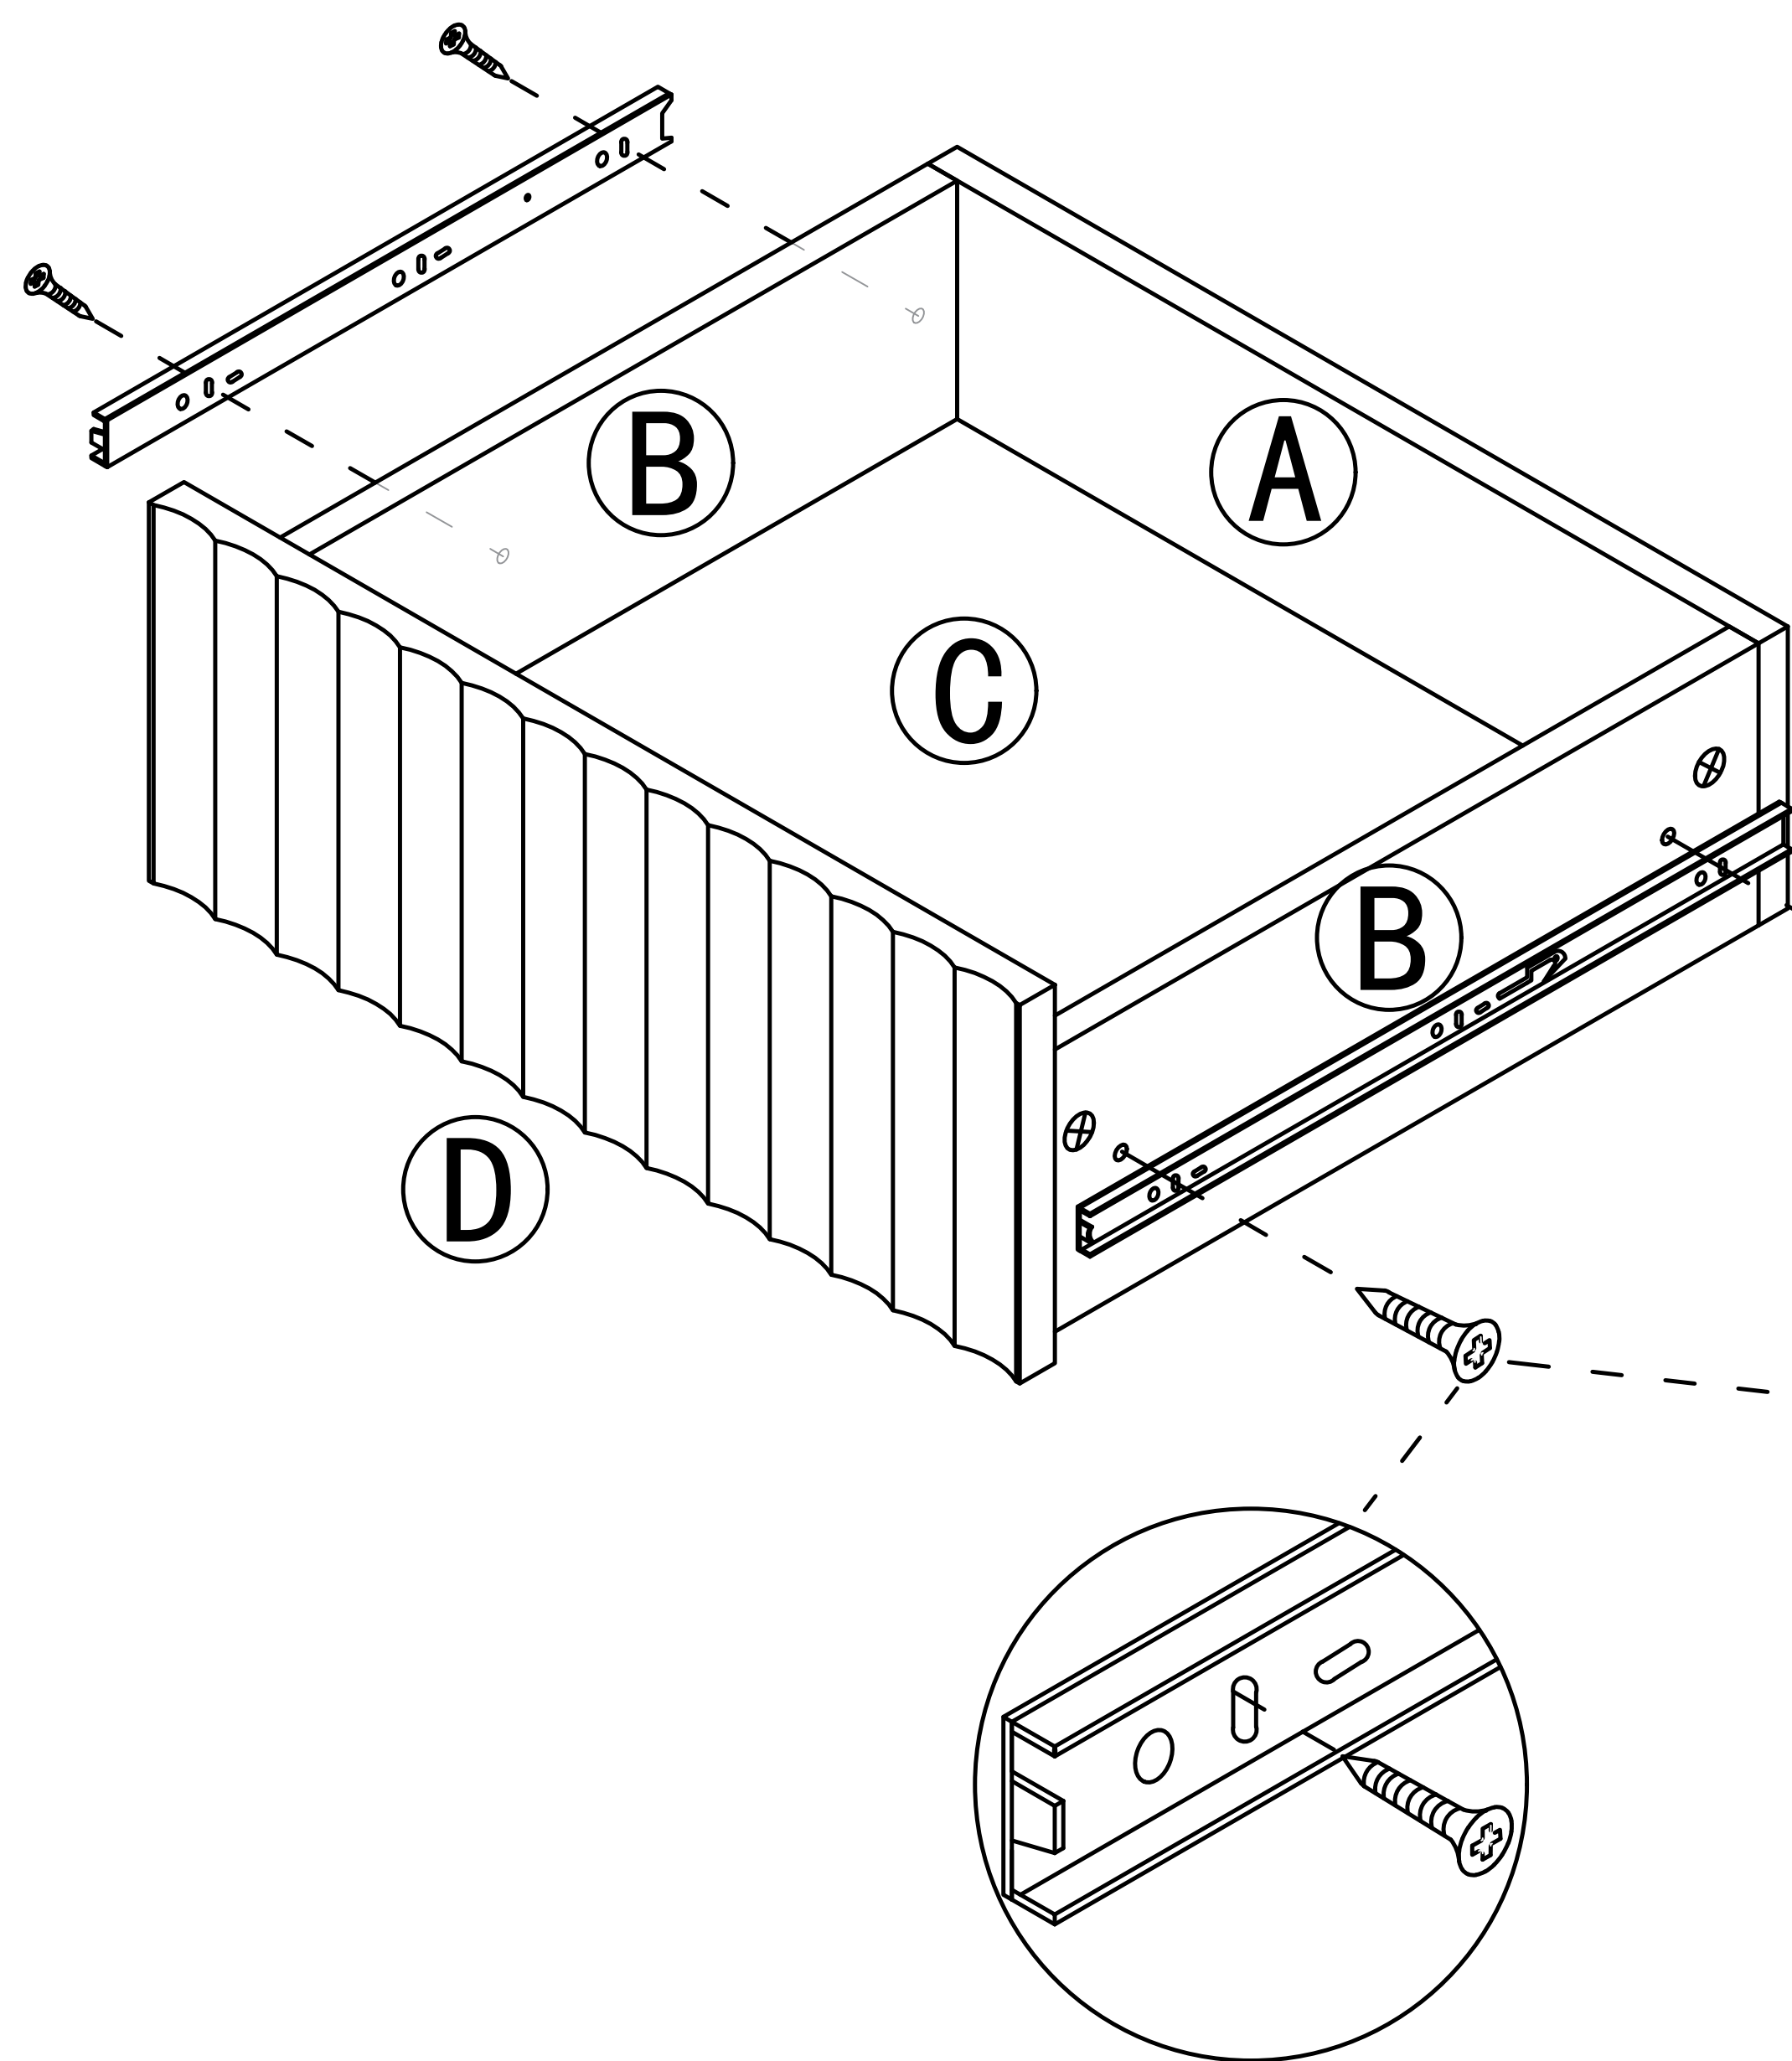



Step 7

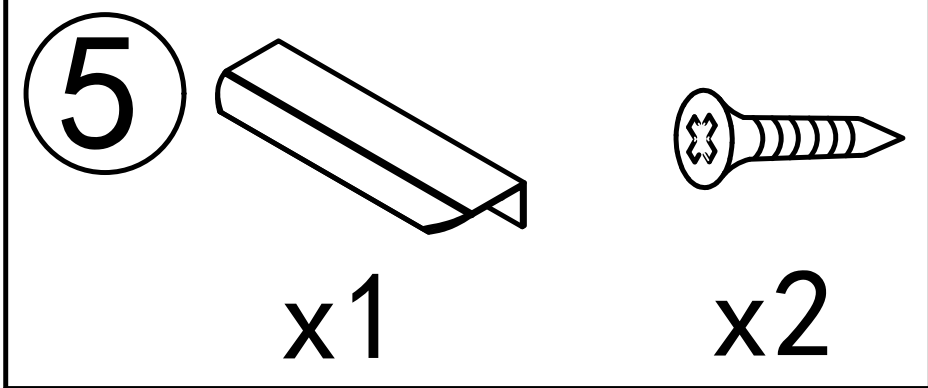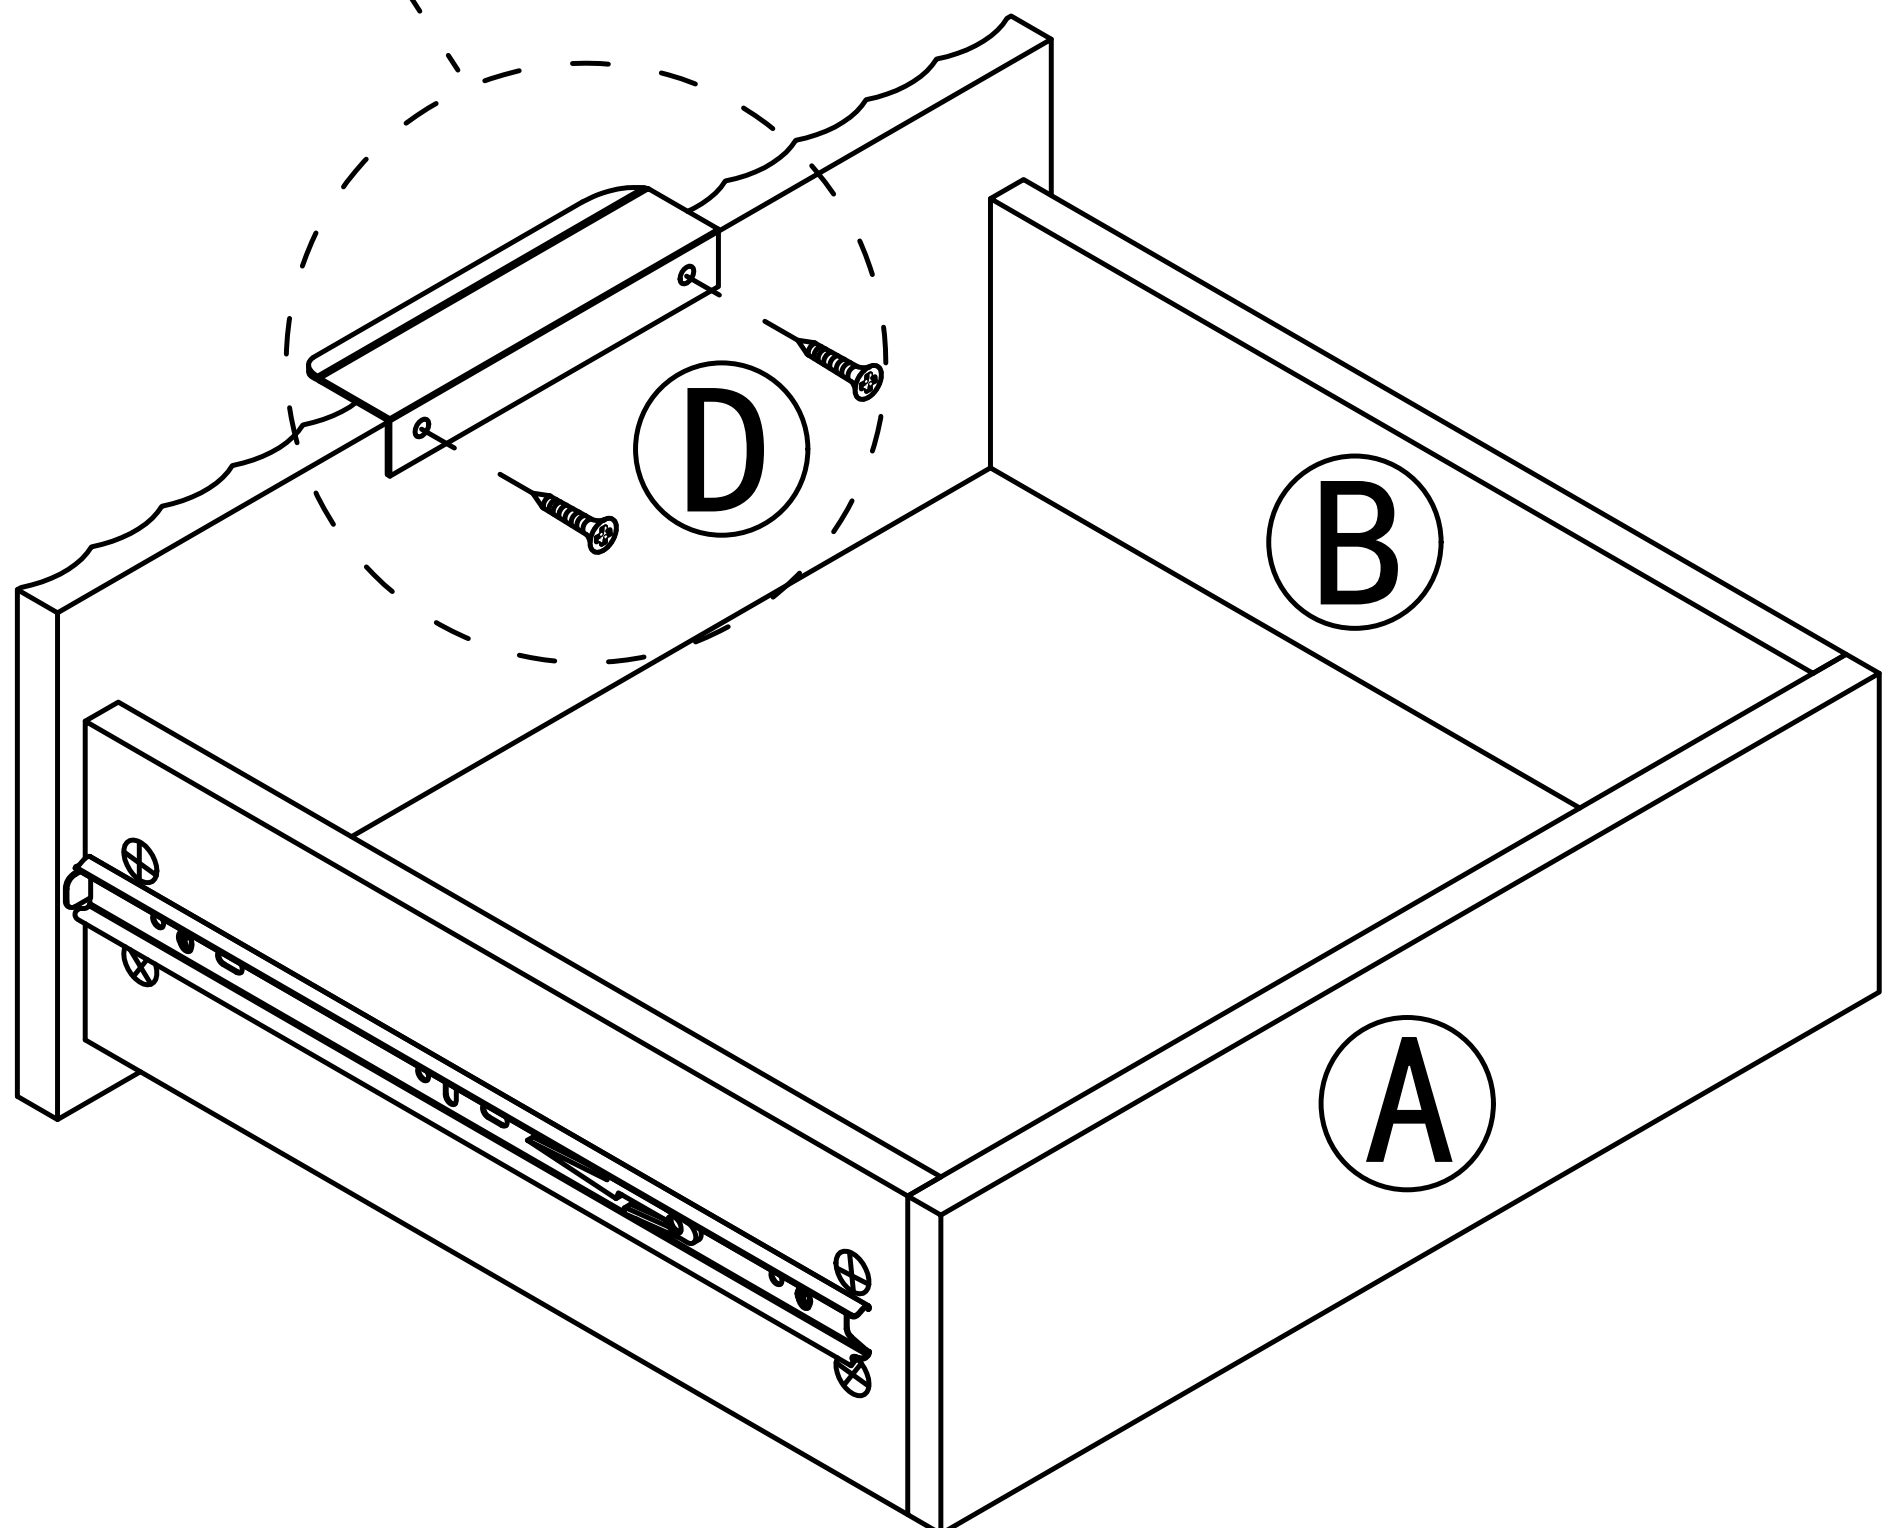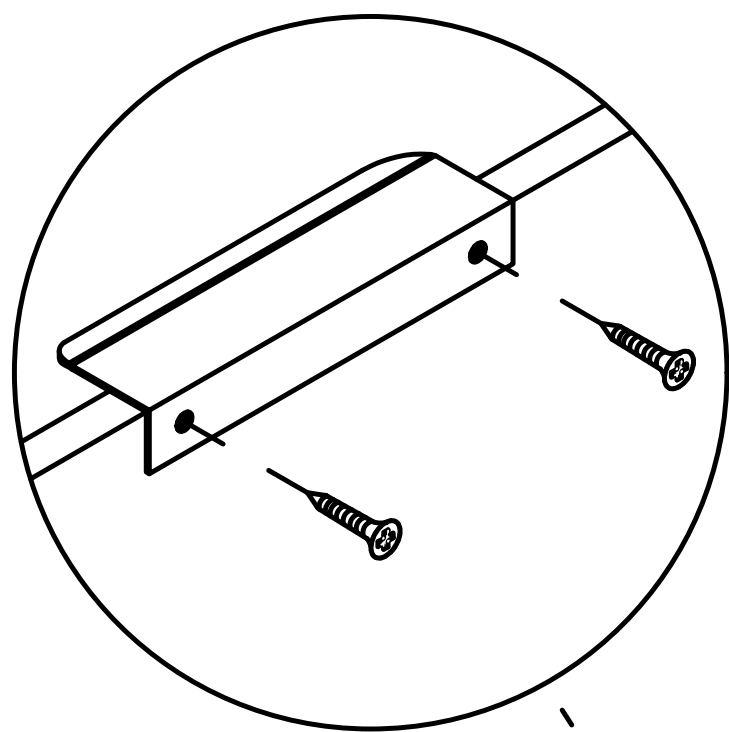


Step 8

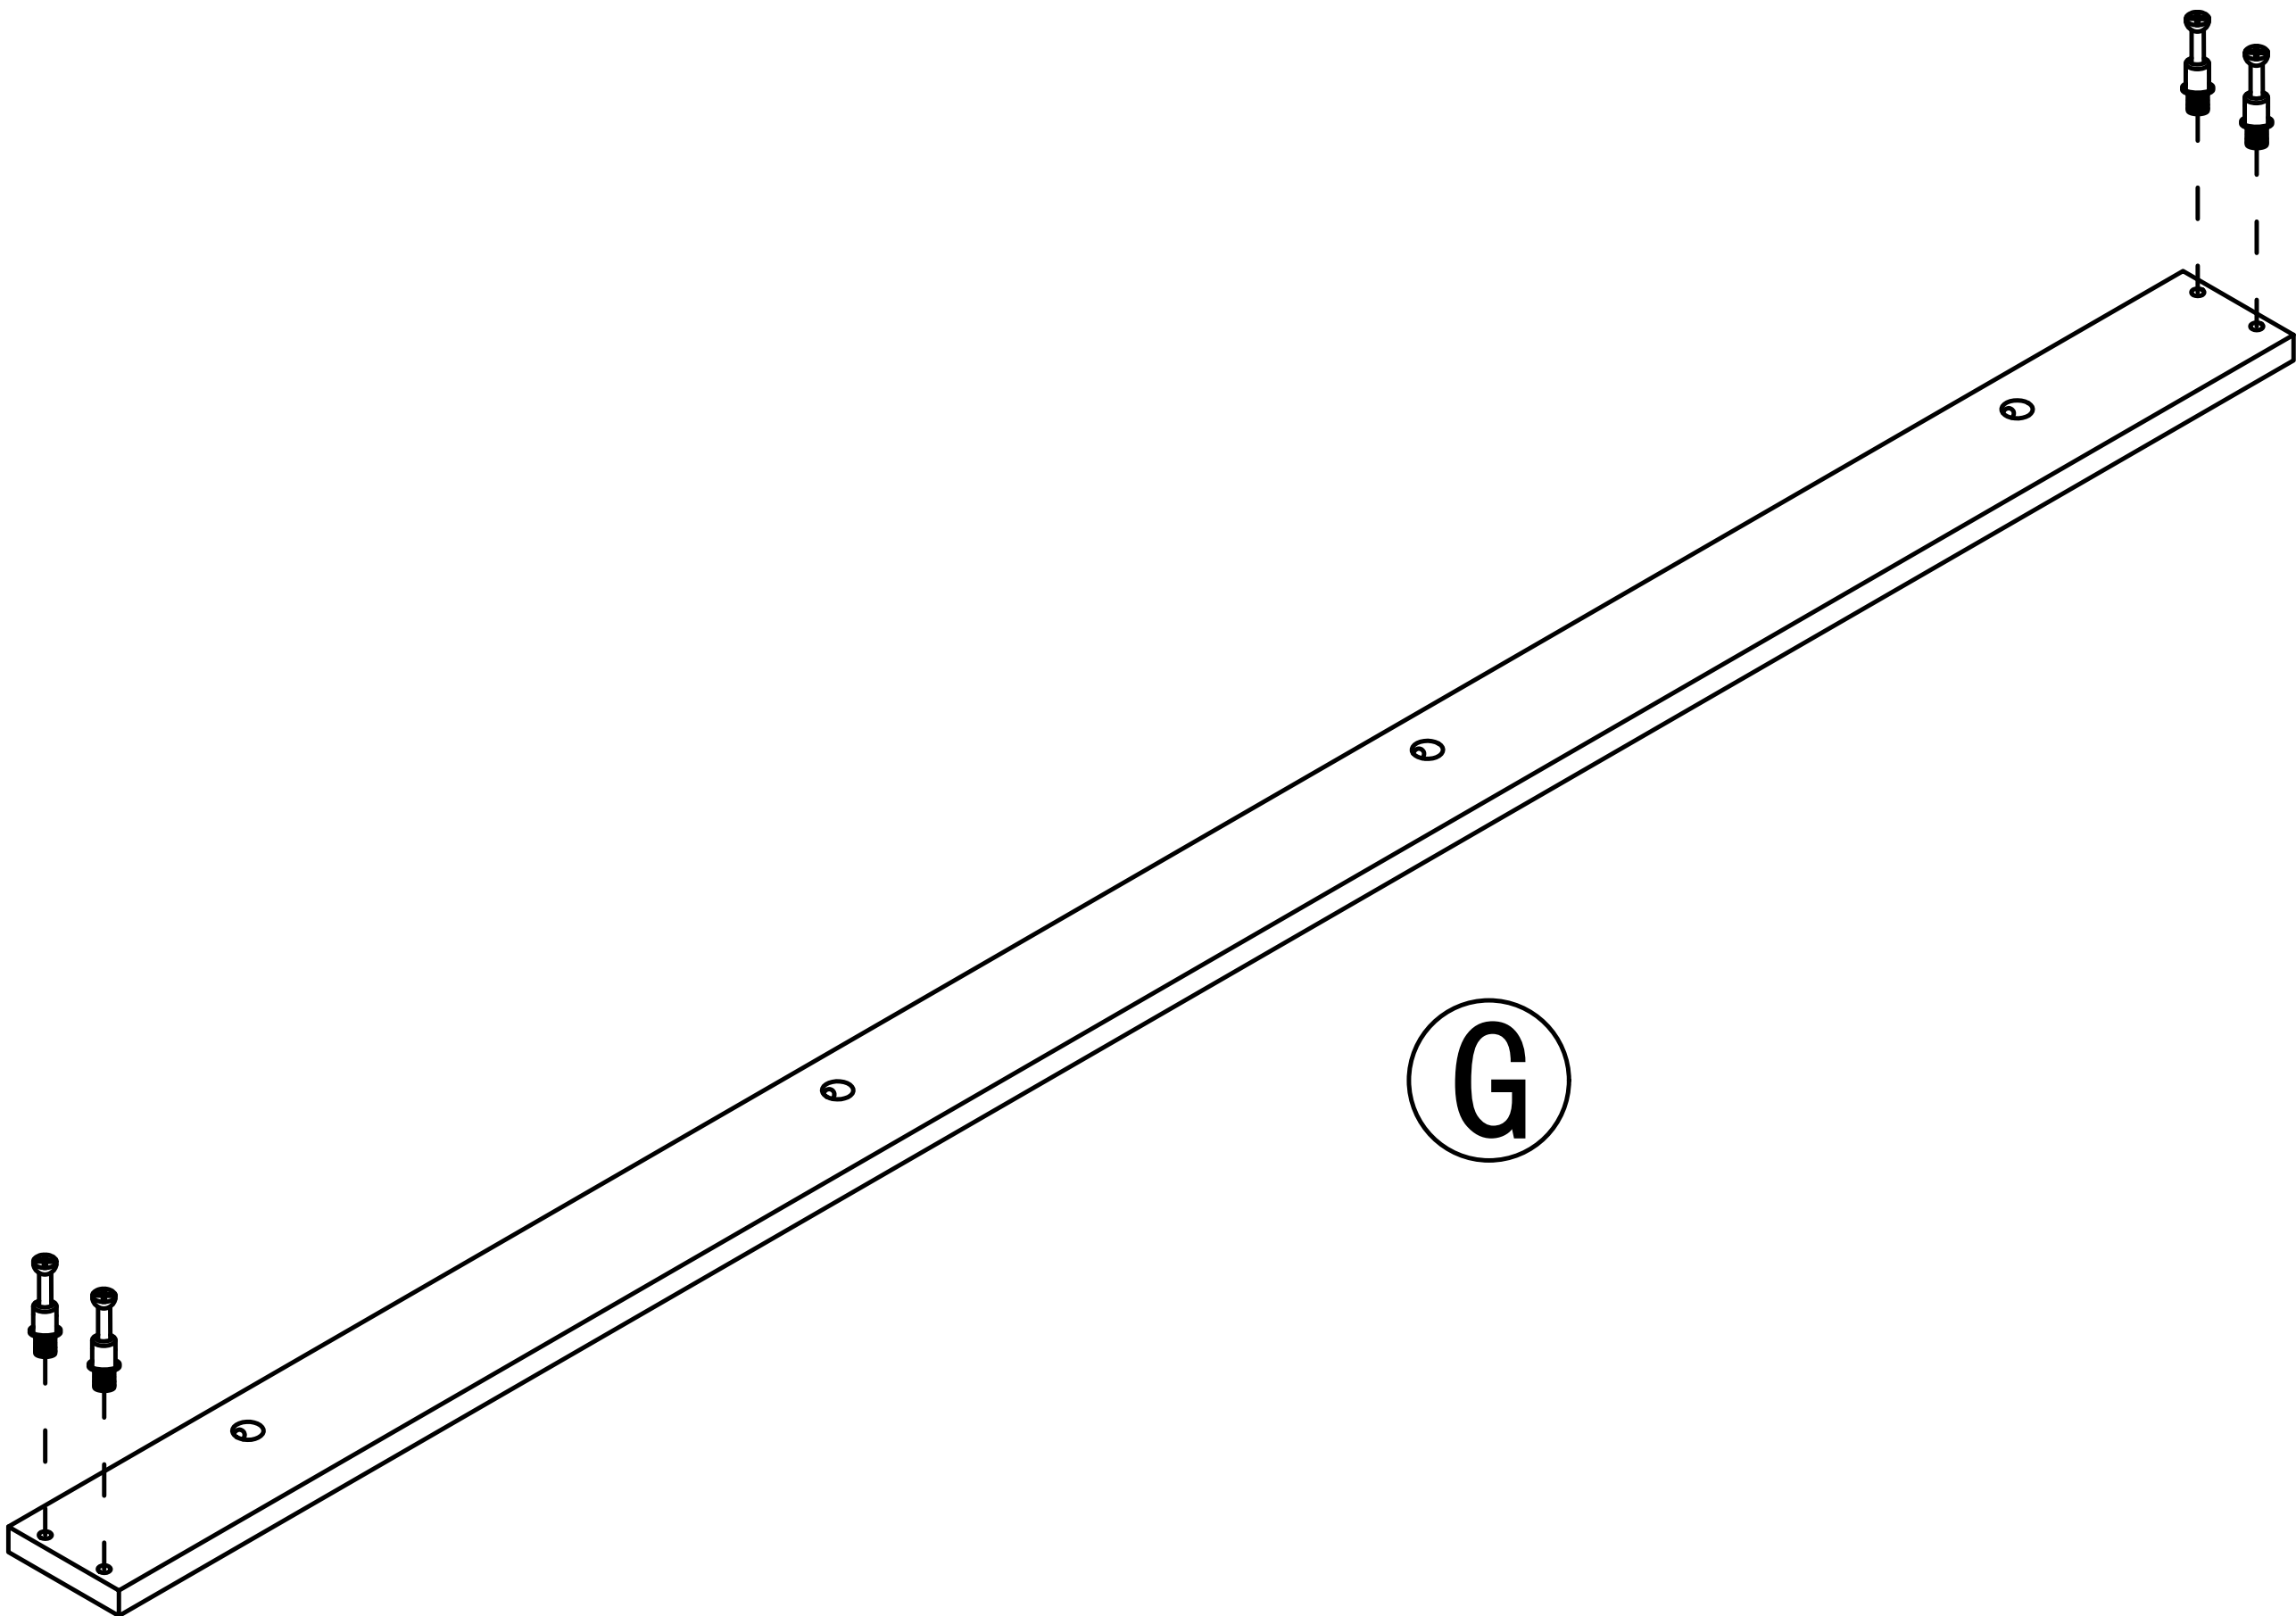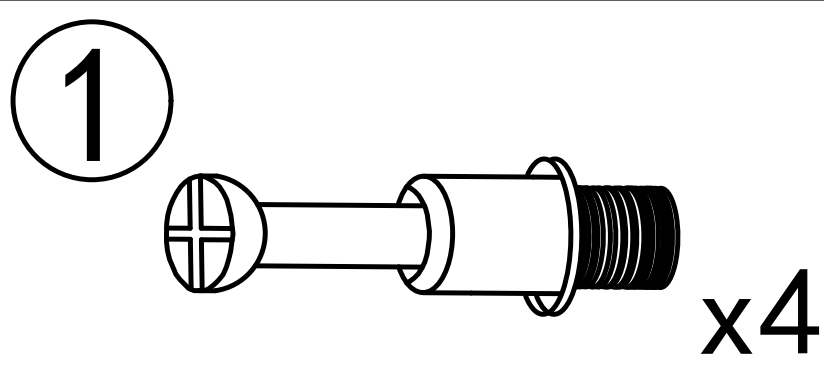


Step 9

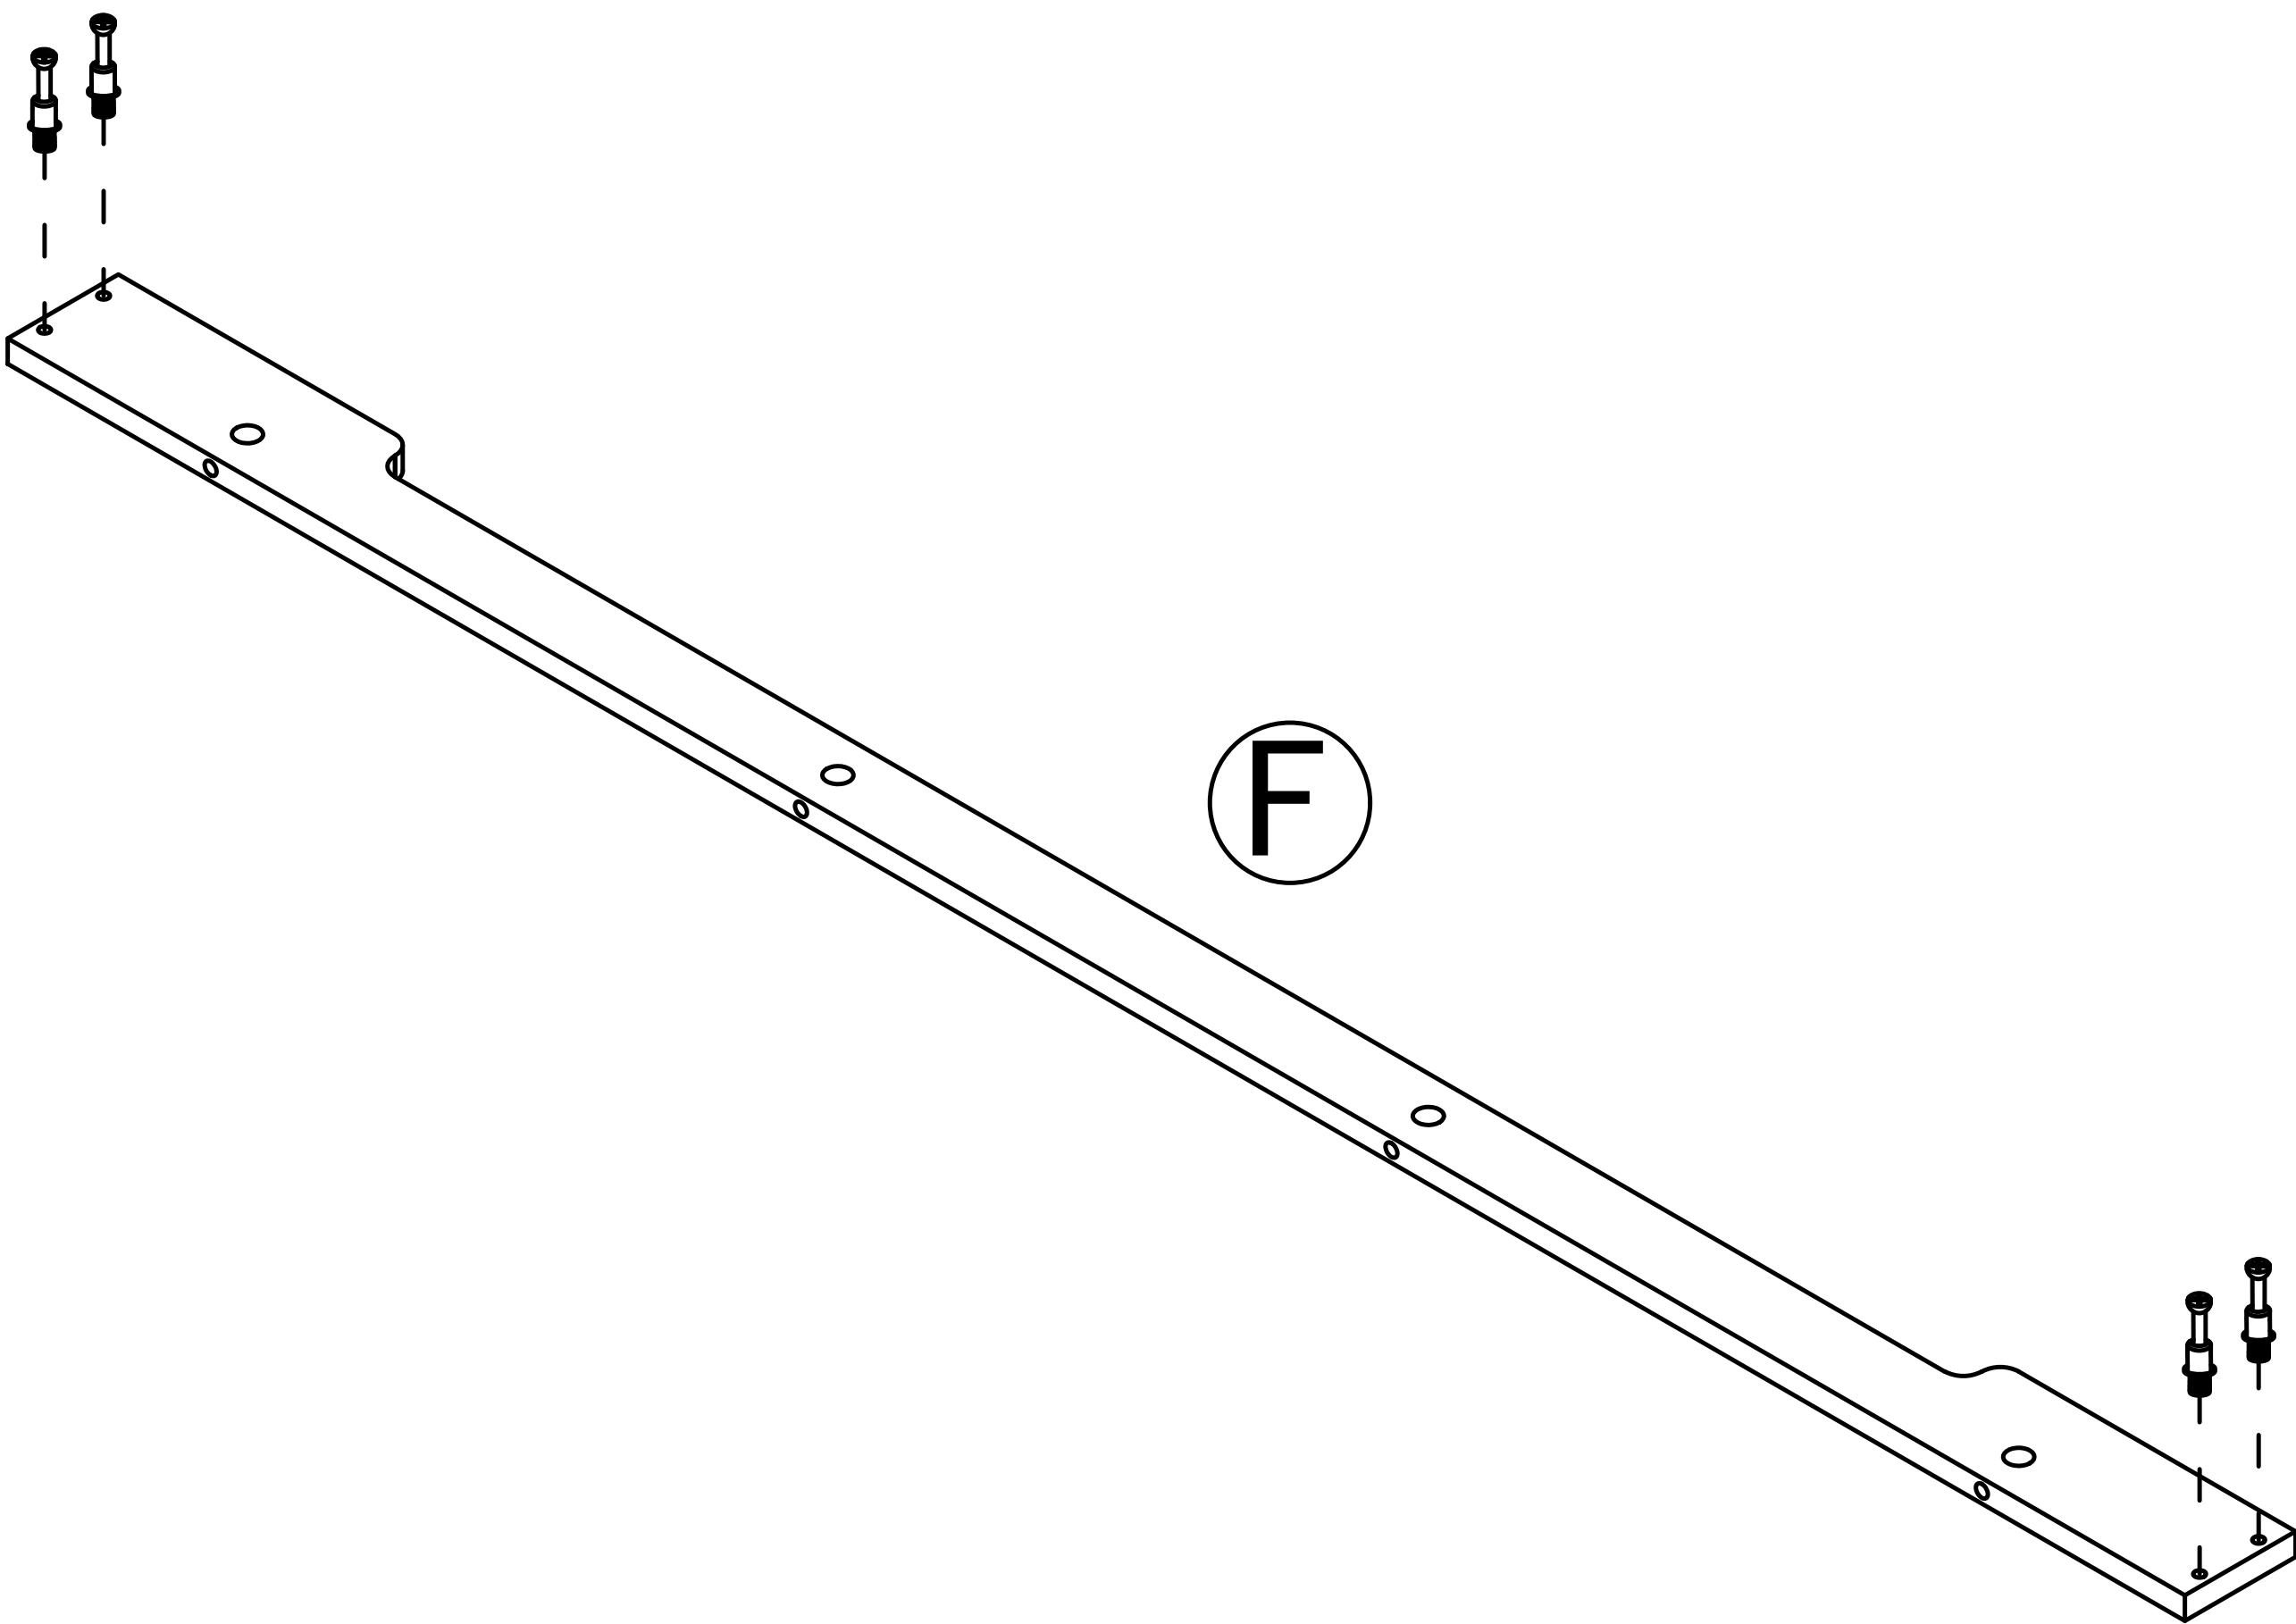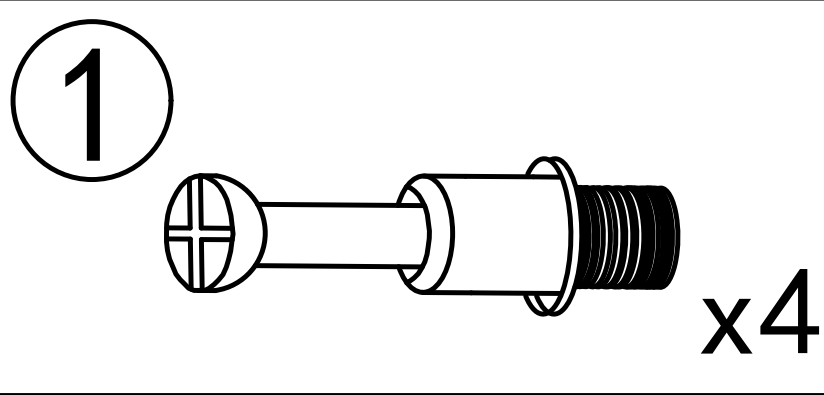


Step 10

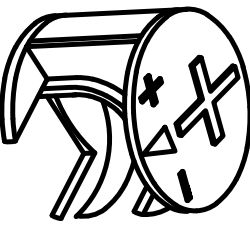
2  x4

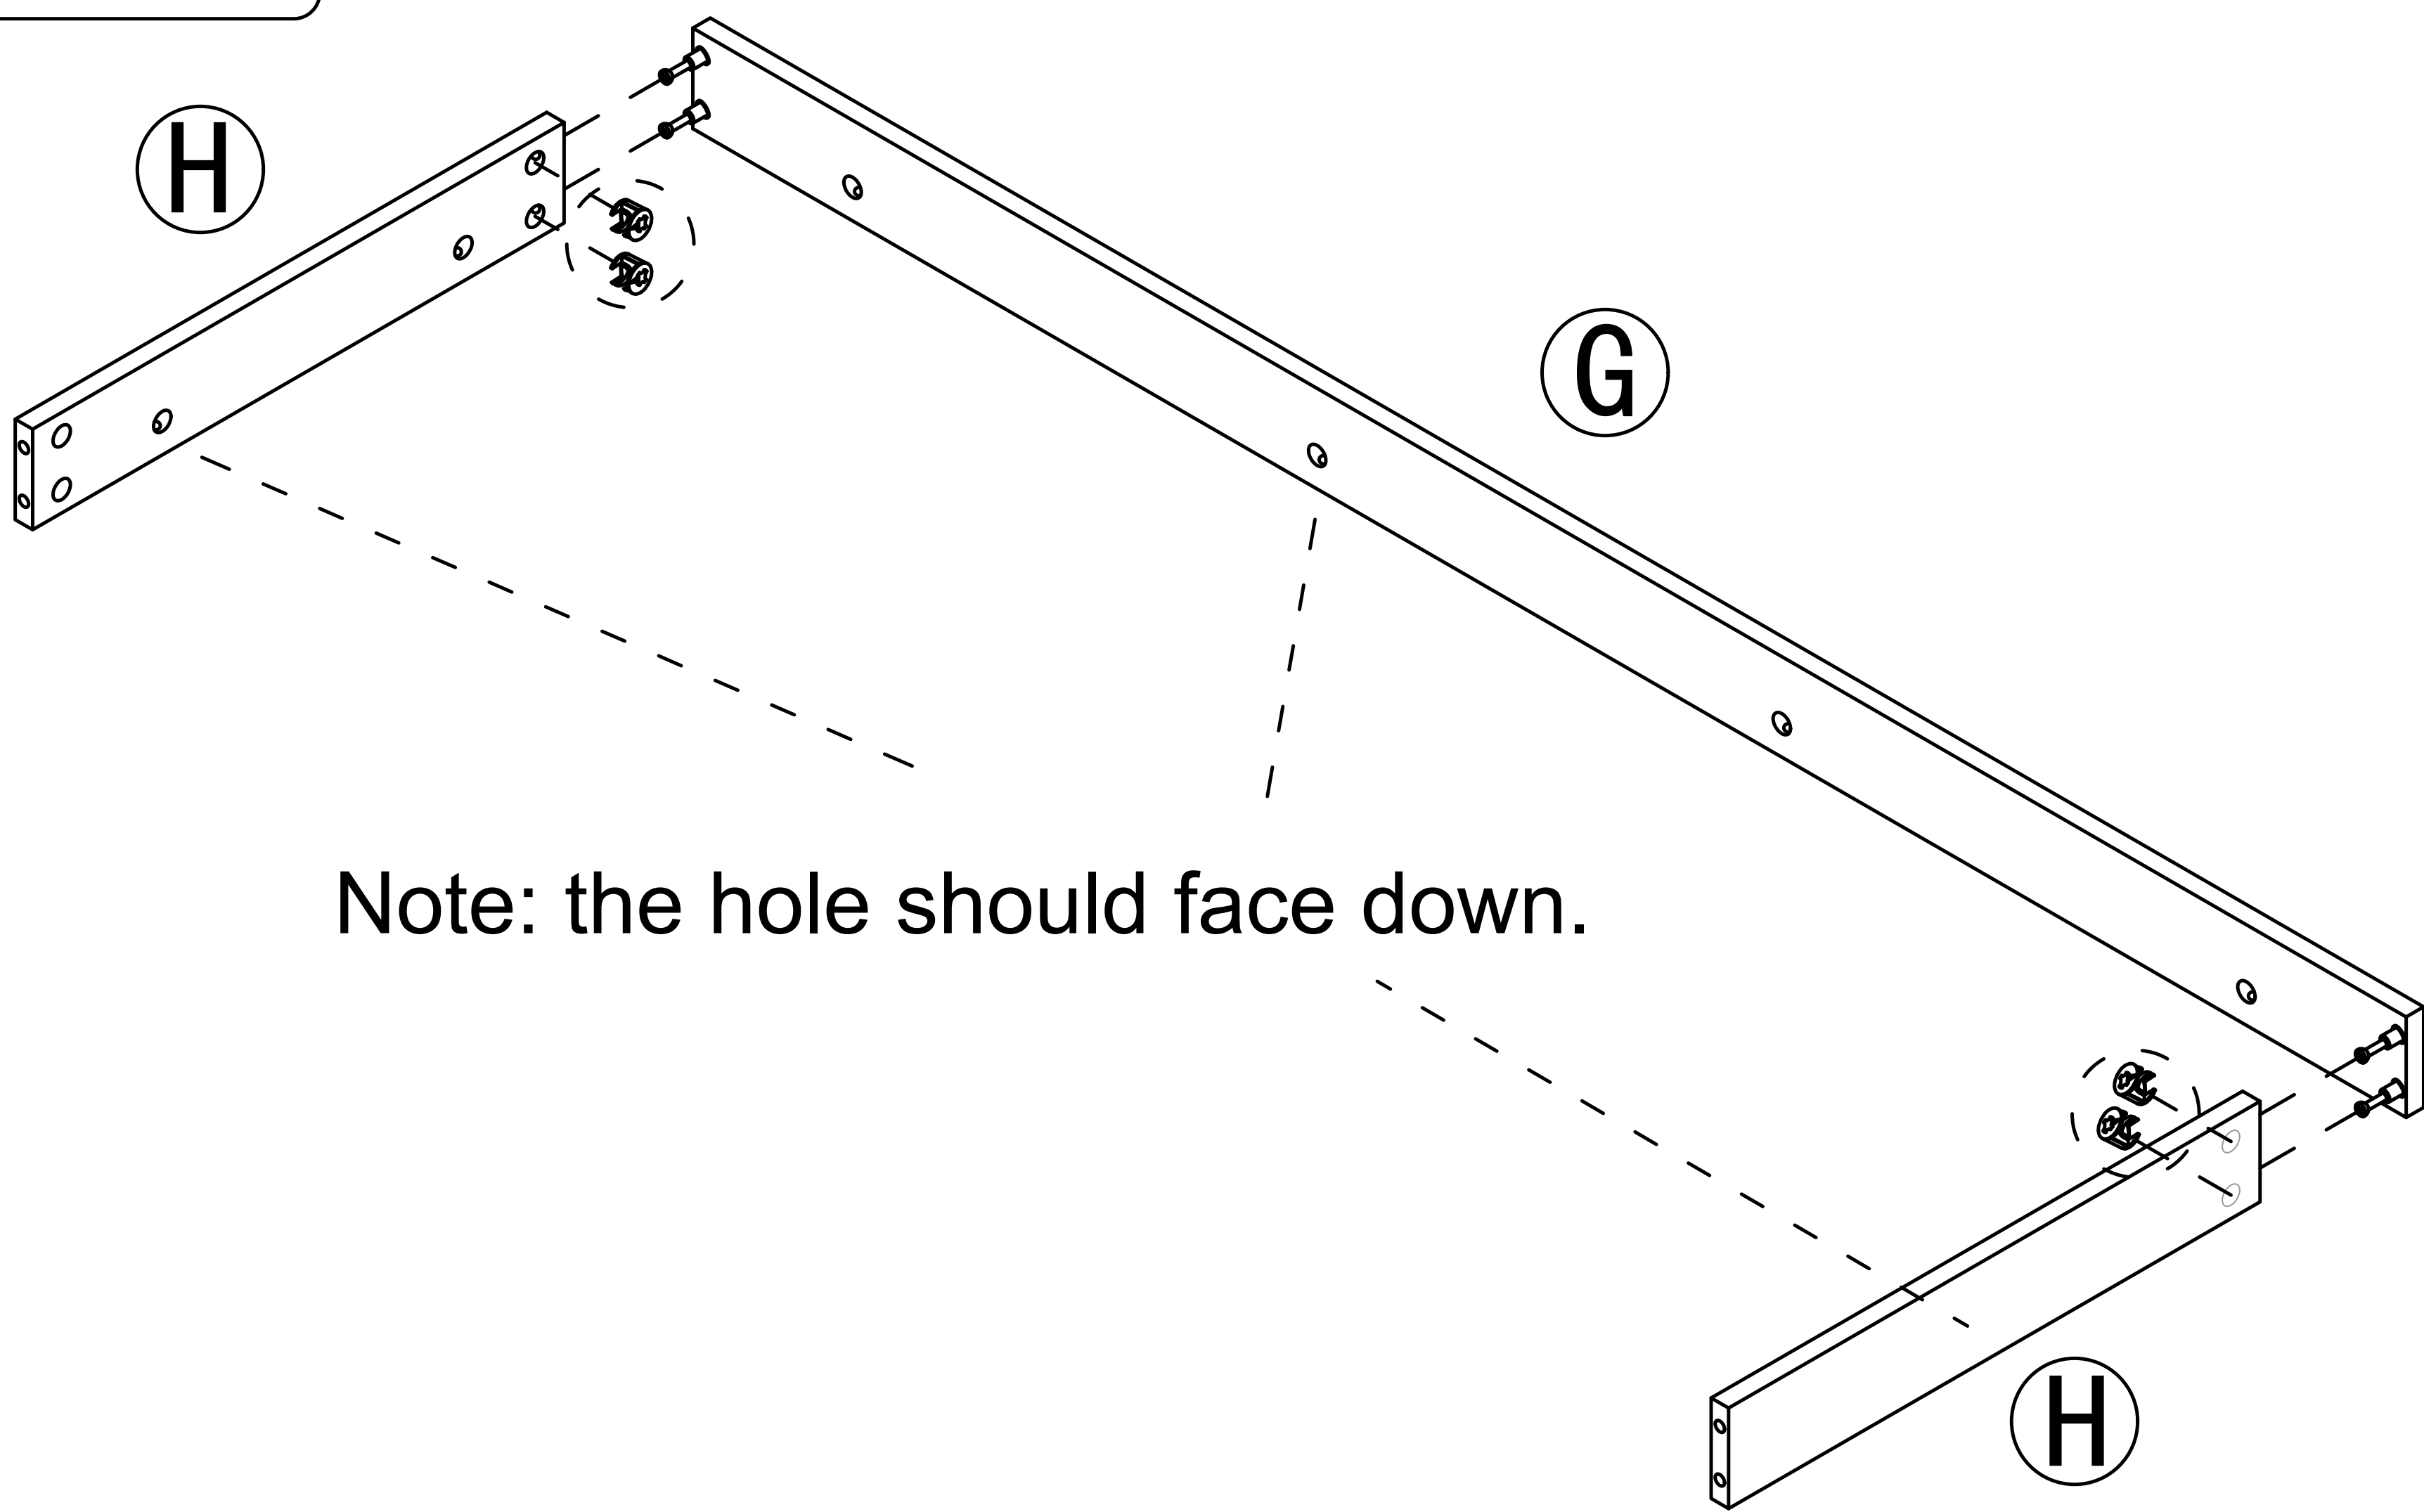



Note: the hole should face down.

Step 11


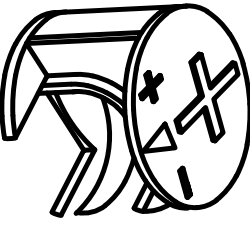
2  x4

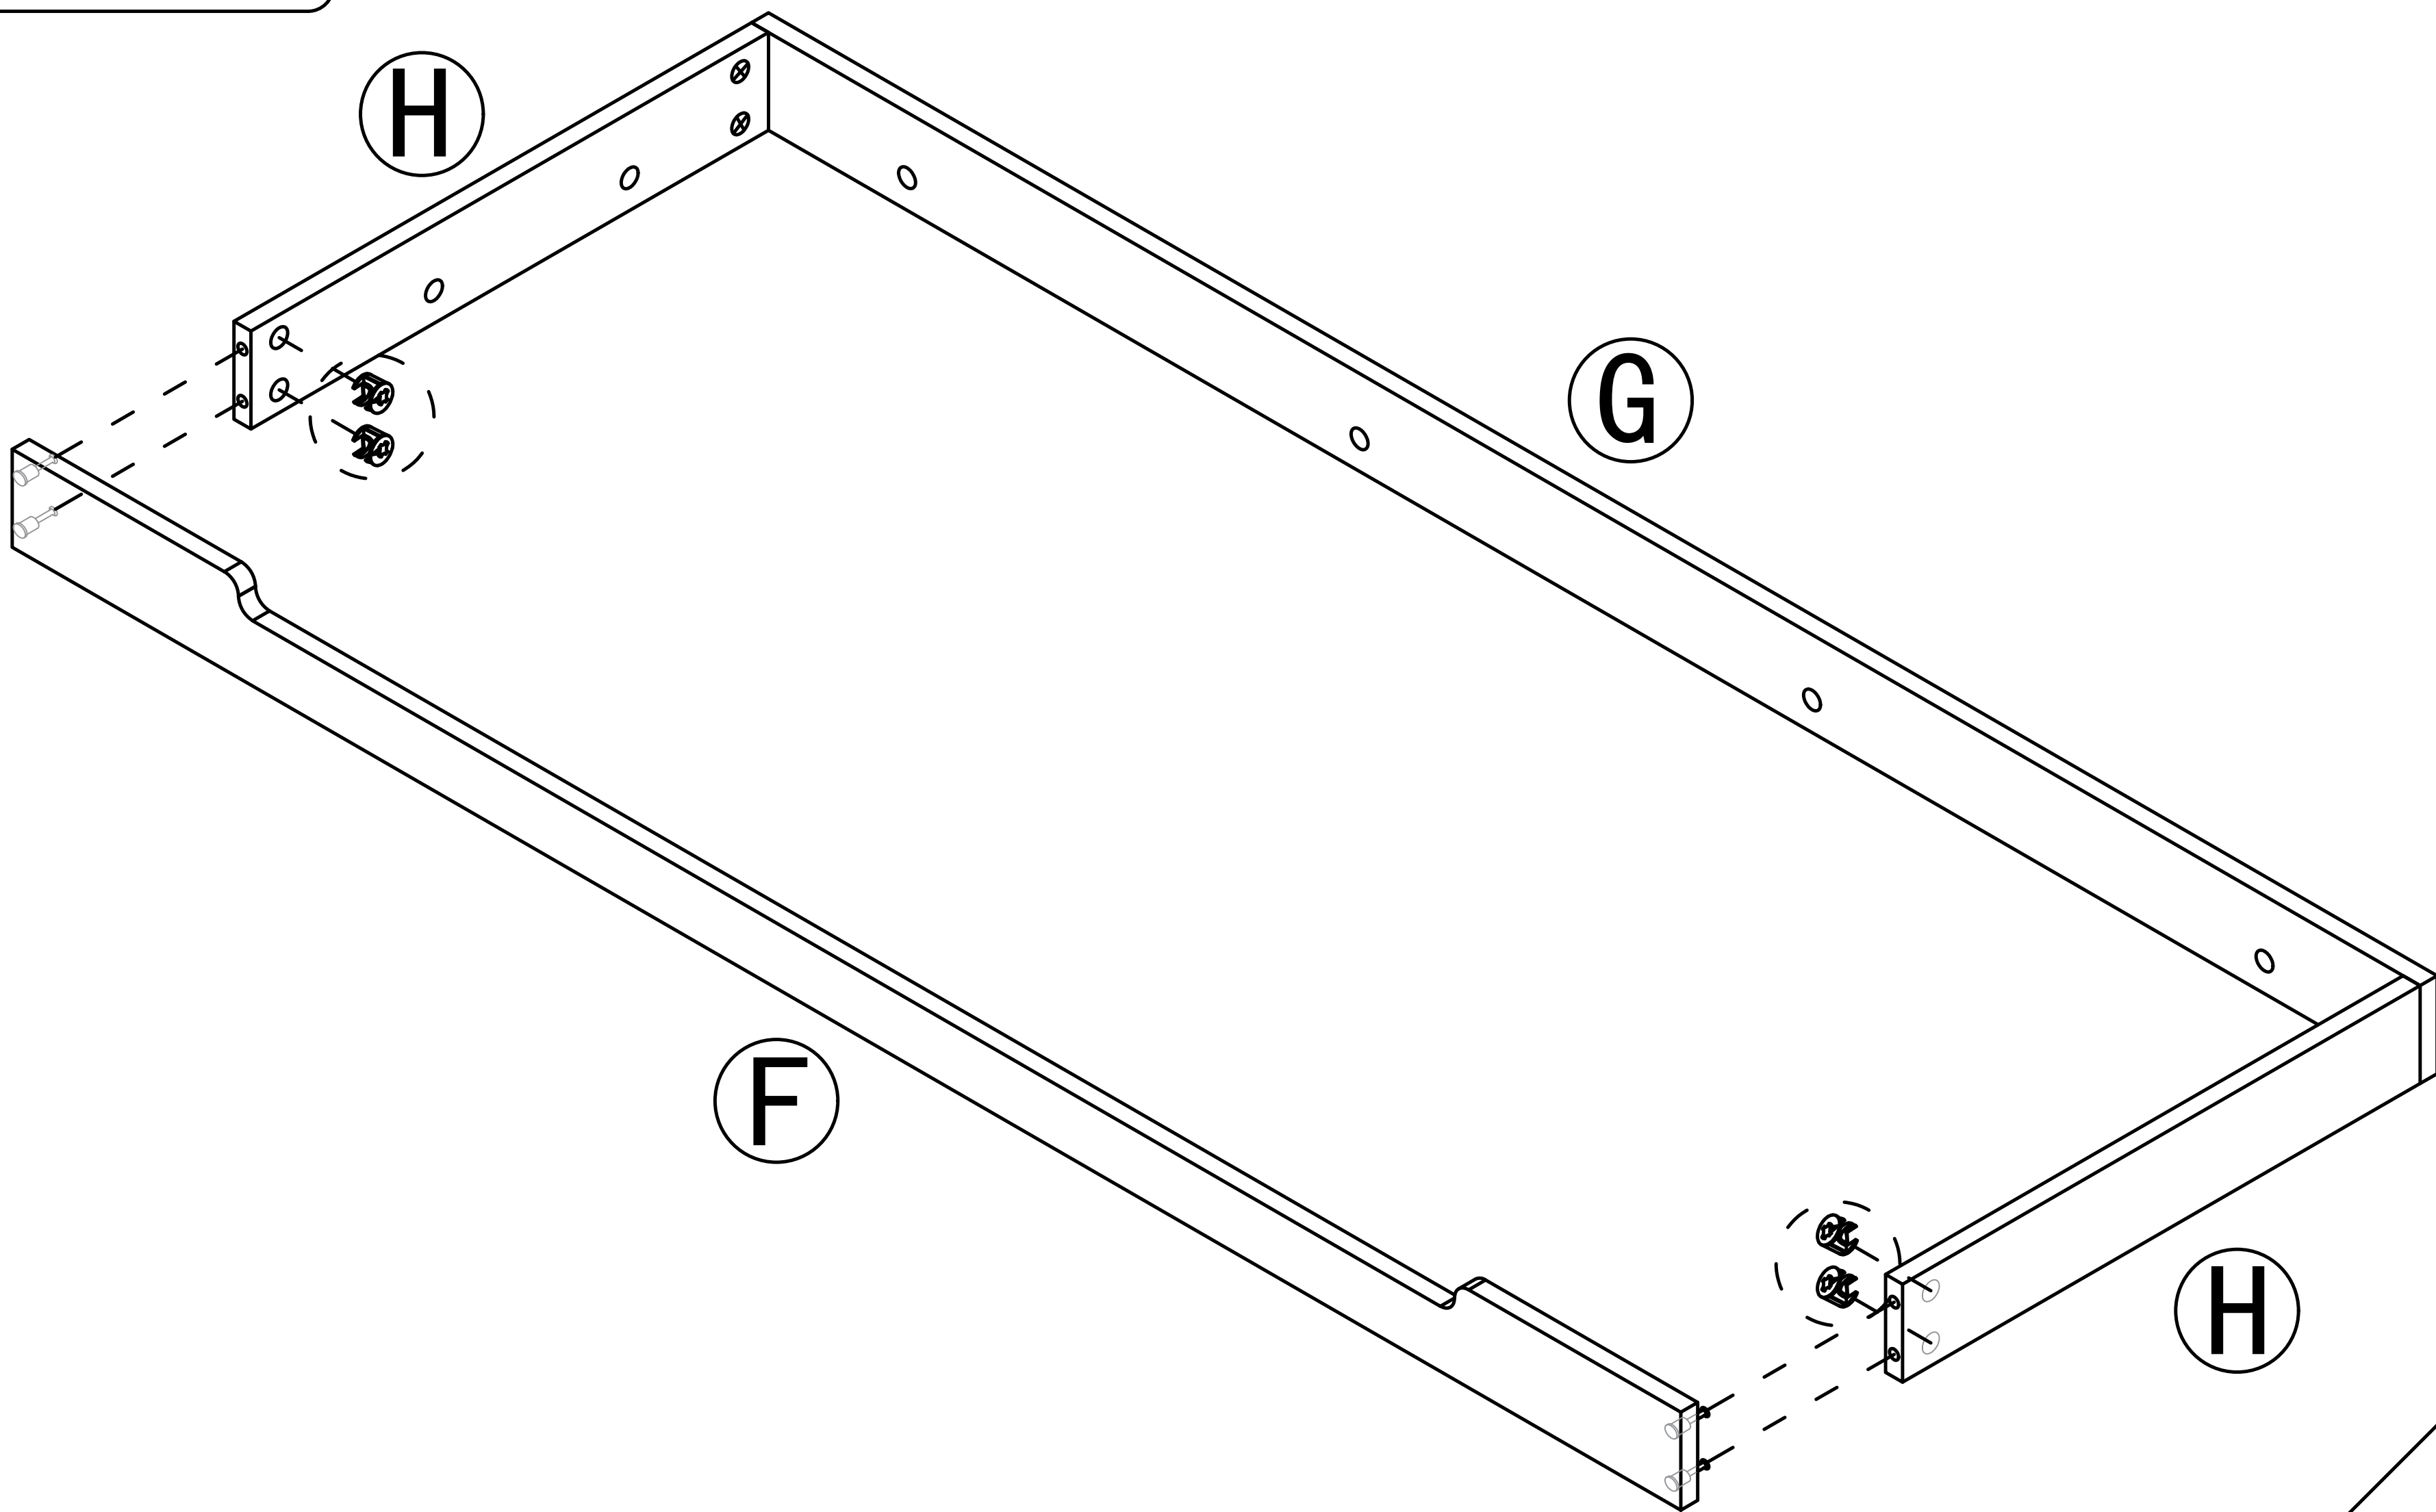

Step 12

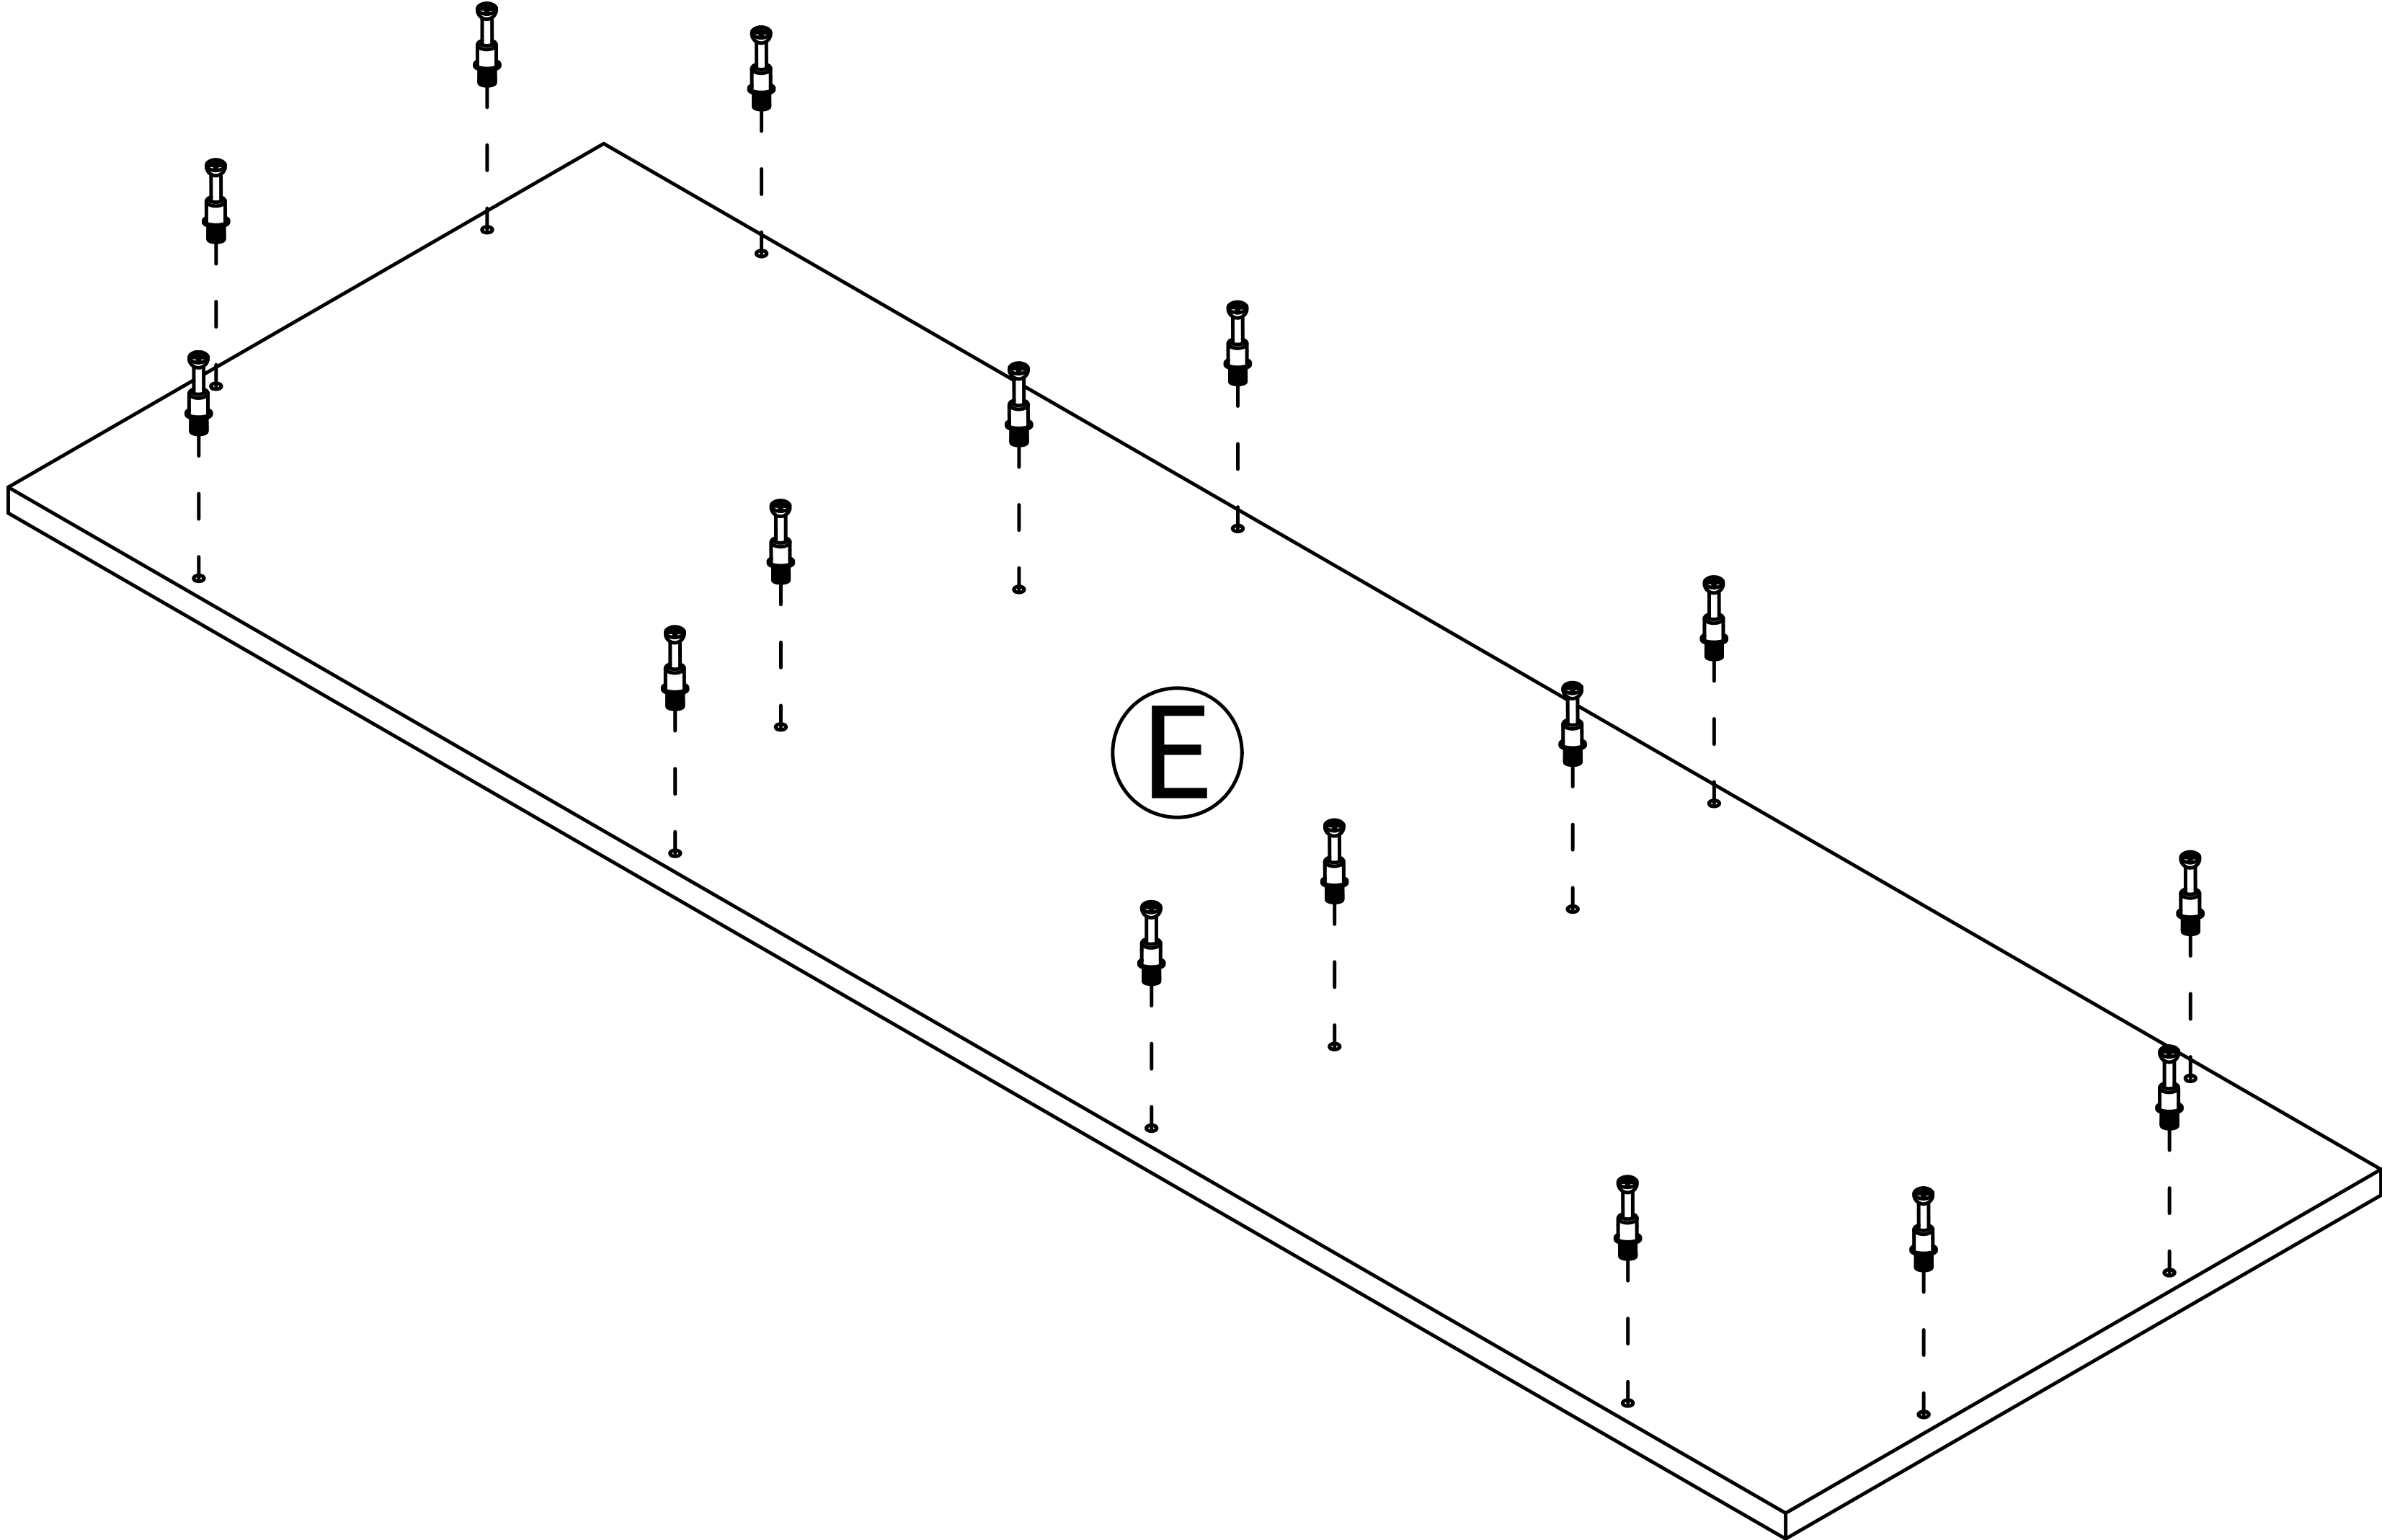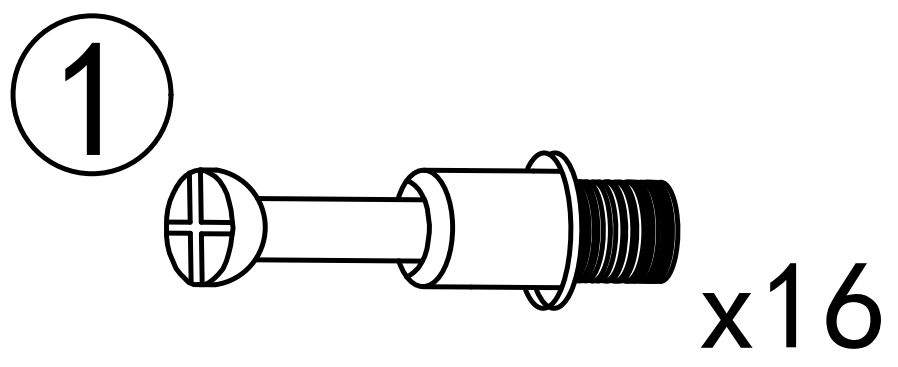


Step 13

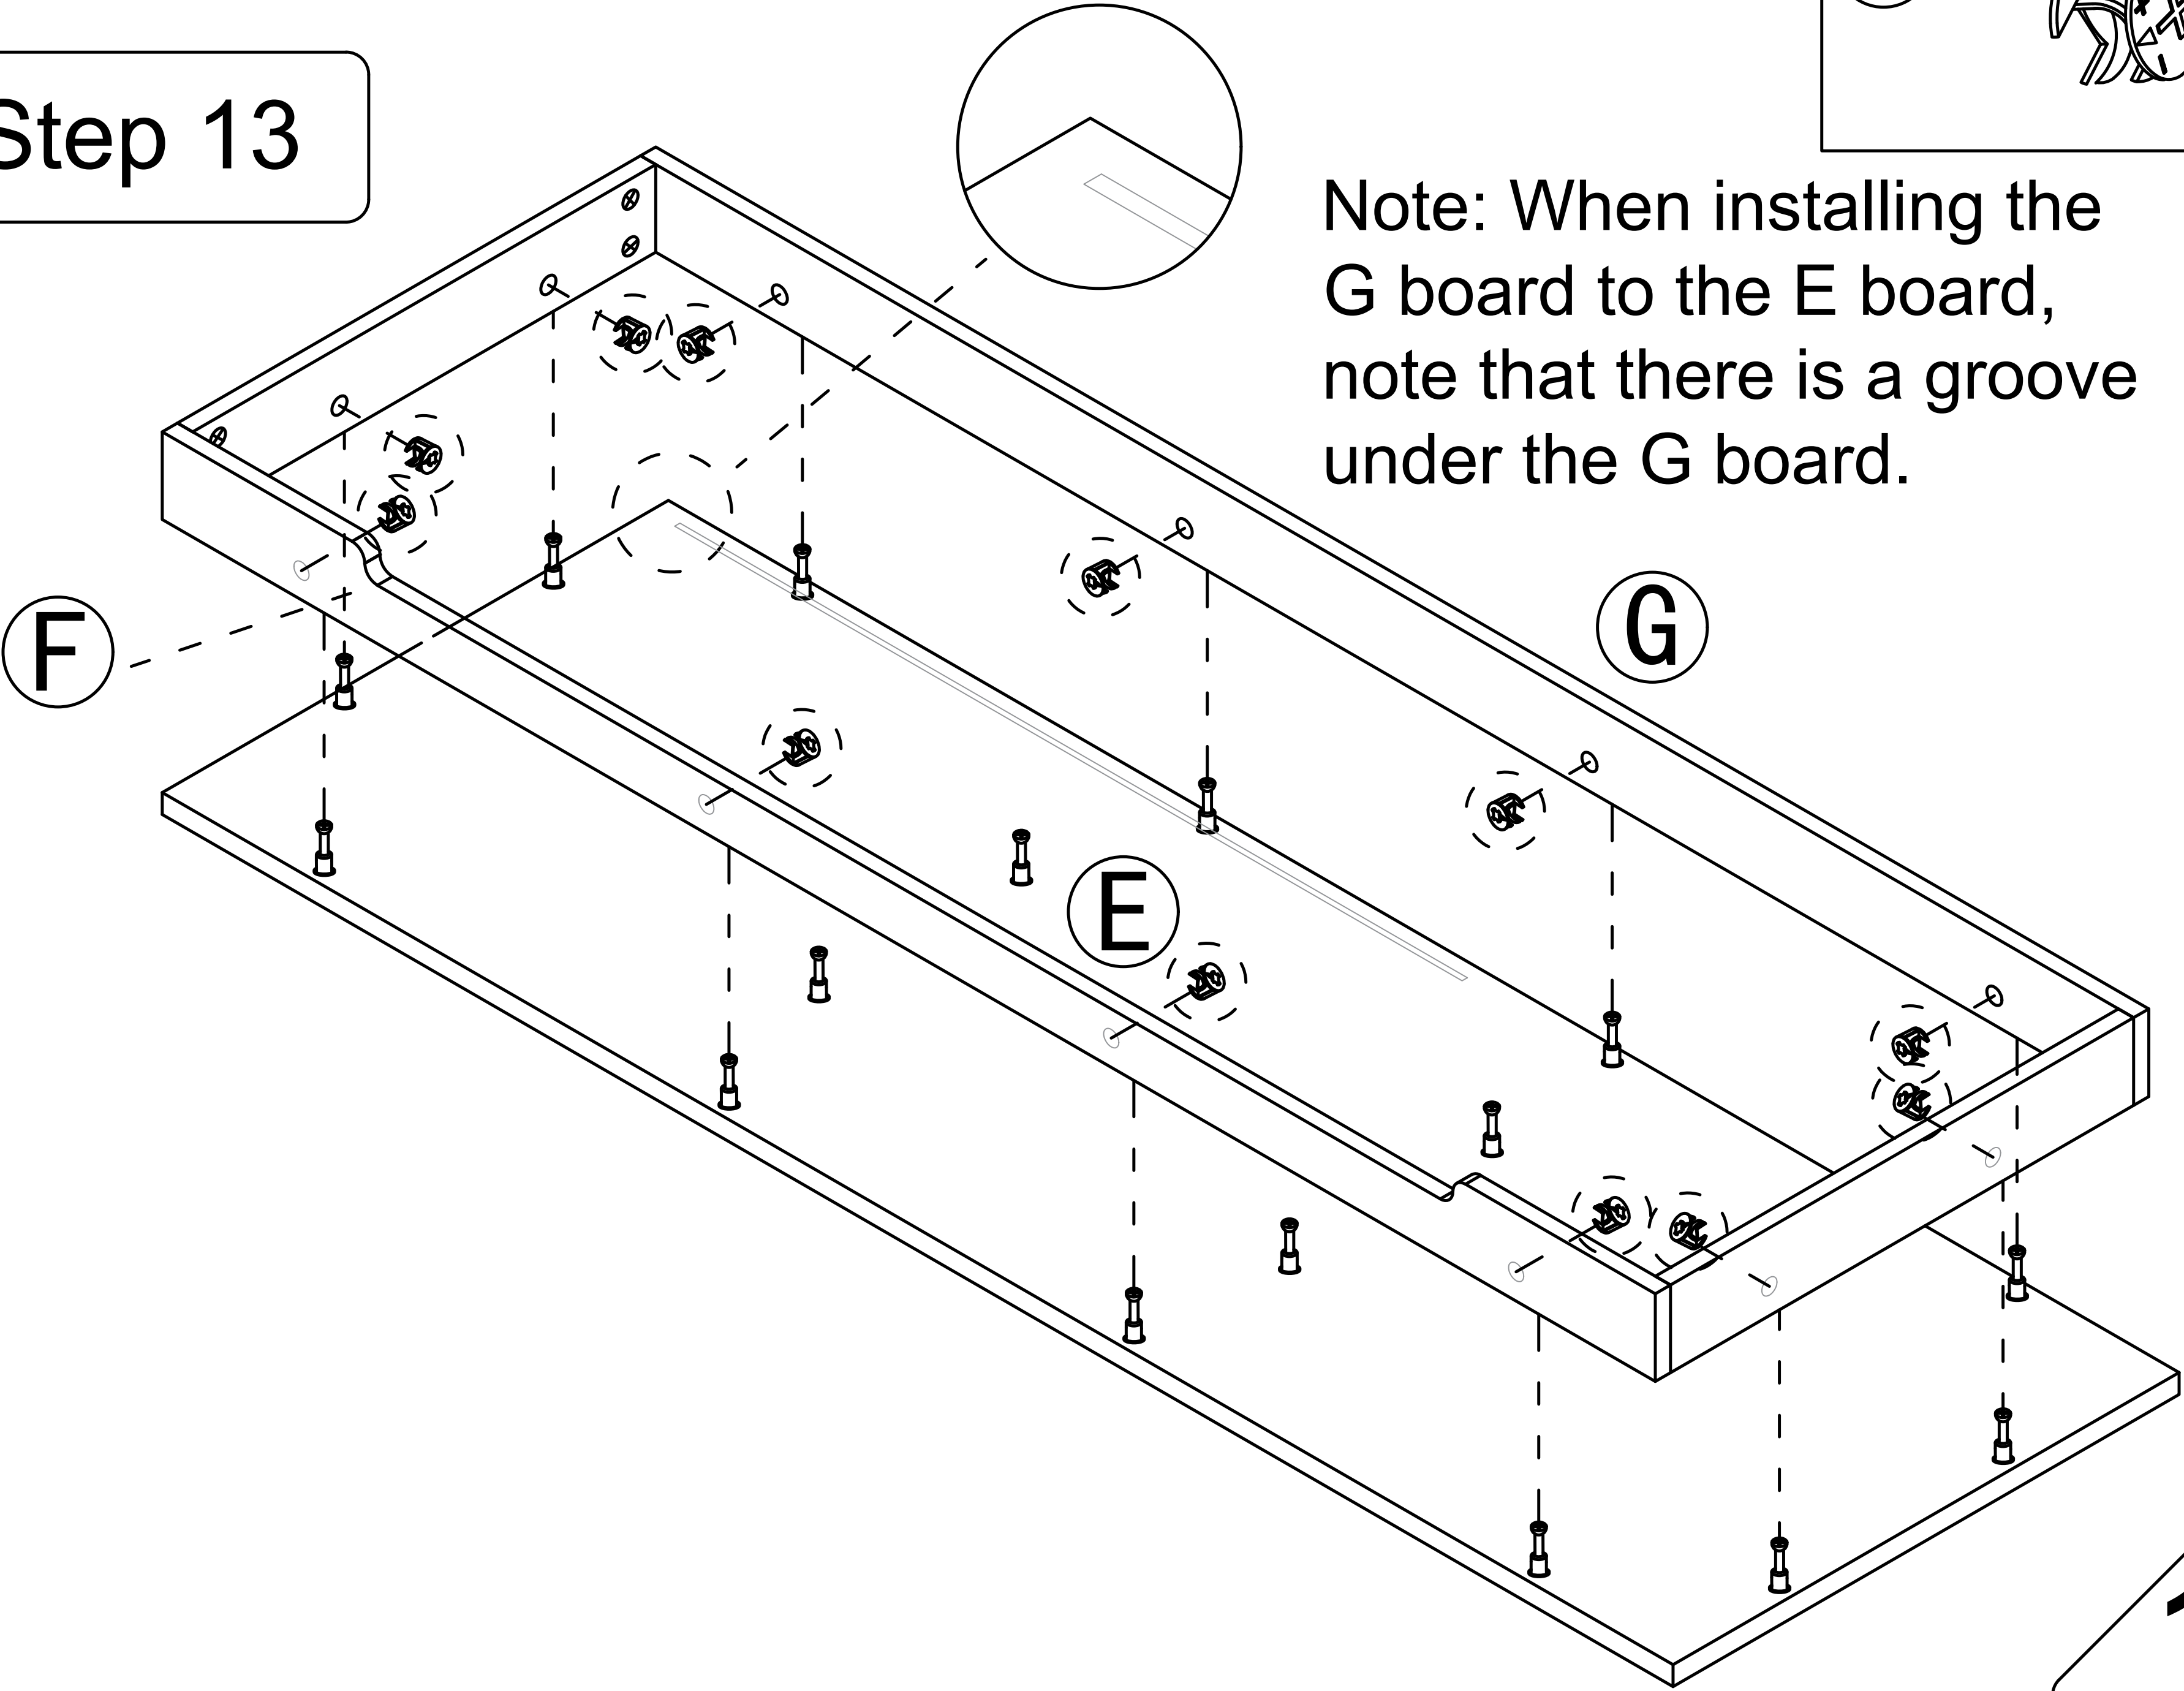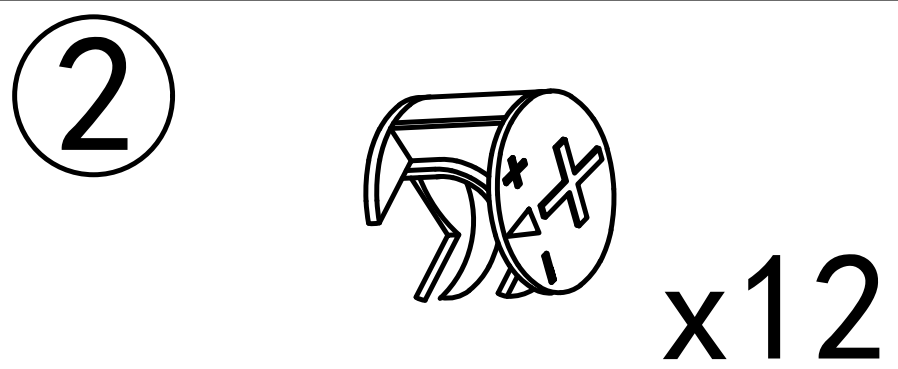


Step 14

2

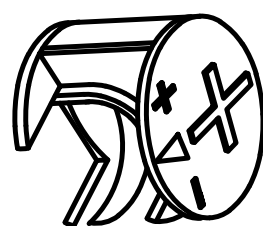


x4

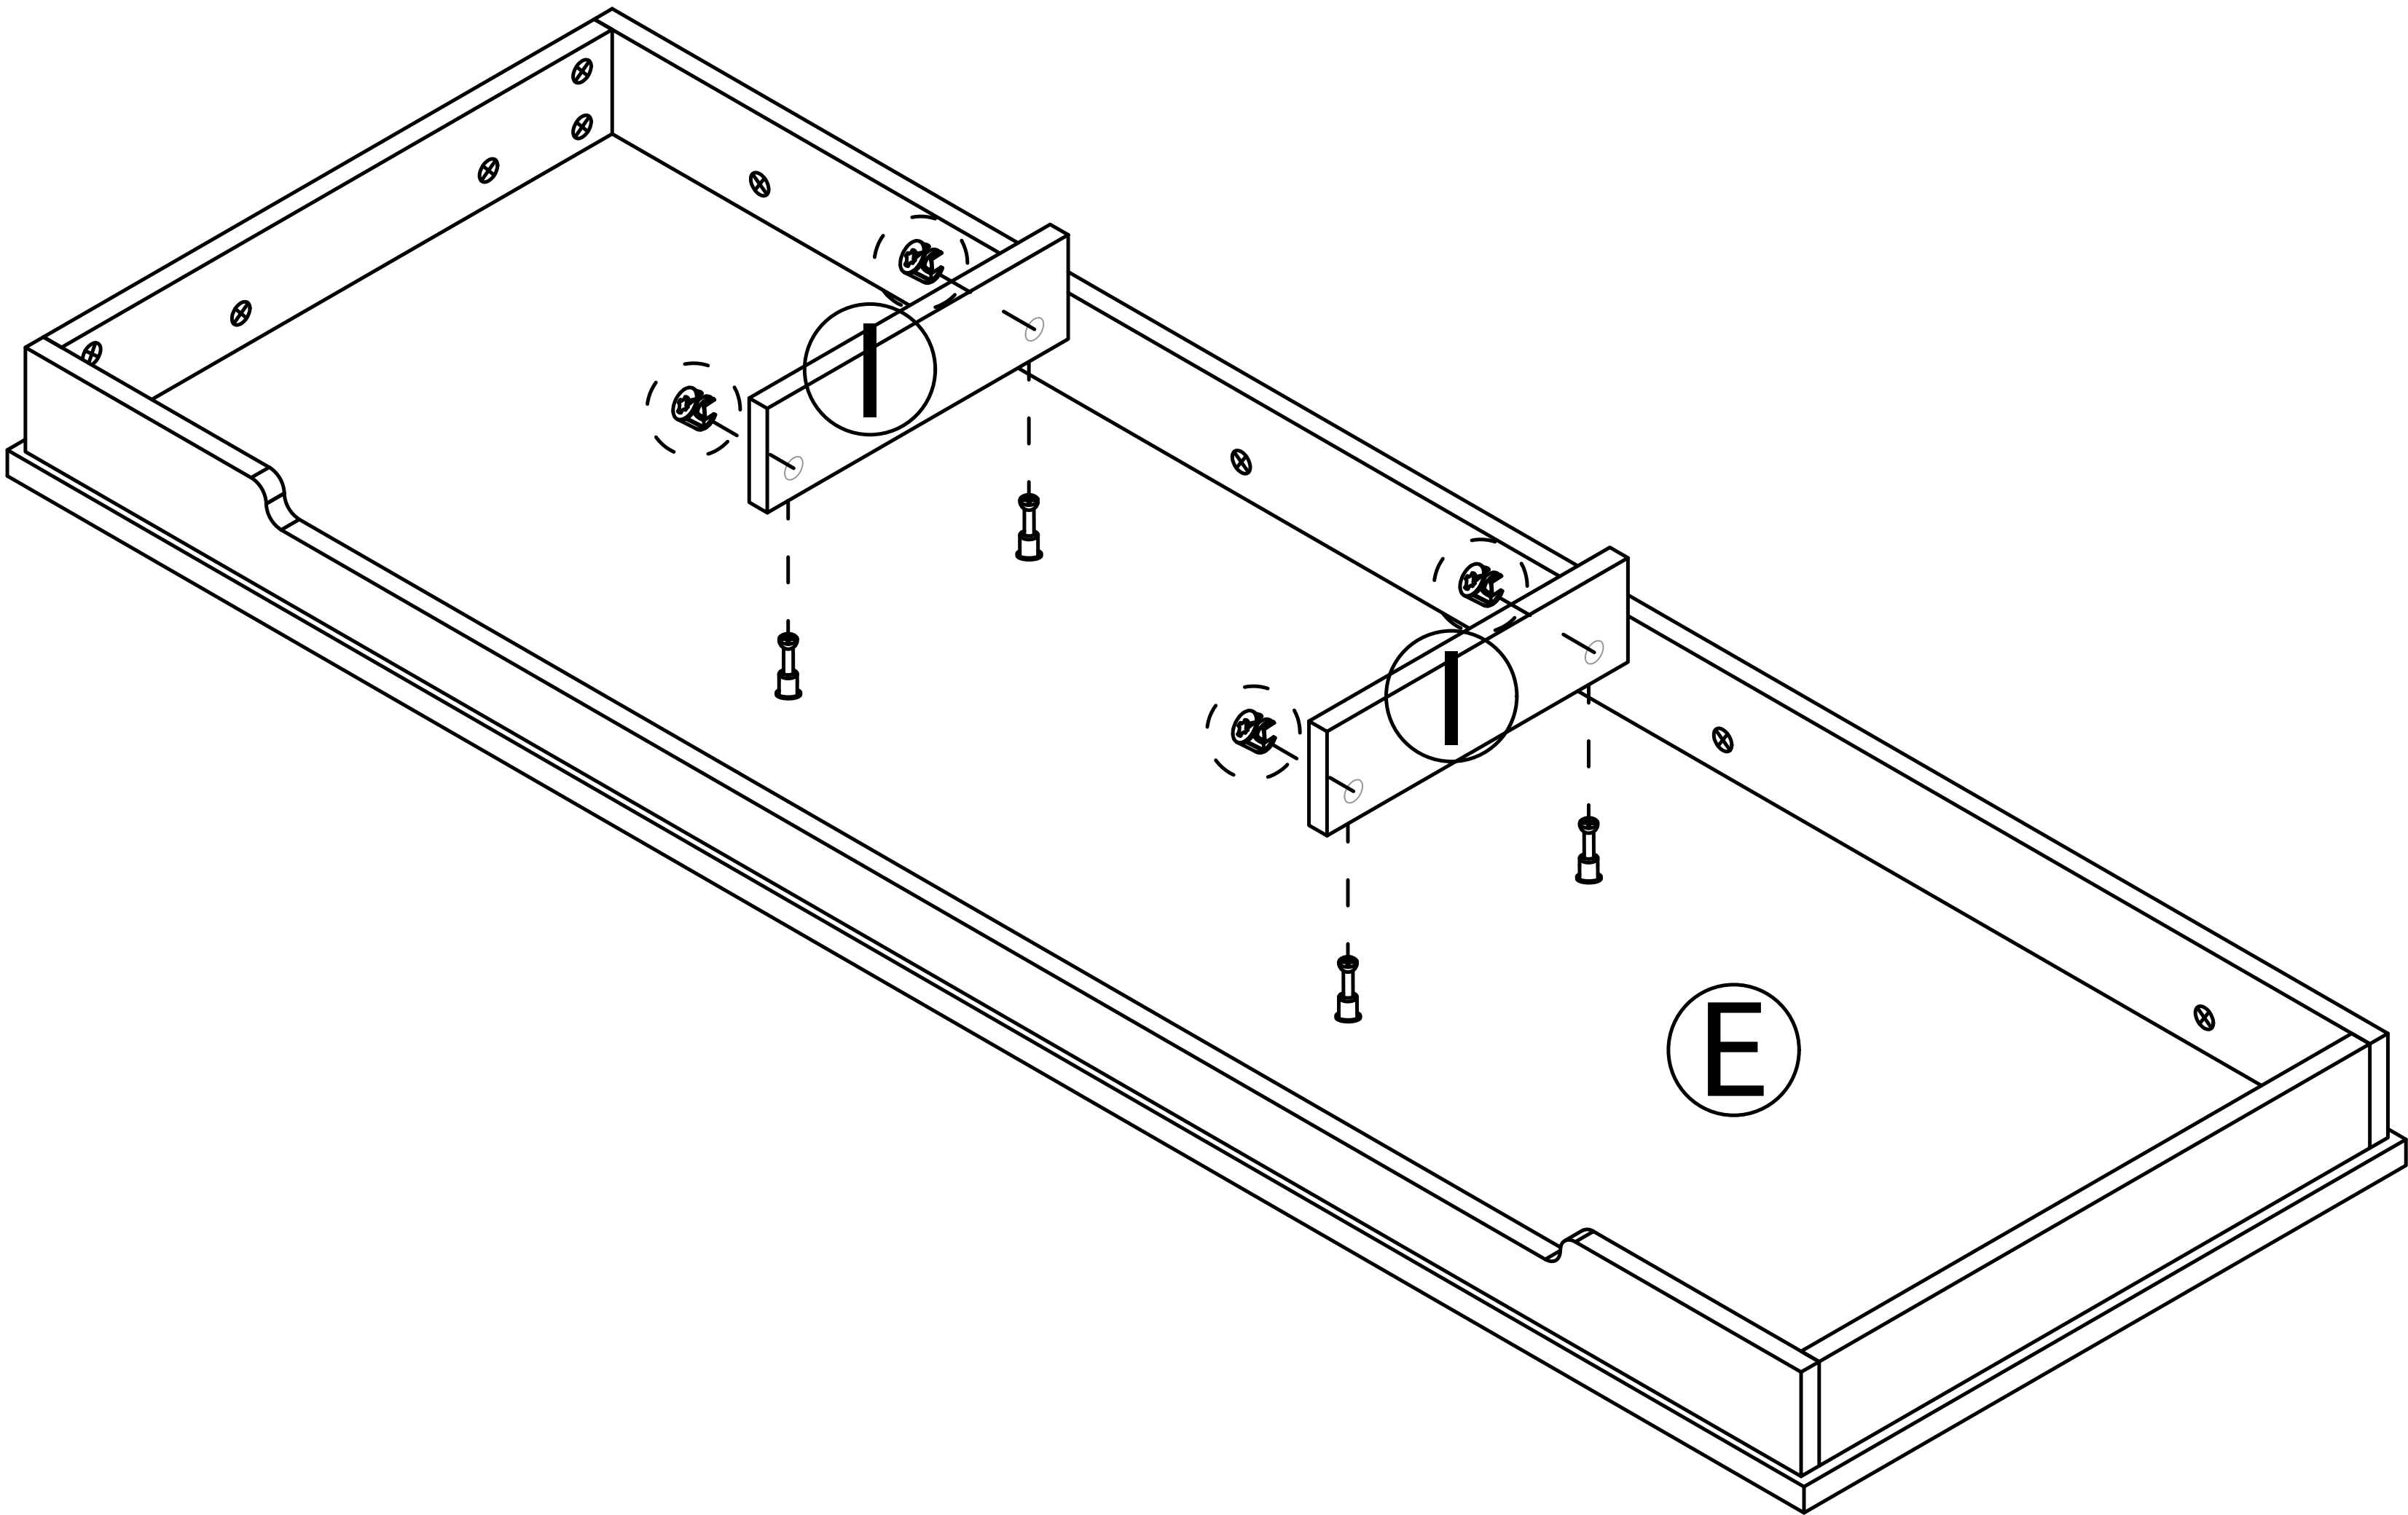


Step 15

6


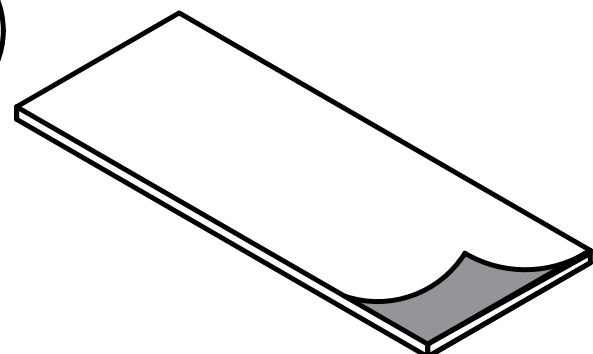


x10



Tear off release paper and stick the black foot pad on the board

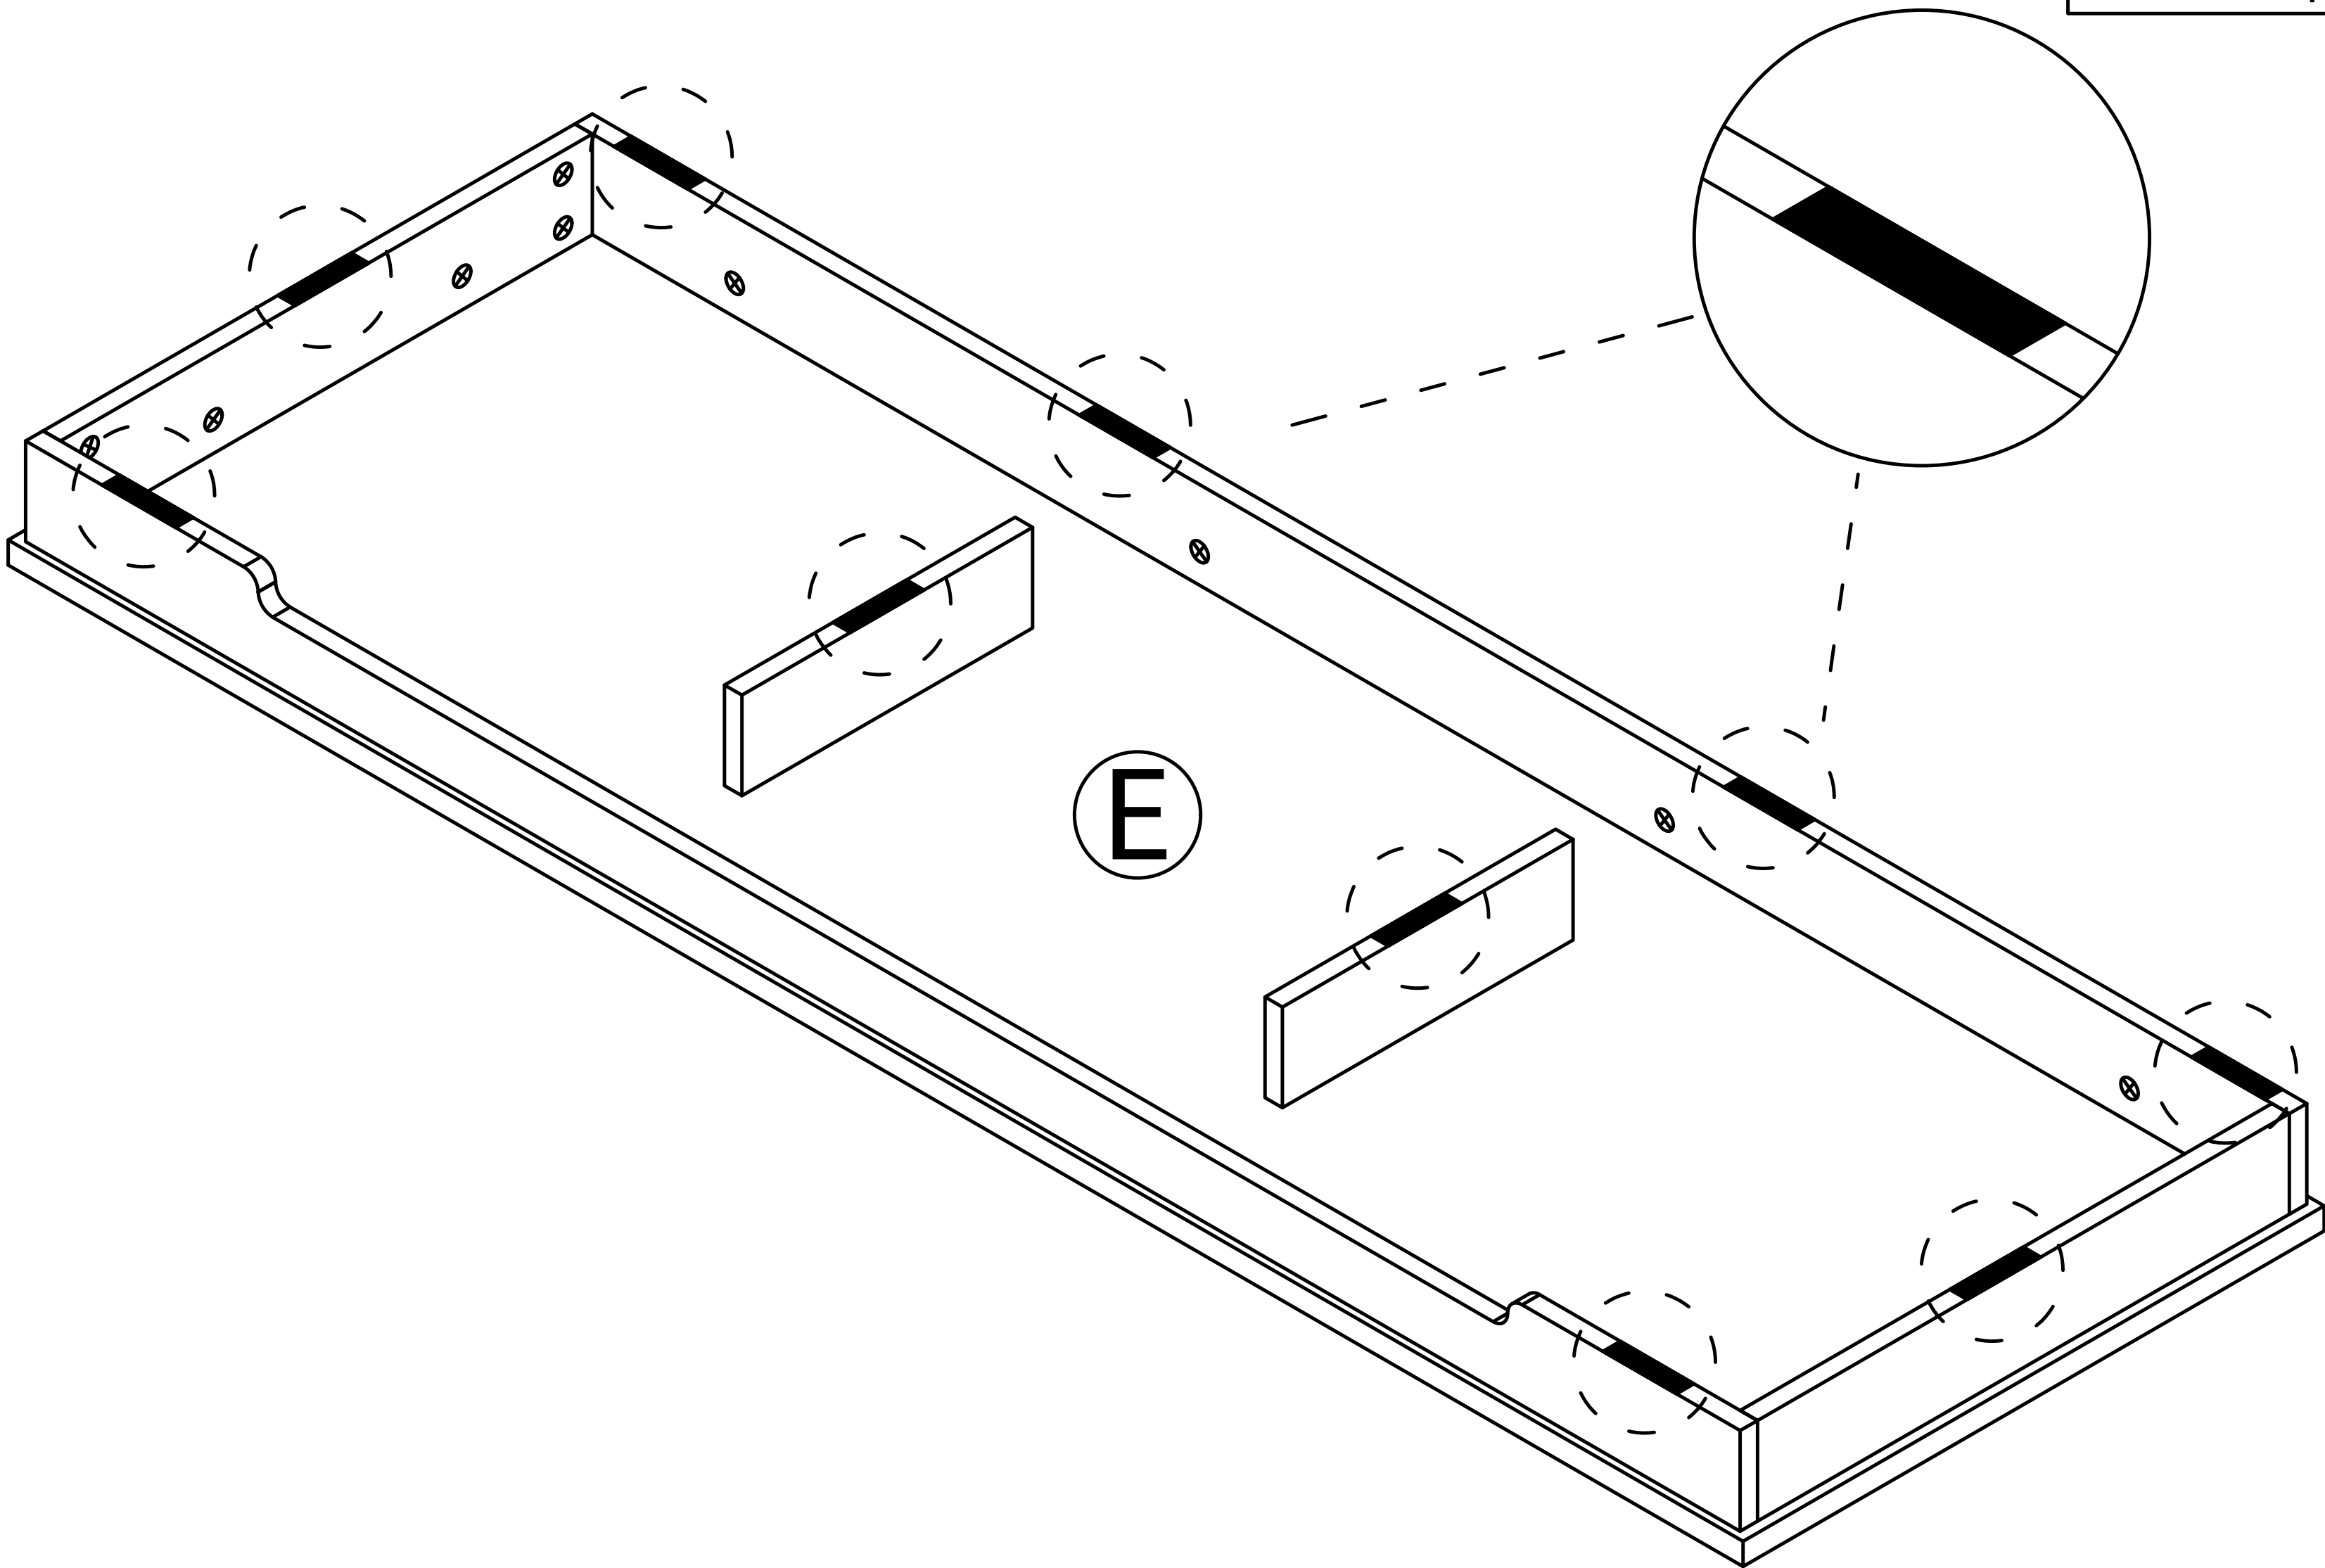

Step 16

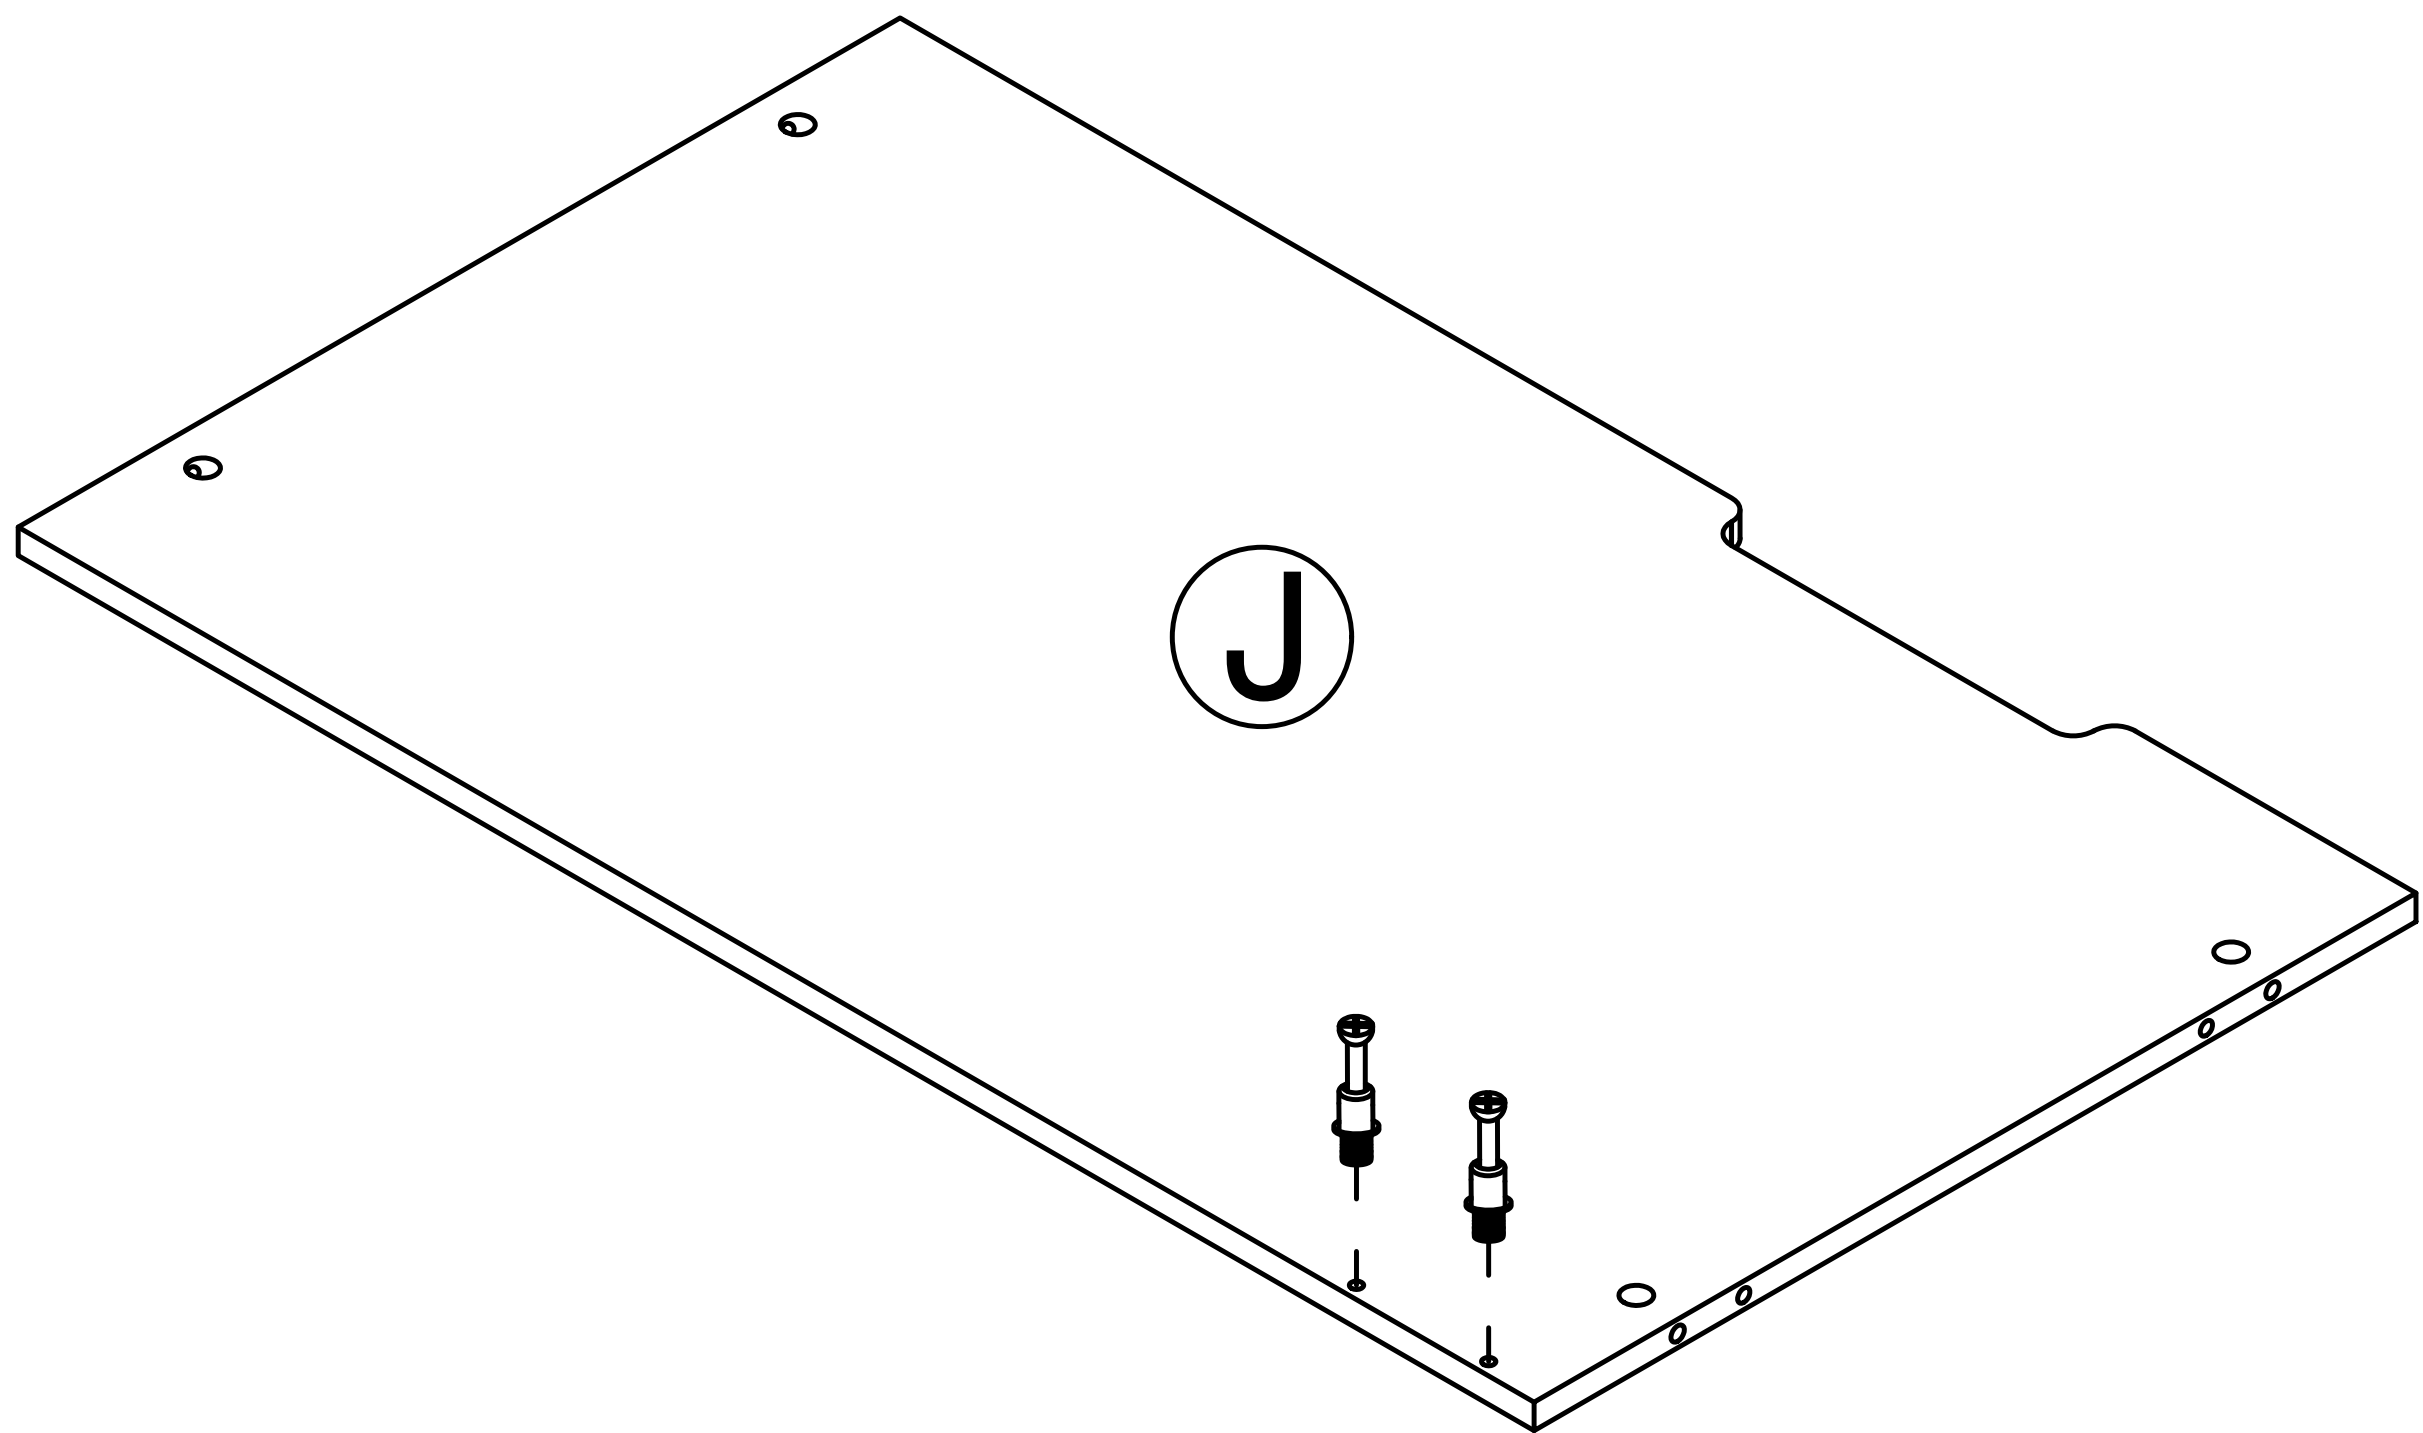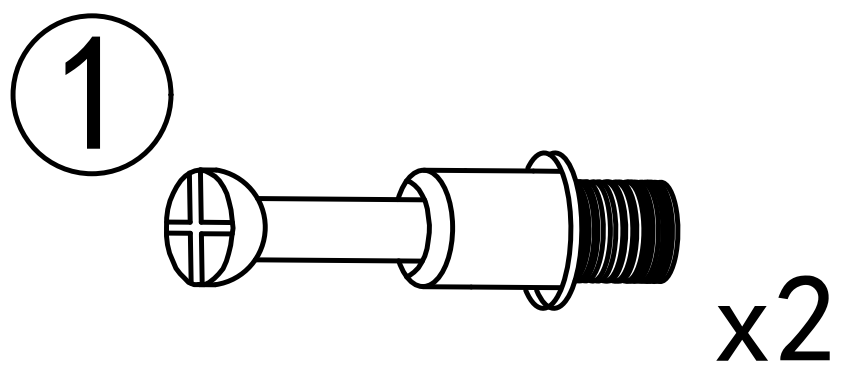


Step 17

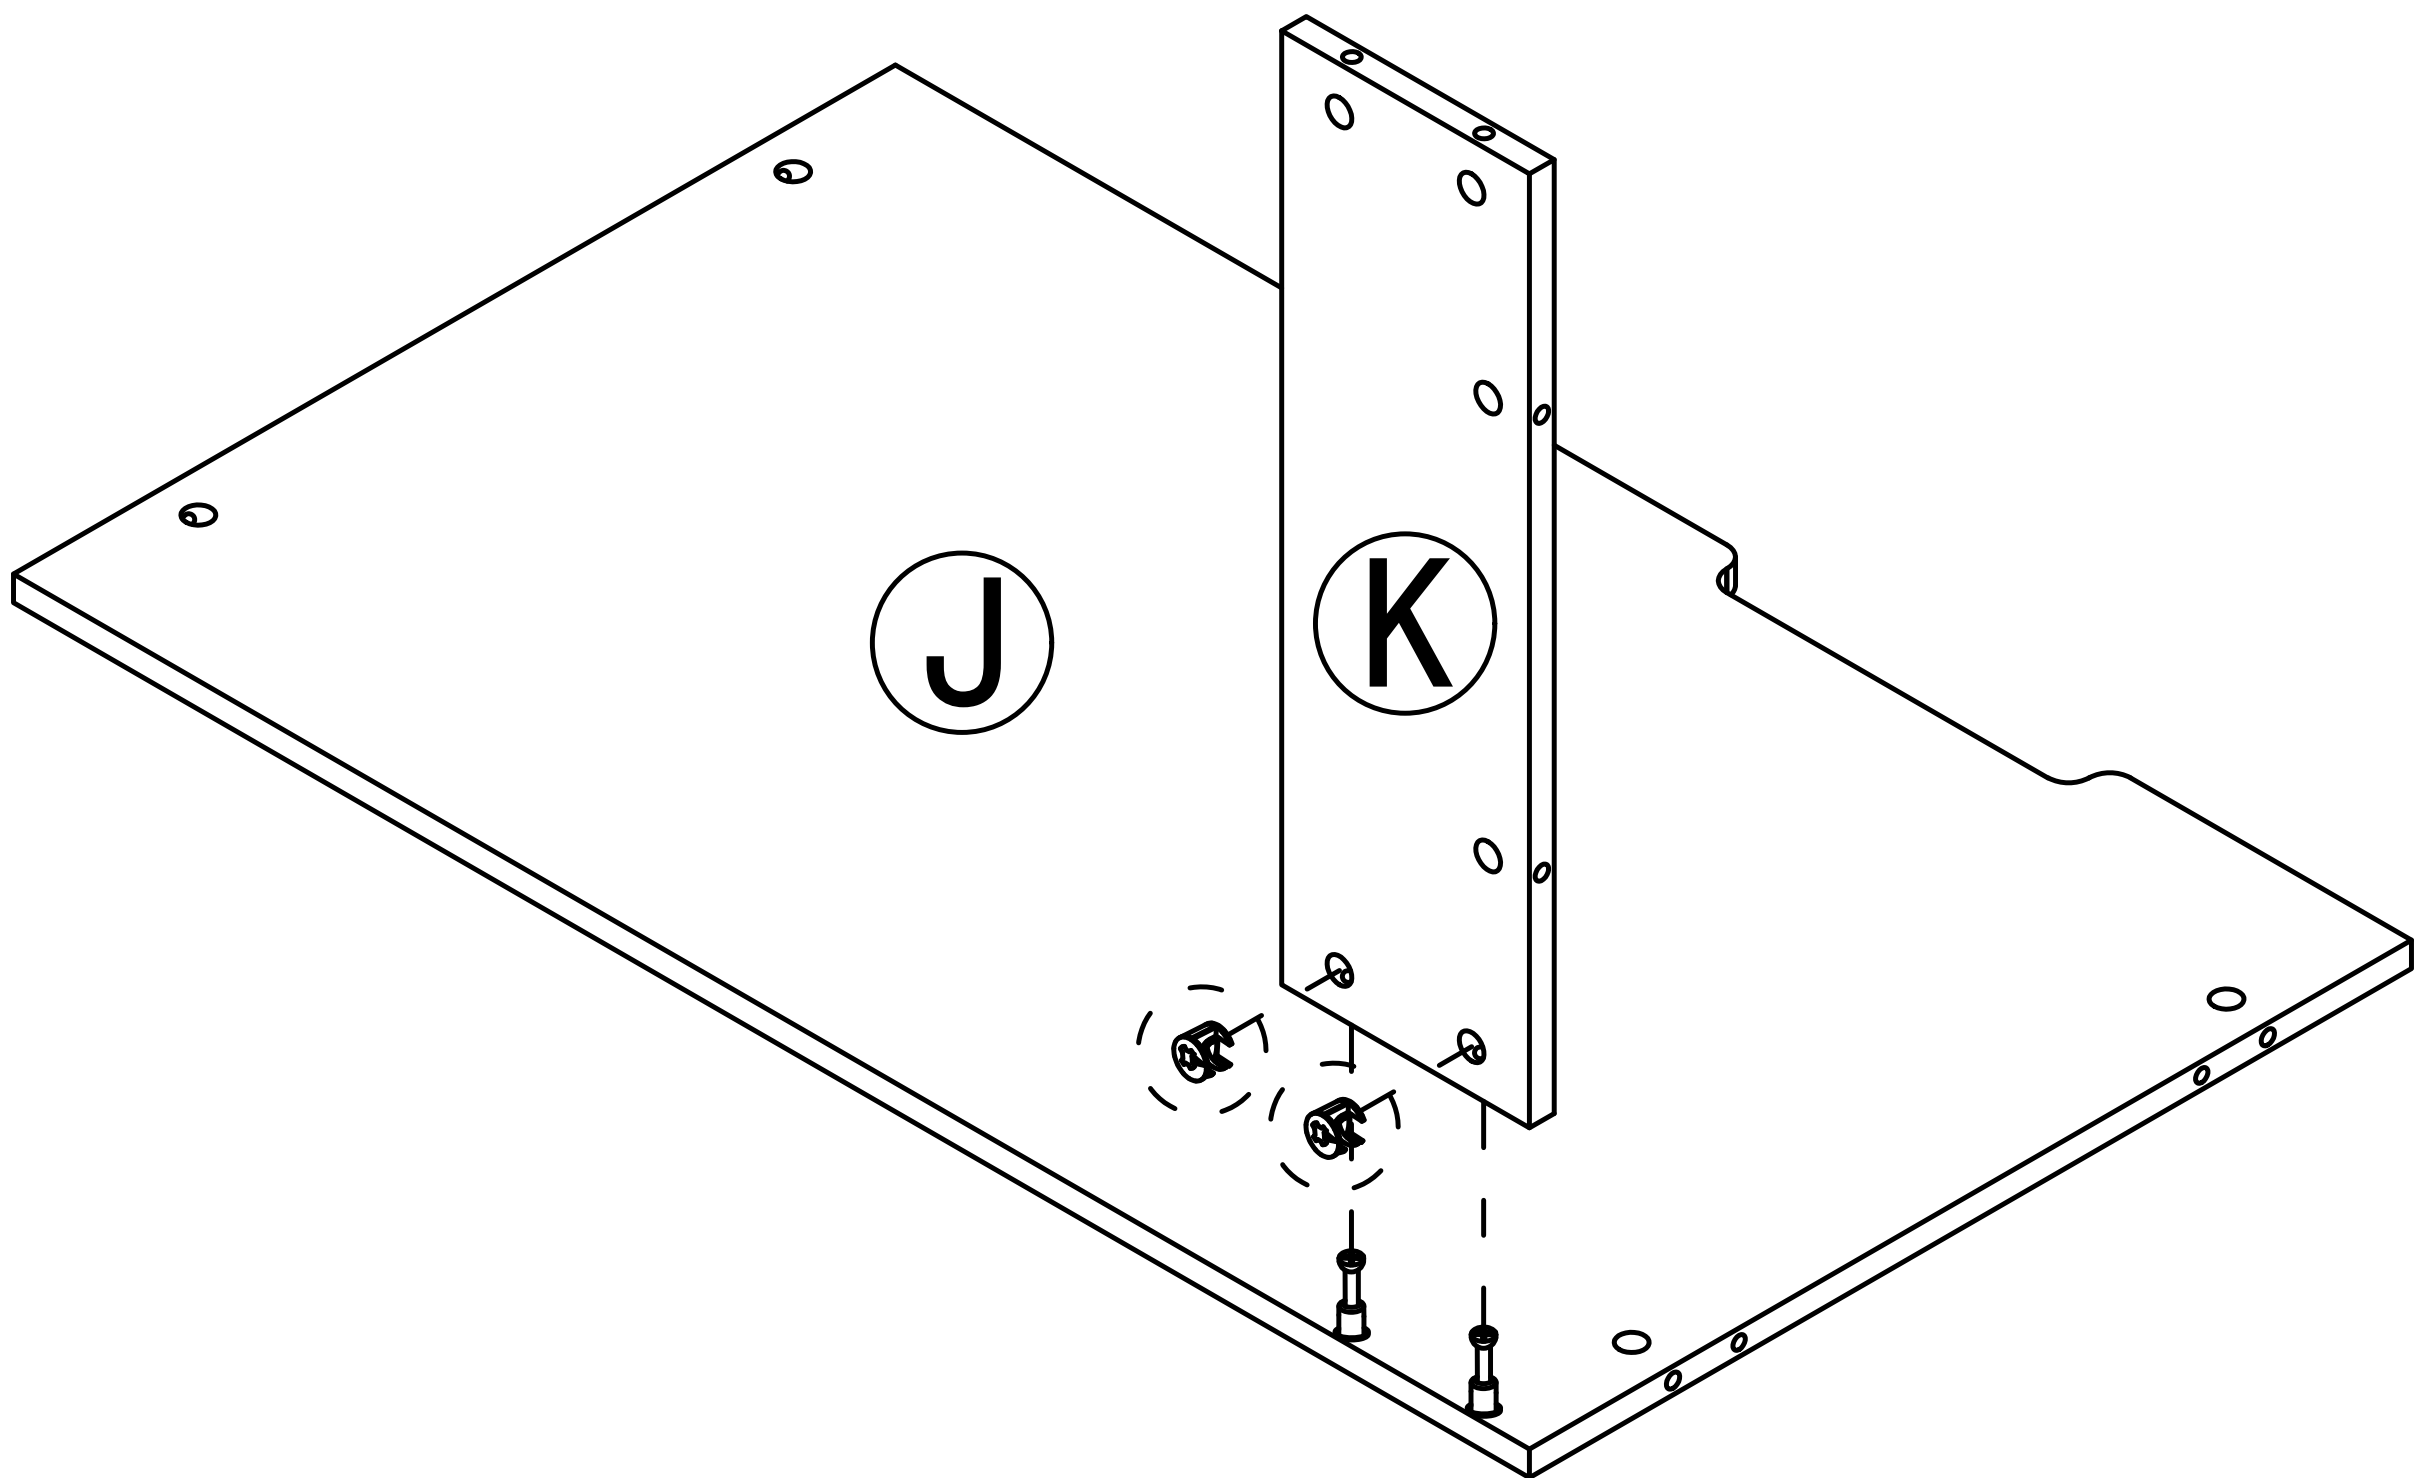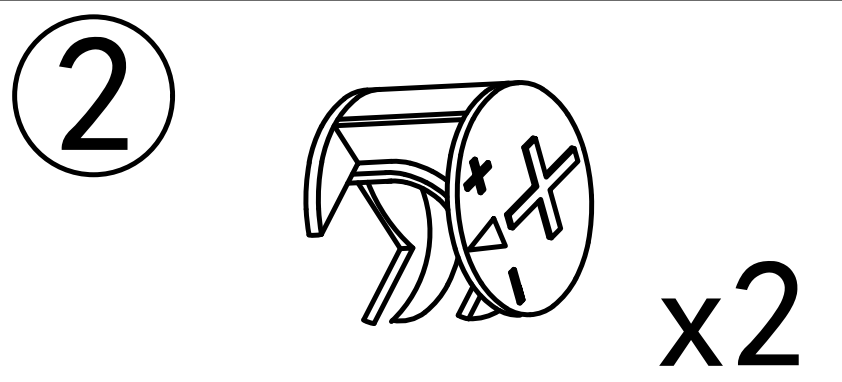


1

x4


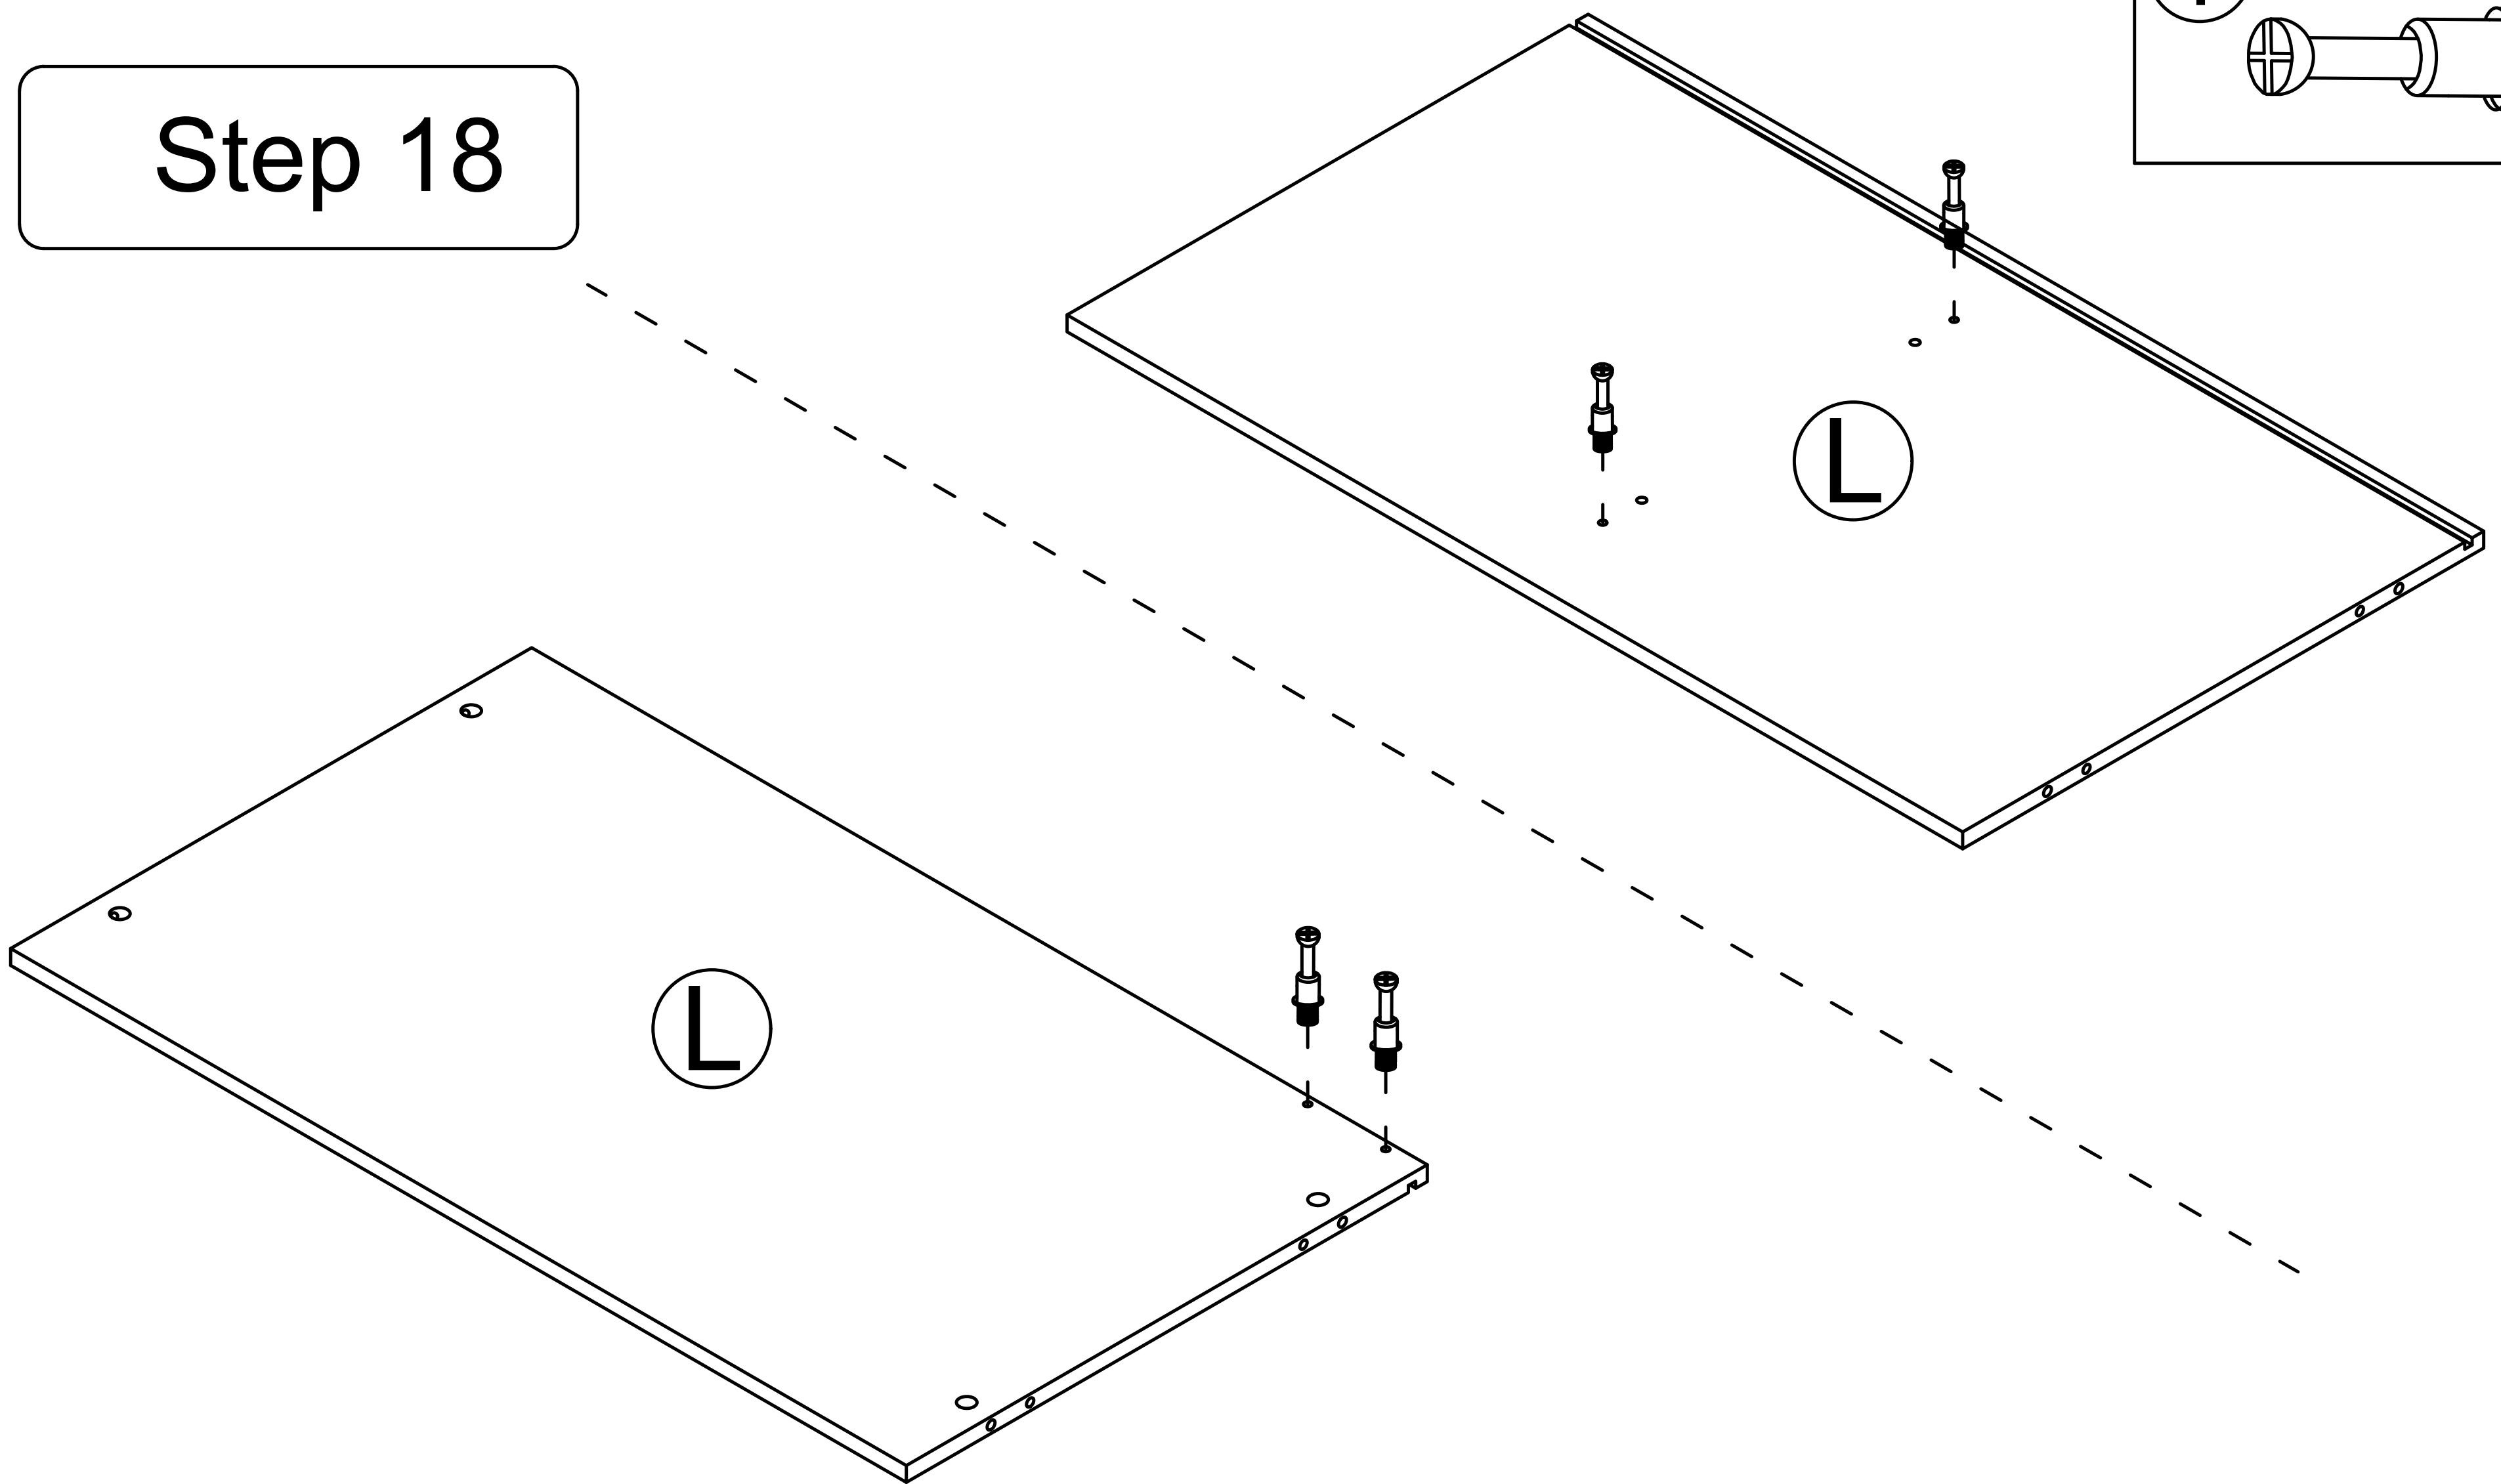


② x2

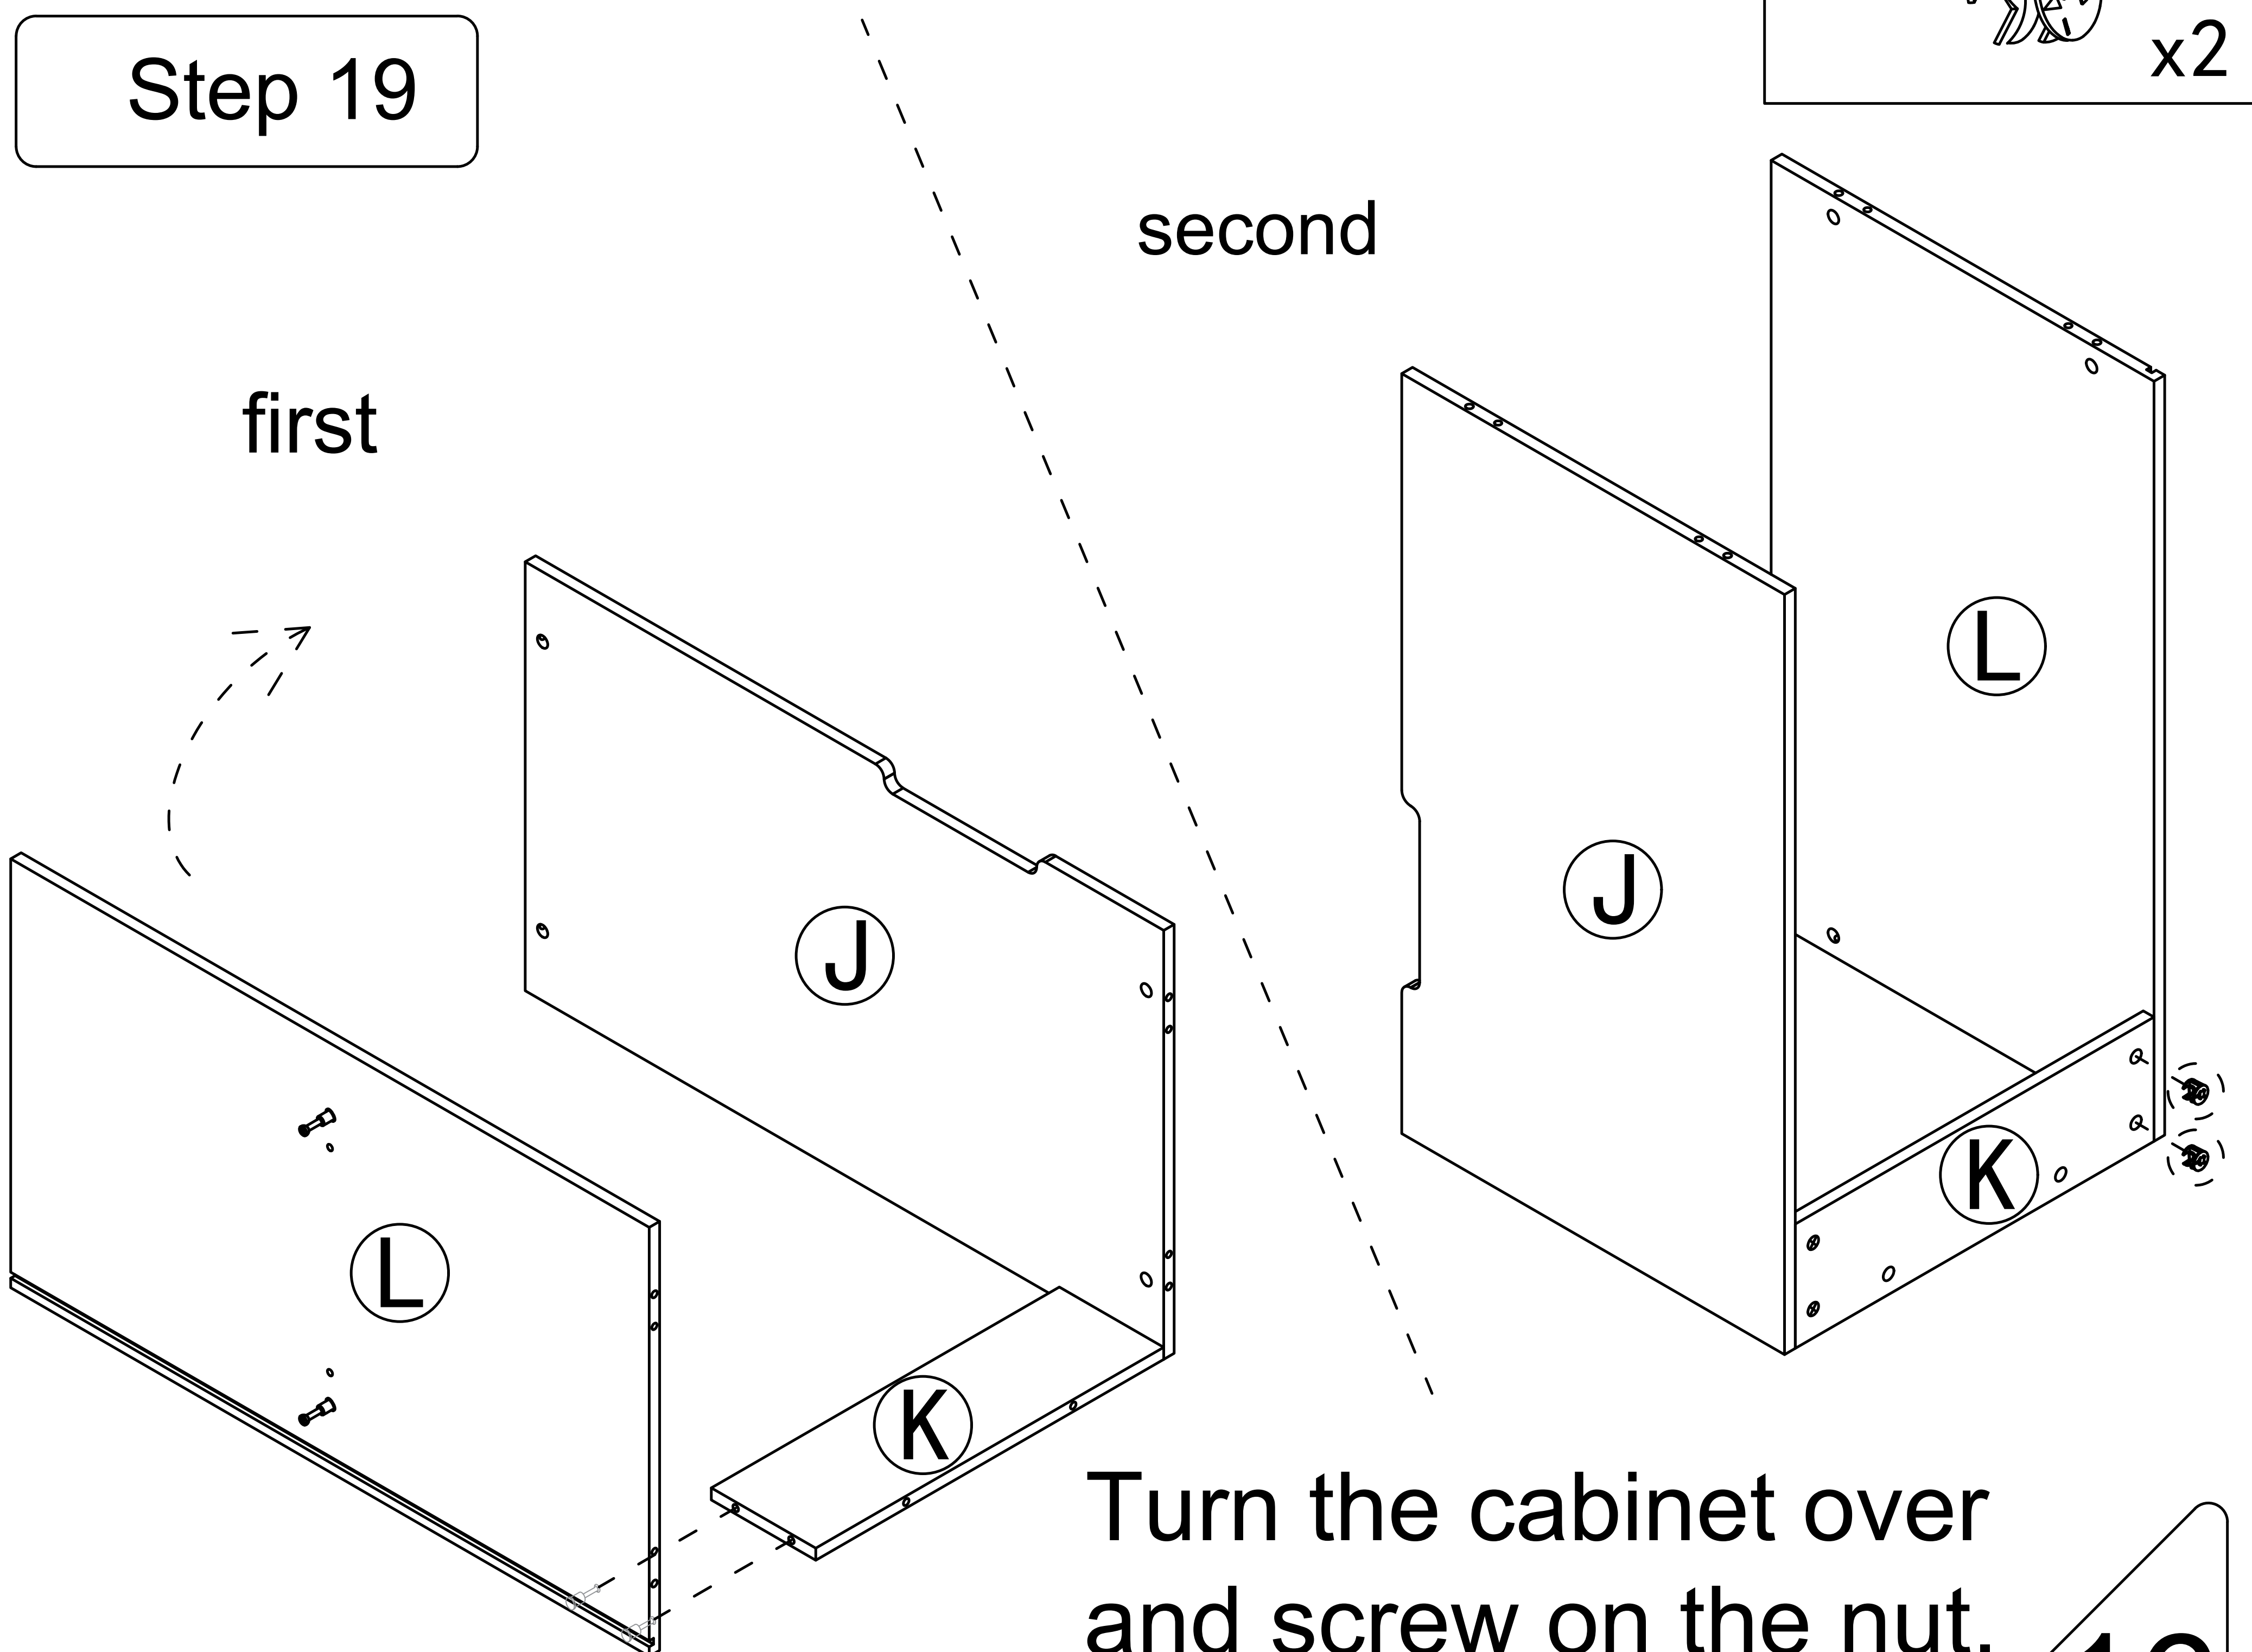



Turn the cabinet over
and screw on the nut.

Step 20

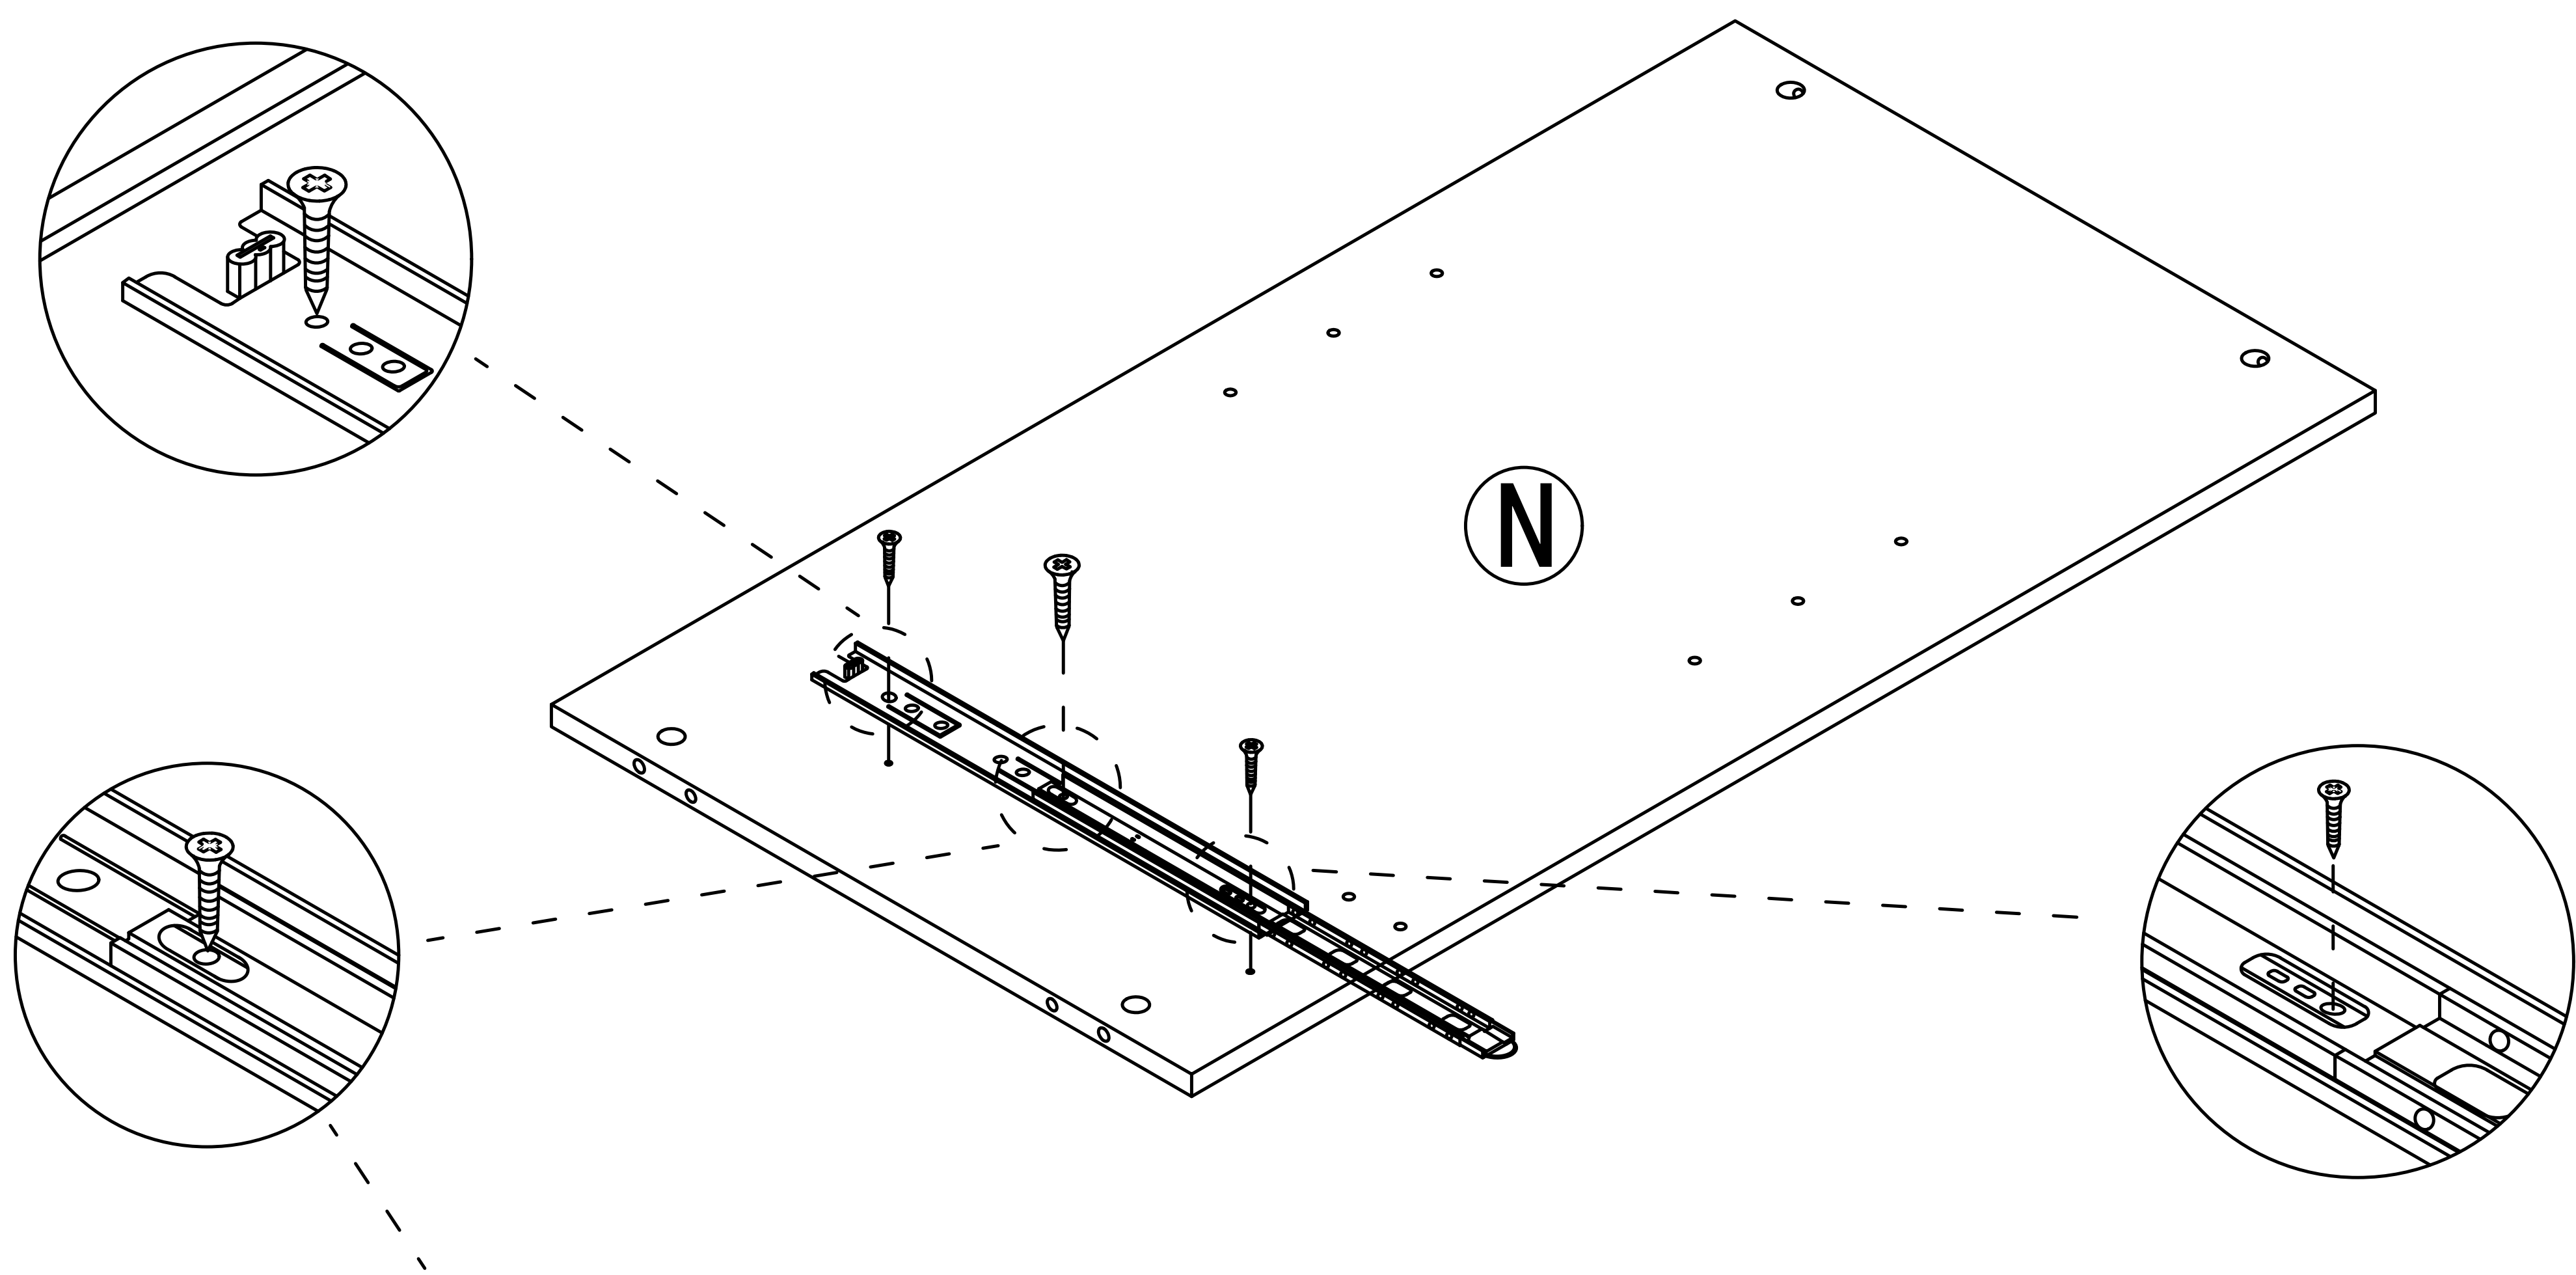
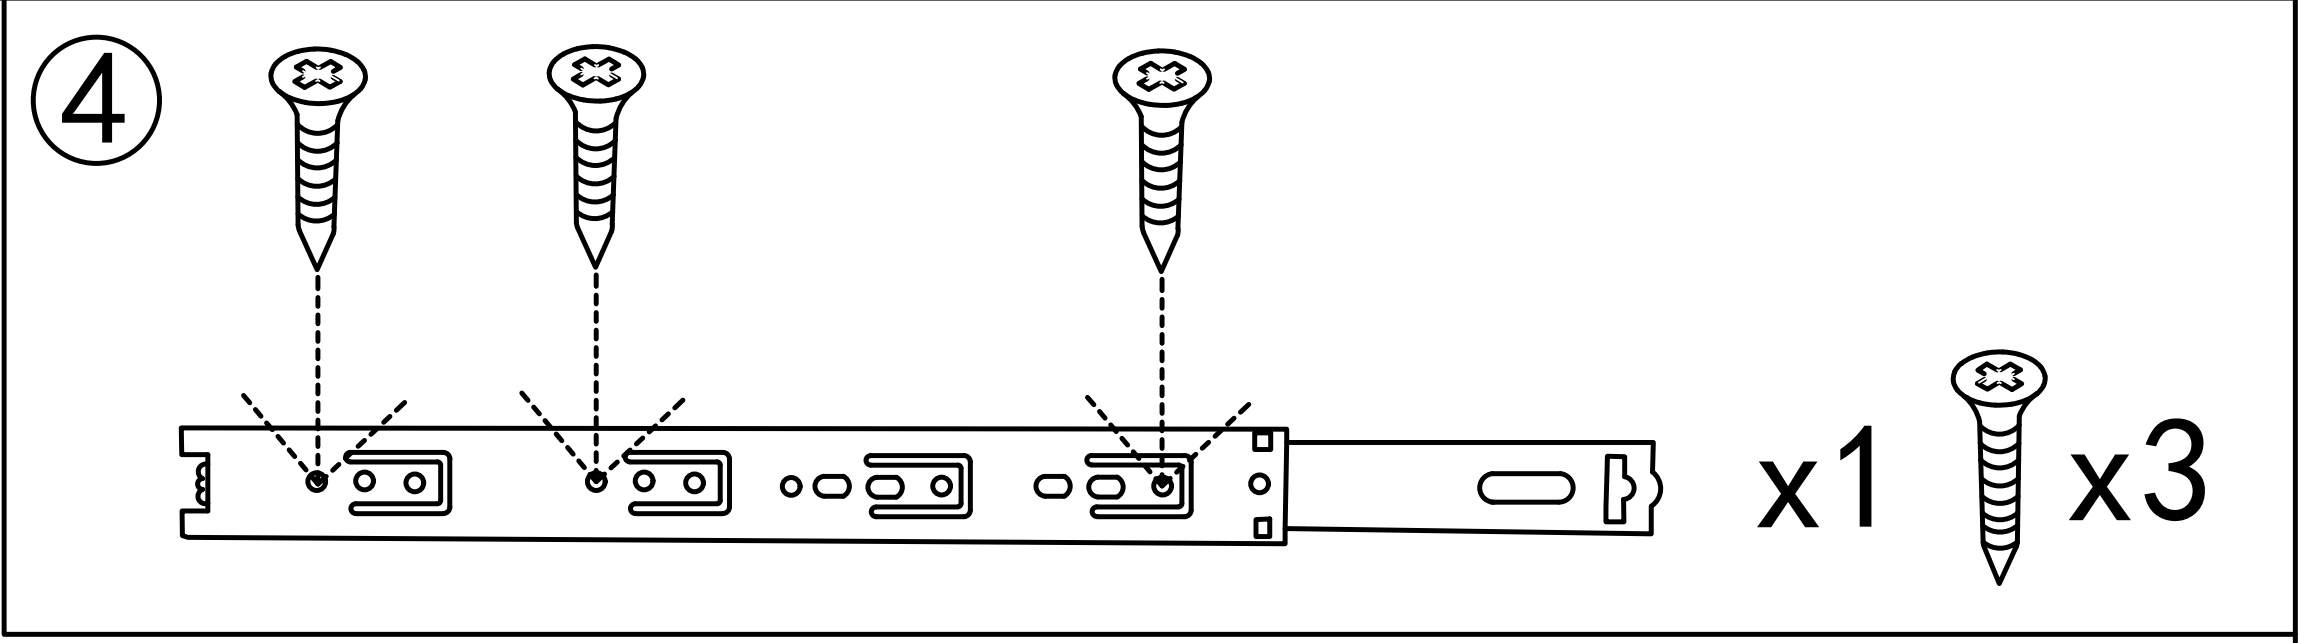


This hole is for strengthening fixed hole customers can choose to install according to their needs.



Step 21

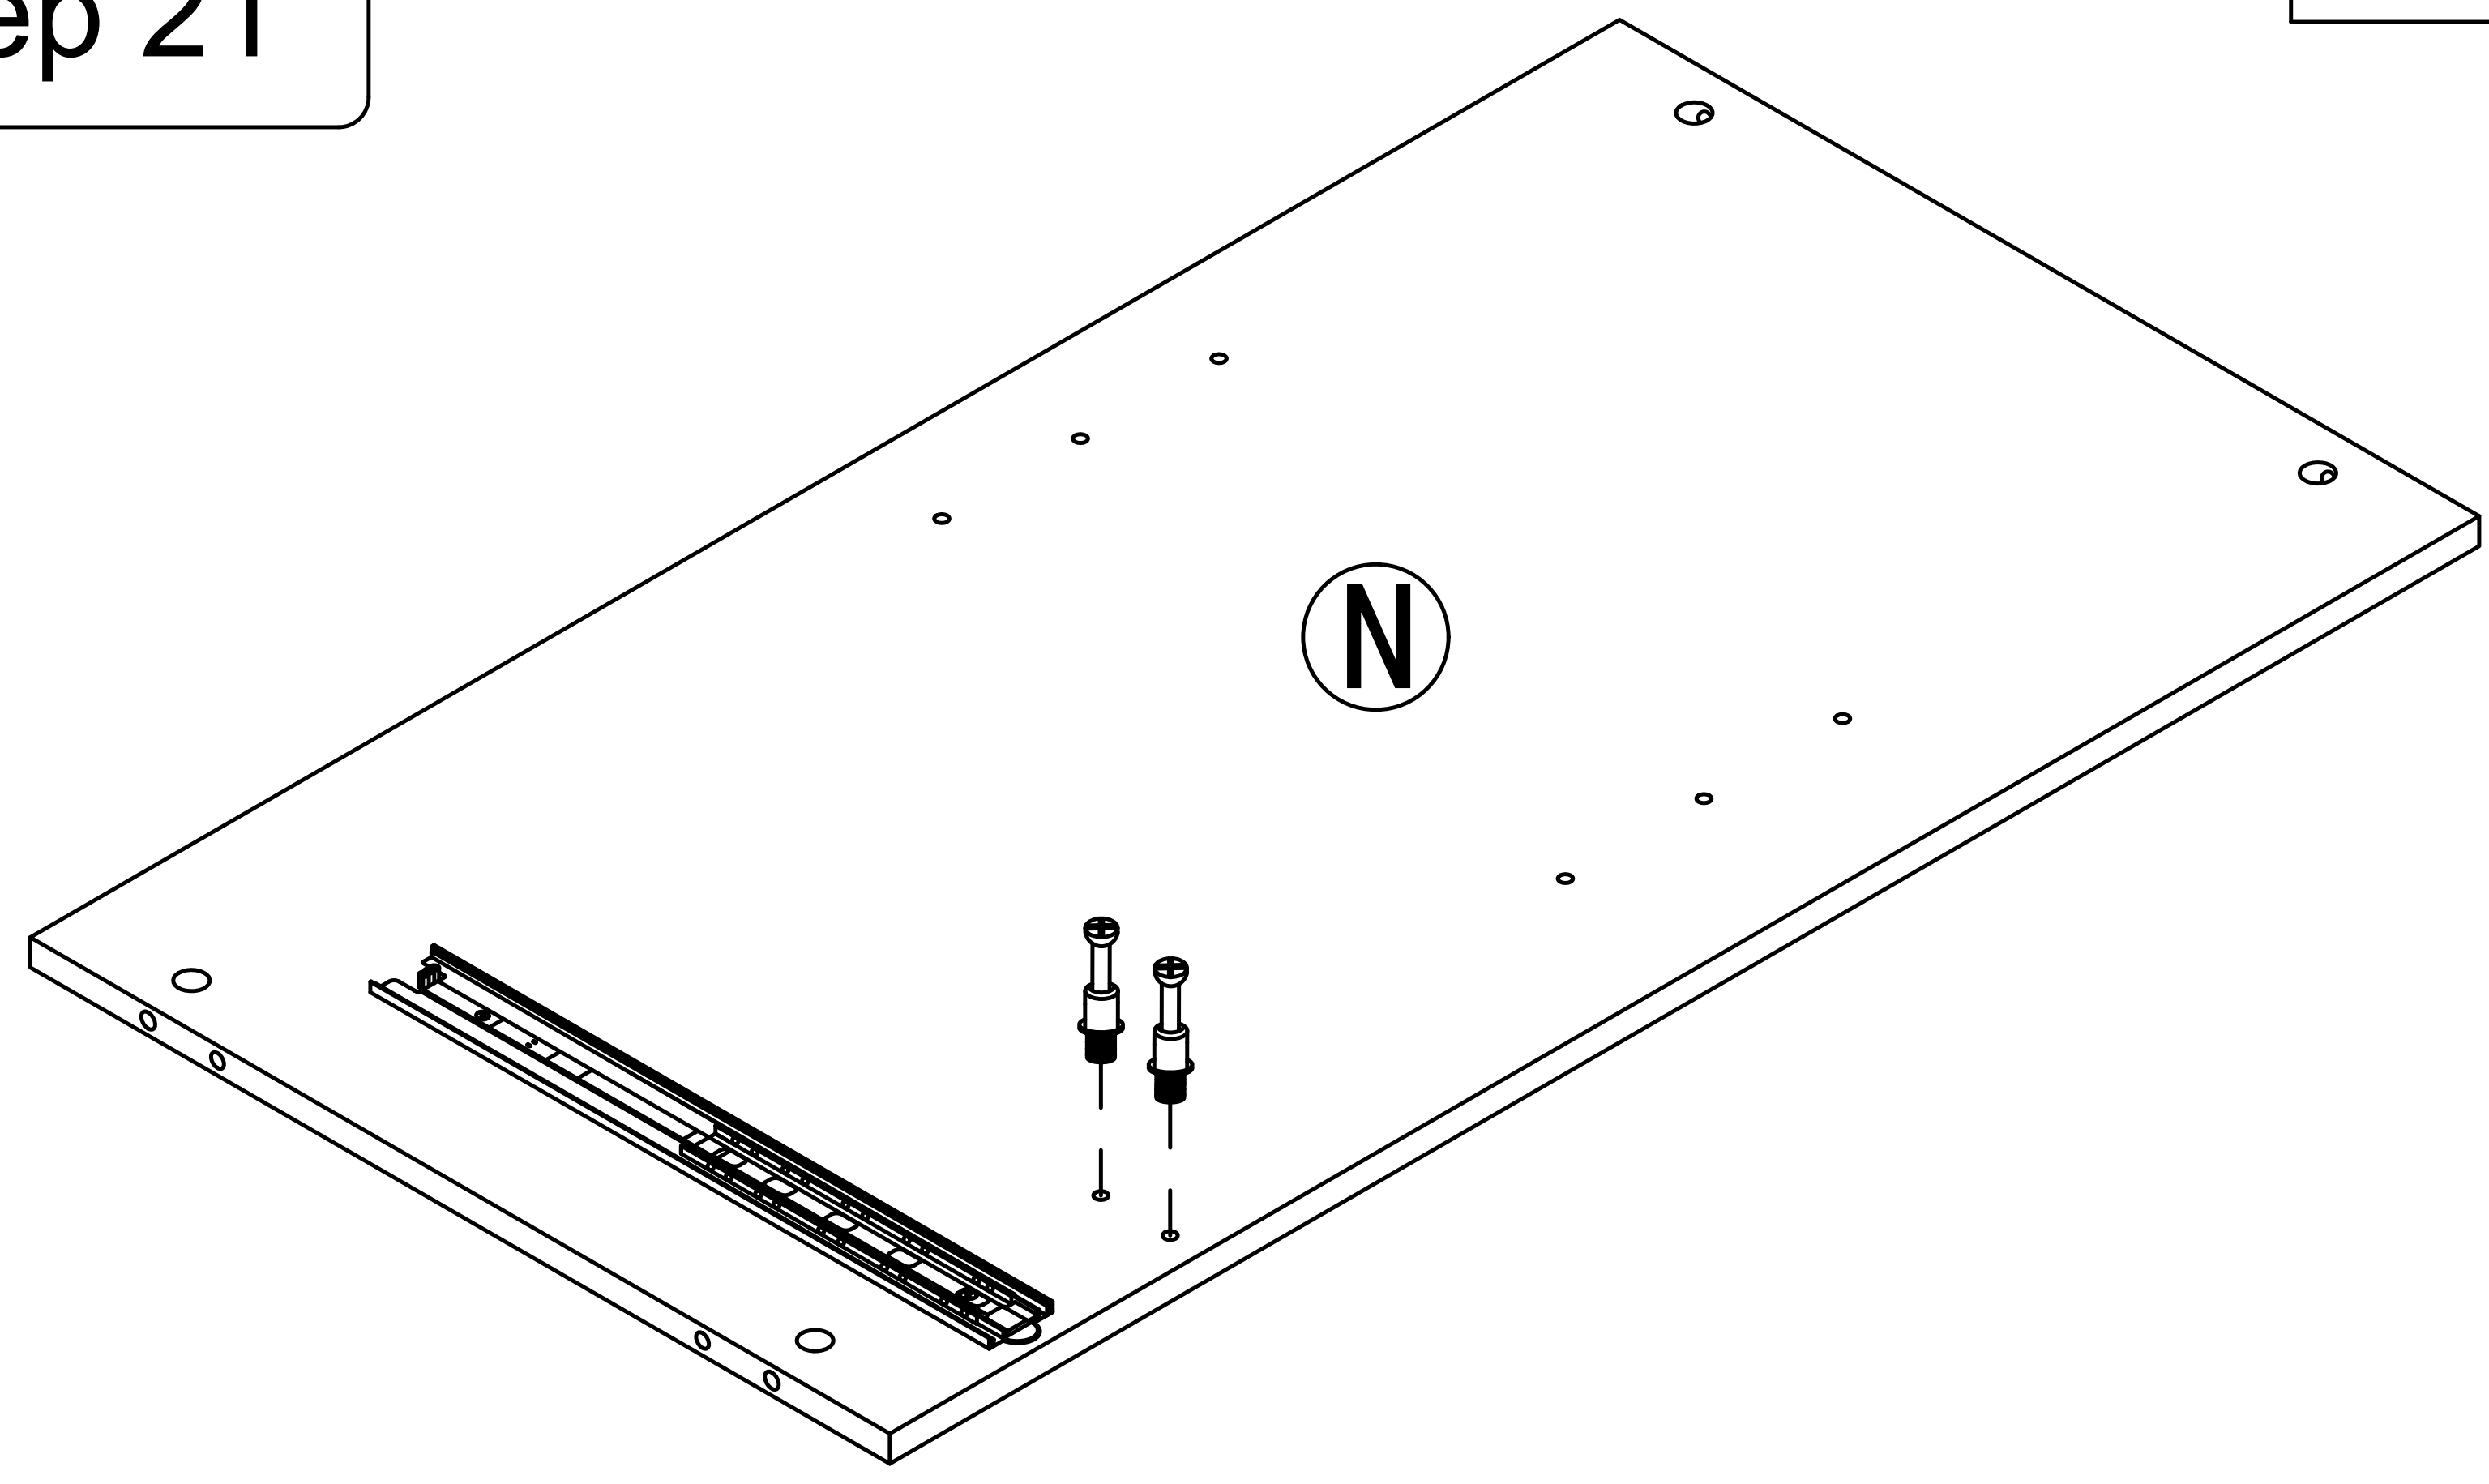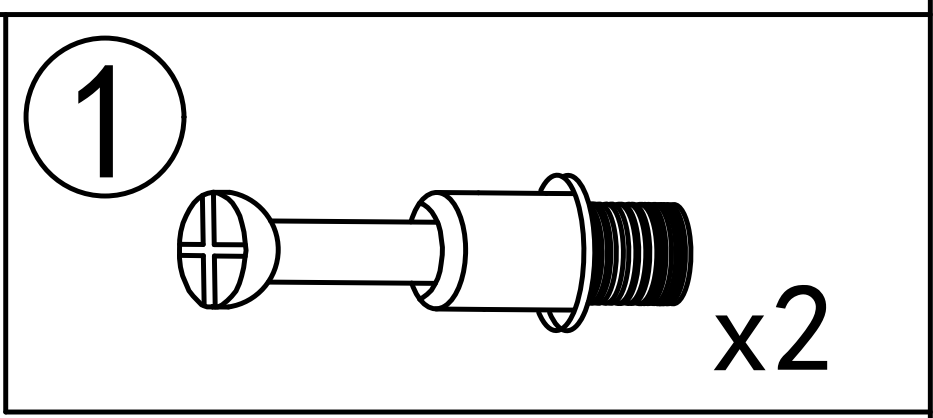


Step 22

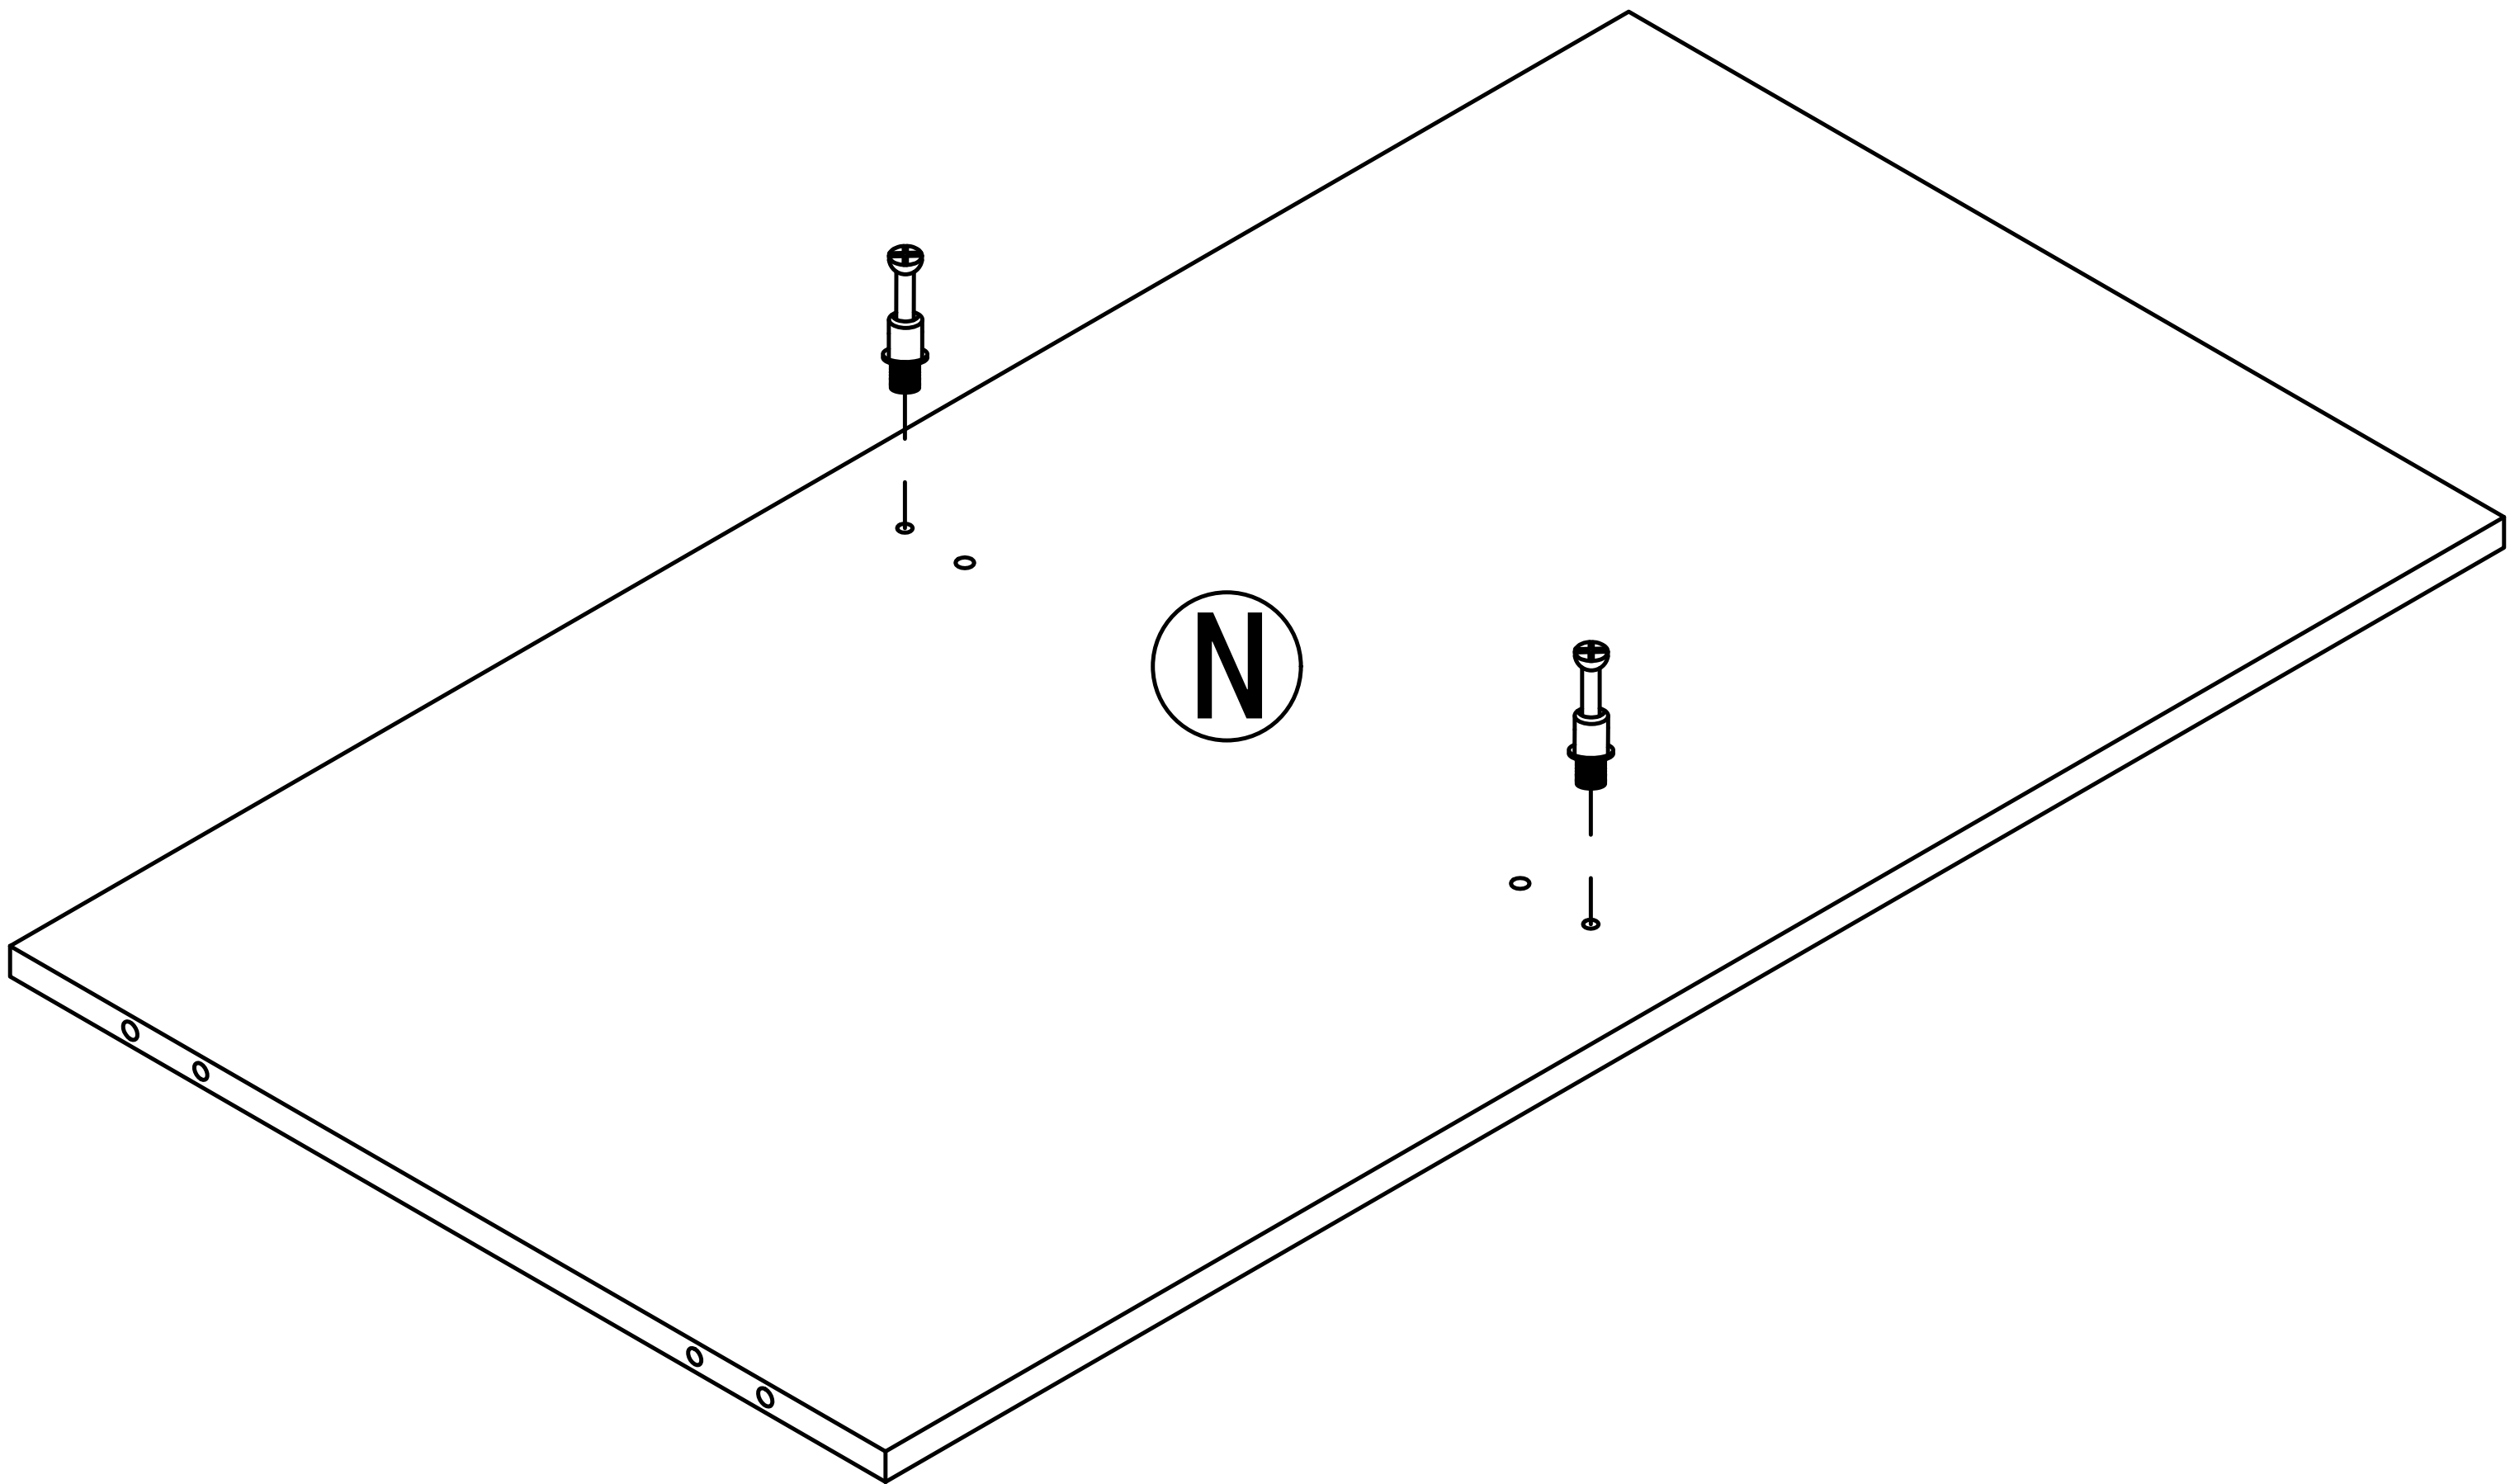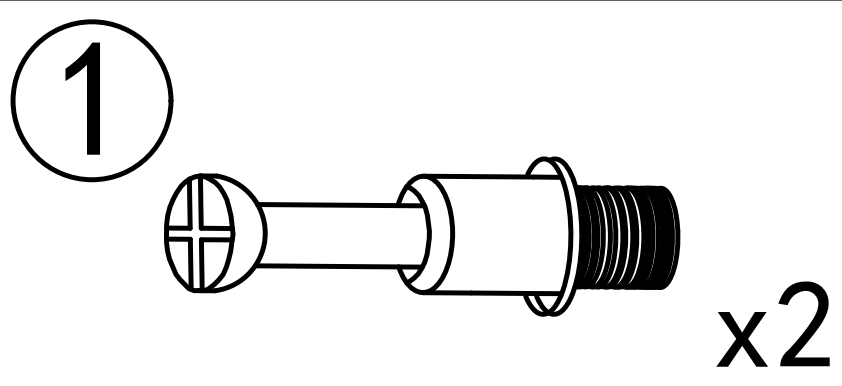


Step 23

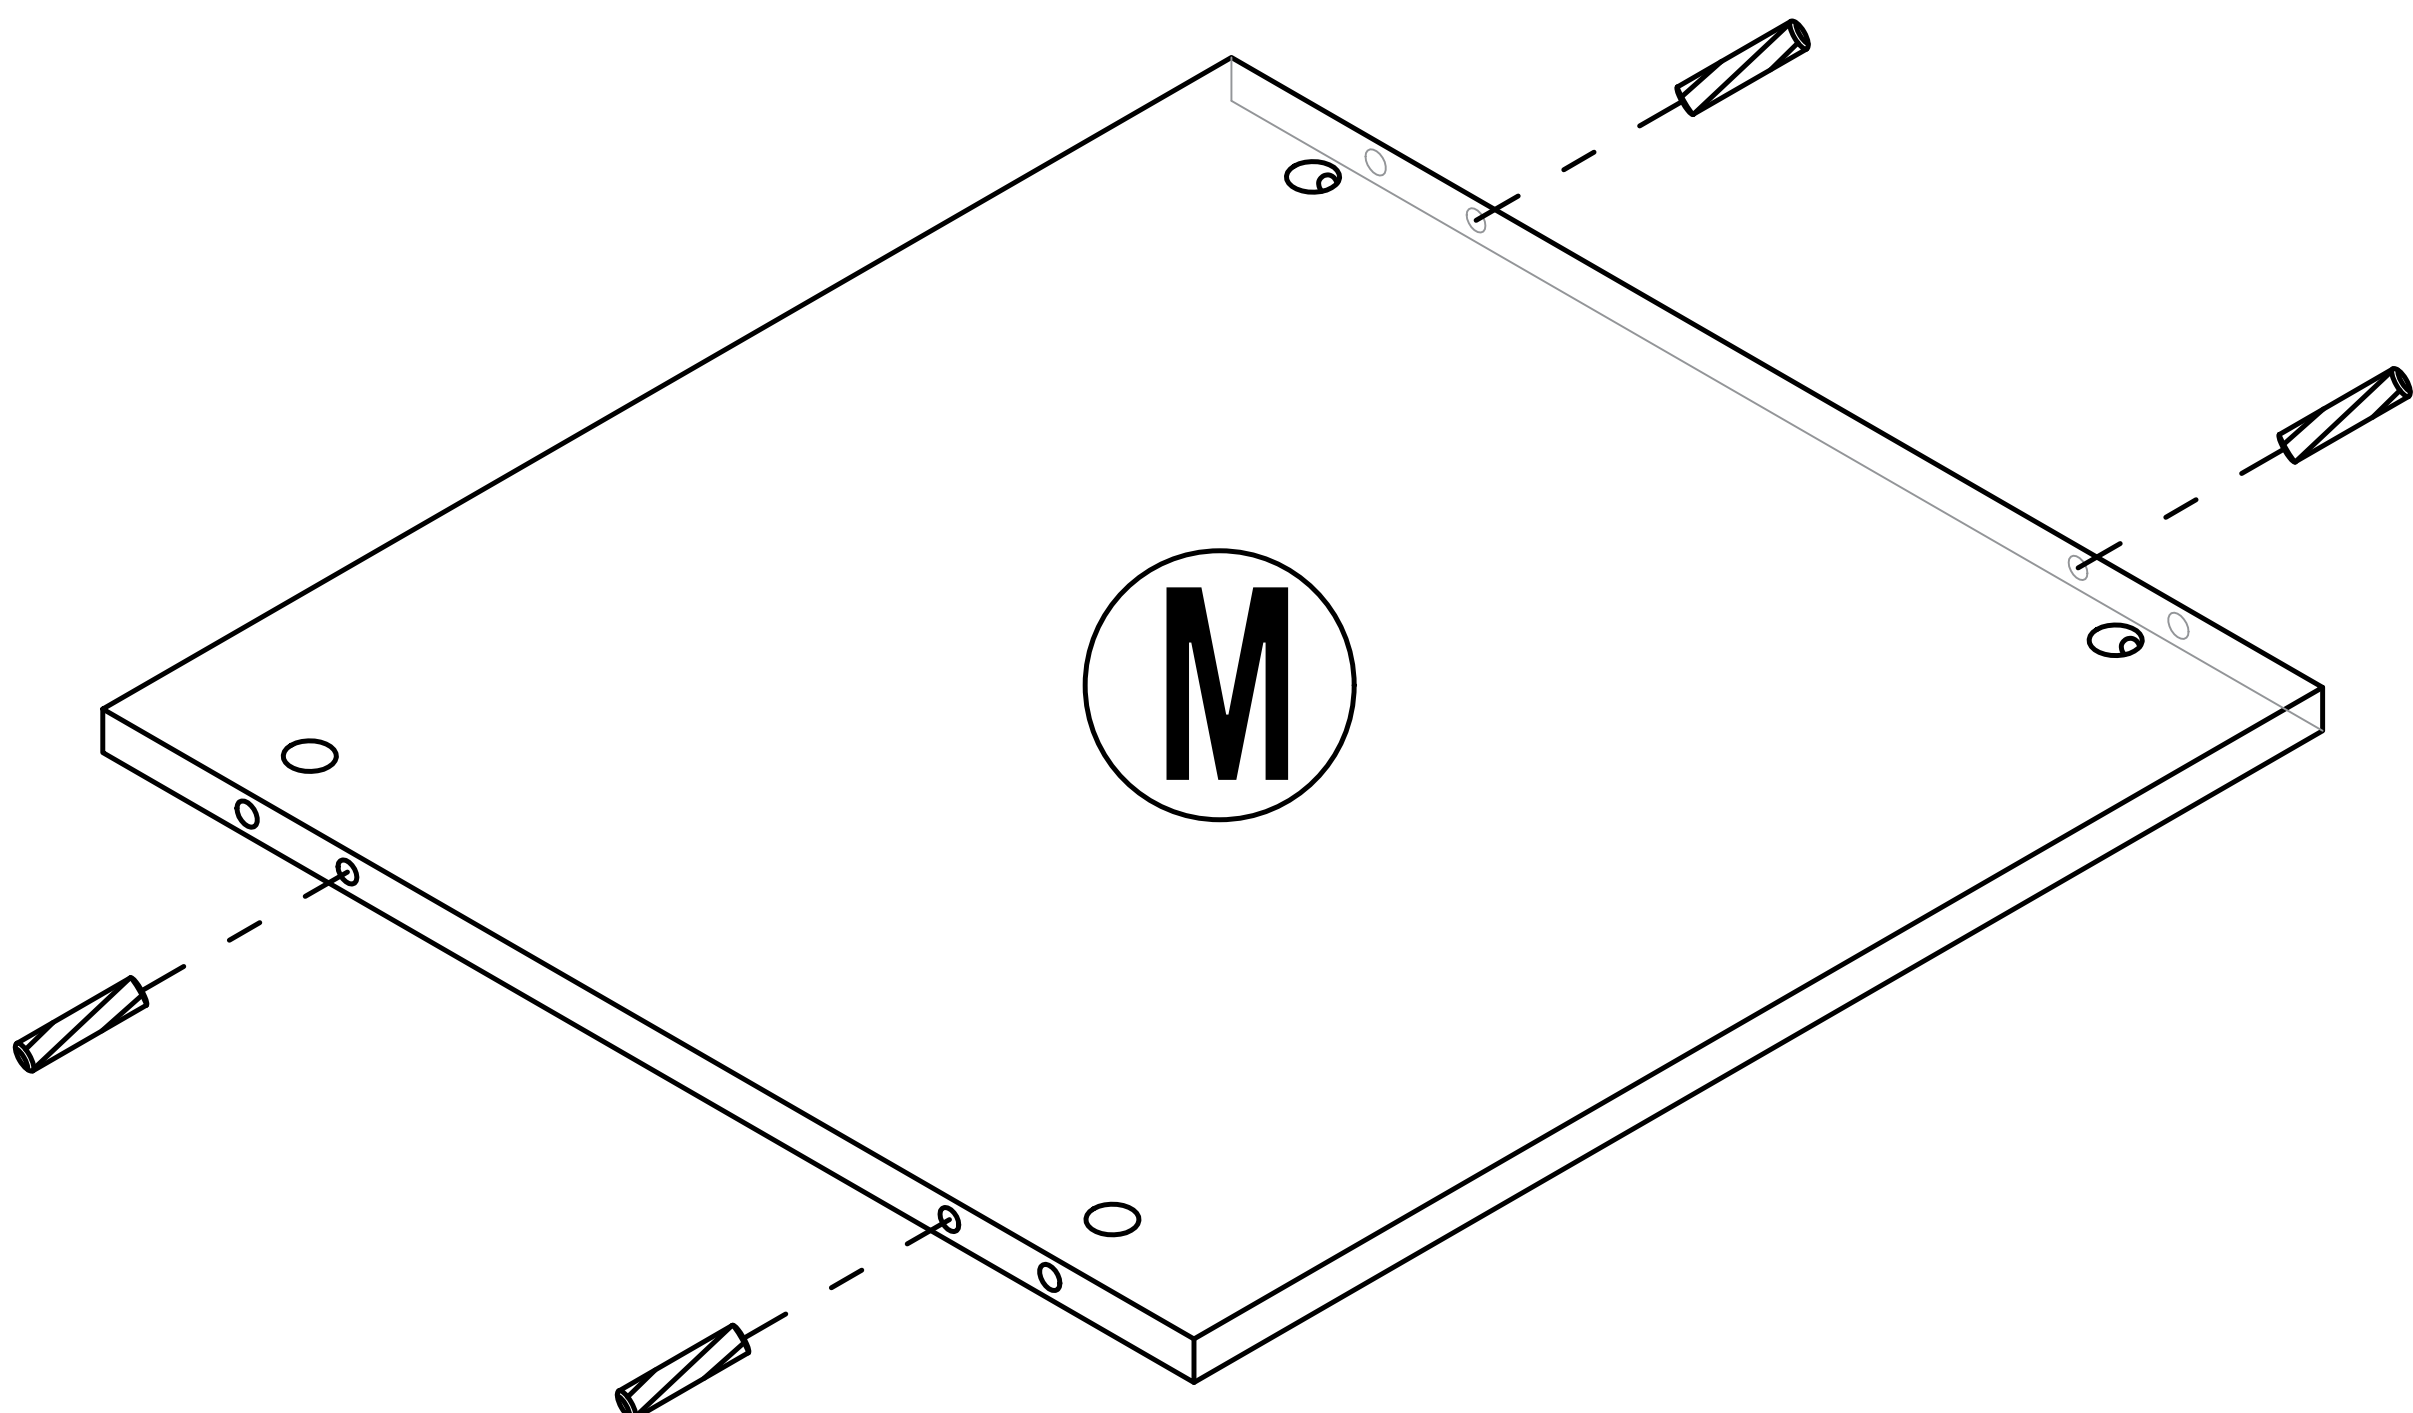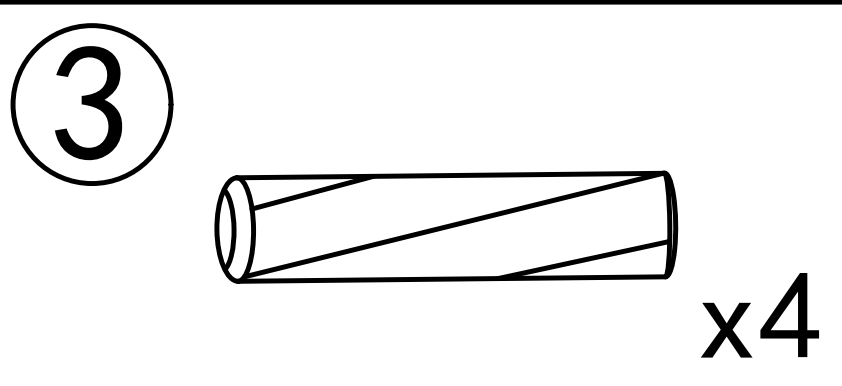



Step 24

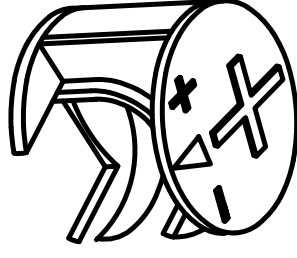2  x2


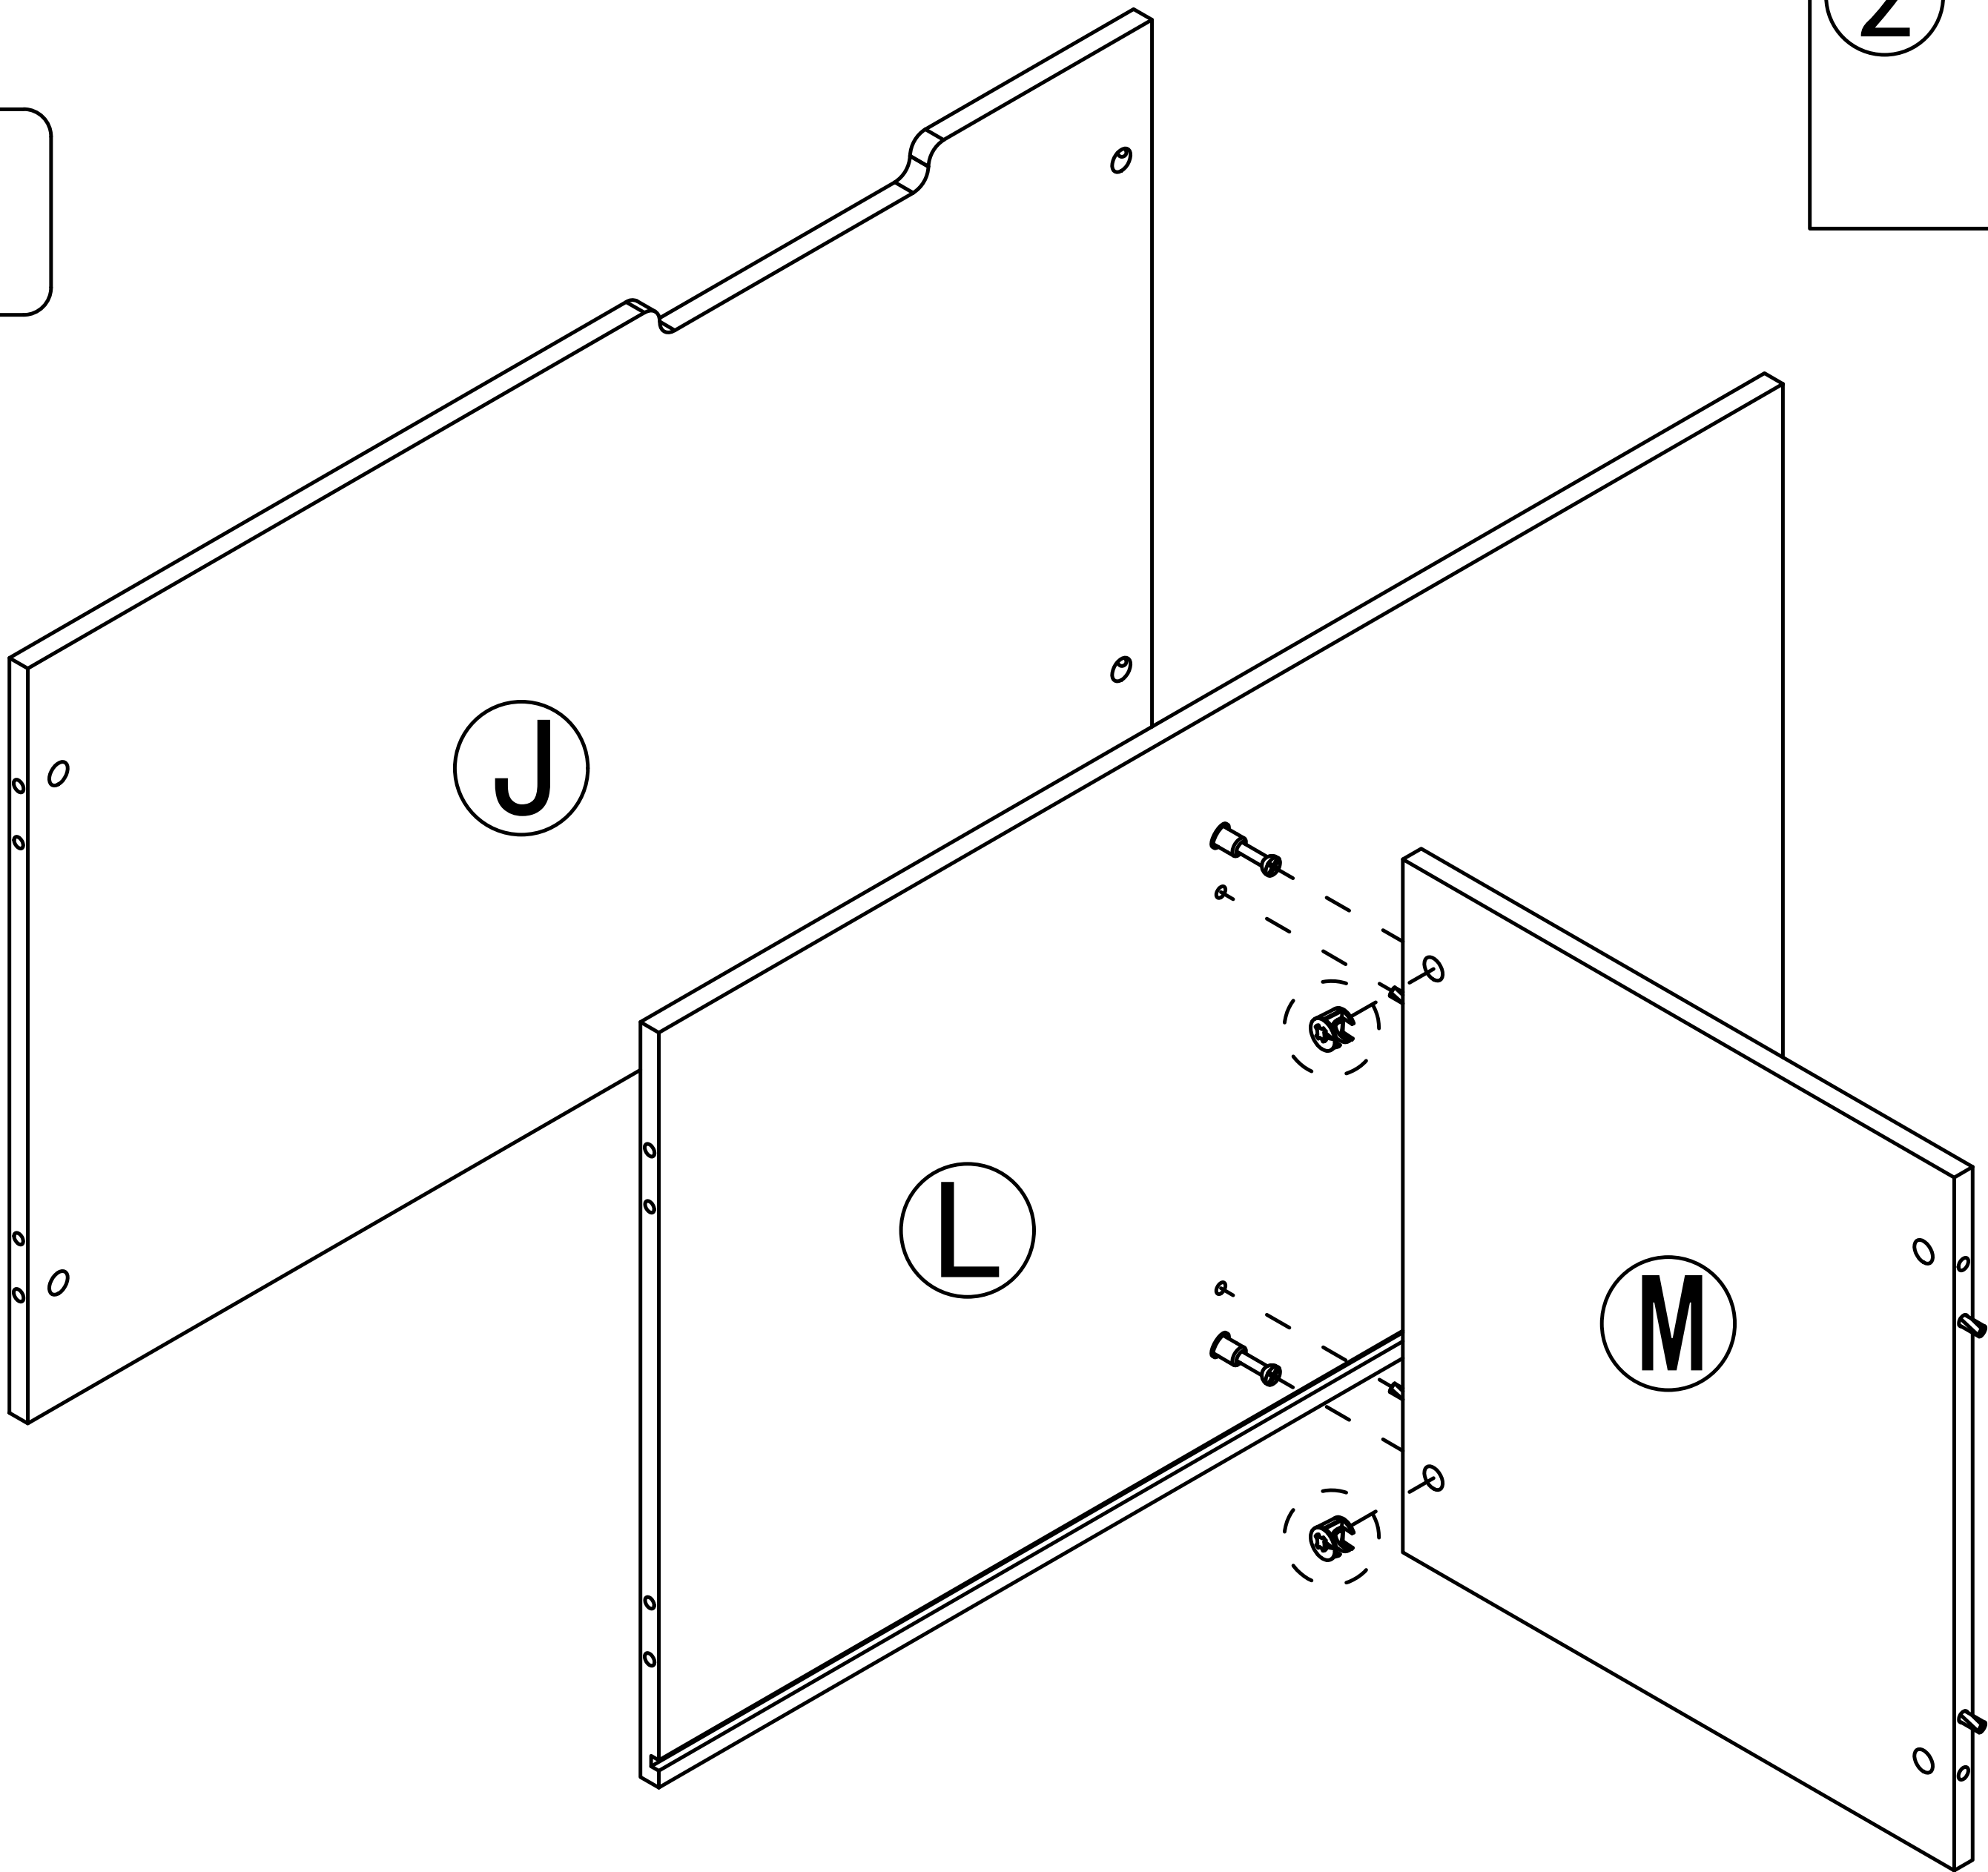


Step 25


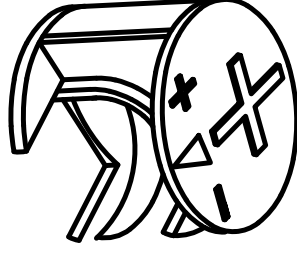
2  x2

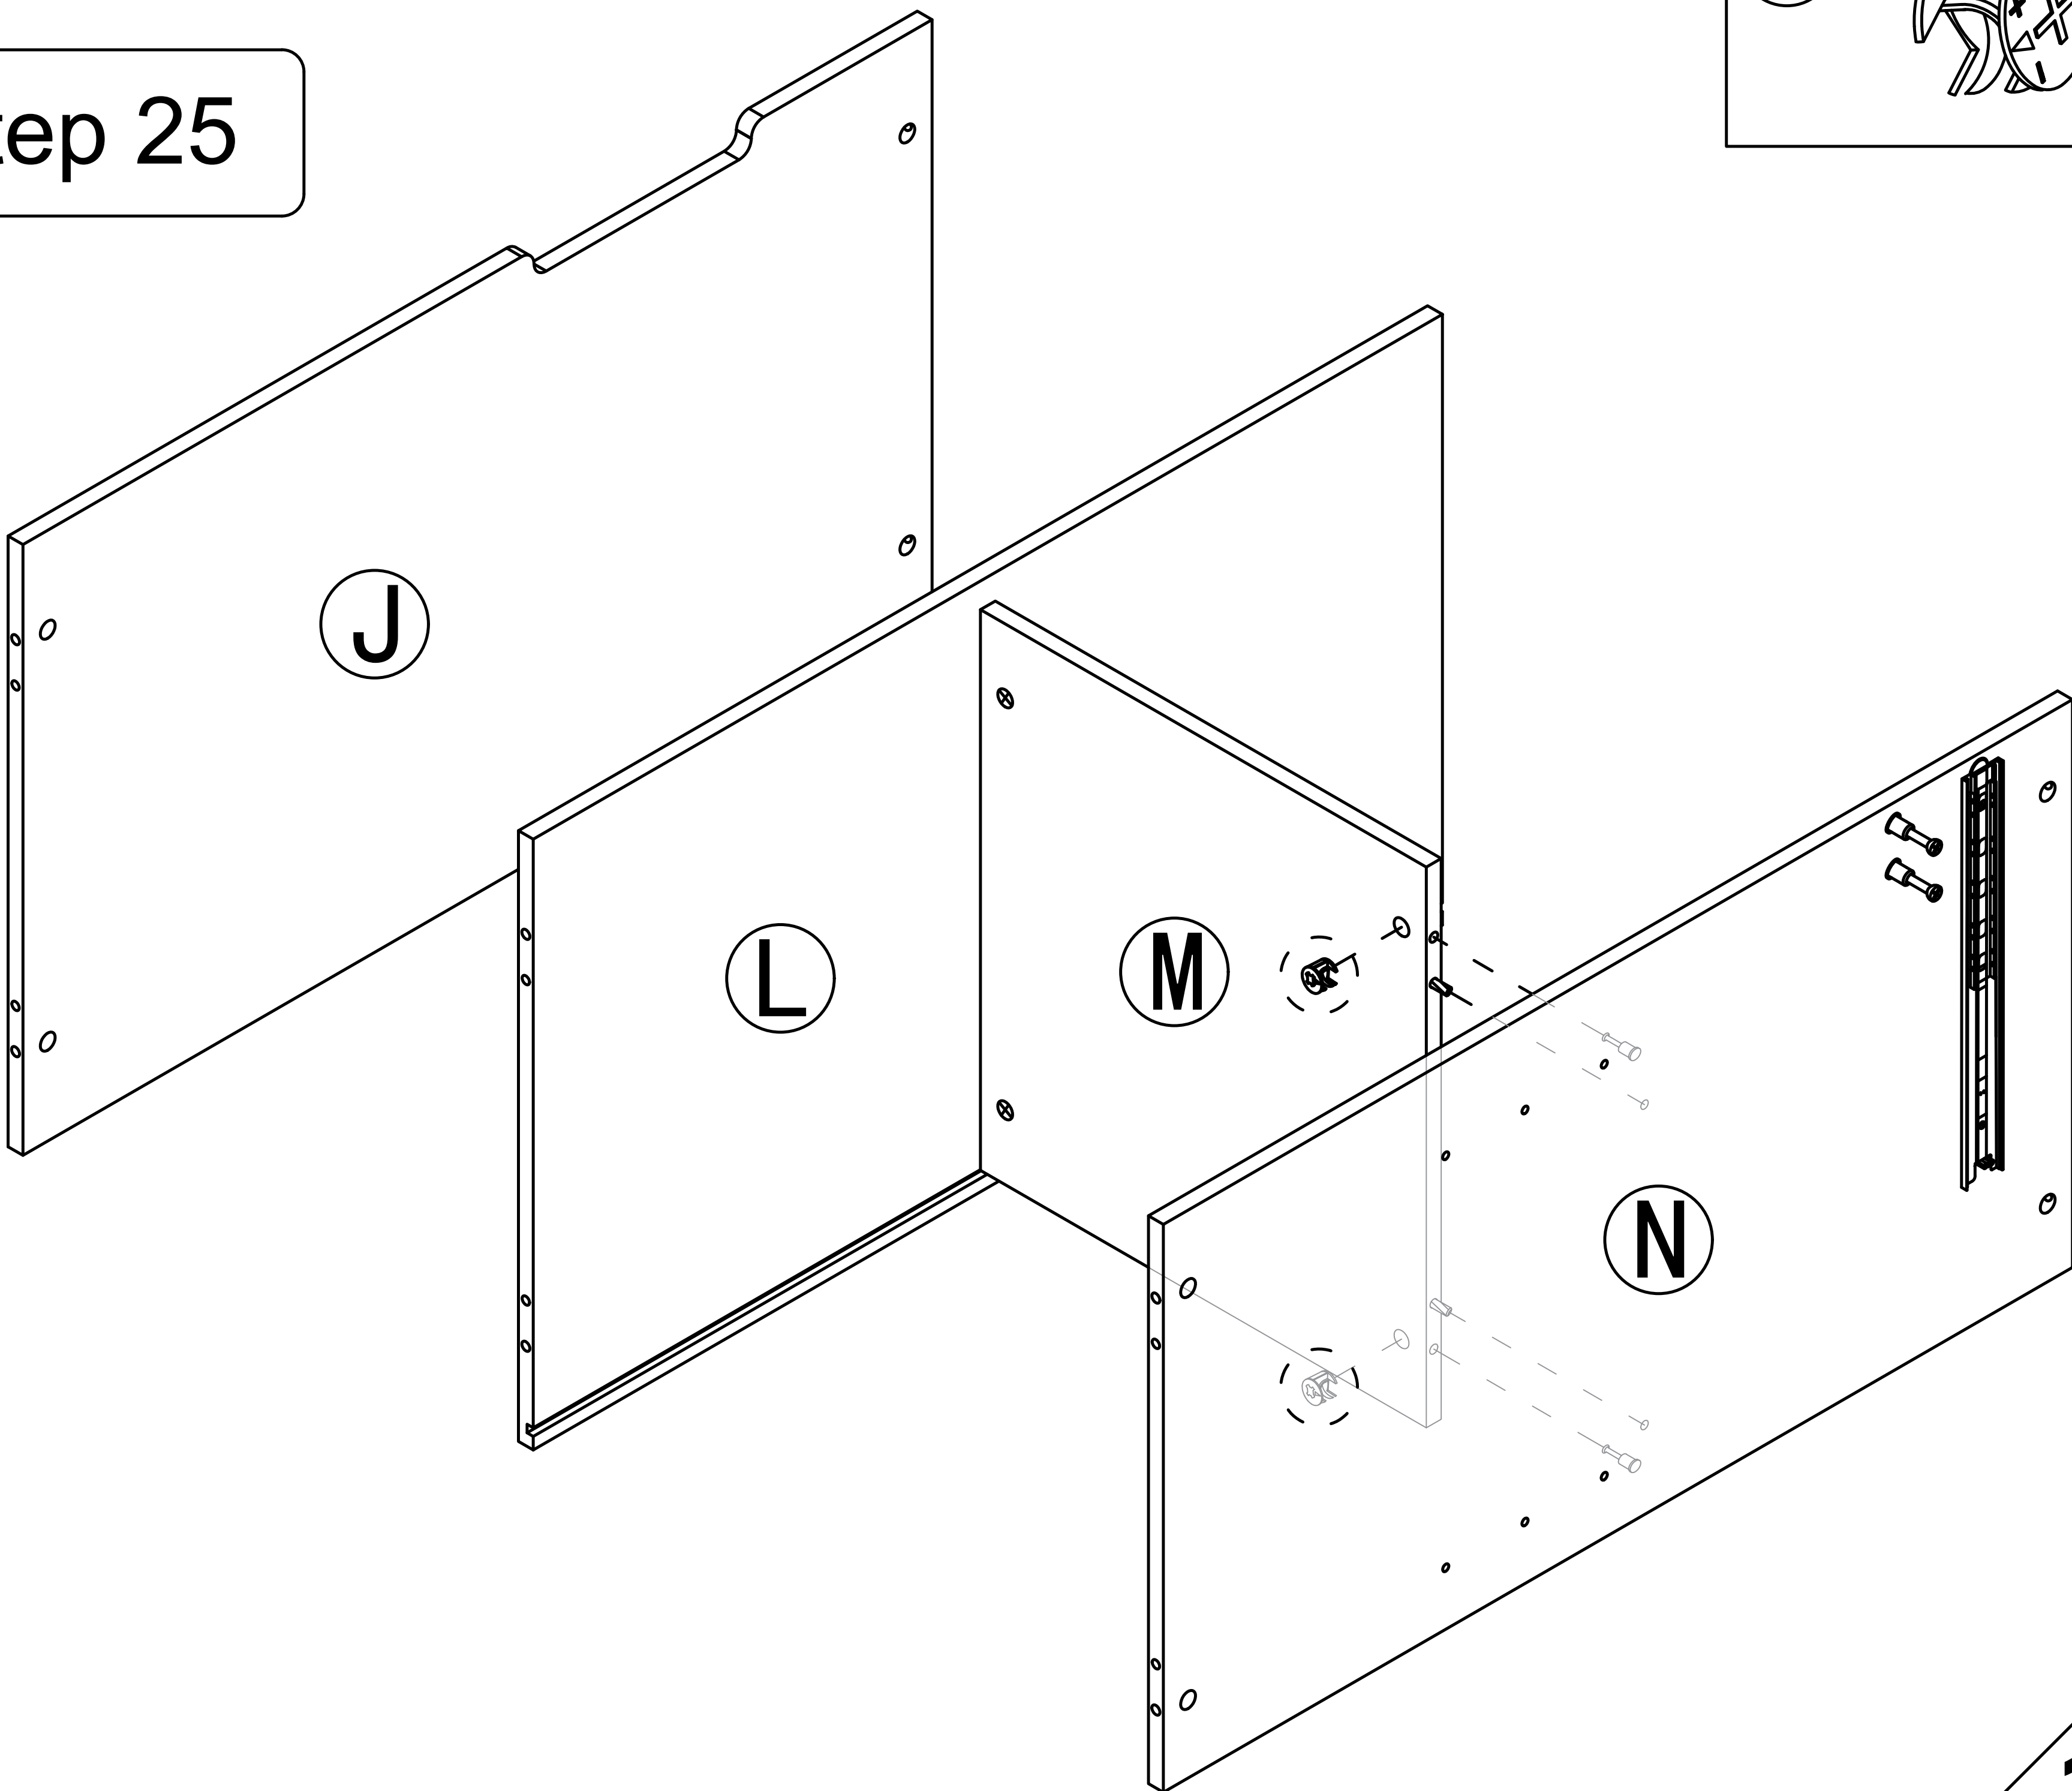


Step 26

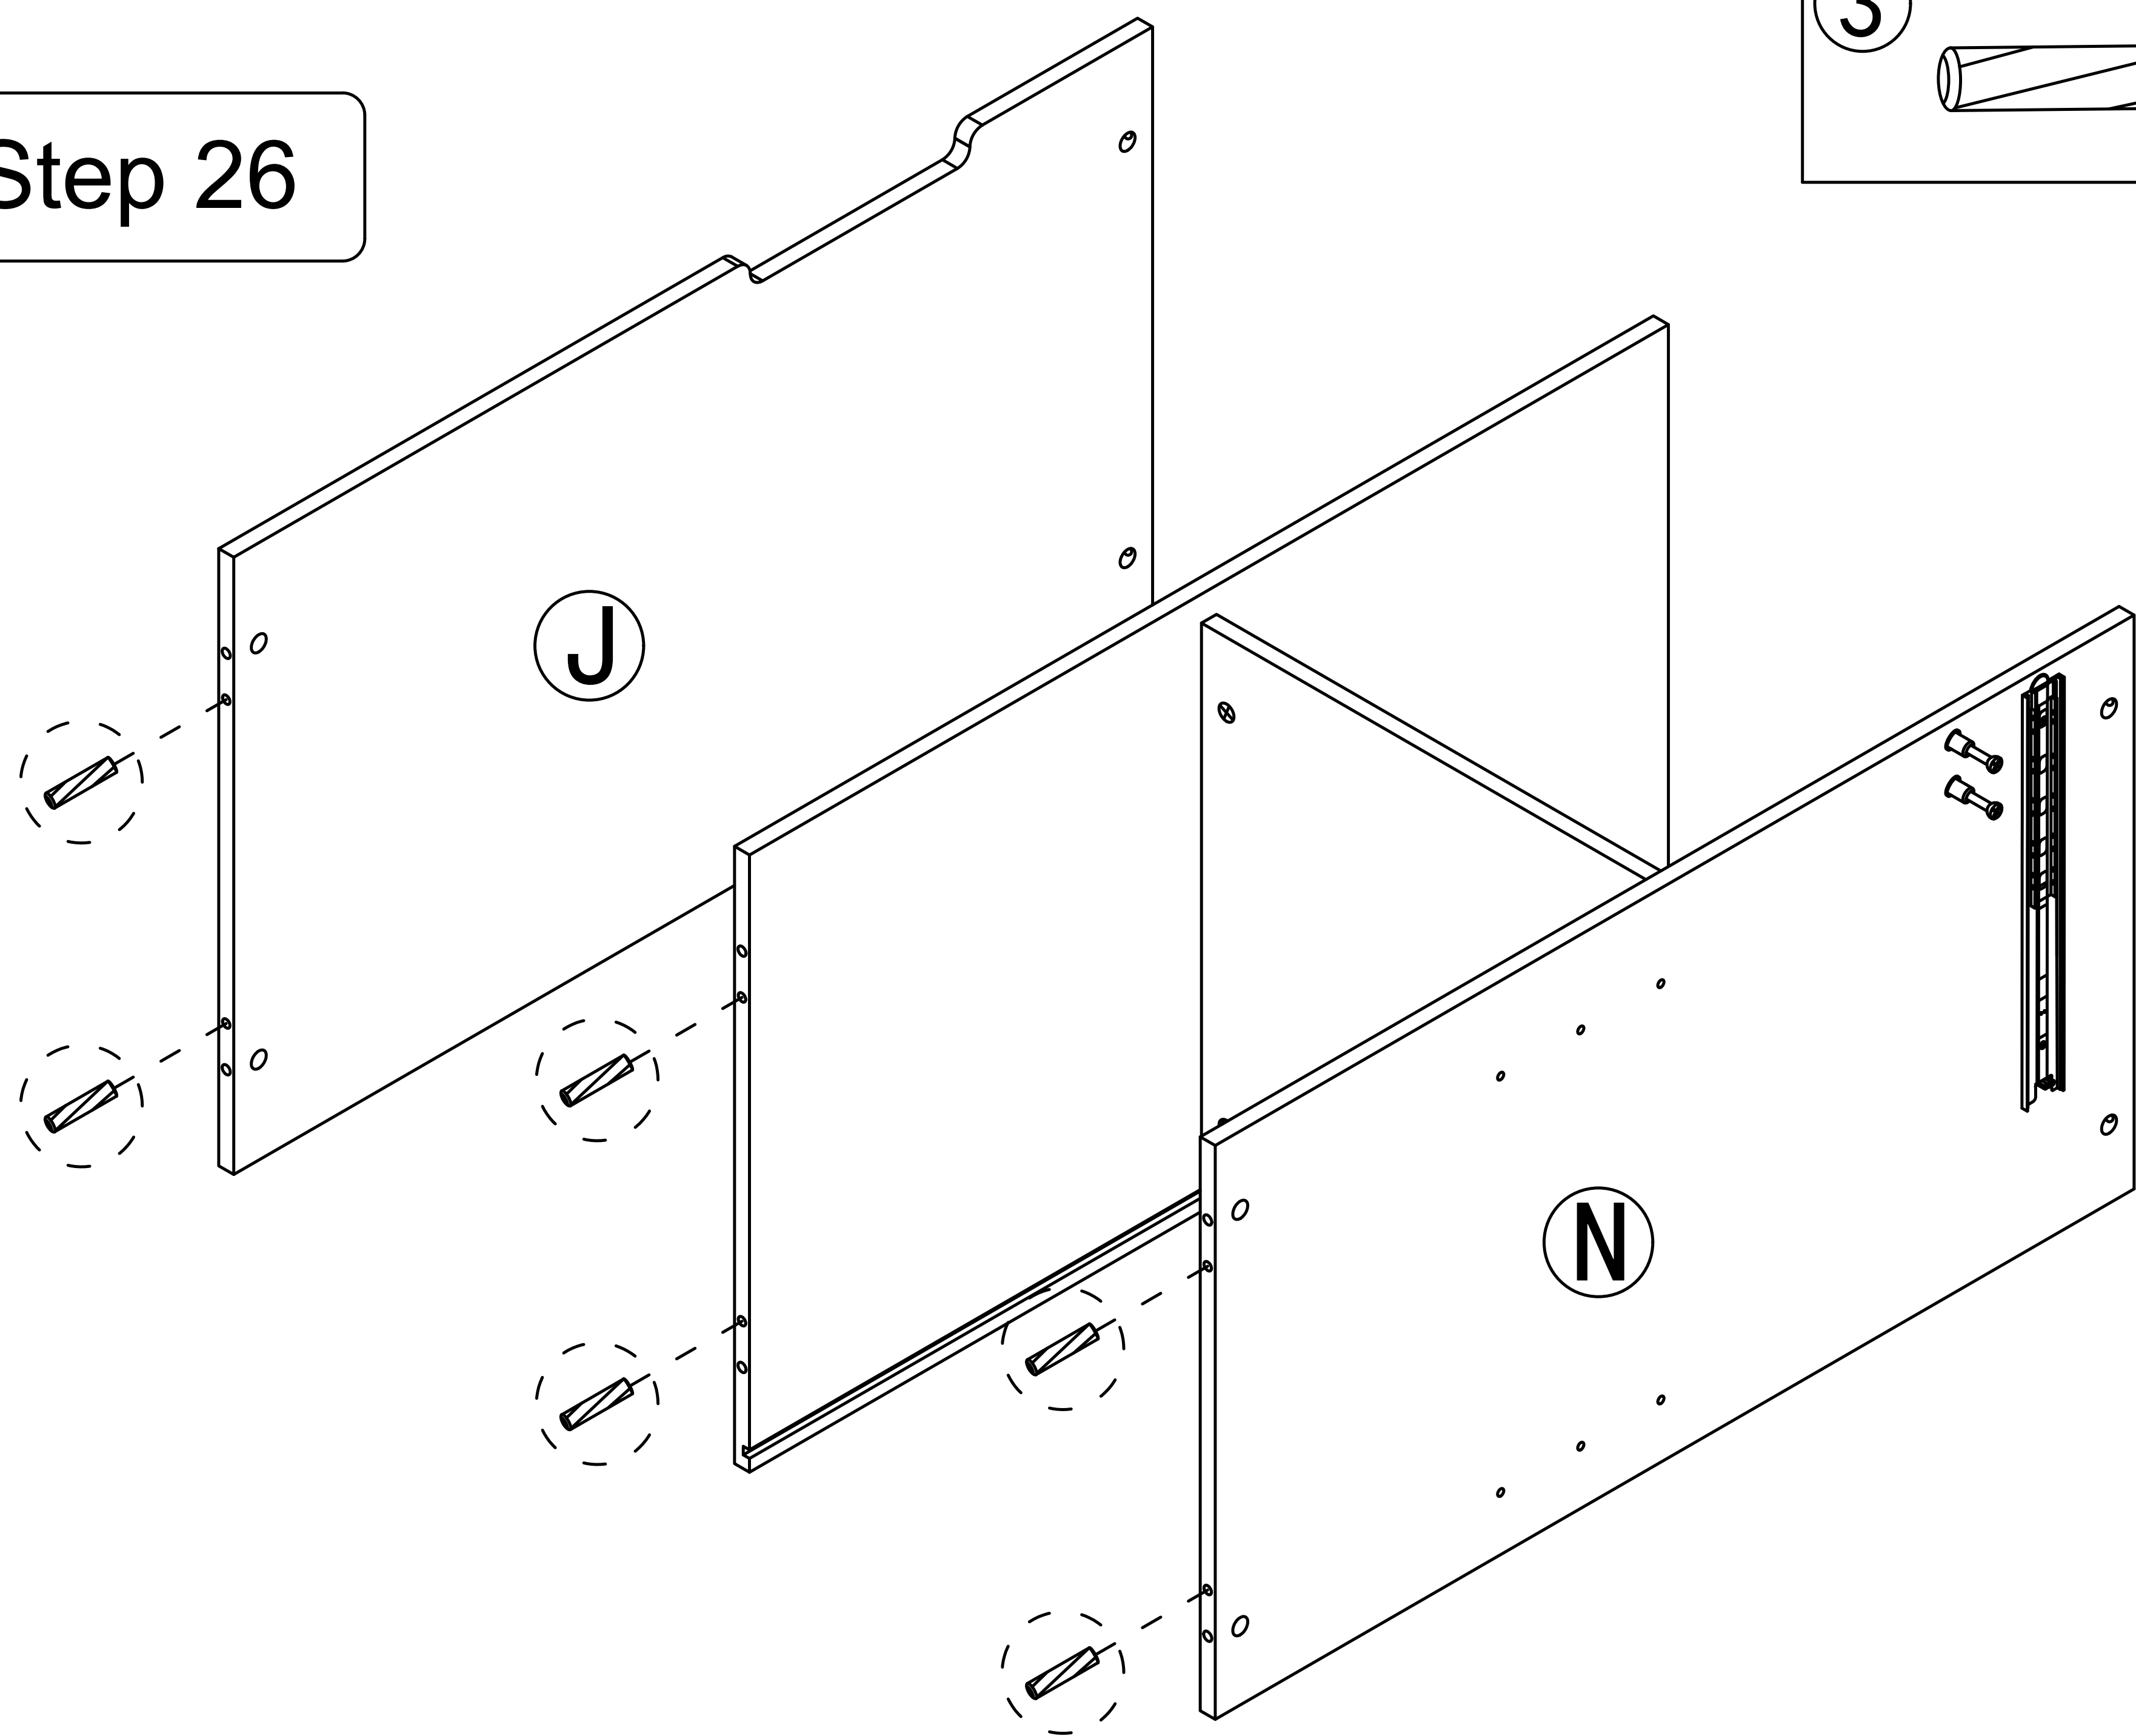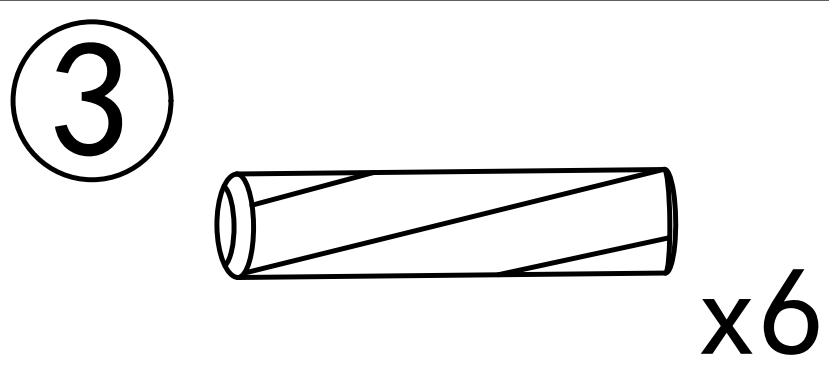


Step 27

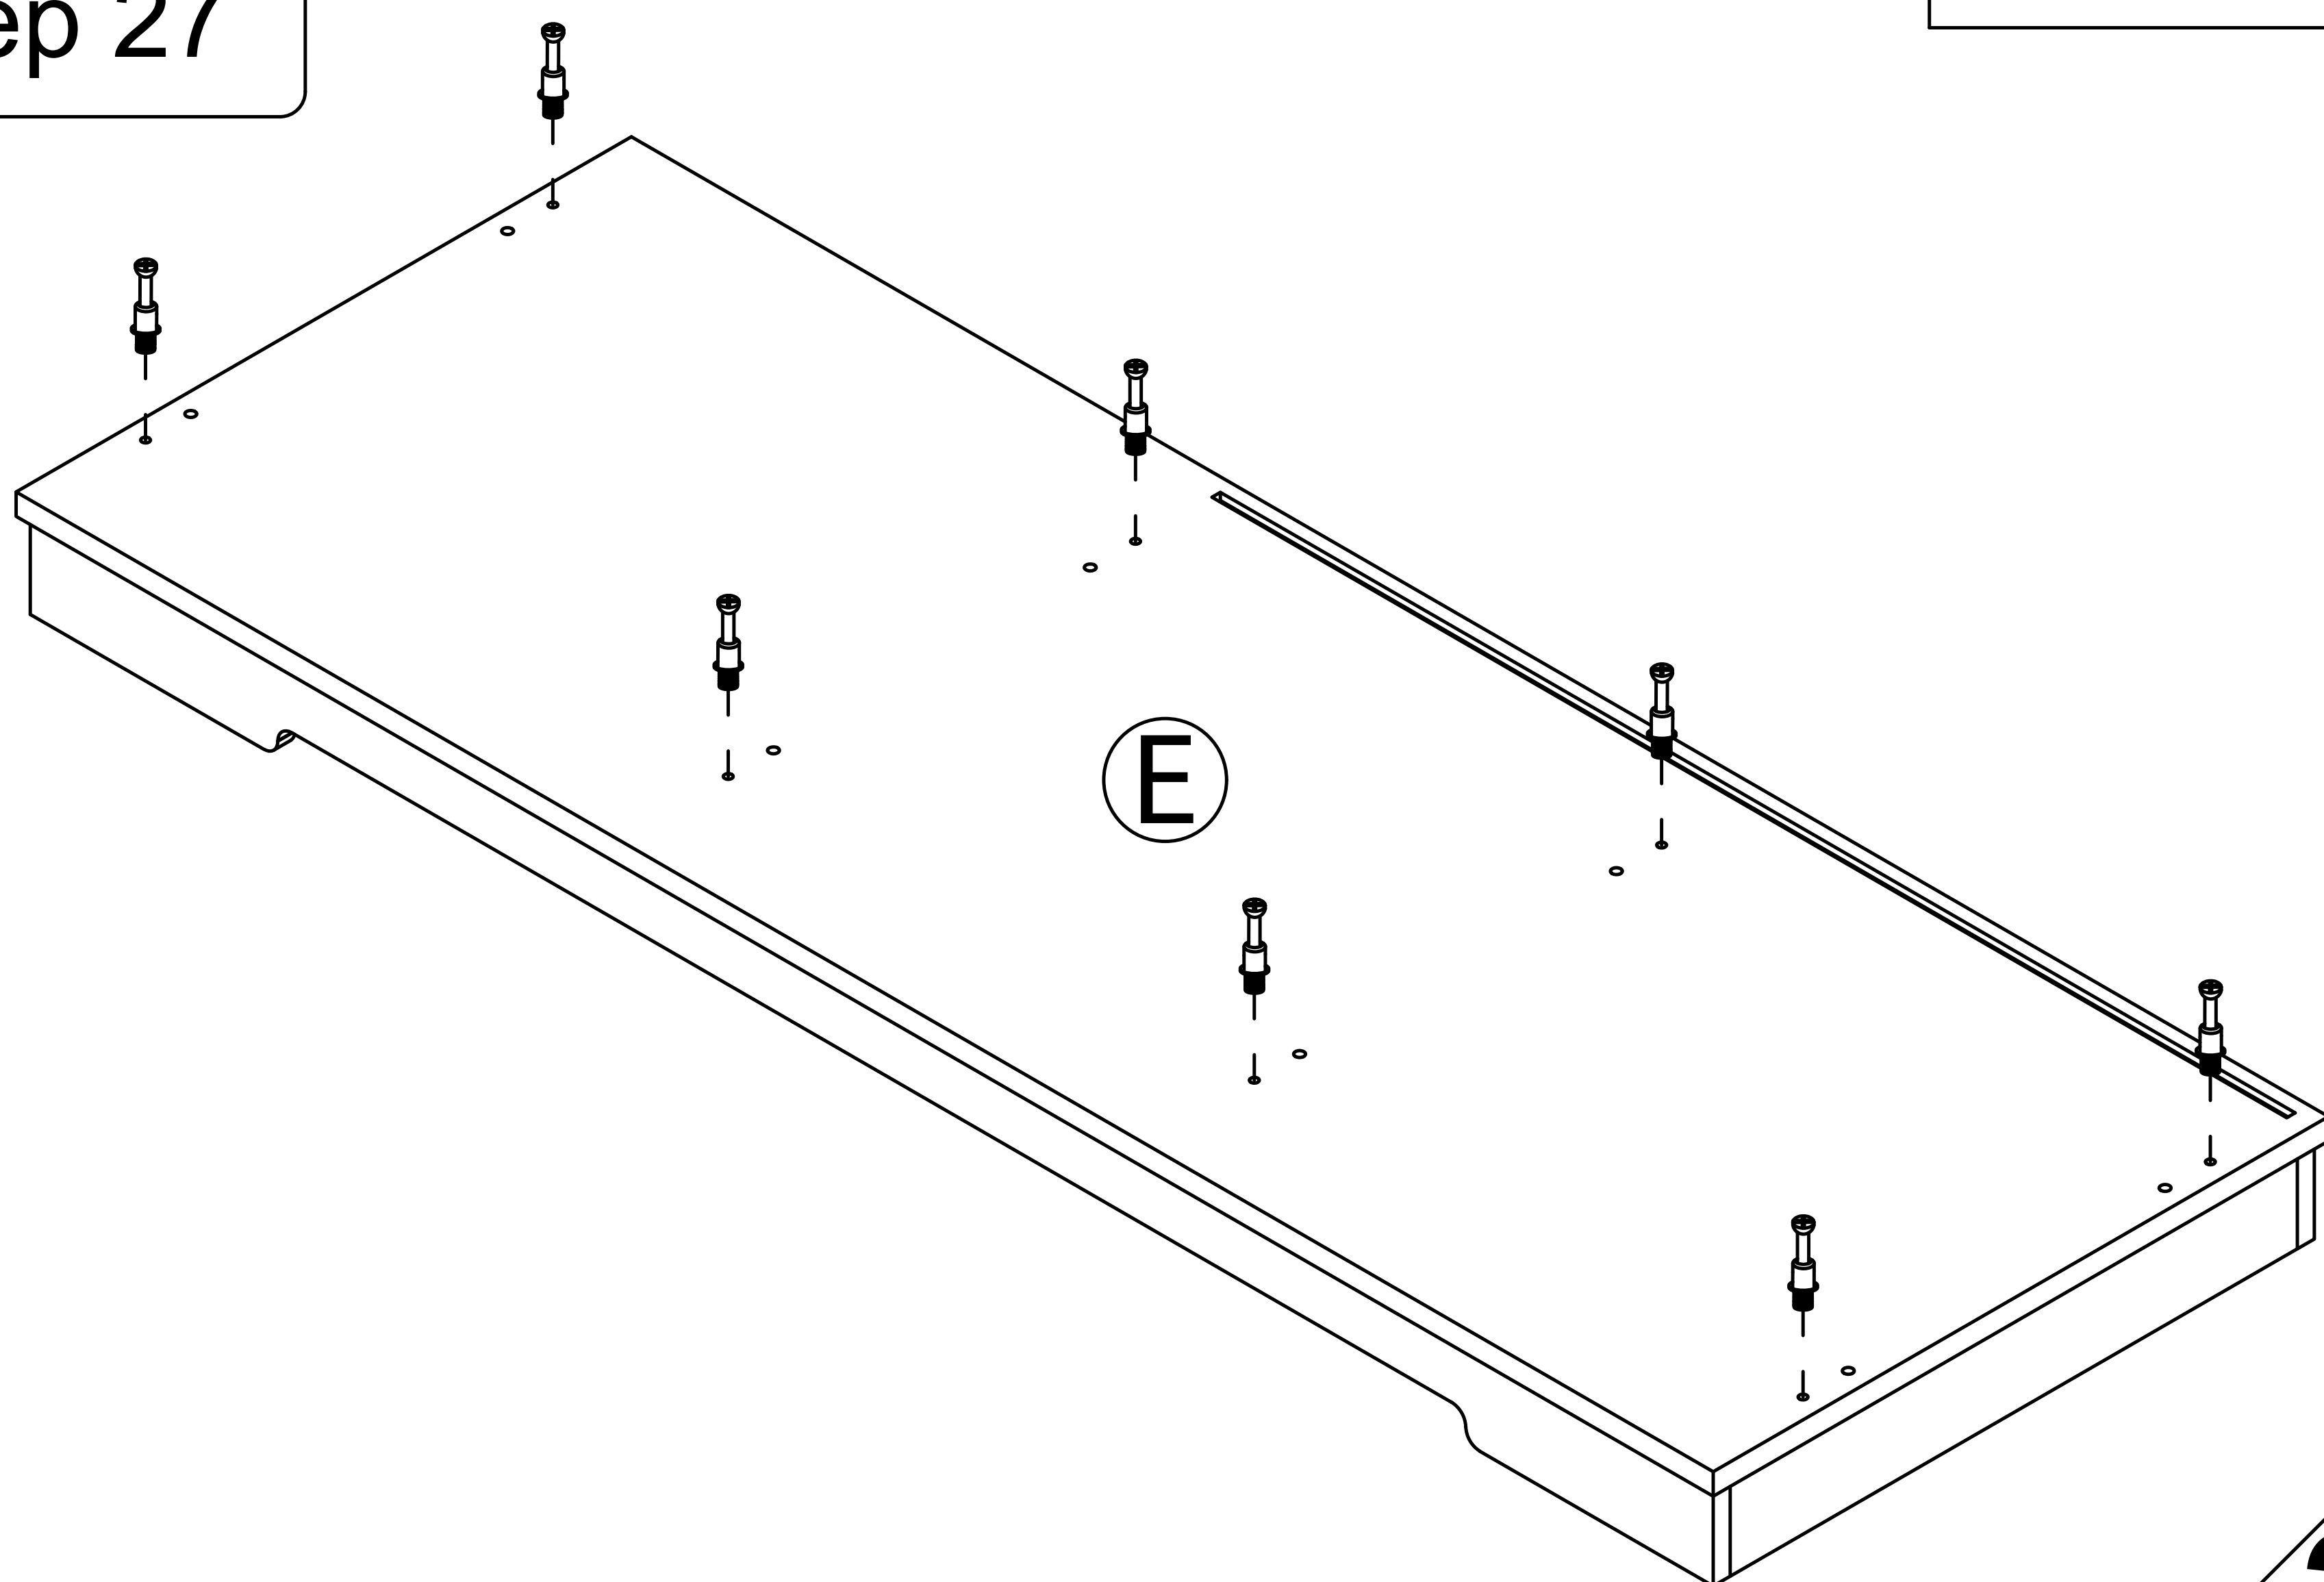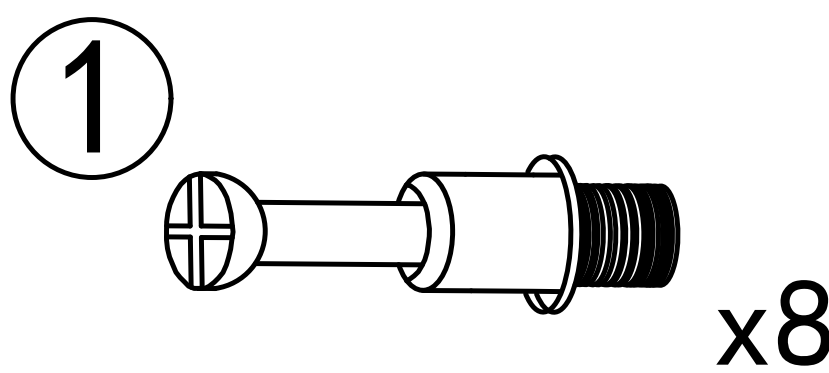


Step 28

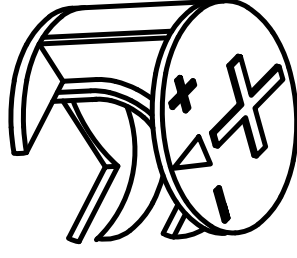2  x6

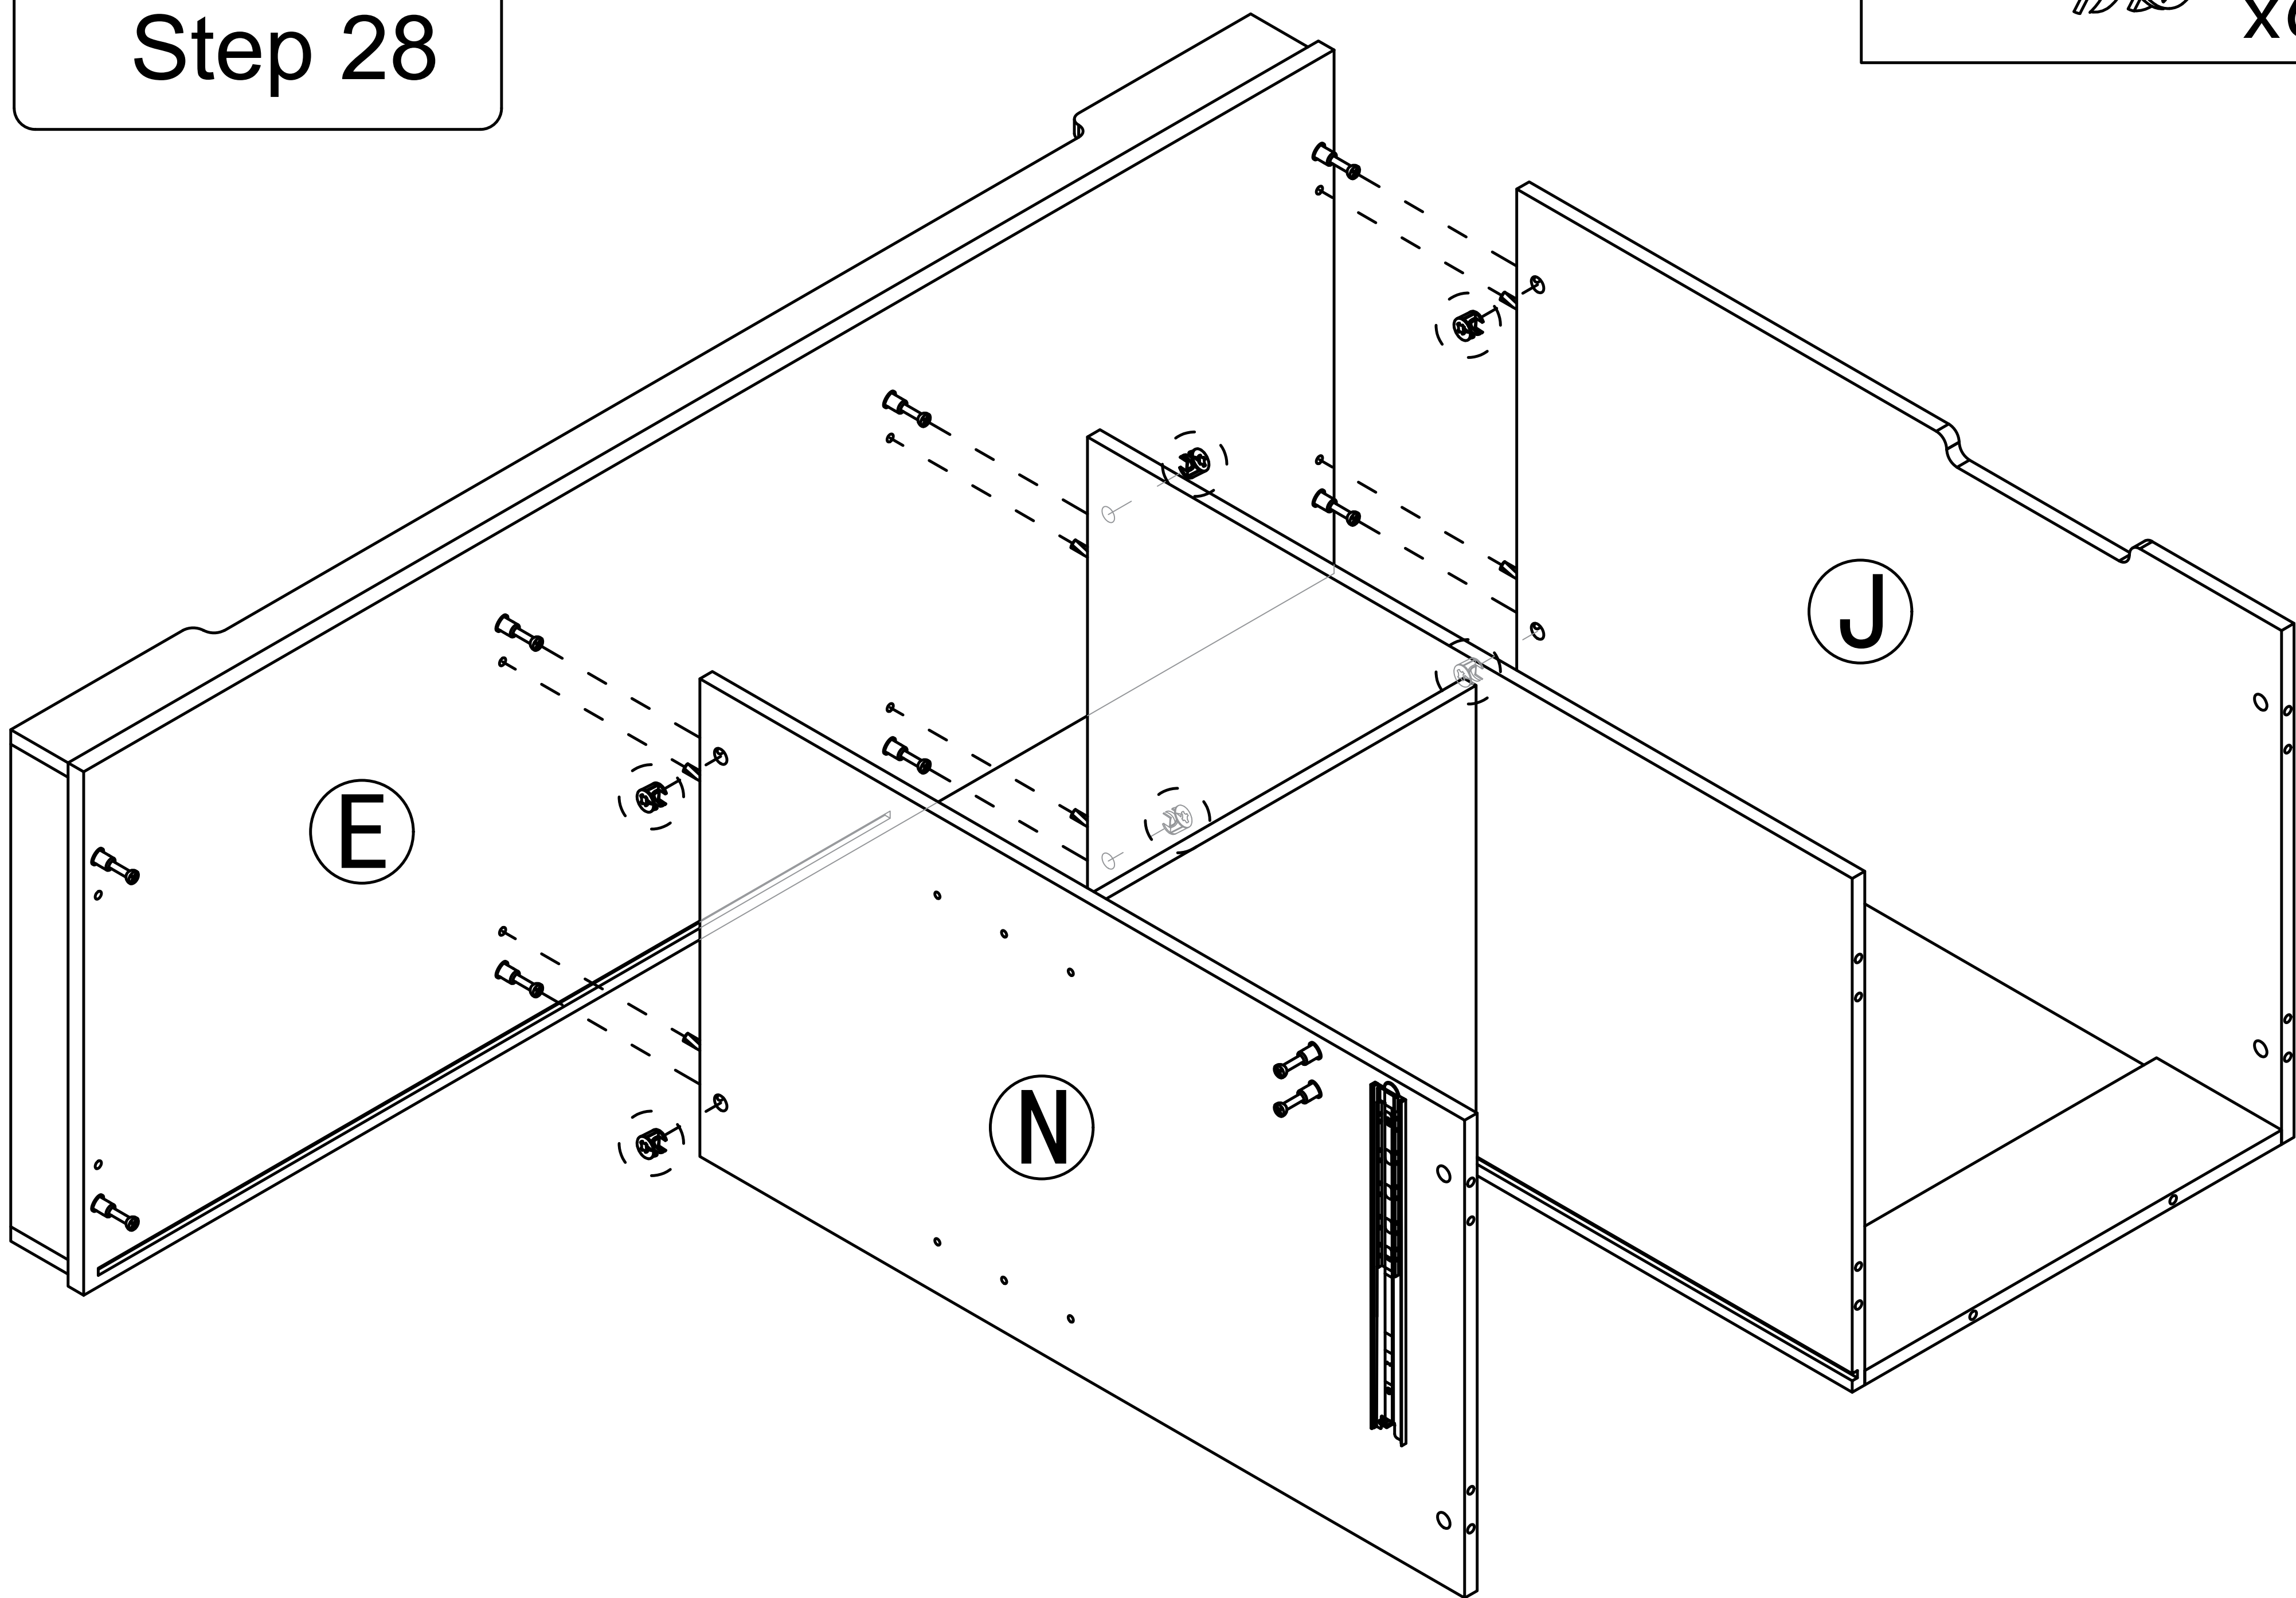


Note: After installing the bottom plate, two people will help the cabinet up together.

turn

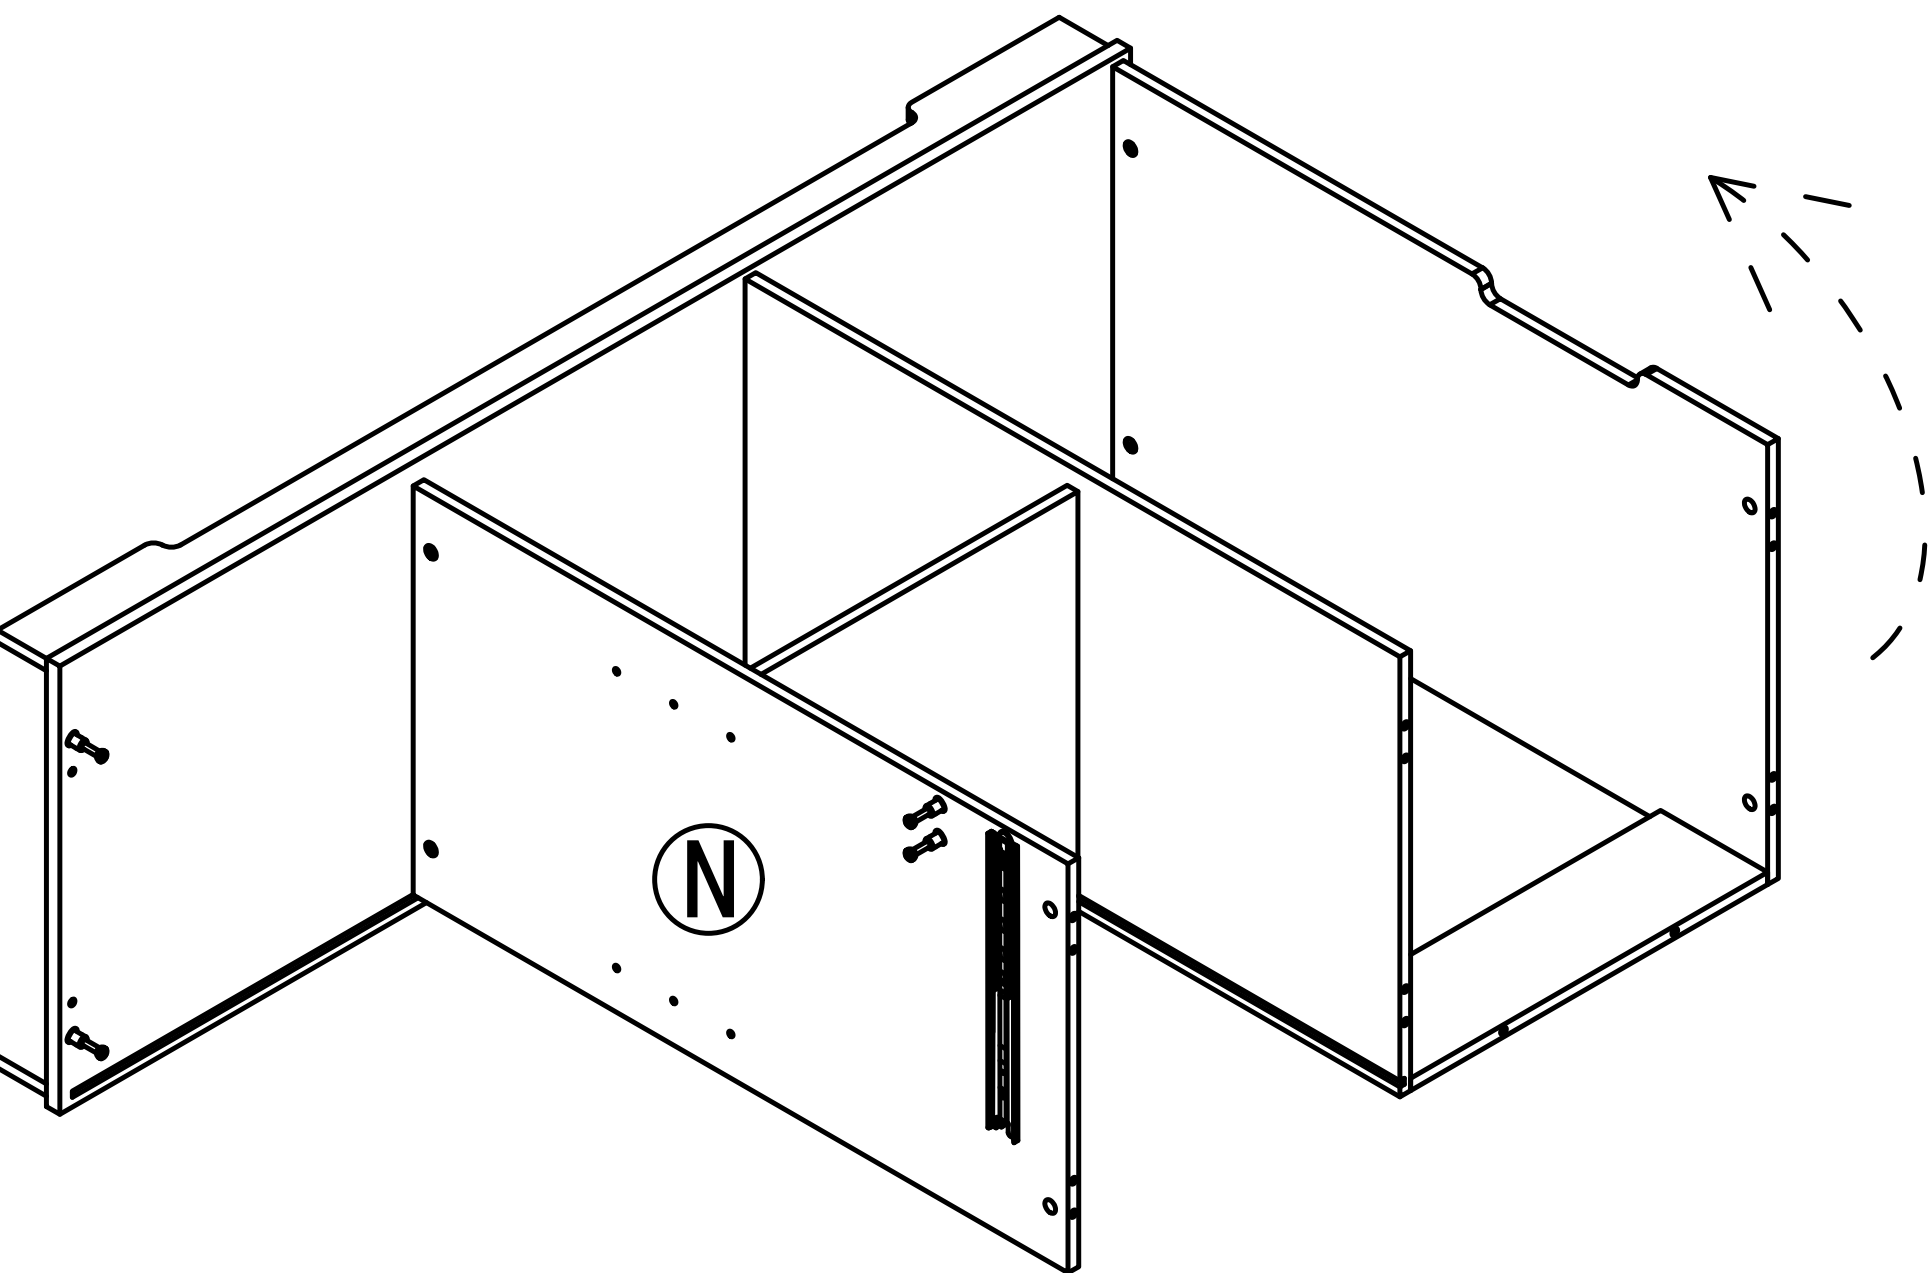



After turning over

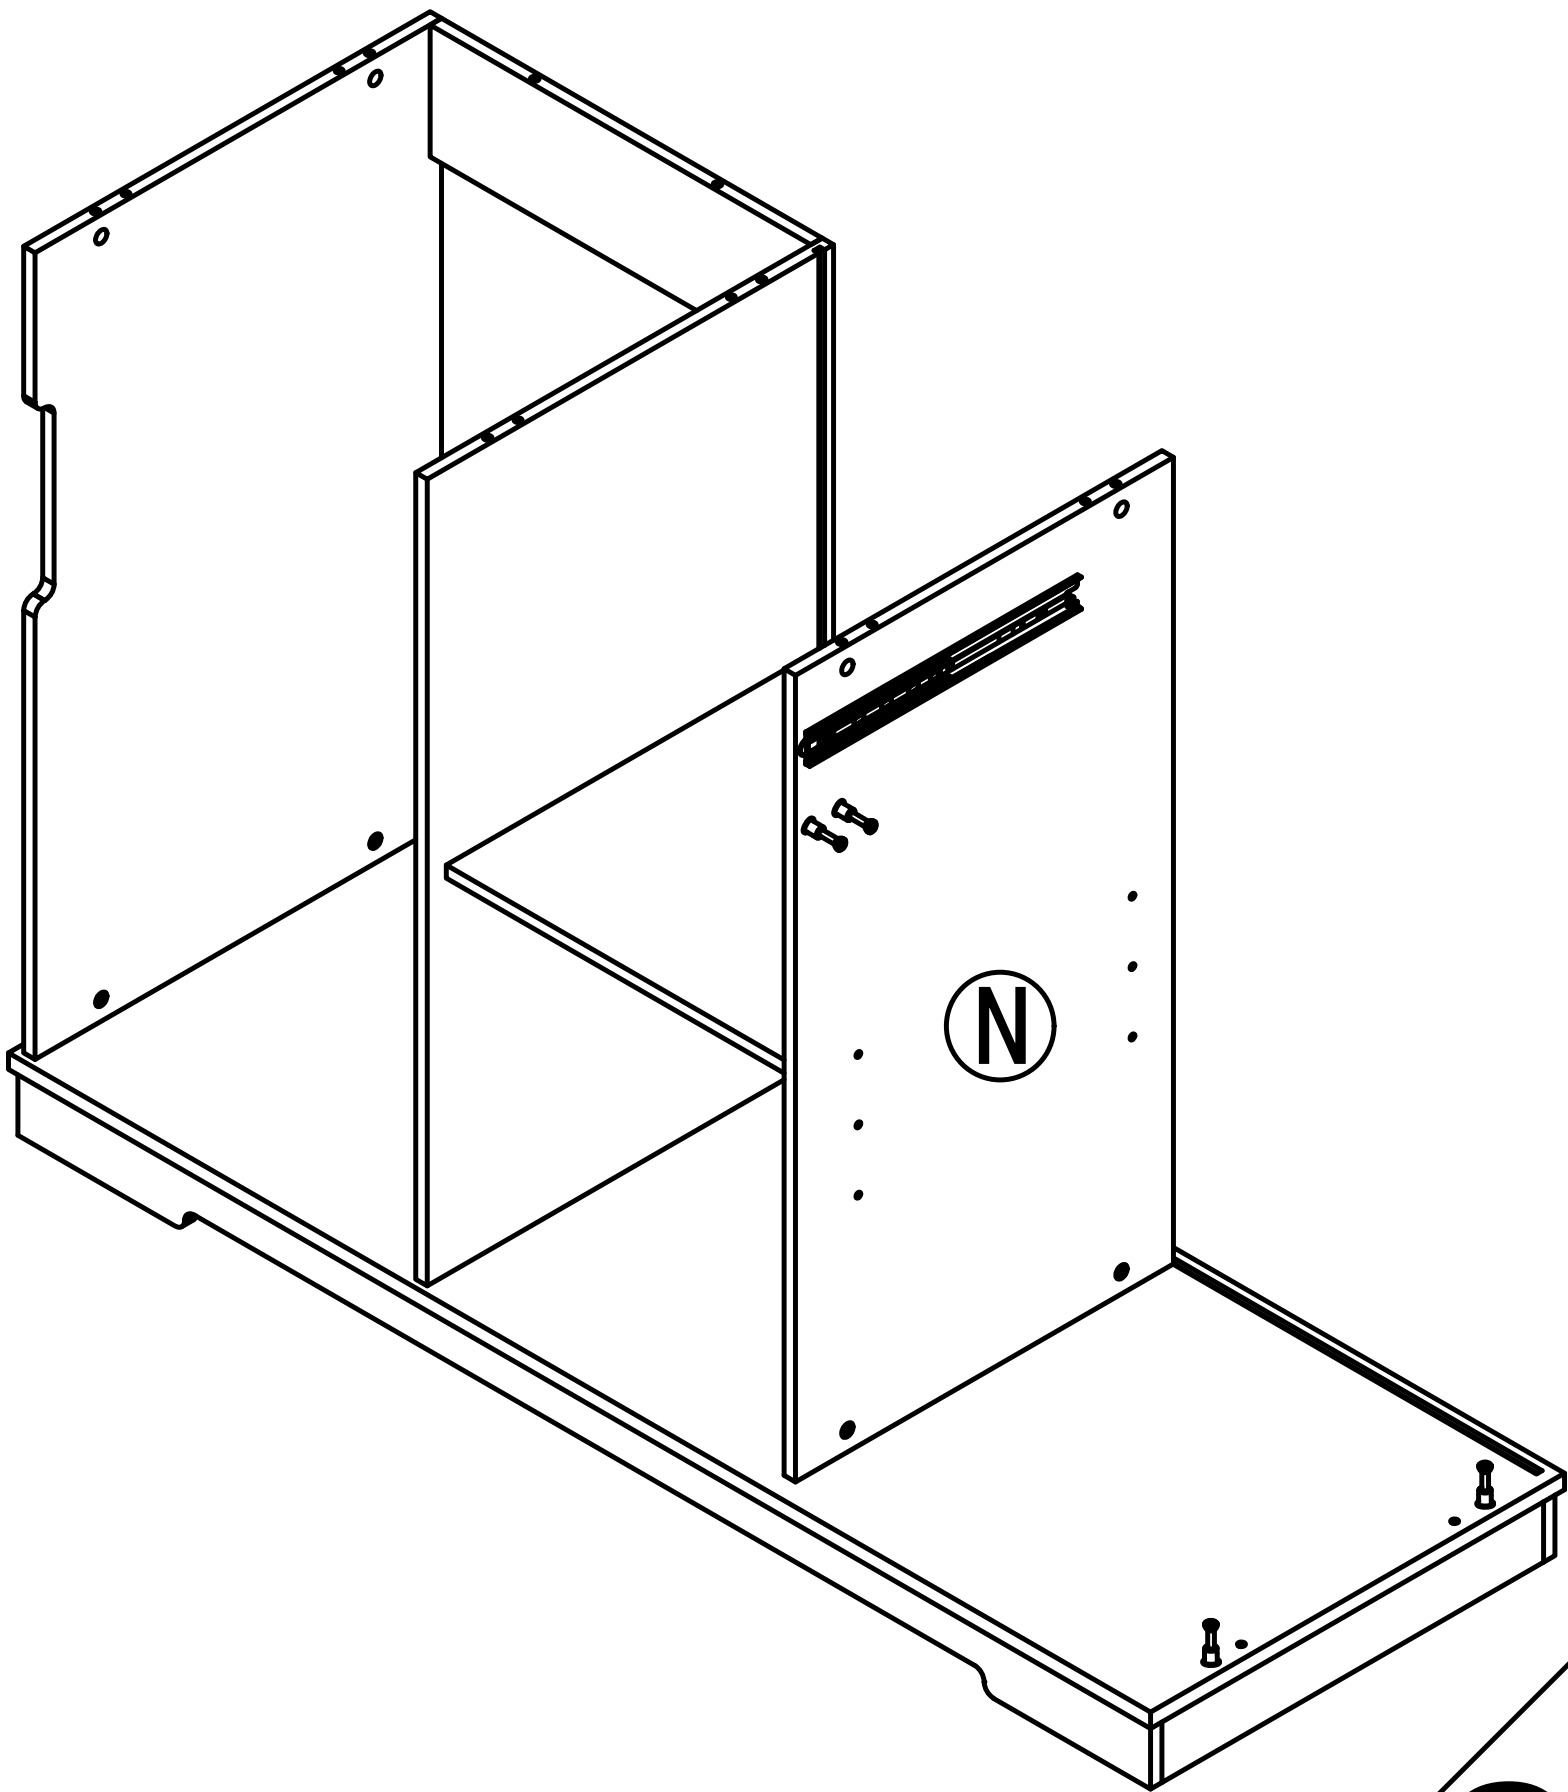


Step 29

4

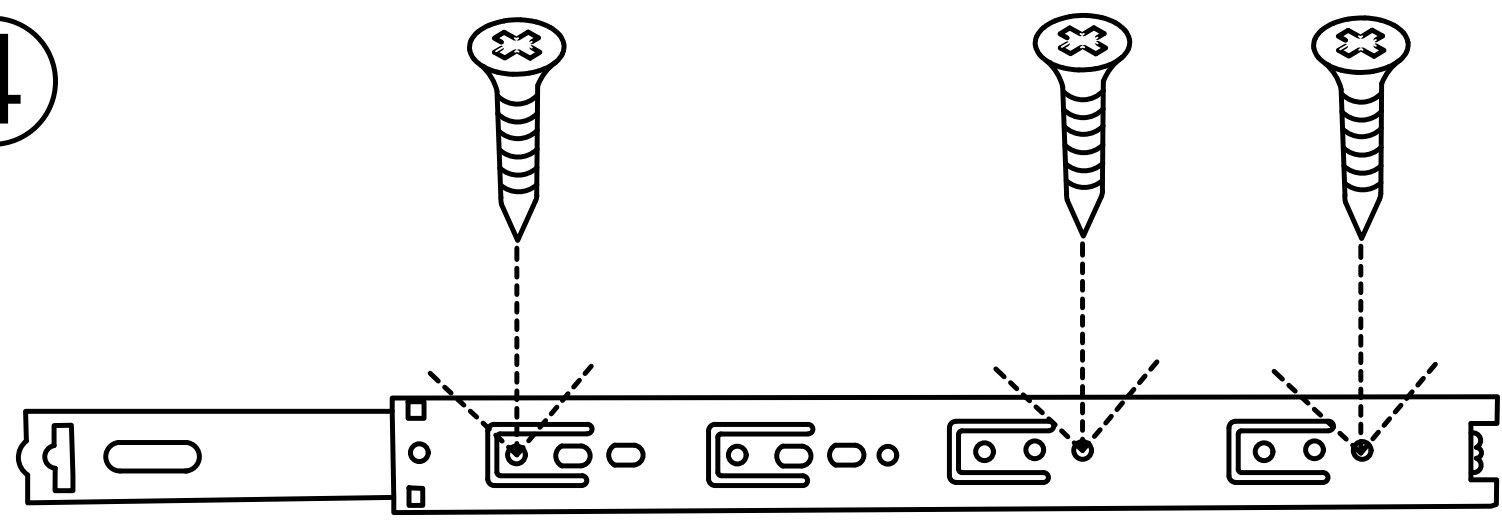


x1  x3

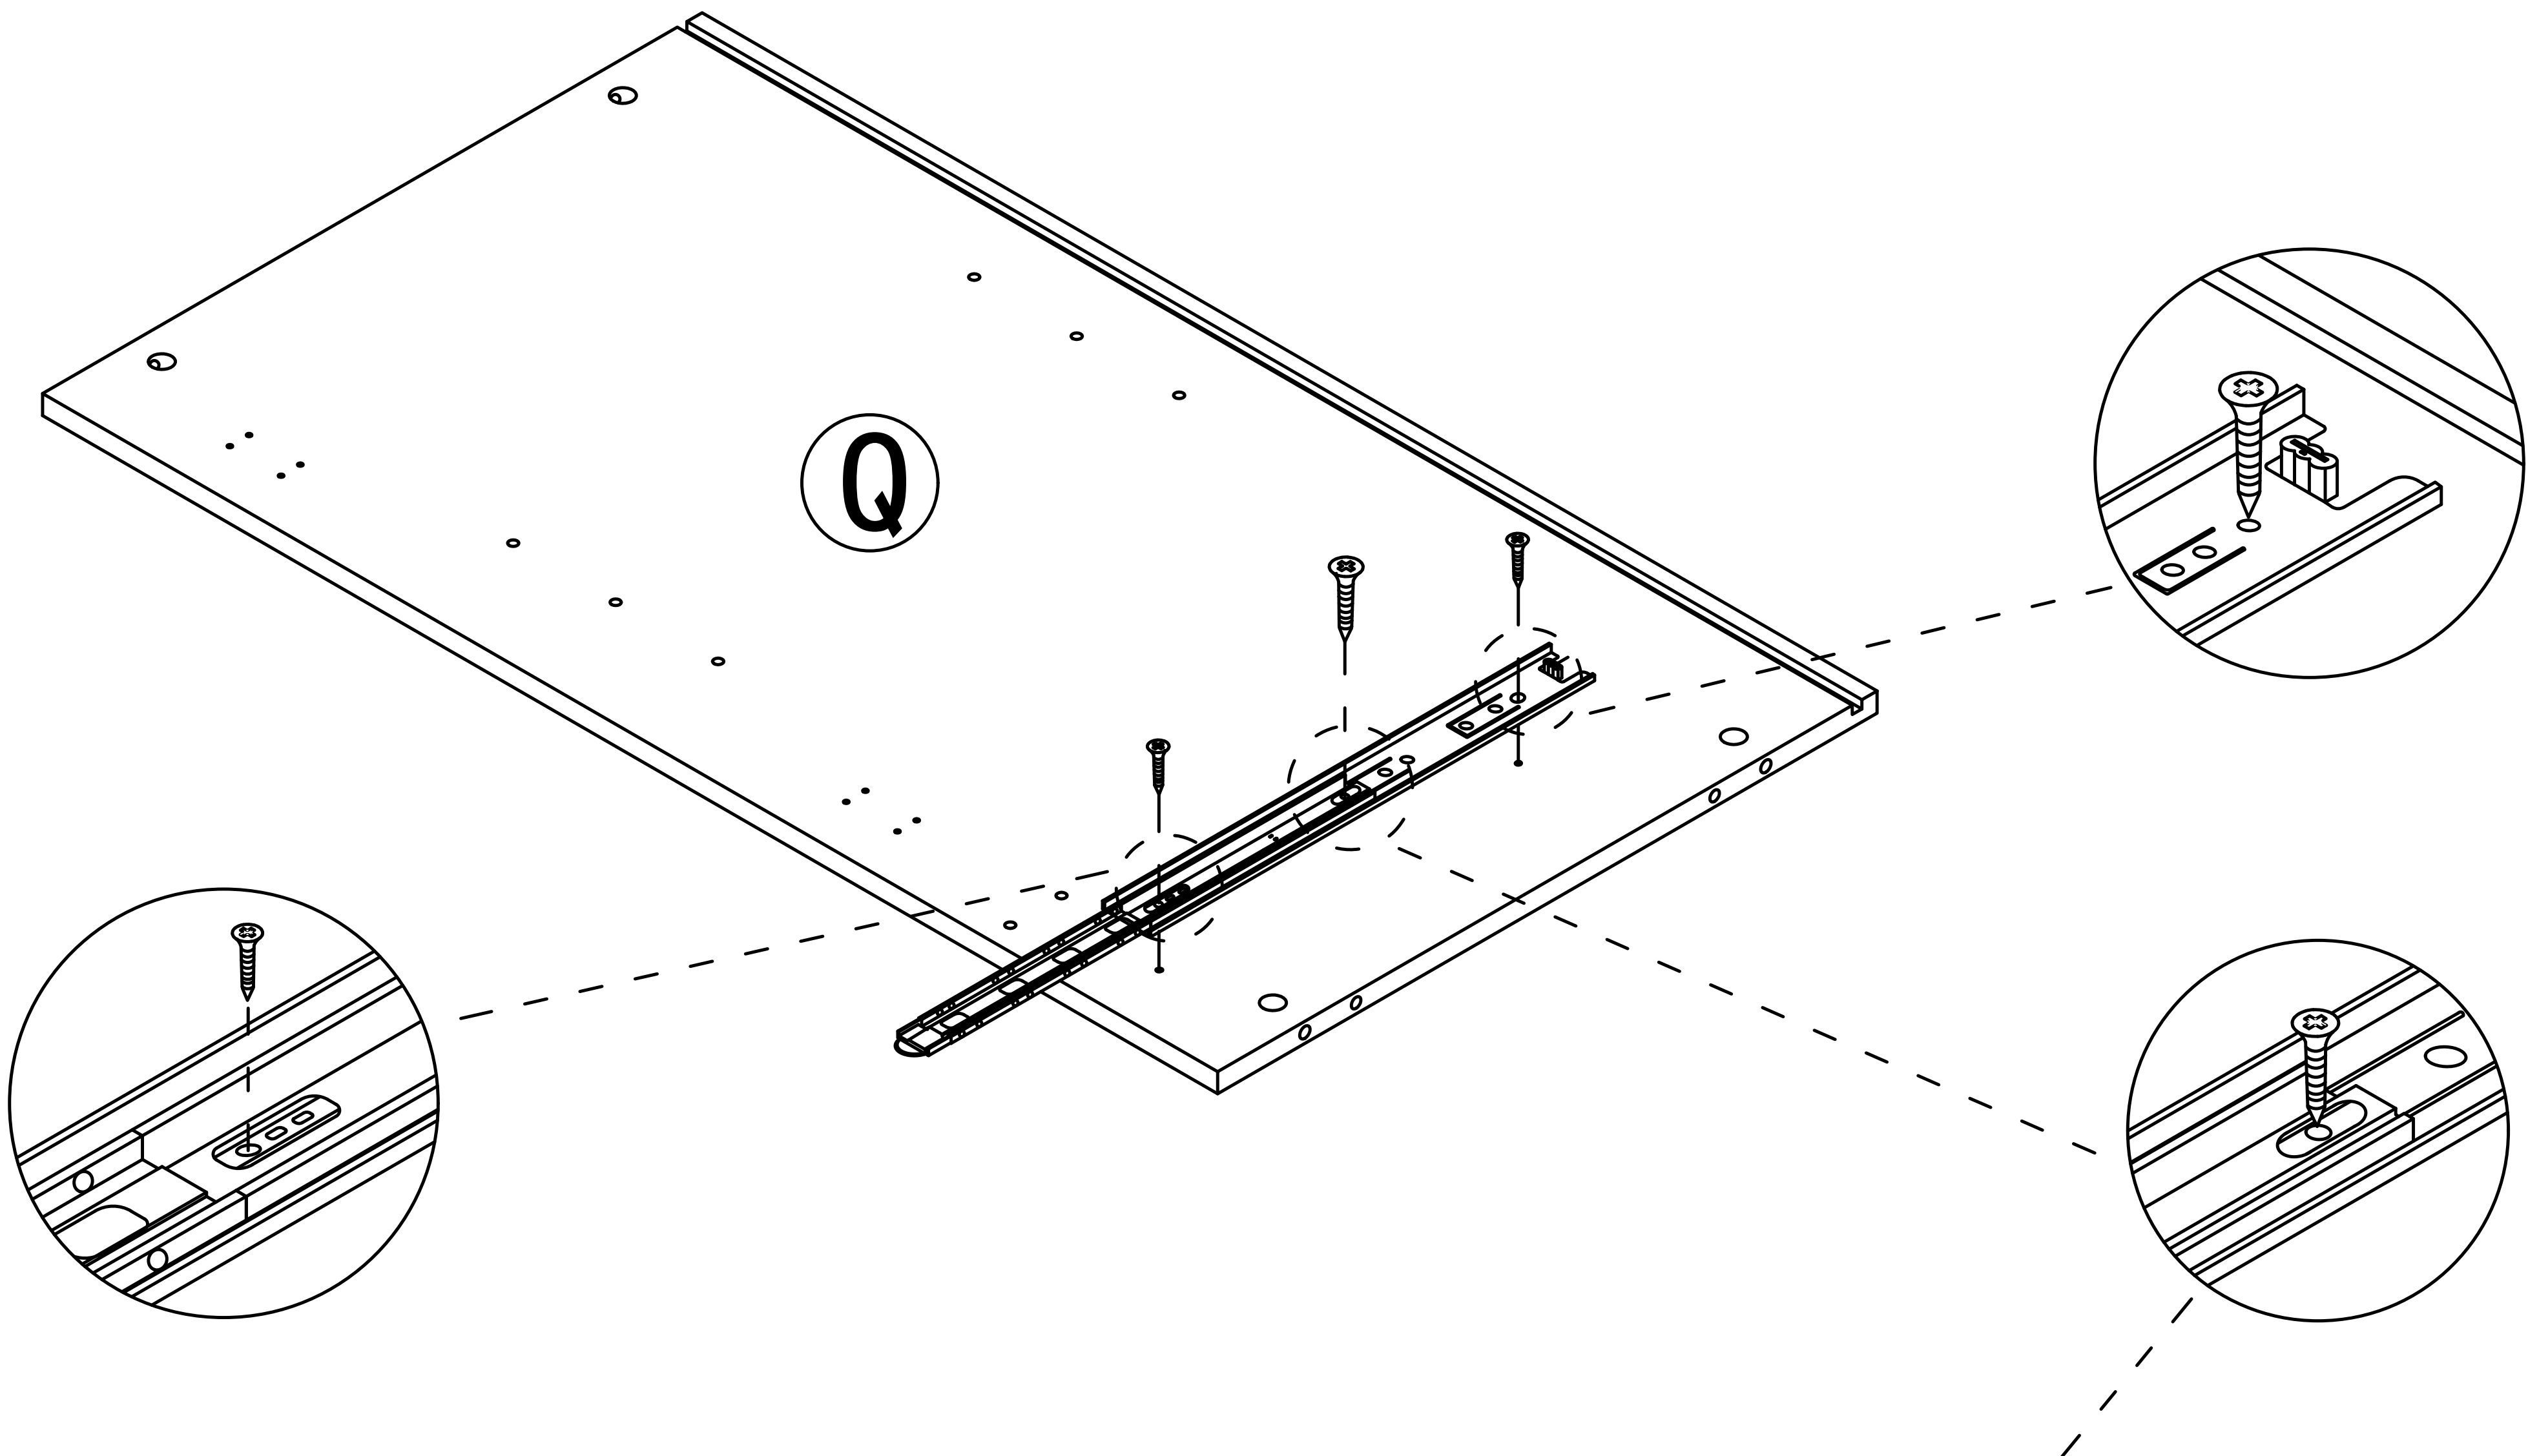


This hole is for strengthening fixed hole customers
can choose to install according to their needs.

Step 30

1

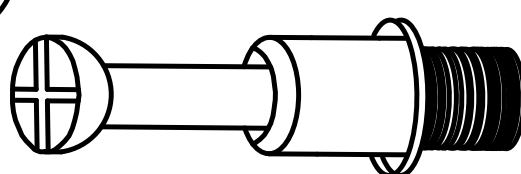

x2

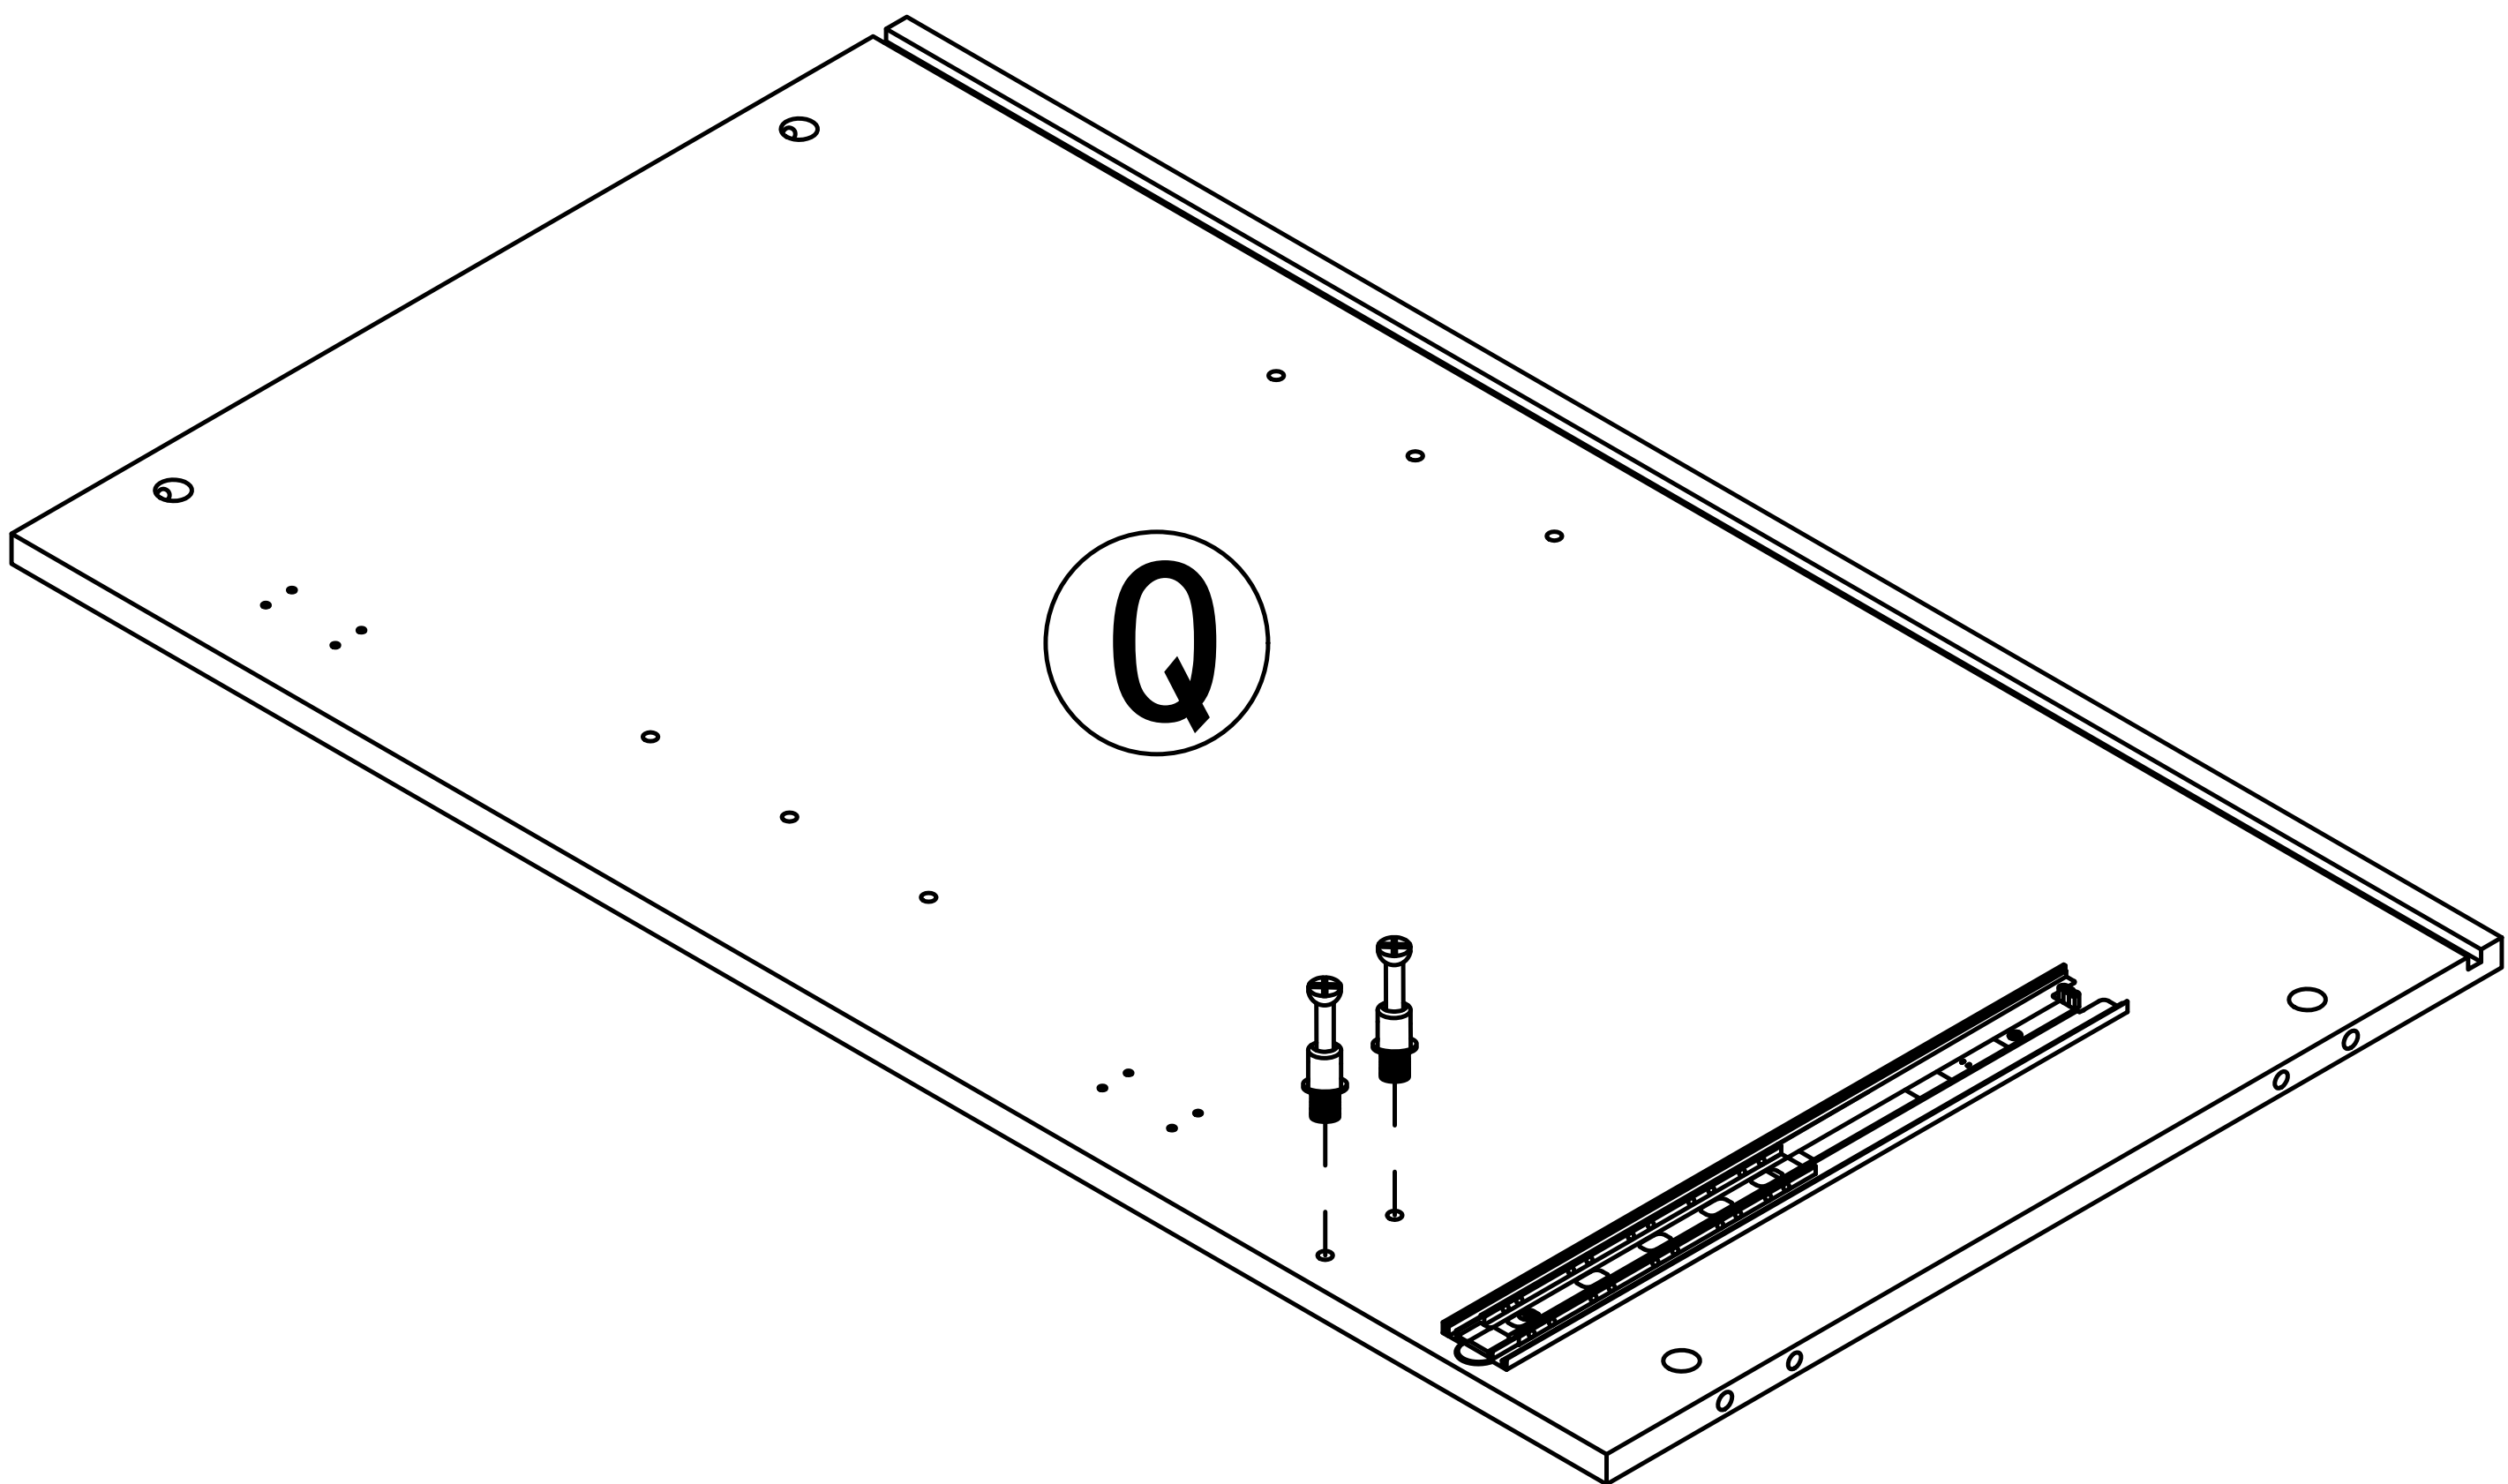


Step 31

3




x2

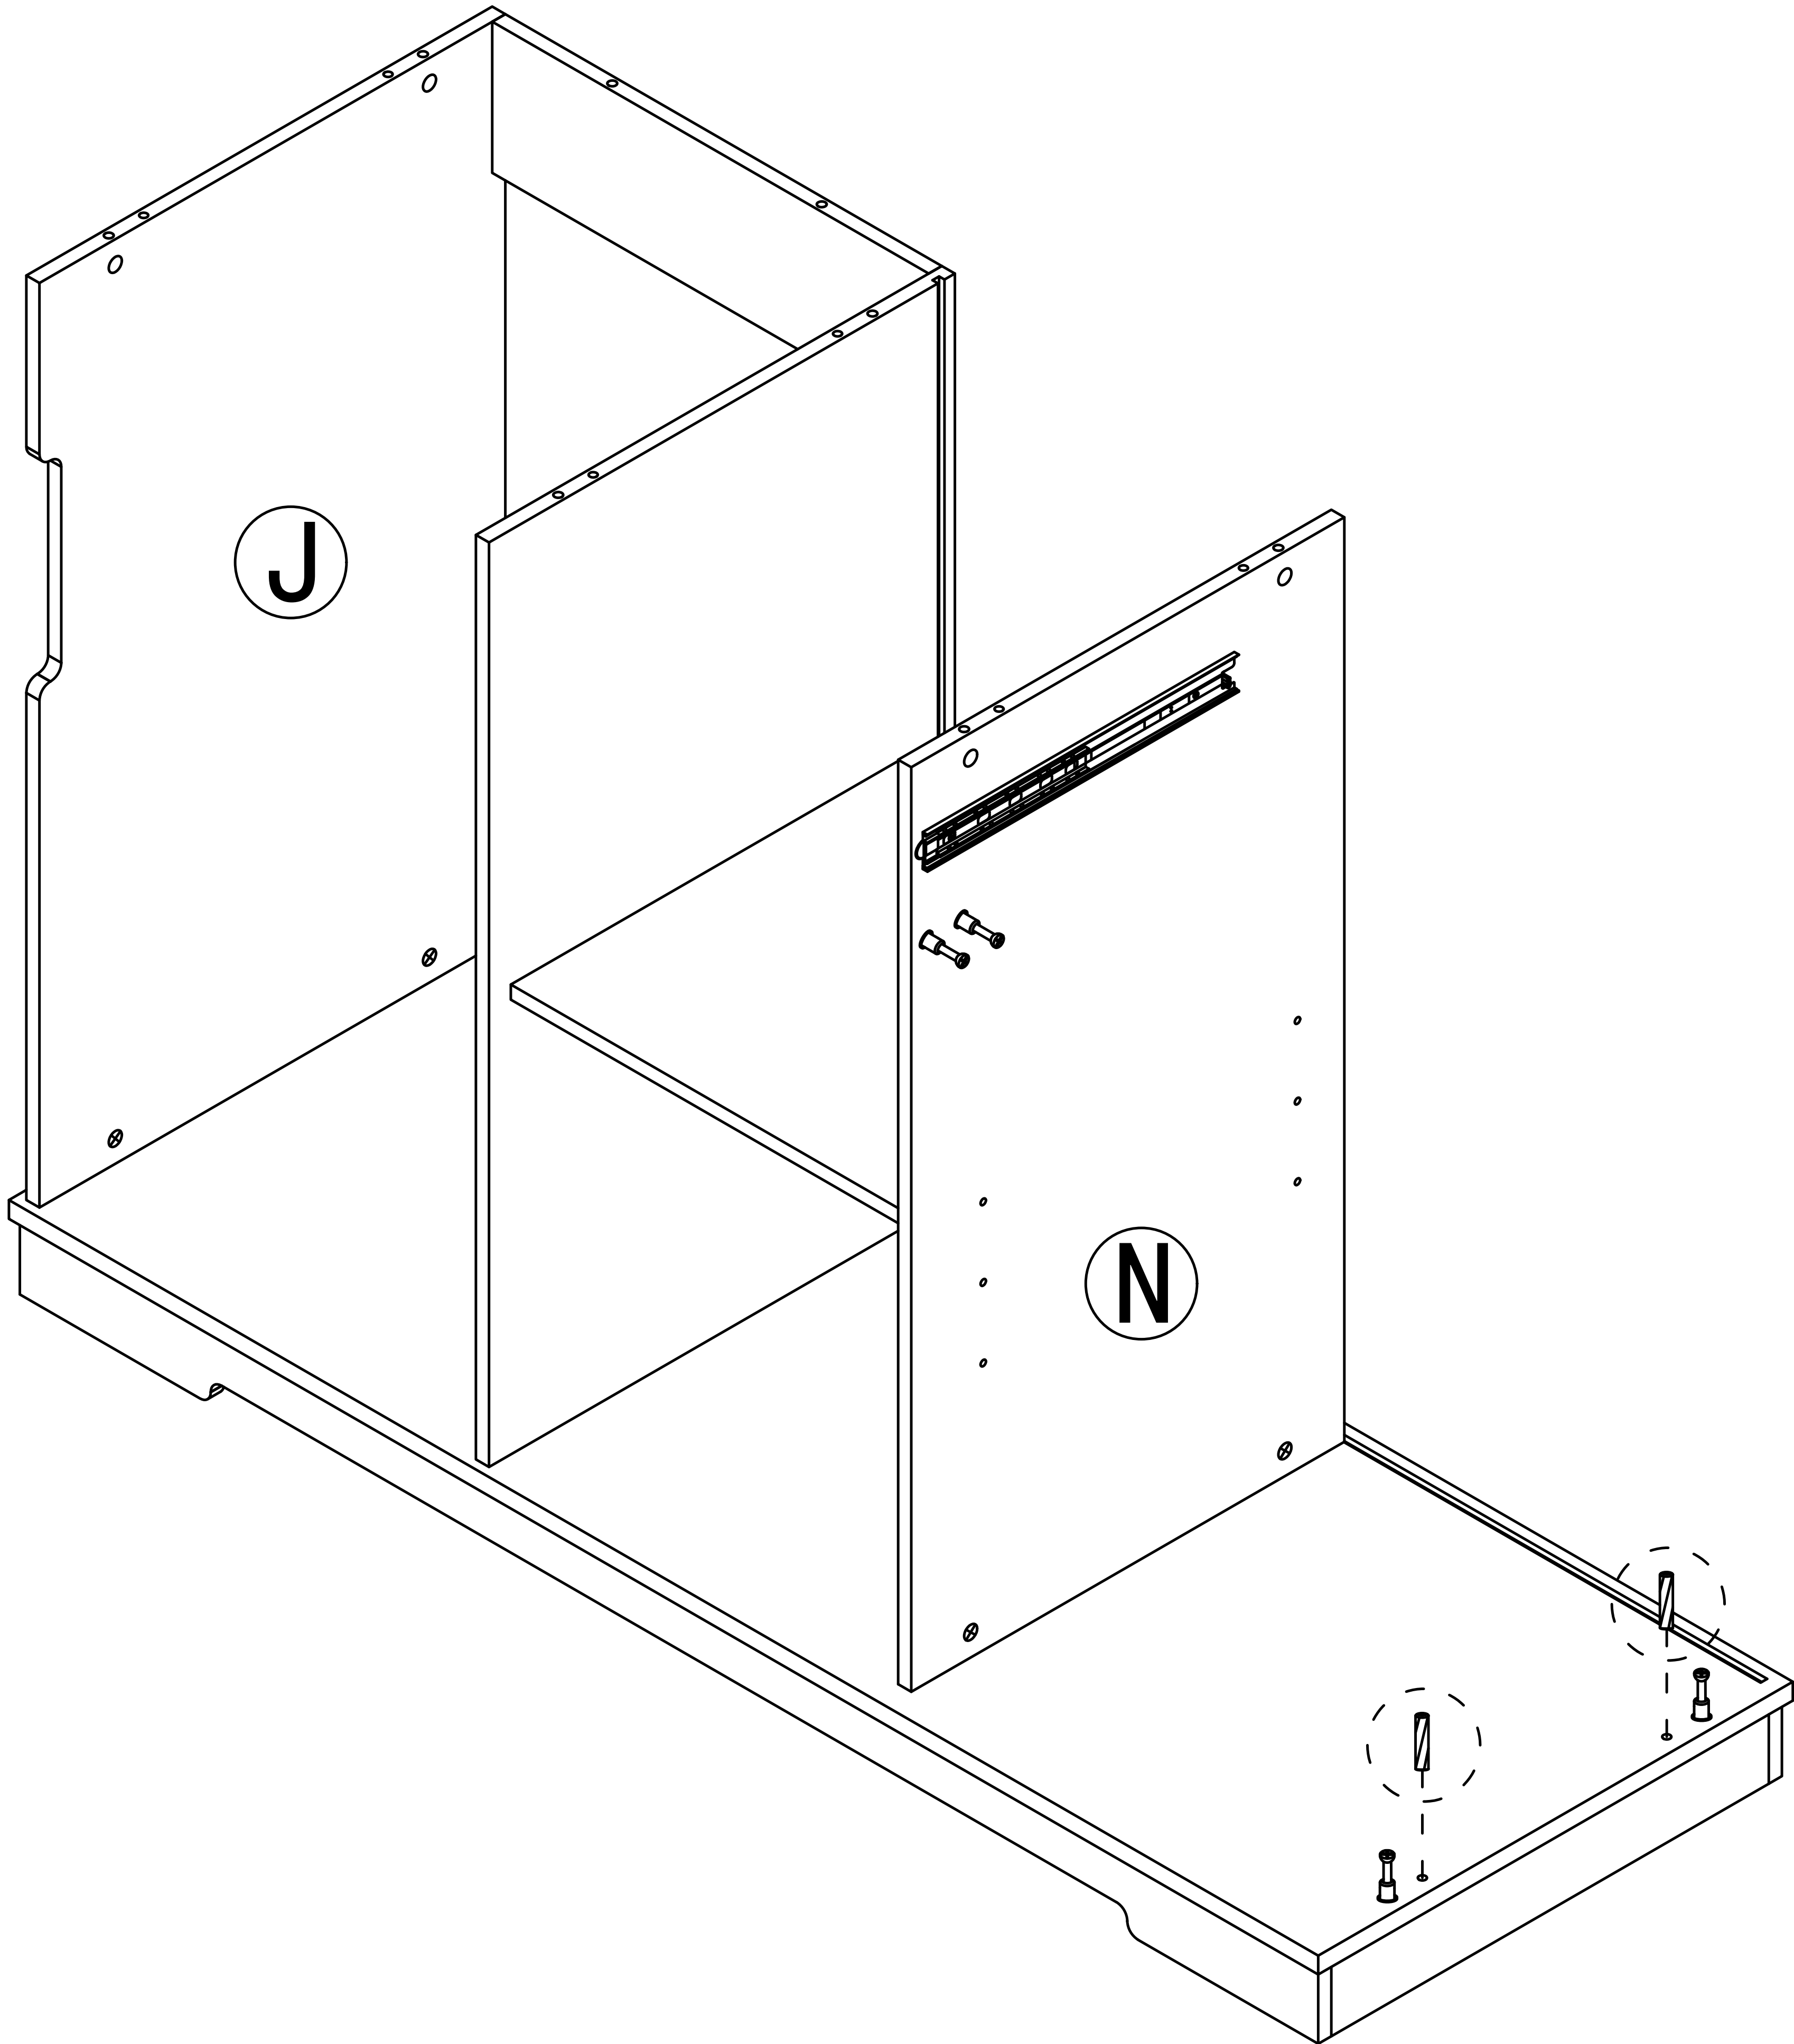


Step 32

2

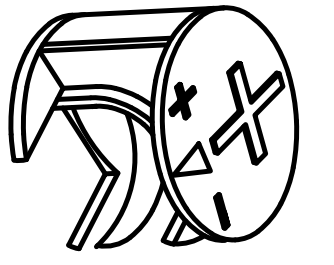


x2

Hold the O-plate with your hands,
or the O-plate will break if it falls.

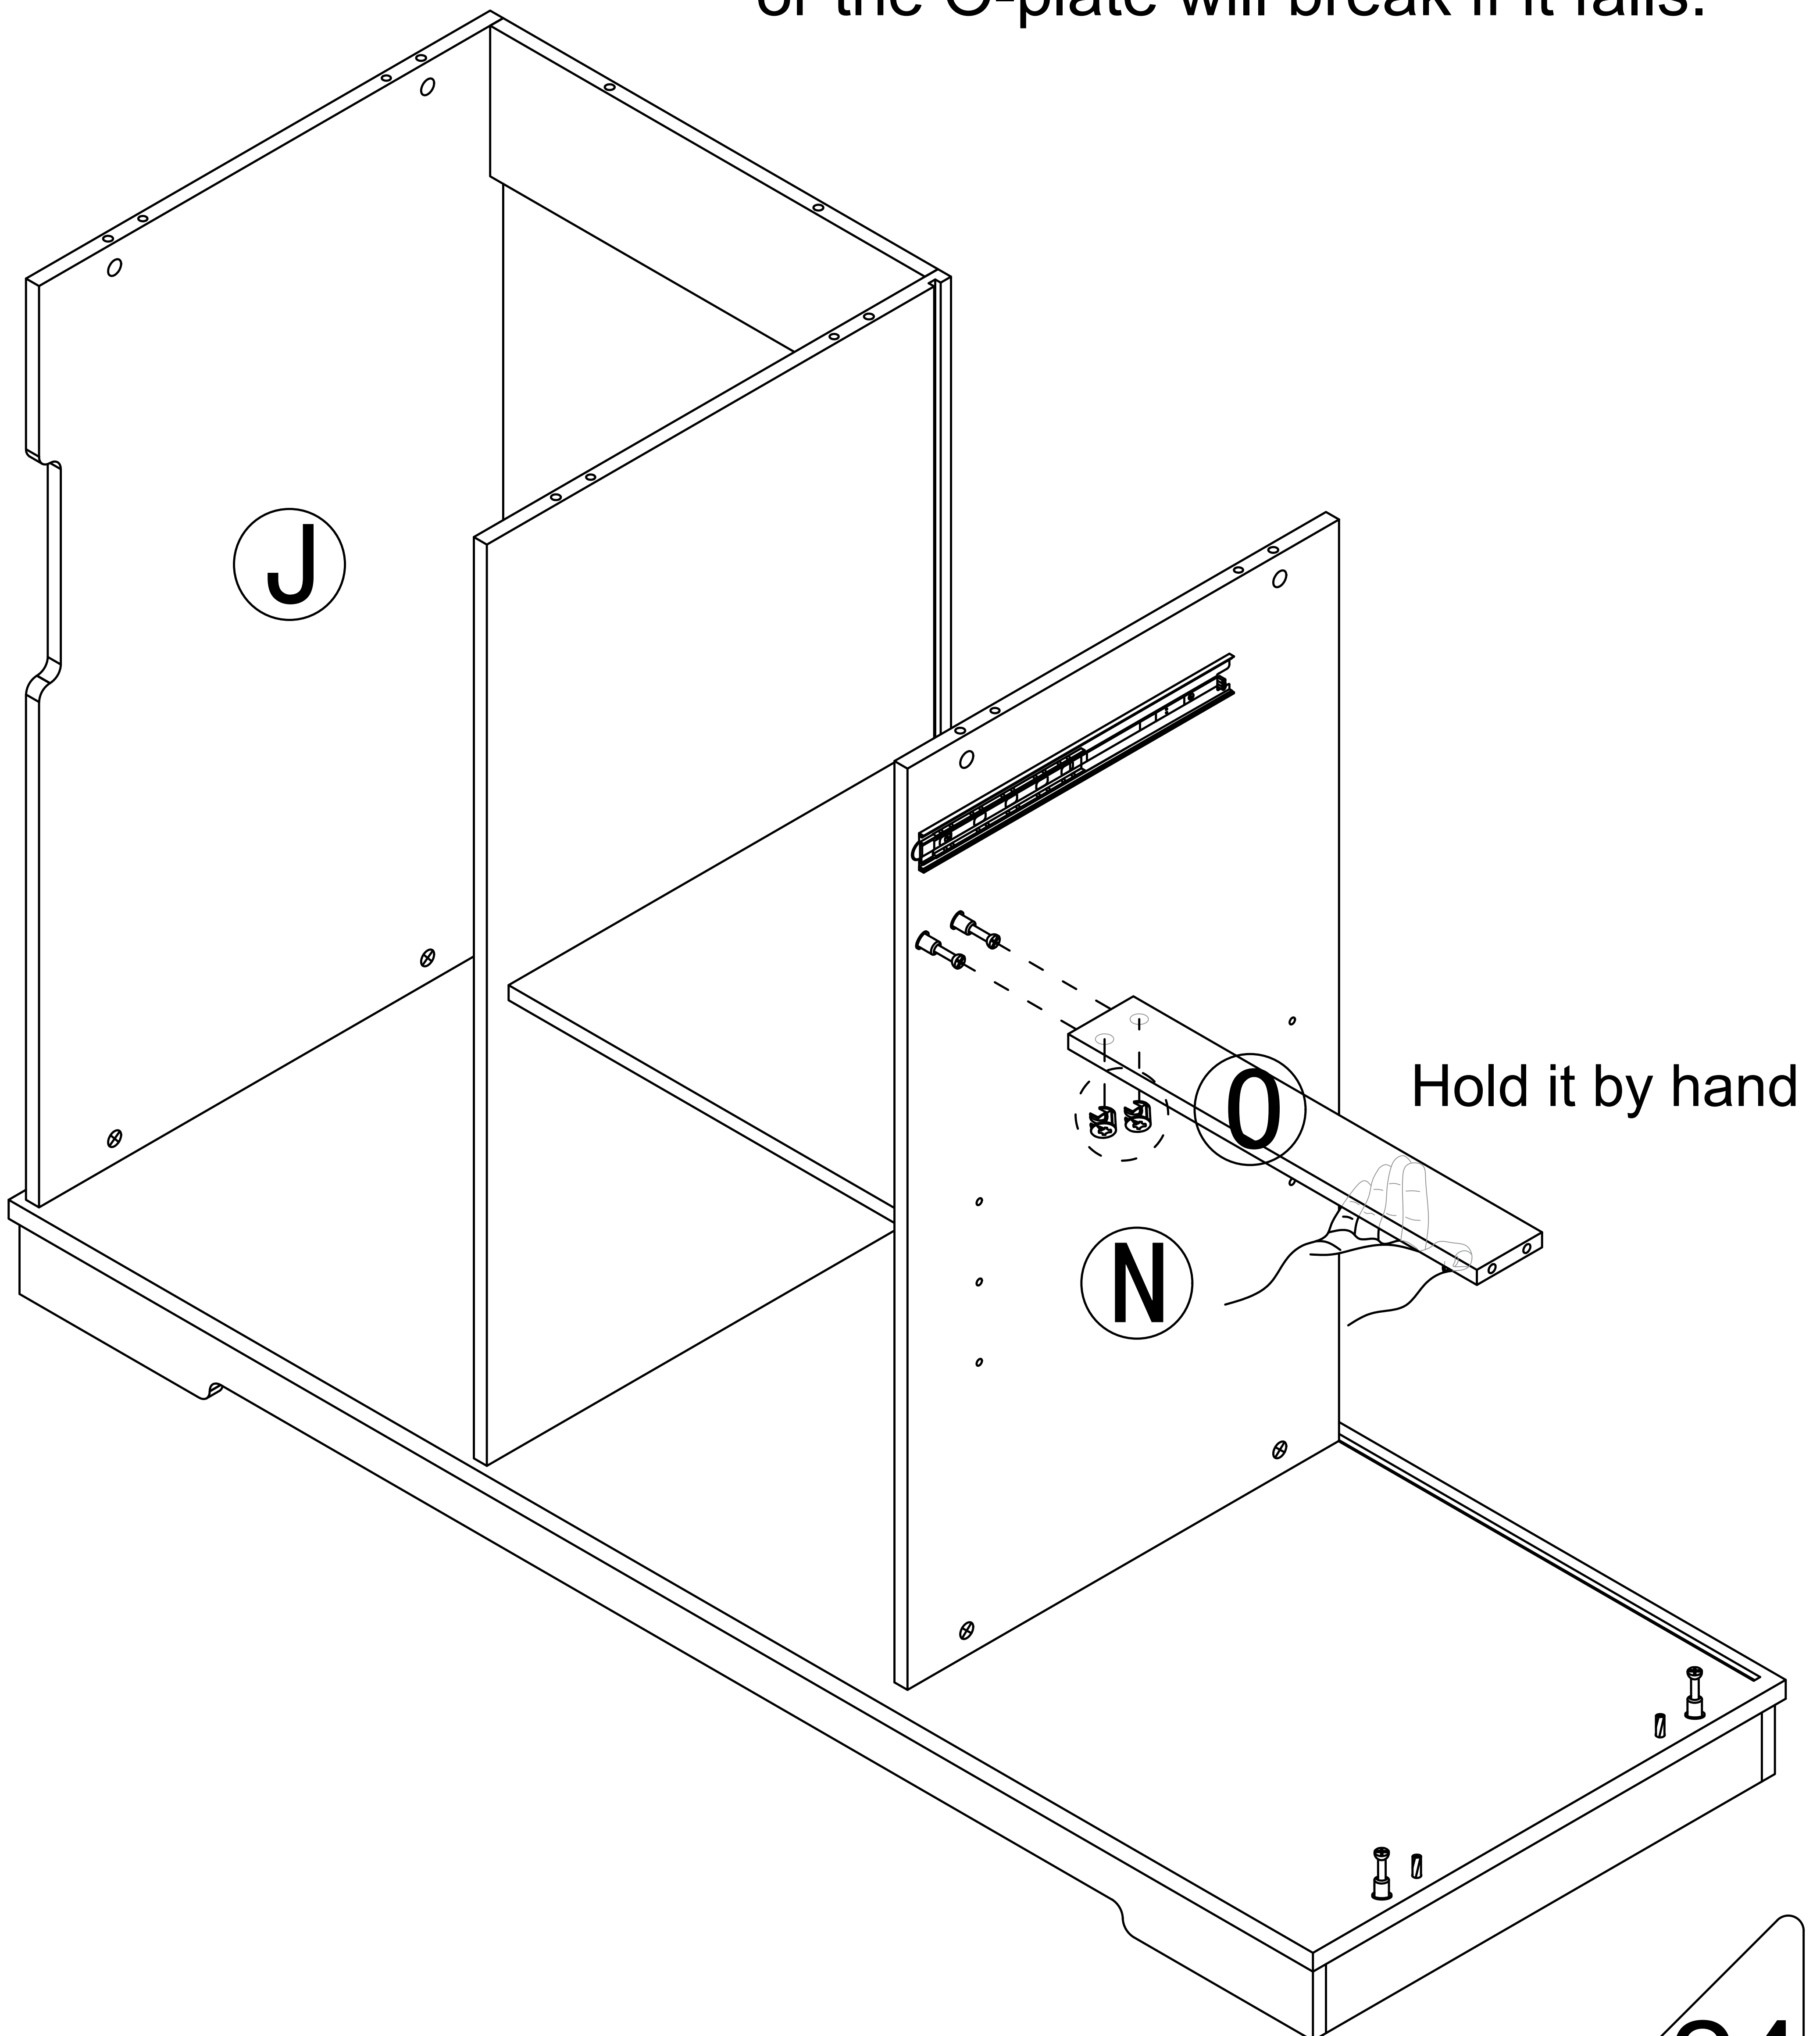


Step 33

2

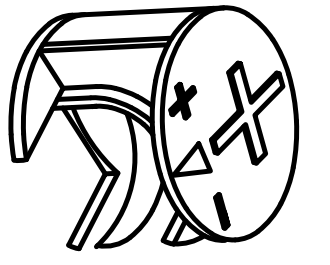

x4

Hold the O-plate with your hands,
or the O-plate will break if it falls.

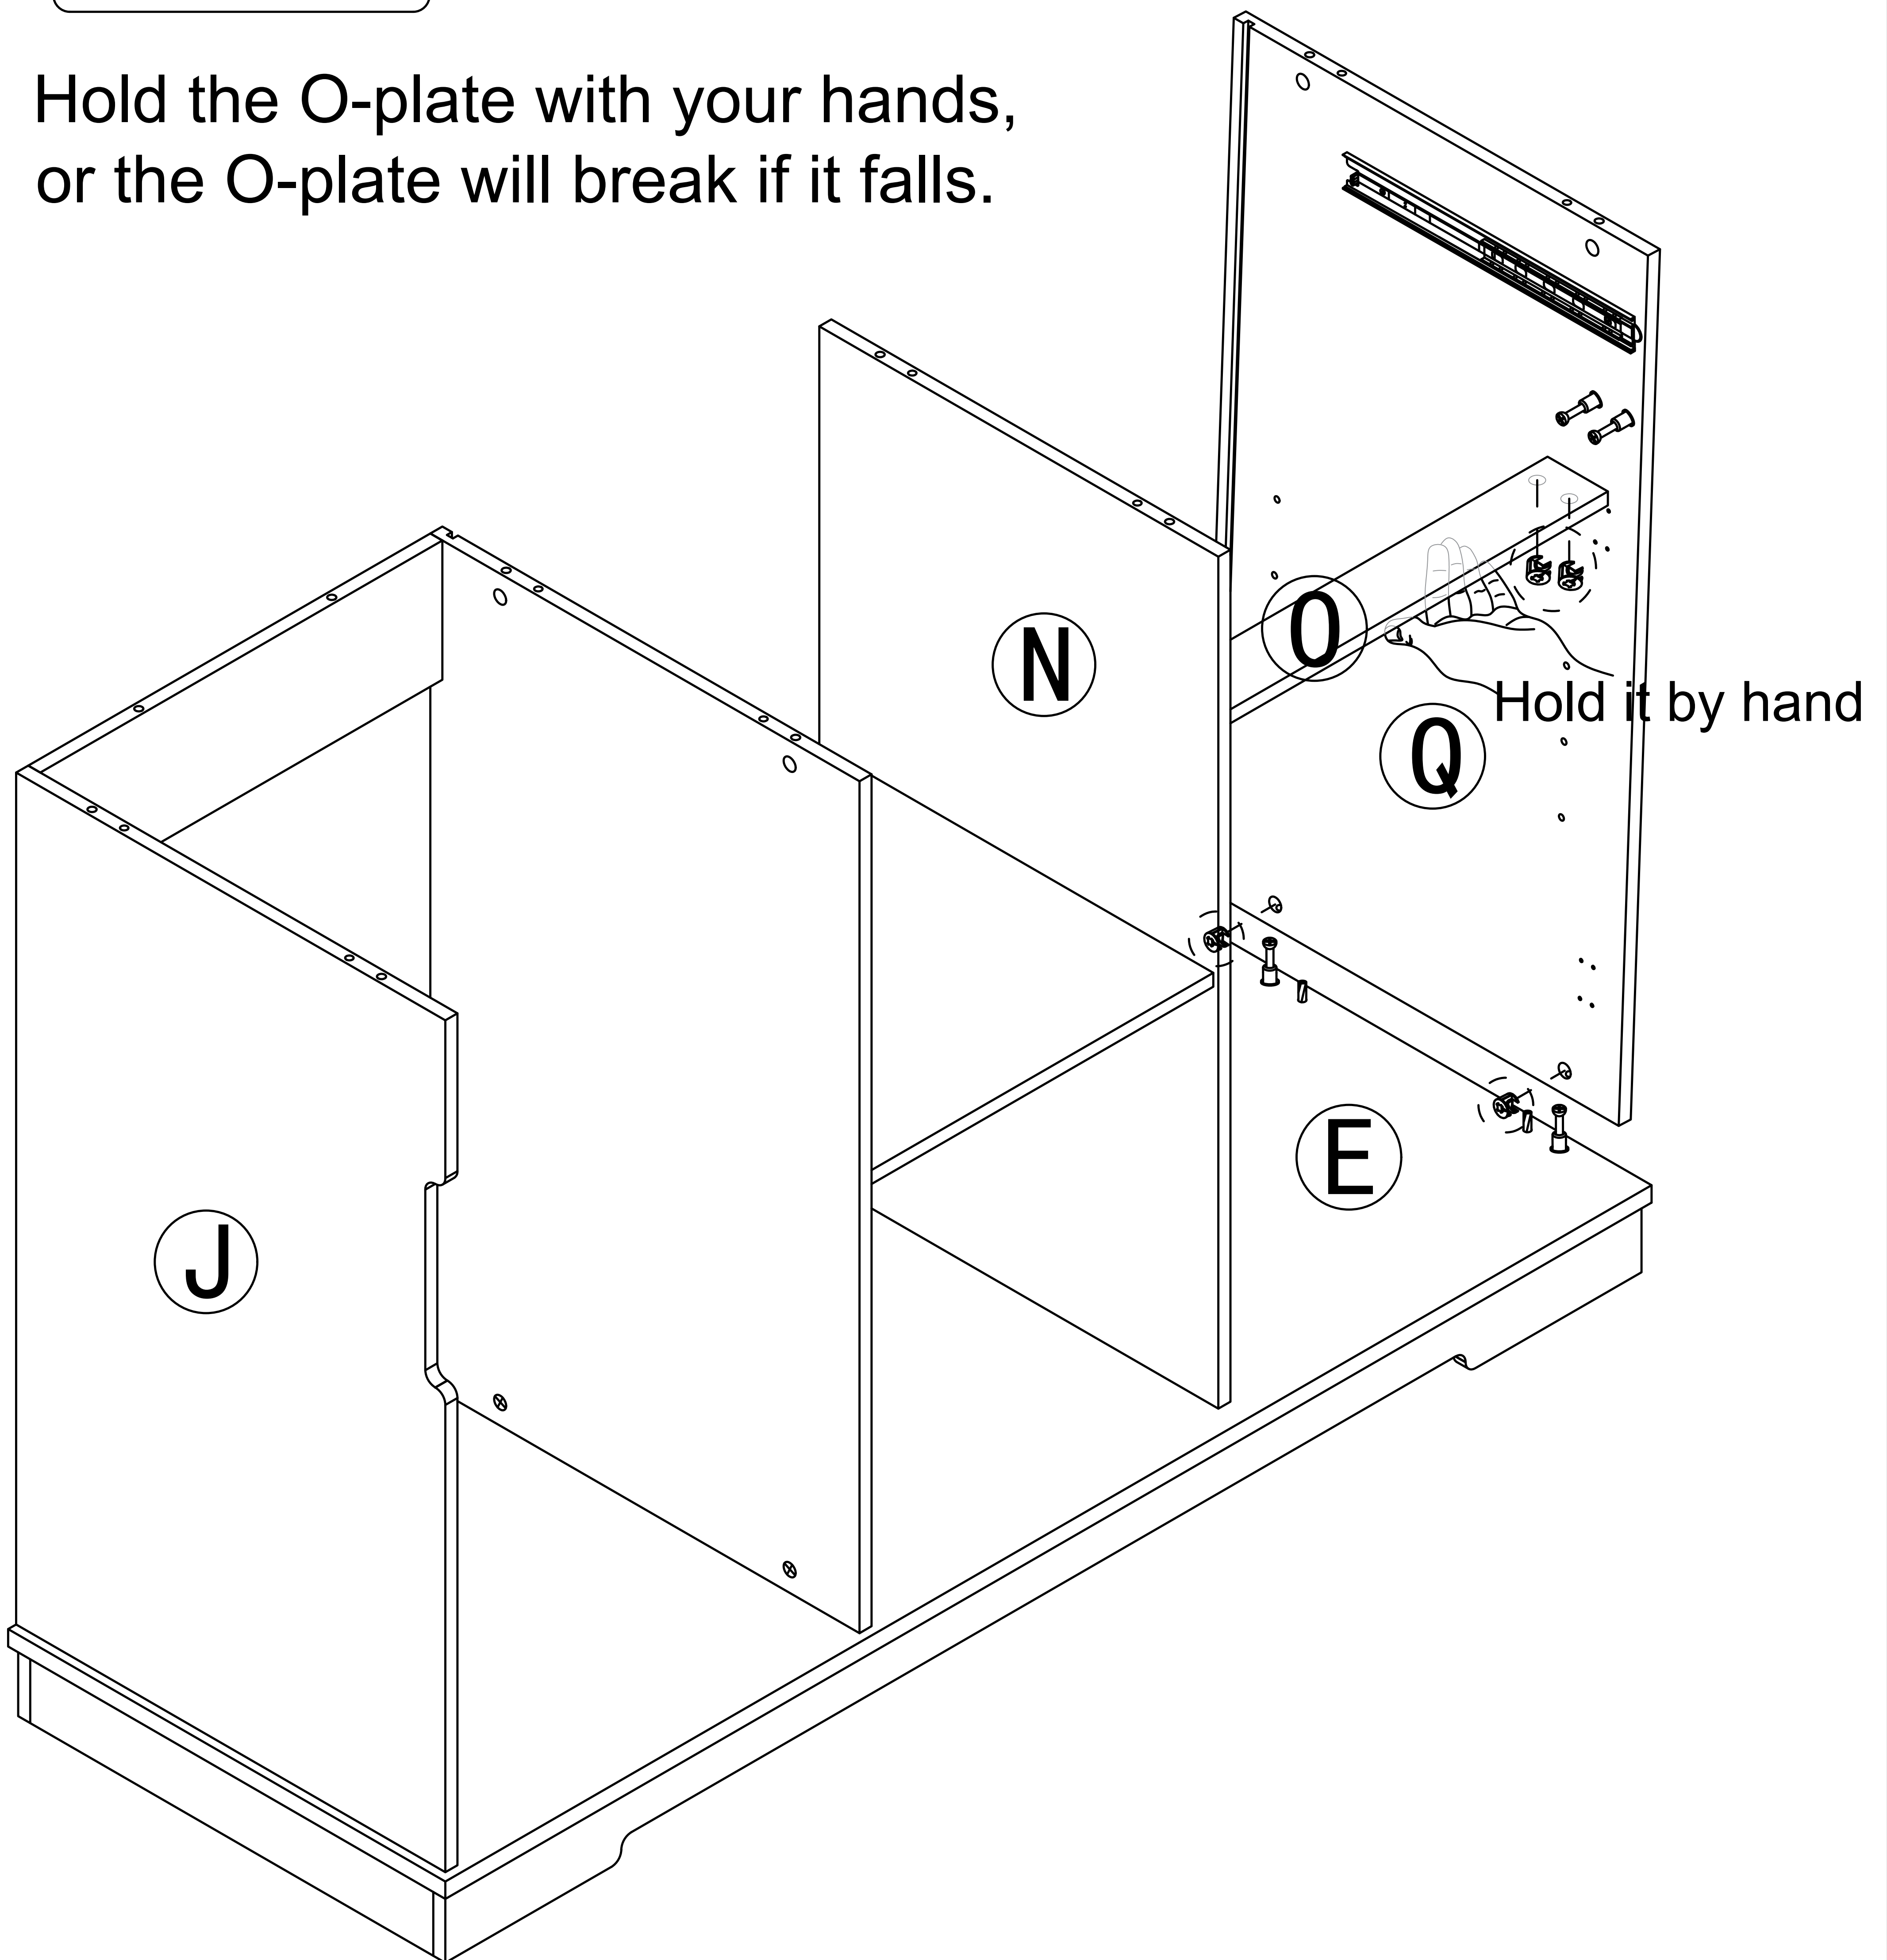

Insert at an angle, align with the
holes, and tighten the connector.

Note: Lock the nut only after the connection between
Q board and E board and O board is completed.


Step 34

Place the "R" board, Backboard card strip, and "R" board in order


- 3





x8
- 7

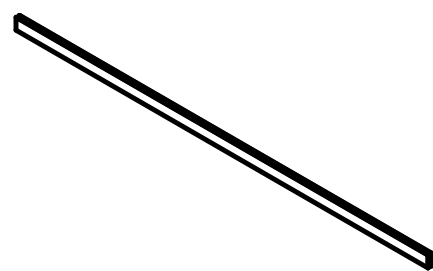


x1

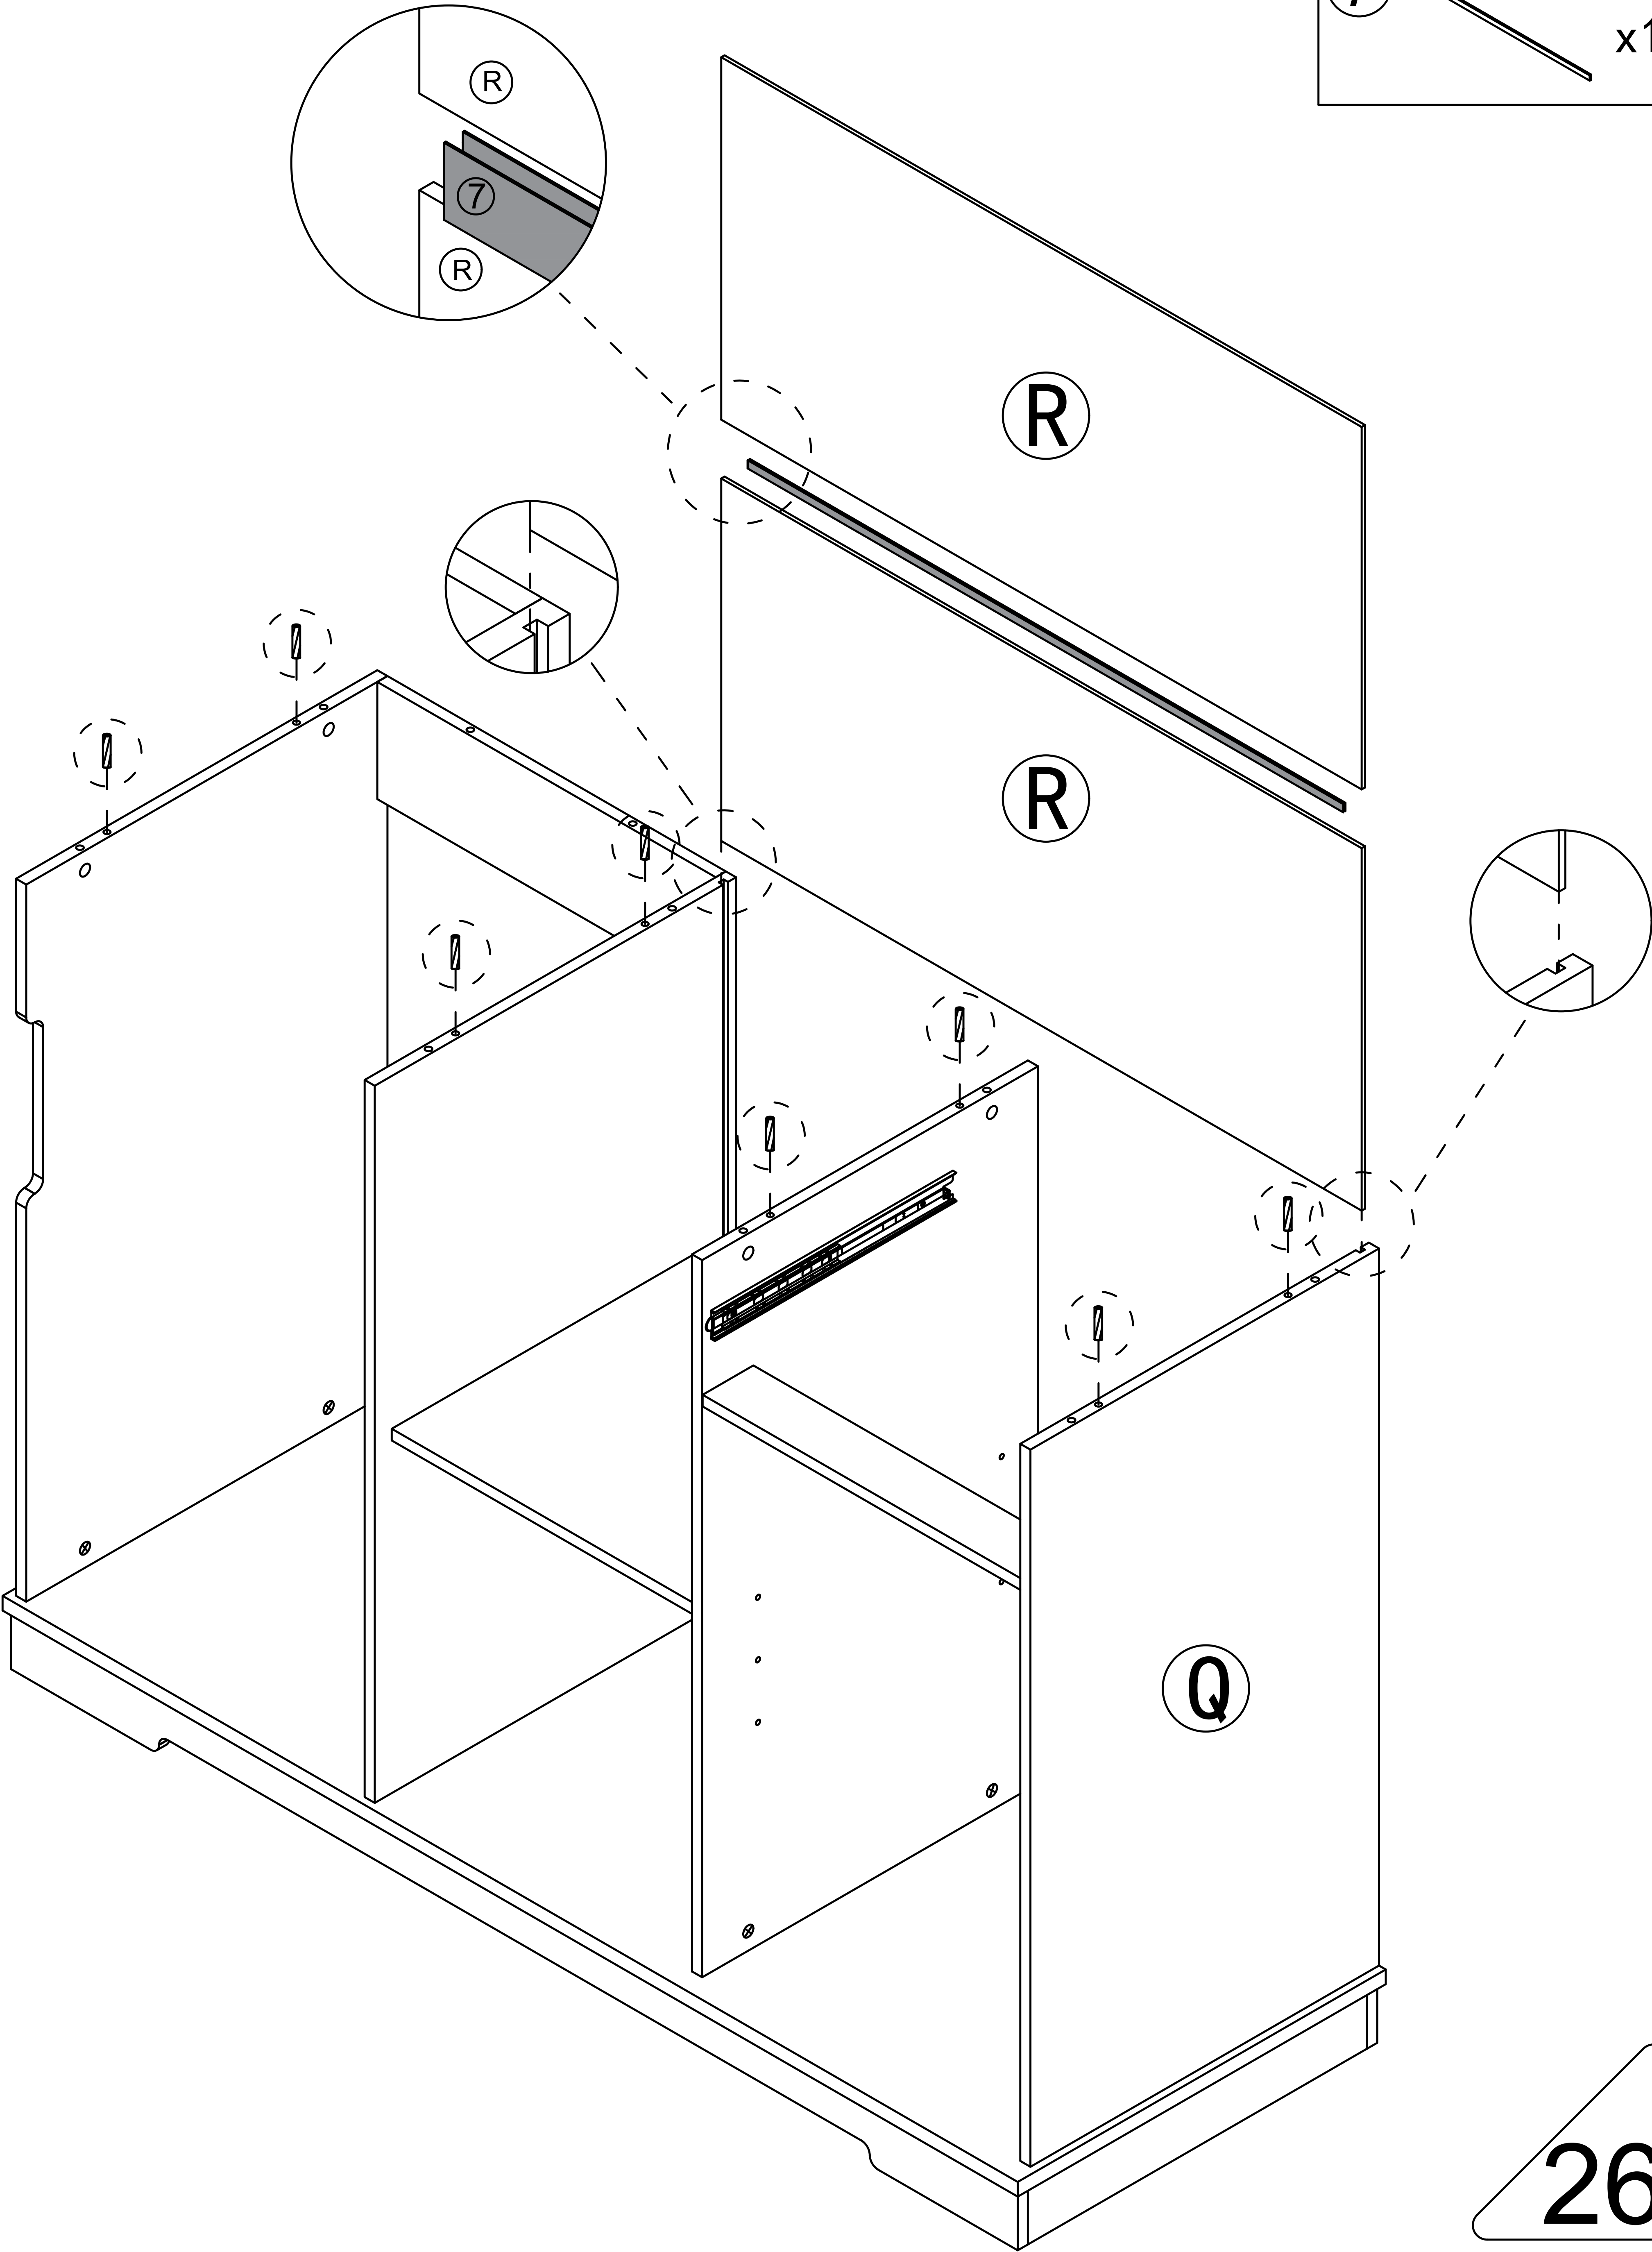



Step 35

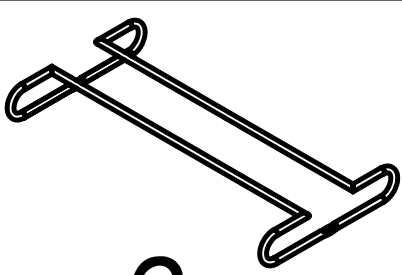- 8
- x2
- 
- x4
- 

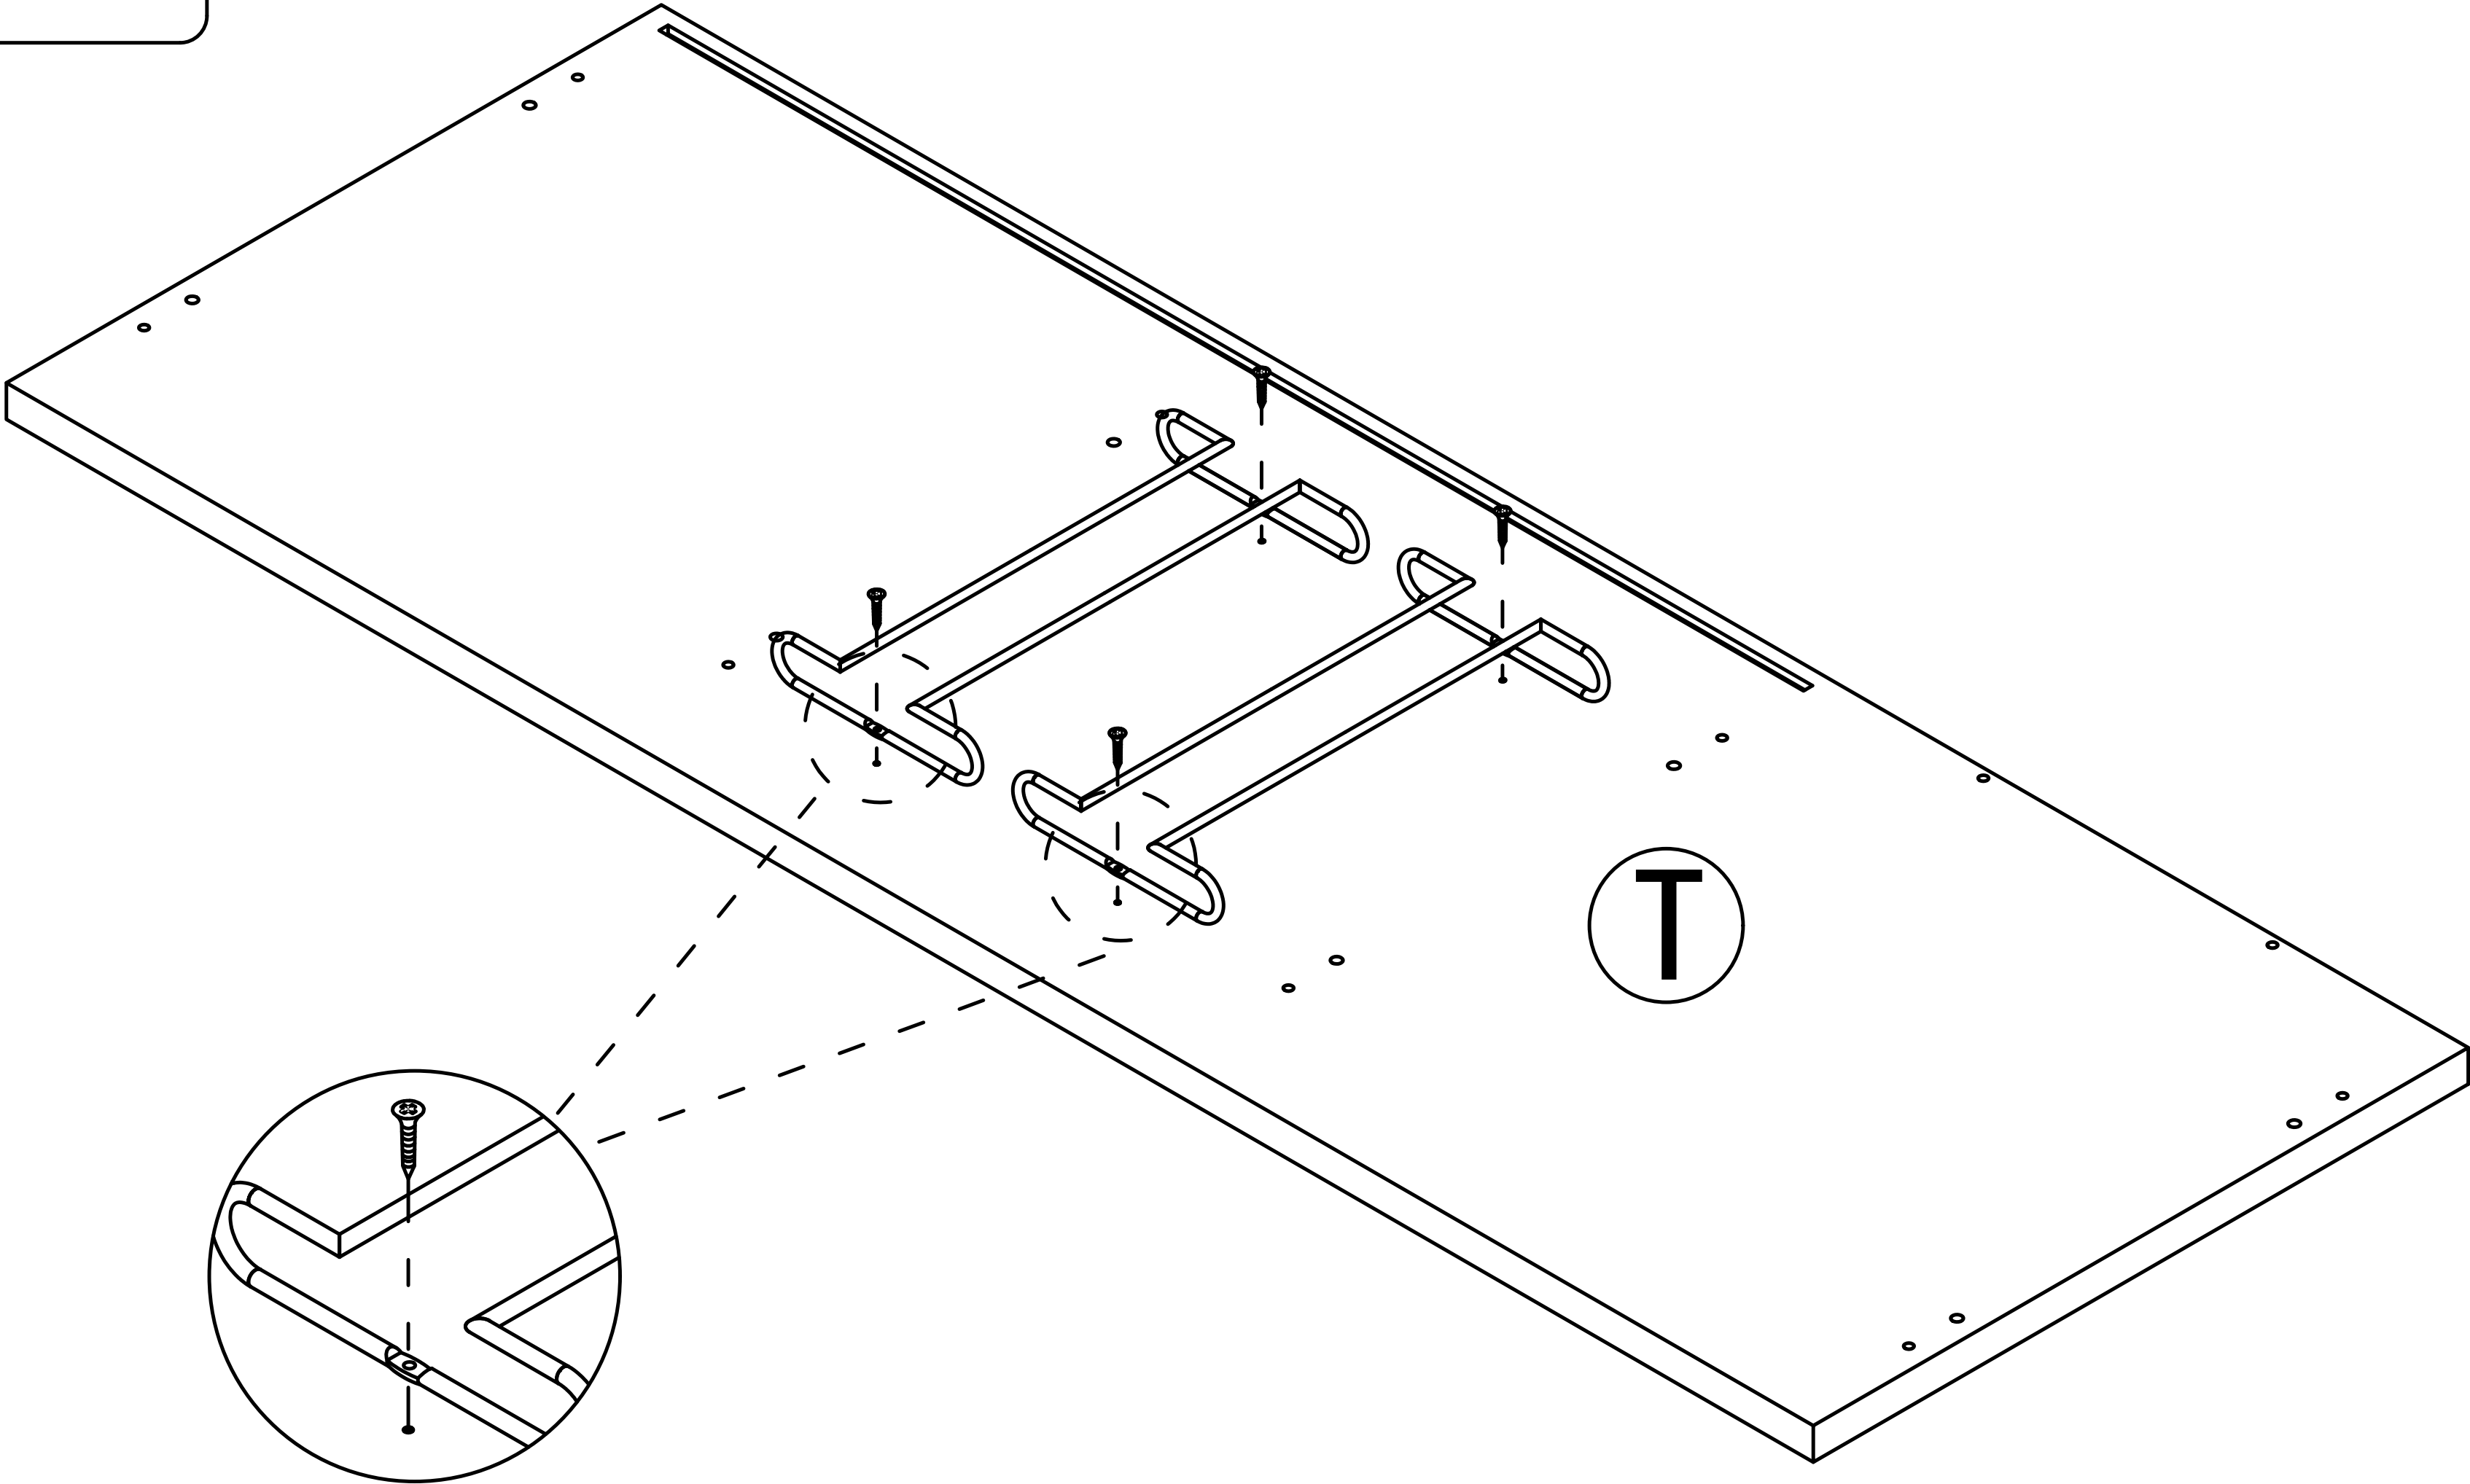


Step 36

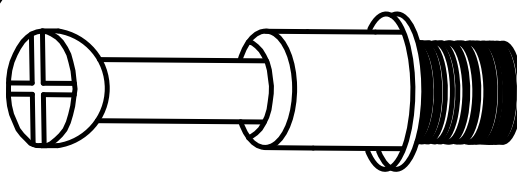- 1
- x10
- 

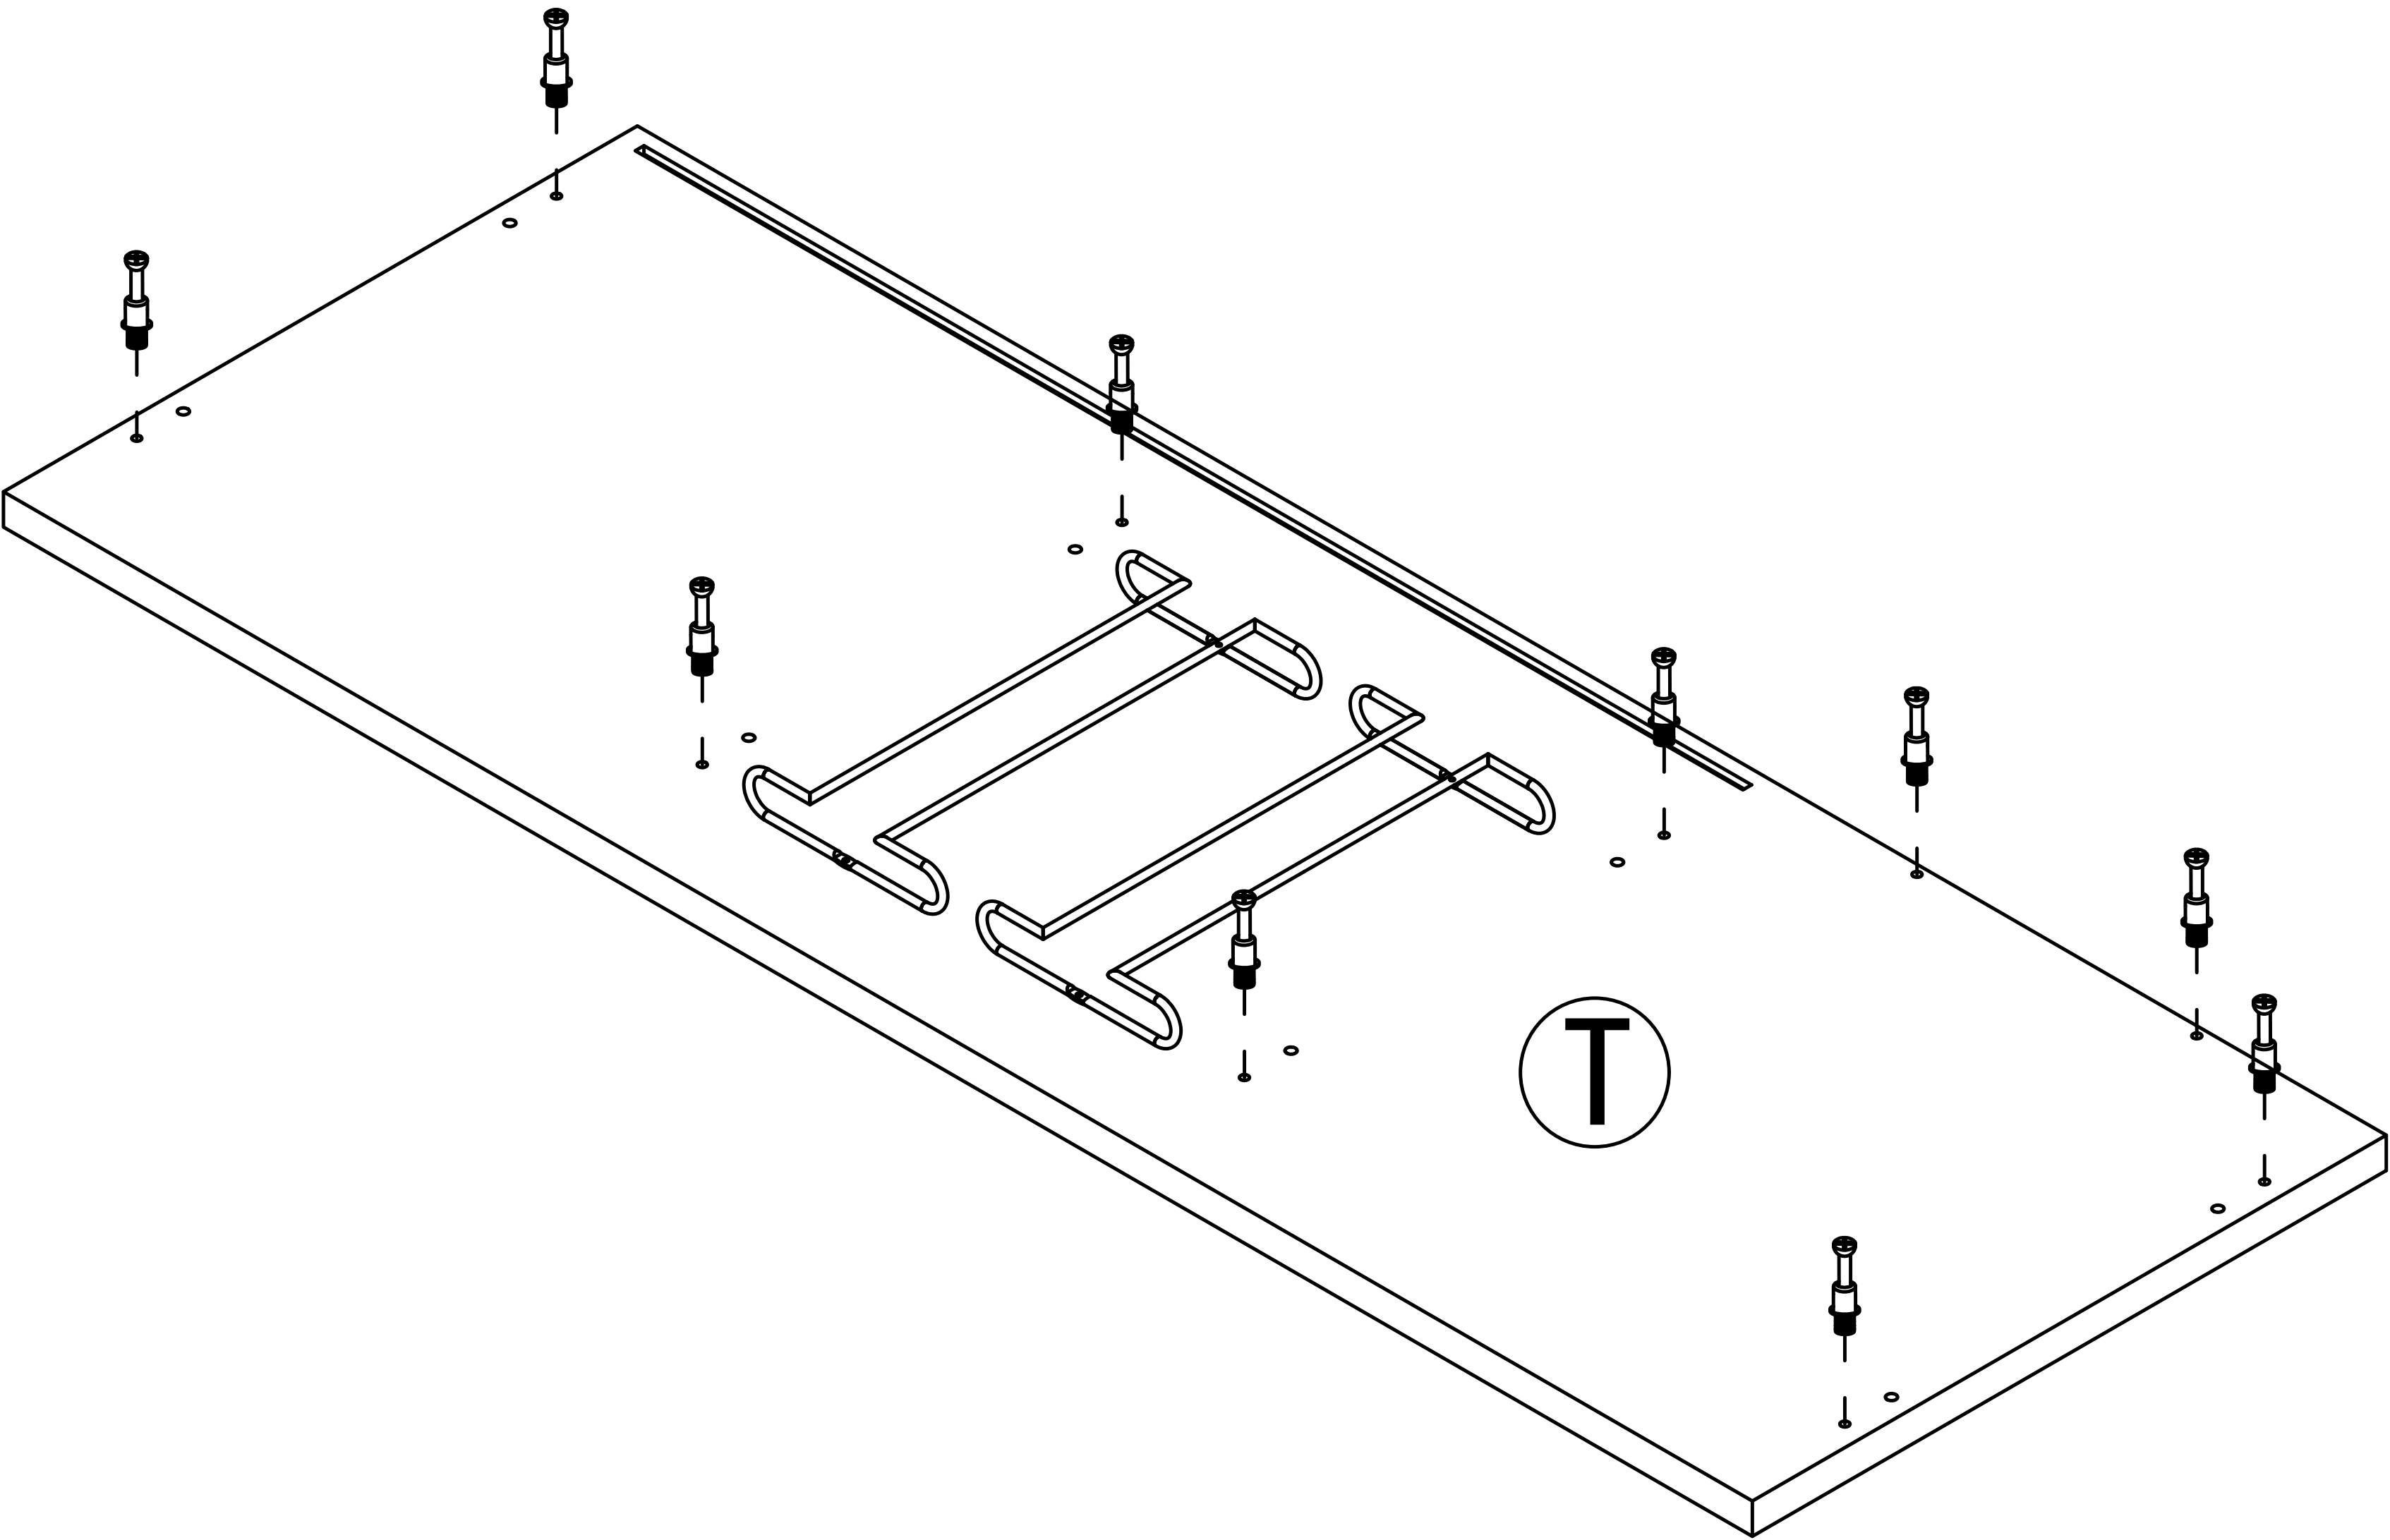


Step 37

2

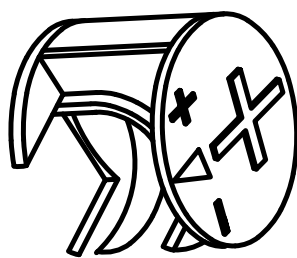


x10

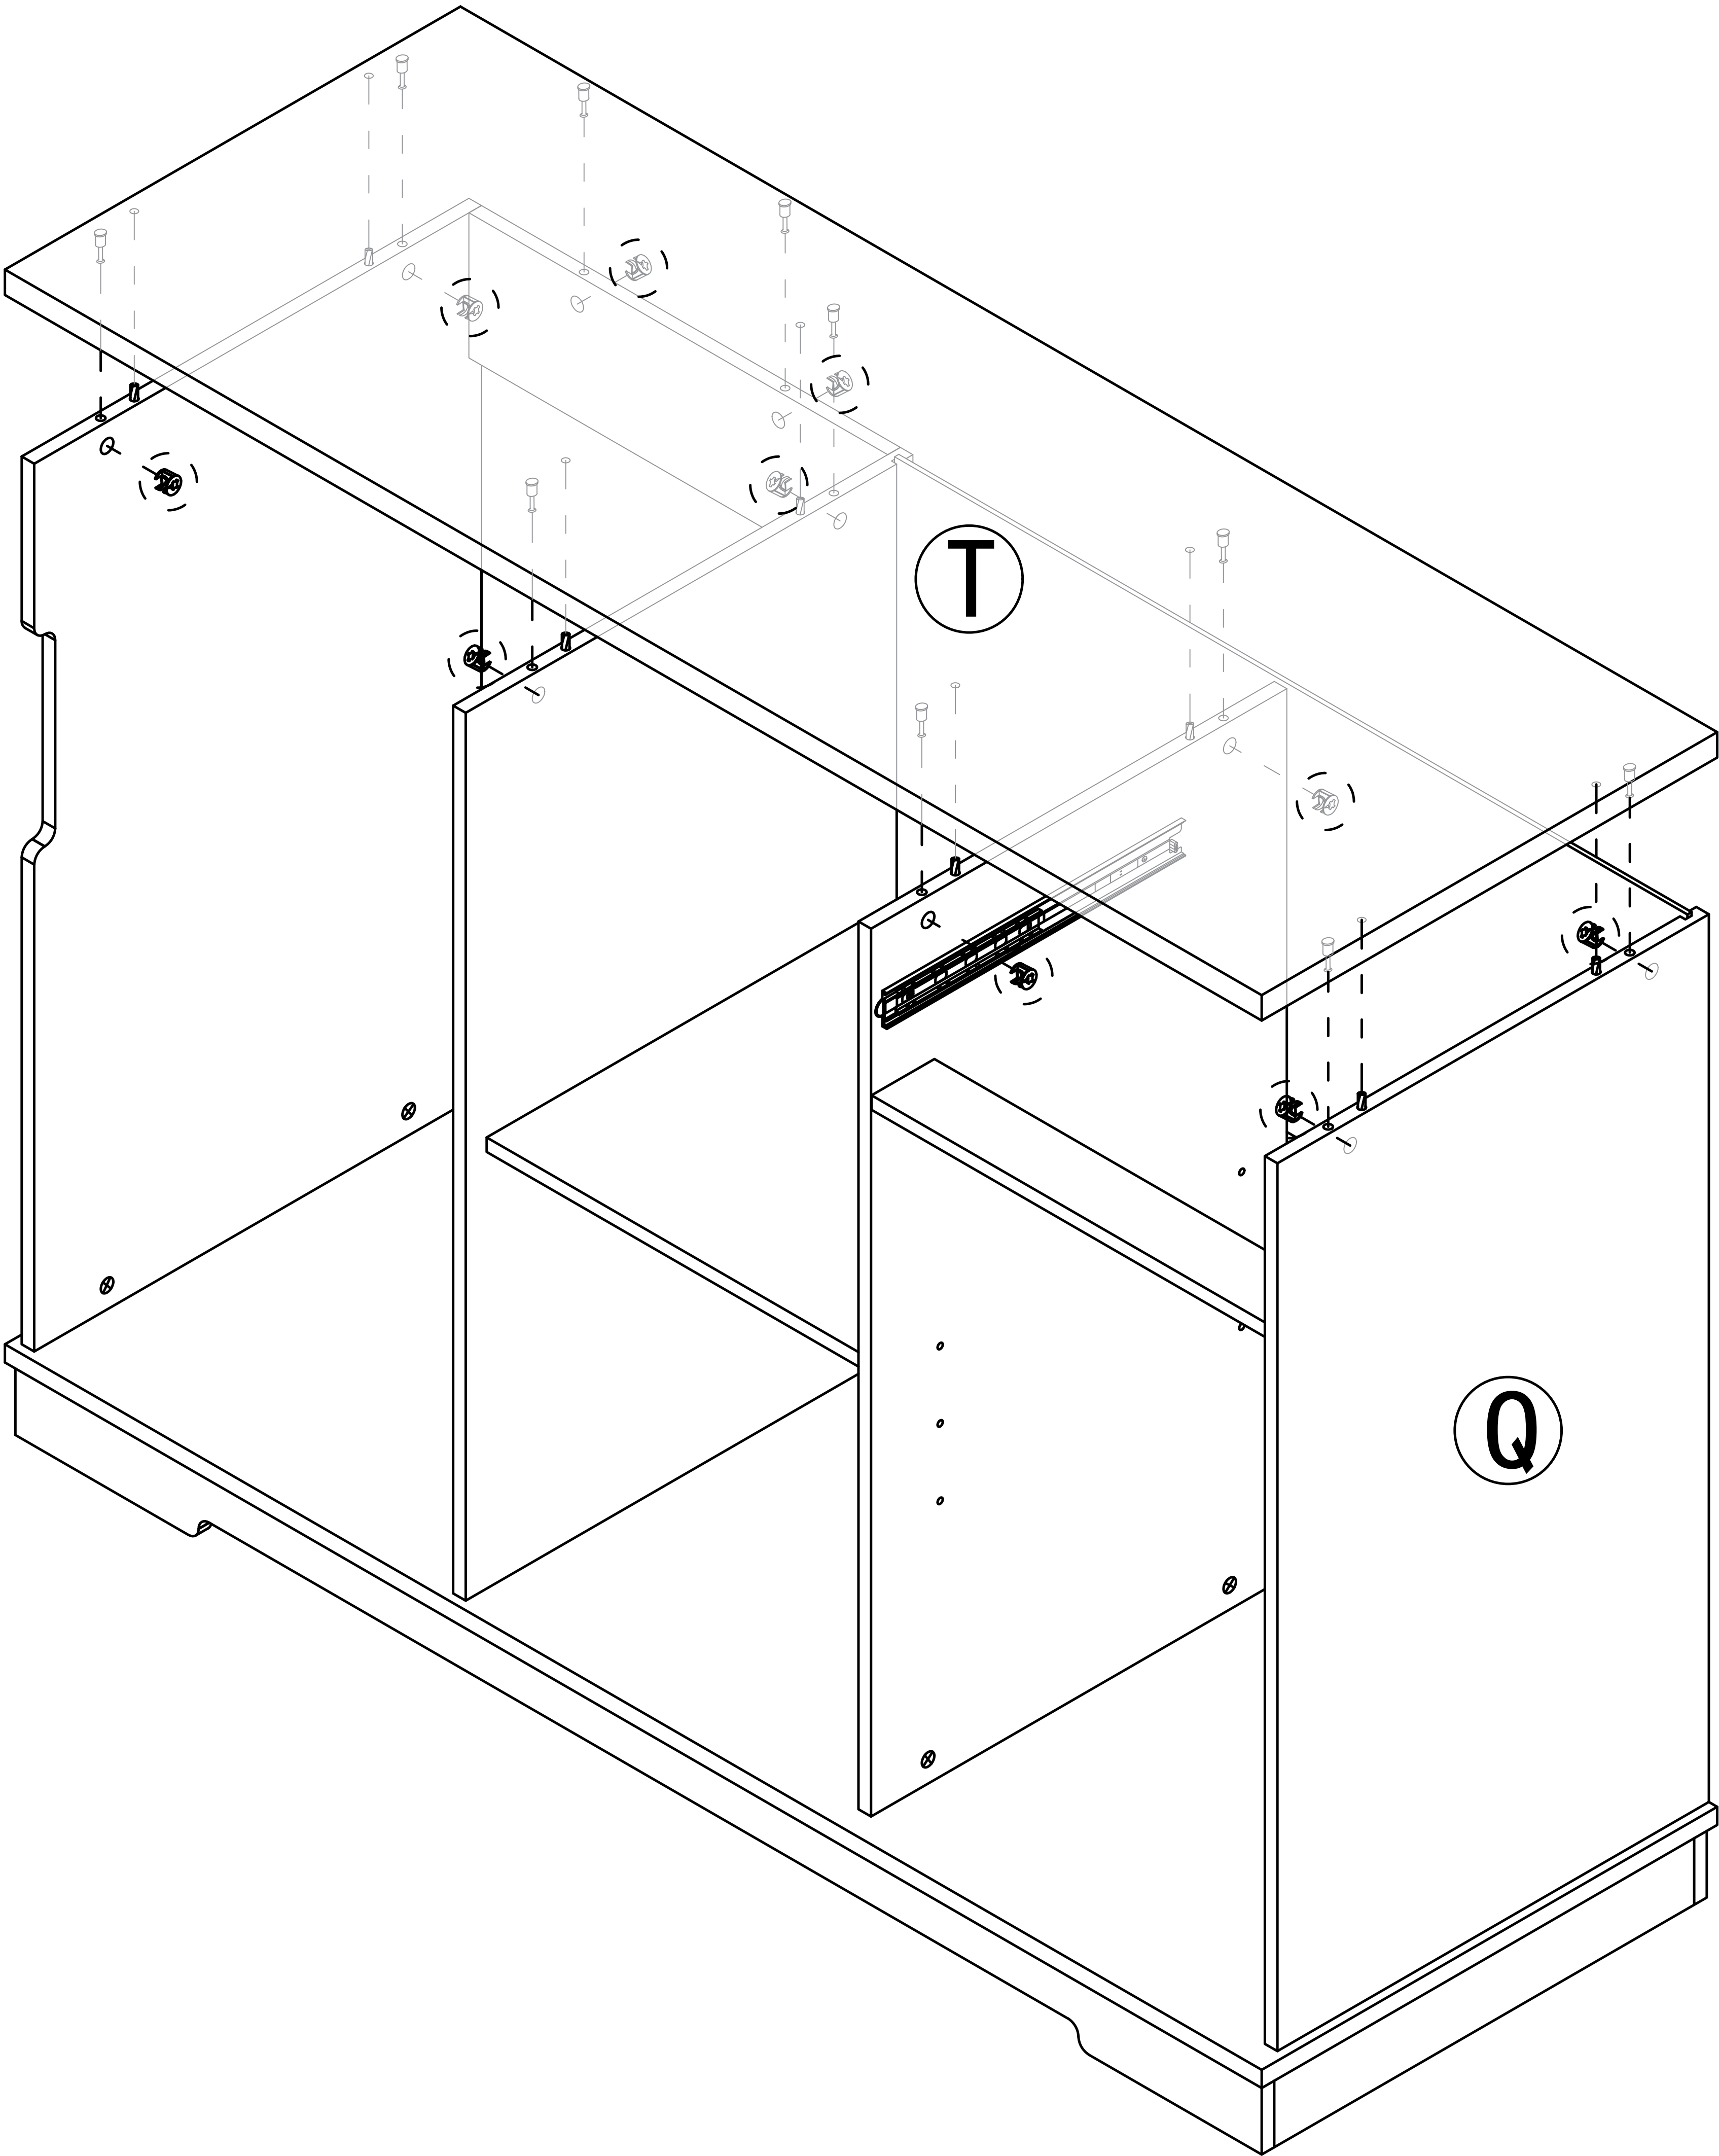


Step 38


9

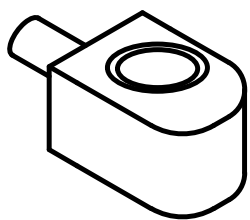





x4


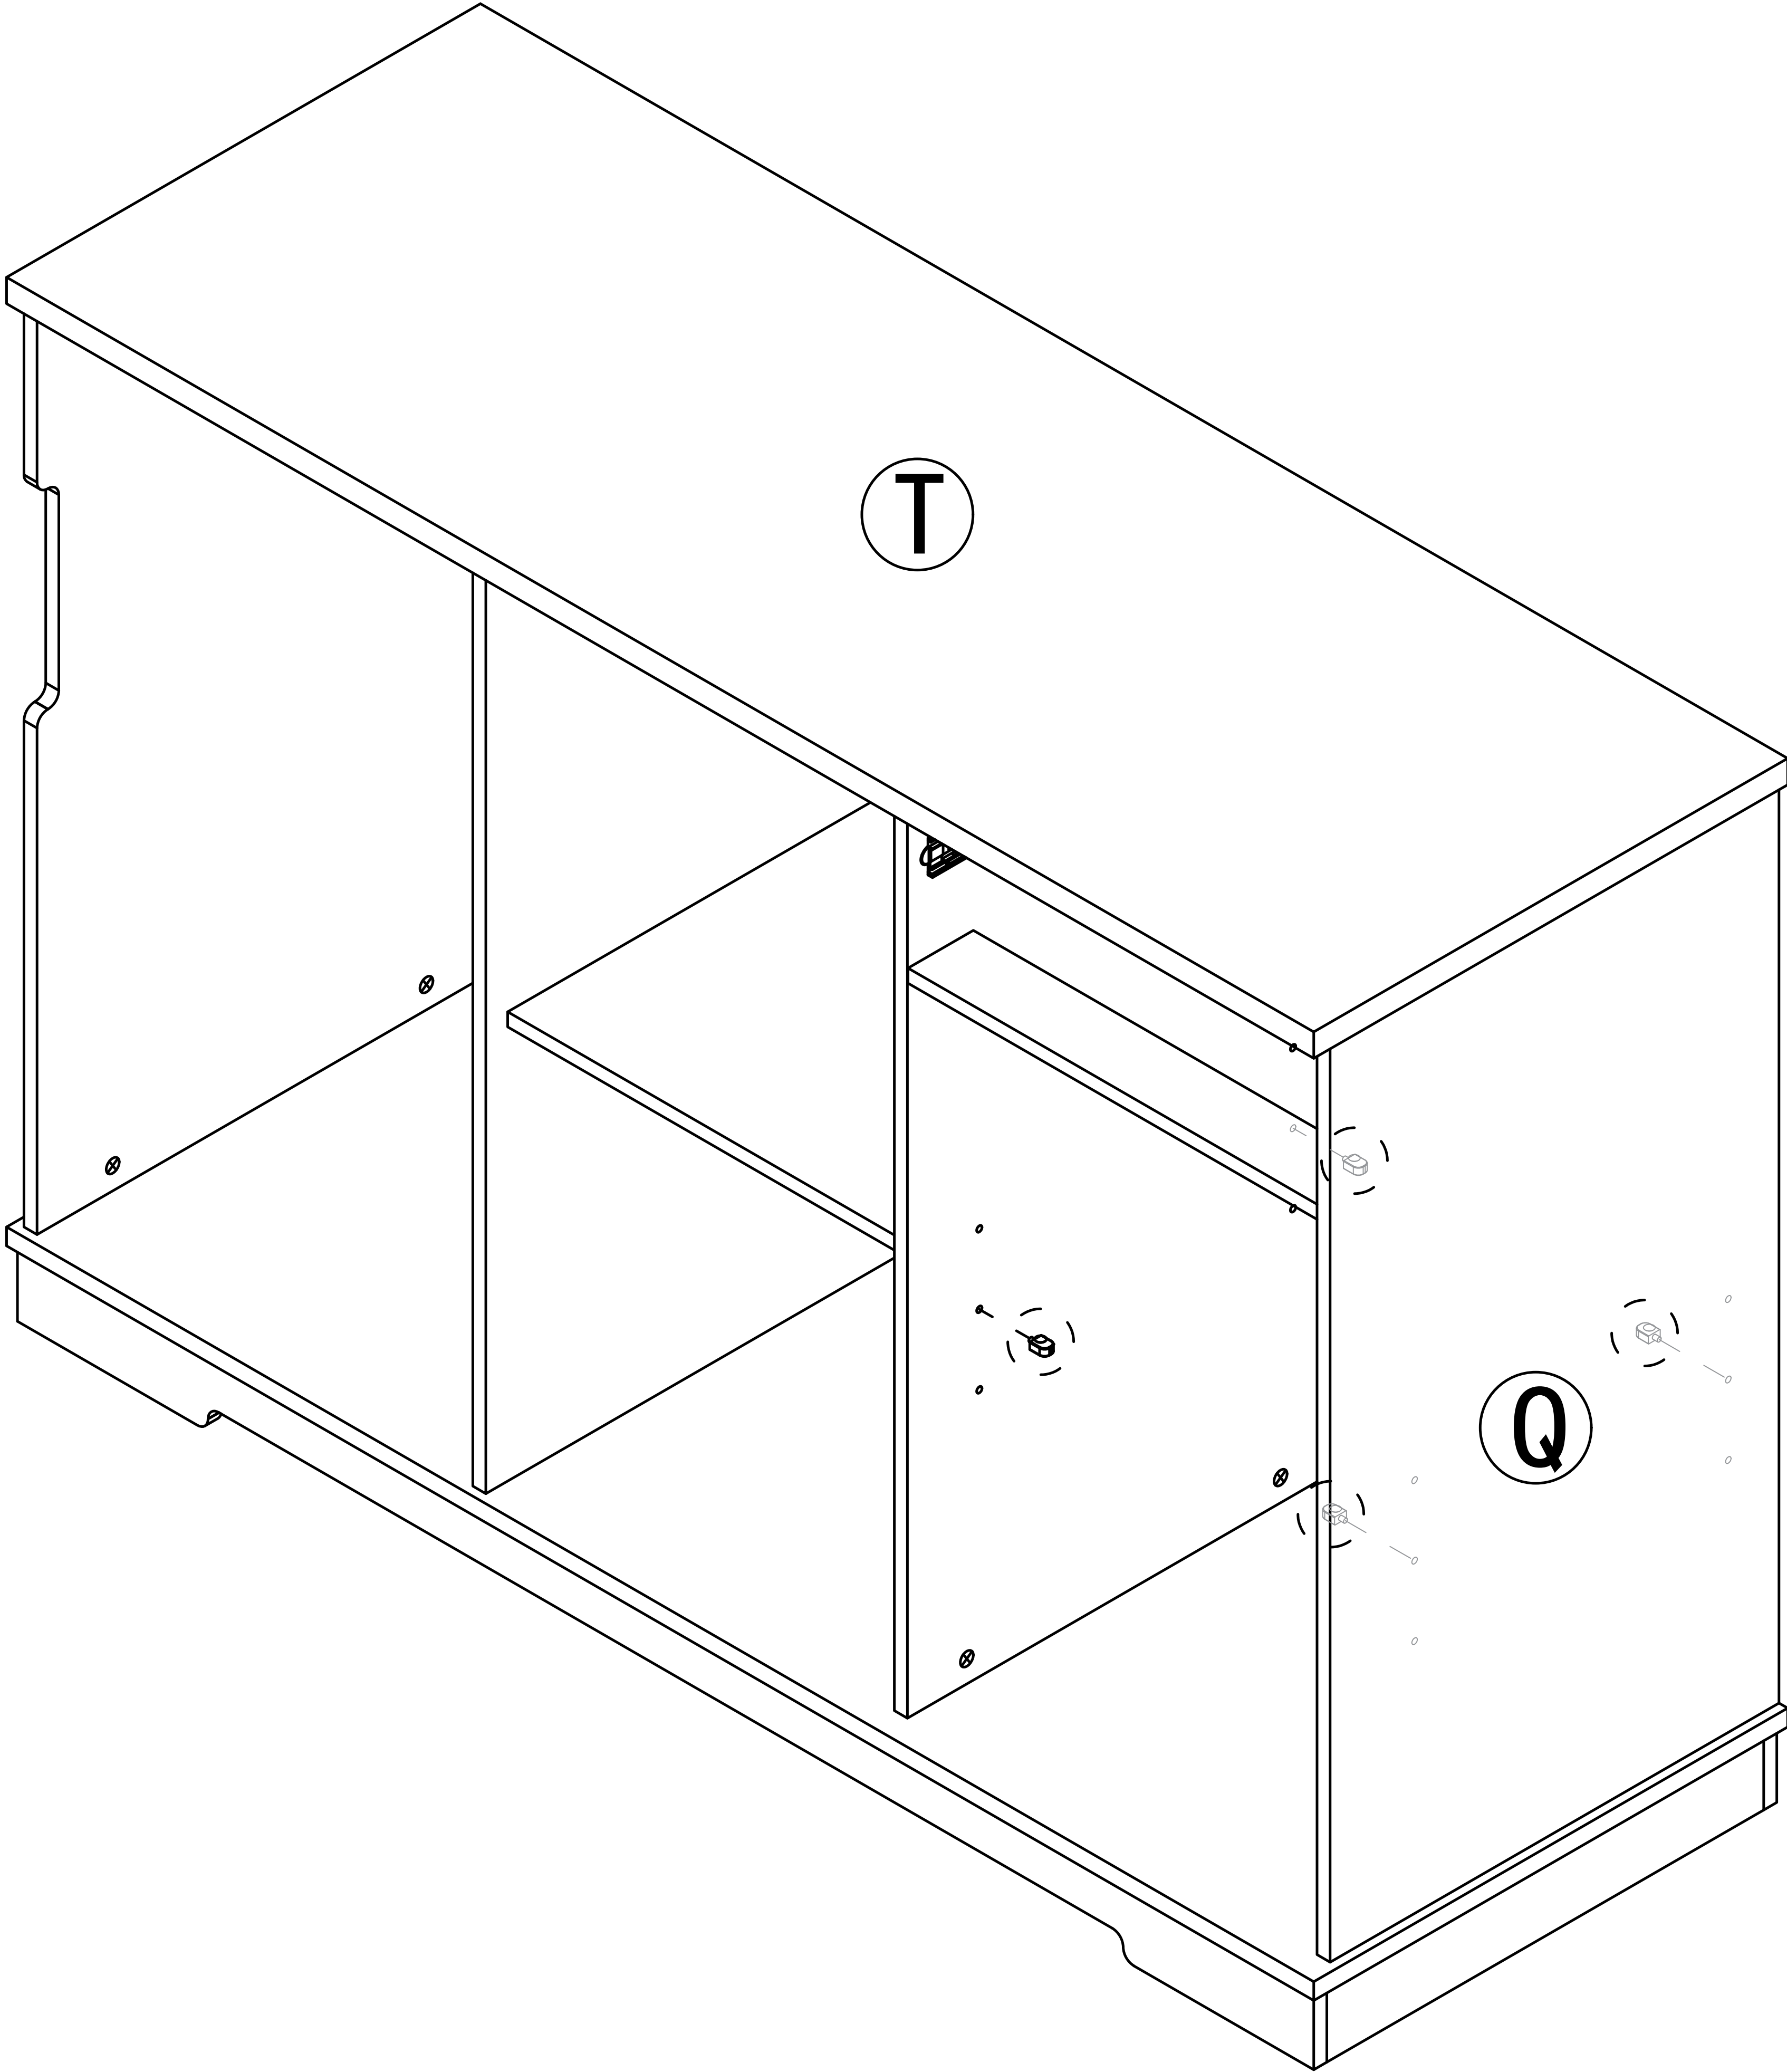


Step 39

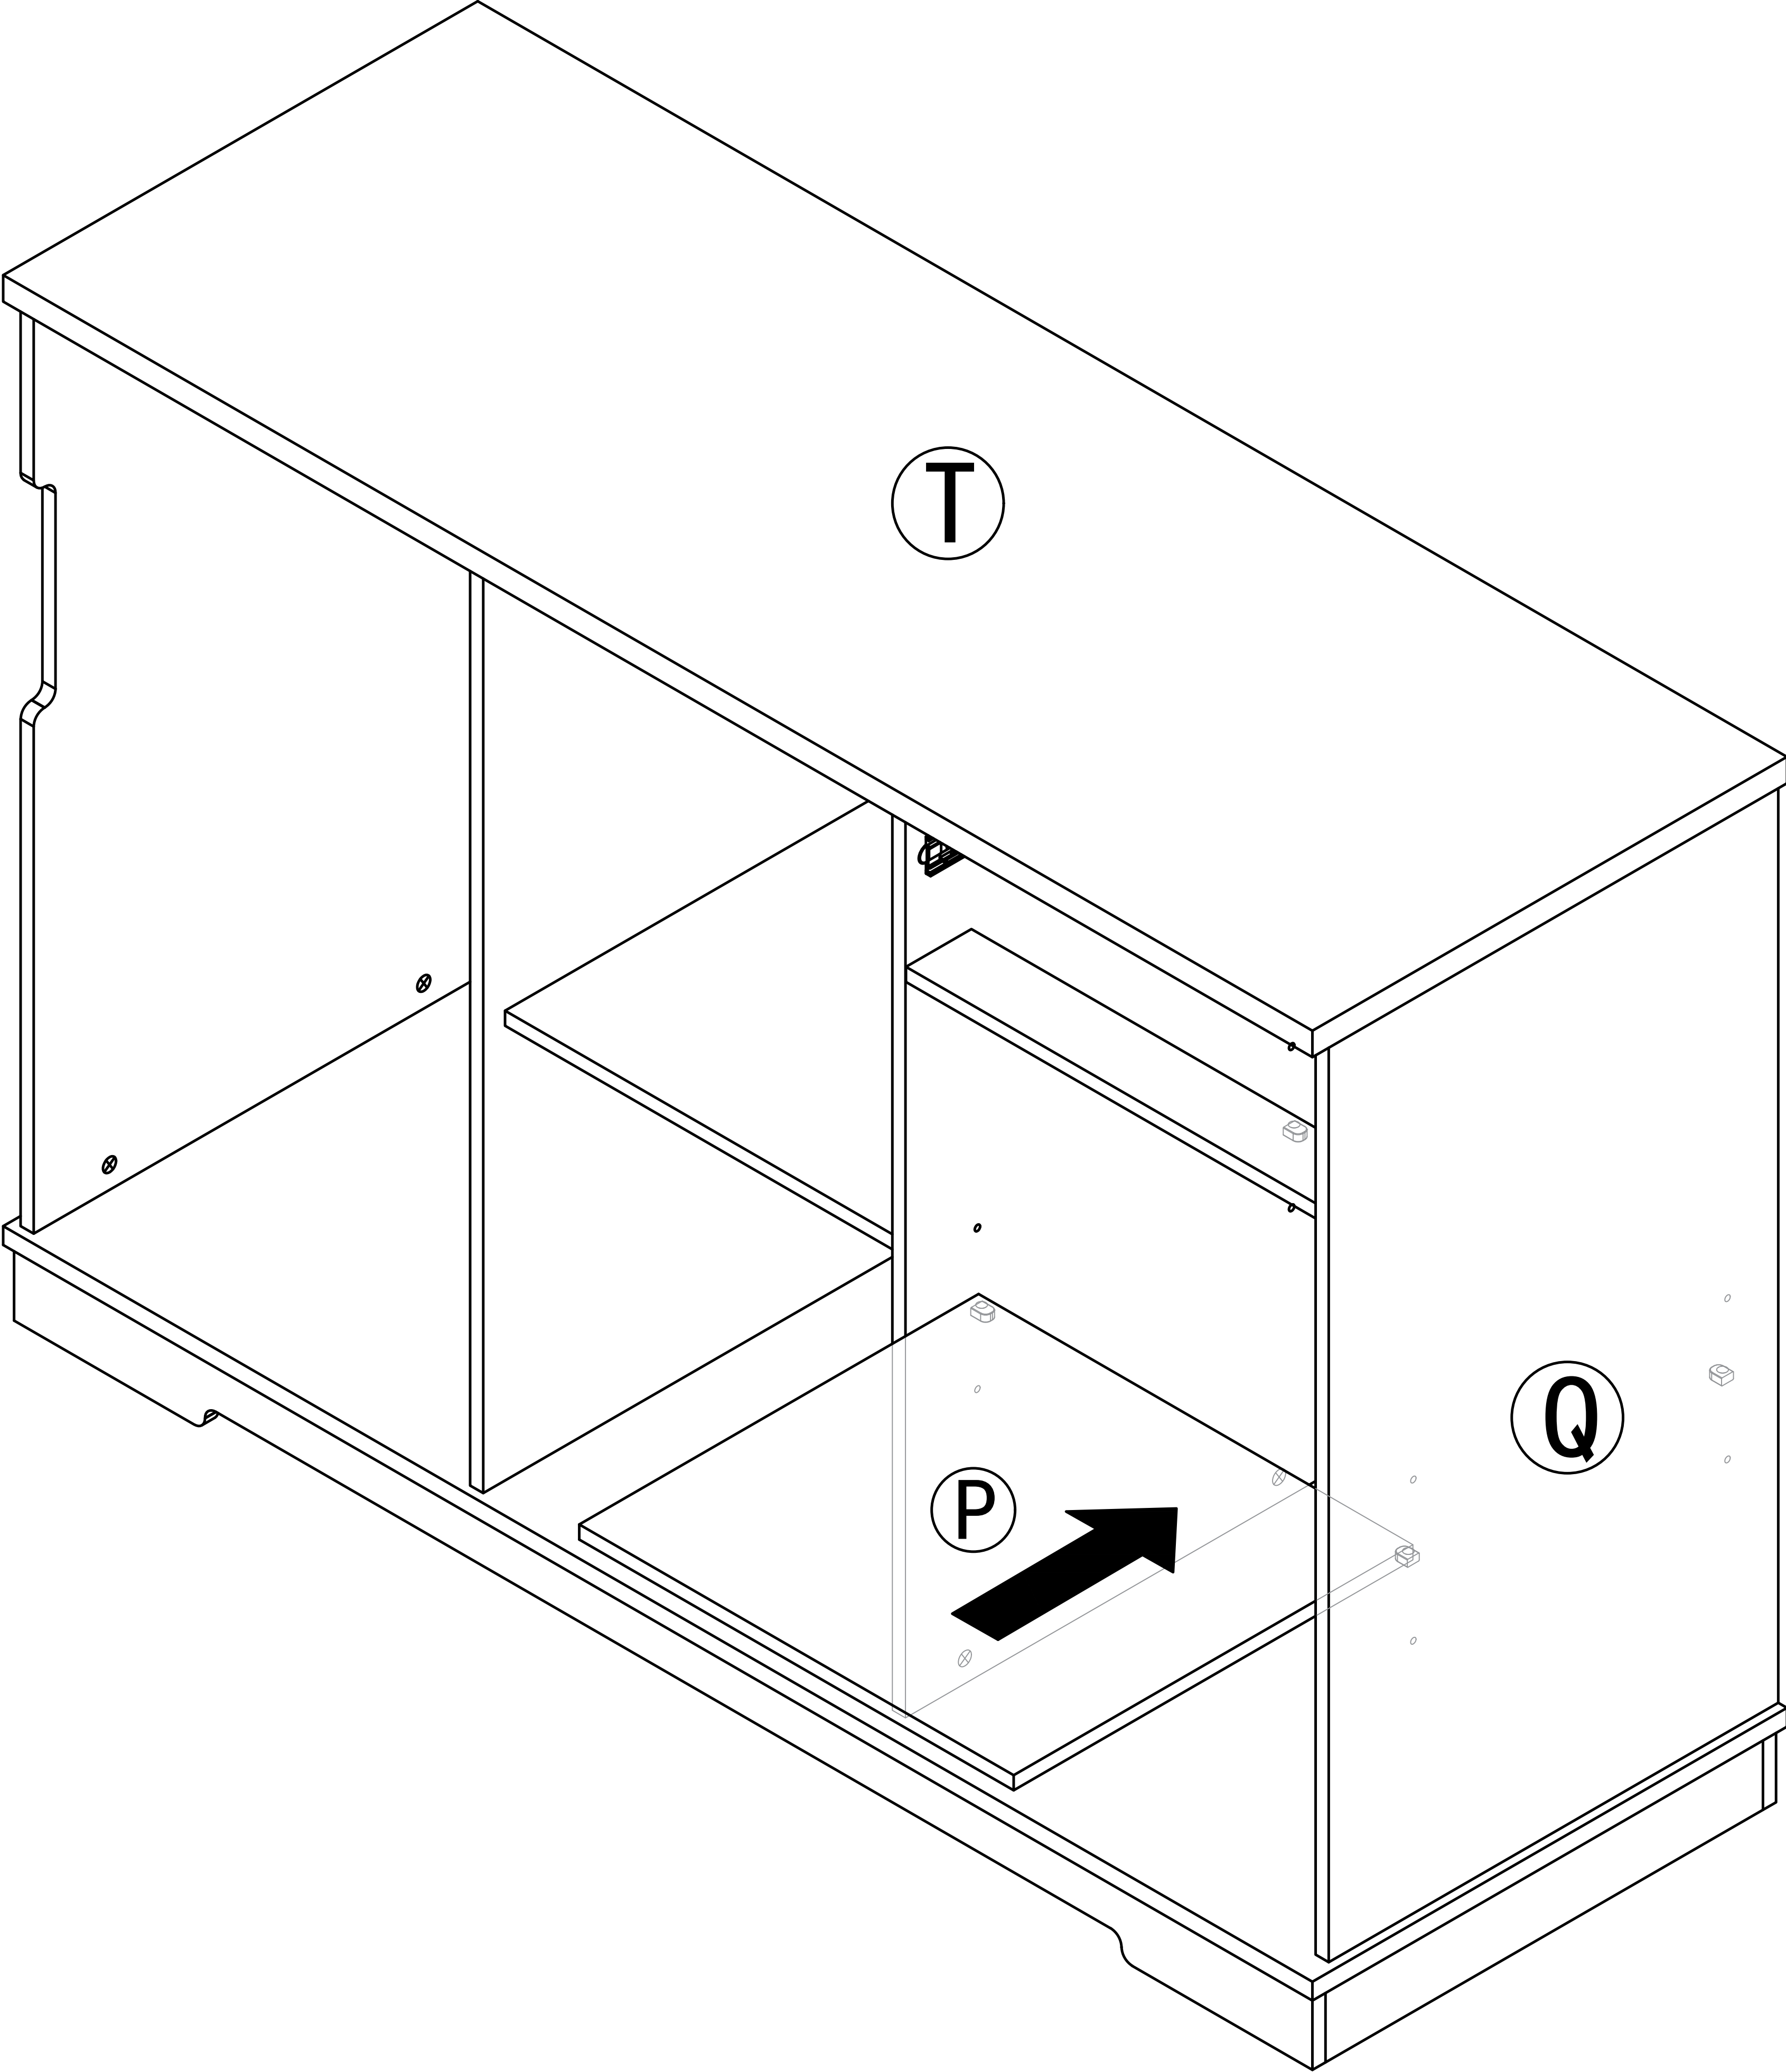


Step 40

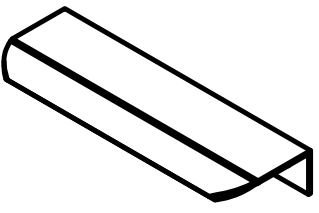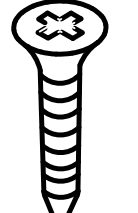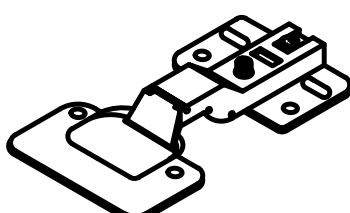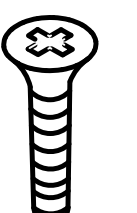
- | | | |
|----|---|---|
| 5 |  |  |
| | x1 | x2 |
| 10 |  |  |
| | x2 | x4 |

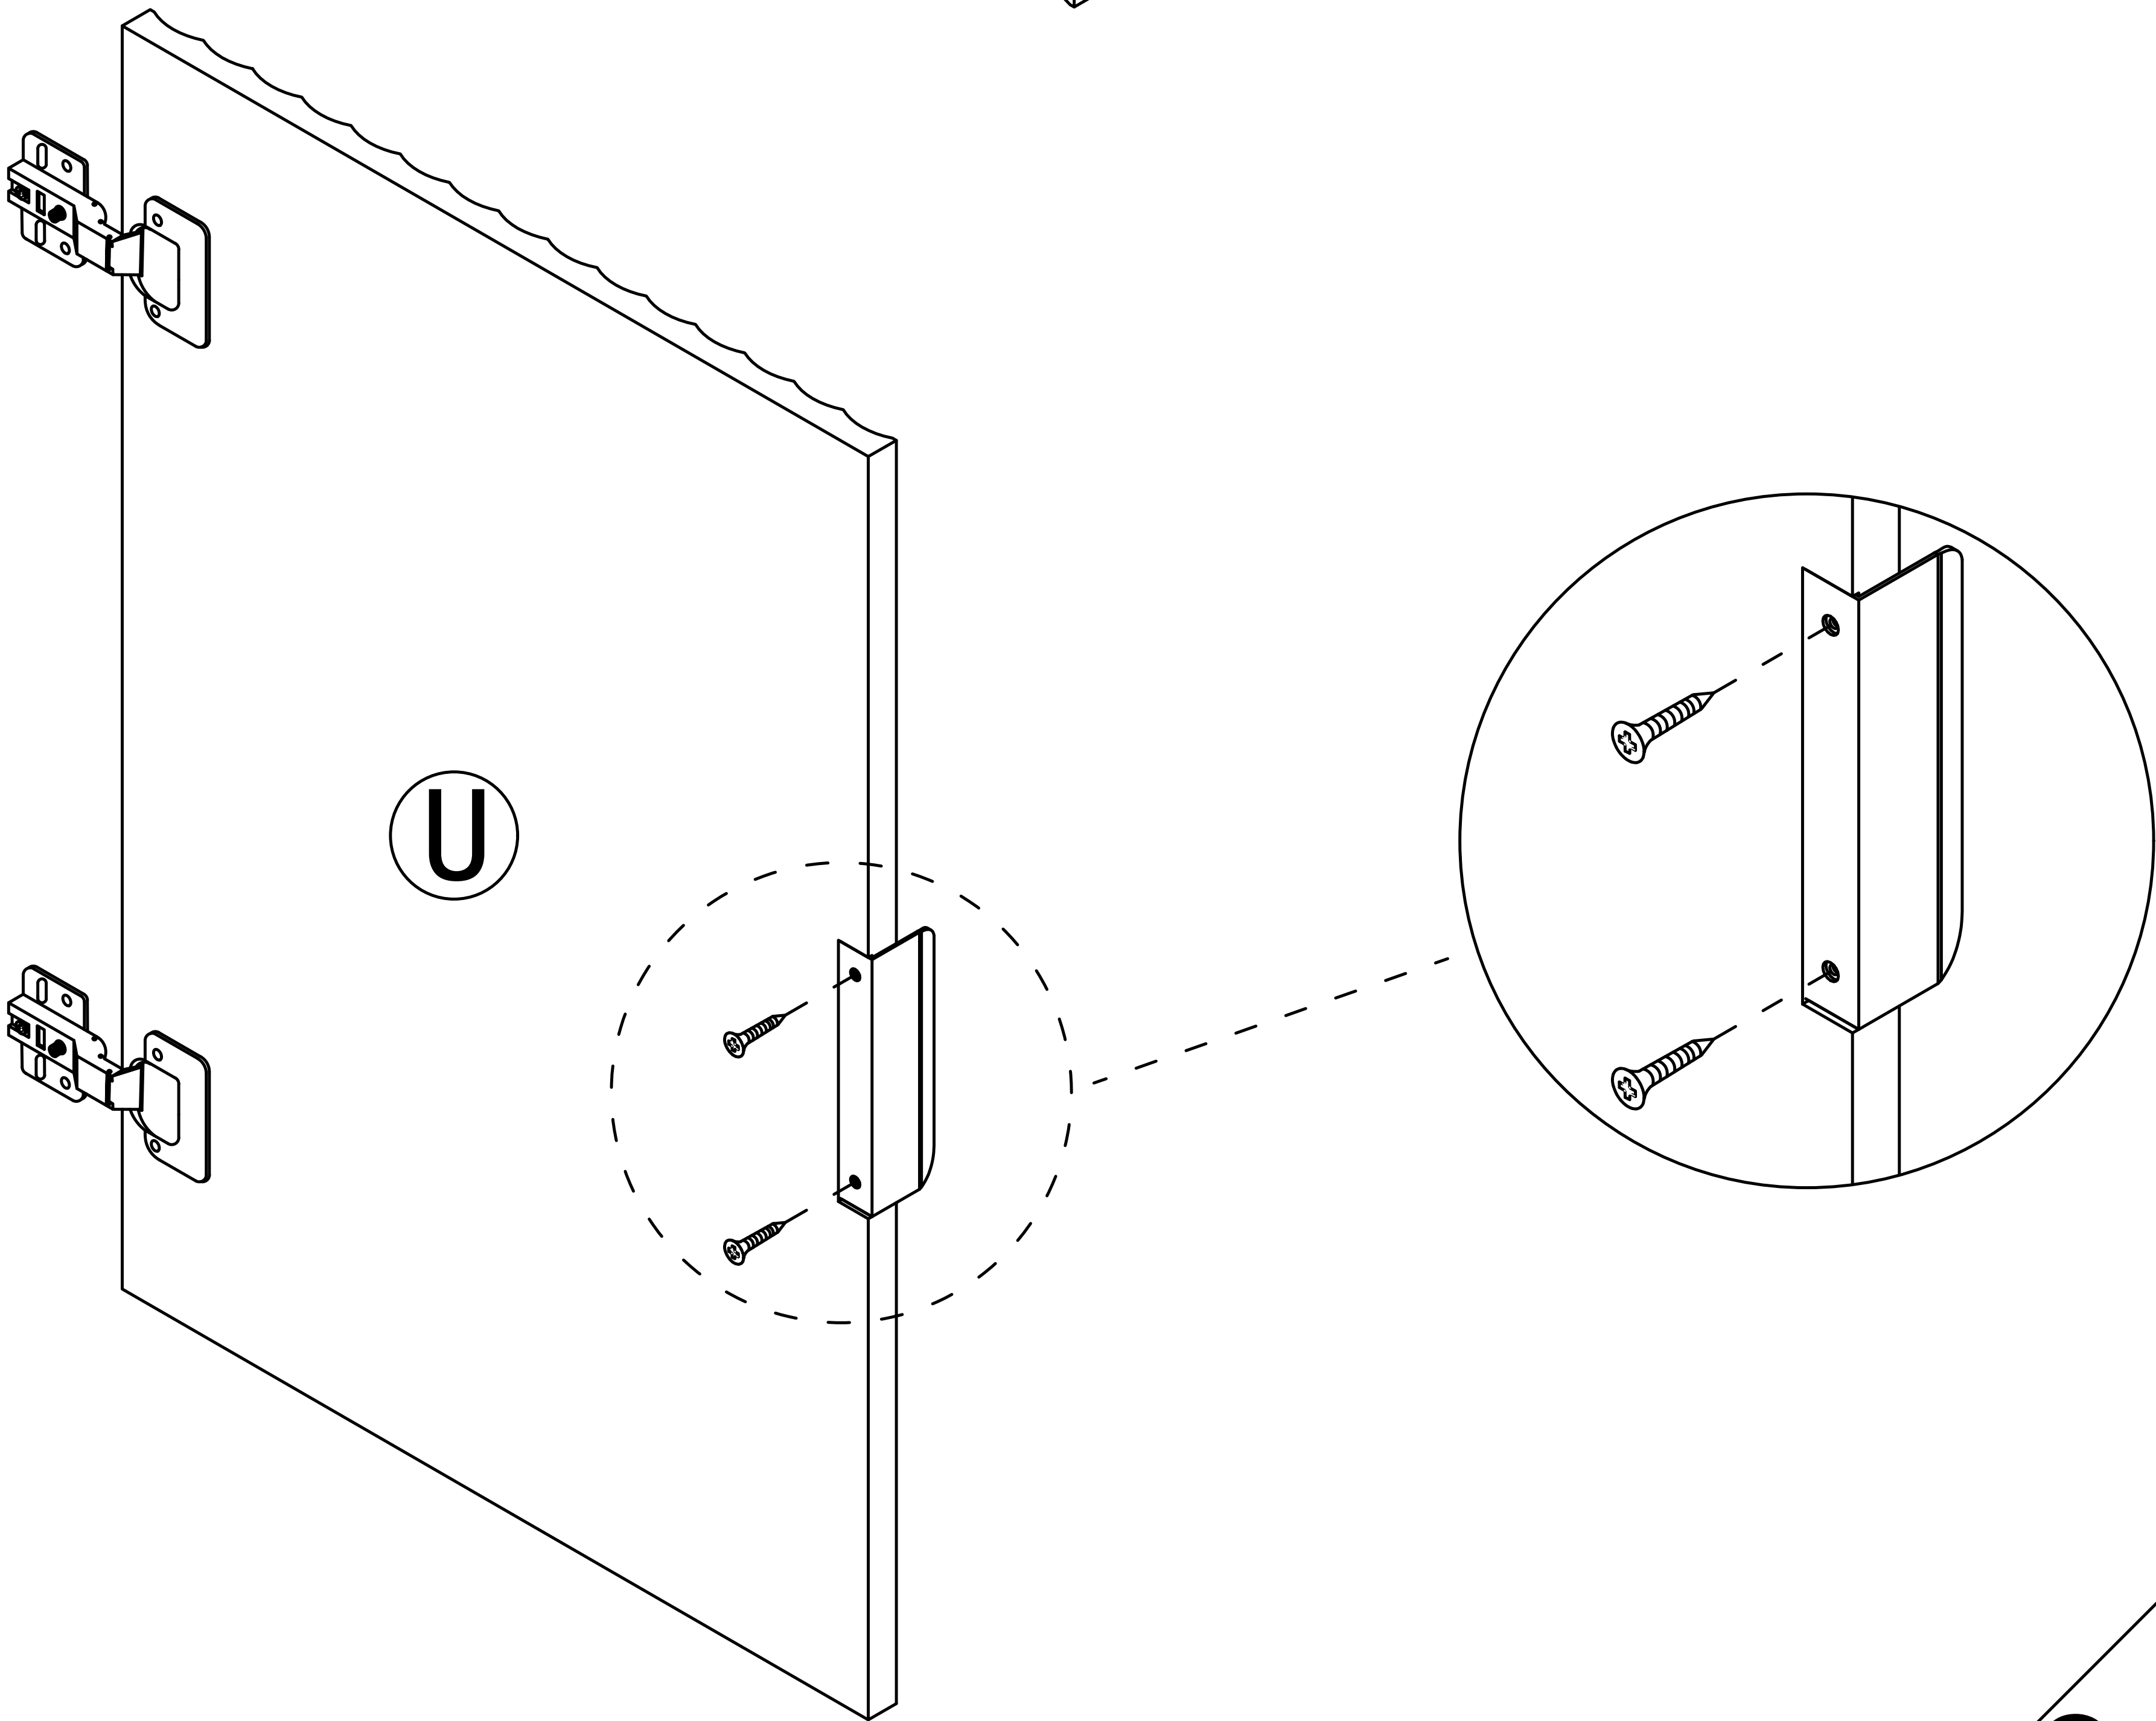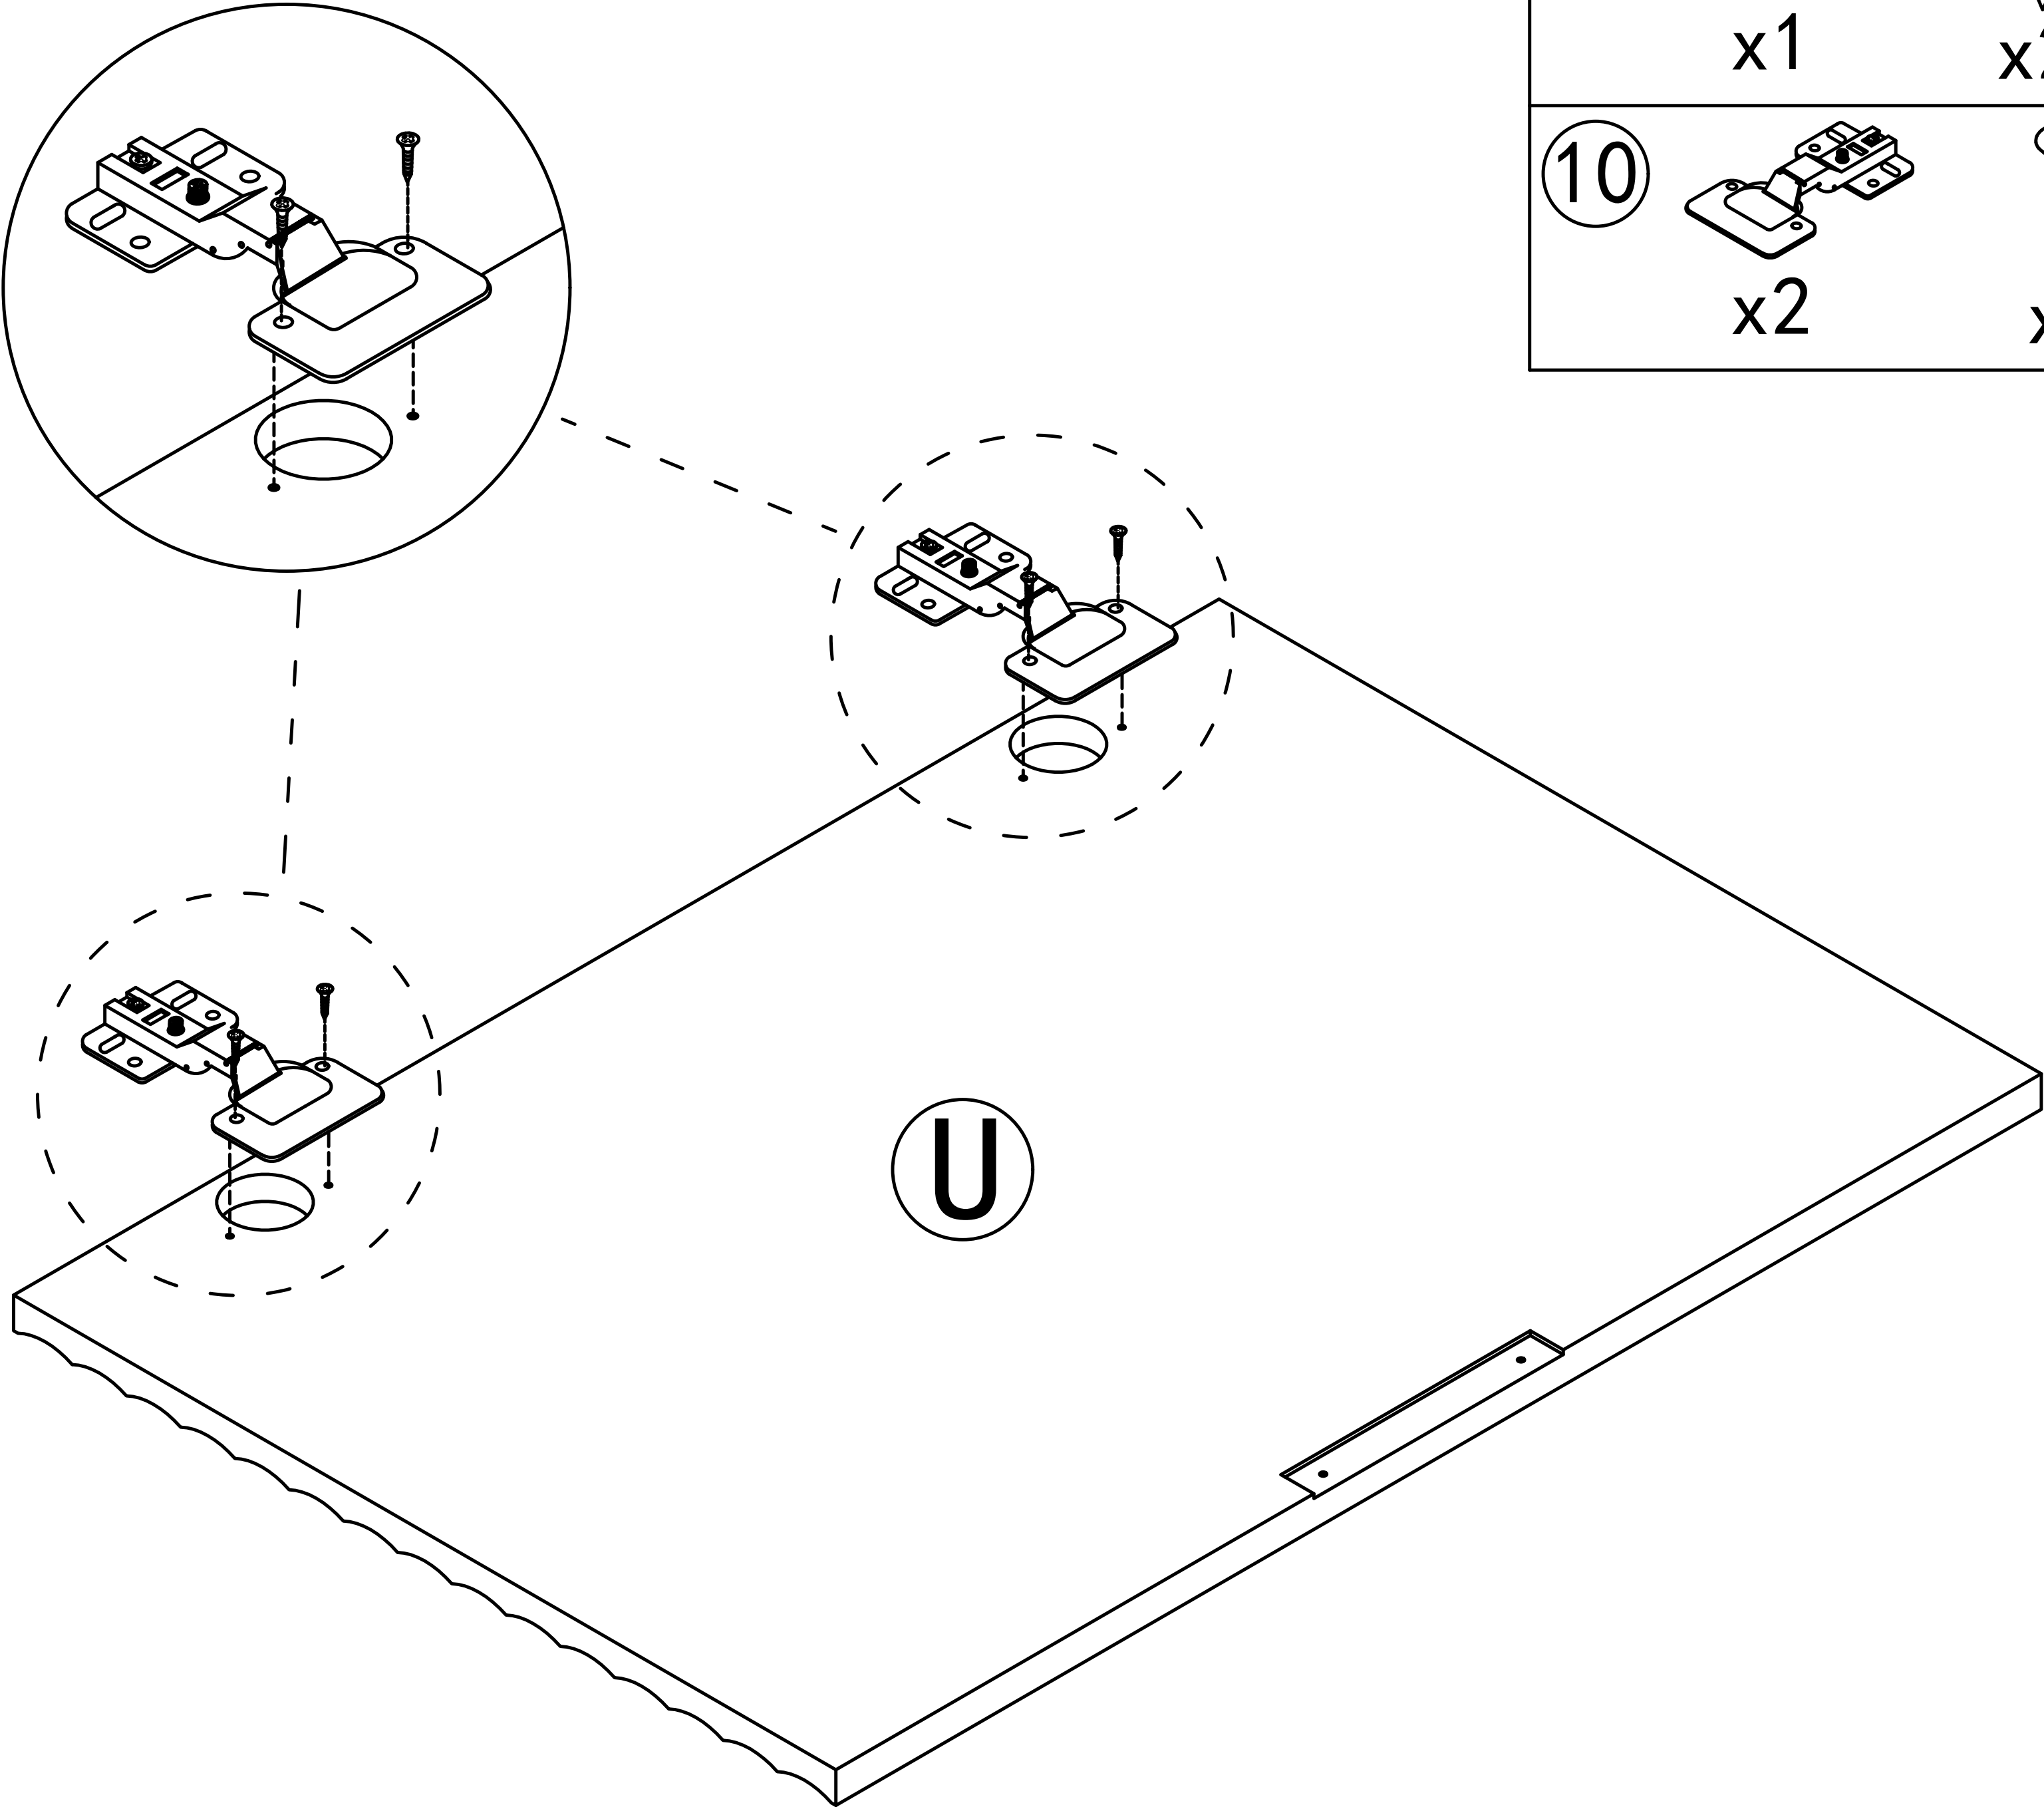

Step 41

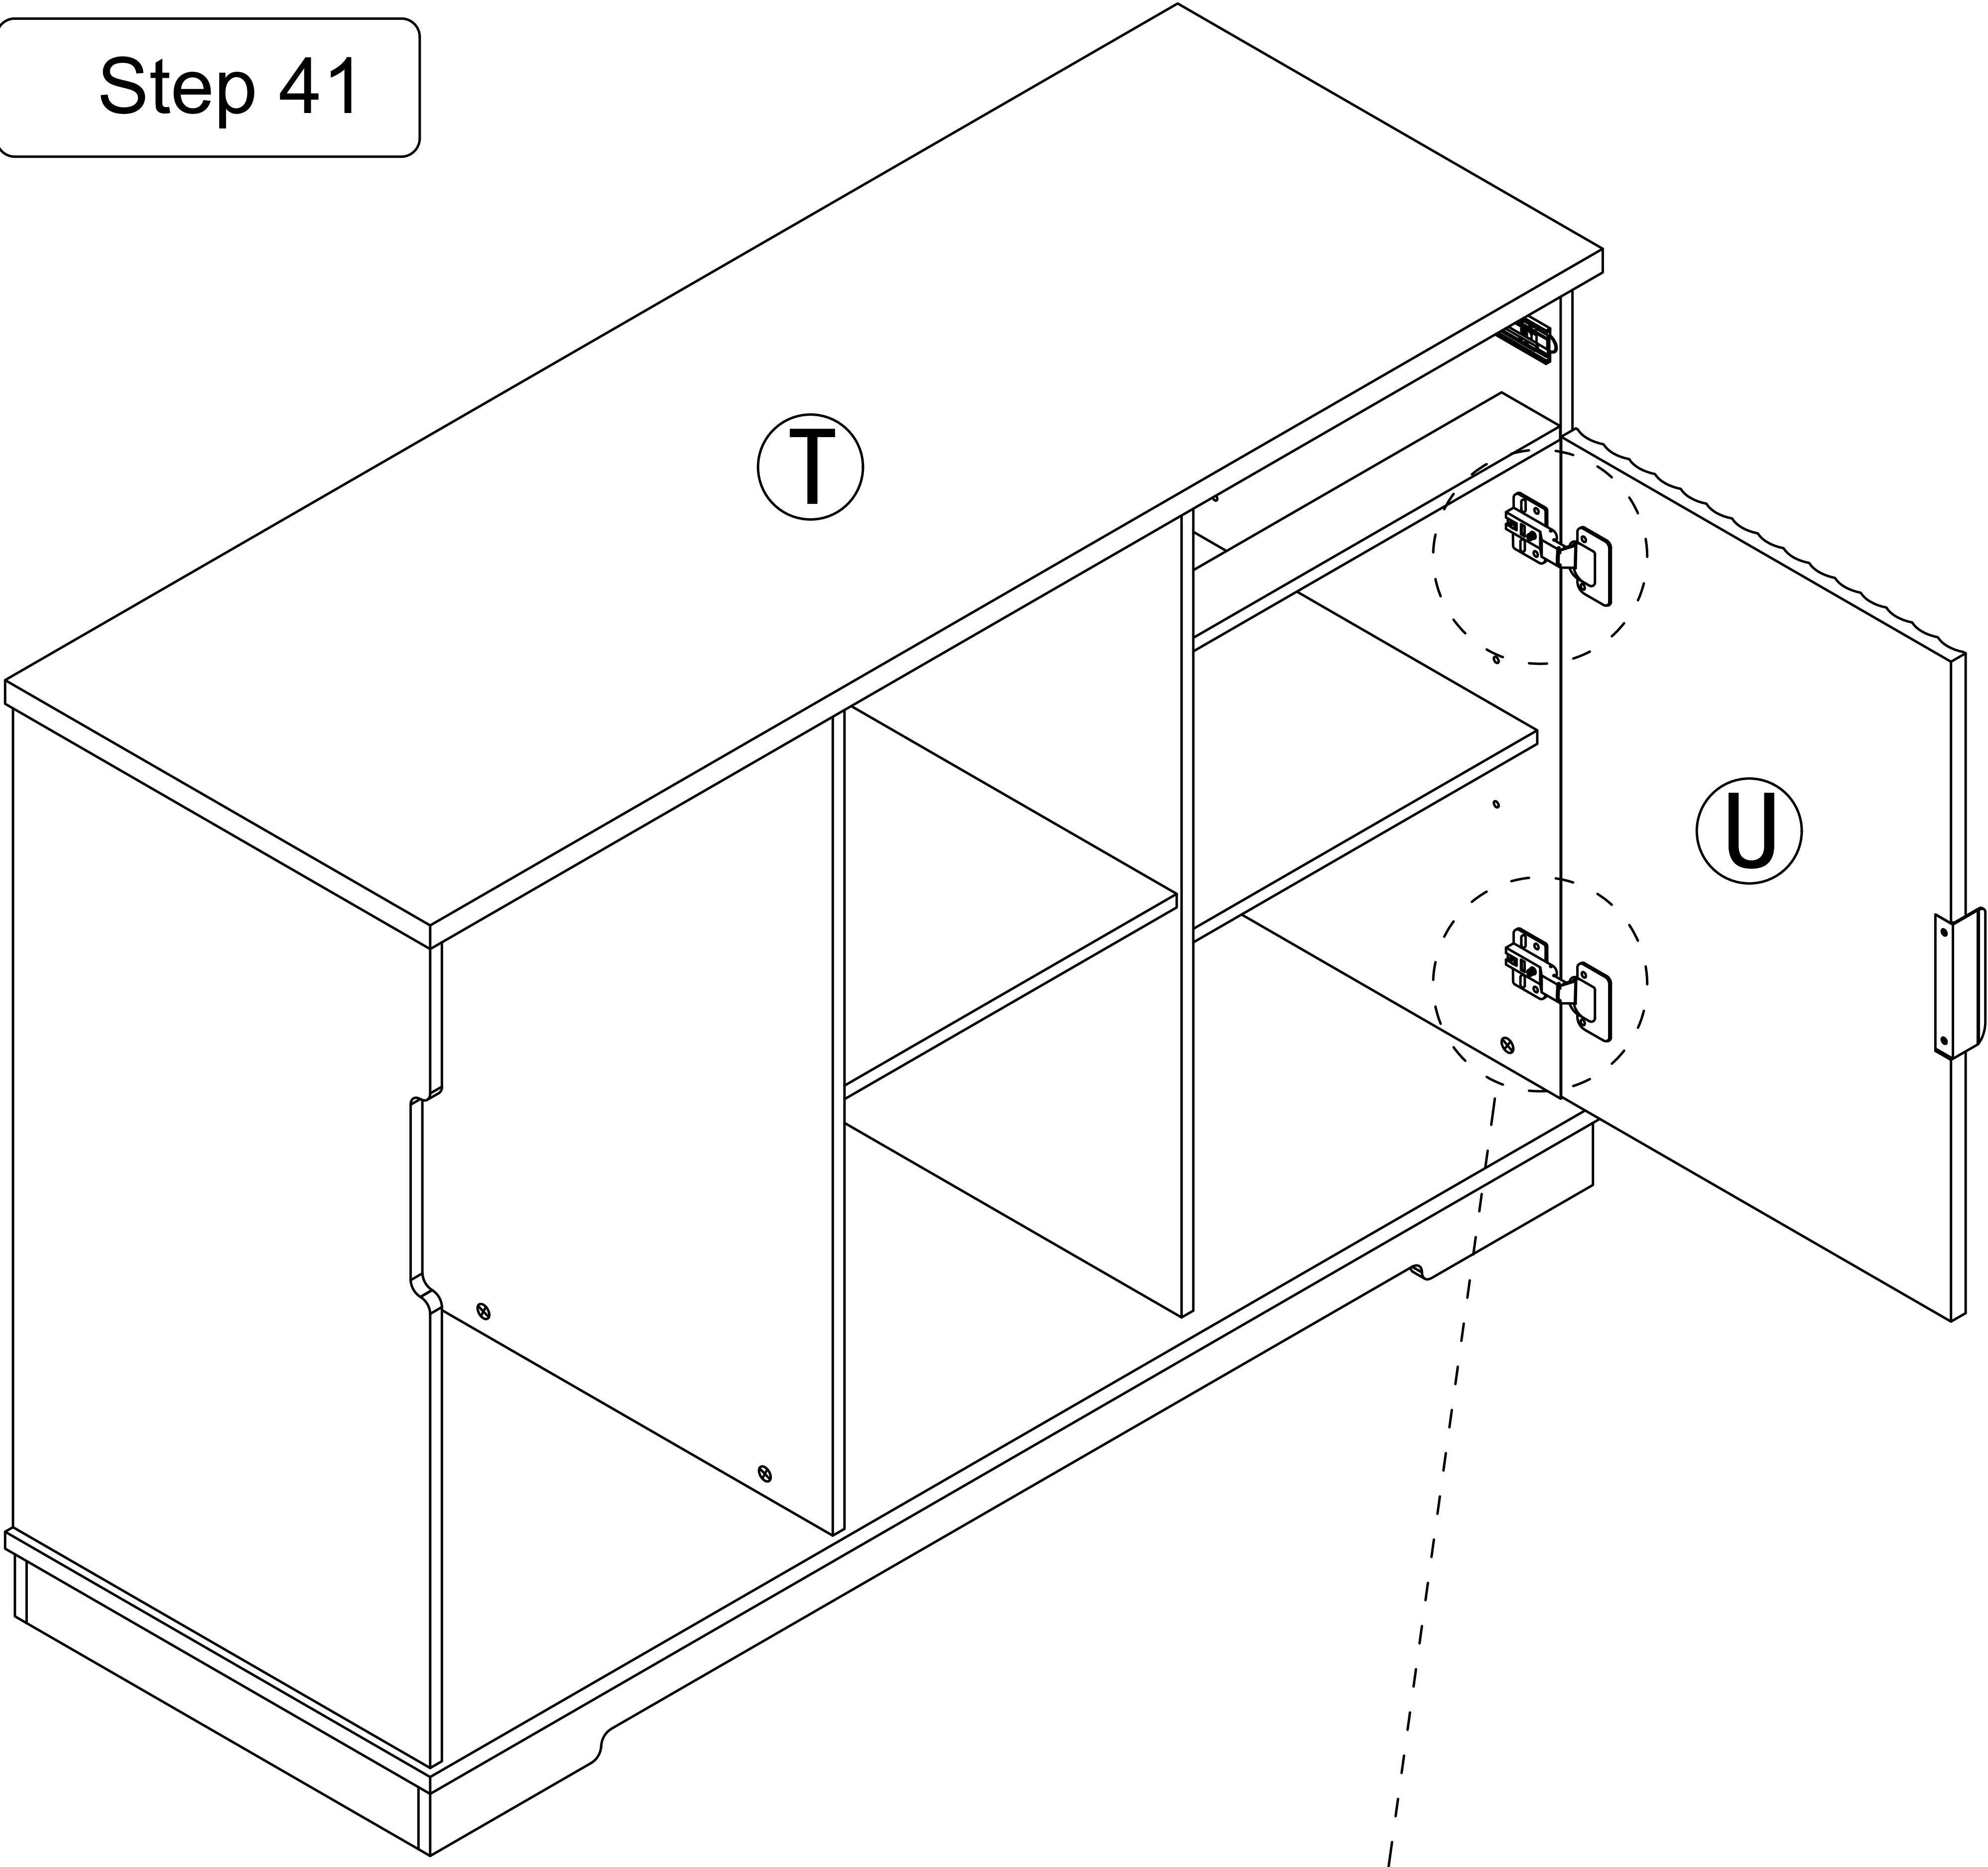

Turning this screw can effectively adjust the size of the door gap.

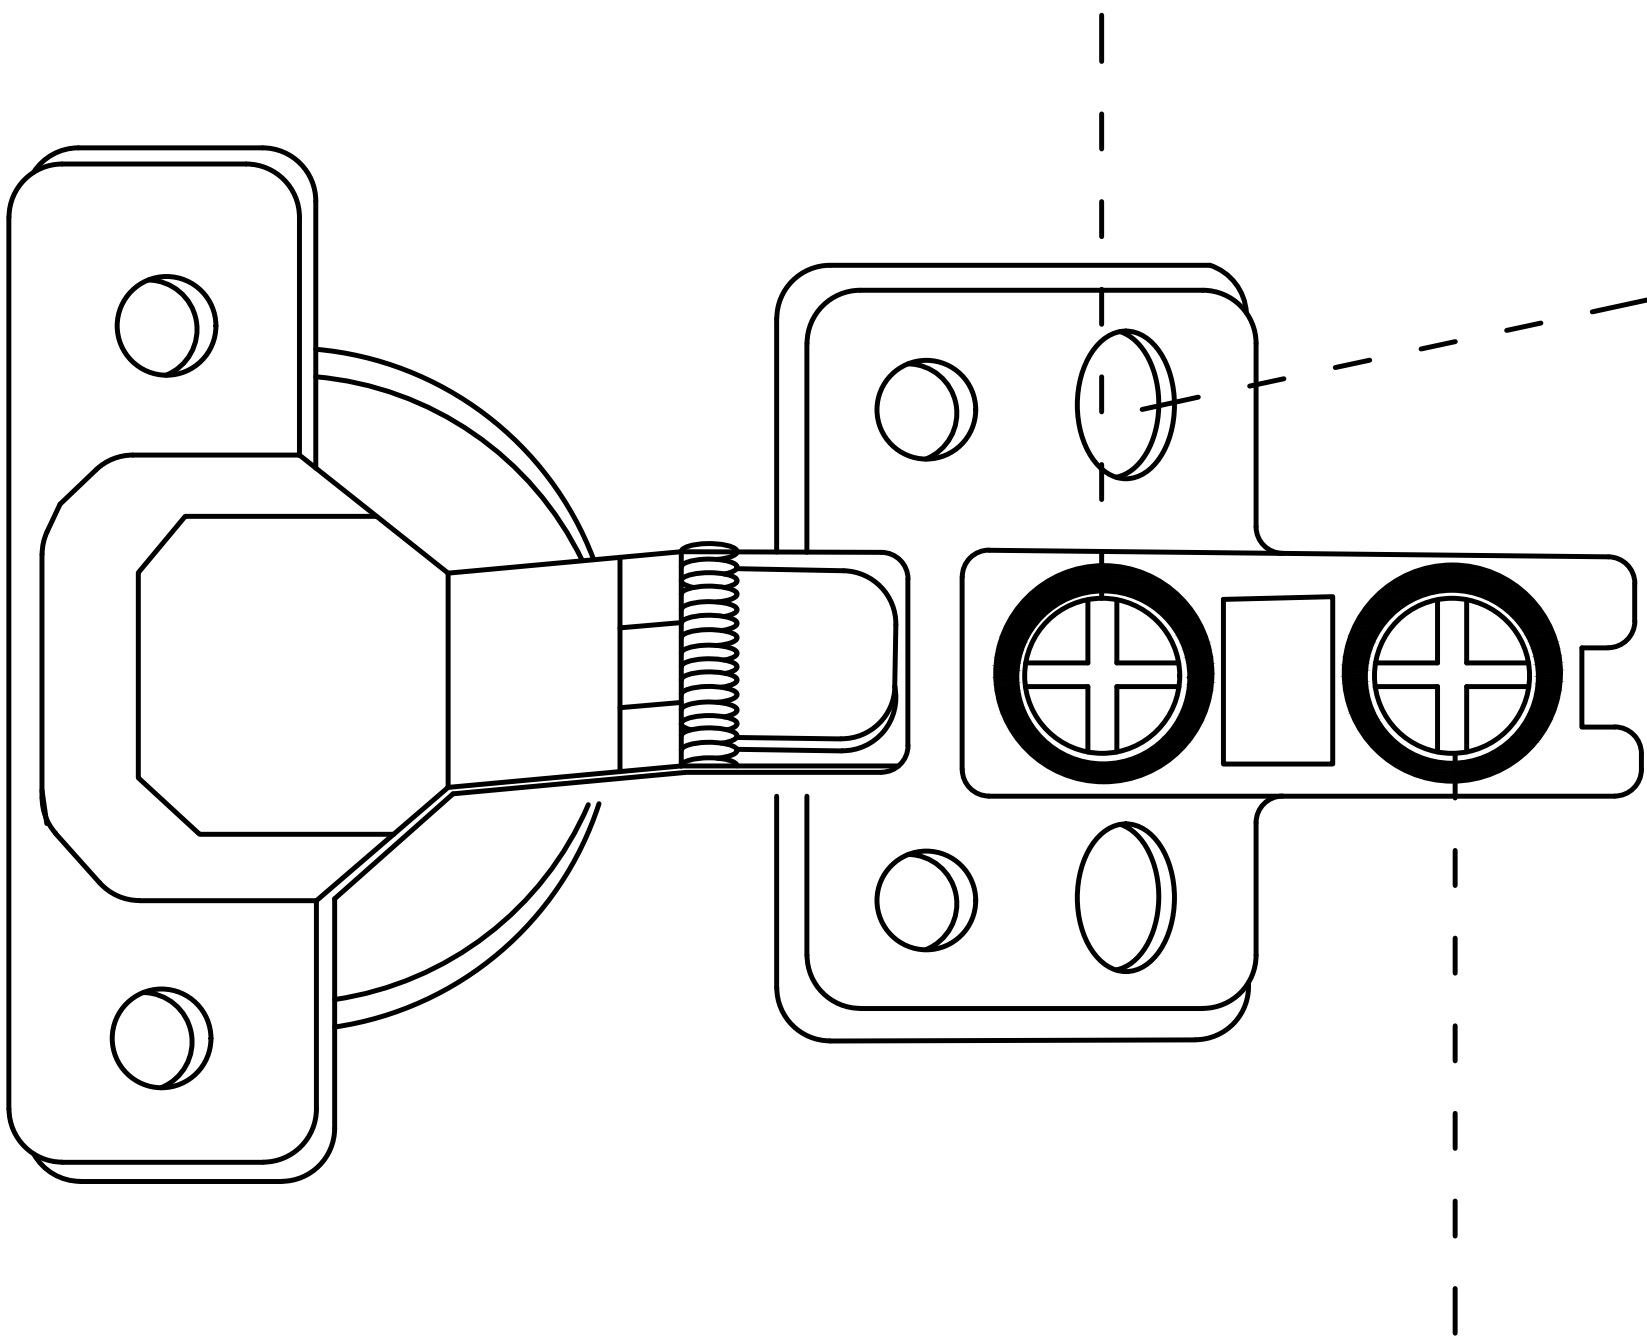


Adjust hole control the up and down height of the door

Turn this screw to adjust the door panel to be flat with the side panel.

Step 42



10

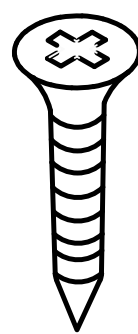

x8


T

U

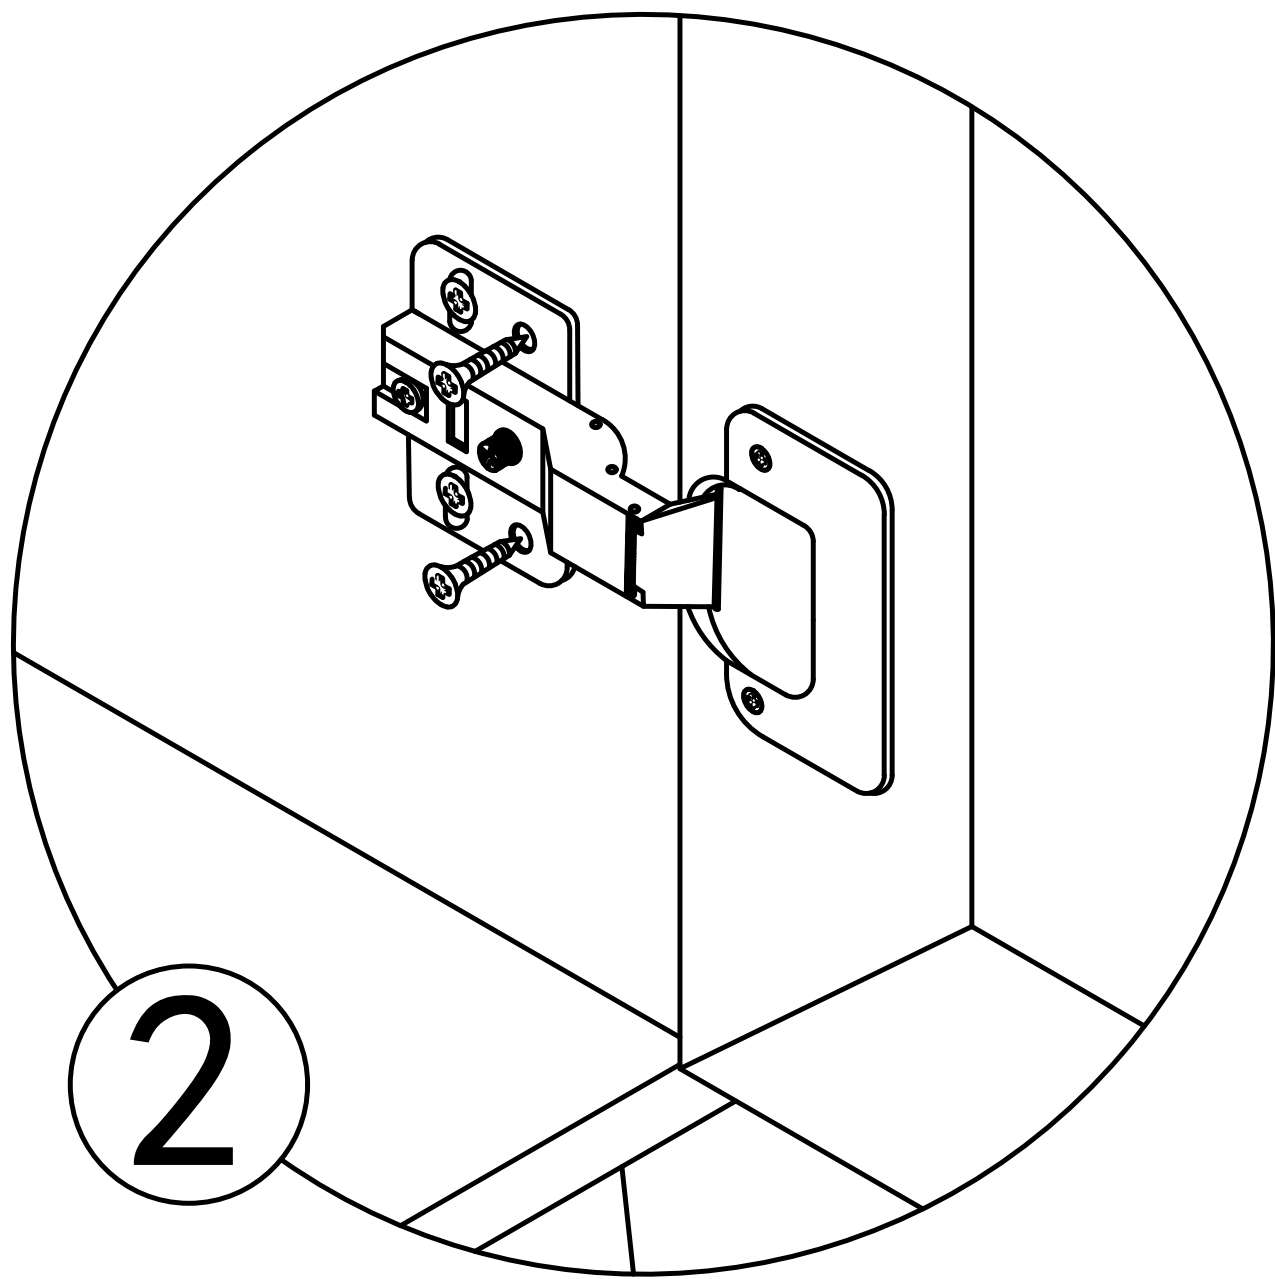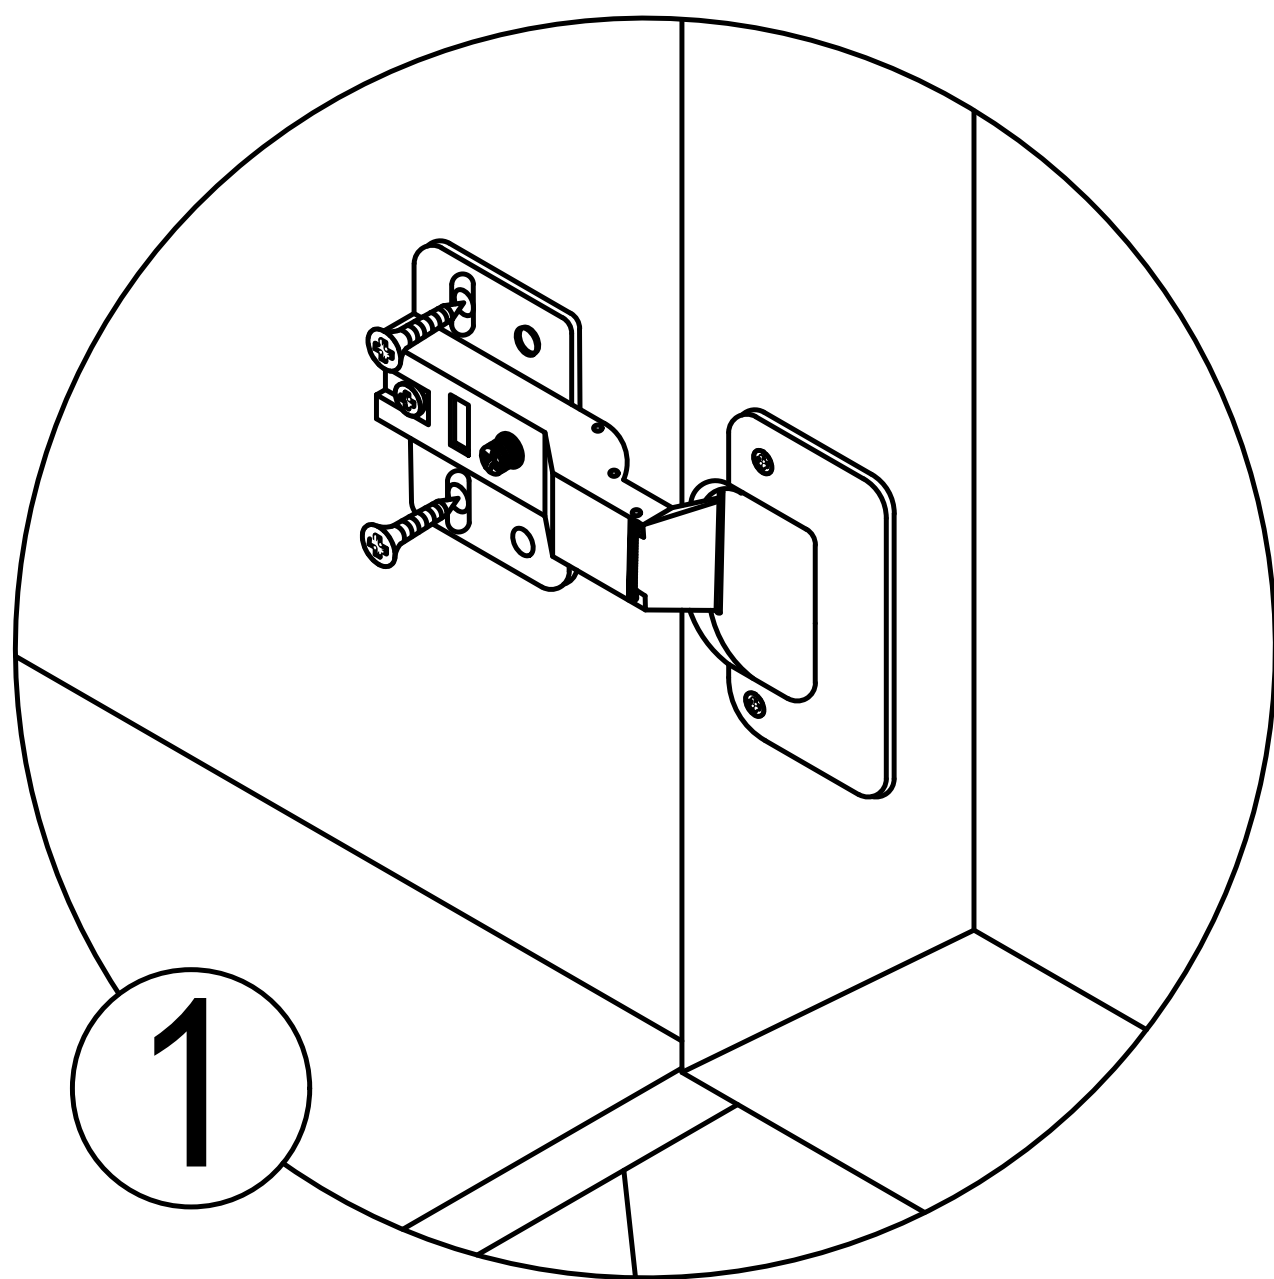


First lock the elliptical hole
then lock the fixed hole

Step 43

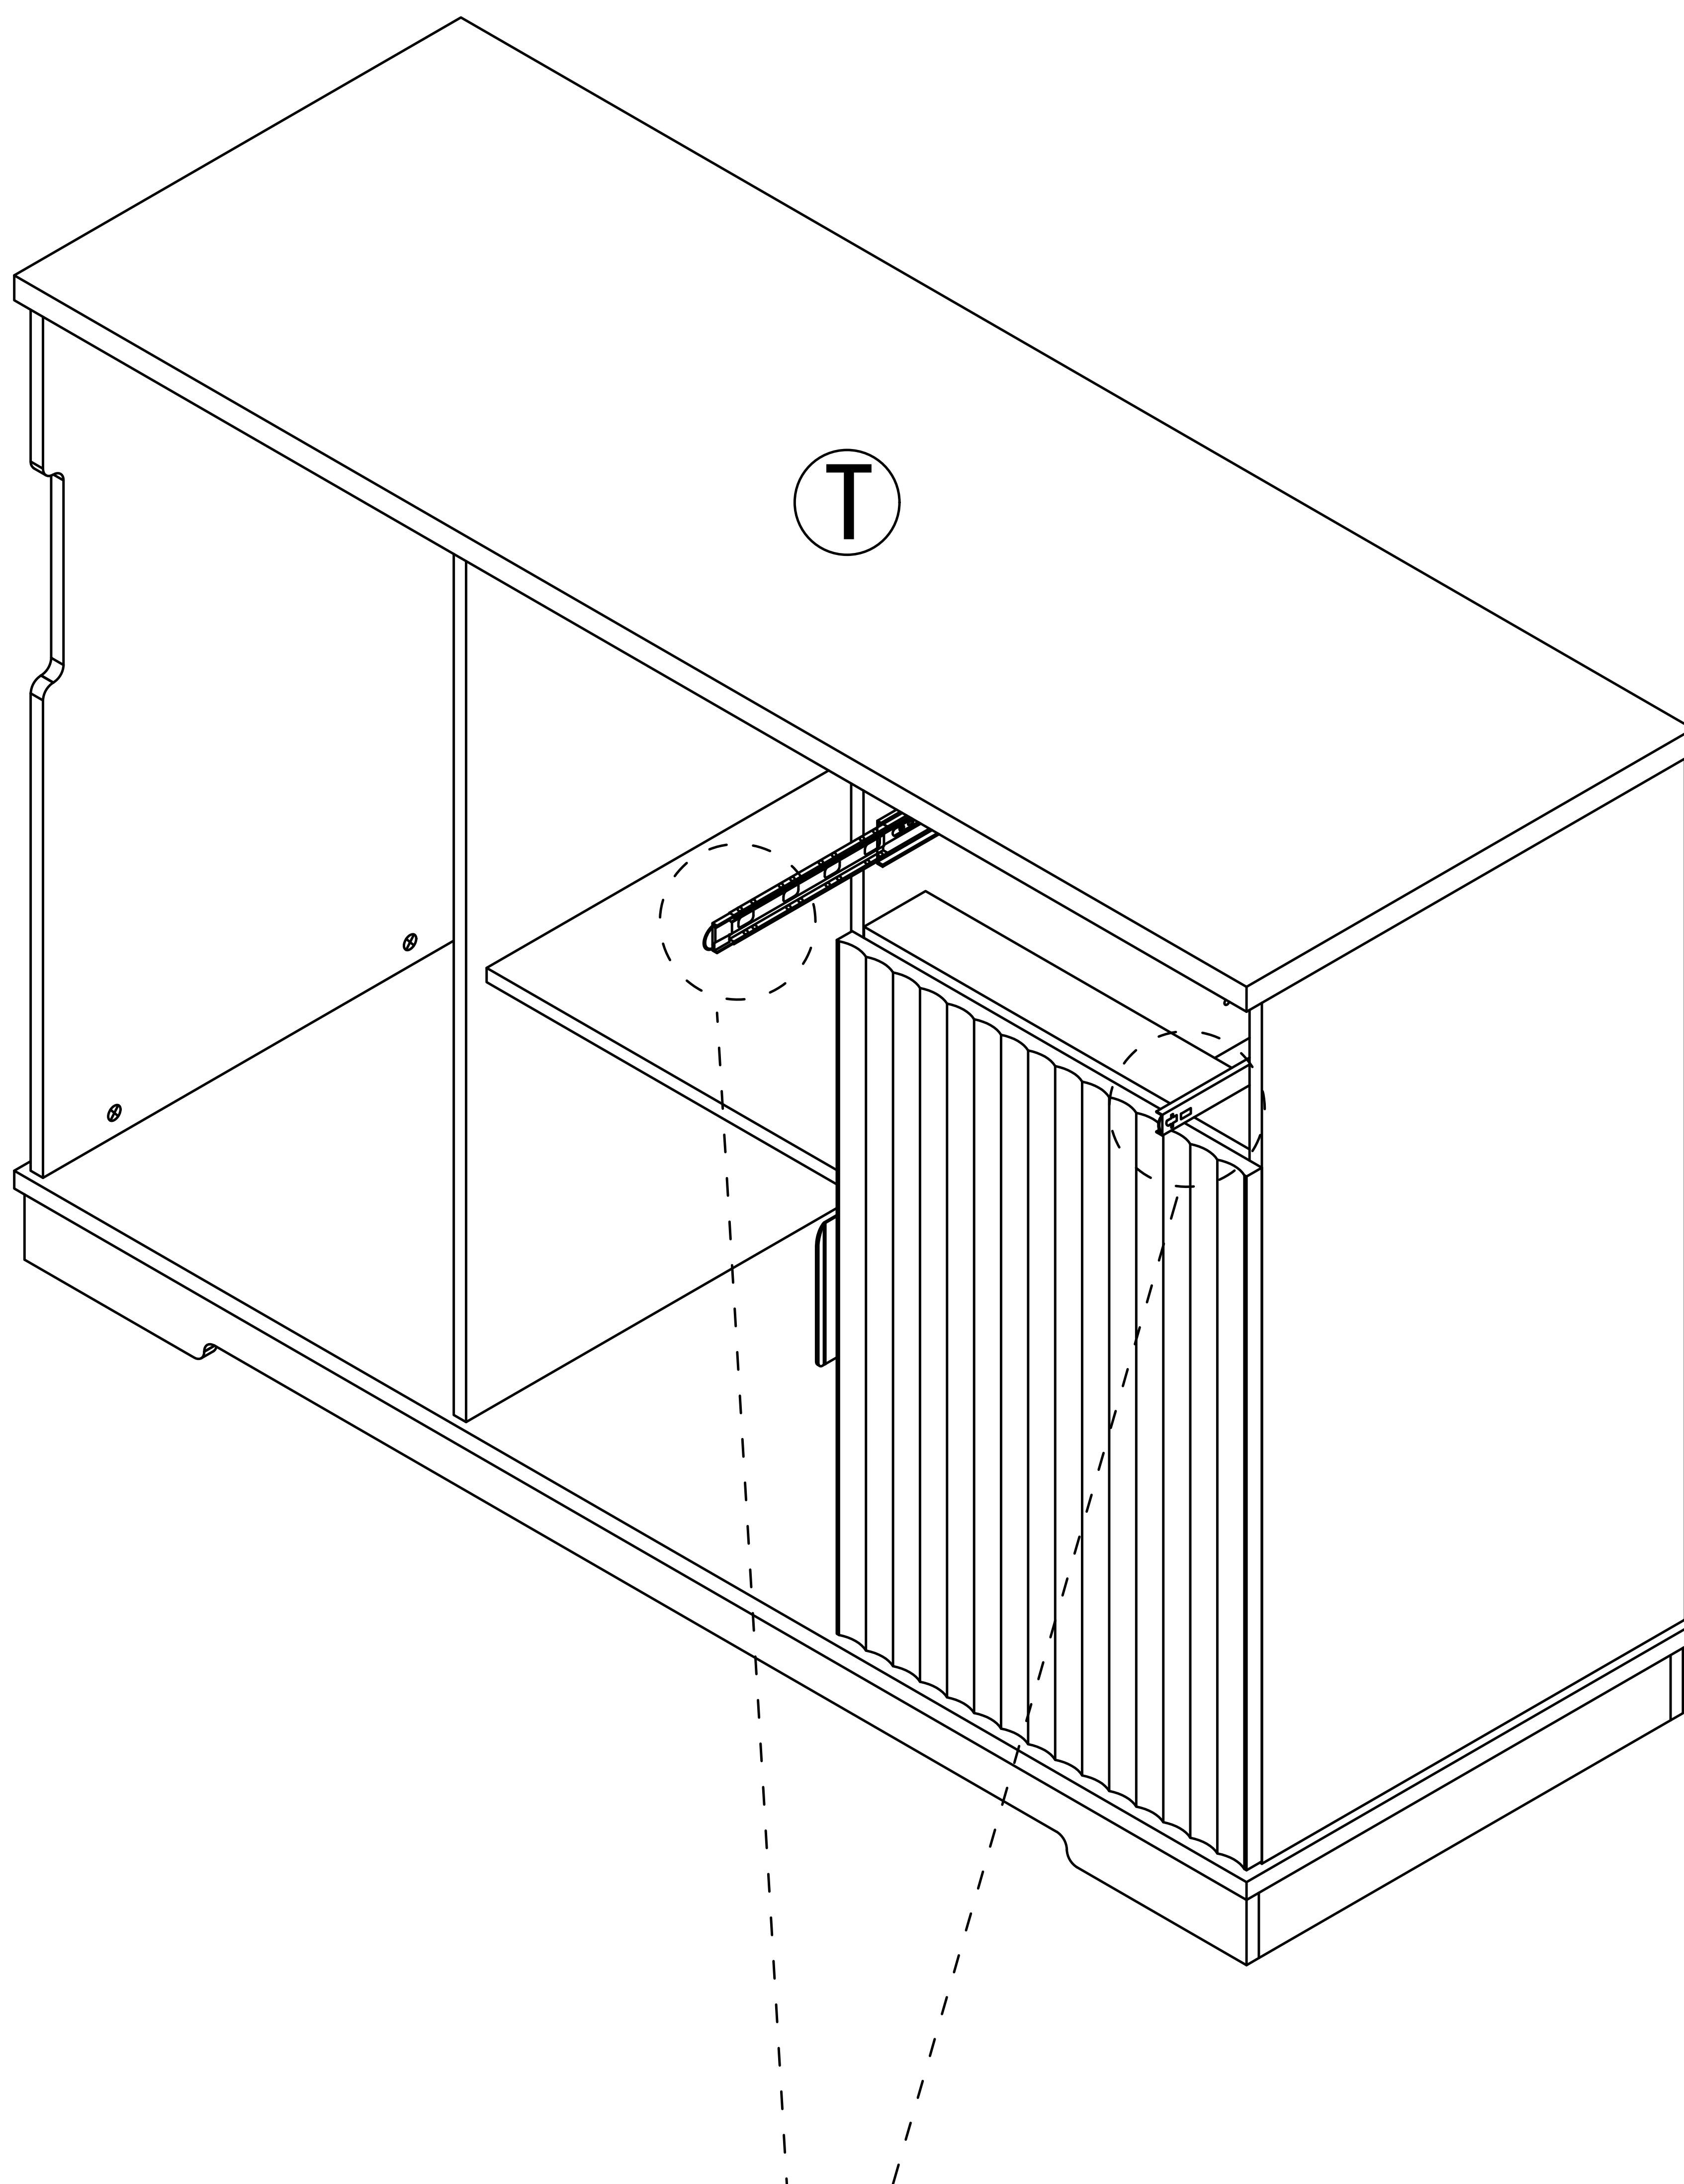


As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.

Step 44

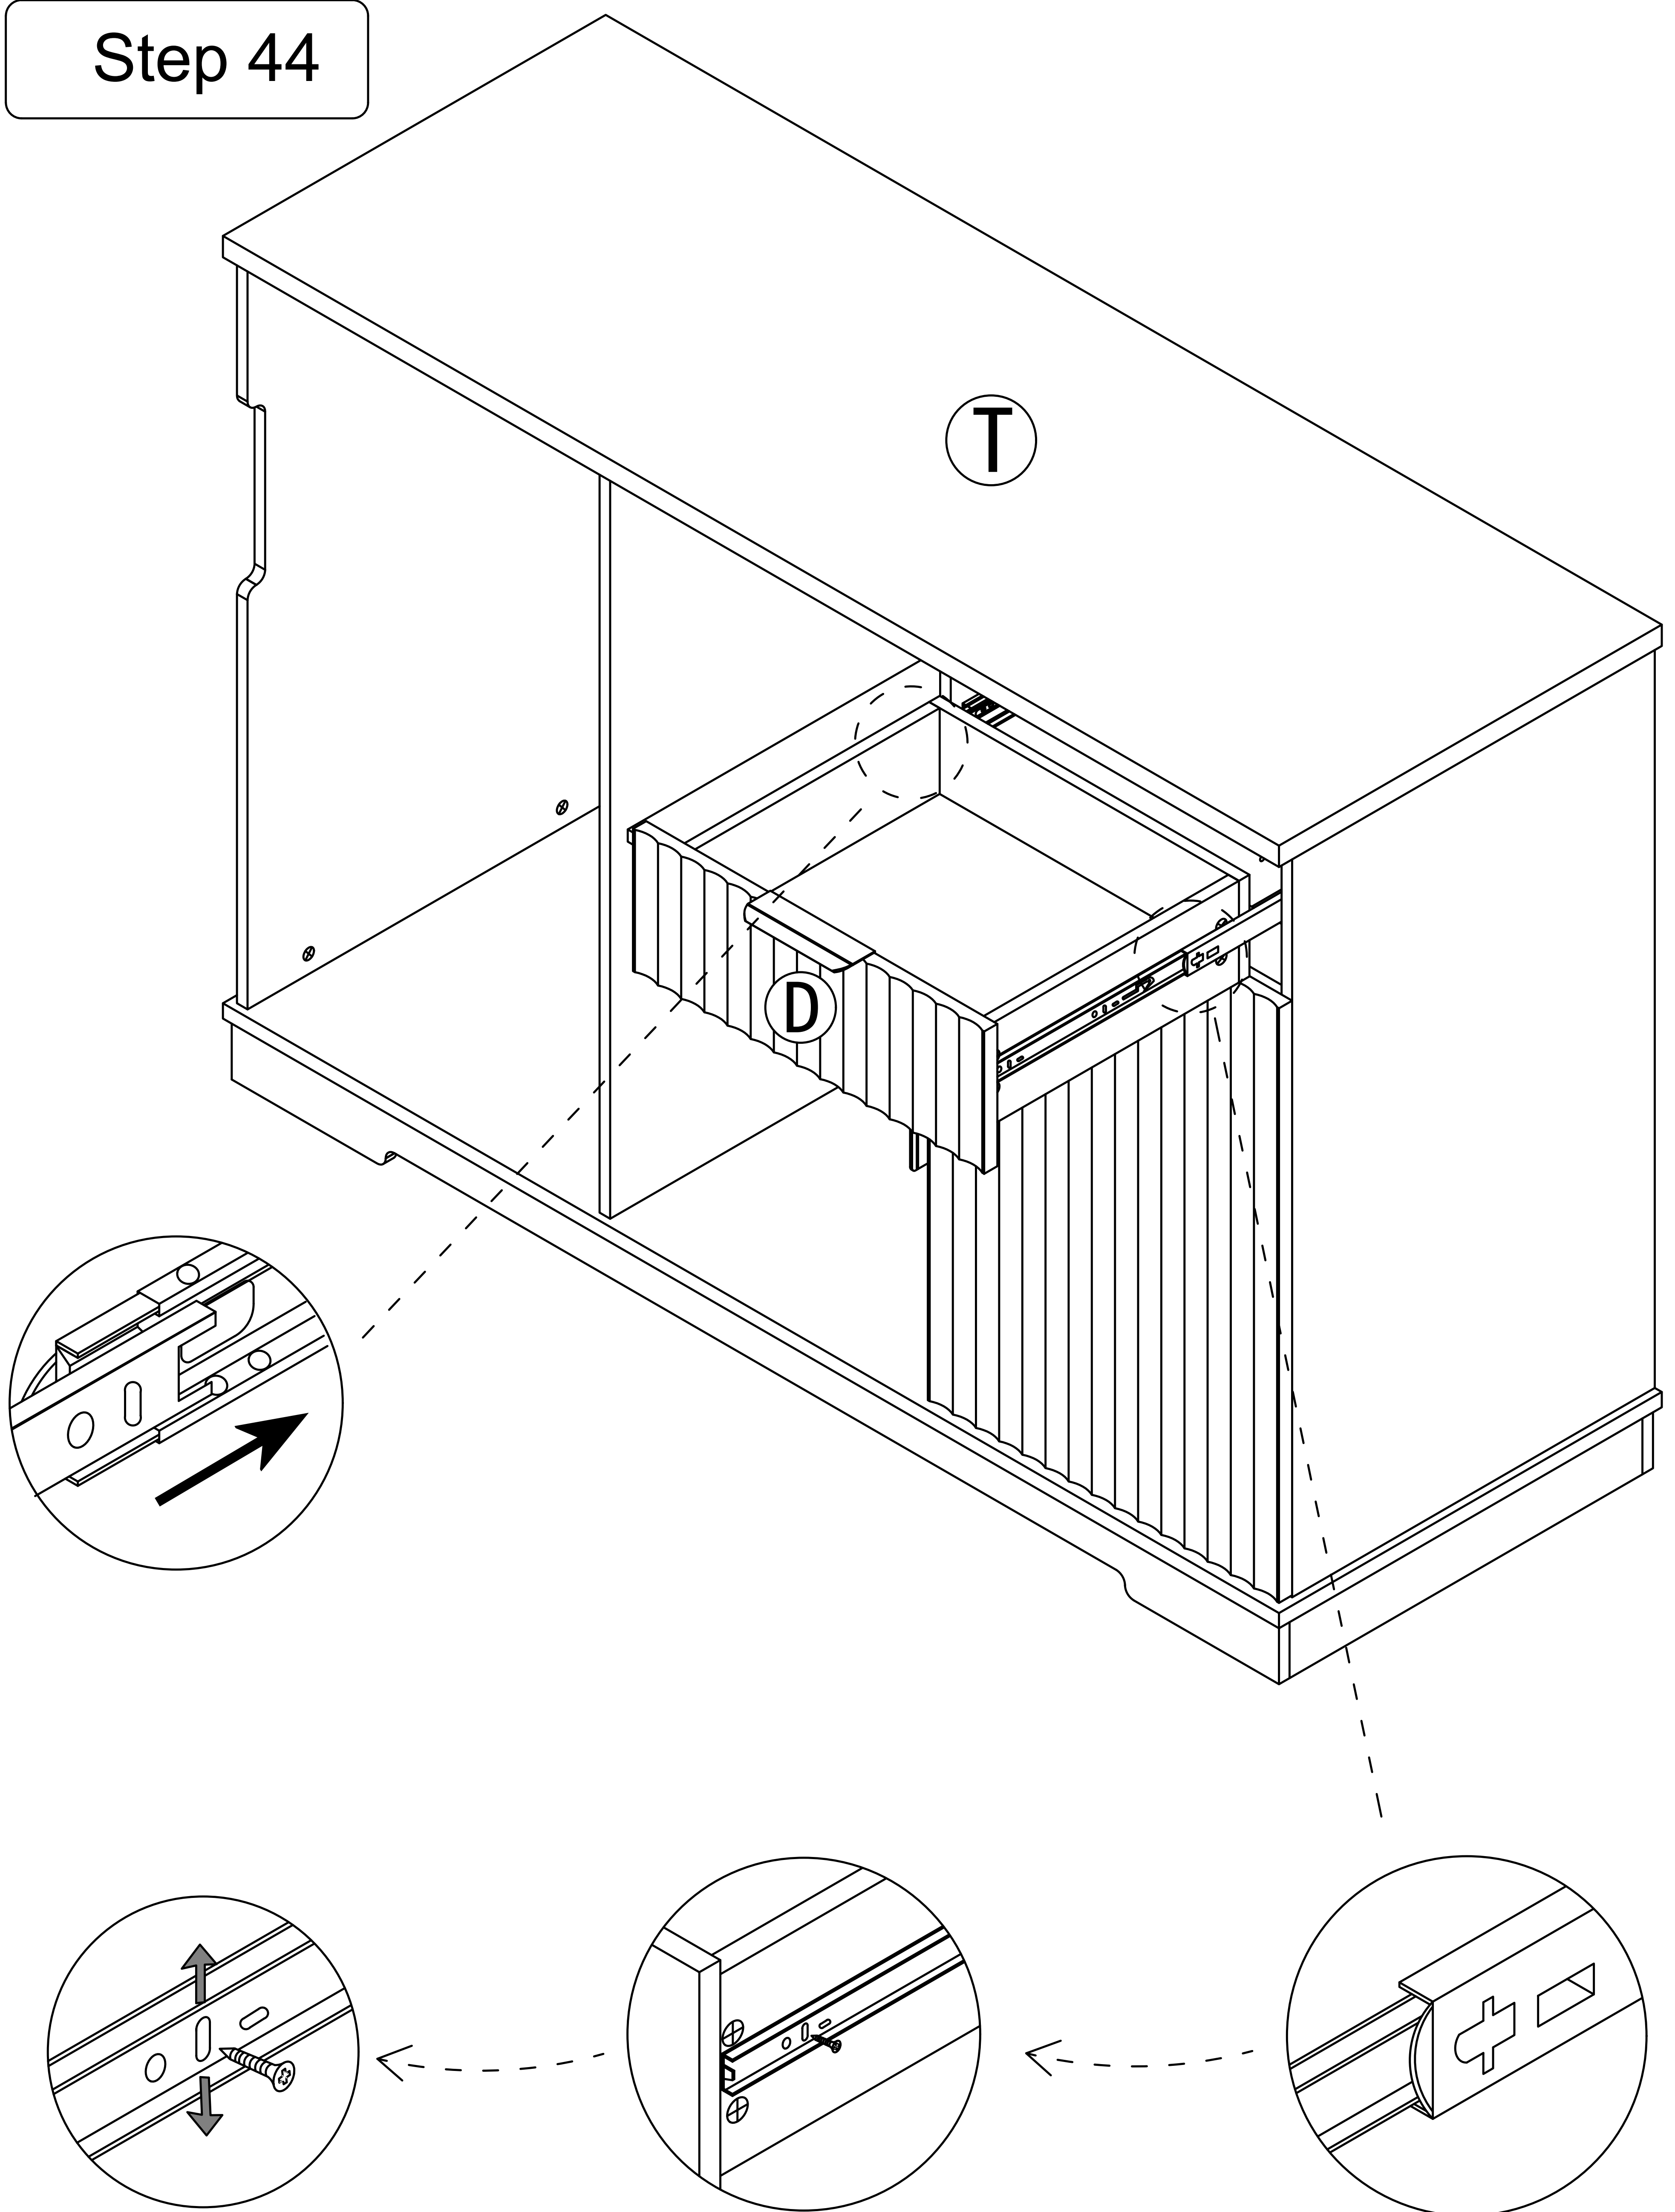


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap


Step 45

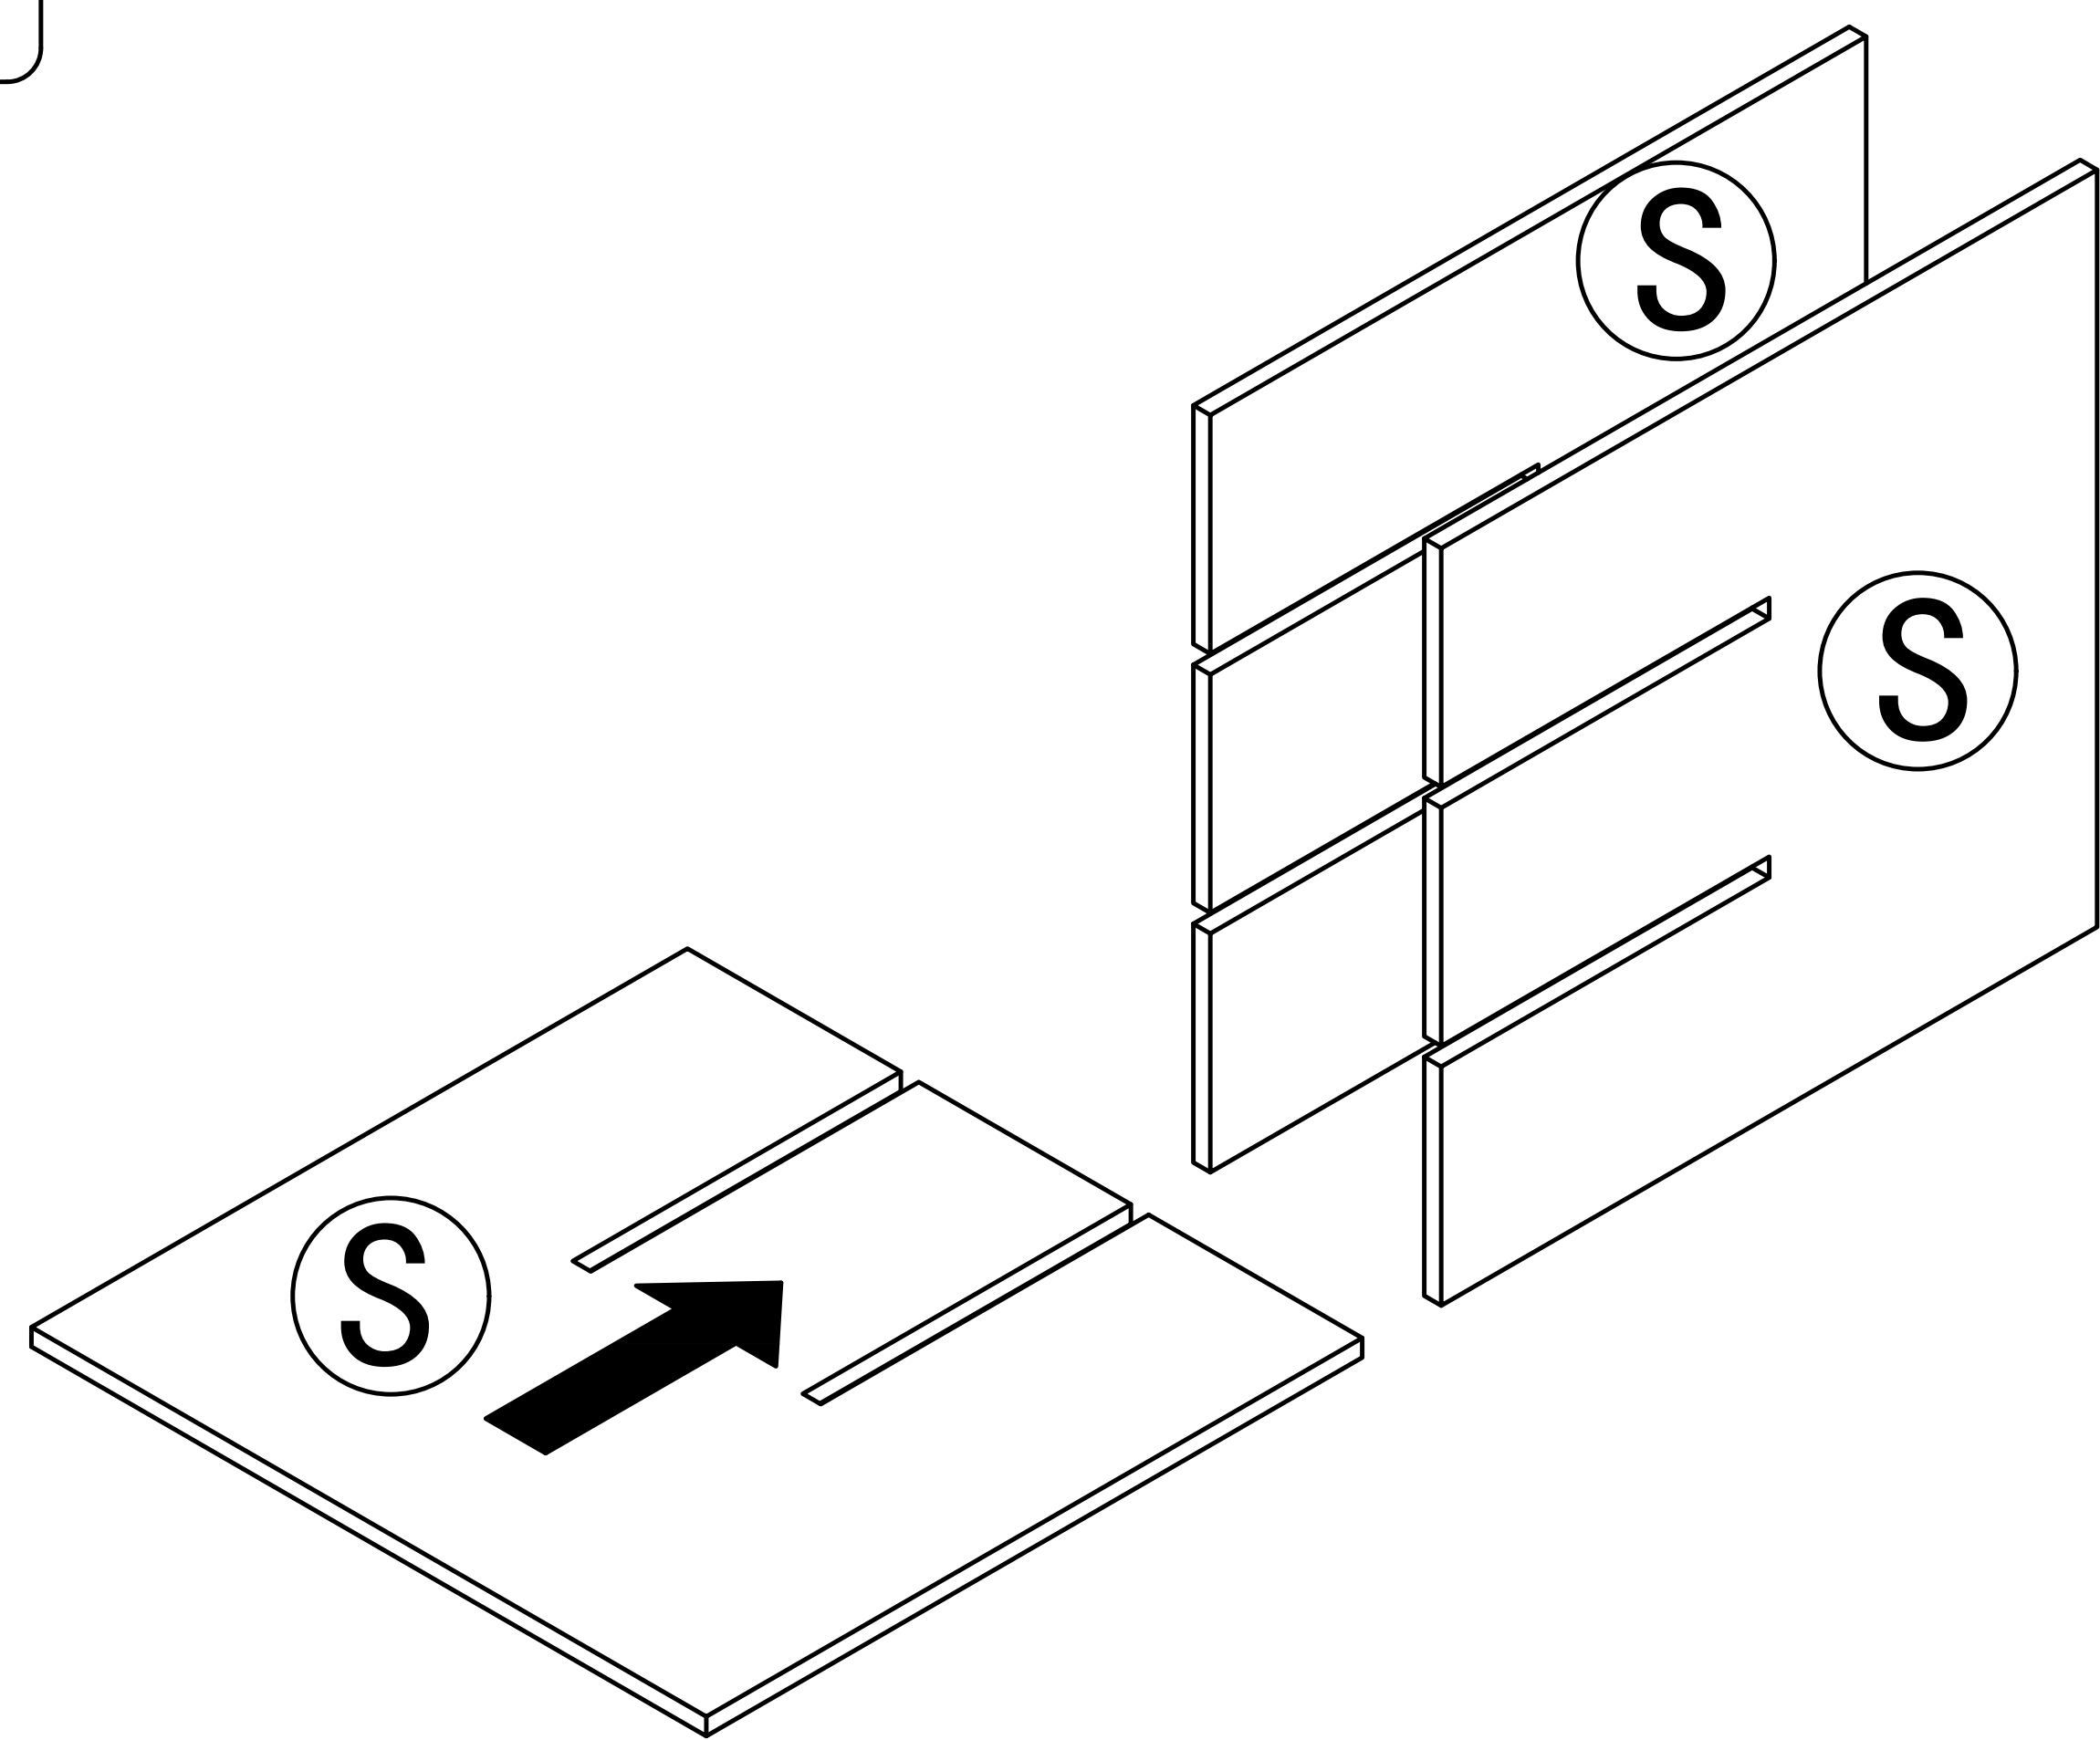

Step 46

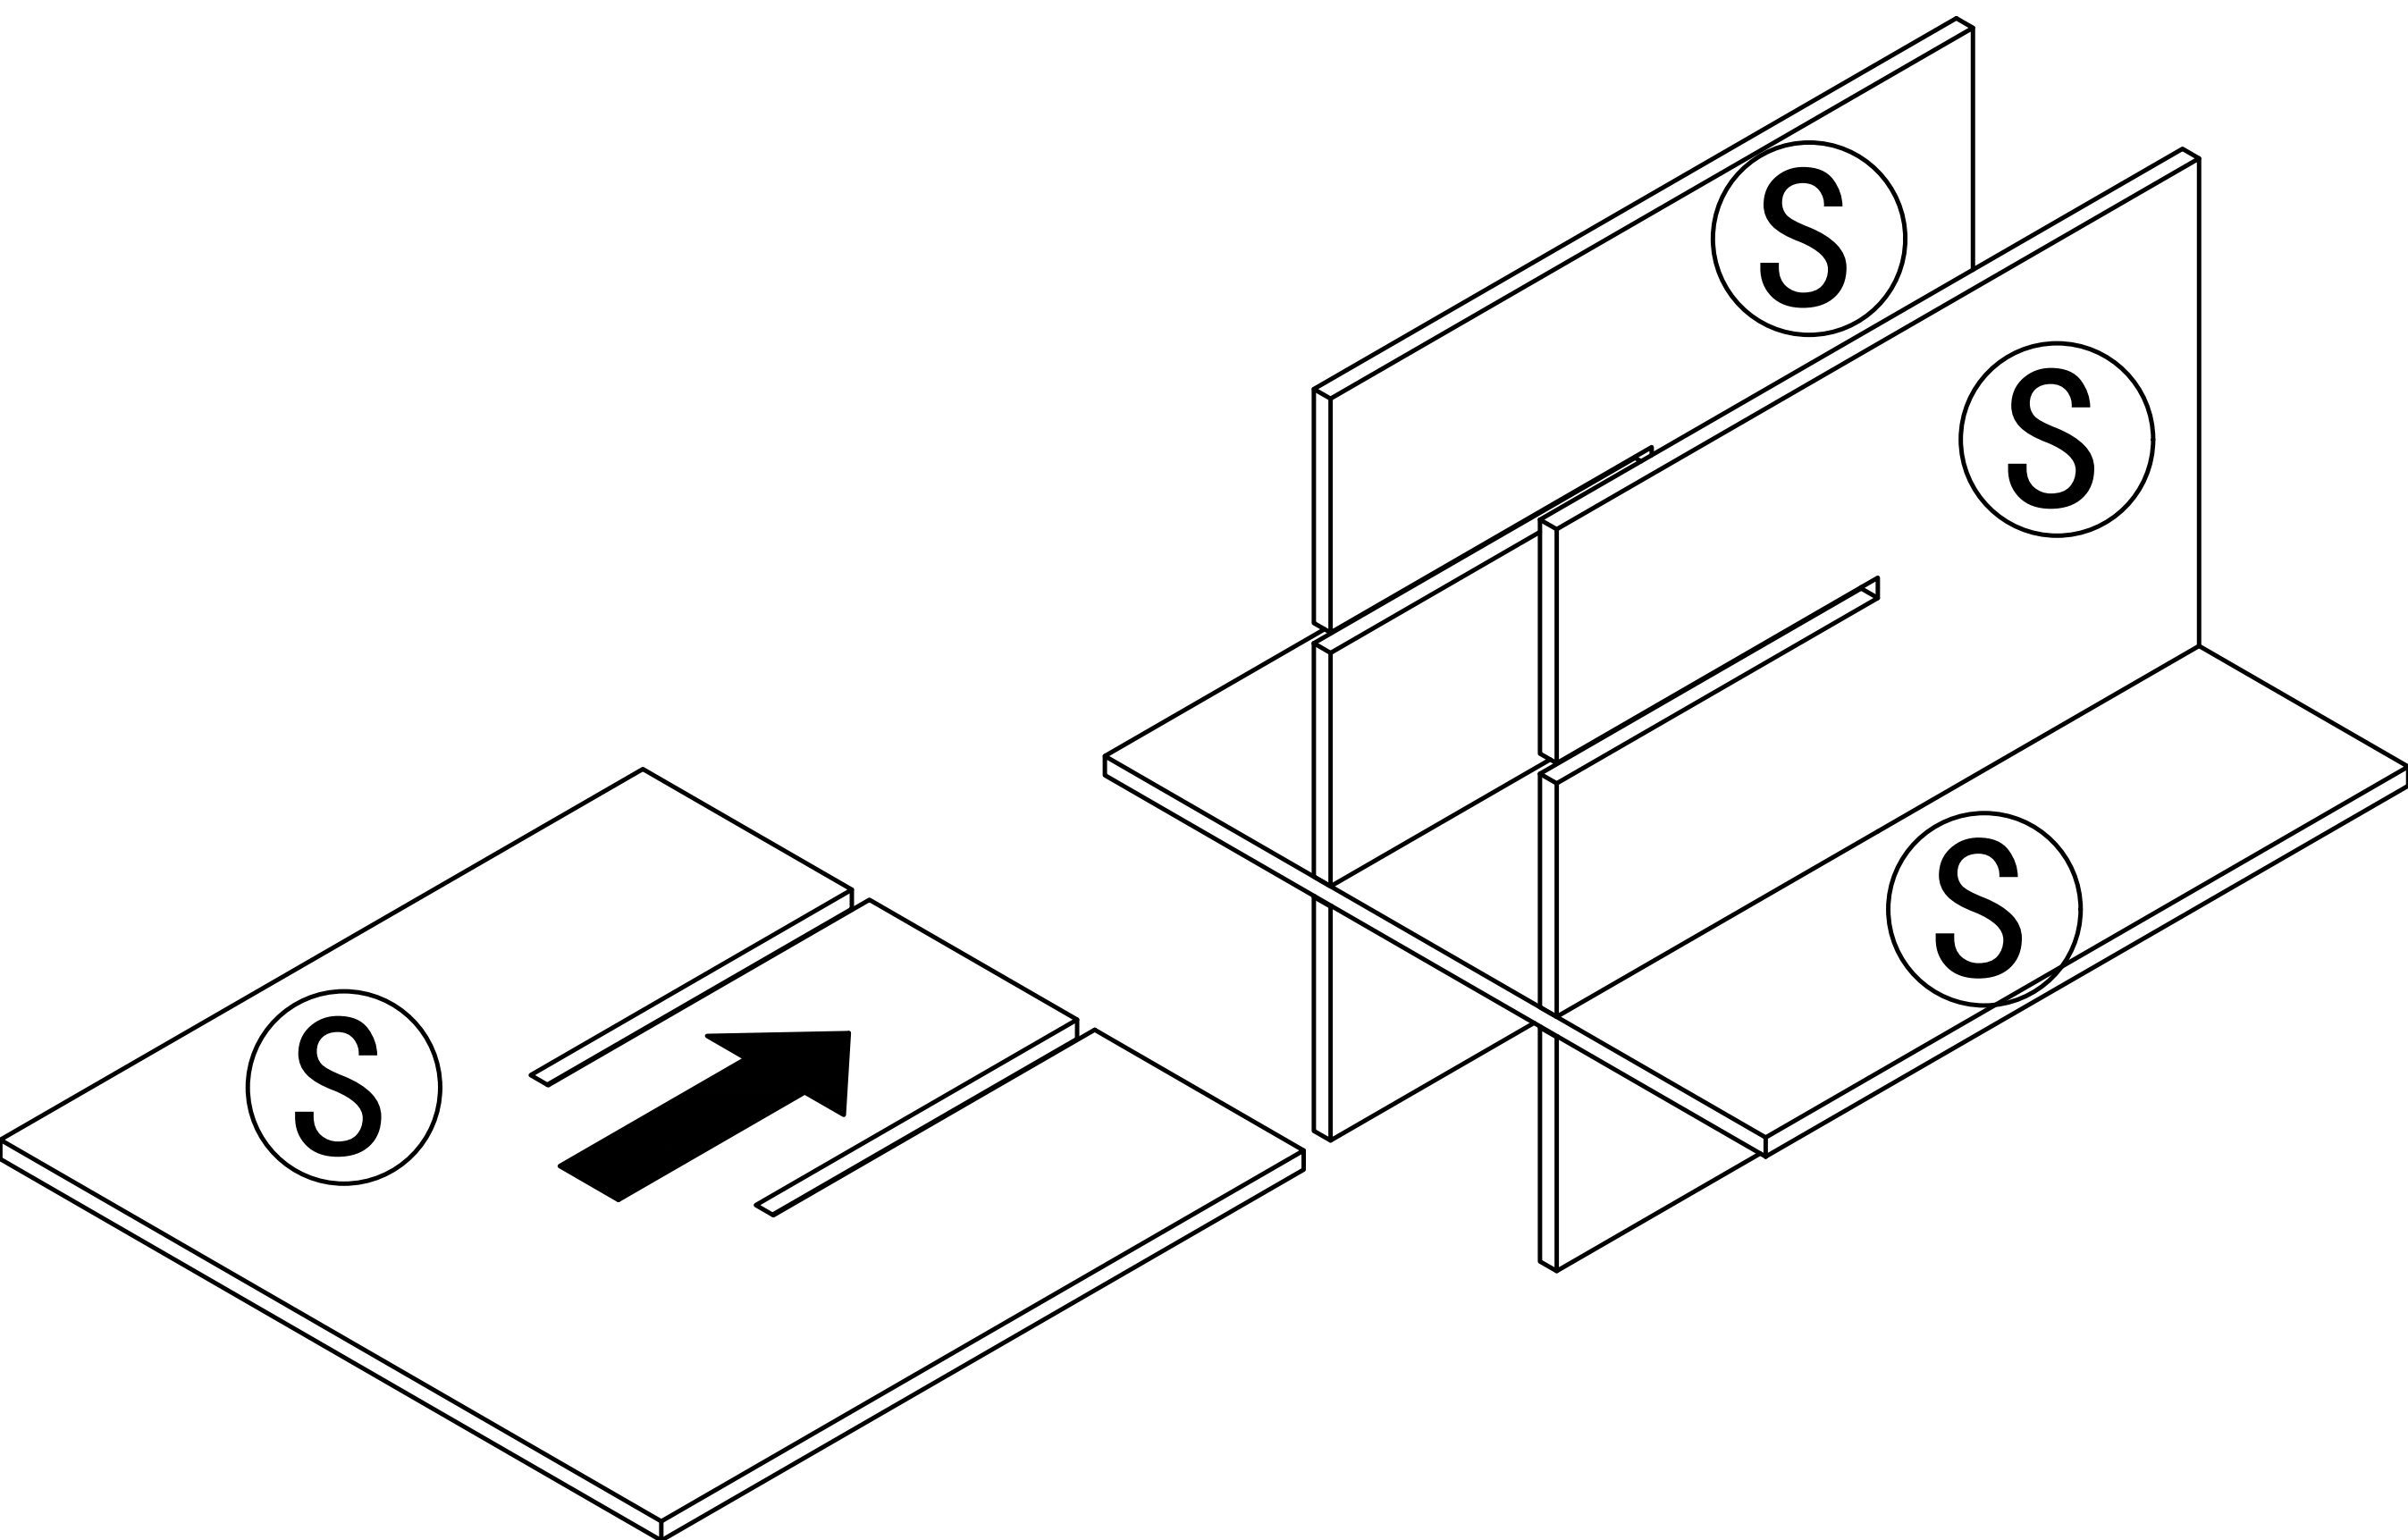


Step 47

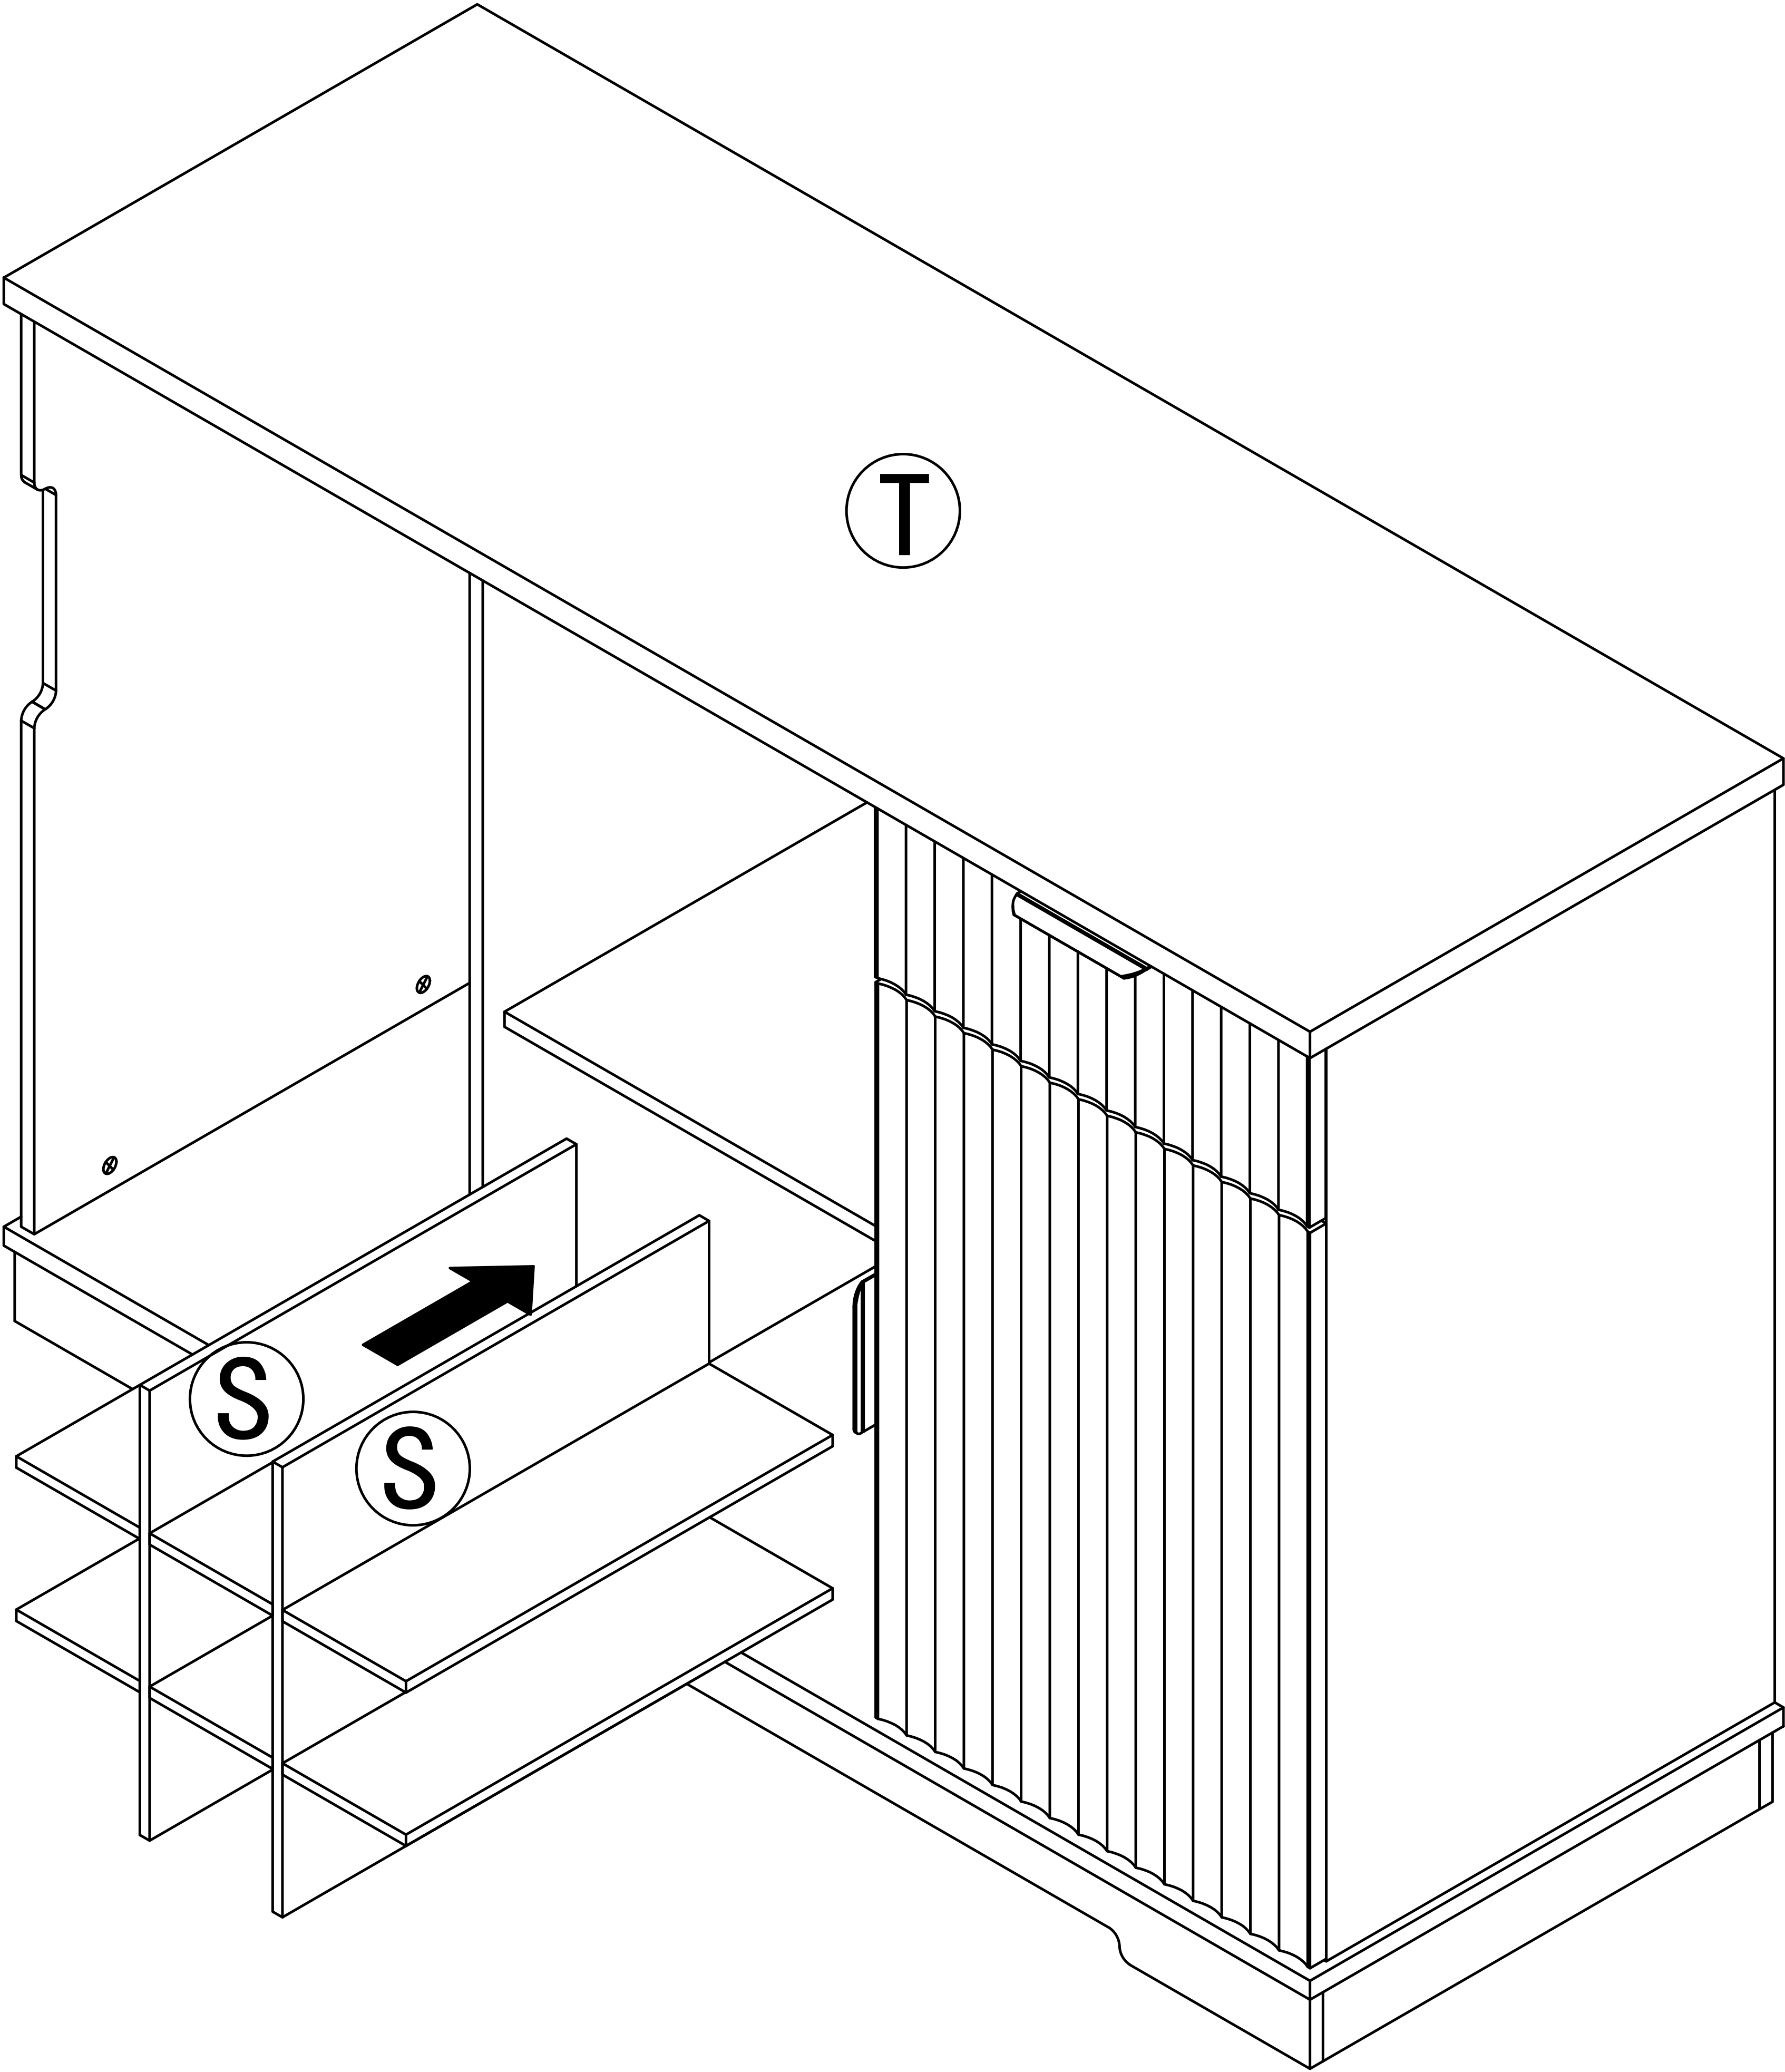

Step 48

11

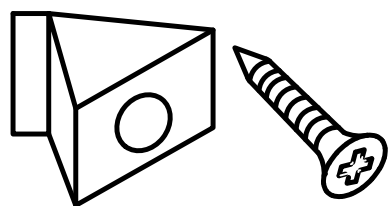

x12

