
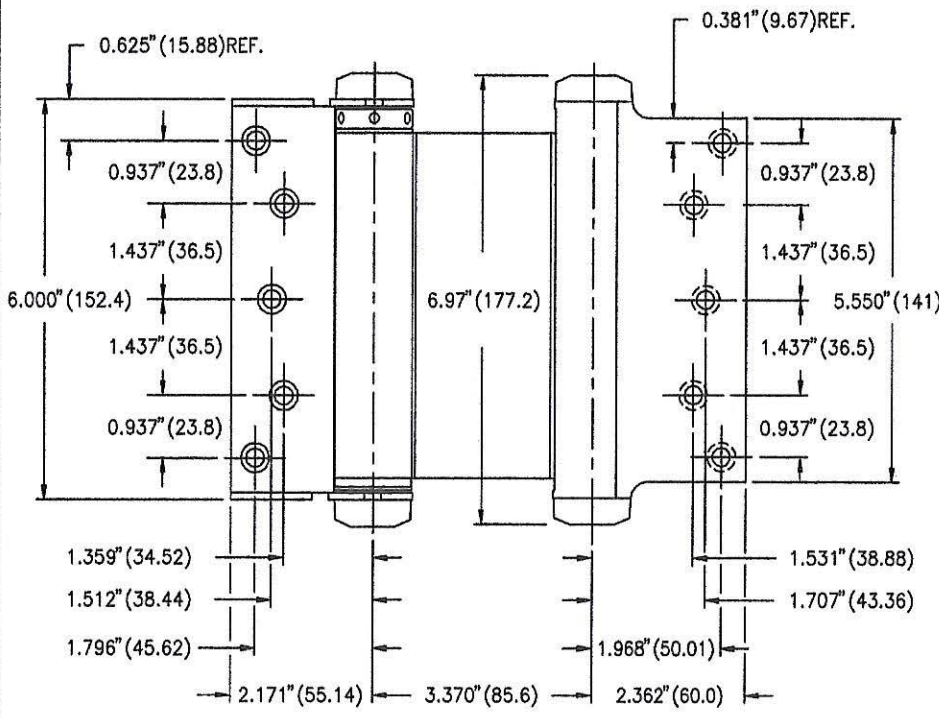
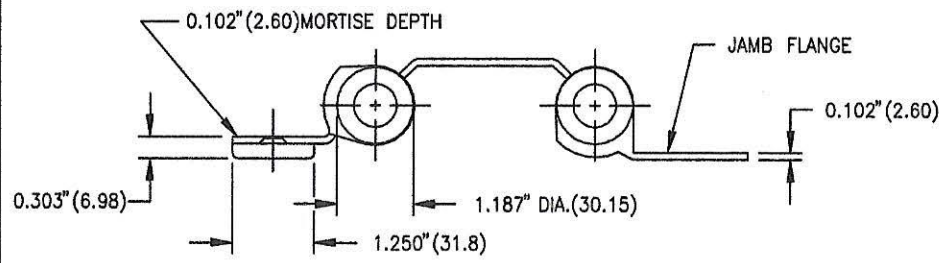
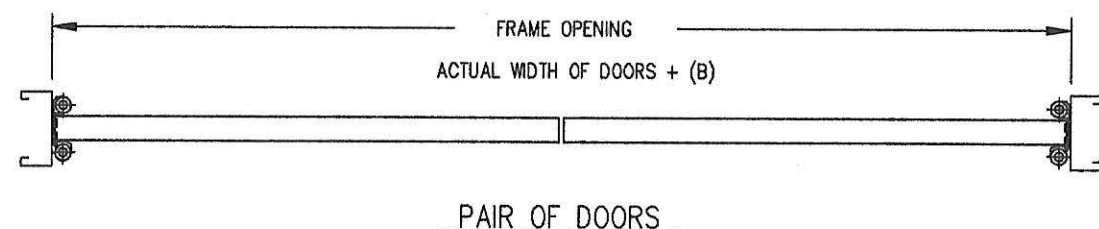
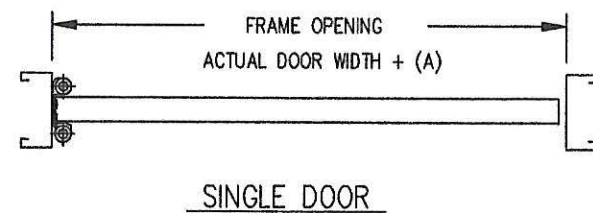


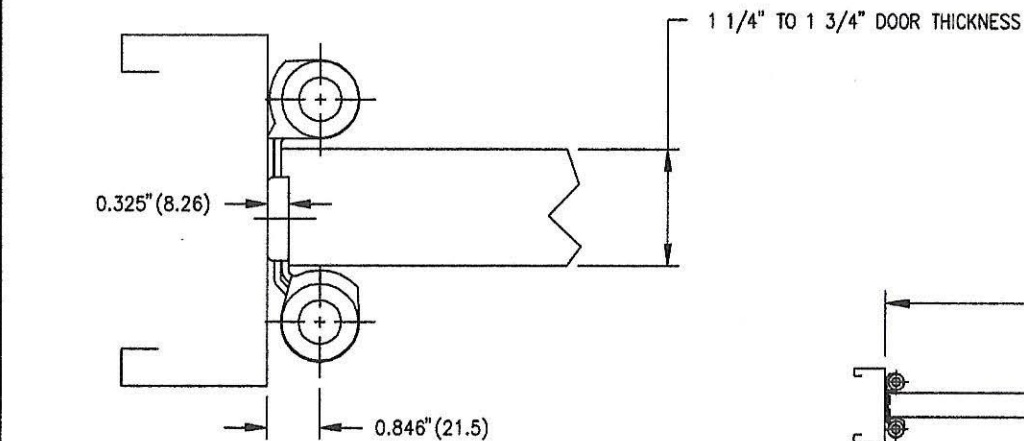

THIS IS A CAD DRAWING...
DO NOT REVISE MANUALLY.

VERIFY THAT DRAWING IS CURRENT PRIOR TO USING

FRAME SIZING INFORMATION

HINGE MOUNTING	(A)	(B)
DOOR FLANGE NOT MORTISED	1/2"	1 1/32" (REF.)
DOOR FLANGE MORTISED	7/16"	13/16" (REF.)

---NOTES---

- (1) DO NOT USE ON DOORS WITH HINGE EDGE BEVELED.
- (2) INVERT HINGES ON ONE DOOR OF A PAIR FOR PROPER CENTERING.
- (3) DIMENSIONS IN PARENTHESES ARE MILLIMETERS.
- (4) WOOD SCREW 10 X 1 1/4".

DRAWN BY : WU	DATE	SCALE	DRAWING NUMBER
APPROVED BY :	10 JUL 07	NONE	070123-070-6T
PLOT DATE : 10 JUL 07			