





# ASSEMBLY INSTRUCTIONS

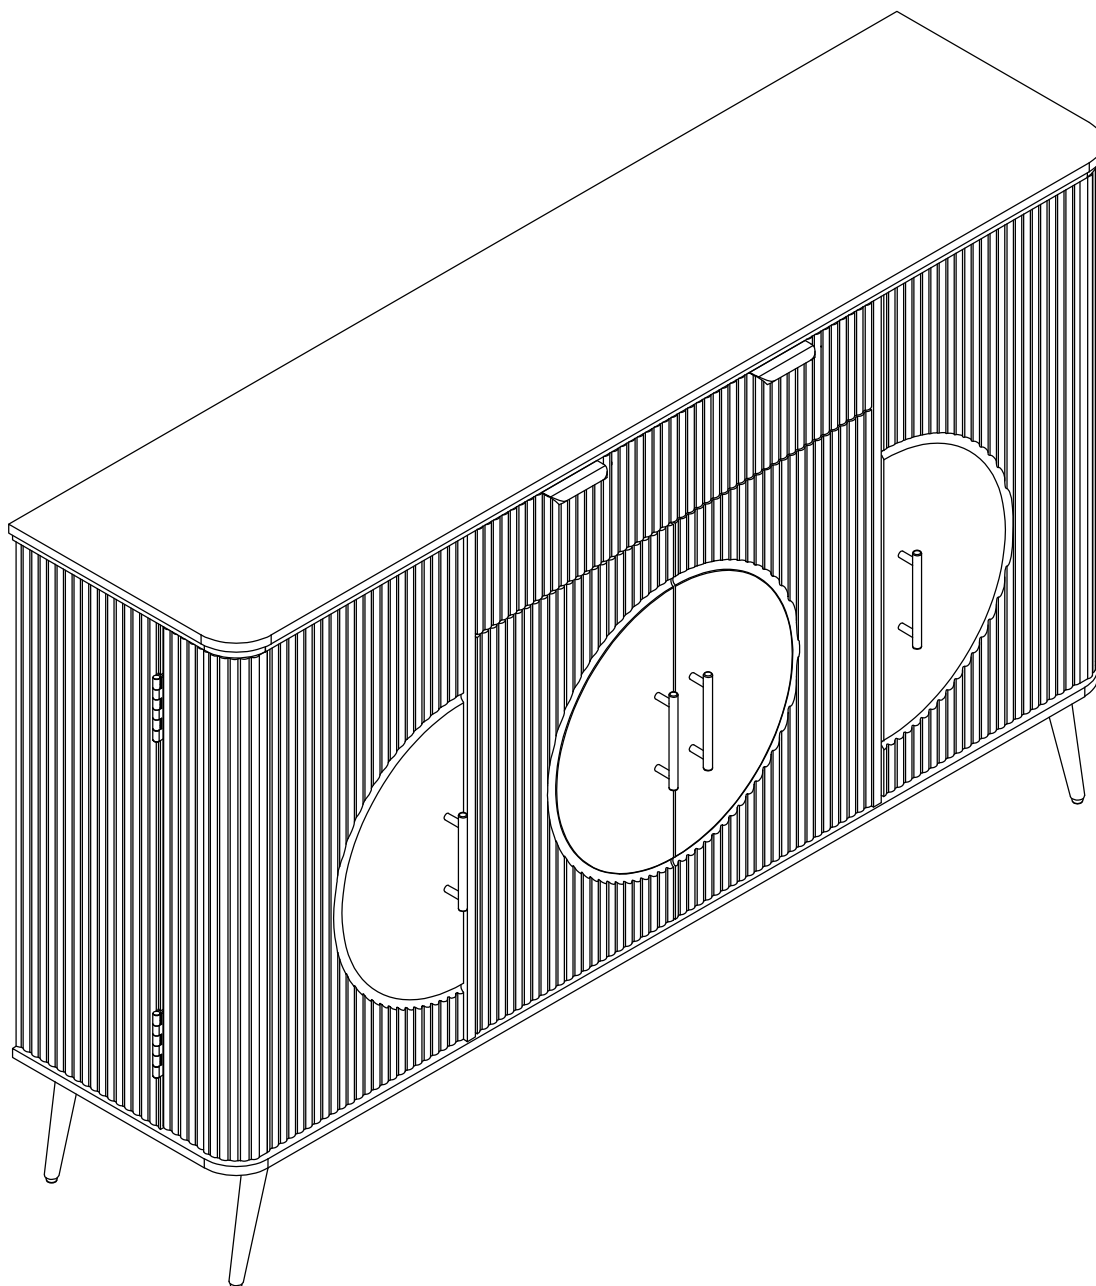

SAFETY TIPS: Static charge may cause dust on foam – clean with a dry or damp cloth. Small foam strands may be present – handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guidelines.

## Before You Start

1. Read through each step carefully and follow the proper order.
2. Separate and count all your parts and hardware.
3. Give yourself enough room for the assembly process.
4. Assemble this product on the empty carton or carpet to avoid scratching.
5. Two people are recommended for ease in the assembly of this product.
6. Keep all small parts of this product away from children. They may cause serious injury.
7. Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer.

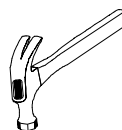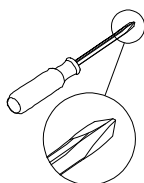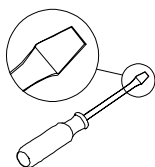


8. Note: Power tools should not be recommended to assemble this product. If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when the screw is tight. Failure to do so may result in stripping the screw.


---

### HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS




1. Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure the Cam Bolt goes into the pre-drilled hole on the end of the panel for the Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of the Cam Lock points towards the Cam Bolt.
3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
4. Use the sticker to conceal the Cam.

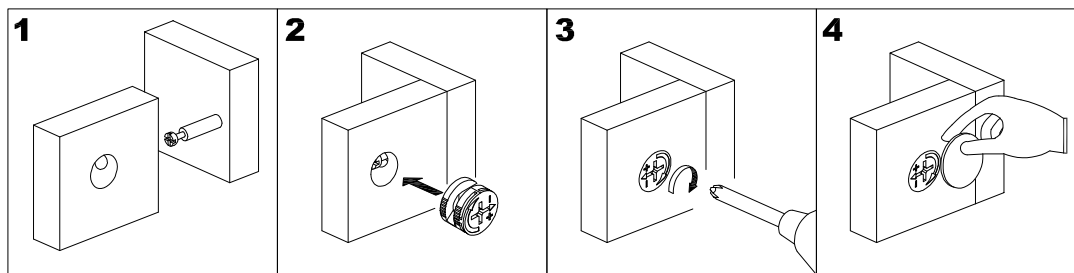




# PARTS LIST

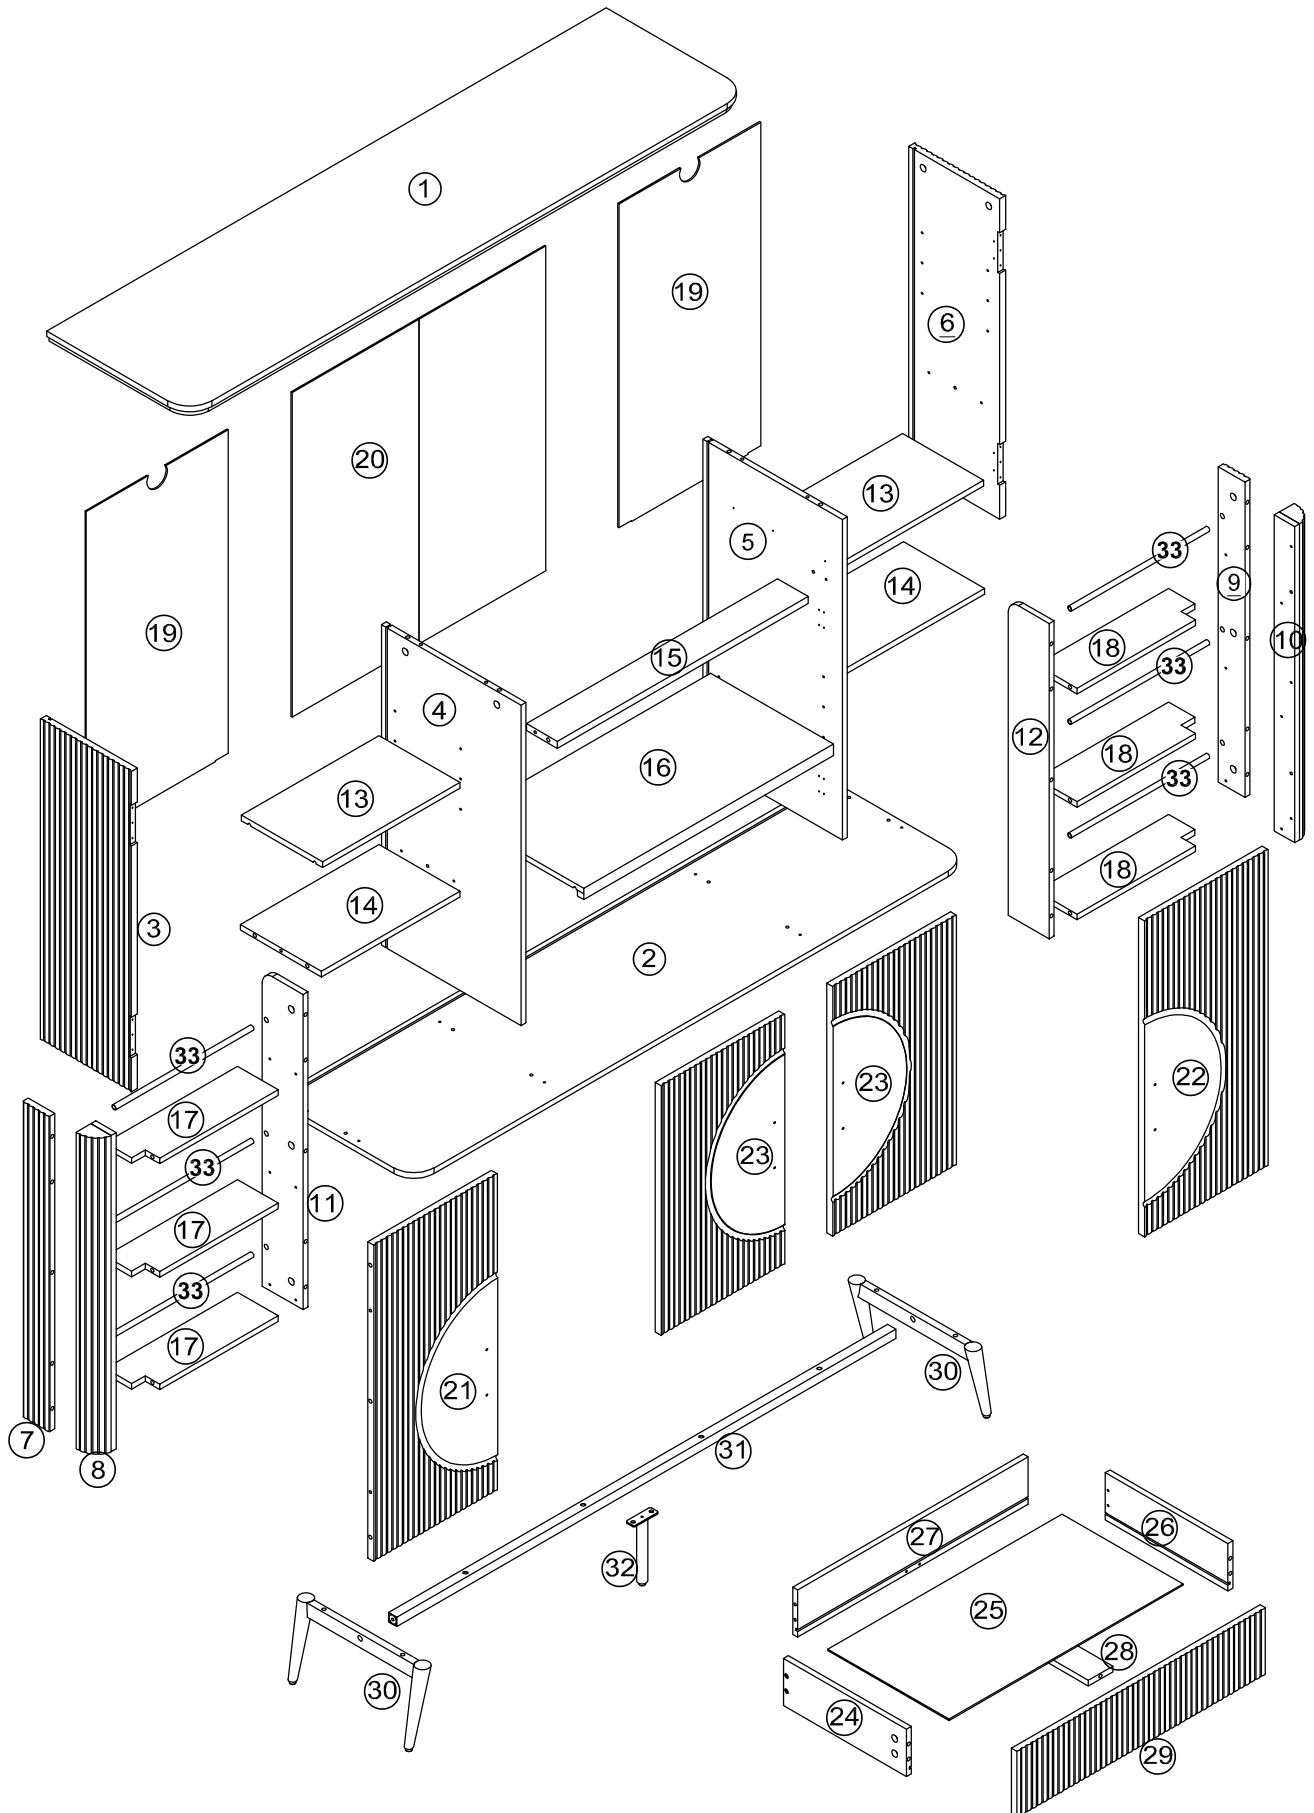


# HARDWARE LIST

|   |                                                                                     |           |                    |        |
|---|-------------------------------------------------------------------------------------|-----------|--------------------|--------|
| A |    | Ø6x35mm   | Cam bolt           | 65 pcs |
| B |    | Ø15x9.5mm | Cam lock           | 65 pcs |
| C |    | Ø20mm     | Cam cover          | 65 pcs |
| D |    | Ø6x30mm   | Wooden dowel       | 34 pcs |
| E |    |           | Glue tube          | 1 pc   |
| F |    | Ø35mm     | Europe Hinge       | 4 pcs  |
| G |    | M6x28mm   | Bolt               | 4 pcs  |
| H |    |           | Plastic wedge      | 22 pcs |
| I |    | Ø3x15mm   | Flat-head screw    | 22 pcs |
| J |  | Ø3.5x12mm | Screw              | 18 pcs |
| K |  |           | Handle             | 4 pcs  |
| L |  | Ø4x22mm   | Handle bolt        | 8 pcs  |
| M |  | Ø3.5x14mm | Europe hinge screw | 24 pcs |
| N |  | Ø4x38mm   | Screw              | 6 pcs  |
| O |  | M6x13mm   | Bolt               | 2 pcs  |
| P |  | Ø5x45mm   | Screw              | 8 pcs  |
| Q |  | Ø5x16mm   | Shelf support      | 12 pcs |
| T |  |           | Tipping restraint  | 2 pcs  |

# HARDWARE LIST

|    |                                                                                     |           |                      |        |
|----|-------------------------------------------------------------------------------------|-----------|----------------------|--------|
| U  |    | Ø3.5x14mm | Screw                | 32 pcs |
| V  |    |           | Hinge                | 4 pcs  |
| W  |    |           | Pull                 | 2 pcs  |
| X  |    | 30x20mm   | Metal plate          | 2 pcs  |
| Y  |    |           | Magnetic catch       | 2 pcs  |
| Z  |    | Ø3x15mm   | Screw                | 4 pcs  |
| AA |    | M6x38mm   | Bolt                 | 6 pcs  |
| BB |   | 12"       | Left cabinet member  | 1 pc   |
| CC |  | 12"       | Right cabinet member | 1 pc   |
| DD |  | 12"       | Left drawer runner   | 1 pc   |
| EE |  | 12"       | Right drawer runner  | 1 pc   |
| FF |  | M 4       | Hex key              | 1 pc   |

# STEP 1




Ax3




Jx3



CCx1

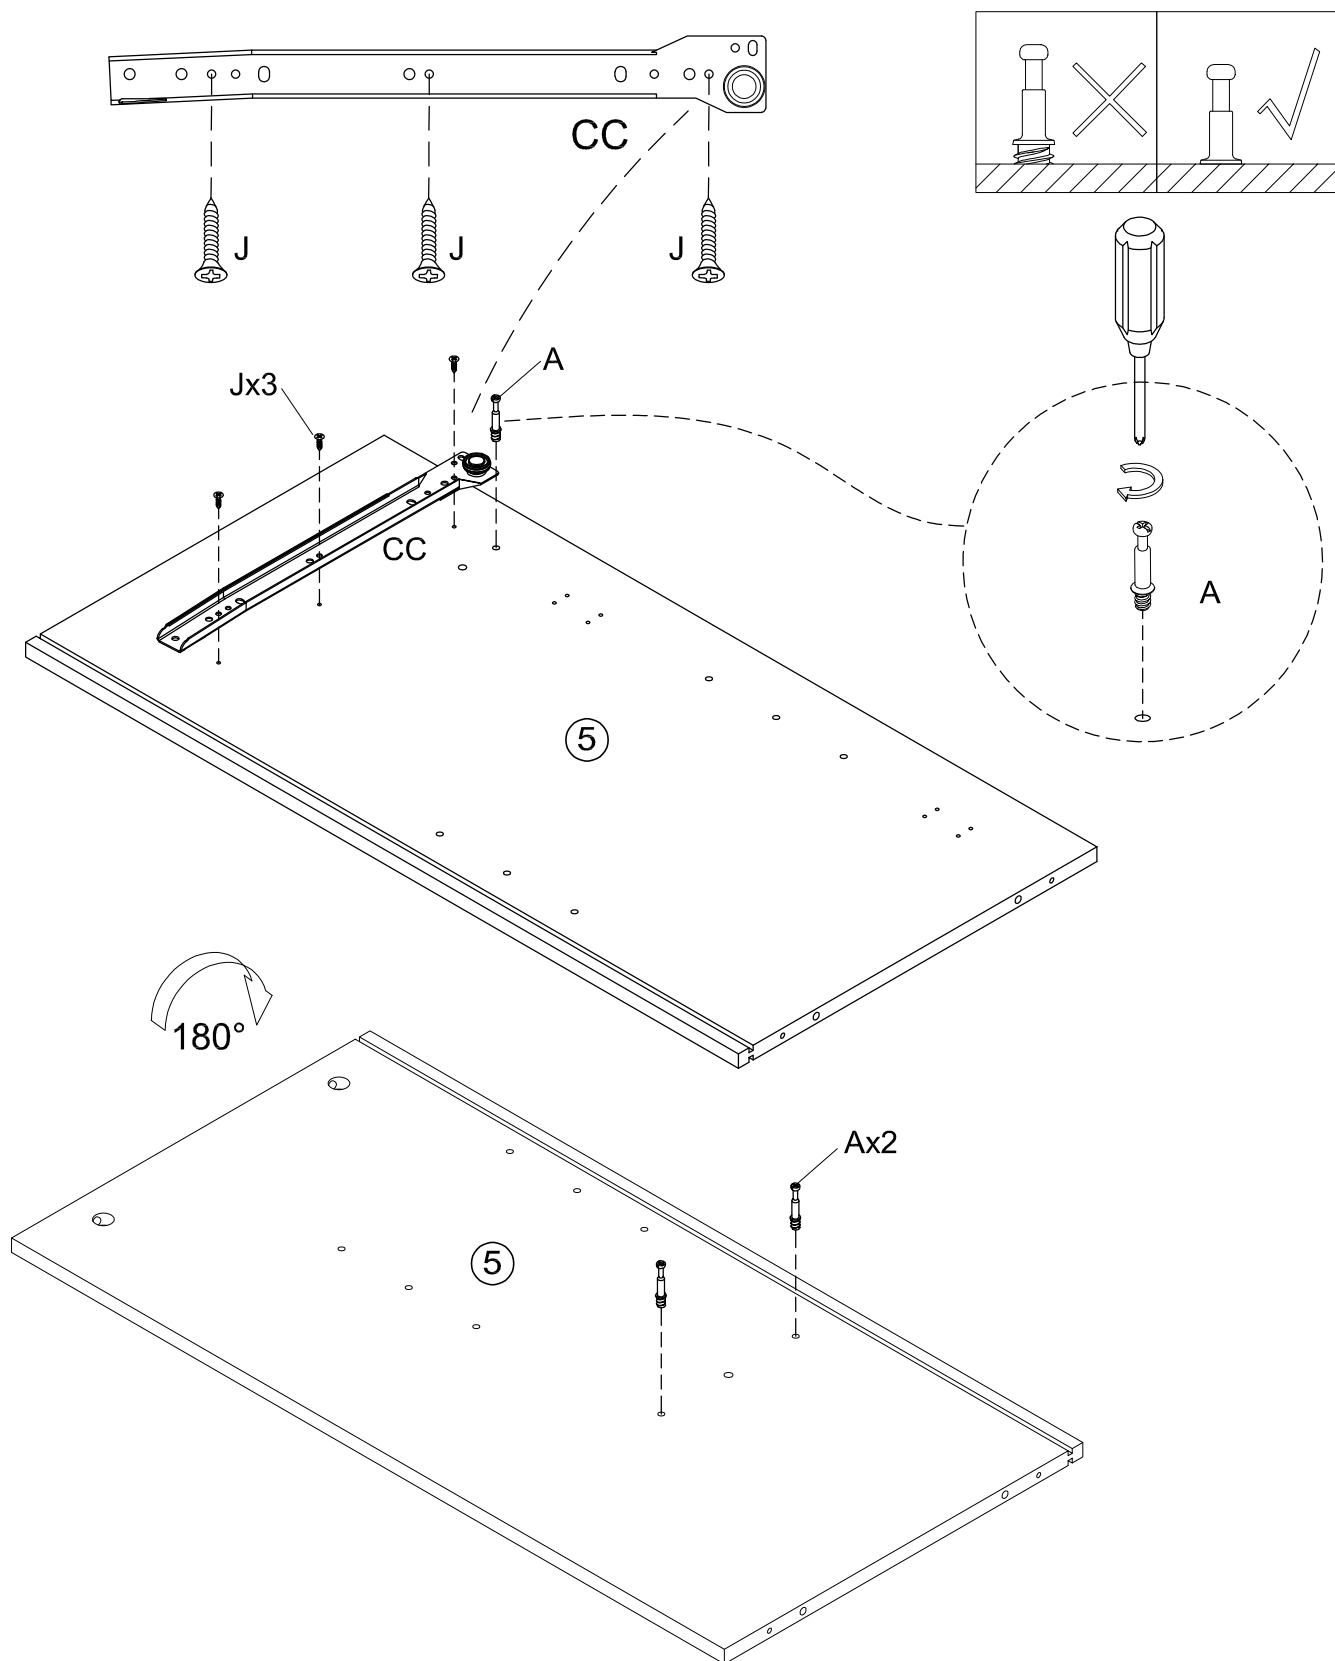

## STEP 2




Ax3




Jx3





BBx1

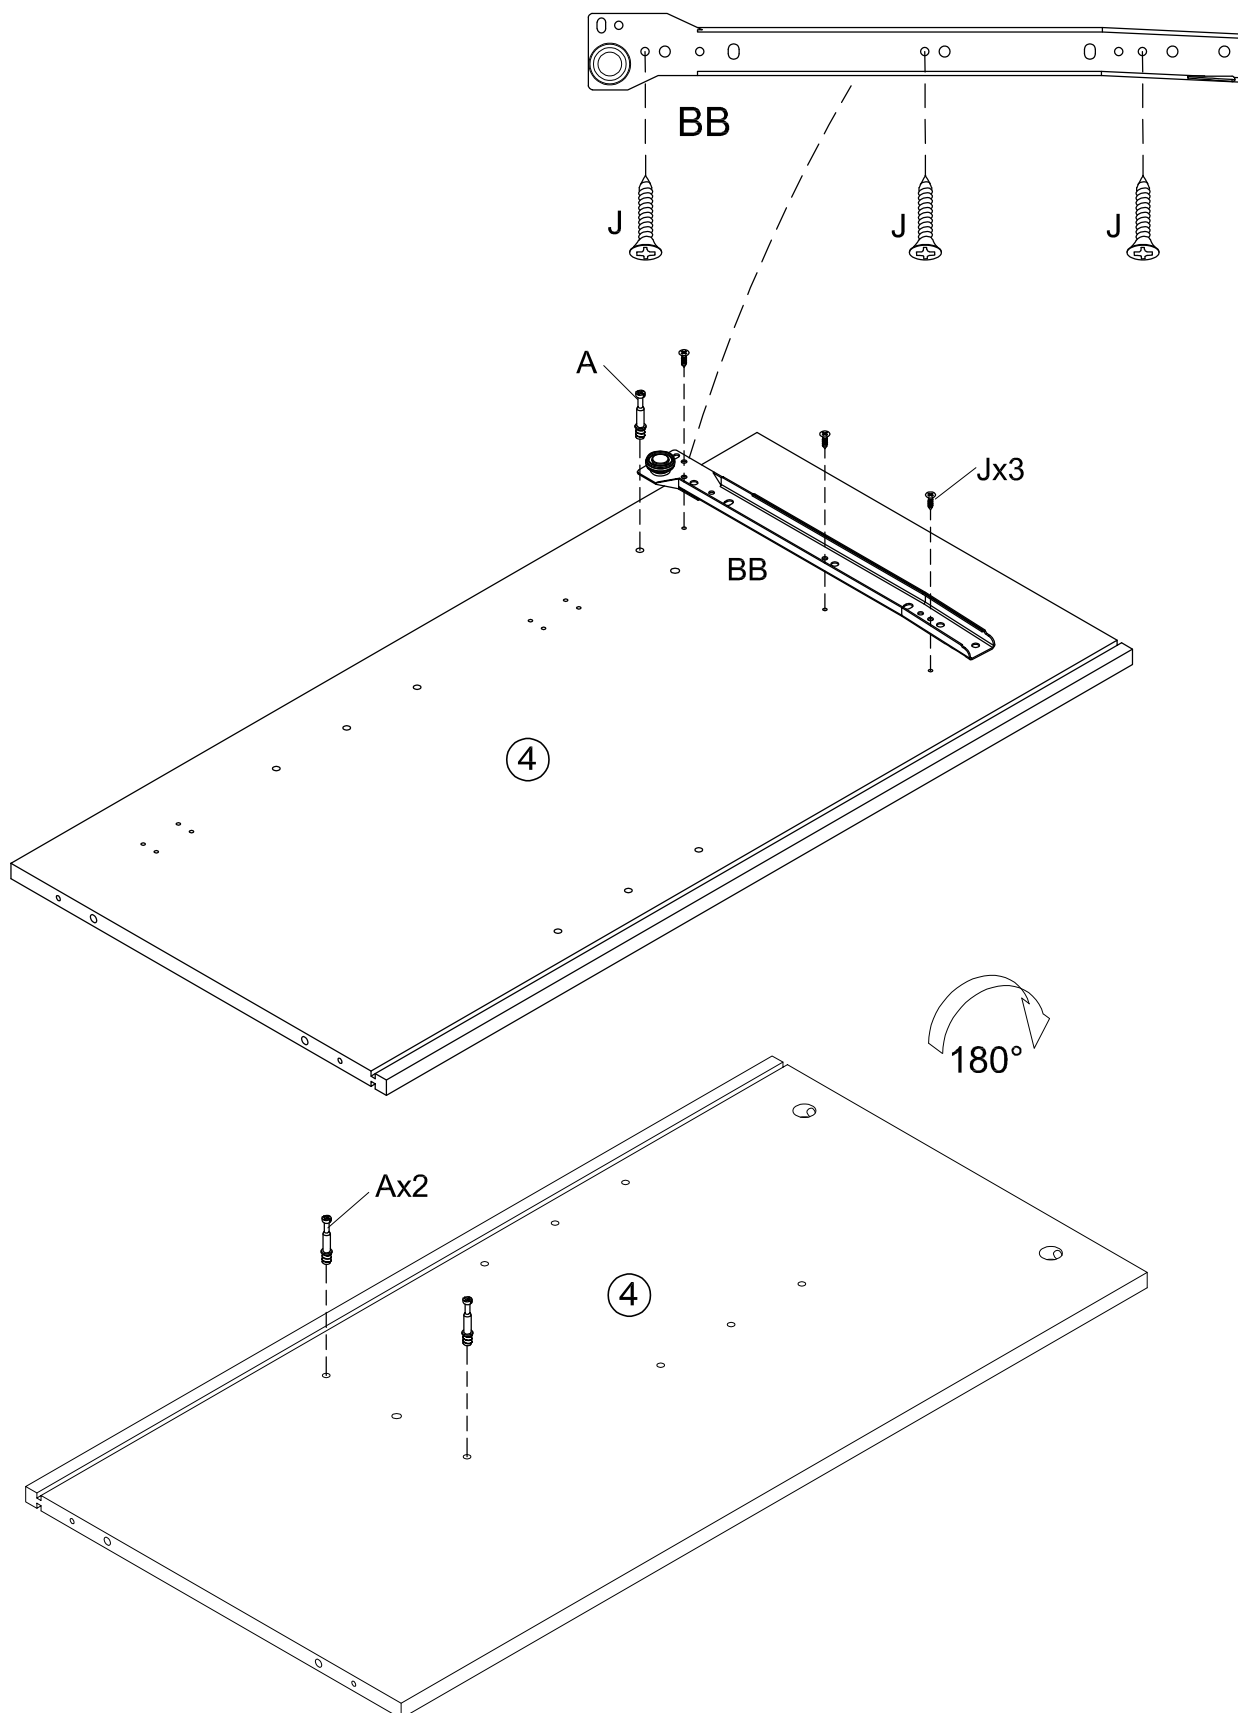

# STEP 3






Ax4

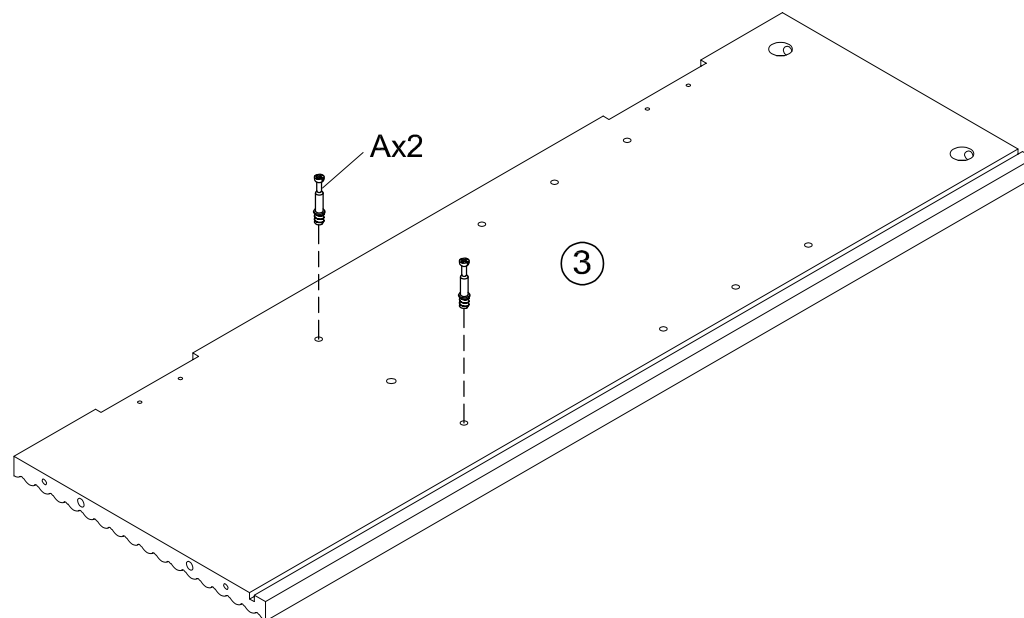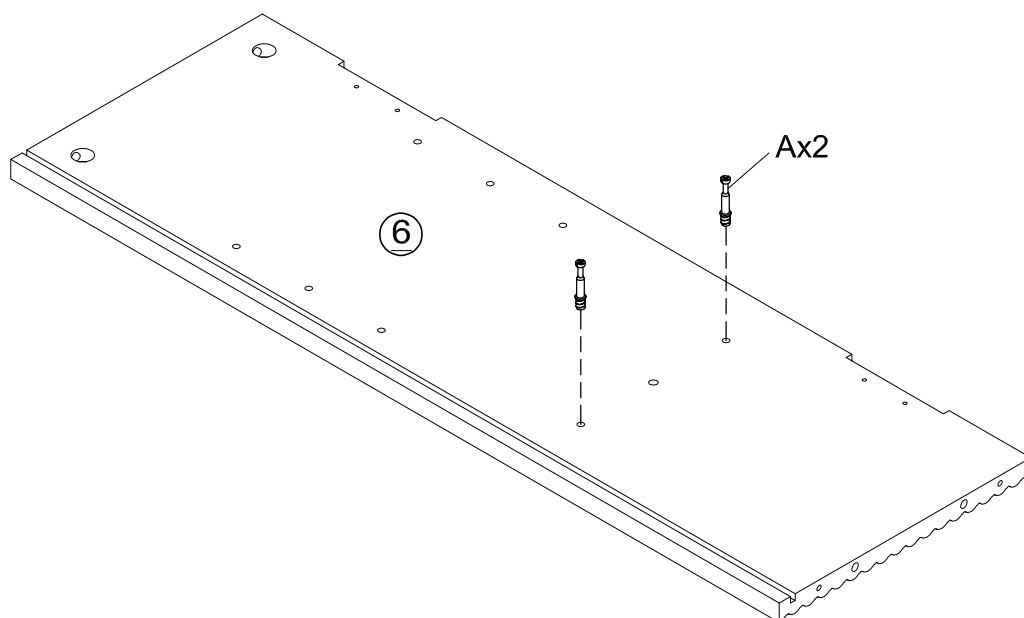

# STEP 4

  
Bx8



  
Dx4

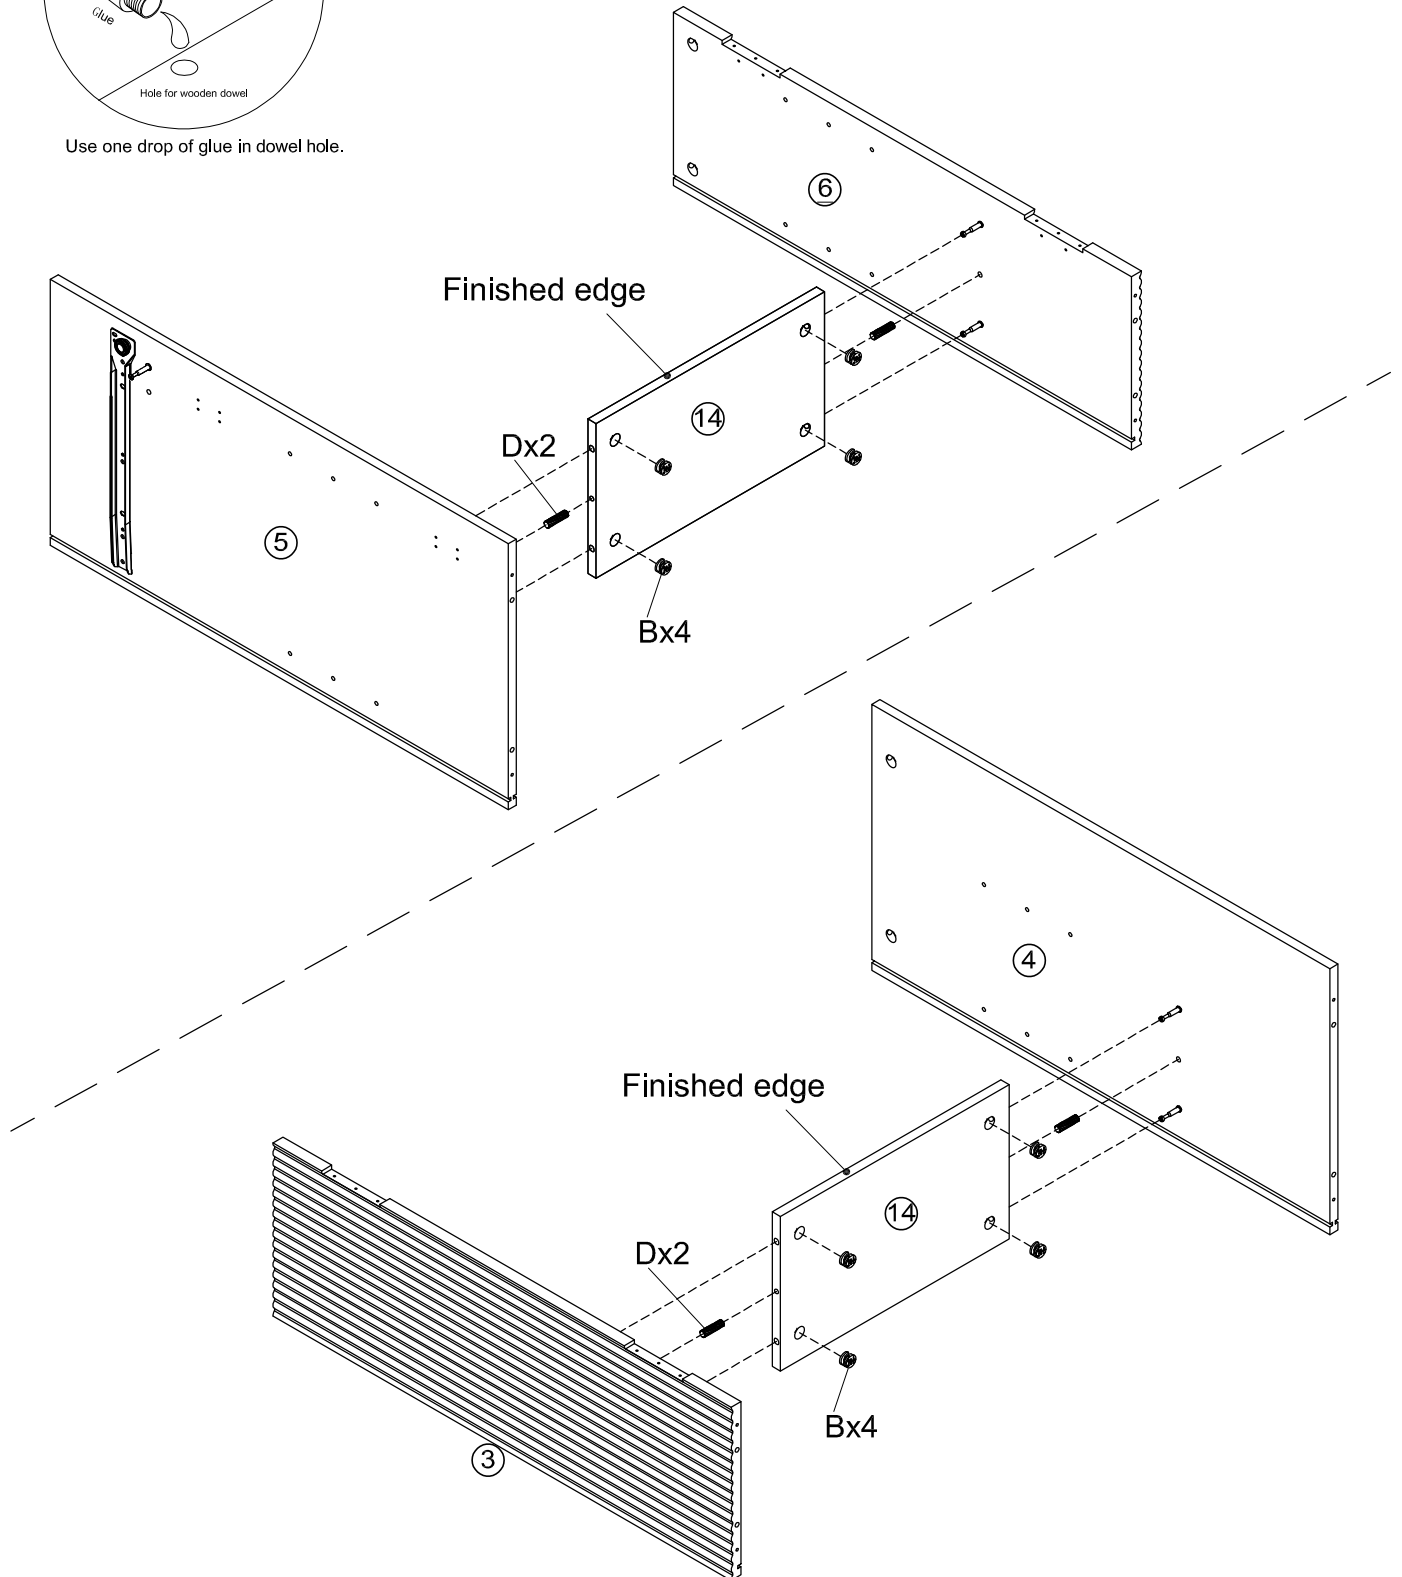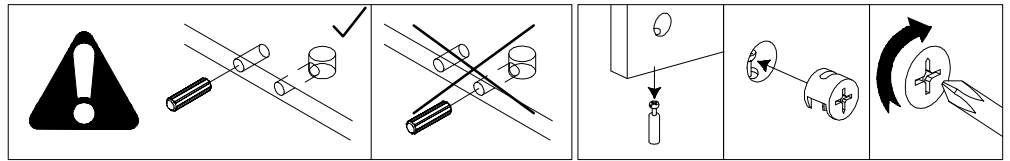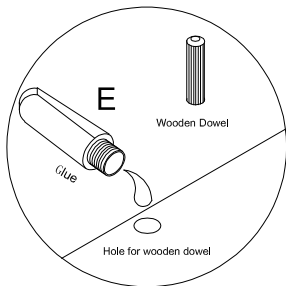

# STEP 5

  
Bx2

  
Dx2

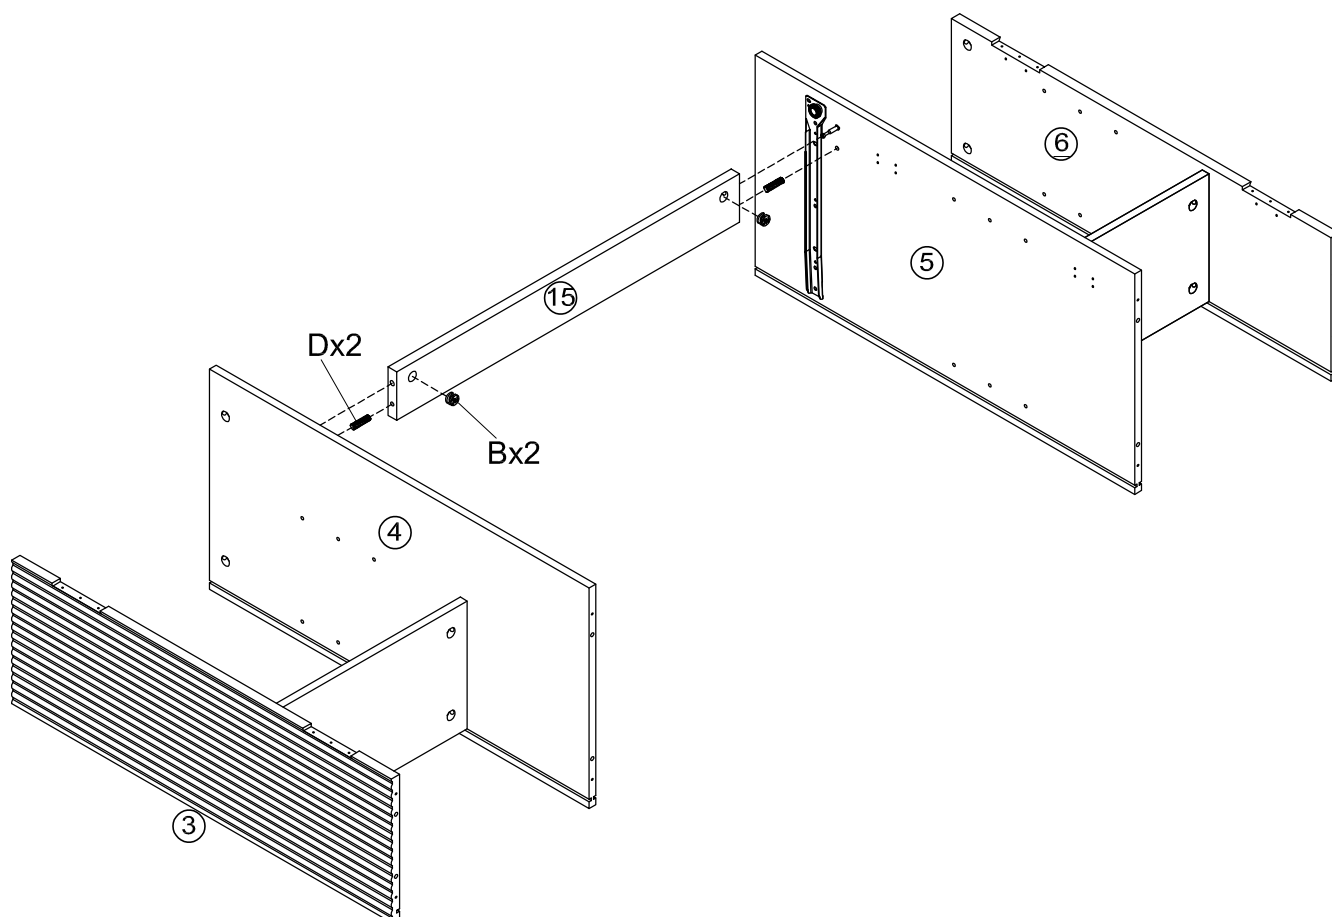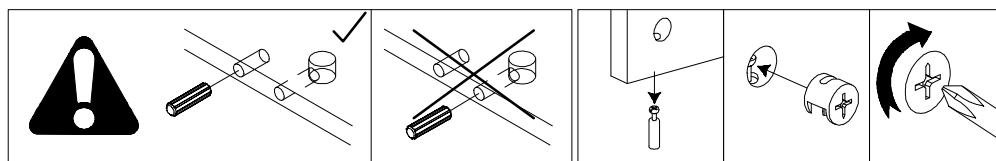

## STEP 6




Dx8



Px8


The round corner should be upward.

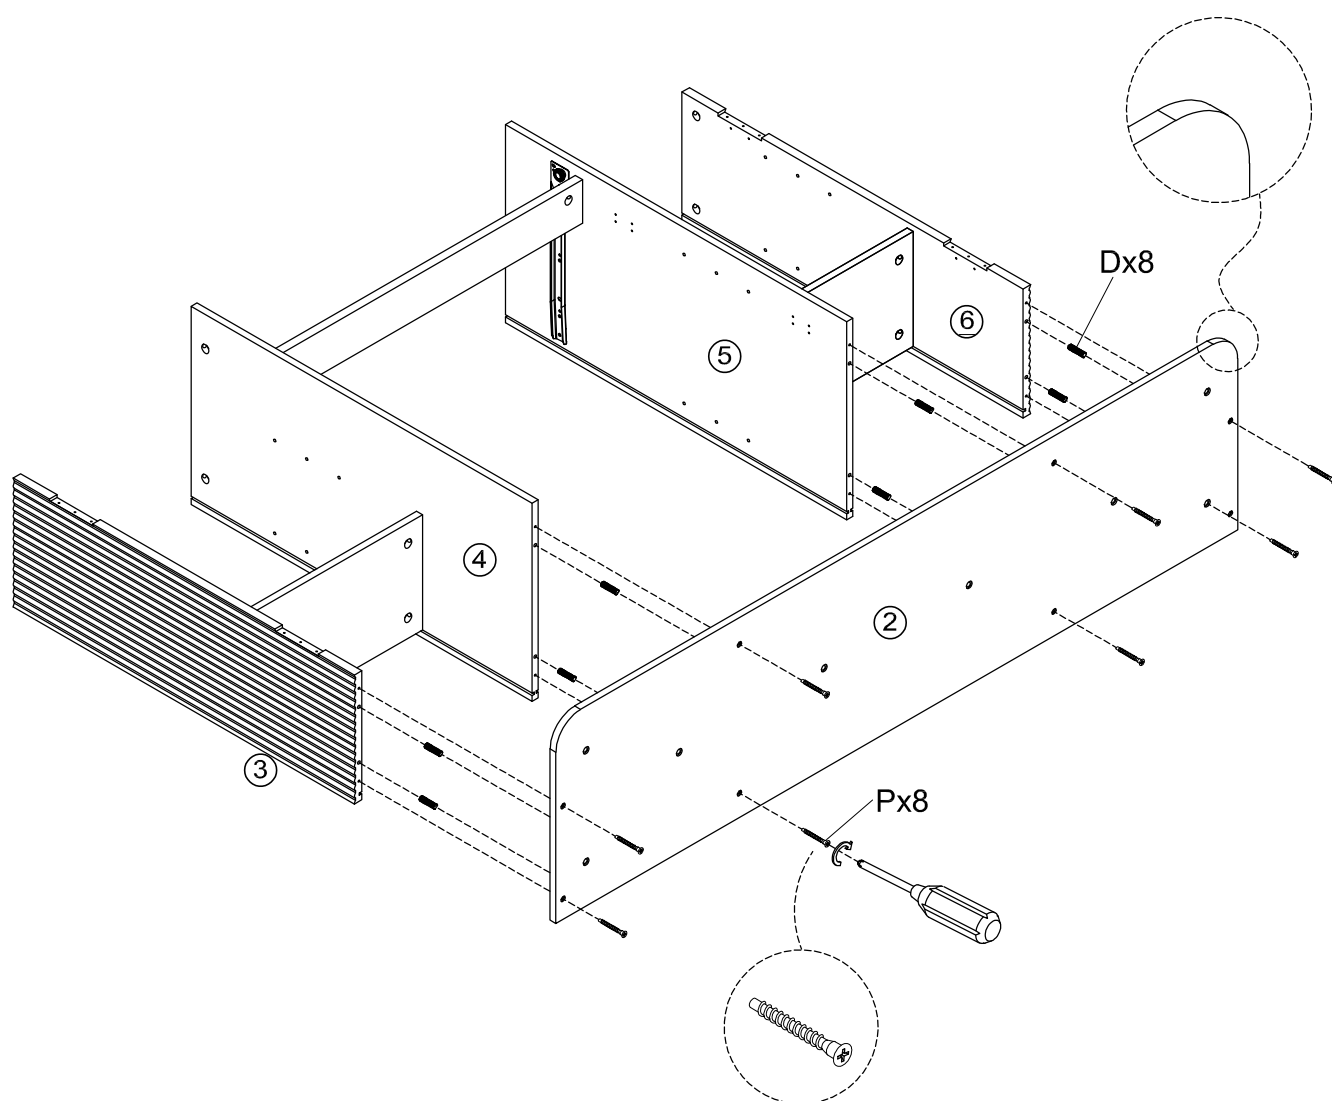


It is better if another people can assist.

## STEP 7

Note: the hole should be upward.

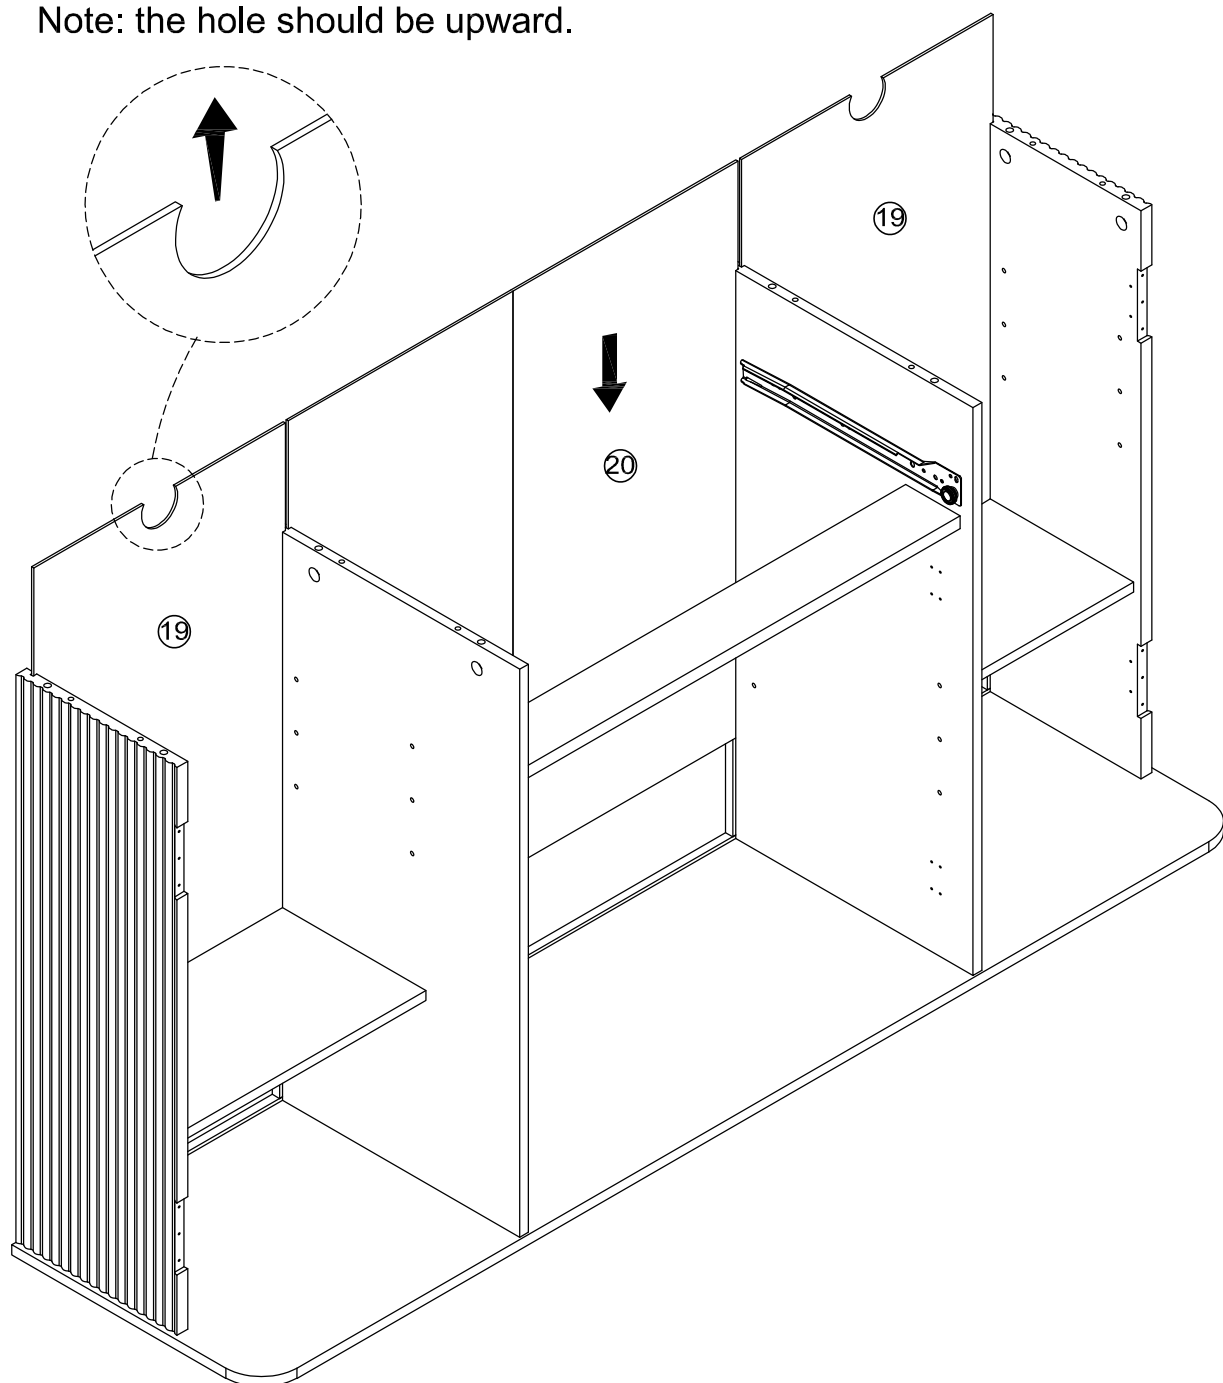

# STEP 8



Ax8




Bx8




Dx8




Zx4



Yx2



Tx2

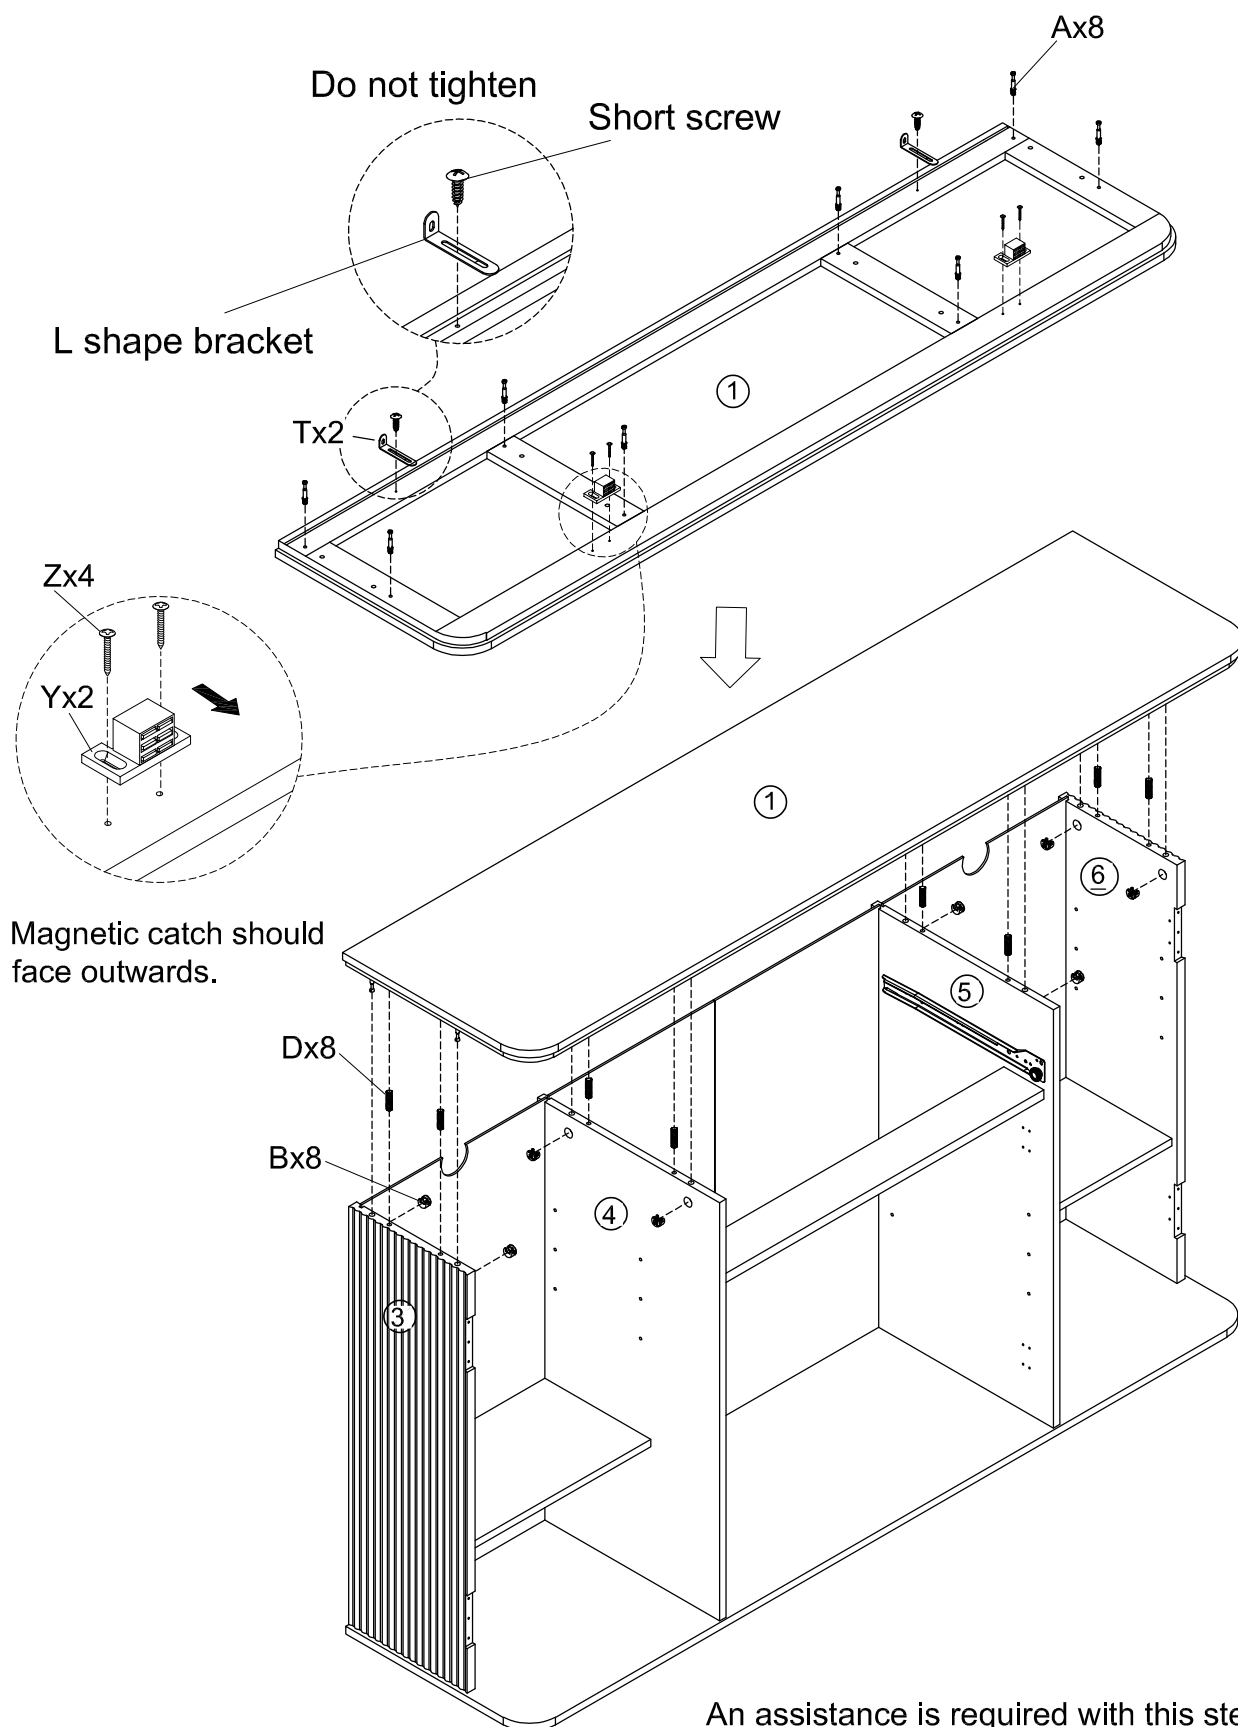

An assistance is required with this step.


# STEP 9



Hx22



lx22

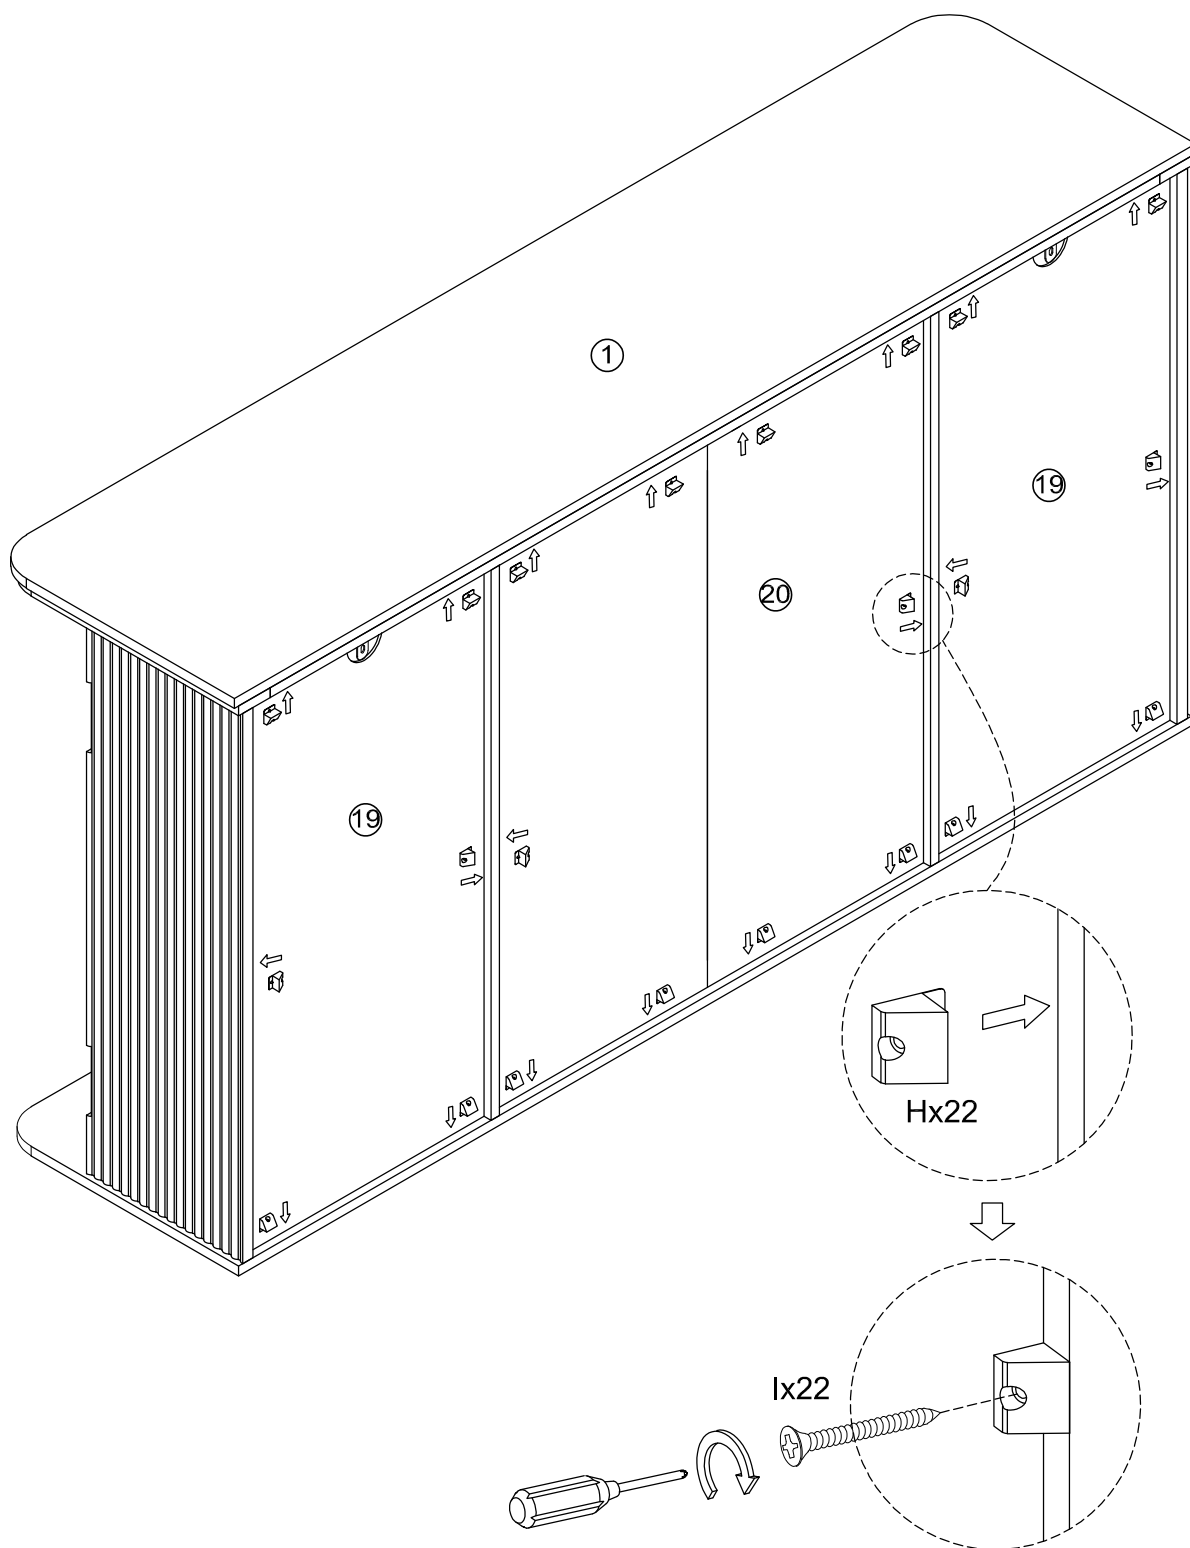

## STEP 10



Gx4



Ox2




AAx6



FFx1


The end of the metal leg  
splays outwards.

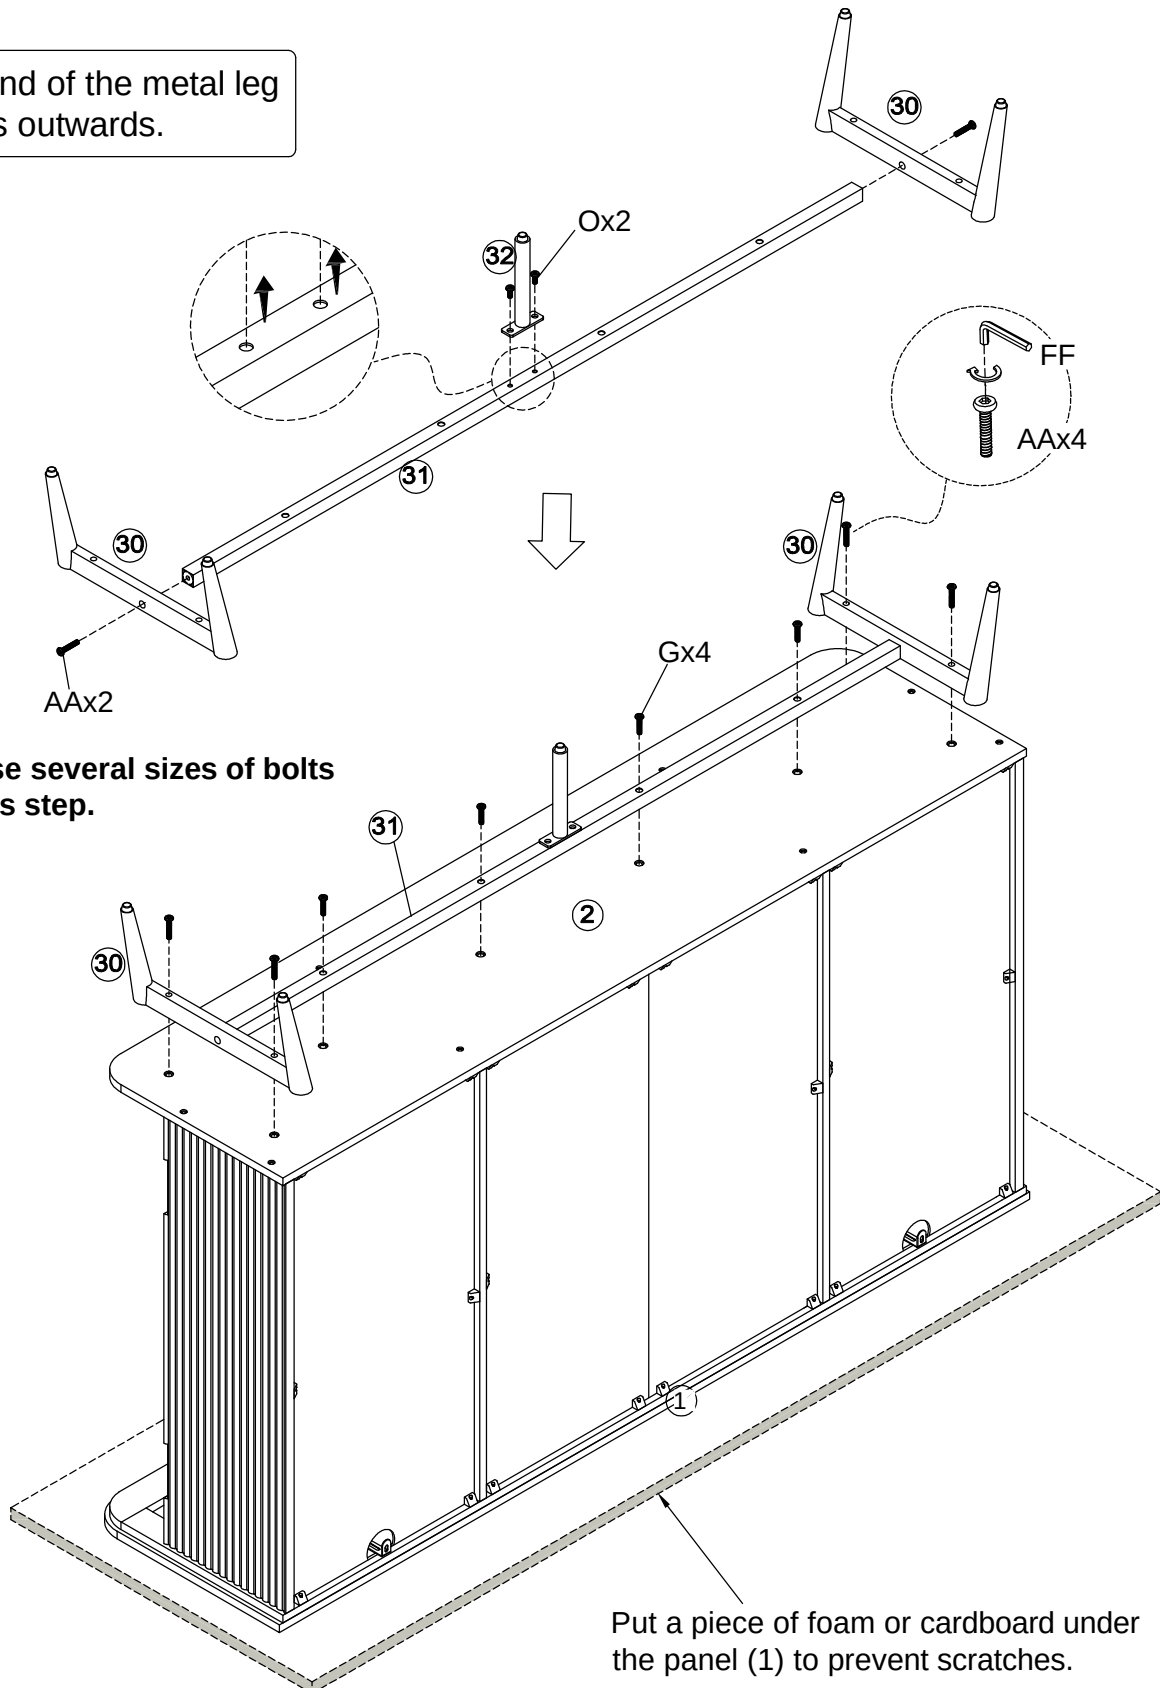




**Note:** use several sizes of bolts  
with this step.

Put a piece of foam or cardboard  
under the panel (1) to prevent scratches.

# STEP 11

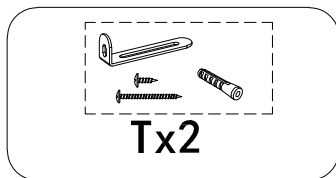




Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over, we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

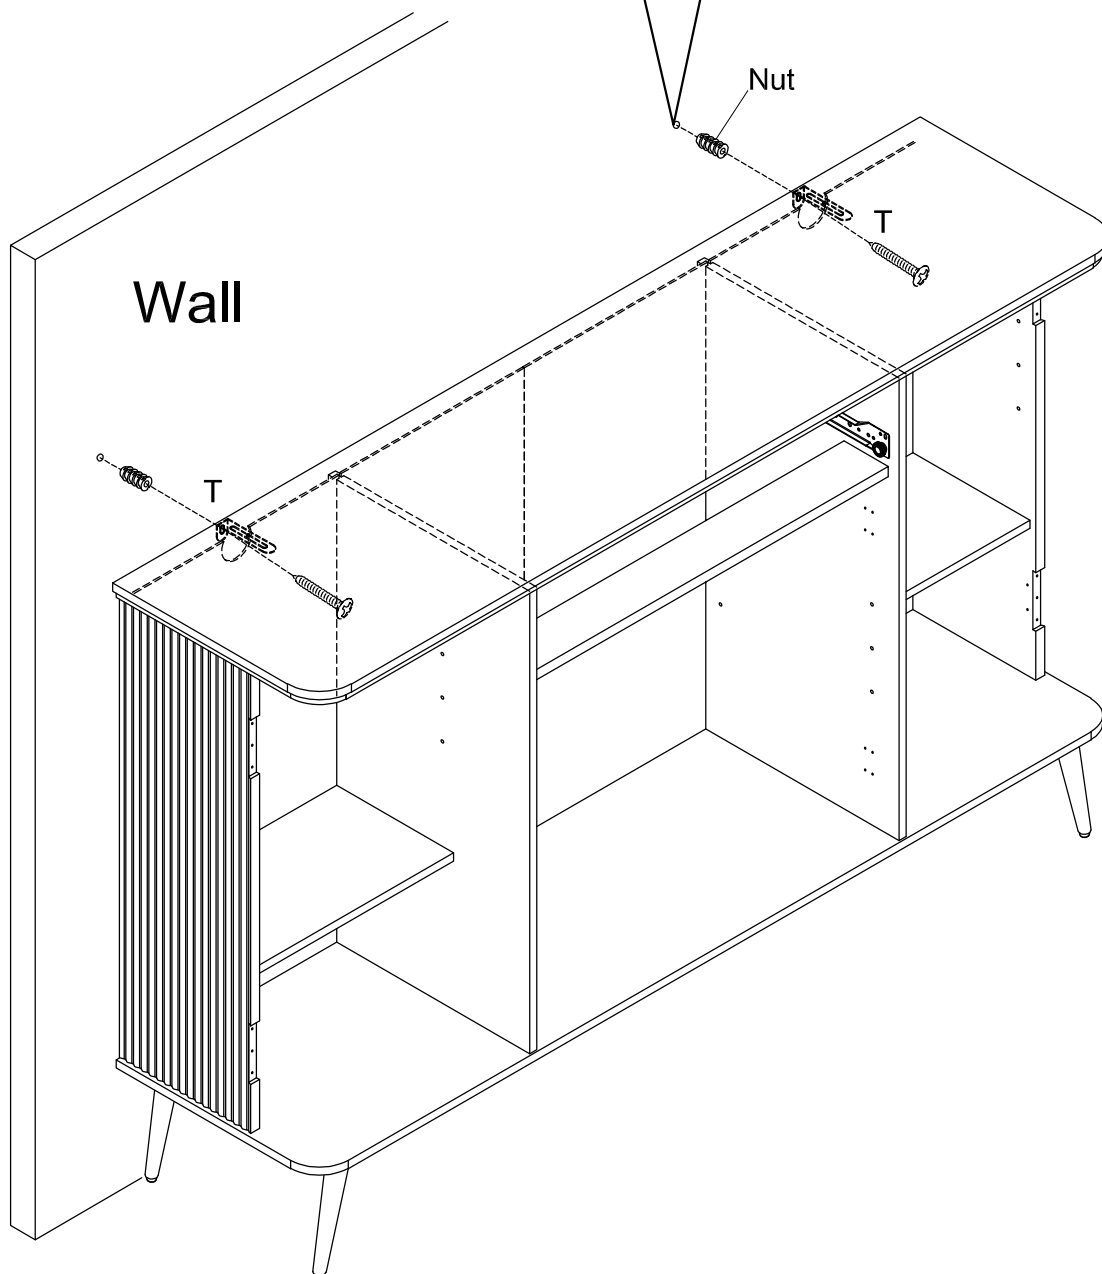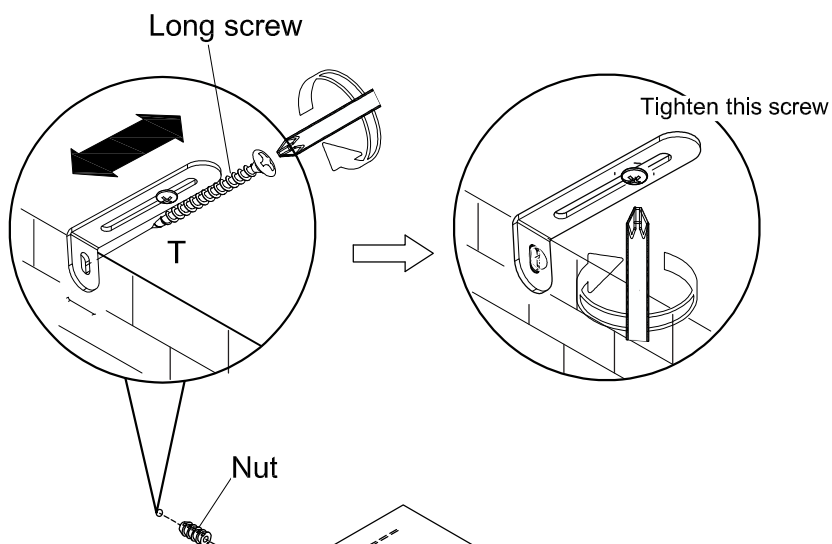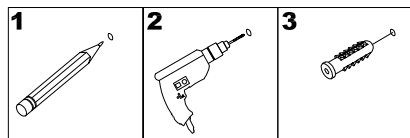



# STEP 12




Qx12

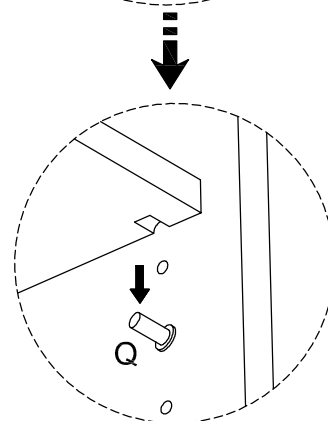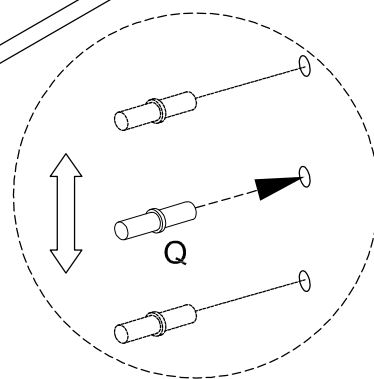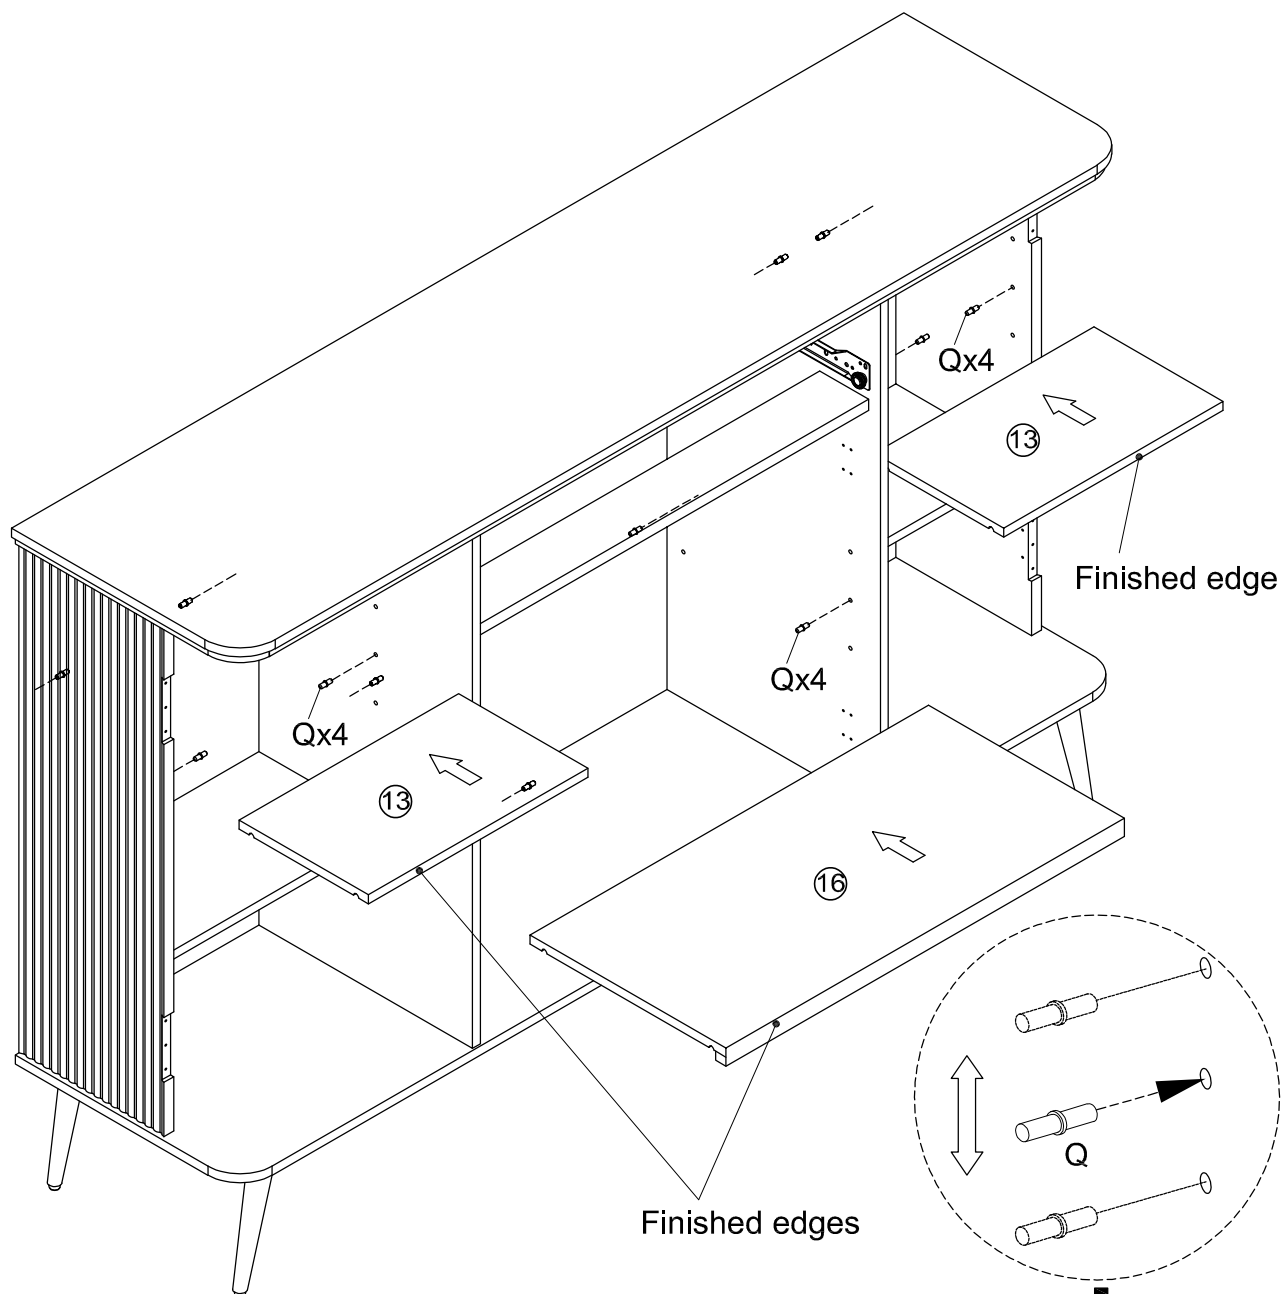



# STEP 13

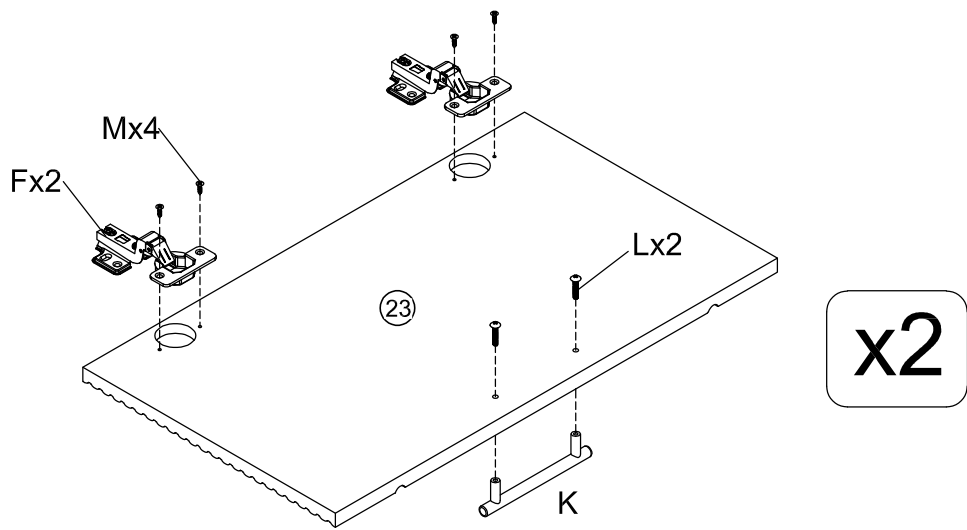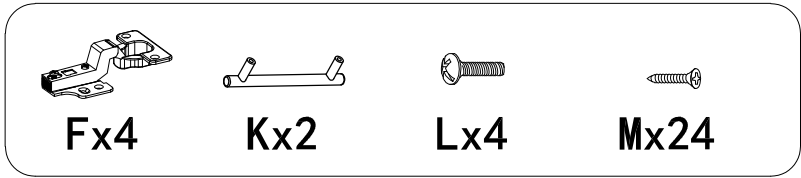

An assistance is required with this step.

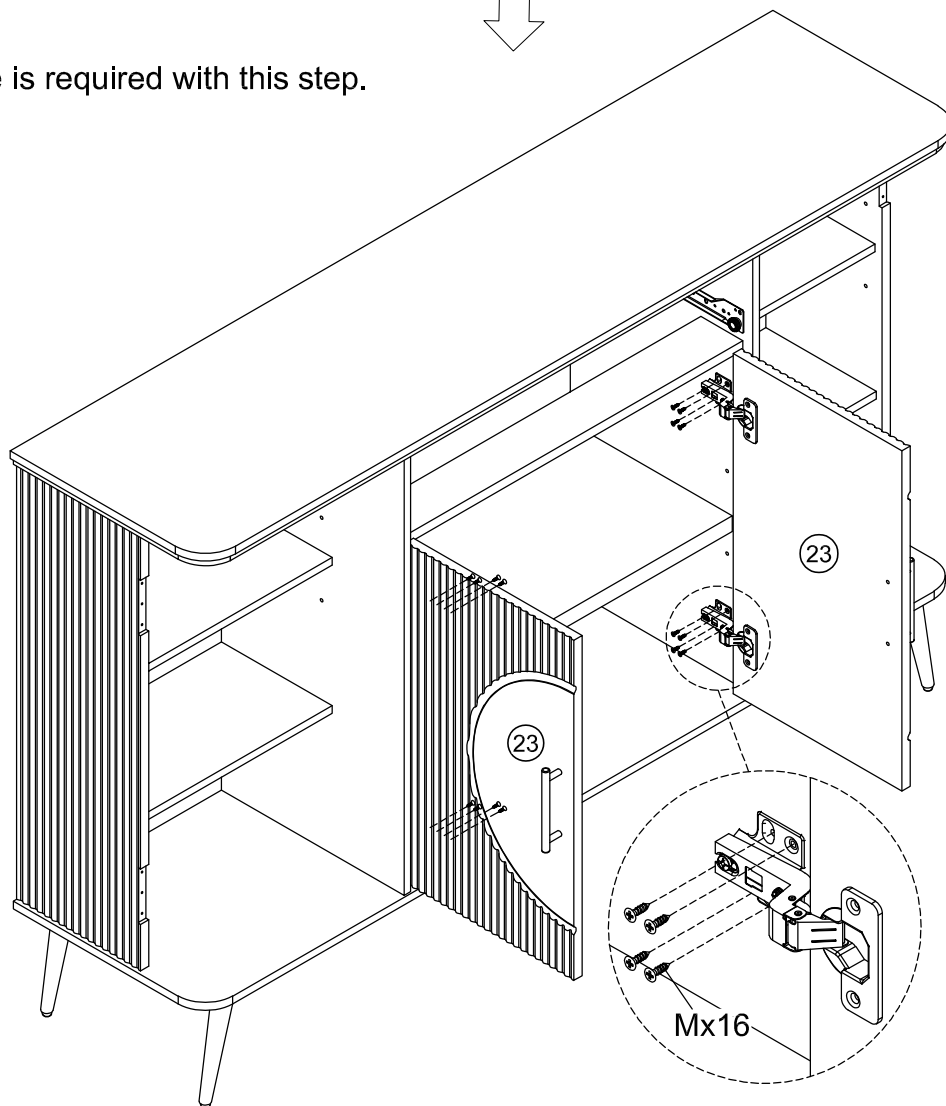


## STEP 14

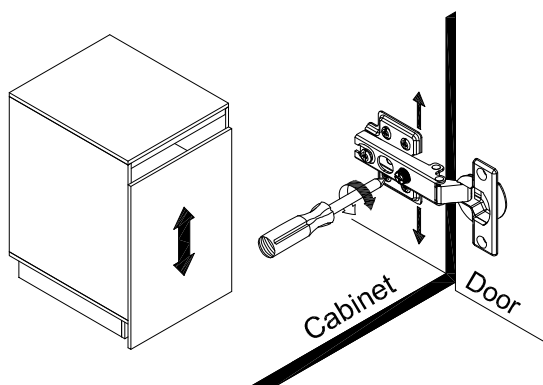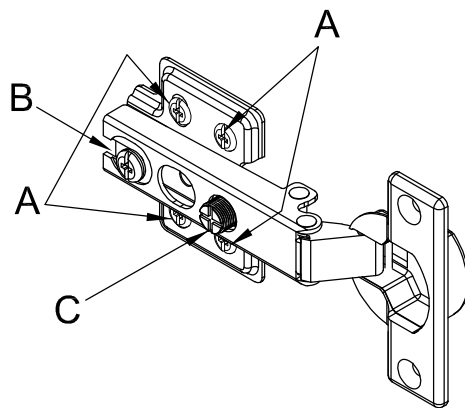


### To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

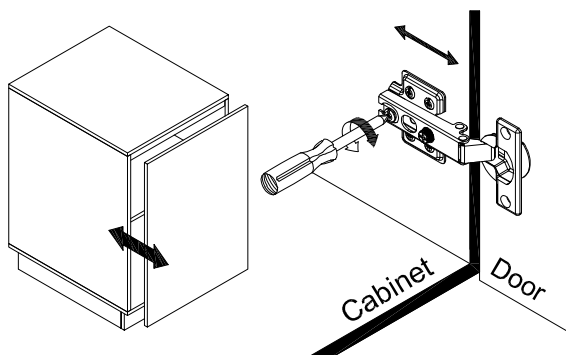

### To adjust depth.


Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

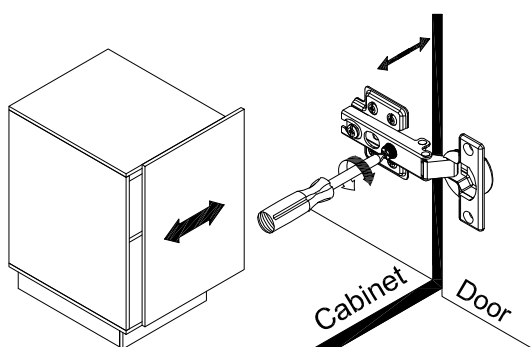

### To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

# STEP 15




Ax12




Bx3



Dx2

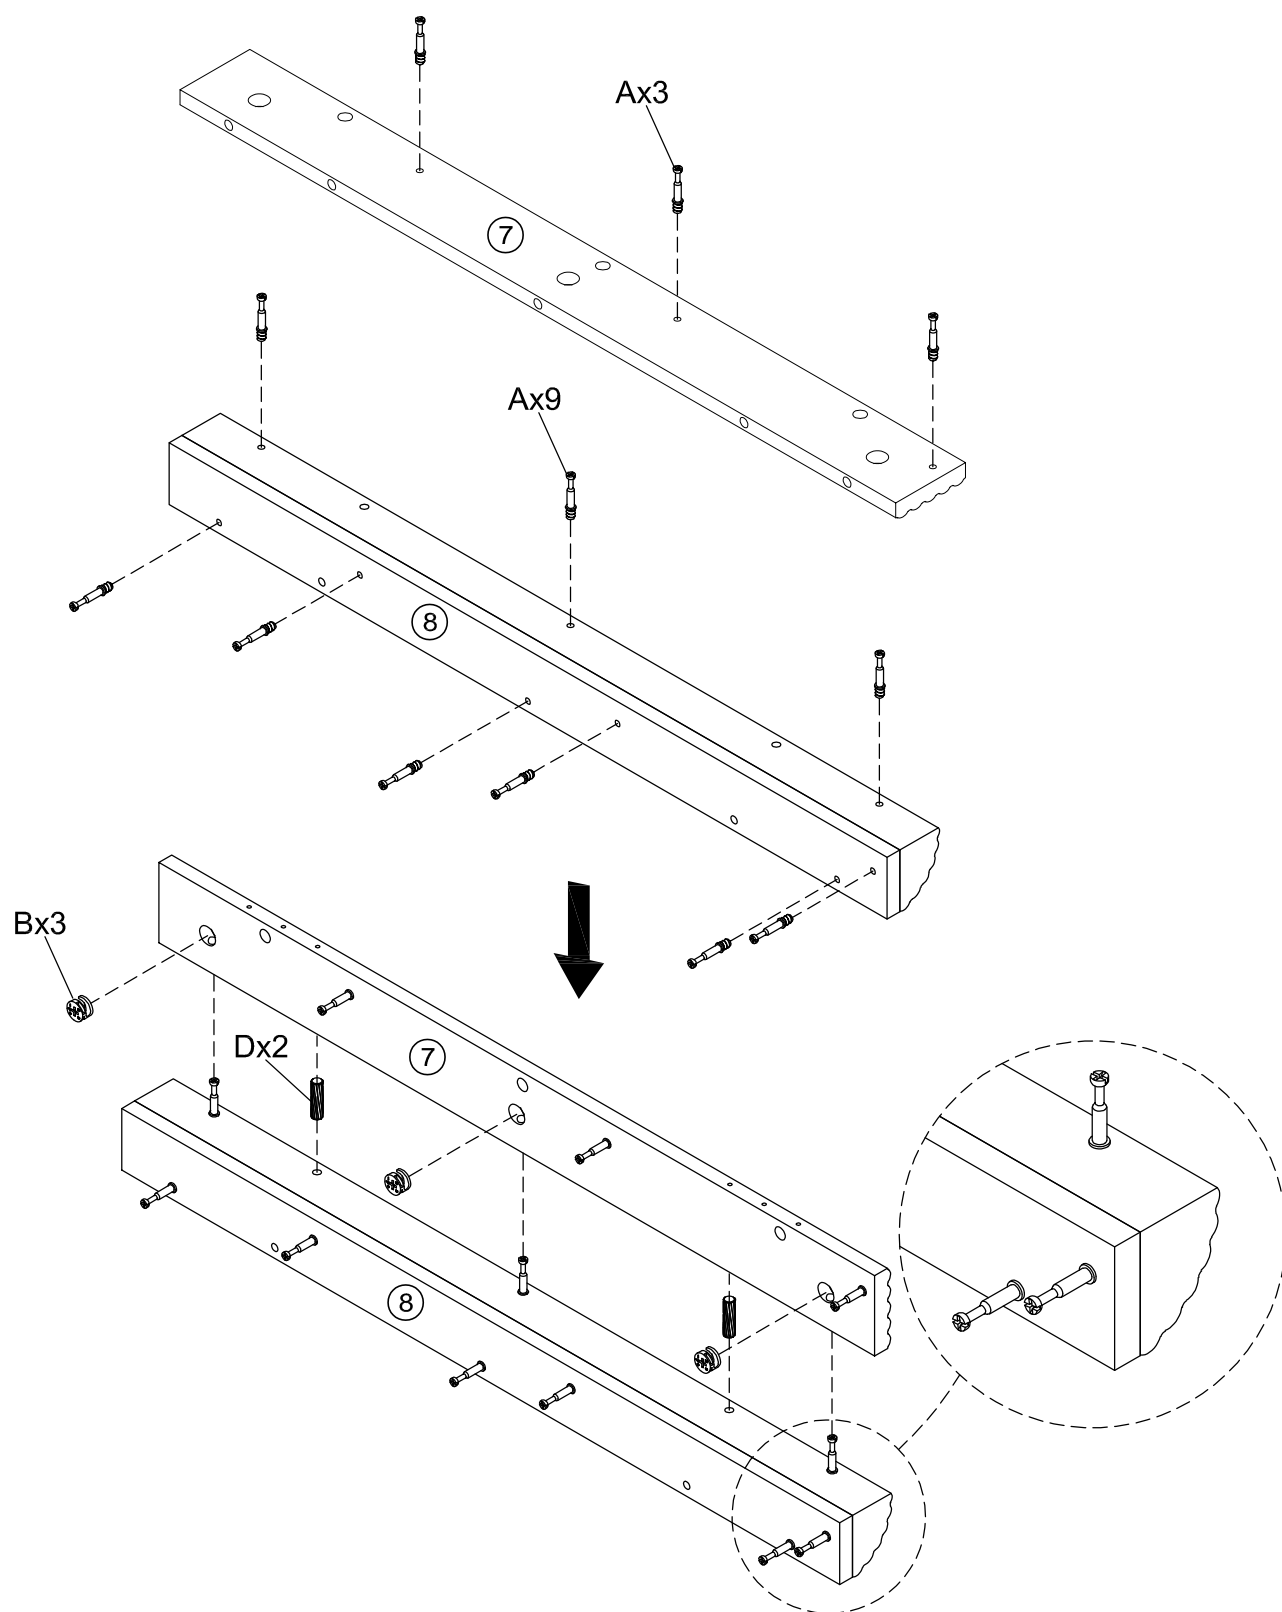

# STEP 16




Ax12




Bx3



Dx2

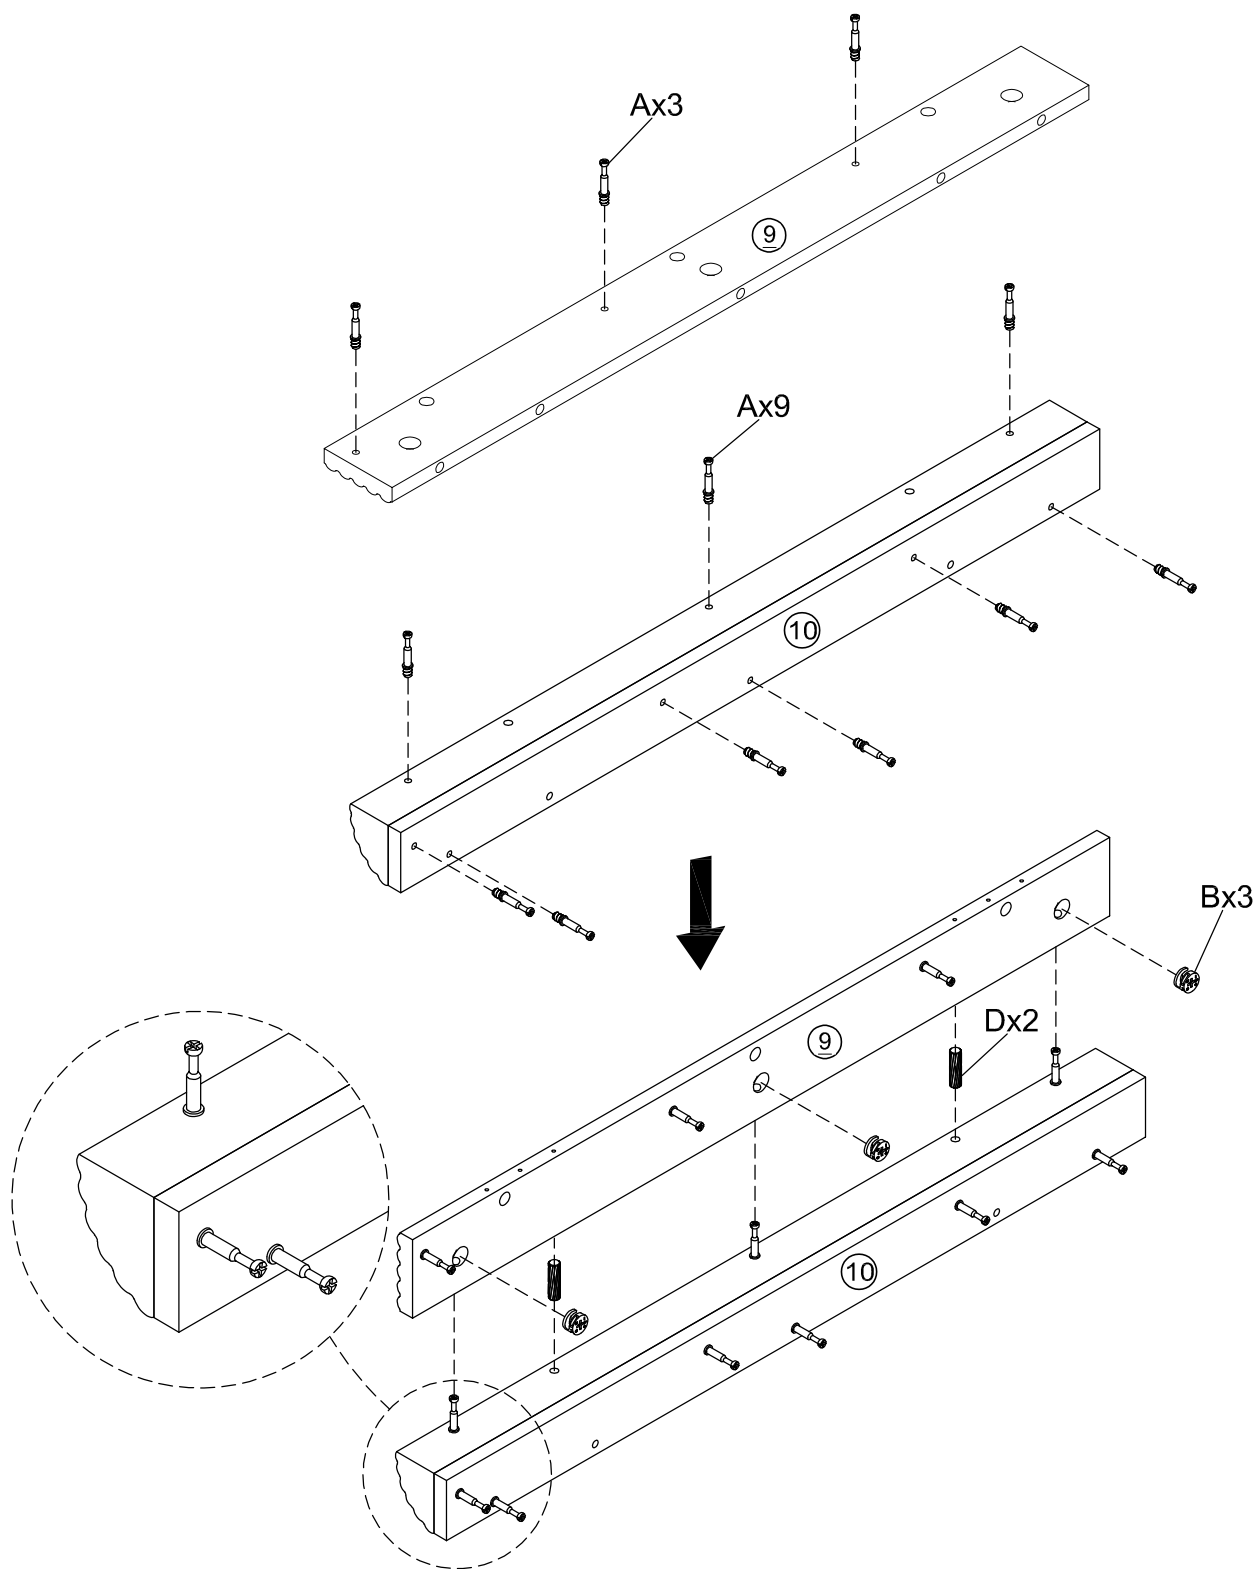

# STEP 17




Ax18



Jx2



Xx2

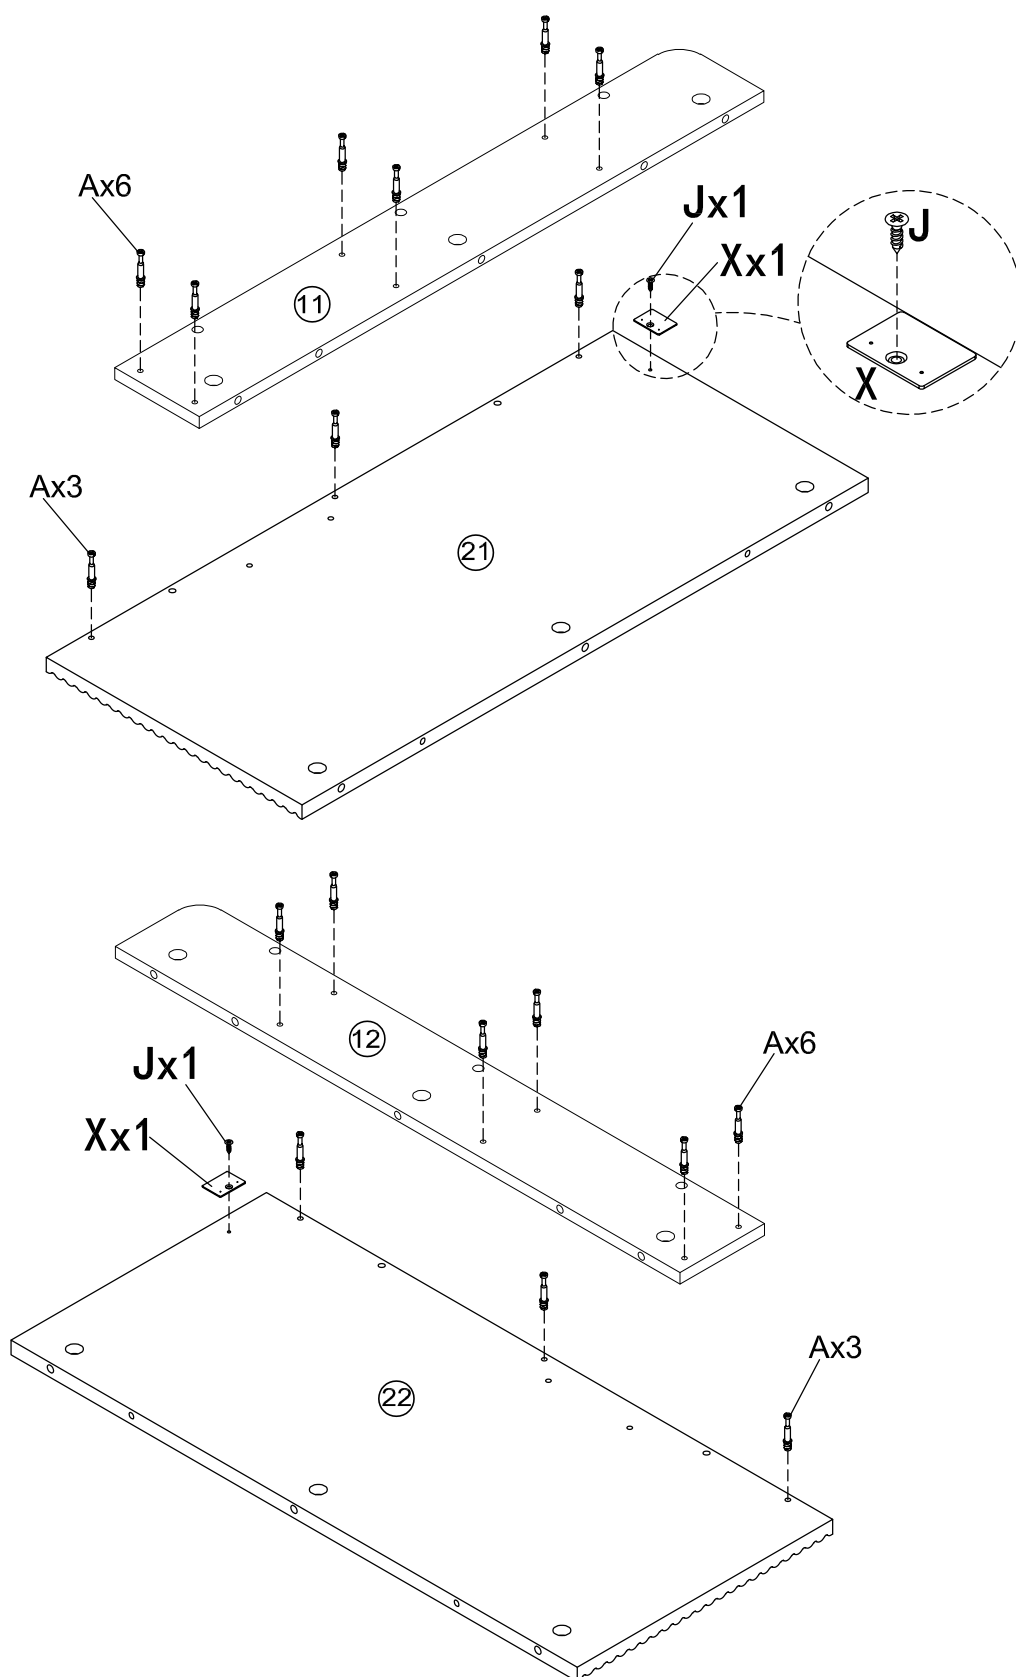


## STEP 18



Bx6





Dx4

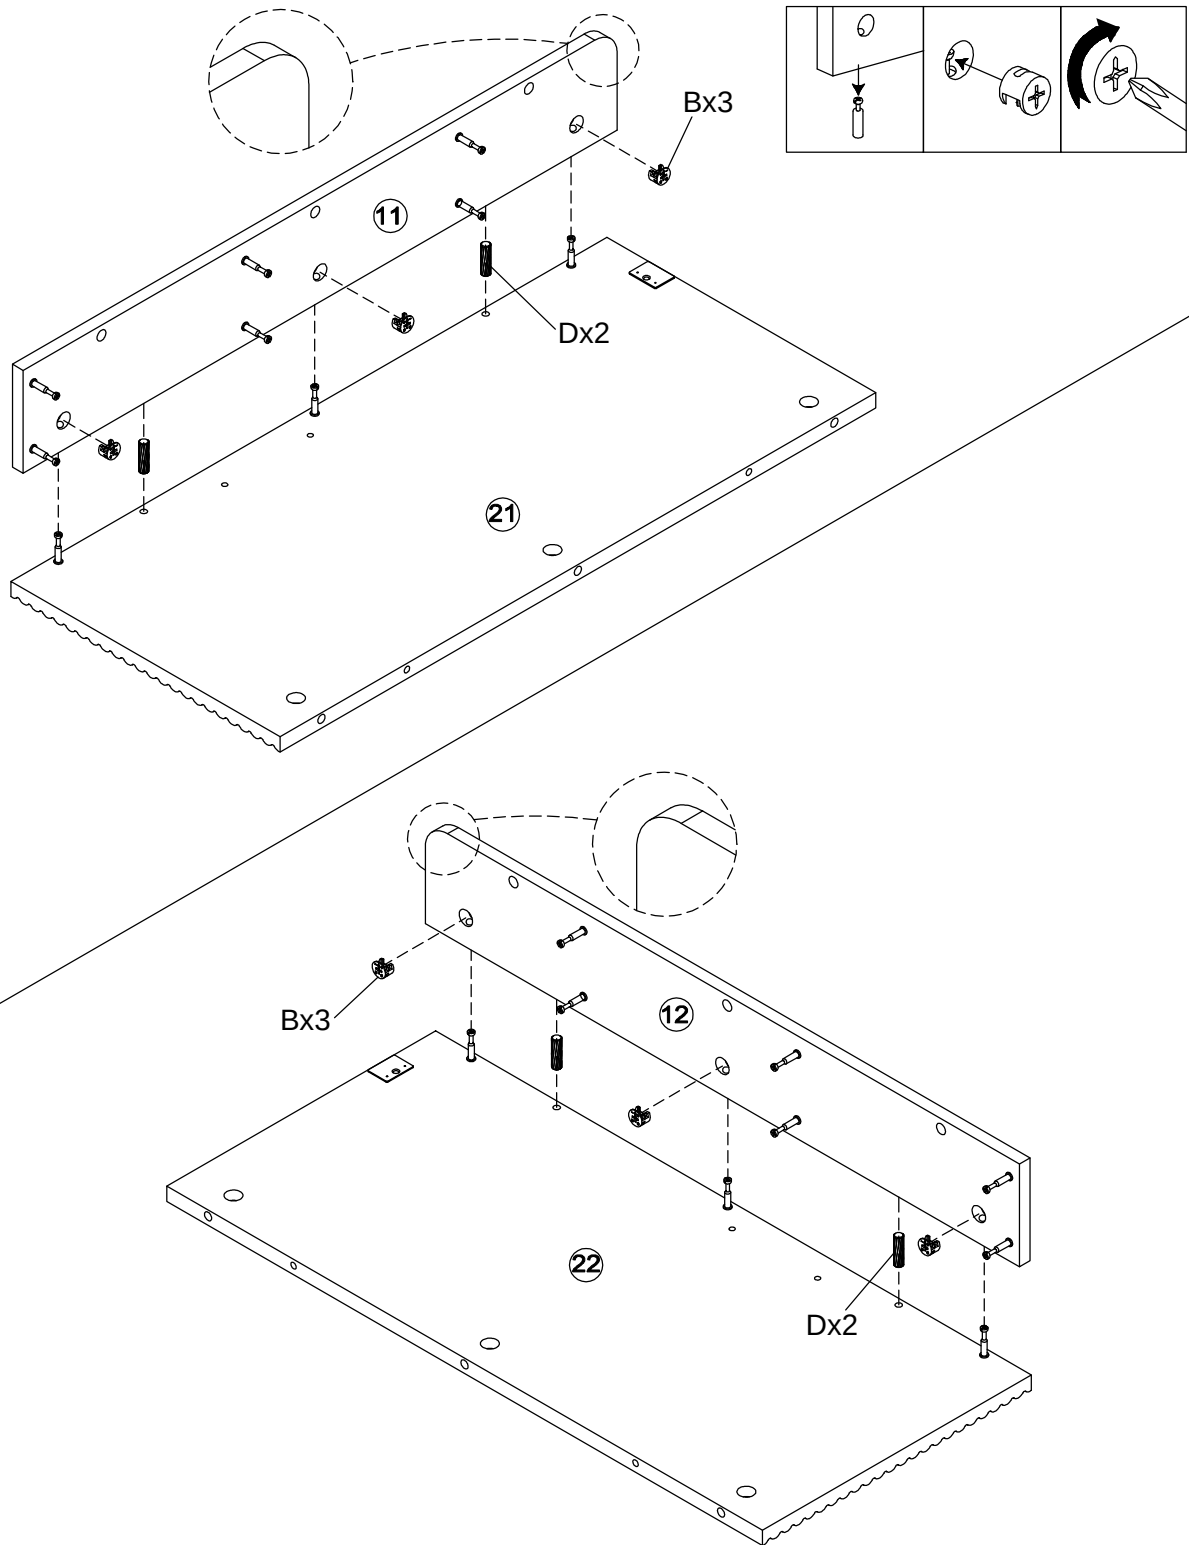

# STEP 19


  
Bx12

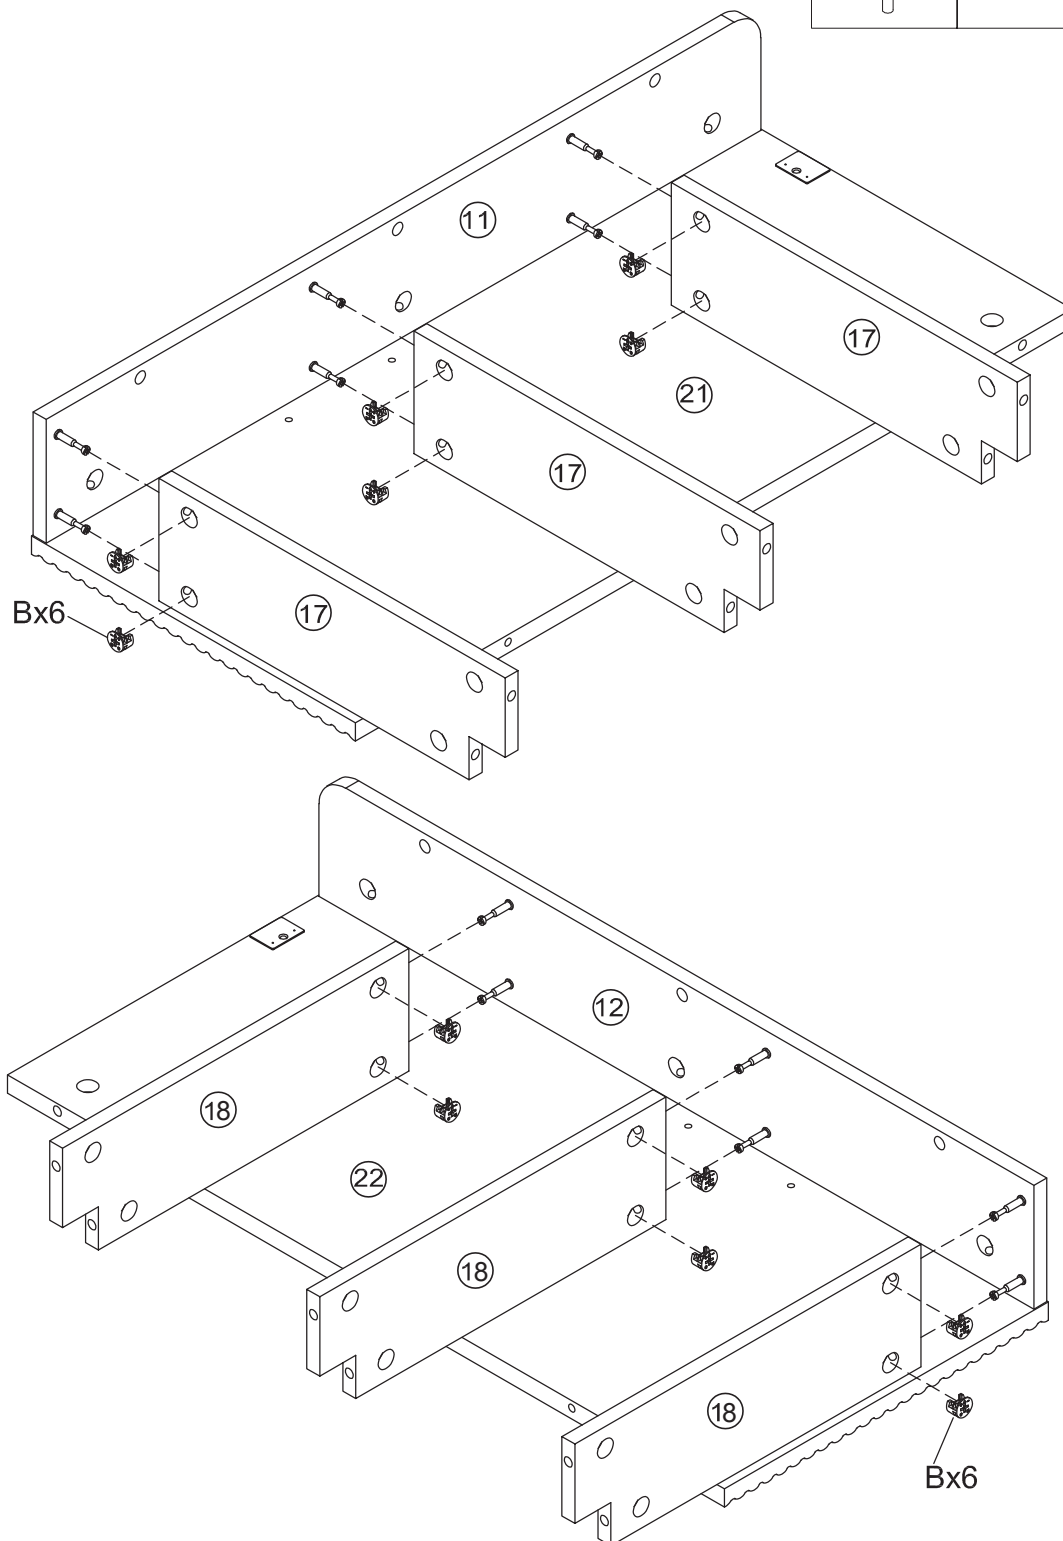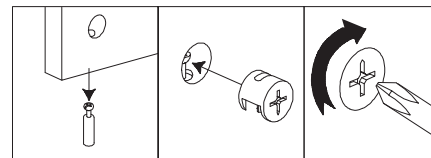


## STEP 20




**Dx4**

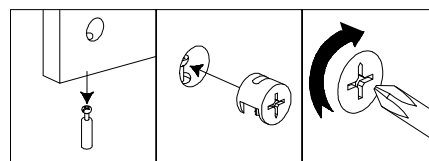

It is better if another people can assist.

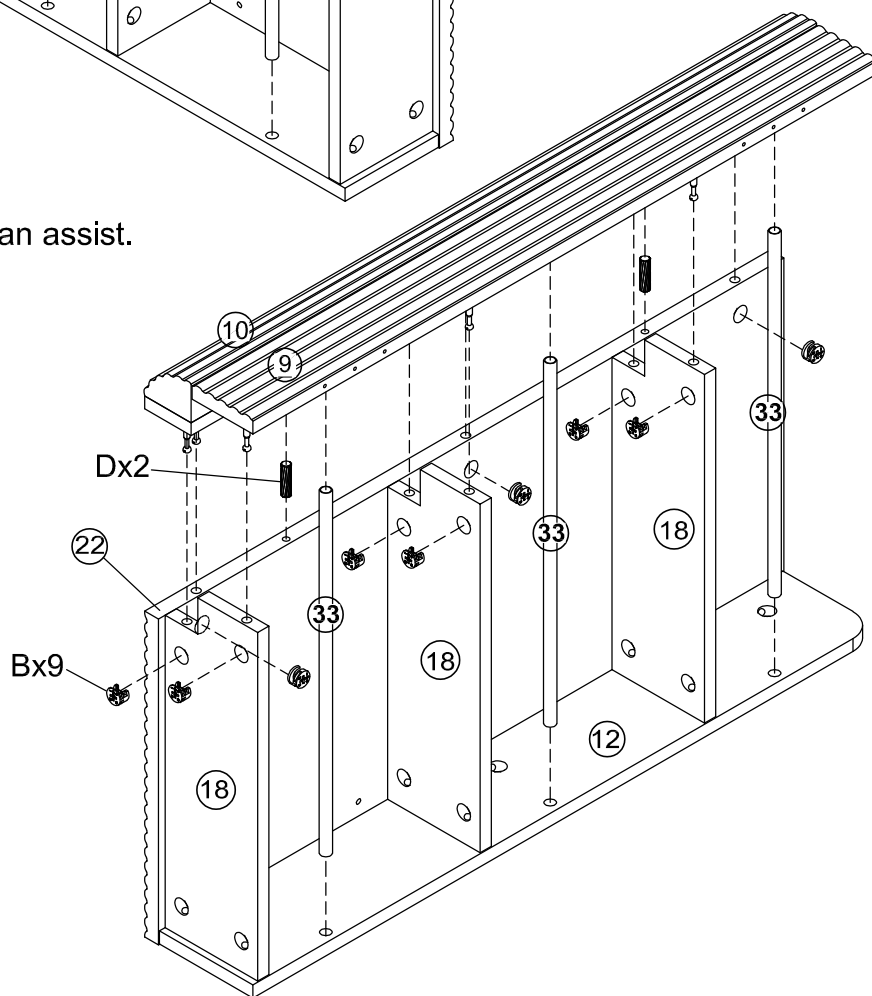


# STEP 21



Ux12




Vx4

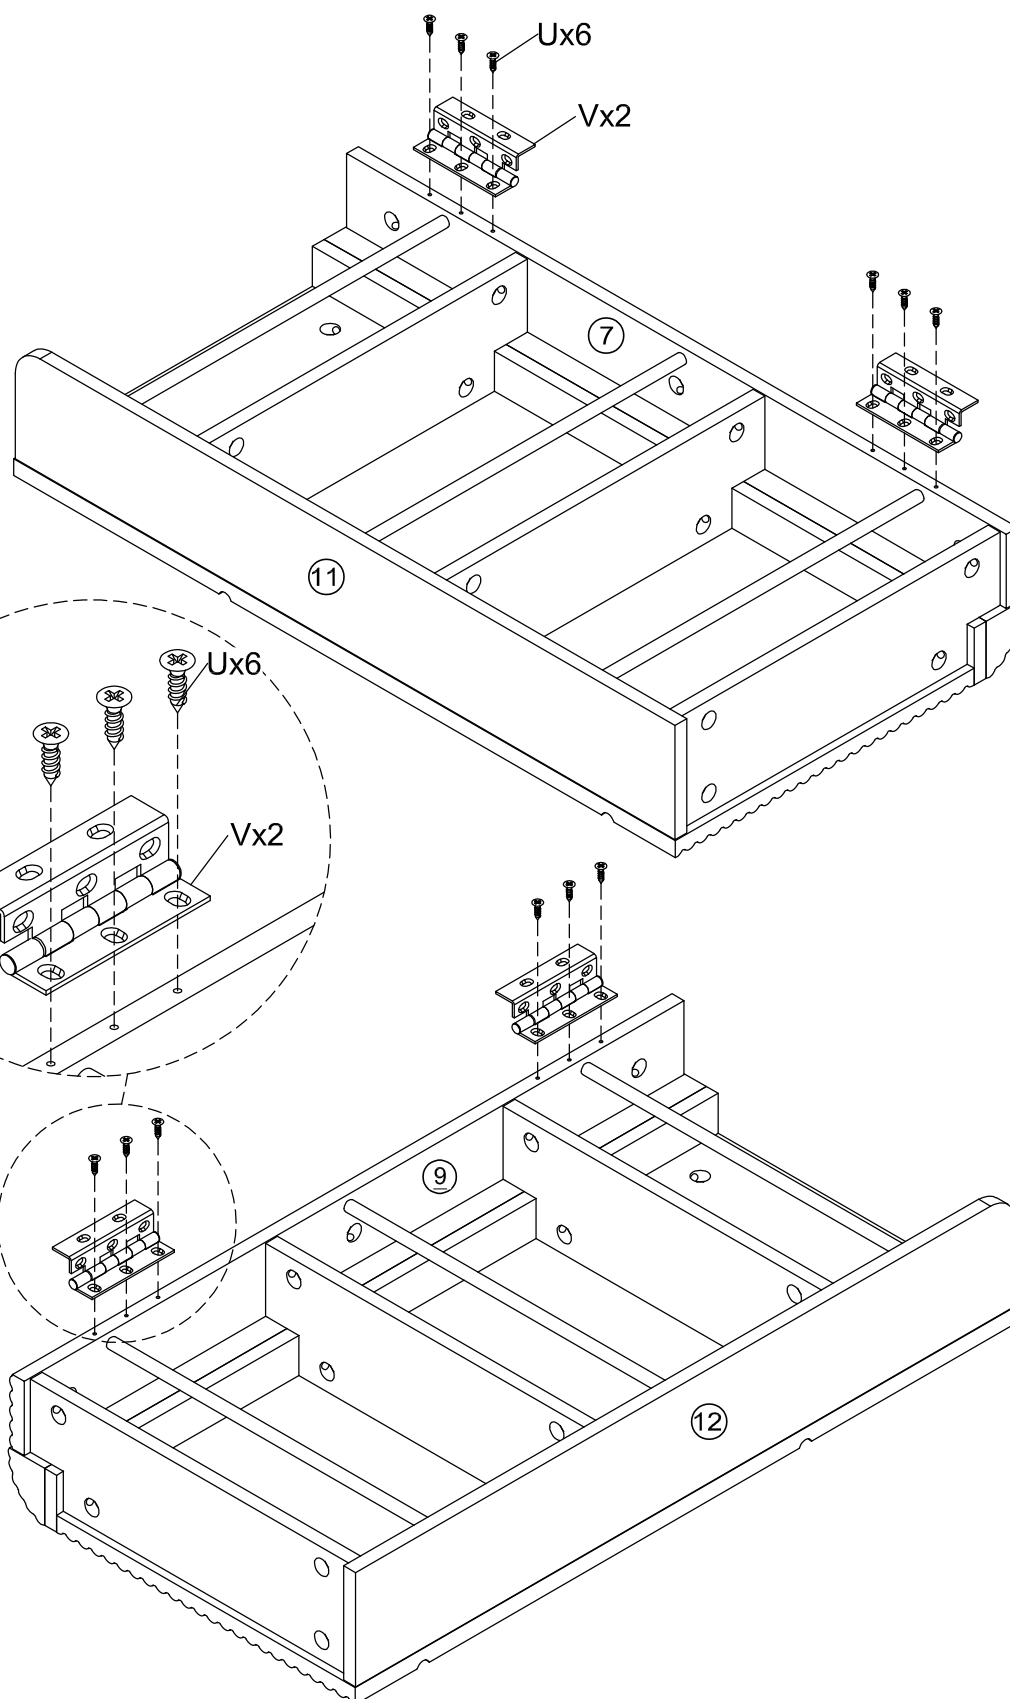

## STEP 22




Ux20



Kx2




Lx4

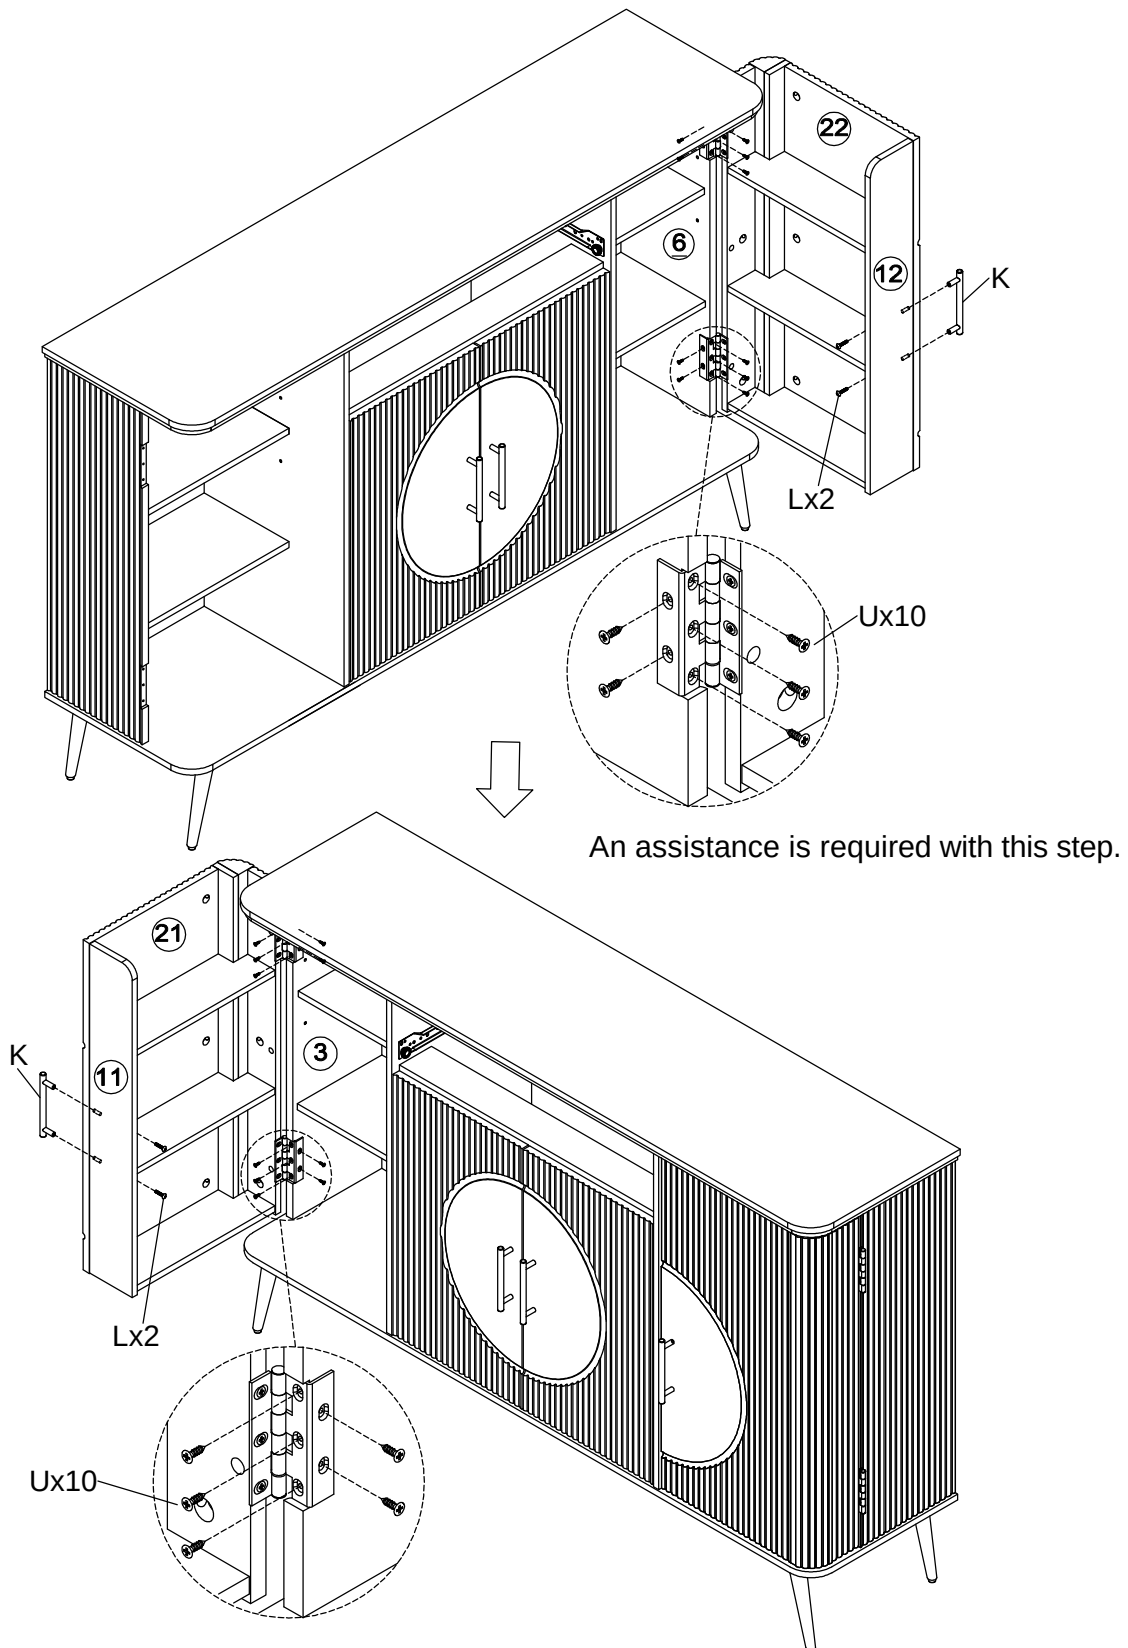


## STEP 23



Nx6

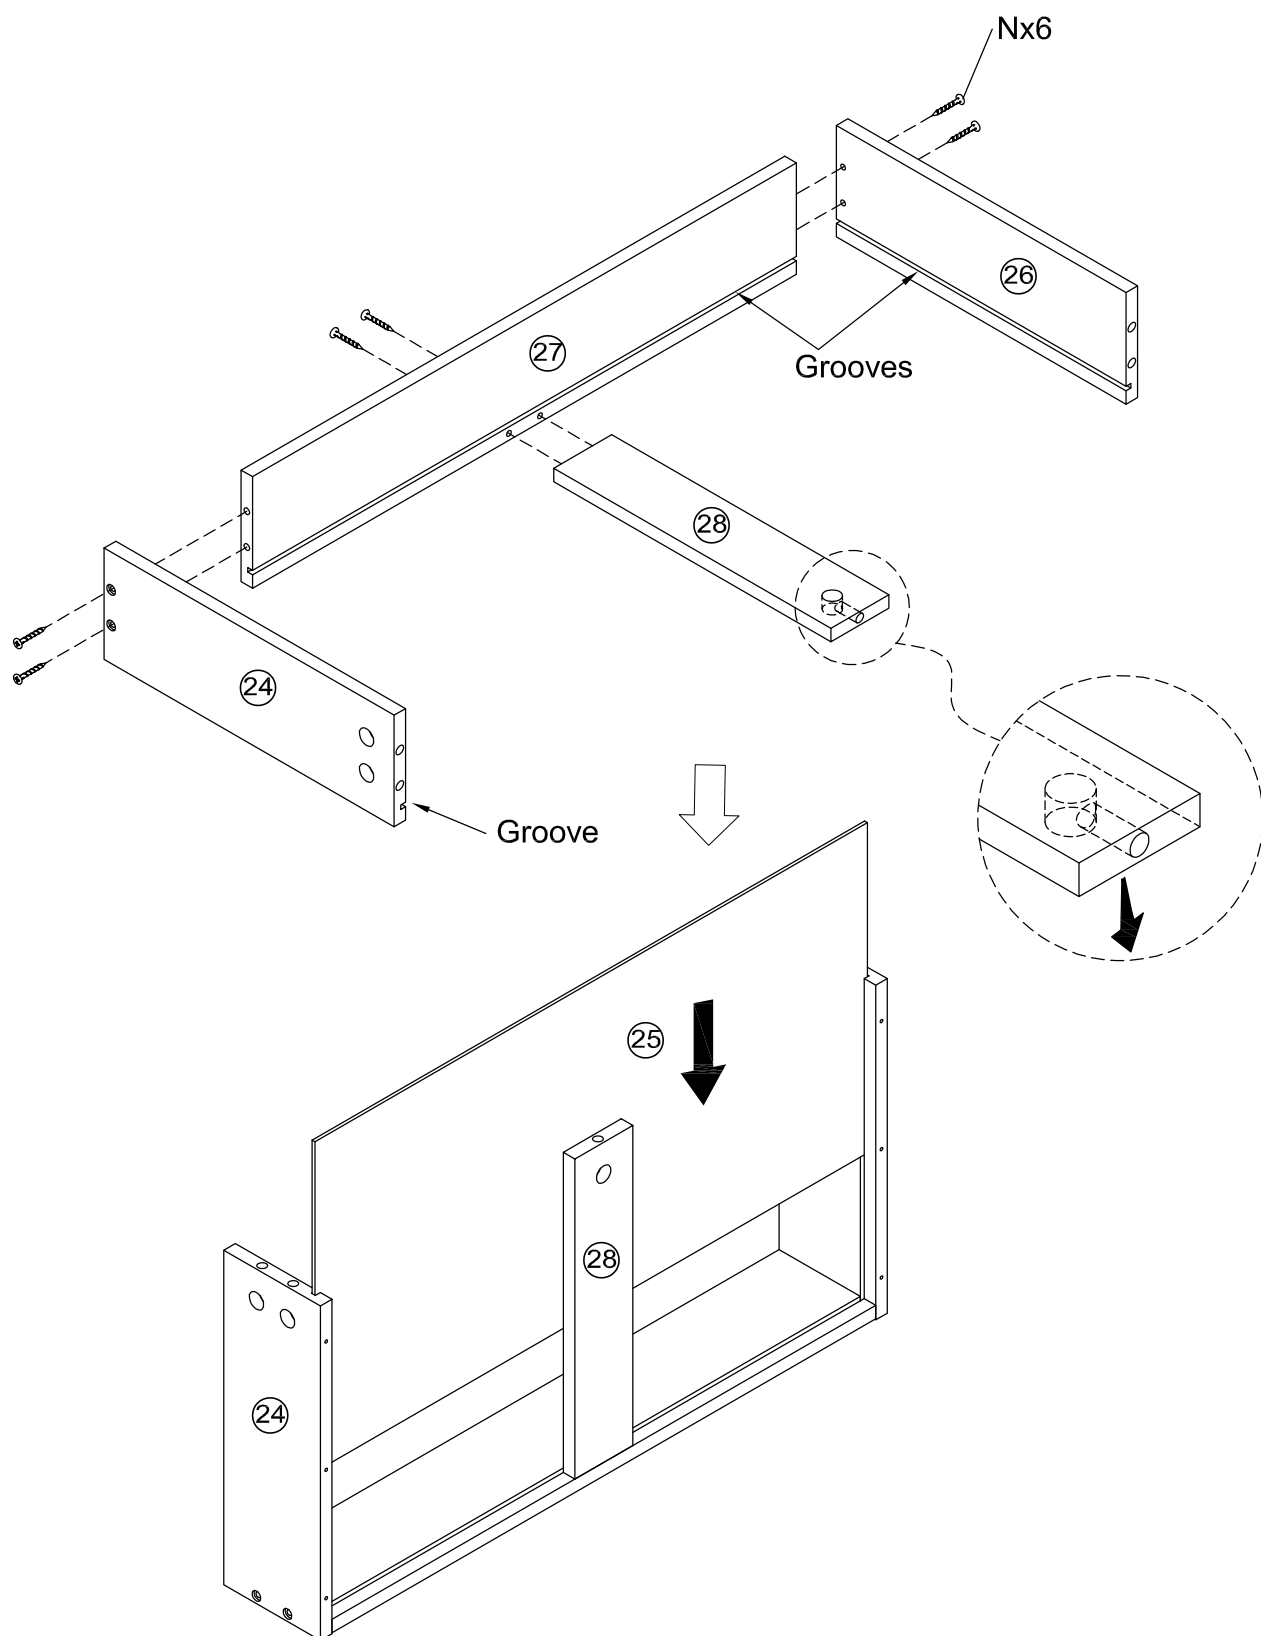


## STEP 24



Ax5



Bx5

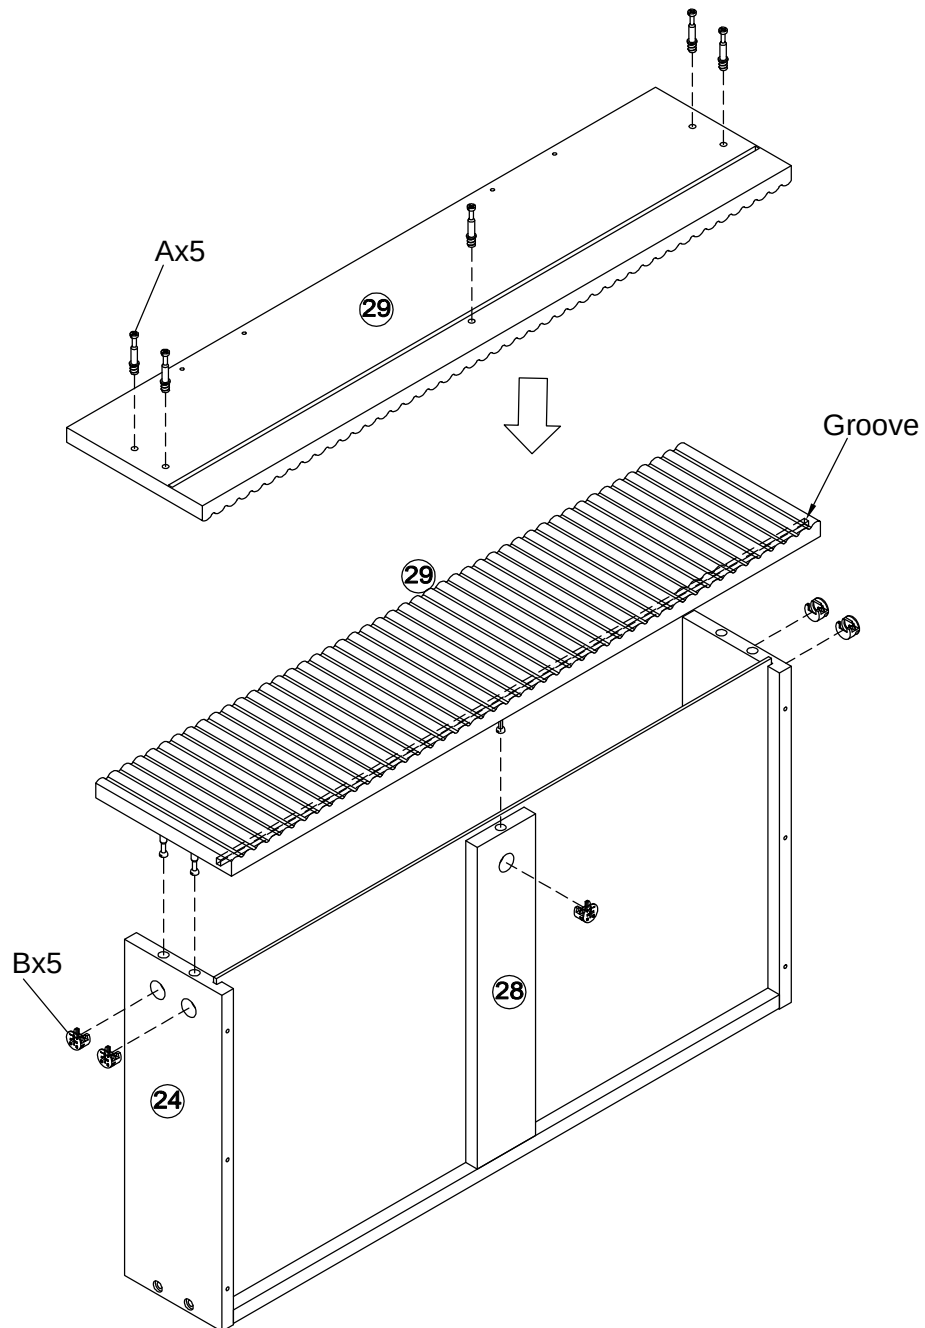


# STEP 25

Jx10

Wx2


DDx1

EEx1

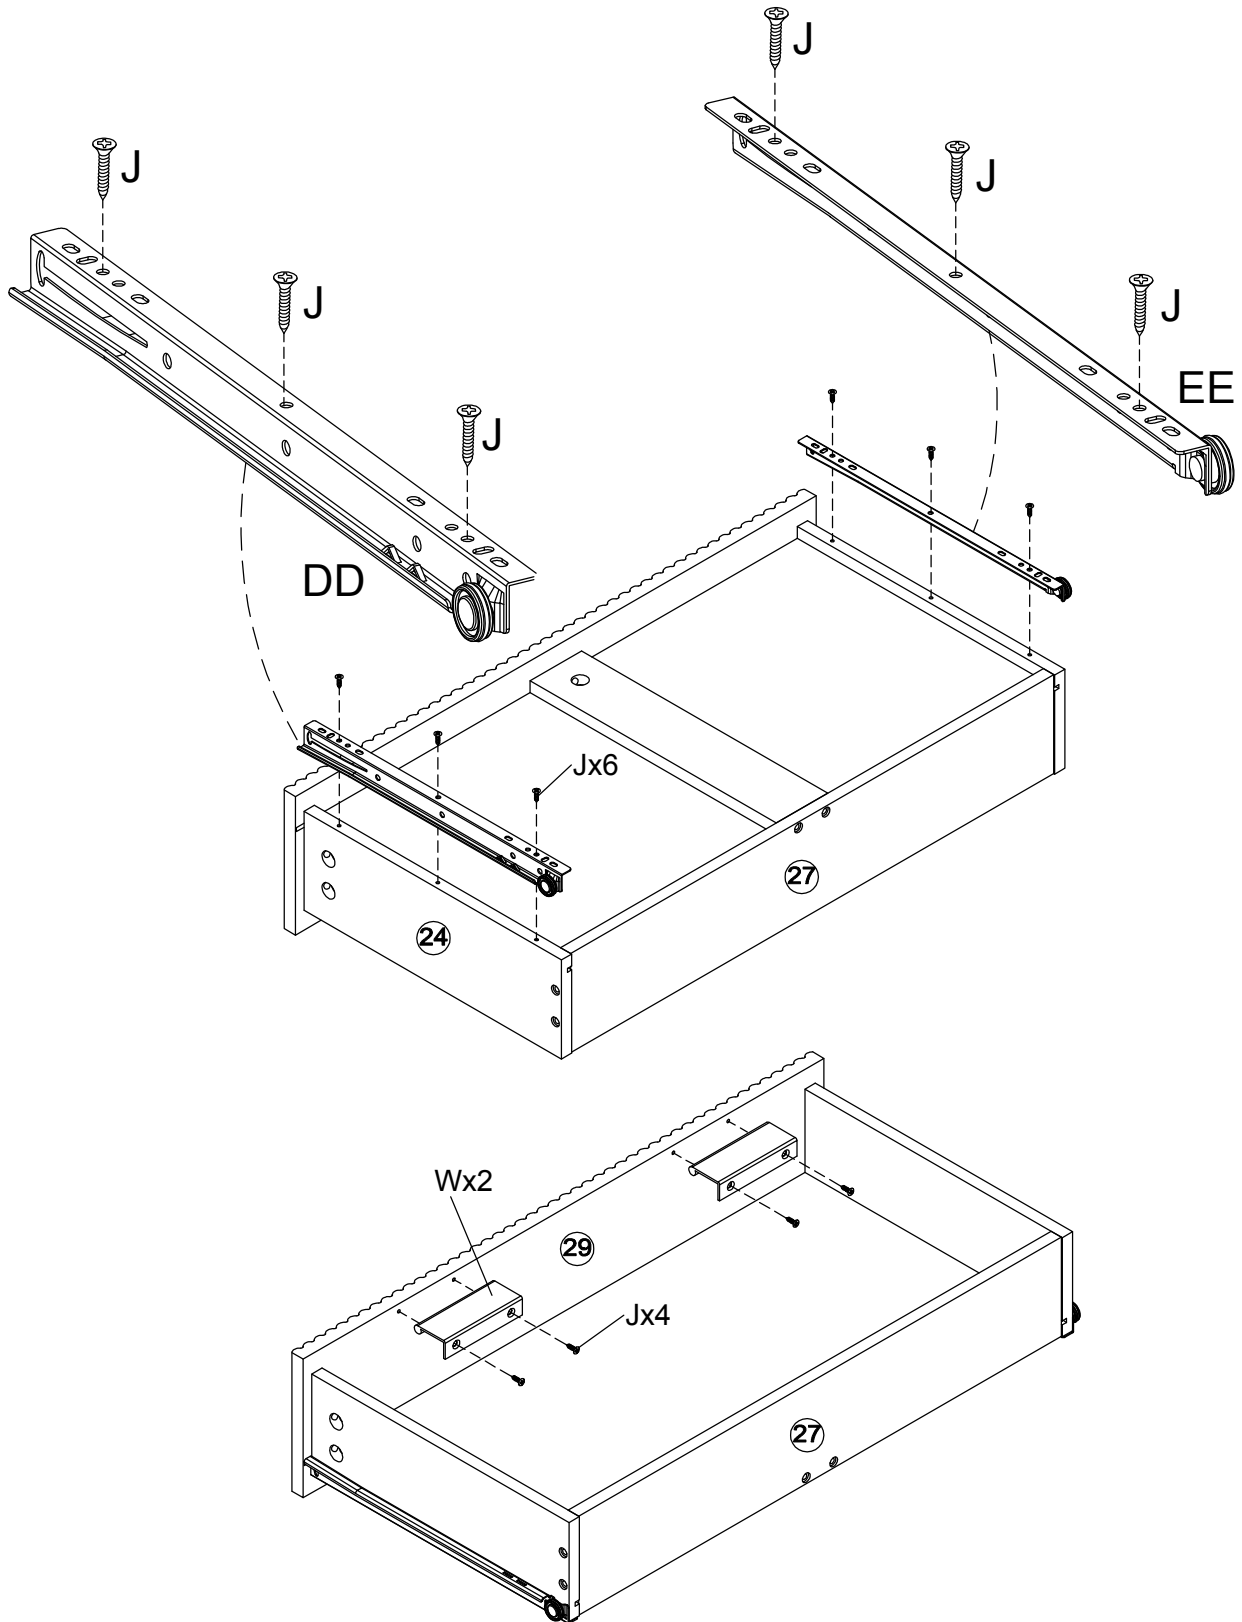


# STEP 26


0  
Cx65

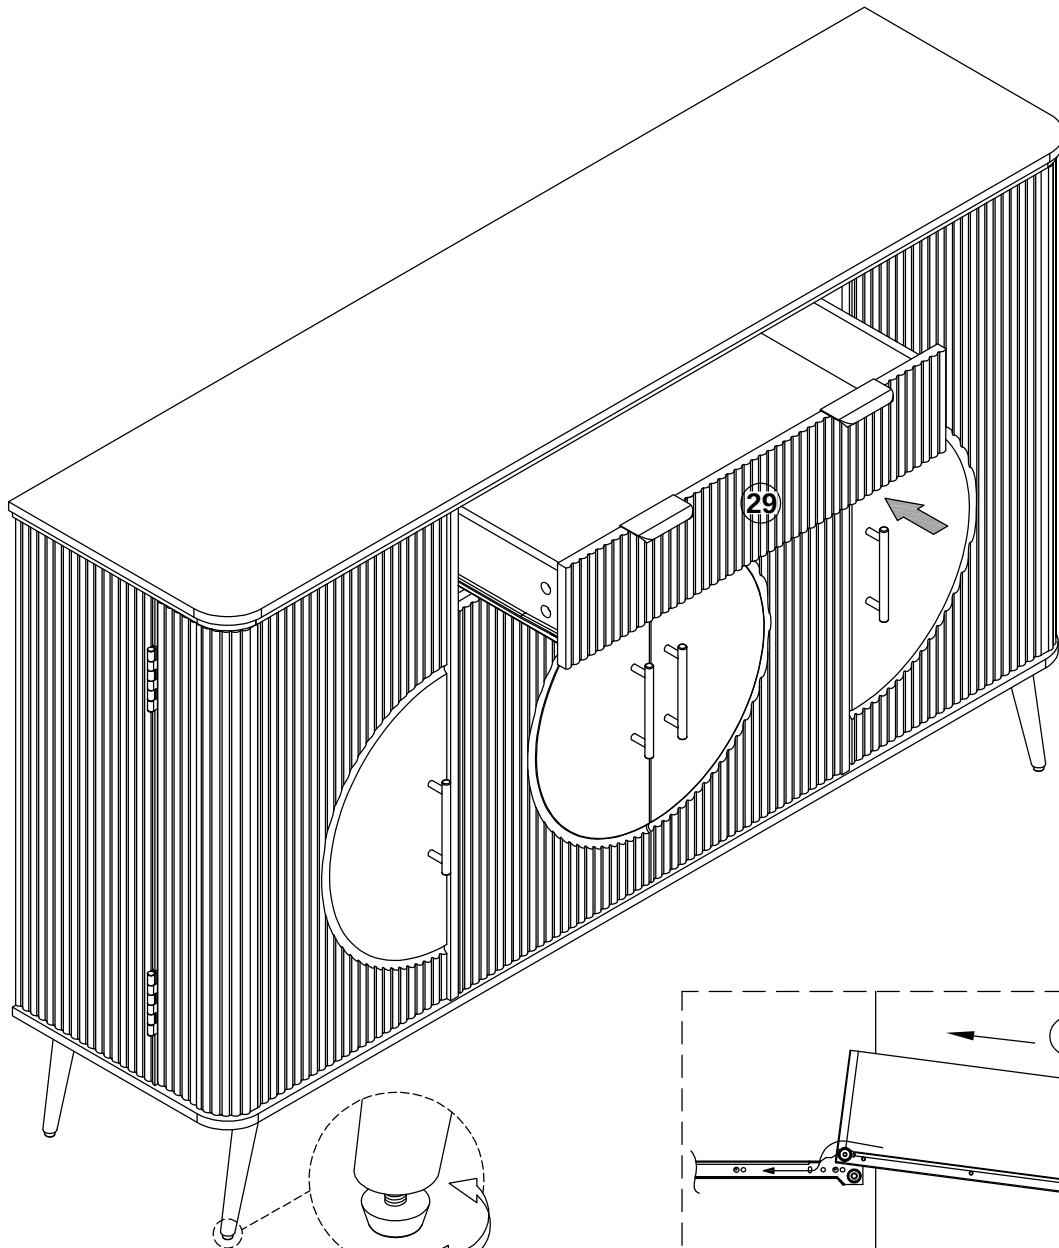

Adjustable foot height for uneven ground

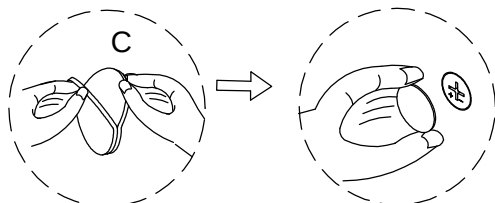

· Stick stickers (C) on cam locks (B) .

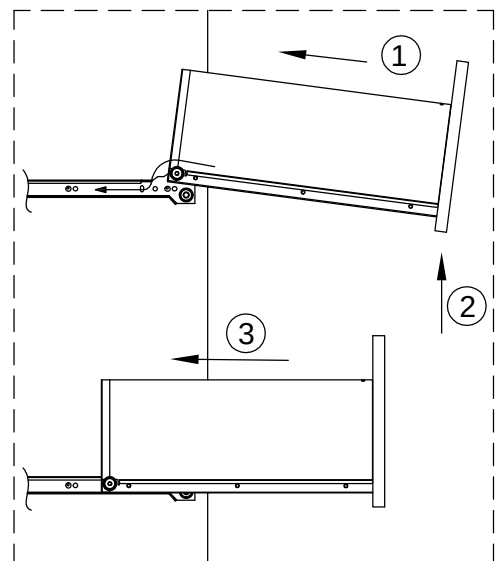

Final Assembly