

# ASSEMBLY INSTRUCTION

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.

**IMPORTANT : PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY.**

**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**

**"DO NOT OVERTIGHT ANY HARDWARE"**


**WARNING : SMALL PARTS AND HARDWARE NOT FOR CHILDREN UNDER 3 YEARS. ADULT ASSEMBLY REQUIRED.**

## TABLE OF CONTENTS

|                                       |             |
|---------------------------------------|-------------|
| HARDWARES LIST                        | PAGE 2 - 3  |
| PARTS LIST                            | PAGE 4 - 5  |
| PARTS' LOCATION                       | PAGE 6      |
| ASSEMBLY STEPS                        | PAGE 7 - 20 |
| ASSEMBLY COMPLETED                    | PAGE 21     |
| ANTI-TIPPING INSTALLMENT INSTRUCTIONS | PAGE 22     |
| PAY ATTENTION ITEMS                   | PAGE 23     |

## ASSEMBLY TOOLS REQUIRED


### 1. Screwdriver (not provide)












### 2. Hammer (not provide)

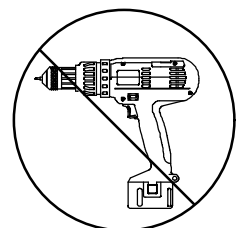

Skip the power trip this time.



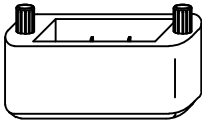

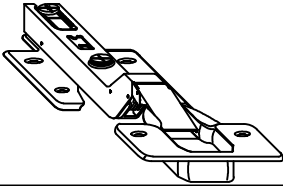
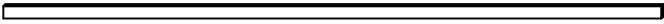
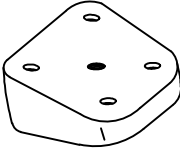



## HARDWARES LIST

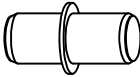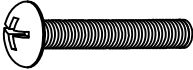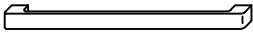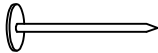



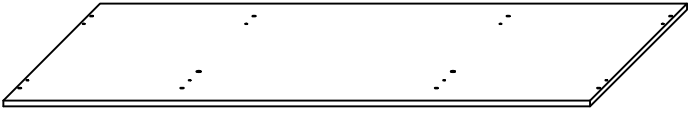
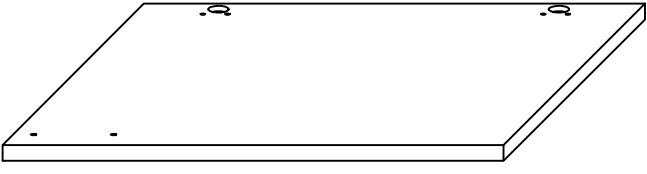
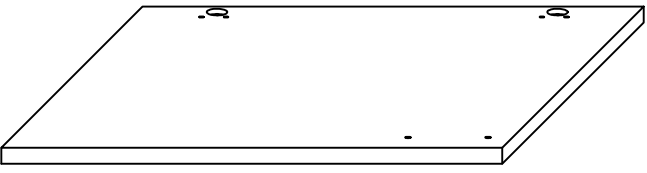
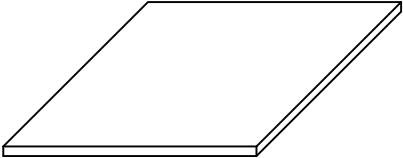

| ITEM | DESCRIPTION                  | DRAWING  | QTY    |
|------|------------------------------|--|--------|
| A    | MINIFIX CAM LOCK             |    | 34 PCS |
| B    | MINIFIX CAM BOLT             |    | 34 PCS |
| C    | WOOD DOWEL (M8 x 25MM)       |    | 16 PCS |
| D    | WOOD DOWEL (M6 x 25MM)       |    | 24 PCS |
| E    | SHELF SUPPORT<br>(M5 x 16mm) |  | 8 PCS  |
| F    | TRUSS M-SCREW (20MM)         |  | 10 PCS |
| G    | HANDLE                       |  | 5 PCS  |
| H    | 6/8" NAIL                    |  | 26 PCS |
| I    | LEFT DRAWER SLIDE            |  | 3 PCS  |

MORE HARDWARES DETAIL IN NEXT PAGE...
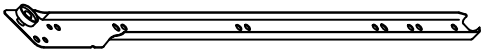
## HARDWARES LIST



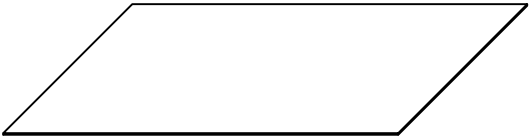
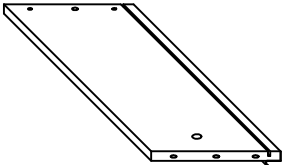
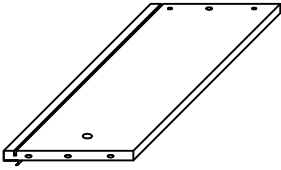
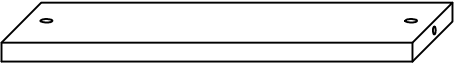

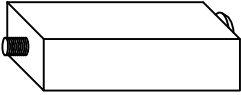
| ITEM | DESCRIPTION               | DRAWING  | QTY    |
|------|---------------------------|--|--------|
| J    | RIGHT DRAWER SLIDE        |    | 3 PCS  |
| K    | CSK SCREW M3 x 10mm       |    | 24 PCS |
| L    | PLASTIC STOPPER           |    | 2 PCS  |
| M    | CSK C/B SCREW (M4 x 16MM) |    | 24 PCS |
| N    | SOFT-CLOSE HINGES         |  | 4 PCS  |
| O    | PLASTIC STRIP (H SHAPE)   |  | 1 PC   |
| P    | BOTTOM SUPPORTING PLASTIC |  | 4 PCS  |
| Q    | PANHEAD SCREW (M4 x 21MM) |  | 16 PCS |
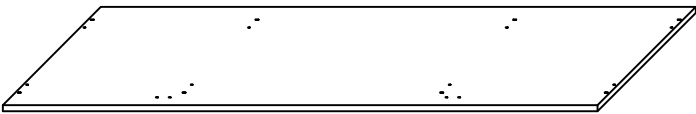
## PARTS LIST

| ITEM | DESCRIPTION          | DRAWING  | QTY   |
|------|----------------------|--|-------|
| 1    | TOP PANEL            |    | 1 PC  |
| 2    | SIDE PANEL           |    | 2 PCS |
| 4    | CENTRE PANEL - LEFT  |    | 1 PC  |
| 5    | CENTRE PANEL - RIGHT |   | 1 PC  |
| 6    | BOTTOM PANEL         |  | 1 PC  |
| 7    | LEFT SIDE DOOR       |  | 1 PC  |
| 8    | RIGHT SIDE DOOR      |  | 1 PC  |
| 9    | COMPARTMENT PANEL    |  | 2 PCS |
| 10   | BACK PANEL           |  | 2 PCS |


MORE PARTS DETAIL IN NEXT PAGE...

## PARTS LIST

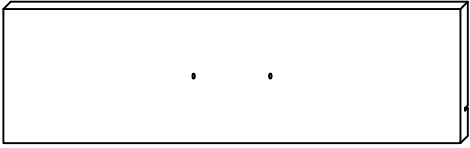
| ITEM | DESCRIPTION                | DRAWING  | QTY   |
|------|----------------------------|--|-------|
| 11   | DRAWER HEAD                |    | 3 PCS |
| 12   | DRAWER BACK PANEL          |    | 3 PCS |
| 13   | DRAWER BOTTOM PANEL        |    | 3 PCS |
| 19   | DRAWER LEFT PANEL          |   | 3 PCS |
| 20   | DRAWER RIGHT PANEL         |  | 3 PCS |
| 21   | DRAWER BOTTOM SUPPORT RAIL |  | 3 PCS |
| 22   | BOTTOM SUPPORT LEG         |  | 4 PCS |
| 23   | CENTRE SUPPORT LEG         |  | 2 PCS |

## PARTS ' LOCATION

### SIDEBOARD x 1 PC

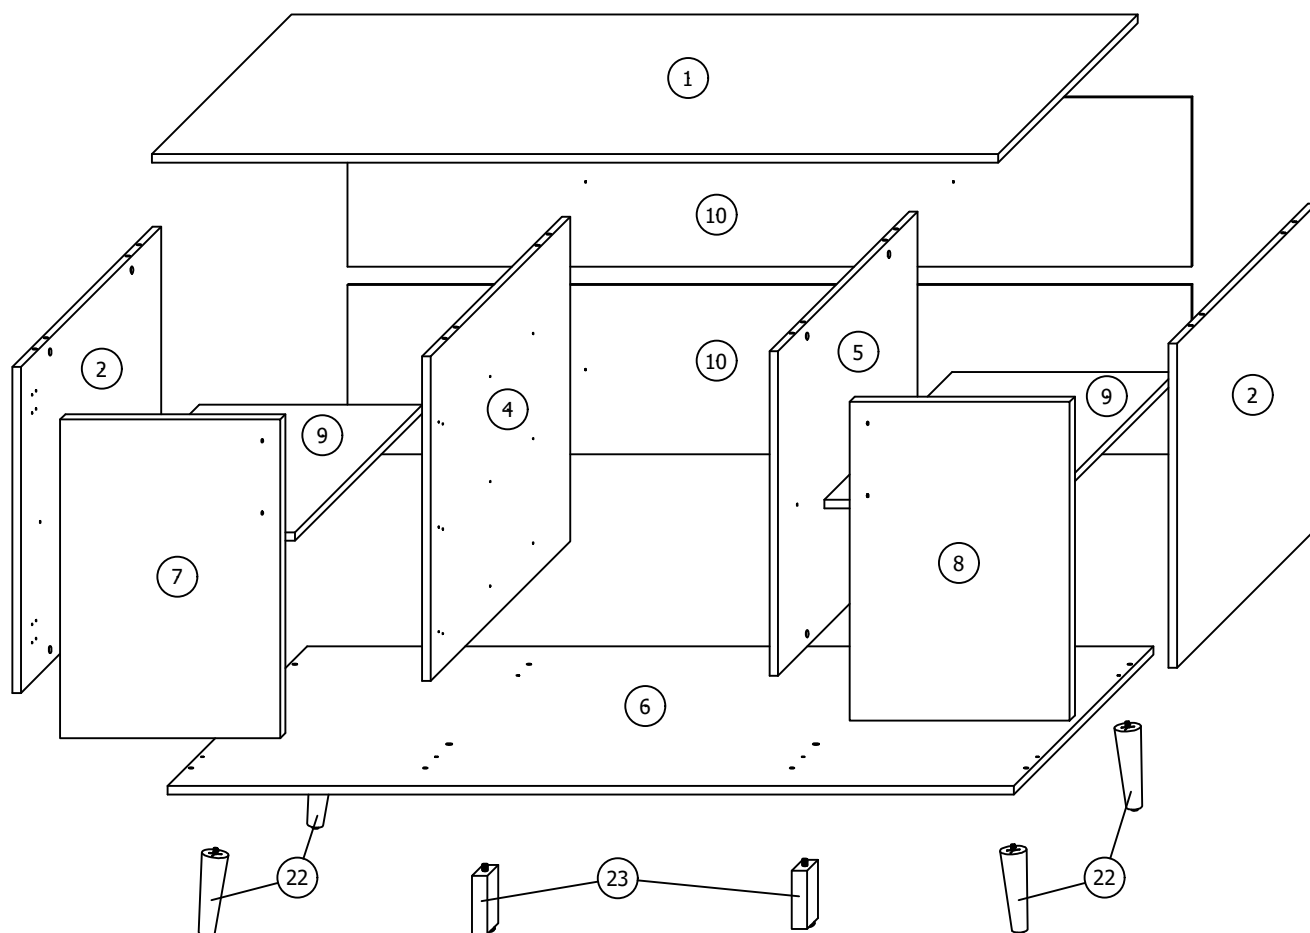



### DRAWER x 3 PCS

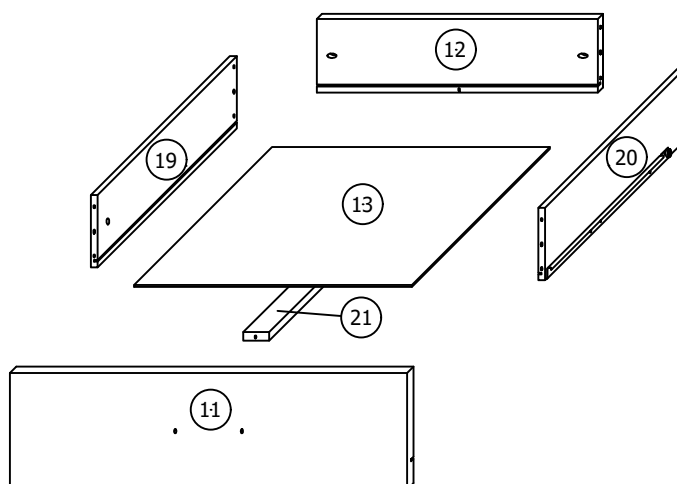


## ASSEMBLY STEPS

### STEP 1


Fix the 3 pieces (I) to the right side of (4) by using 12 pieces (K). Then insert 4 pieces (A), 2 pieces (E) to left side as shown.

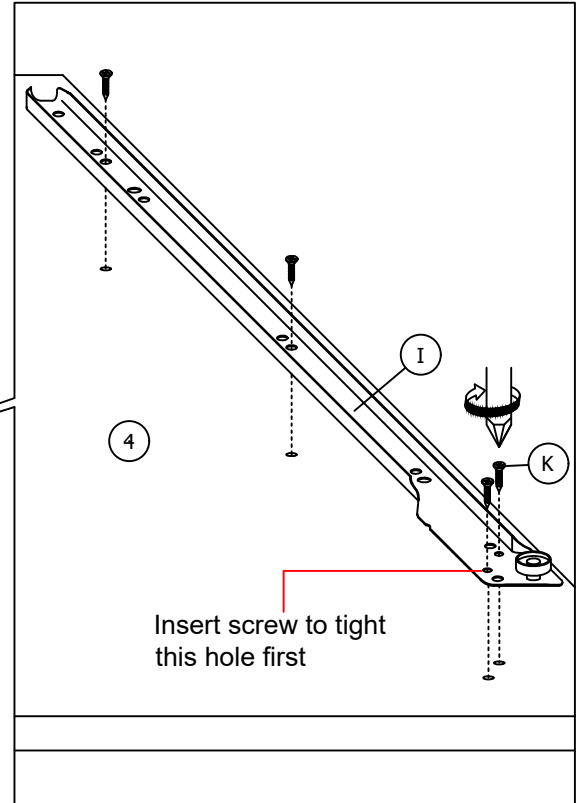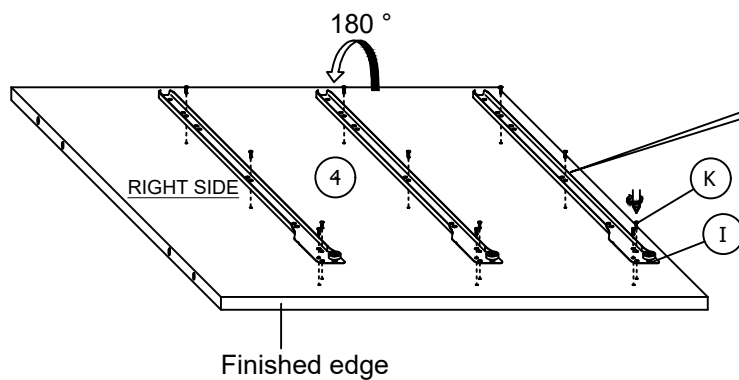

Arrow need to face outside.


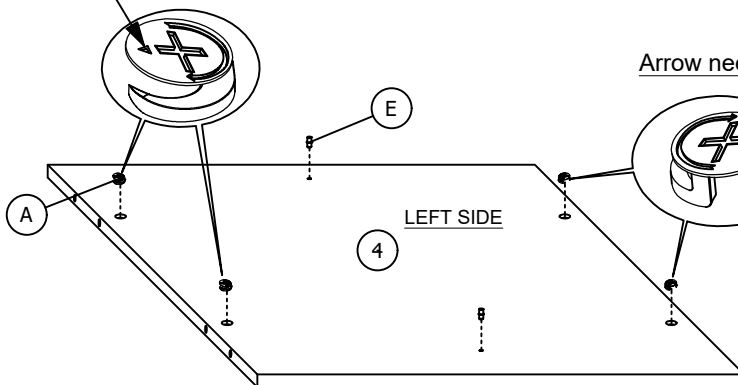


Assembled looks

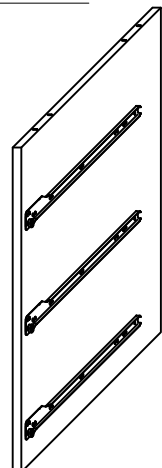


## STEP 2

Fix the 3 pieces (J) to the left side of (5) by using 12 pieces (K). Then insert 4 pieces (A), 2 pieces (E) to right side as shown.

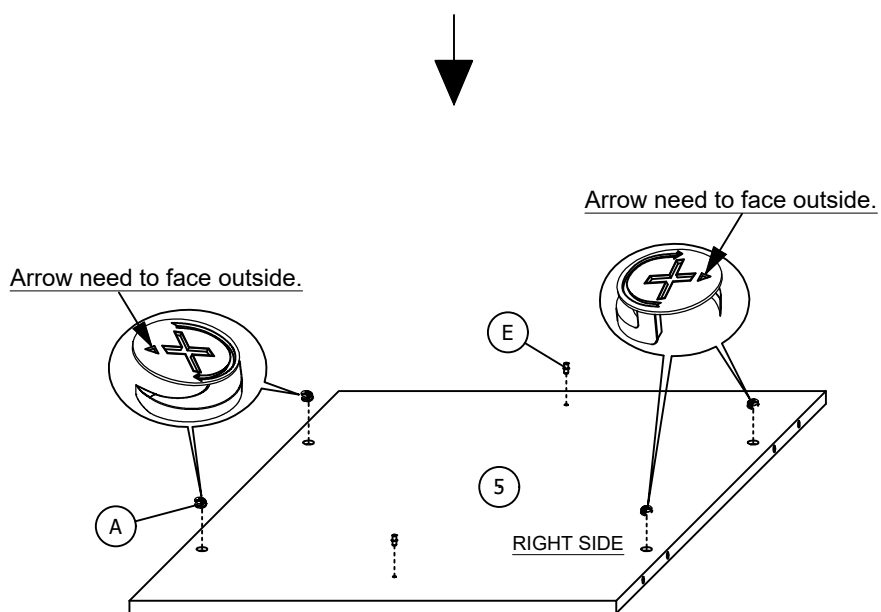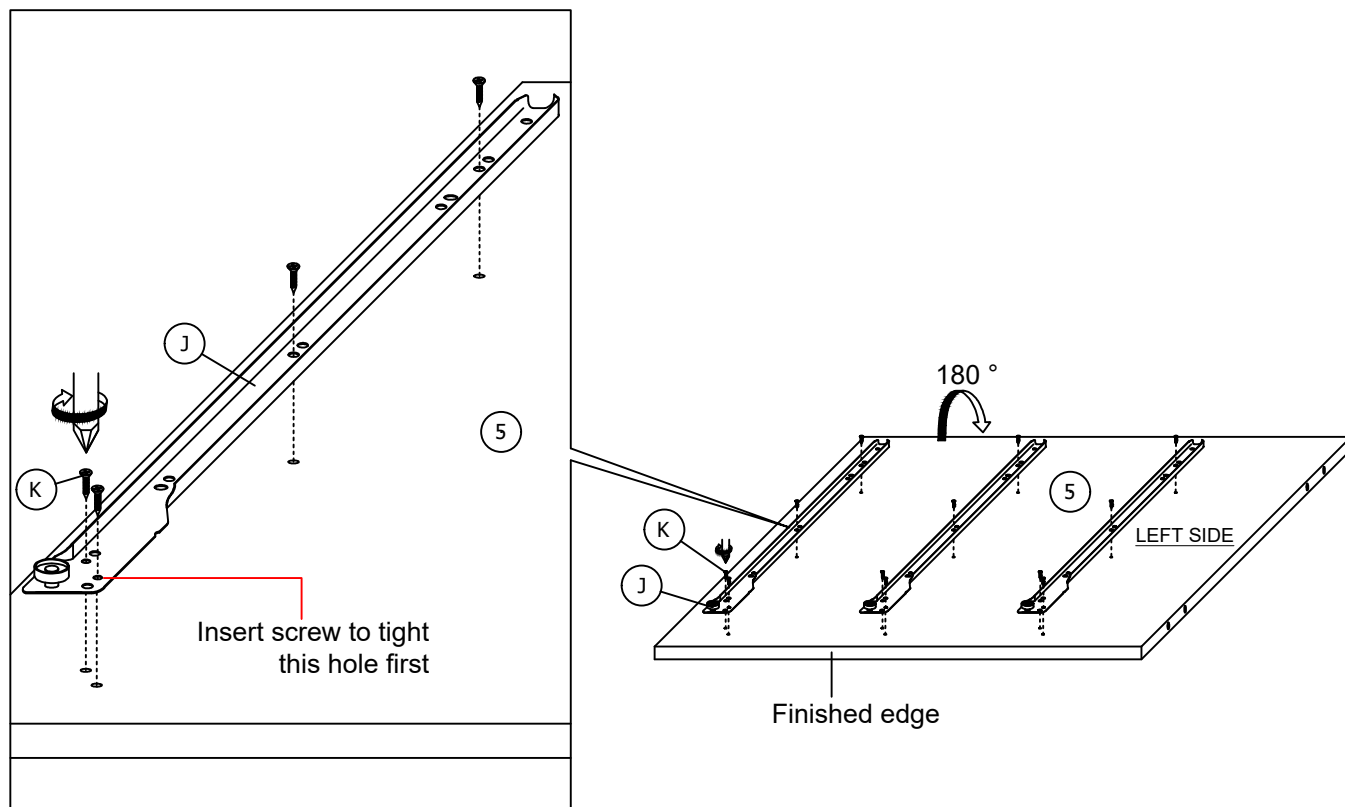


Assembled looks

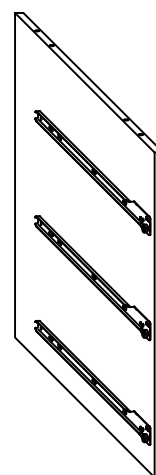




### STEP 3

Insert 4 pieces (A), 2 pieces (E) to the (2) as shown. This step needs to be **done twice**.

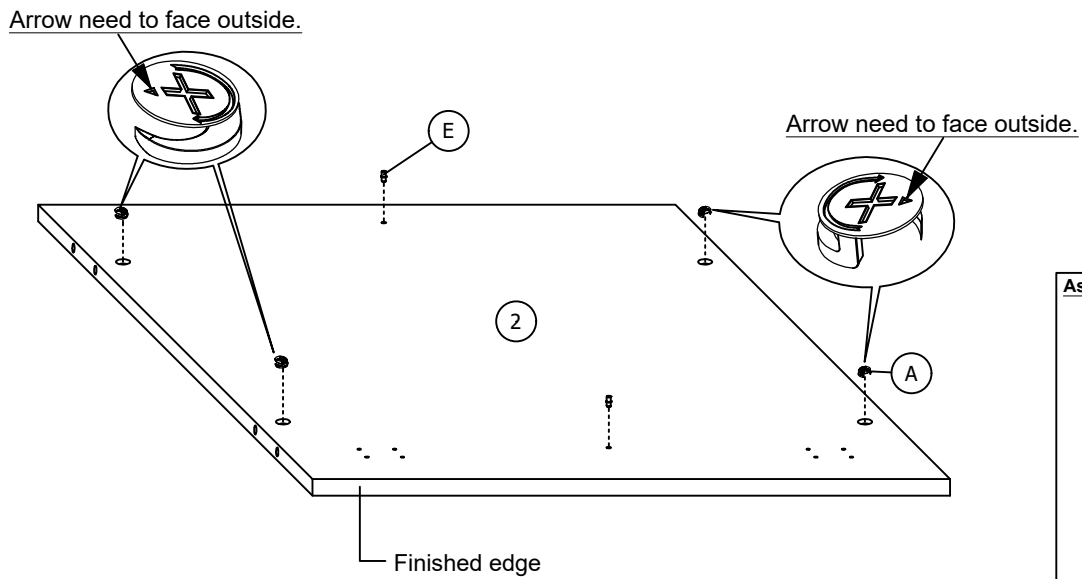


Assembled looks

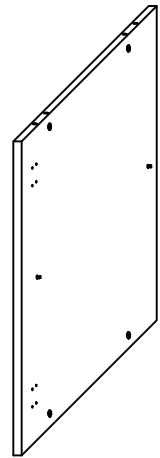


### STEP 4

Insert 8 pieces (B),(C) to the (6) as shown.

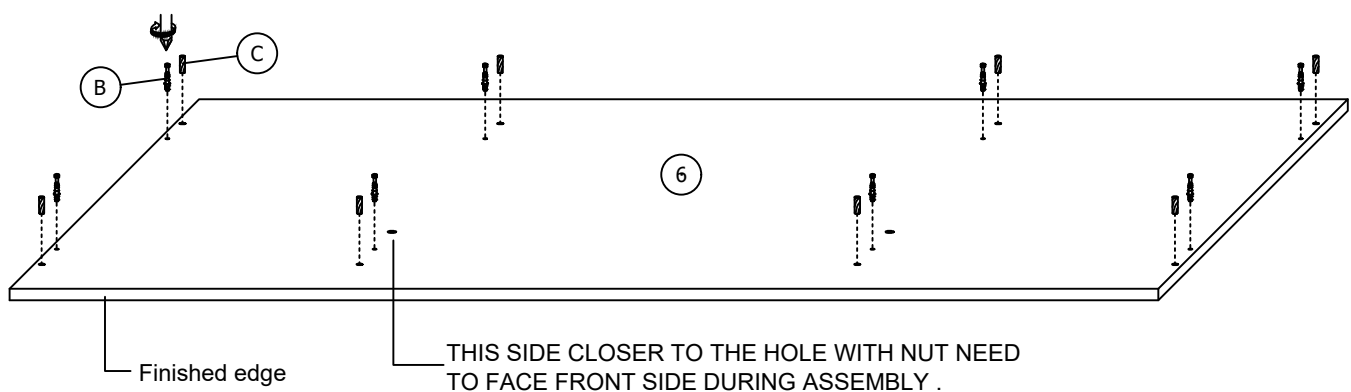


Assembled looks

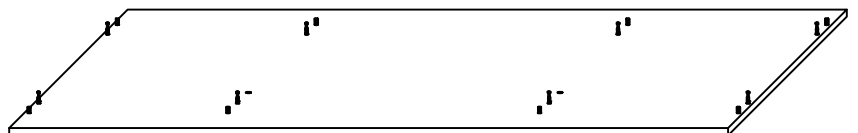


## STEP 5

Insert 8 pieces (B),(C) and the 2 pieces (L) to the (1) as shown.

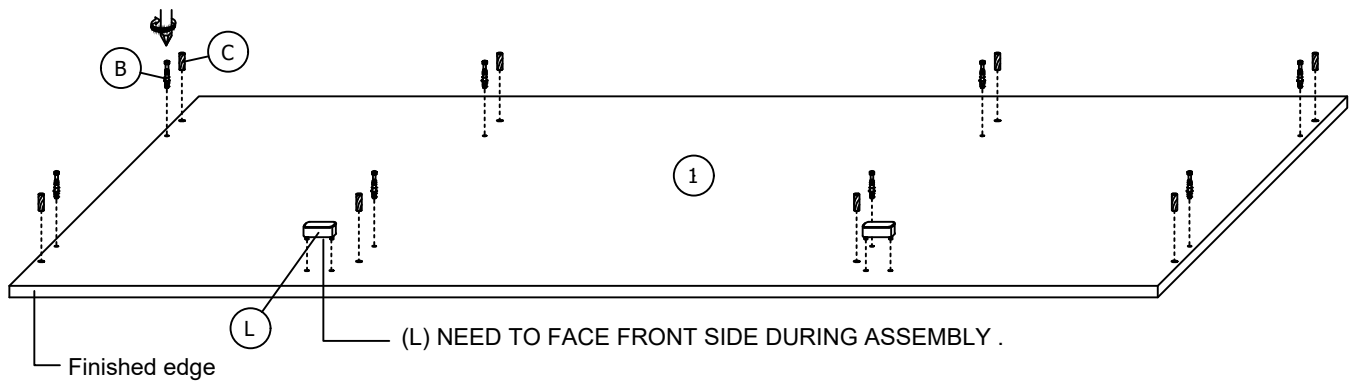



Assembled looks

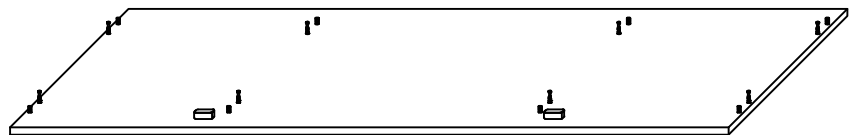

## STEP 6

Combine the (2),(4),(5) to the (6) then tighten the 8 pieces (A)-(pre insert in step 1 to 3) as shown.


Note: All side which facing to front must be finished edge.

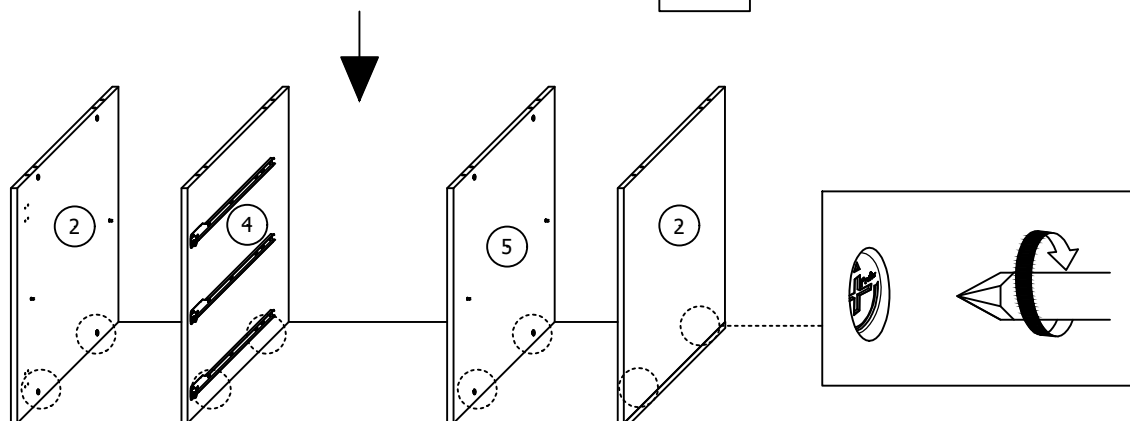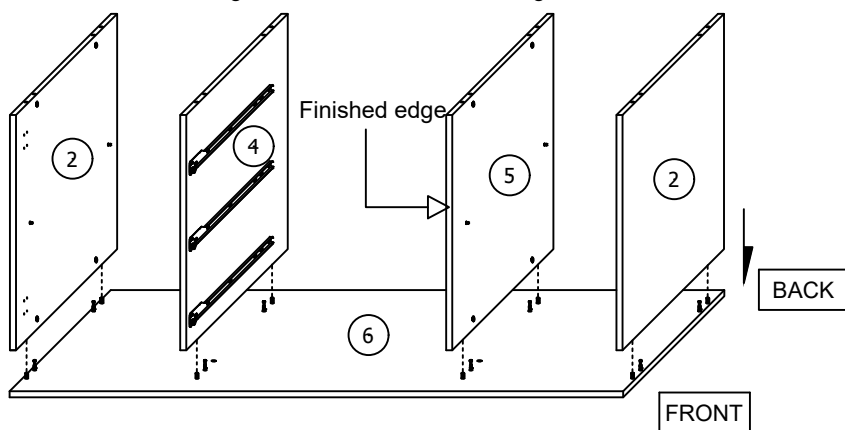

### STEP 7


Combine the (1) to the (2),(4),(5) then tighten the remaining 8 pieces (A)-(pre insert in step 1 to 3) as shown.

Note: All side which facing to front must be finished edge.

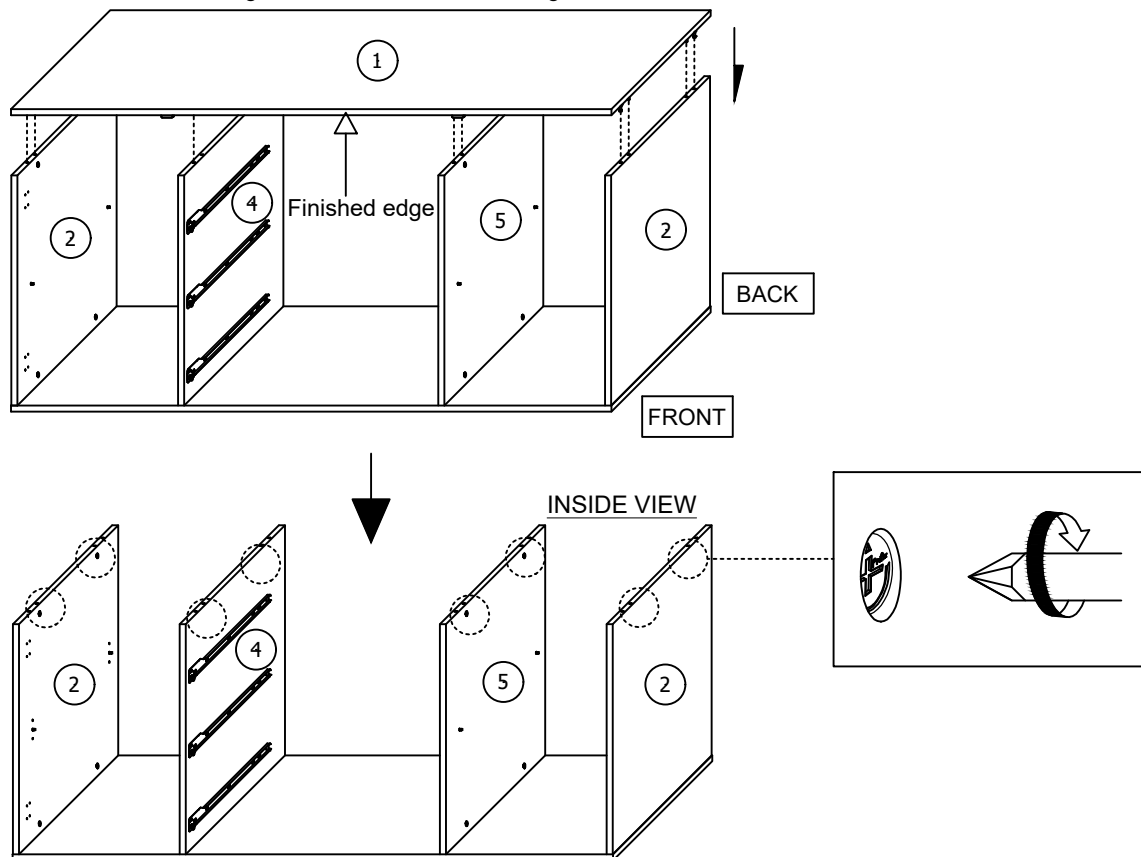


### STEP 8

Put the 2 pieces (10) to the gap of (O) as shown. Direction of the side with colored paper must be the same.

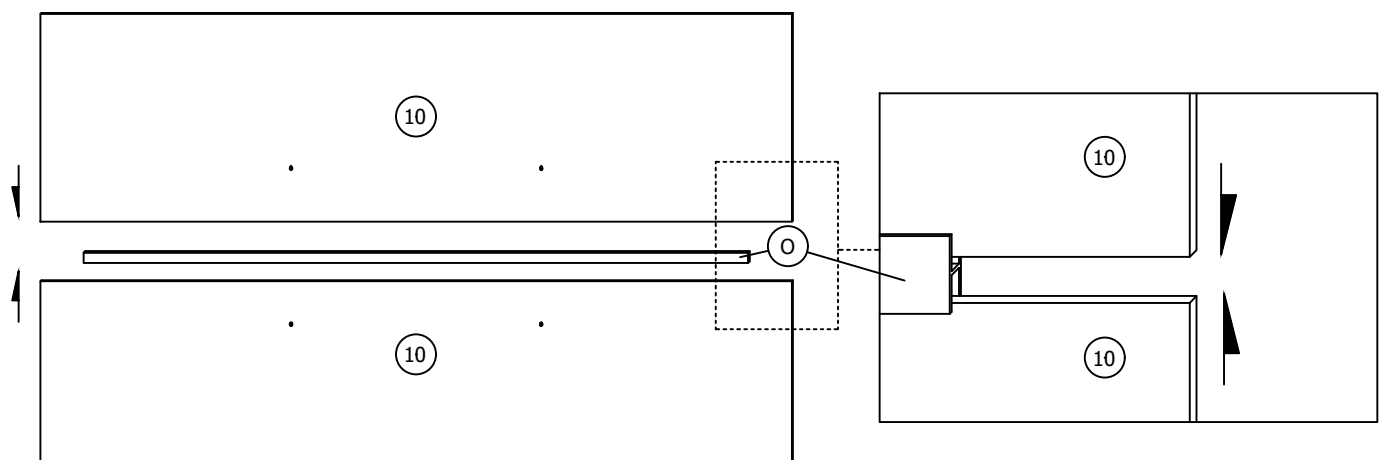


### STEP 9

Insert the 26 pieces (H) to fix the 2 pieces (10) as shown. Colored paper face to inside.  
To prevent blocking (2), make sure the (O) at the middle of (10), do not over left or right.

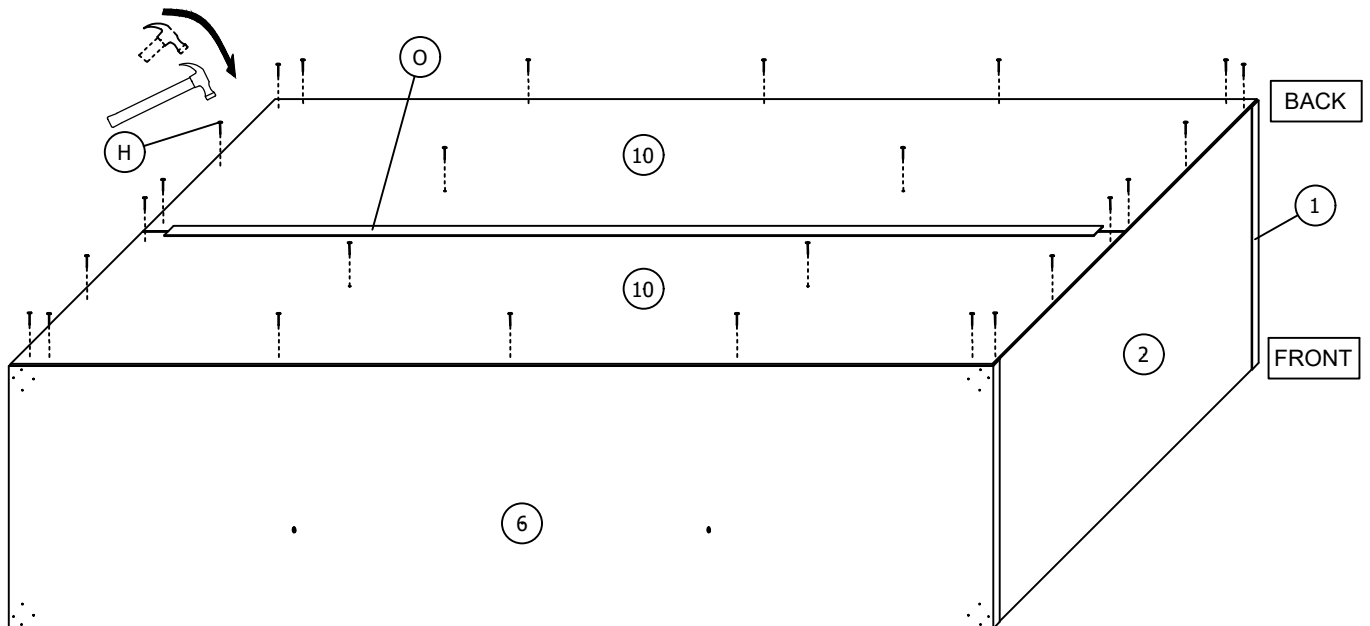


### STEP 10

Insert the 16 pieces (Q) to fix the 4 pieces (P) to the (6) as shown.

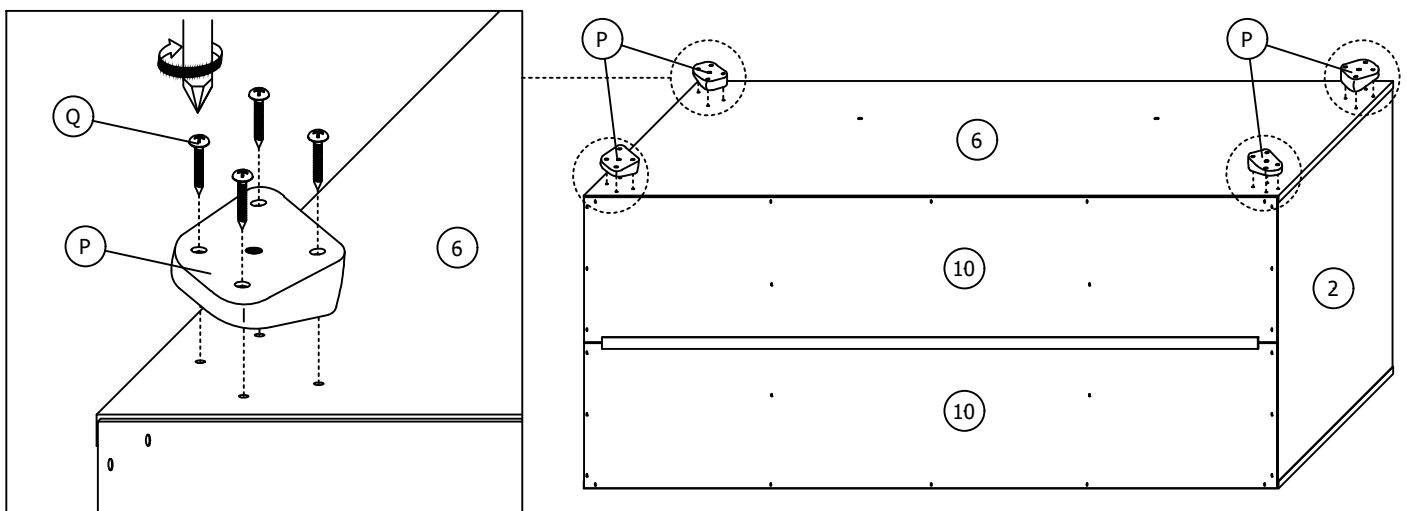


### STEP 11

Turn the (22),(23) clockwise, to combine(22) to (P), (23) to the (6) as shown.

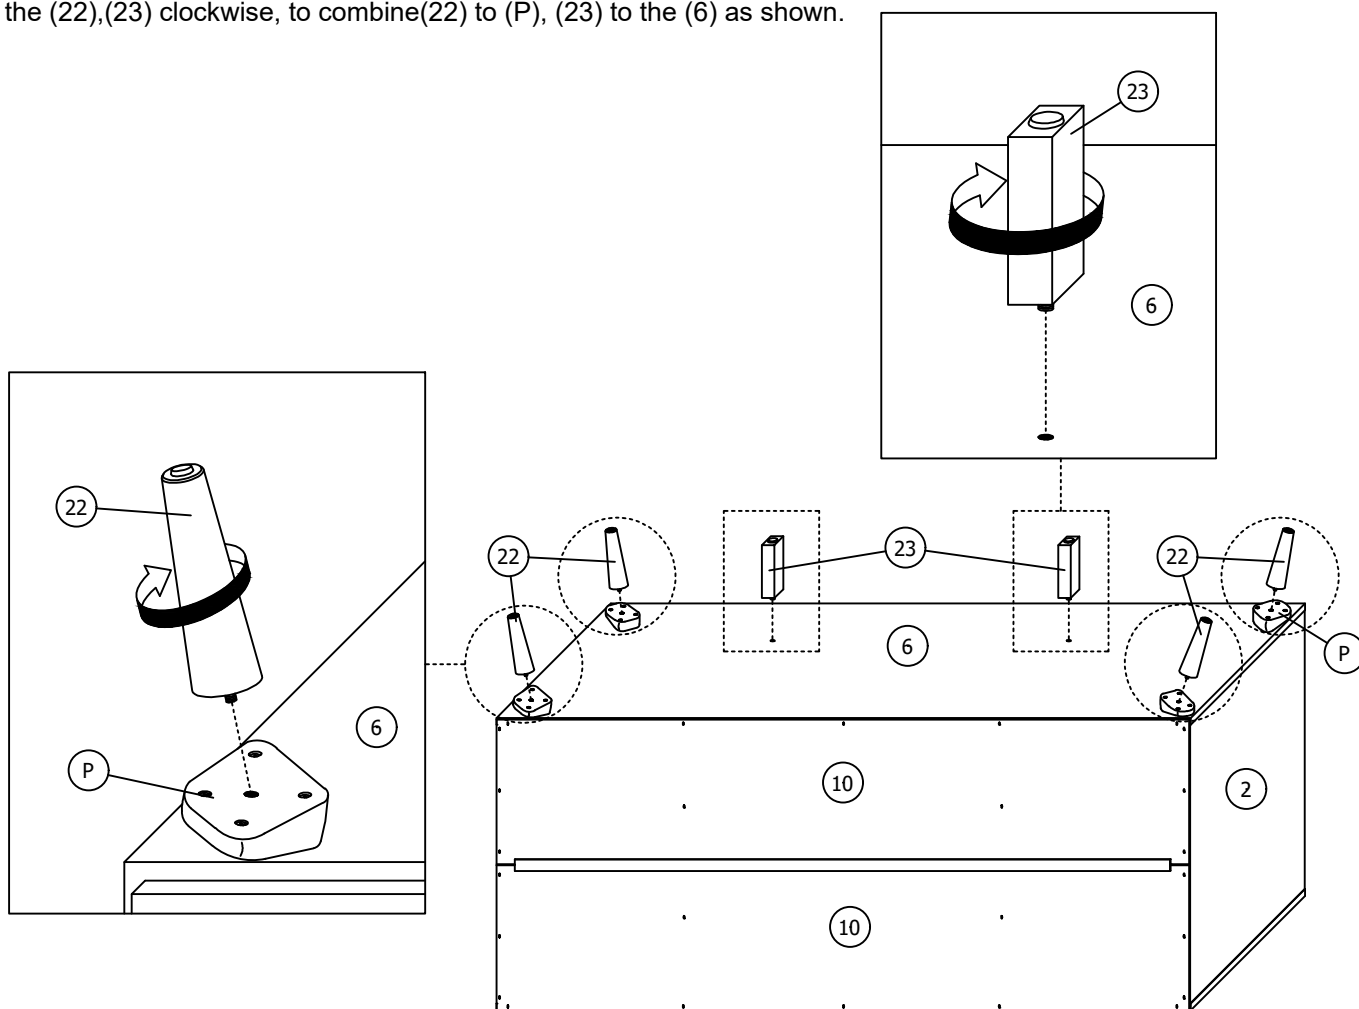


### STEP 12

Insert 3 pieces (B) to the (11) as shown. This step needs to be **done three times**.

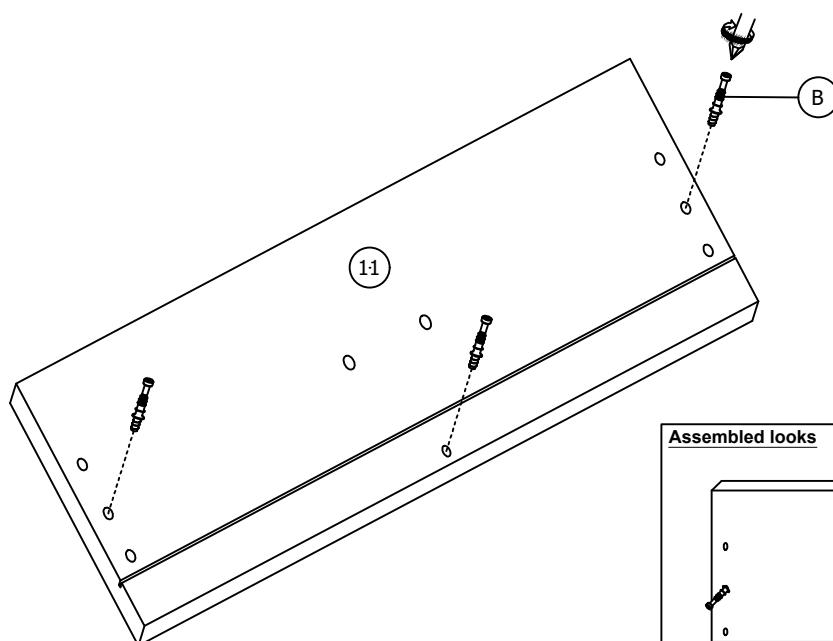


Assembled looks

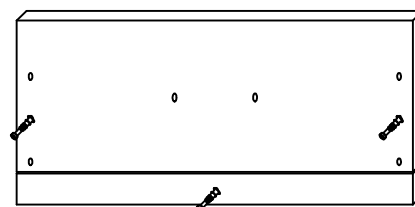


### STEP 13

Insert 1 piece (A),(B) and 2 pieces (D) to (19) as shown. This step needs to be **done three times**.

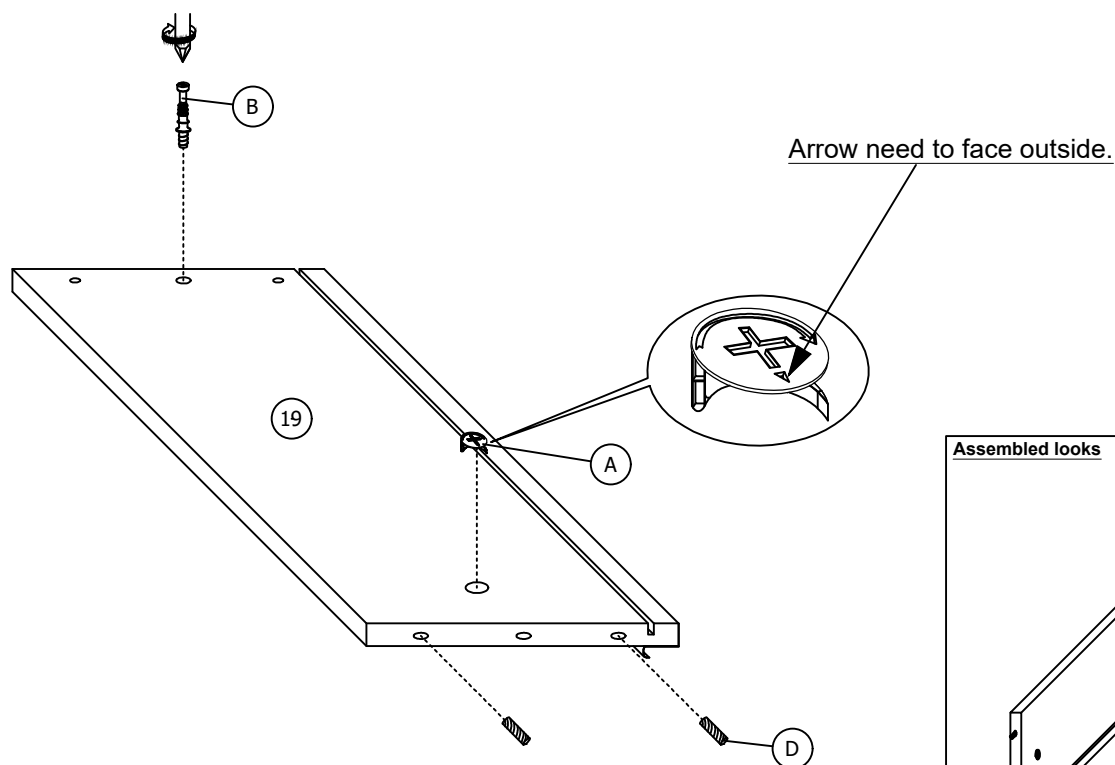


Assembled looks

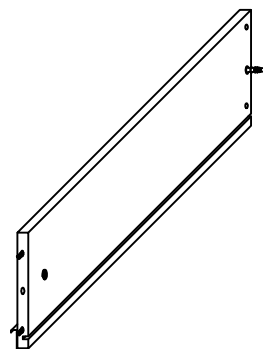


### STEP 14

Insert 1 piece (A),(B) and 2 pieces (D) to (20) as shown. This step needs to be **done three times**.

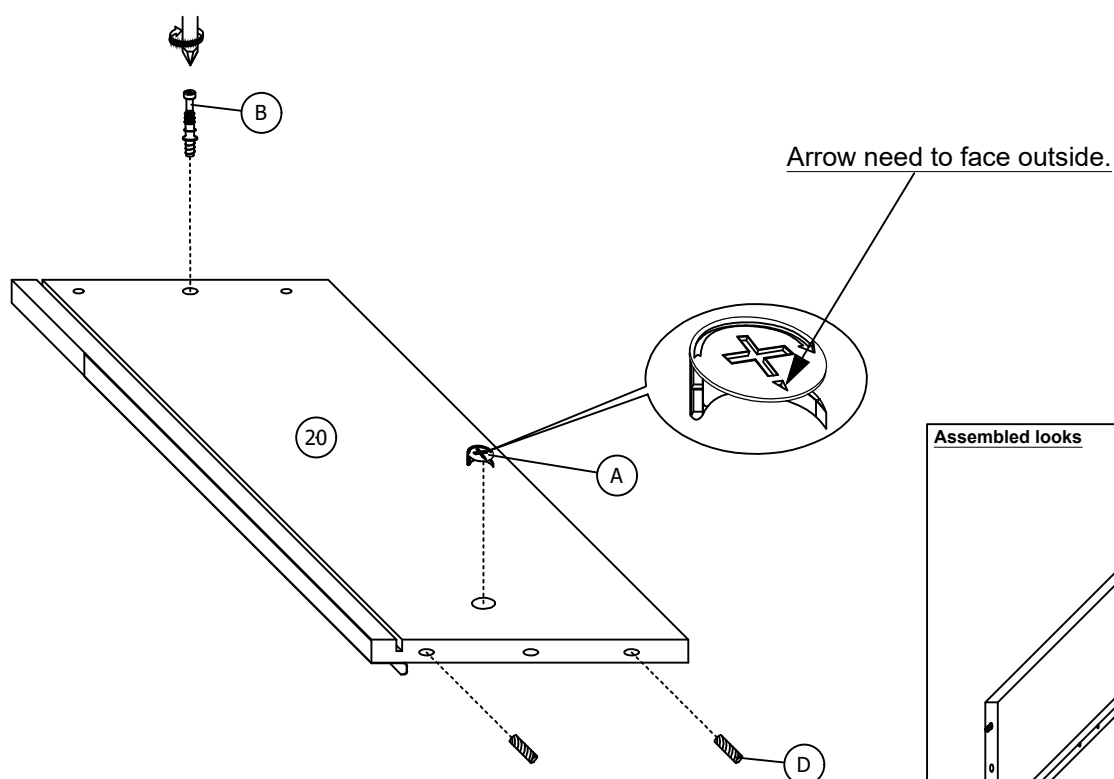


Assembled looks

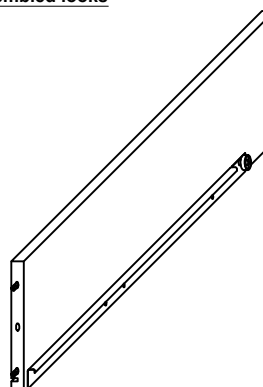


### STEP 15

Insert 2 pieces (A) , 1 piece (B) and 4 pieces (D) to (12) as shown. This step needs to be **done three times**.

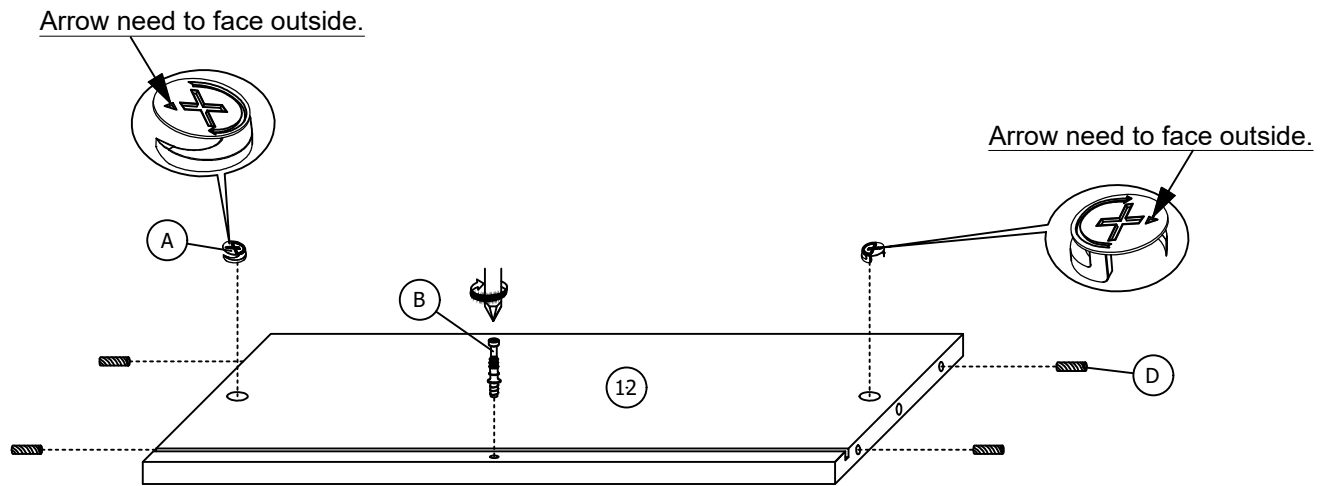


Assembled looks

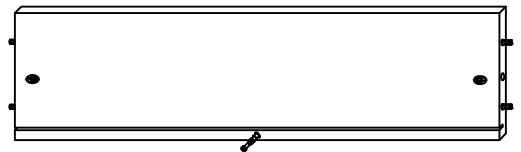


### STEP 16

Insert 2 pieces (A) to (21) as shown. This step needs to be **done three times**.

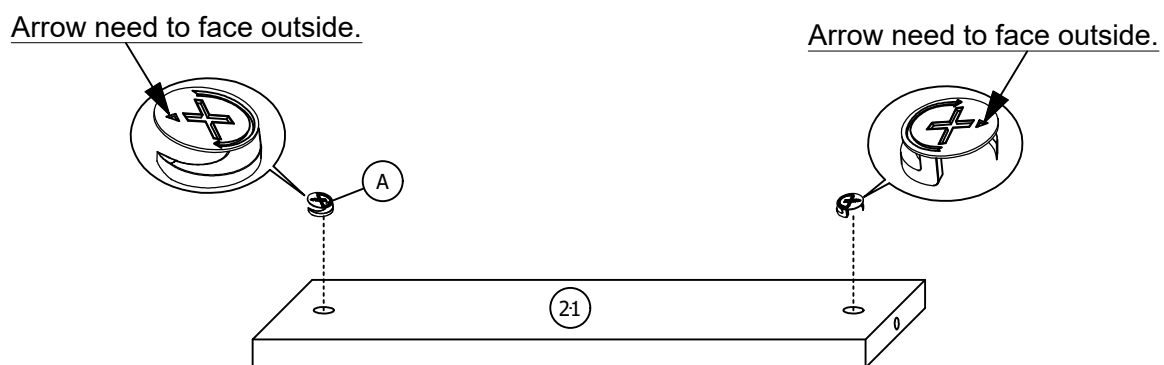


Assembled looks




### STEP 17

Combine the (19) and (20) to the (12). Then tighten the 2 pieces (A)-(pre-insert in step 15) as shown. This step needs to be **done three times**.

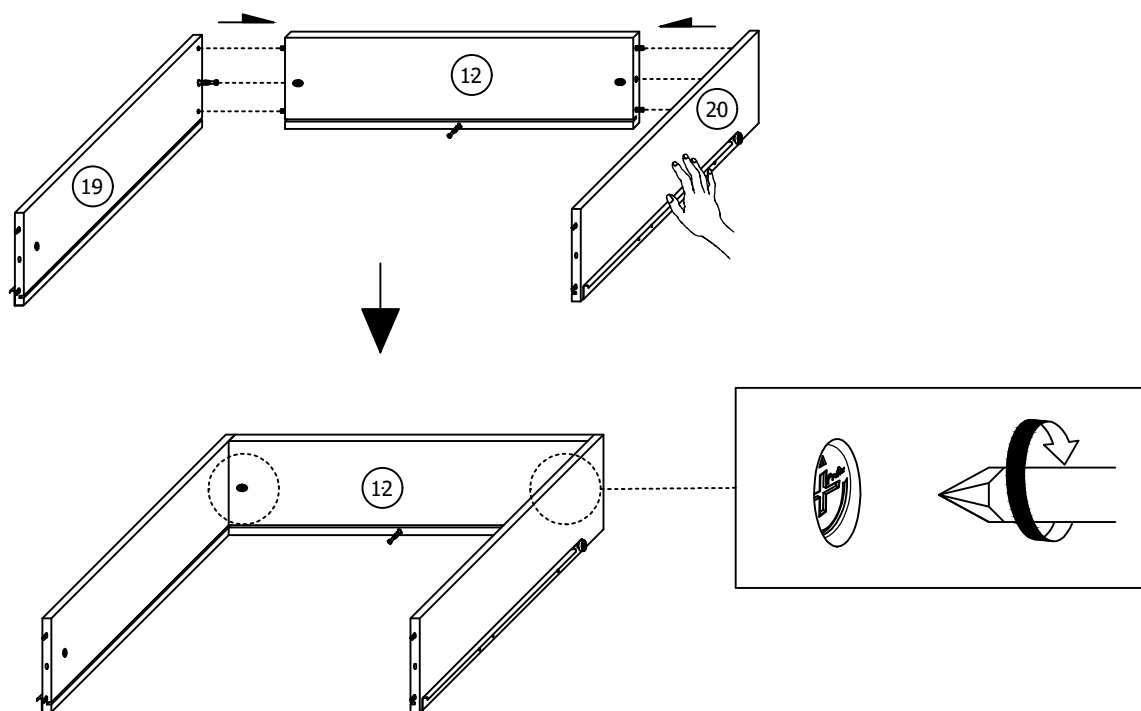

### STEP 18


Put the (13) into the gap of (19),(20) and (12) as shown. This step needs to be **done three times**.

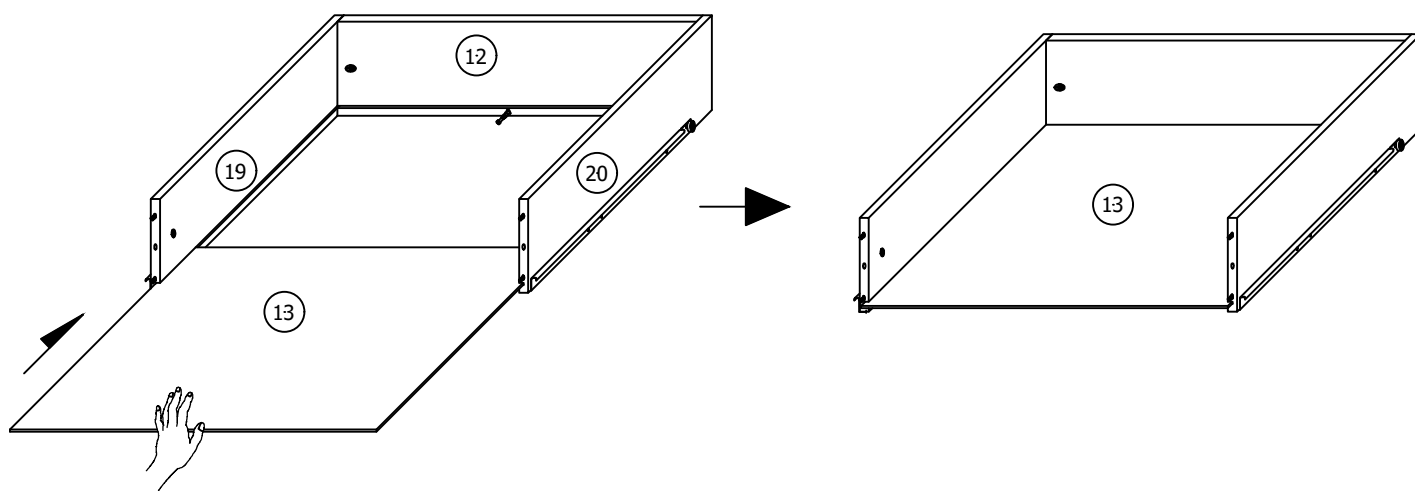




### STEP 19

Combine the (21) to the (12) then tighten the 1 piece (A)-(pre-insert in step 16) as shown. This step needs to be **done three times**.

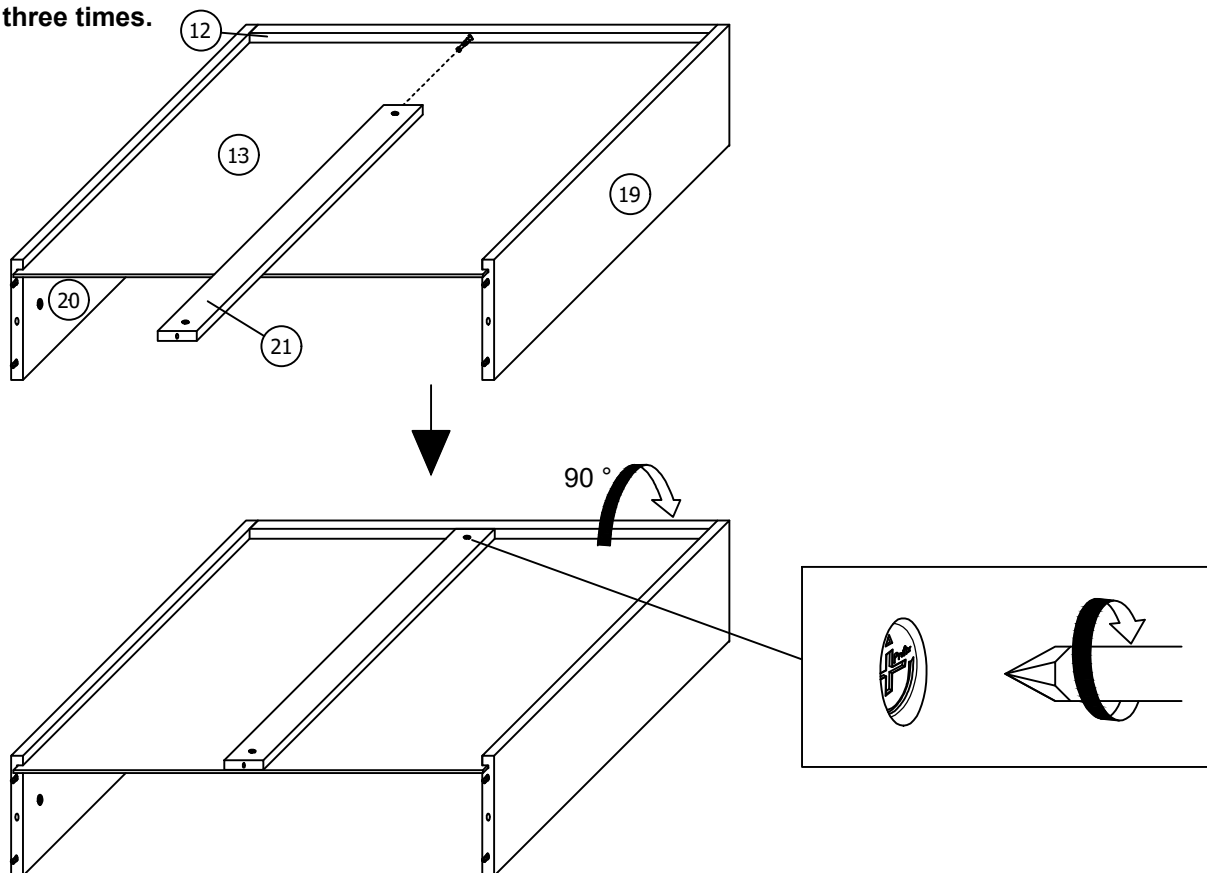


### STEP 20

Combine the (11) to the drawer frame. Then tighten the 3 pieces (A)-(pre-insert in step 13, 14 and 16) as shown. This step needs to be **done three times**.

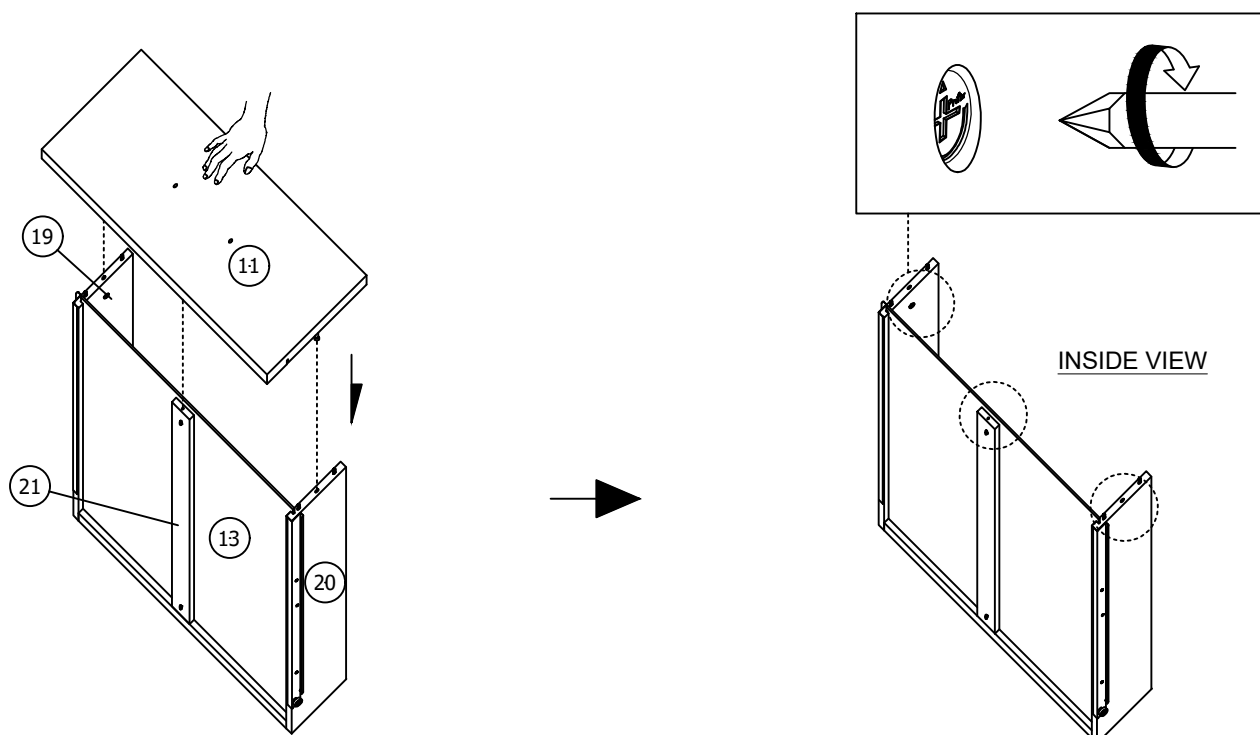


### STEP 21

Insert 2 pieces (F) fix the (G) as shown. This step needs to be **done three times**.

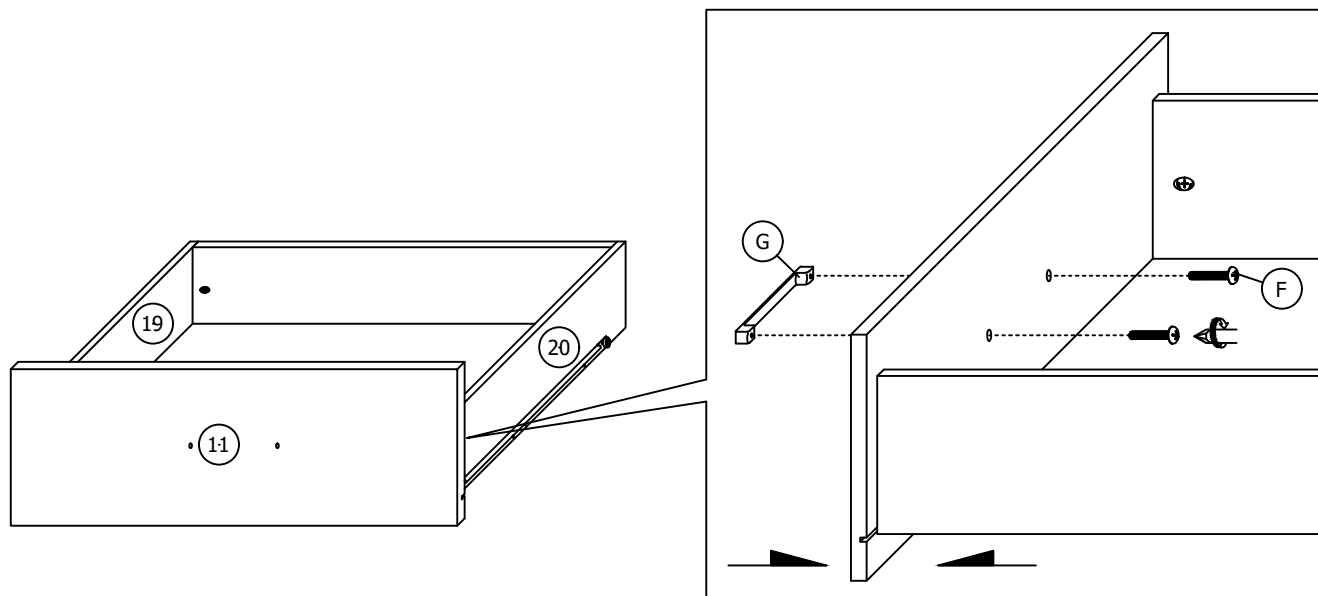



### STEP 22

Align the position then push the 3 pieces drawer to inside exactly by your hand as shown.

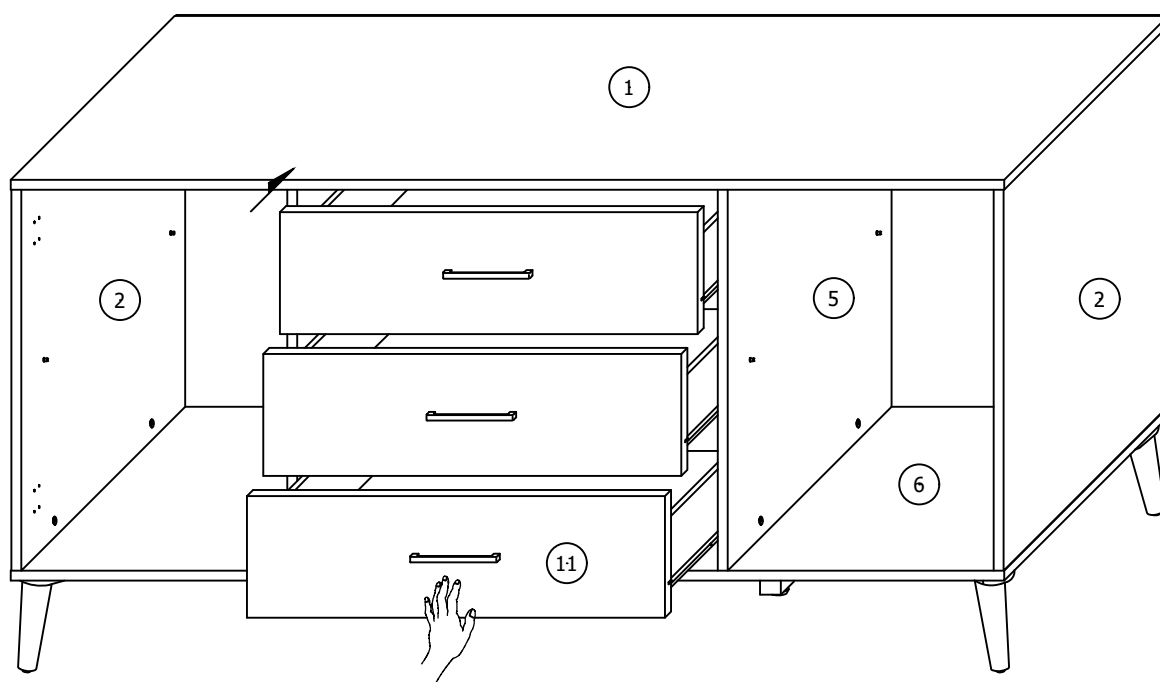



### STEP 23

Insert 4 pieces (M) to fix the 2 pieces (N) to the (7). Then insert 2 pieces (F) to fix the (G) as shown.

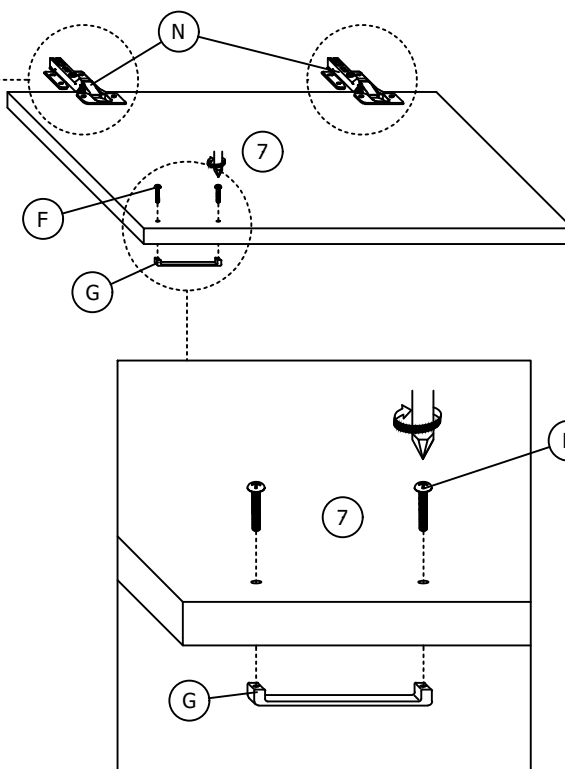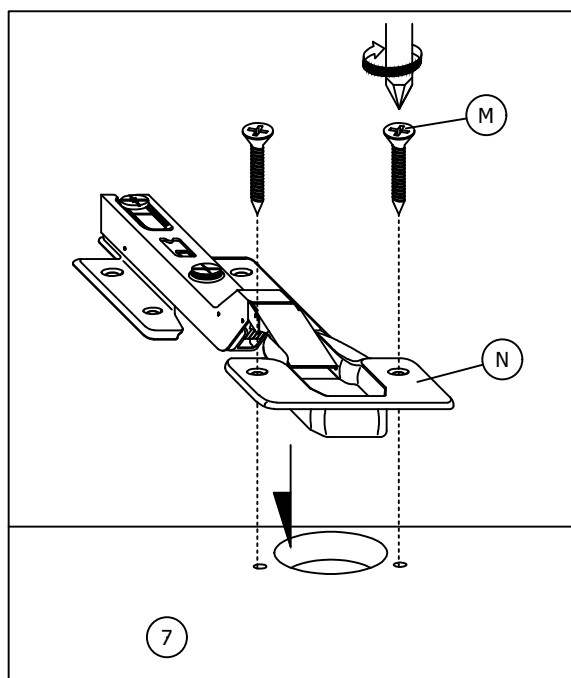


### STEP 24

Insert 4 pieces (M) to fix the 2 pieces (N) to the (8). Then insert 2 pieces (F) to fix the (G) as shown.

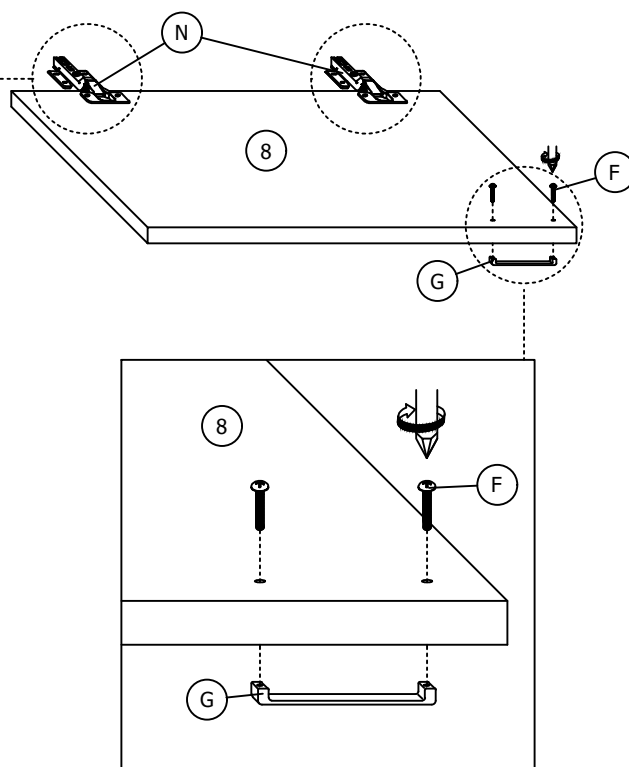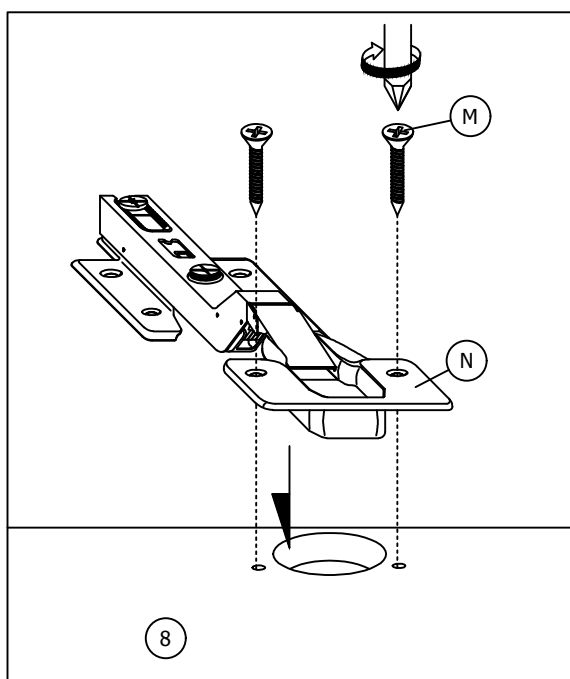


### STEP 25

Insert the remaning 16 pieces (M) to fix the (N) to the (2). Adjust the (O) then tighten the 8 pieces adjuster screws as shown.

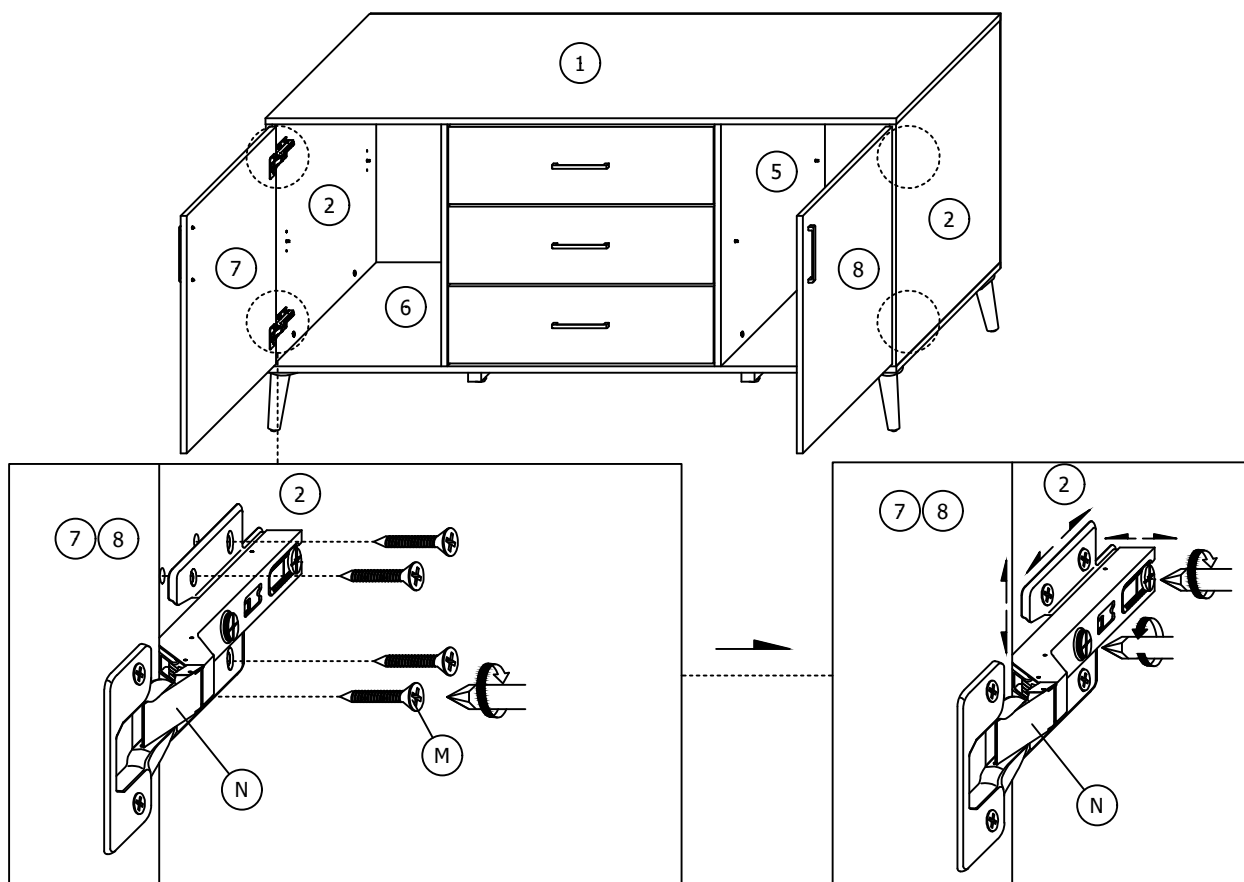


### STEP 26


Put the 2 pieces (9) on the (E) which between (2),(4) and (2),(5) as shown.

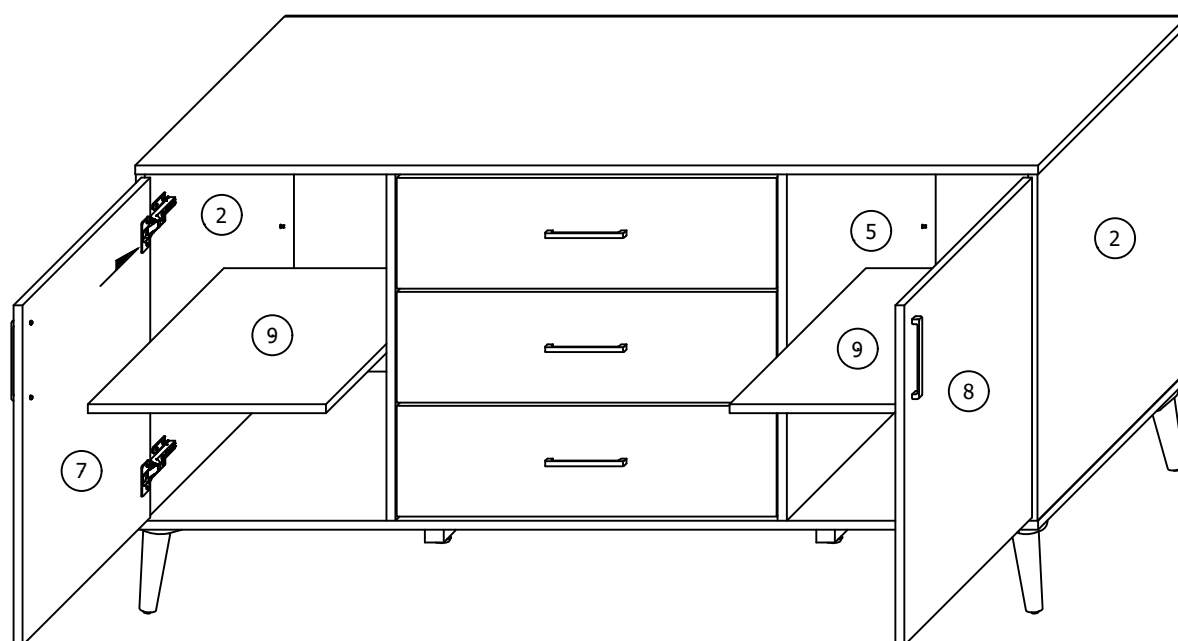

STEP 27

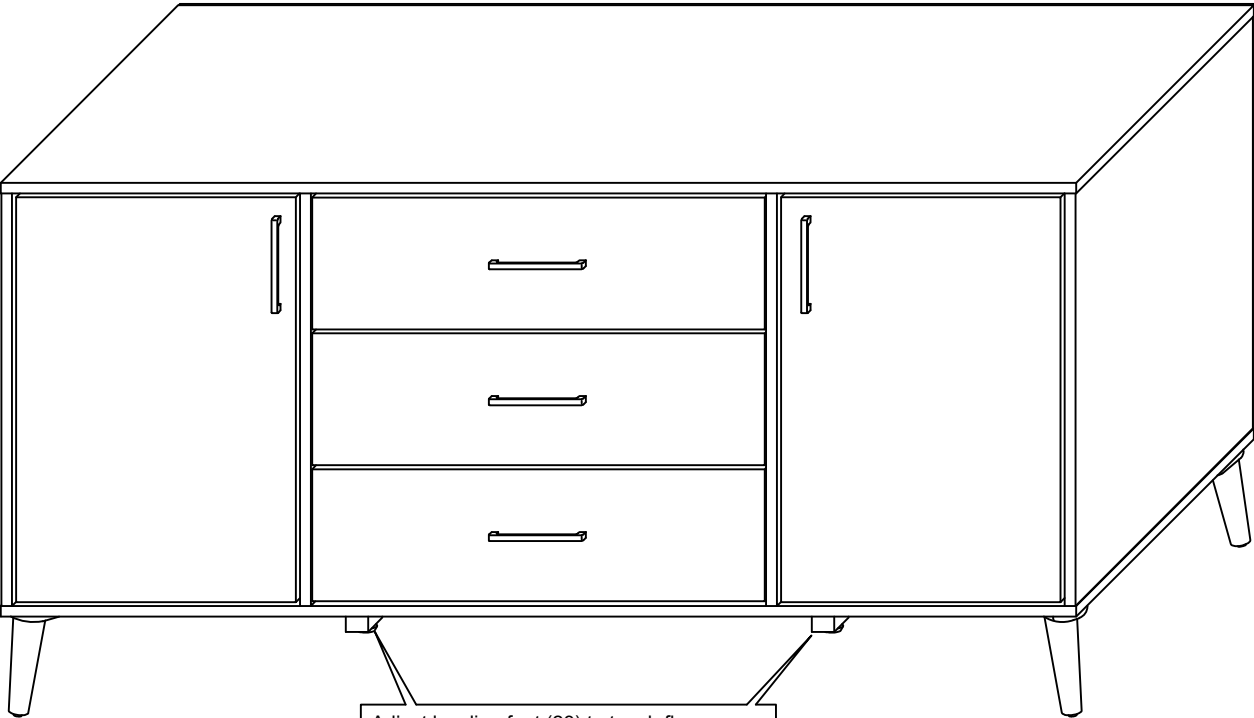

Adjust leveling feet (23) to touch floor.



ADJUSTER SCREW

## WALL STUD

### SAFETY BRACKET INSTRUCTIONS





Part Enclosed :

A) Bracket

B) Safety Strap

C) 50mm Pan Head Screw

D) 17mm Pan Head Screw

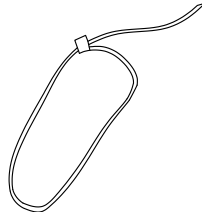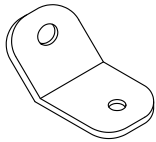

2x

1x

1x


1x

**IMPORTANT:** Tipping can injure young children. Use of this safety hardware is highly recommended. This safety hardware, when properly installed, can provide furniture protection against unexpected accidental tipping of furniture due to improper use.

#### Step 1

Attach a bracket to the wall board with the 2" screw provided:


- It is recommended that you locate a wall stud behind the furniture unit. If the wall stud is not used, a suitable "Hollow-Wall Anchor Bolt" (not provided) should be used in lieu of the wall stud.
- Position the wall bracket on the stud about 1" below the top of furniture piece.
- Mark the position for the bracket placement on the wall and drill a pilot hole into the stud.
- Attach the bracket to the back of the furniture with the 2" screws provided.

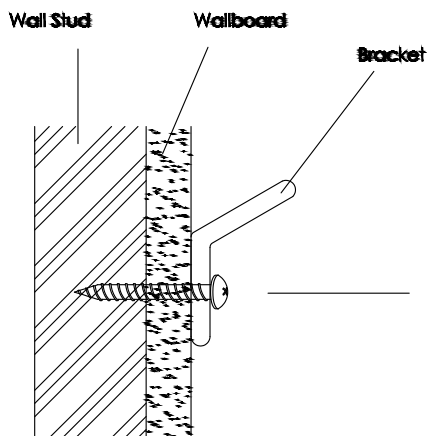

#### Step 2

To attach a bracket to the Furniture Frame below to top with the short screws provided :


- Move the furniture piece temporarily to its final position to the wall.
- Mark the location of the bracket on the back of the furniture in relation to the previously mounted wall bracket.
- Move the furniture piece away from the wall mounted bracket and place the other bracket on the mark position on the back of the furniture piece.
- Drill a pilot hole as shown in the figure or into the back furniture frame.
- Caution: Mark sure you do not drill completely through the back of the furniture.
- Attach the bracket to the back of the furniture with the 5/8" screws provided.

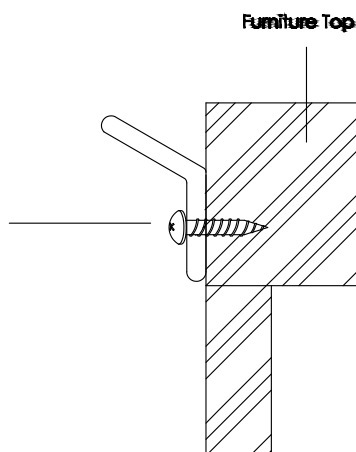

#### Step 3

To Attach the safety strap:

- Move the furniture back to its final position.
- Thread the safety strap through both of the mounted brackets as shown in the illustration.
- Tighten the strap unit snug.
- Do not over tighten.

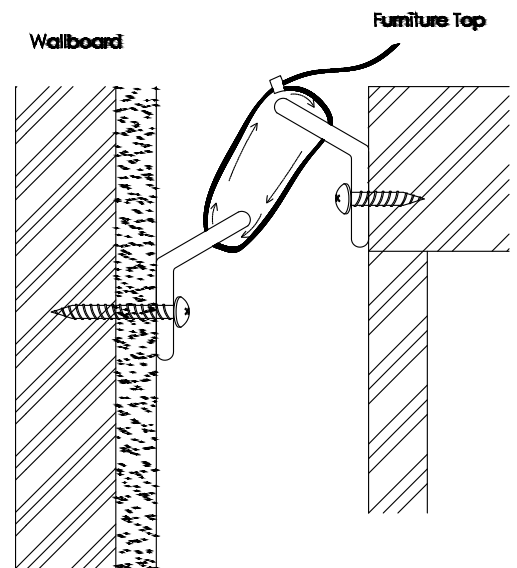

**IMPORTANT:** Make sure the brackets are firmly attached to the wall stud and furniture frame and the safety strap is snug.

**Warning:** This product is not be a substitute for proper parental supervision which is the only proper deterrent to prevent improper use of this unit. The manufacturer assumes no liability for improper installation or excessive loads placed on the safety straps, bracket or mounting screws. This hardware will not insure against tipping.

**Note:** For taller or heavier pieces of furniture, two safety brackets may be installed.

**This sticker was stucked at one of the DRAWER LEFT PANEL(19).**



**Place the drawer which stucked a warning label in the top as shown.**

