


ASSEMBLY INSTRUCTIONS

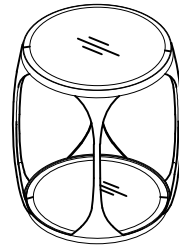

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Place the Adhesive bumper pads up to metal frame. (See Figure 1).
2. Place bottom panel in to metal frame. (See Figure 2).
3. Carefully place the glass on its right location. (See Figure 3)
4. Turn the table upright and adjust the leveler. (See Figure 4).

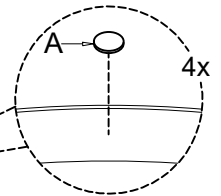


Figure 1

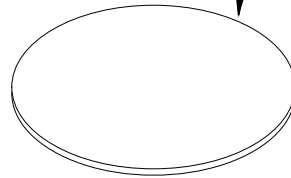
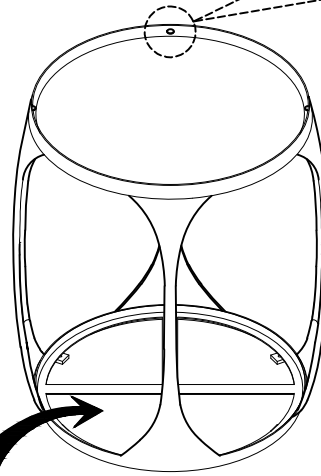


Figure 2

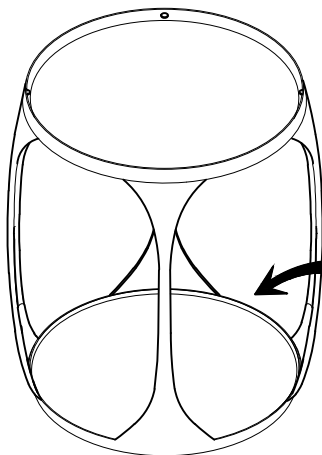
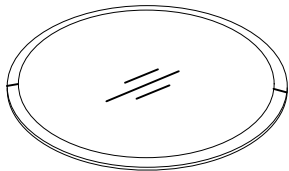


Figure 3


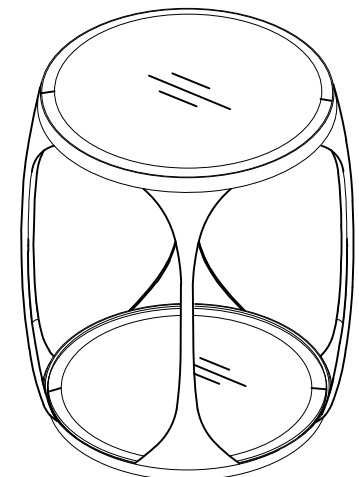


Figure 4

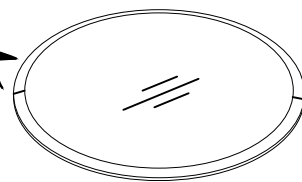

No.		Hardware List	Q'ty
A	○	Adhesive Bumber Pads Ø10x2mm	4