

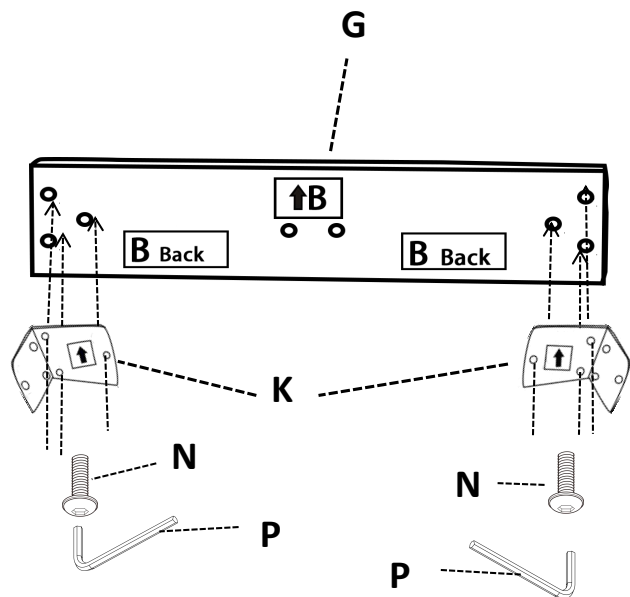
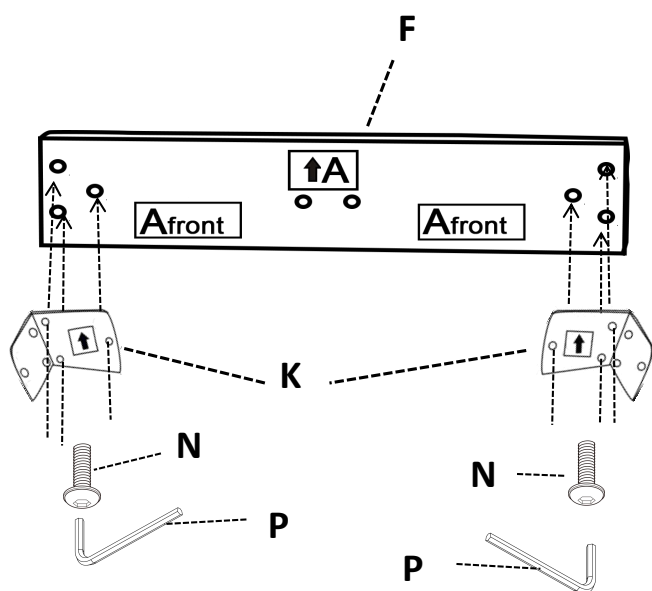
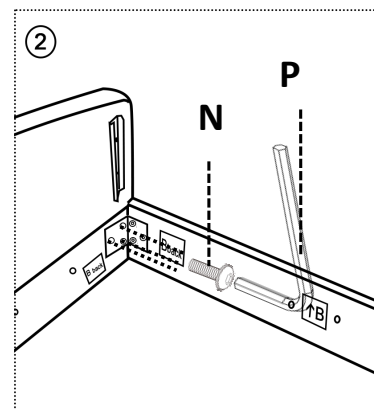


ASSEMBLY INSTRUCTION


Ax1 	Bx1 	Cx1 	Dx1 	Ex 2
Fx1 		Gx1 		Hx2
Ix2 			Jx1 	
Kx4 	Lx4 M6x70mm	Mx6 M6x50mm	Nx24 M6x18mm	
Ox4 M6x30mm	Px1 	Qx1 		
A B C E F I				

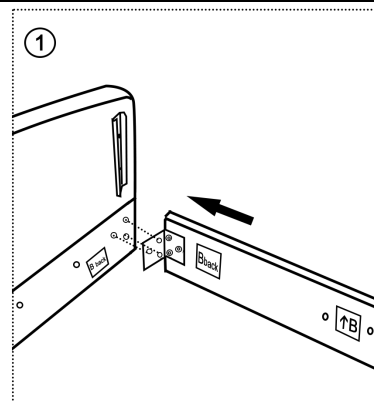


1.As shown in the figure, First, place the metal plate(K) in the correct position, and then install with screws (N).

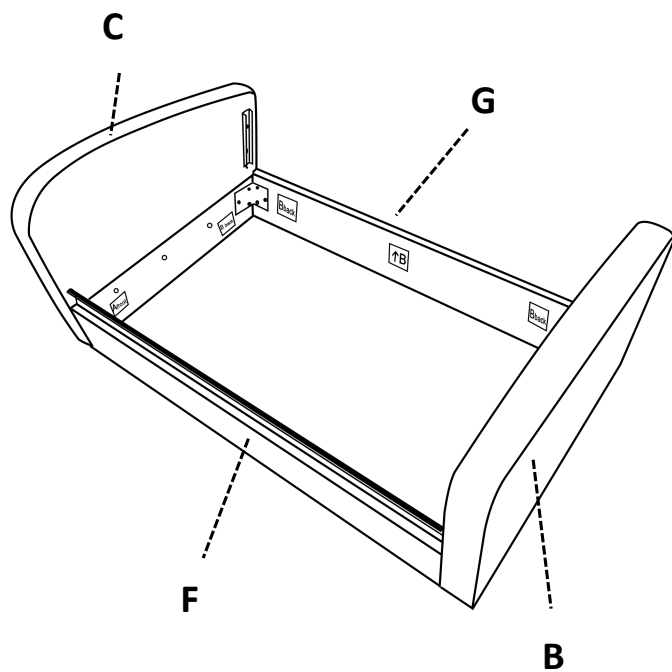


2.Attach the assembly from step 1 to the armrest (Part B&C) using (12) M6x18mm screws (N), tighten with the M5 Allen Wrench(P).

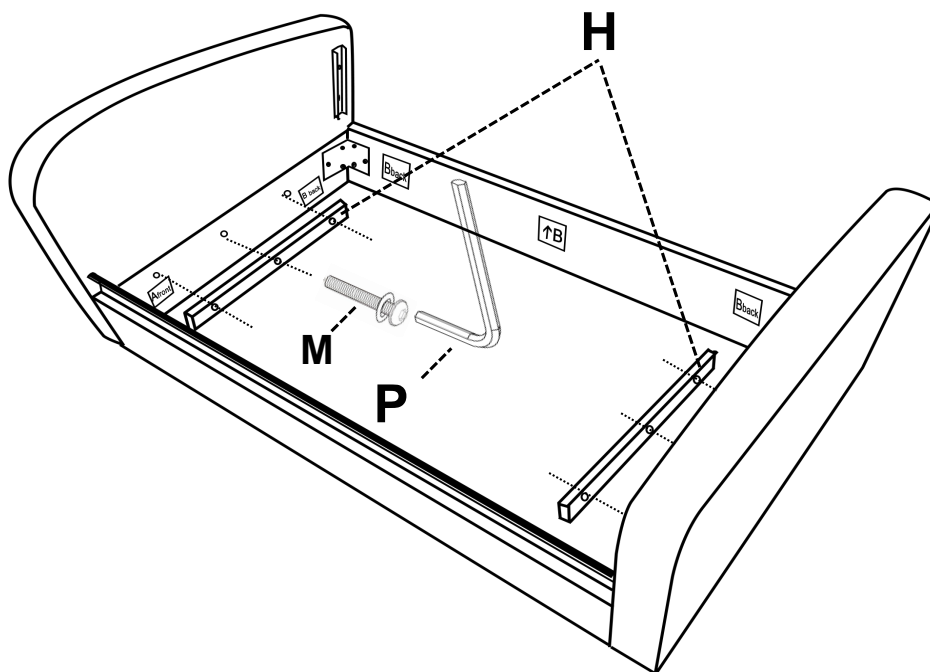

3.As shown in the figure, Align the wood slat (Part H)with the hole and install it with screws (M) .

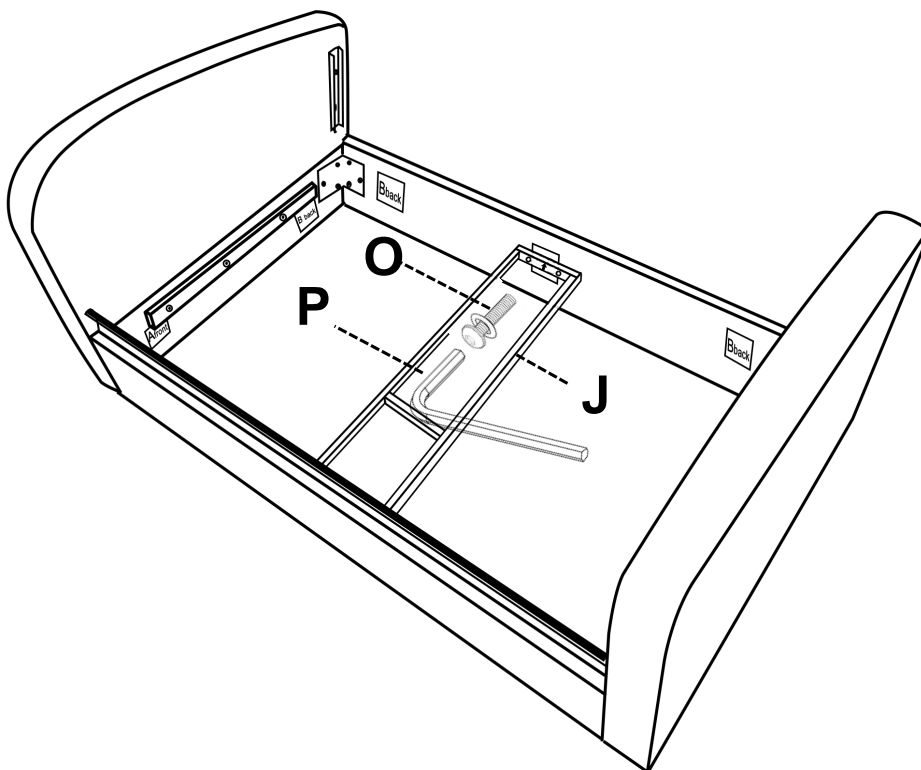


4.As shown in the figure, Align the bearing bar (Part J) with the hole and install it with screws (O) .

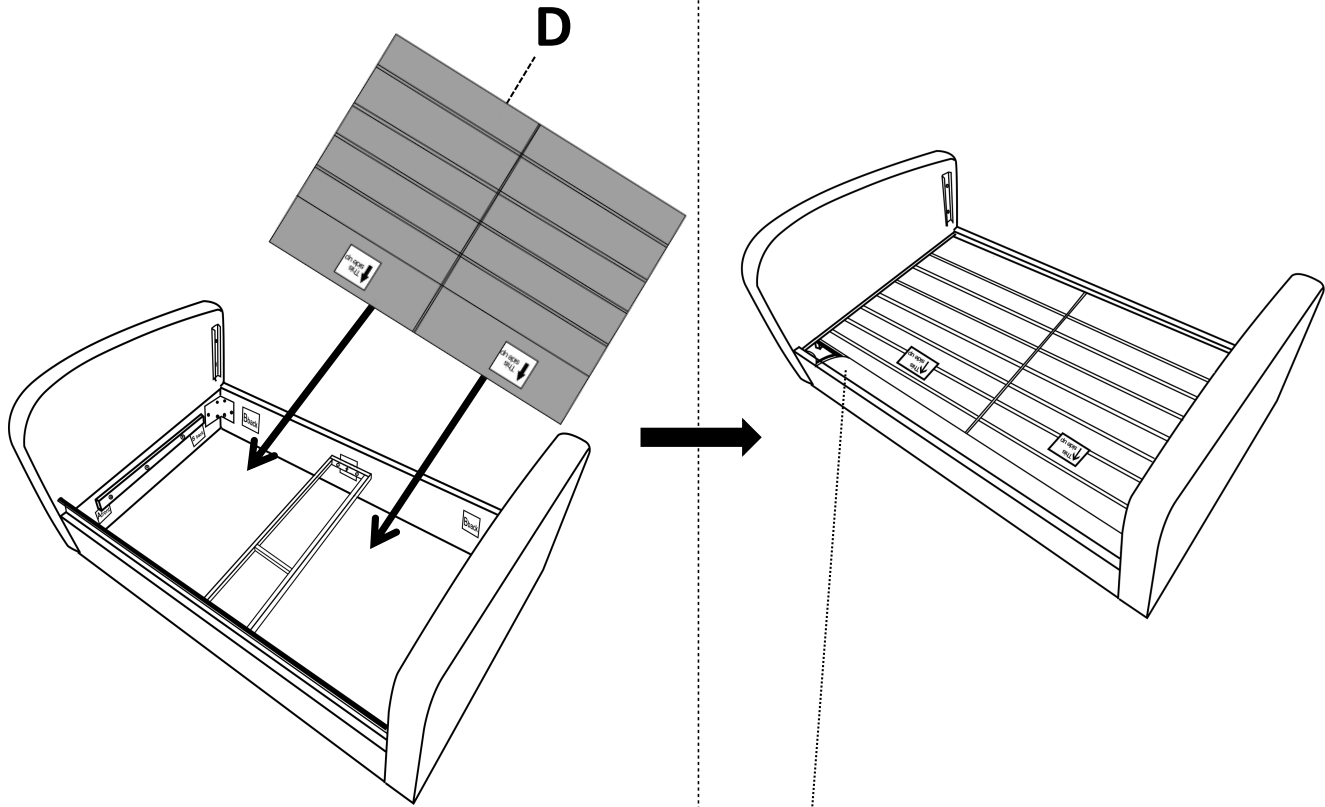


5.Lay the part (D) on the seat as shown, make sure the plank (D) does not move .


6.And put Velcro pieces of this place together.

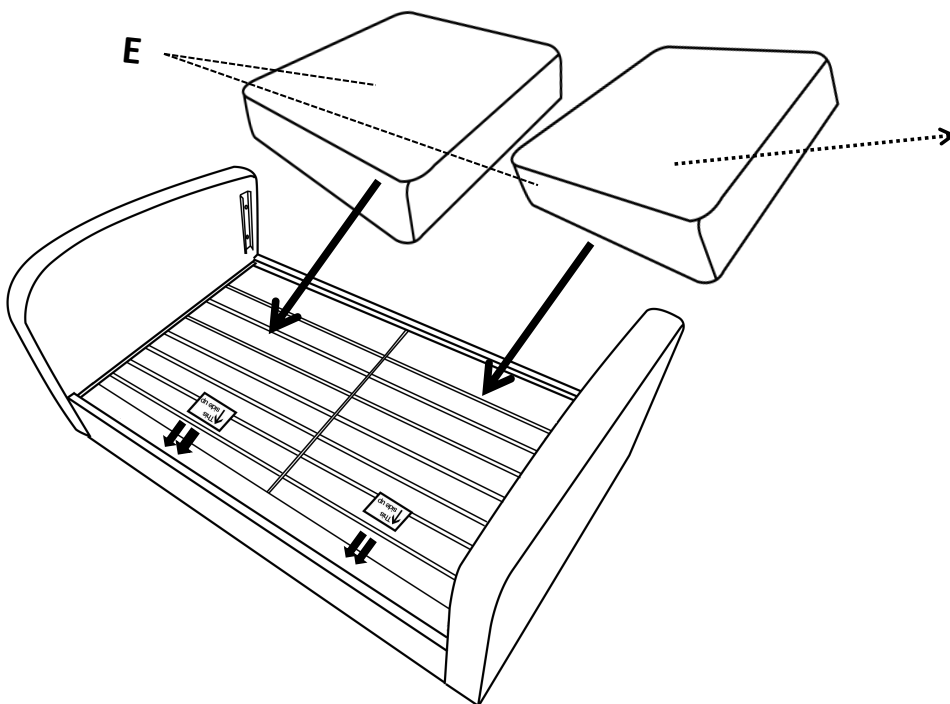


If cushion compares
drape, can iron.

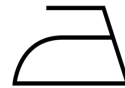


7.Attach the Seat Cushion (Part E) into the Seat base as shown.

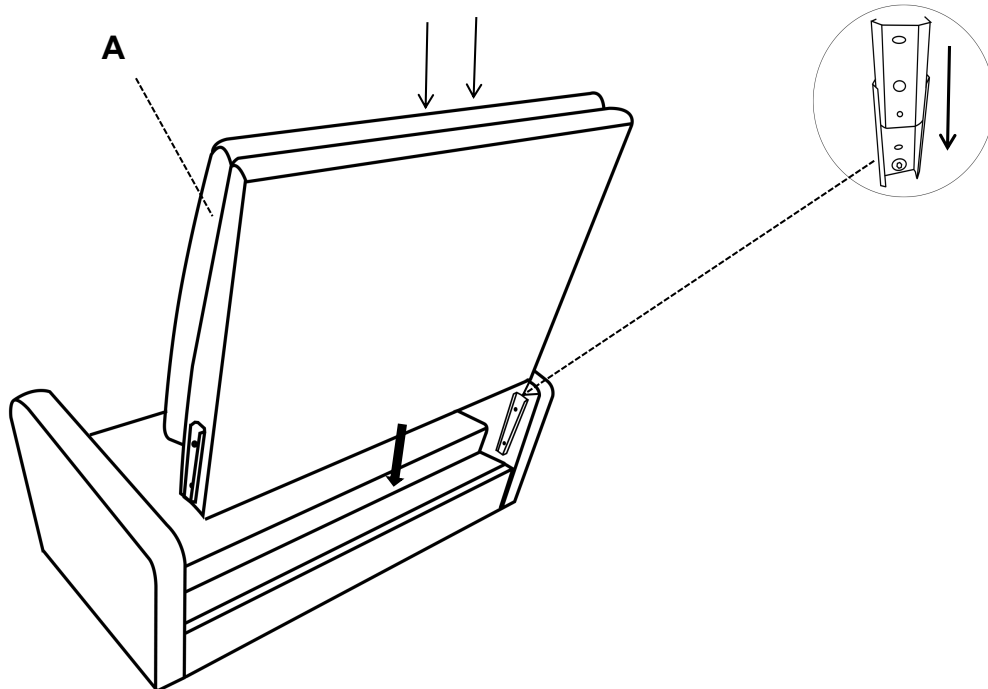

8. Connect the backrest (A) to the seat base until the backrest does not wobble.

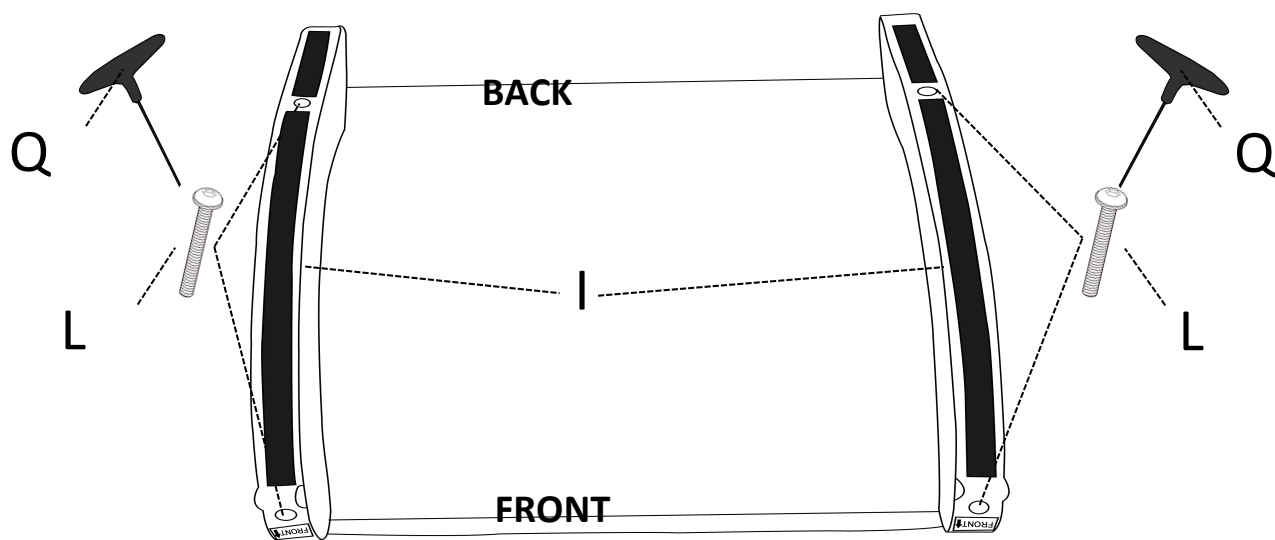

9. As shown in the figure, Attach the the wooden foot (Part I) to the Seat Base using (4) M6x70mm screws (Part L), tighten with the Wrench (Q).

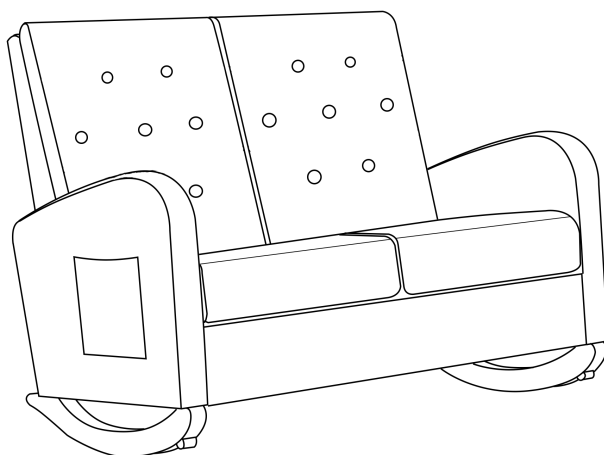

FINISH!