



ASSEMBLY INSTRUCTION







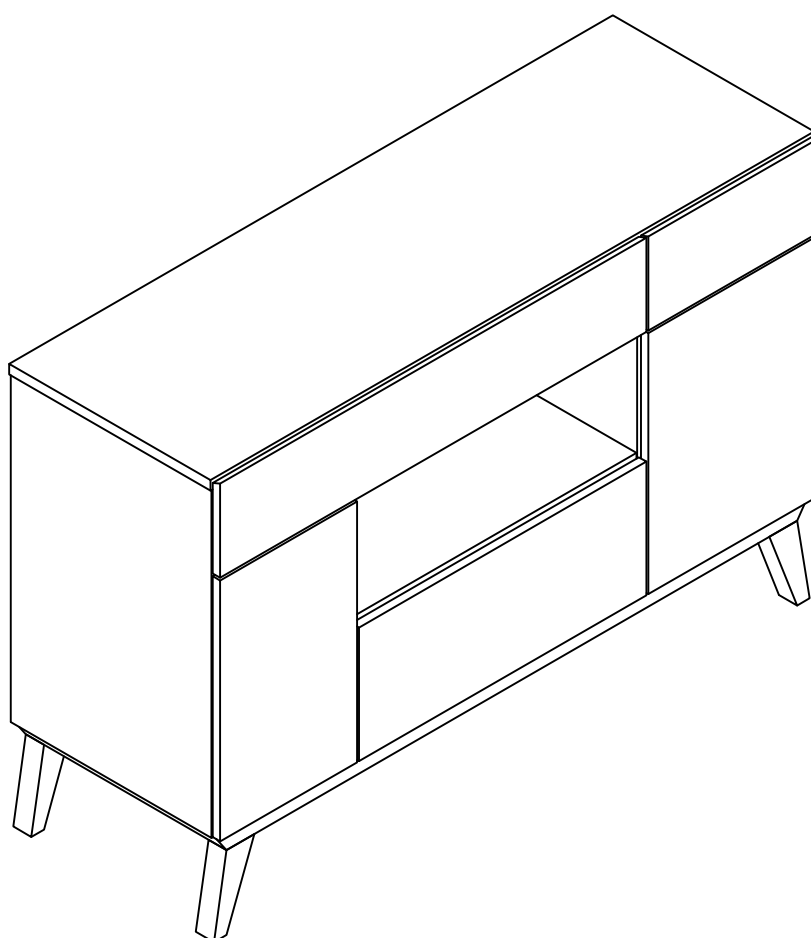


PARTS IDENTIFICATION

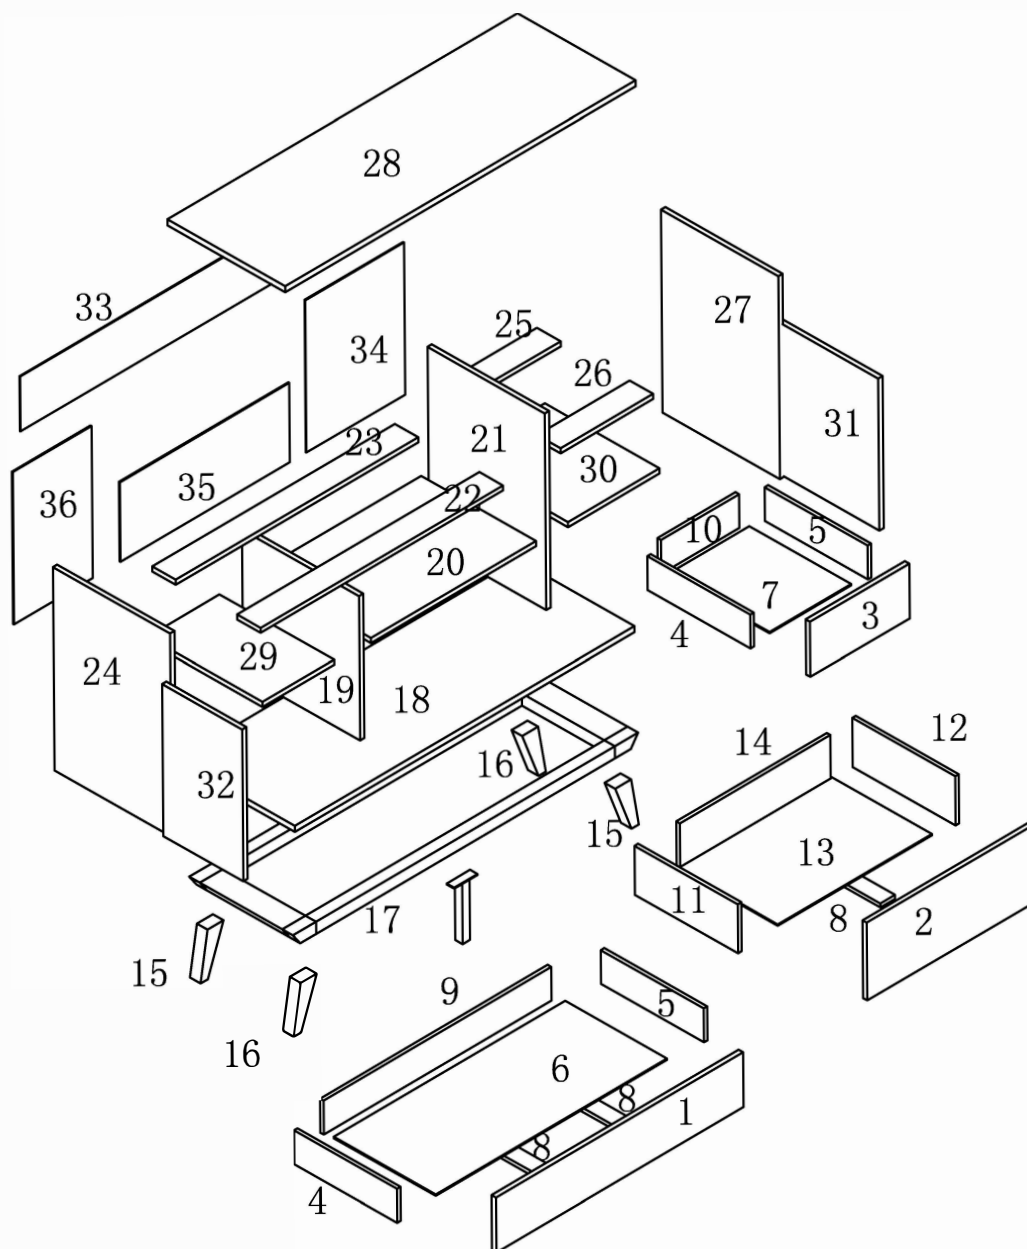


(1)	1pc	(9)	1pc	(17)	1pc	(25)	1pc	(33)	1pc
(2)	1pc	(10)	1pc	(18)	1pc	(26)	1pc	(34)	1pc
(3)	1pc	(11)	1pc	(19)	1pc	(27)	1pc	(35)	1pc
(4)	2pcs	(12)	1pc	(20)	1pc	(28)	1pc	(36)	1pc
(5)	2pcs	(13)	1pc	(21)	1pc	(29)	1pc	PAGE:2 OF 10	
(6)	1pc	(14)	1pc	(22)	1pc	(30)	1pc		
(7)	1pc	(15)	2pcs	(23)	1pc	(31)	1pc		
(8)	3pcs	(16)	2pcs	(24)	1pc	(32)	1pc		

HARDWARE IDENTIFICATION


A		L29	18pcs
B		Ø15	22pcs
C		L20	12pcs
D		Ø12	12pcs
E		L60	2pcs
F		Ø8x25	21pcs
G		Ø6x30	6pcs
H		Ø10 x 15	8pcs
I		Ø6x65	8pcs
J		Ø5	8pcs
K		301A	4pcs
L		Ø4x16	18pcs
M		Ø4x25	6pcs
N		Ø4x30	12pcs
O		Ø4x40	16pcs
P		Z1016	40pcs
Q		M4	1pc
R		80x25x181	1pc
S		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ASSEMBLY INSTRUCTION

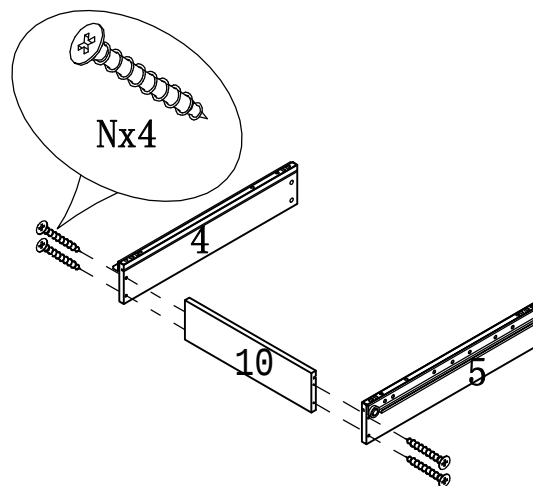


STEP1


STEP2

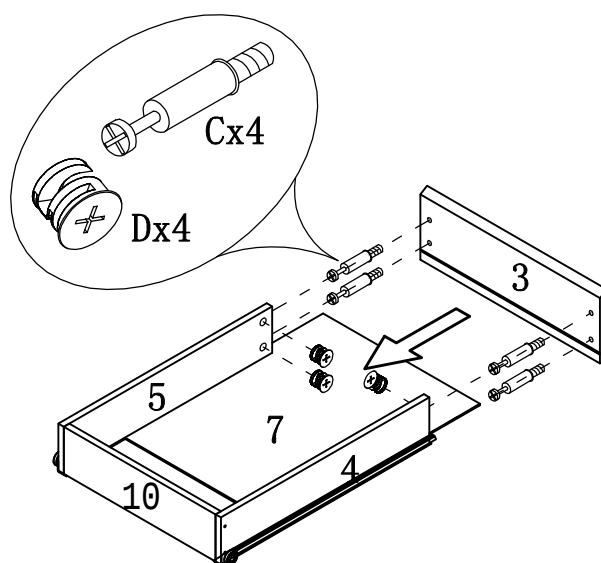

STEP3

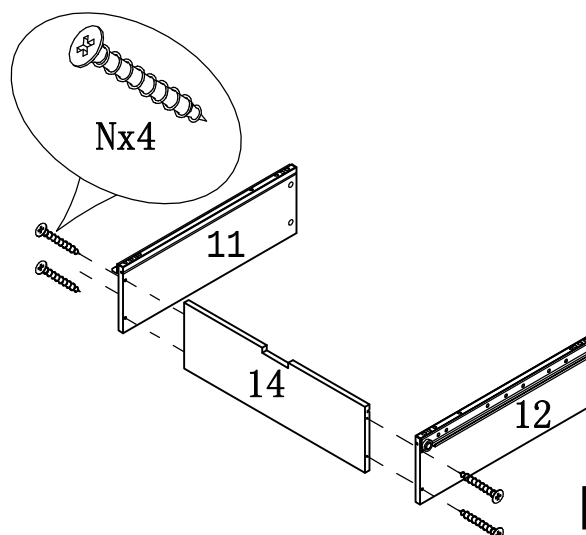


ASSEMBLY INSTRUCTION

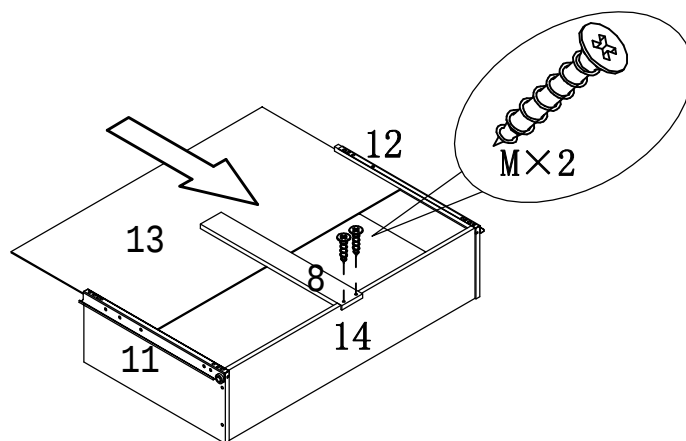


STEP4


STEP5

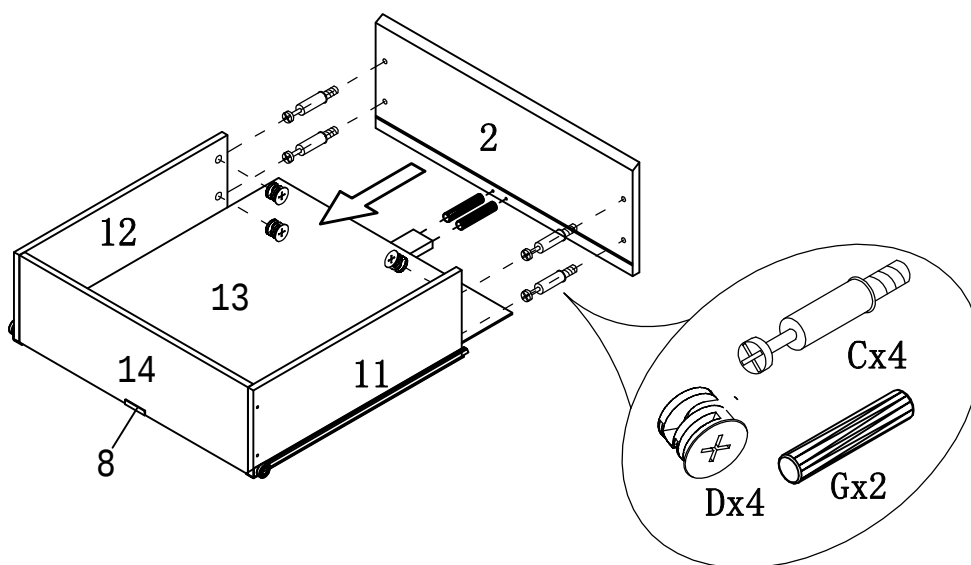

STEP6

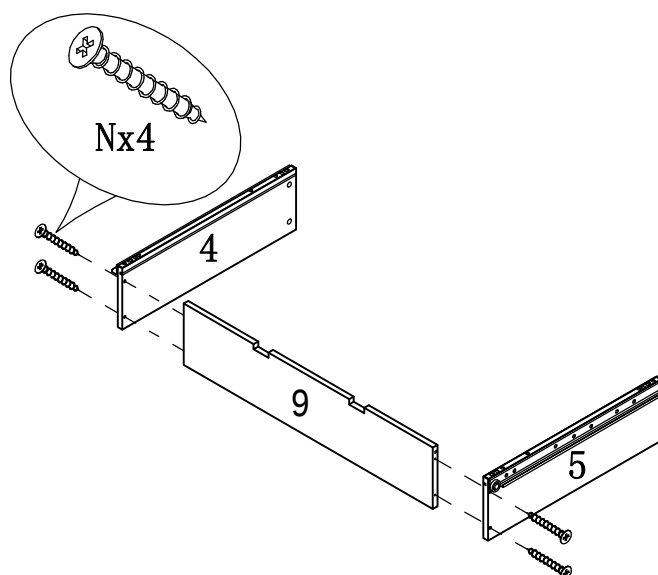


ASSEMBLY INSTRUCTION

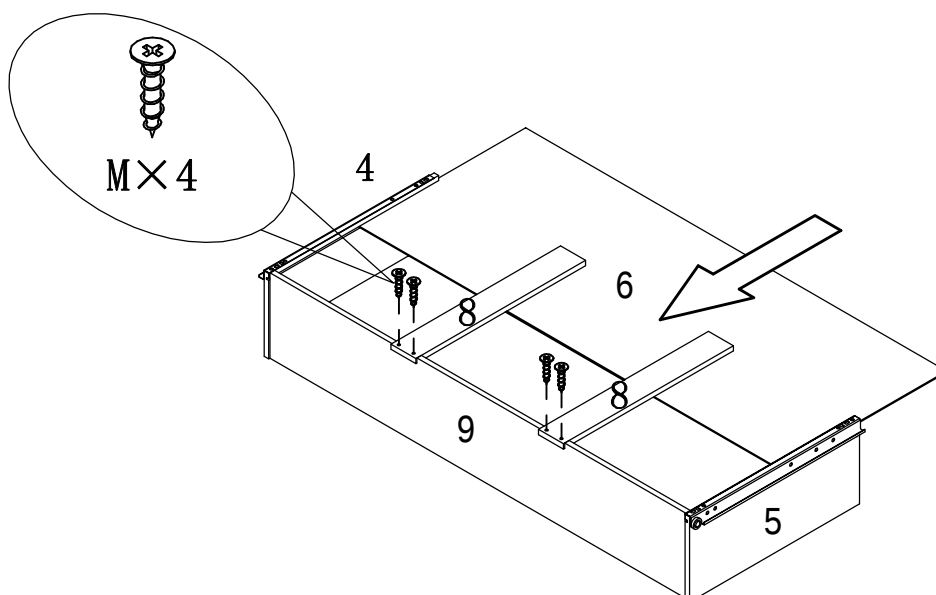


STEP7

STEP8

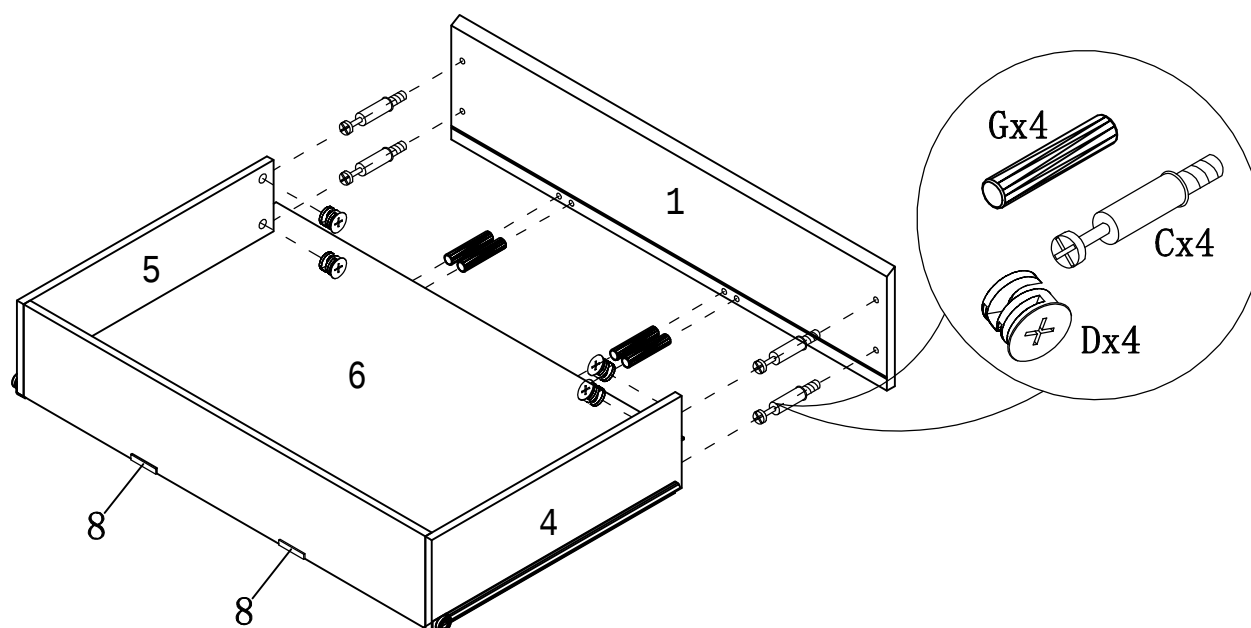


ASSEMBLY INSTRUCTION


STEP9

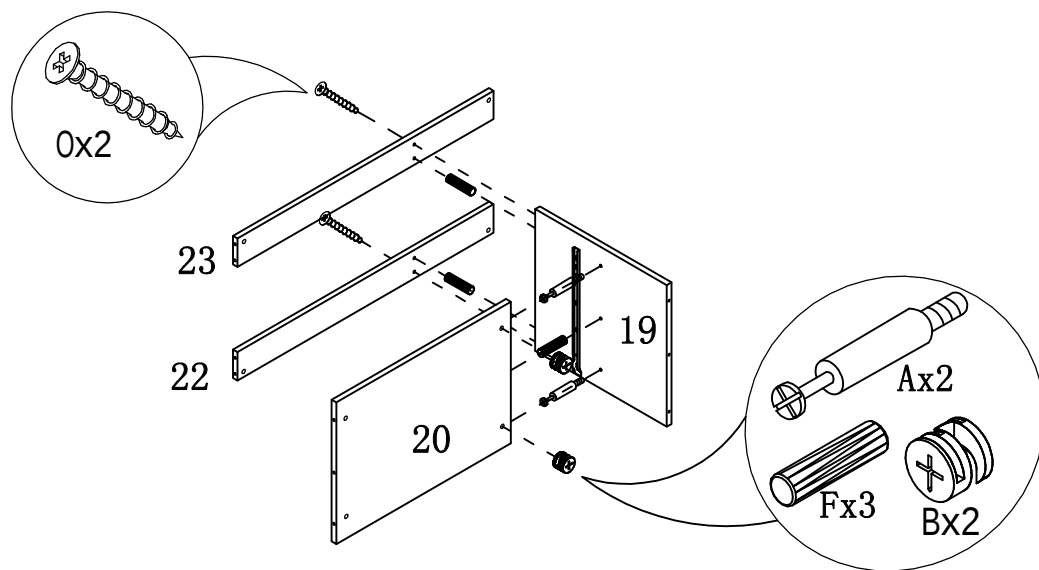

STEP10

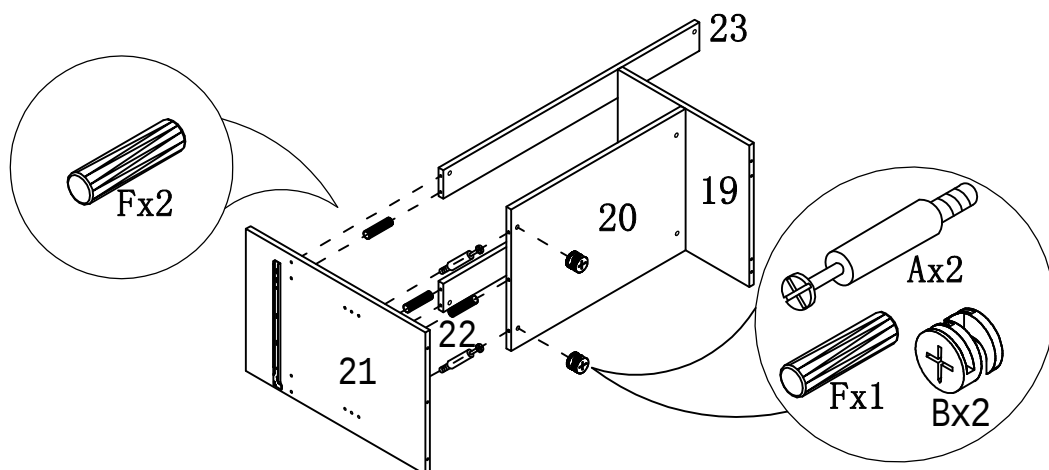


STEP11

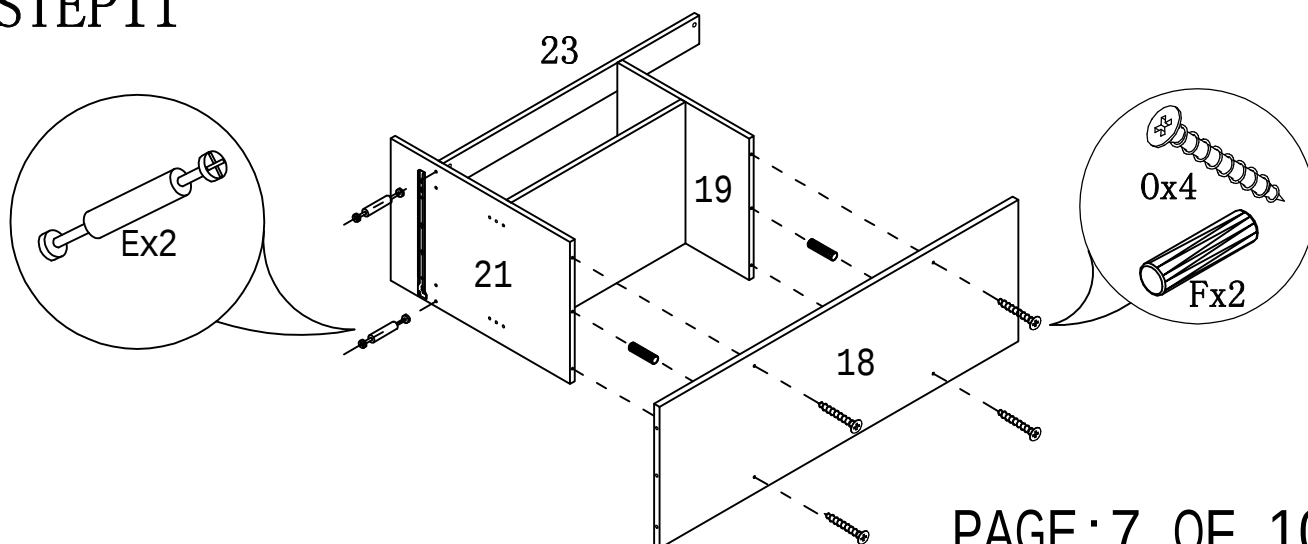


ASSEMBLY INSTRUCTION


STEP12

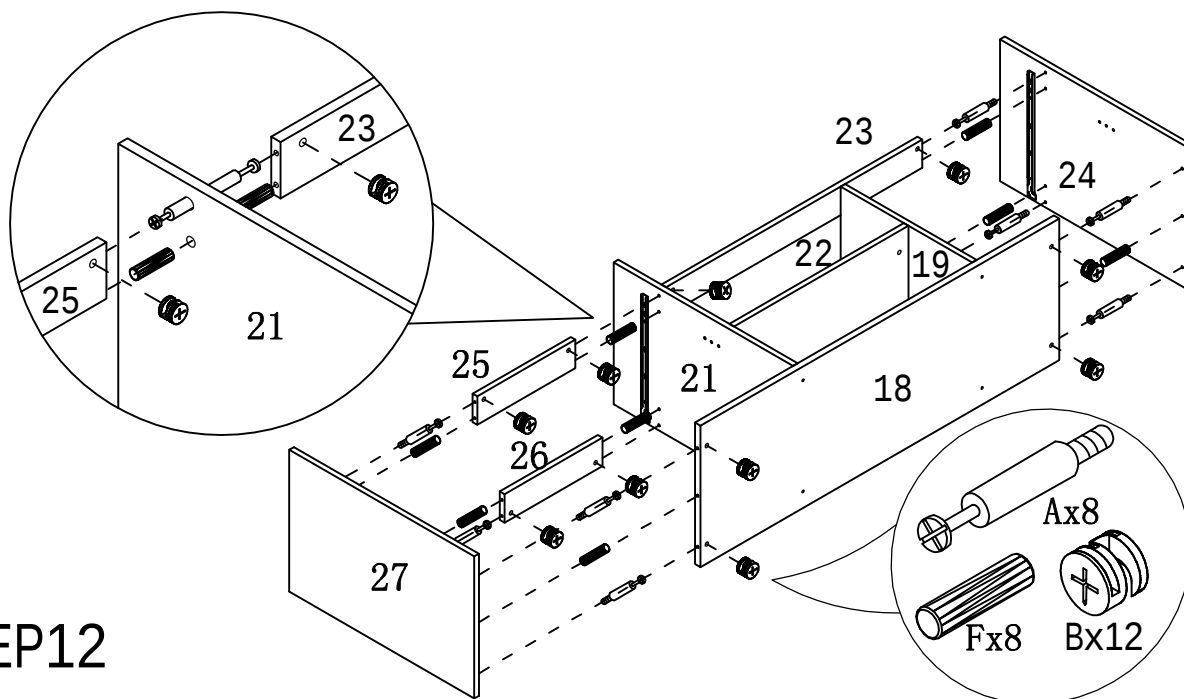


STEP13

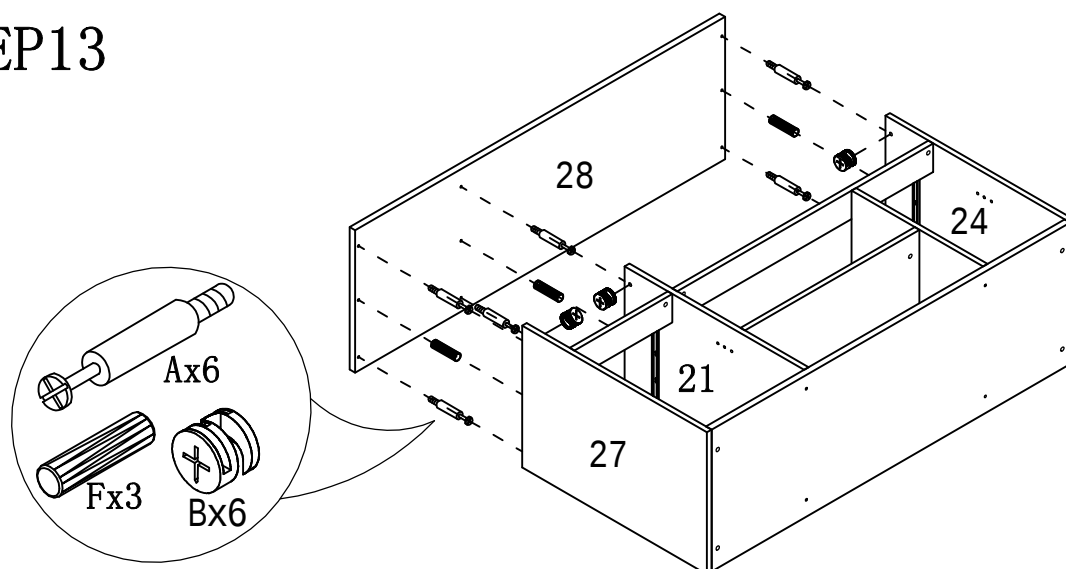

STEP14

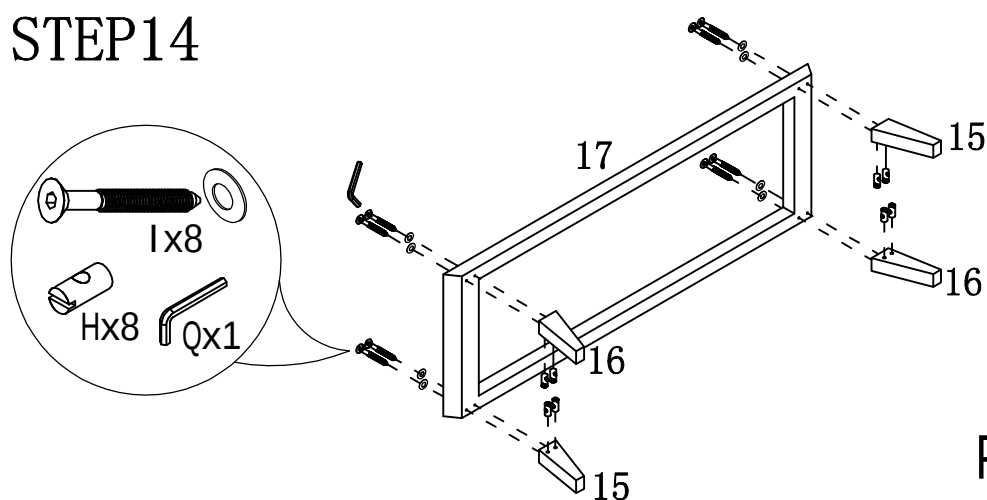


ASSEMBLY INSTRUCTION

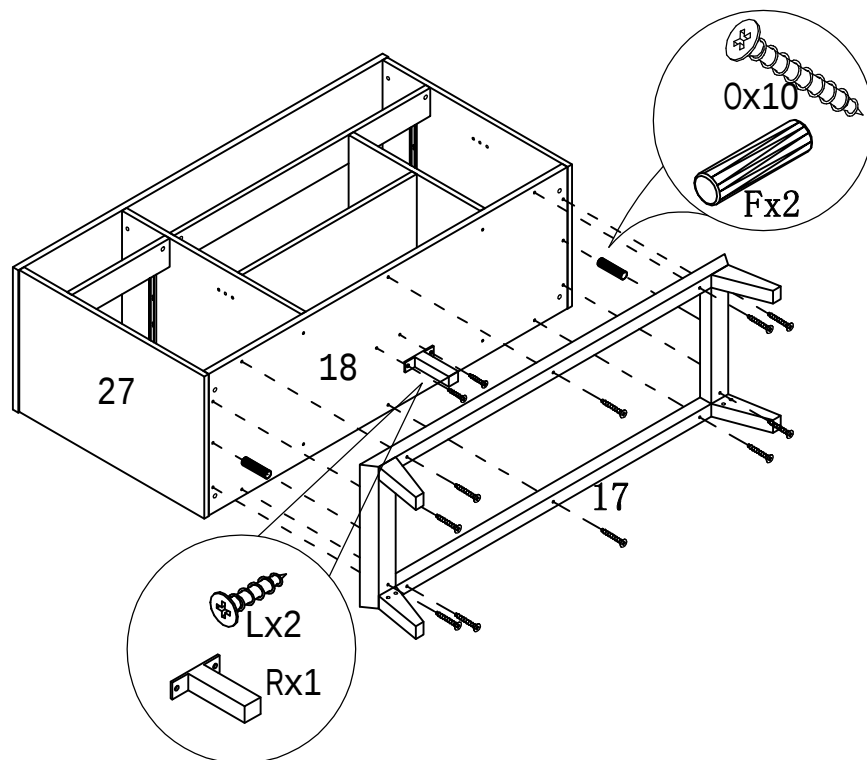


STEP15

STEP16

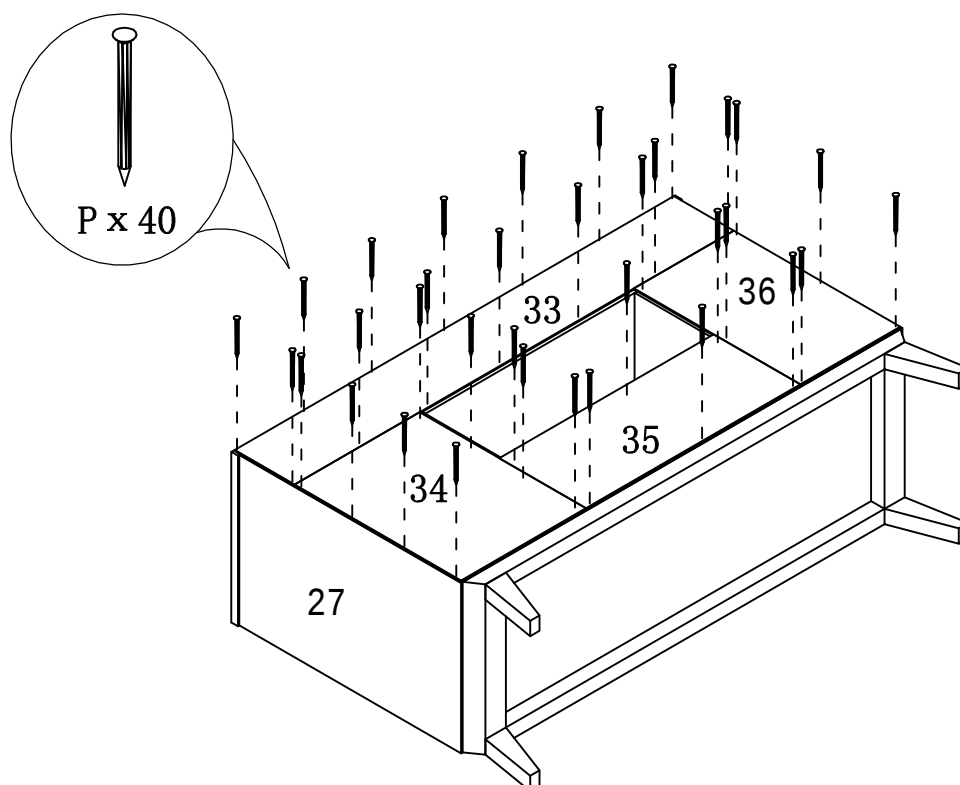

ASSEMBLY INSTRUCTION

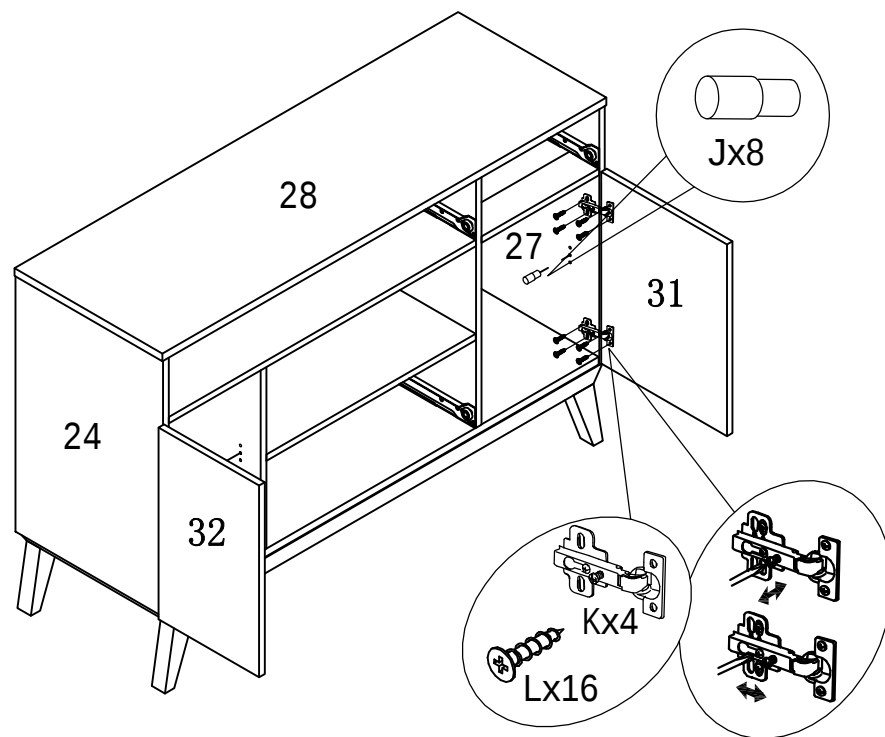

STEP17

STEP18

