


ASSEMBLY INSTRUCTIONS

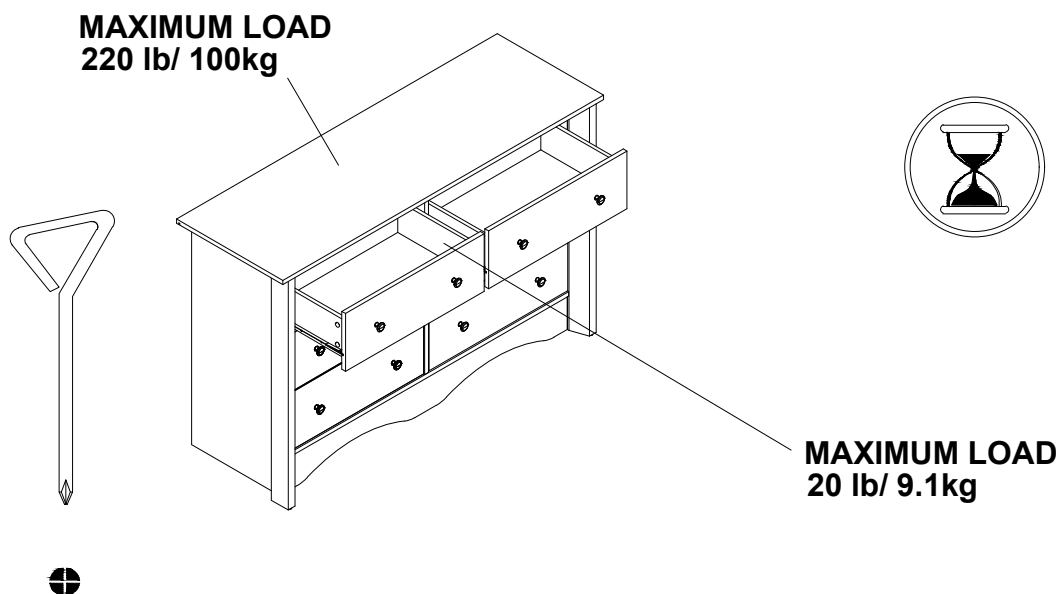


WARNING !




Estimated Time for Assembly

60 mins

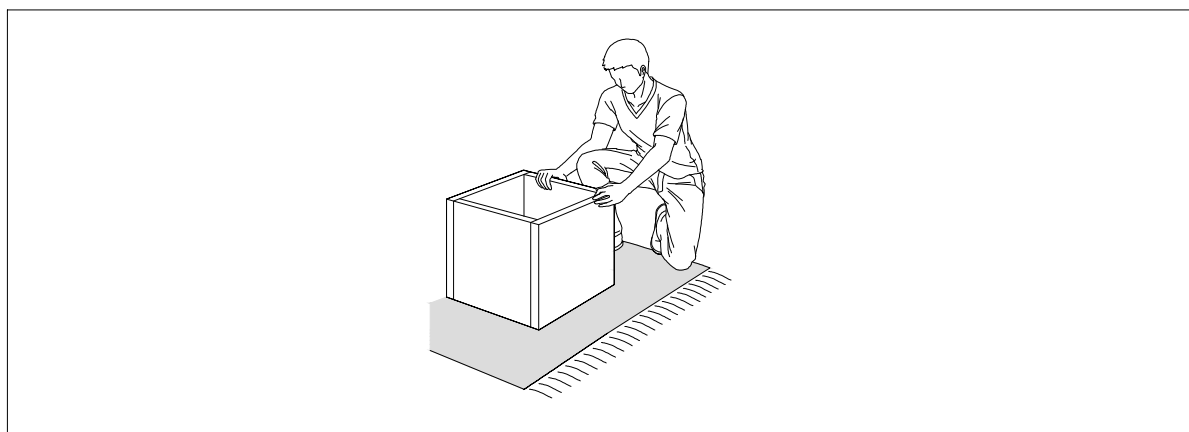

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

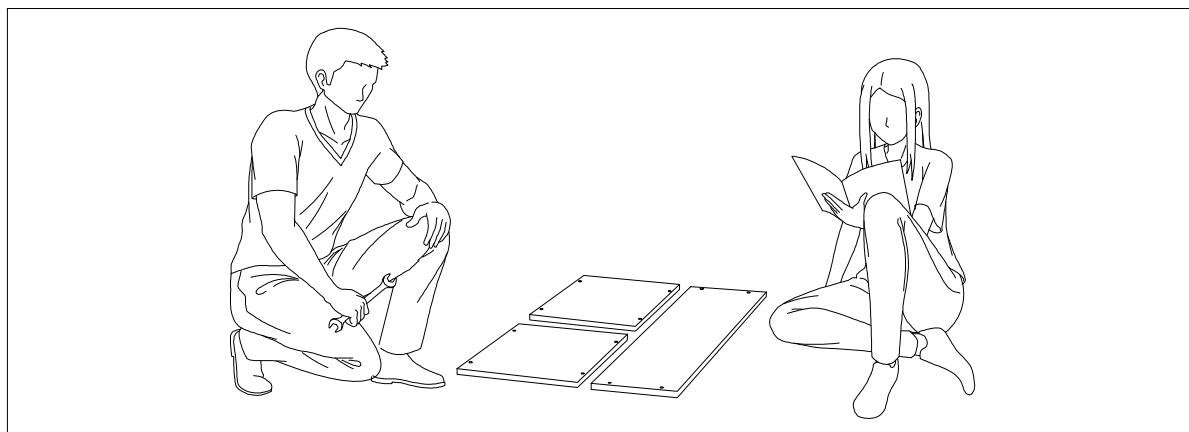


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

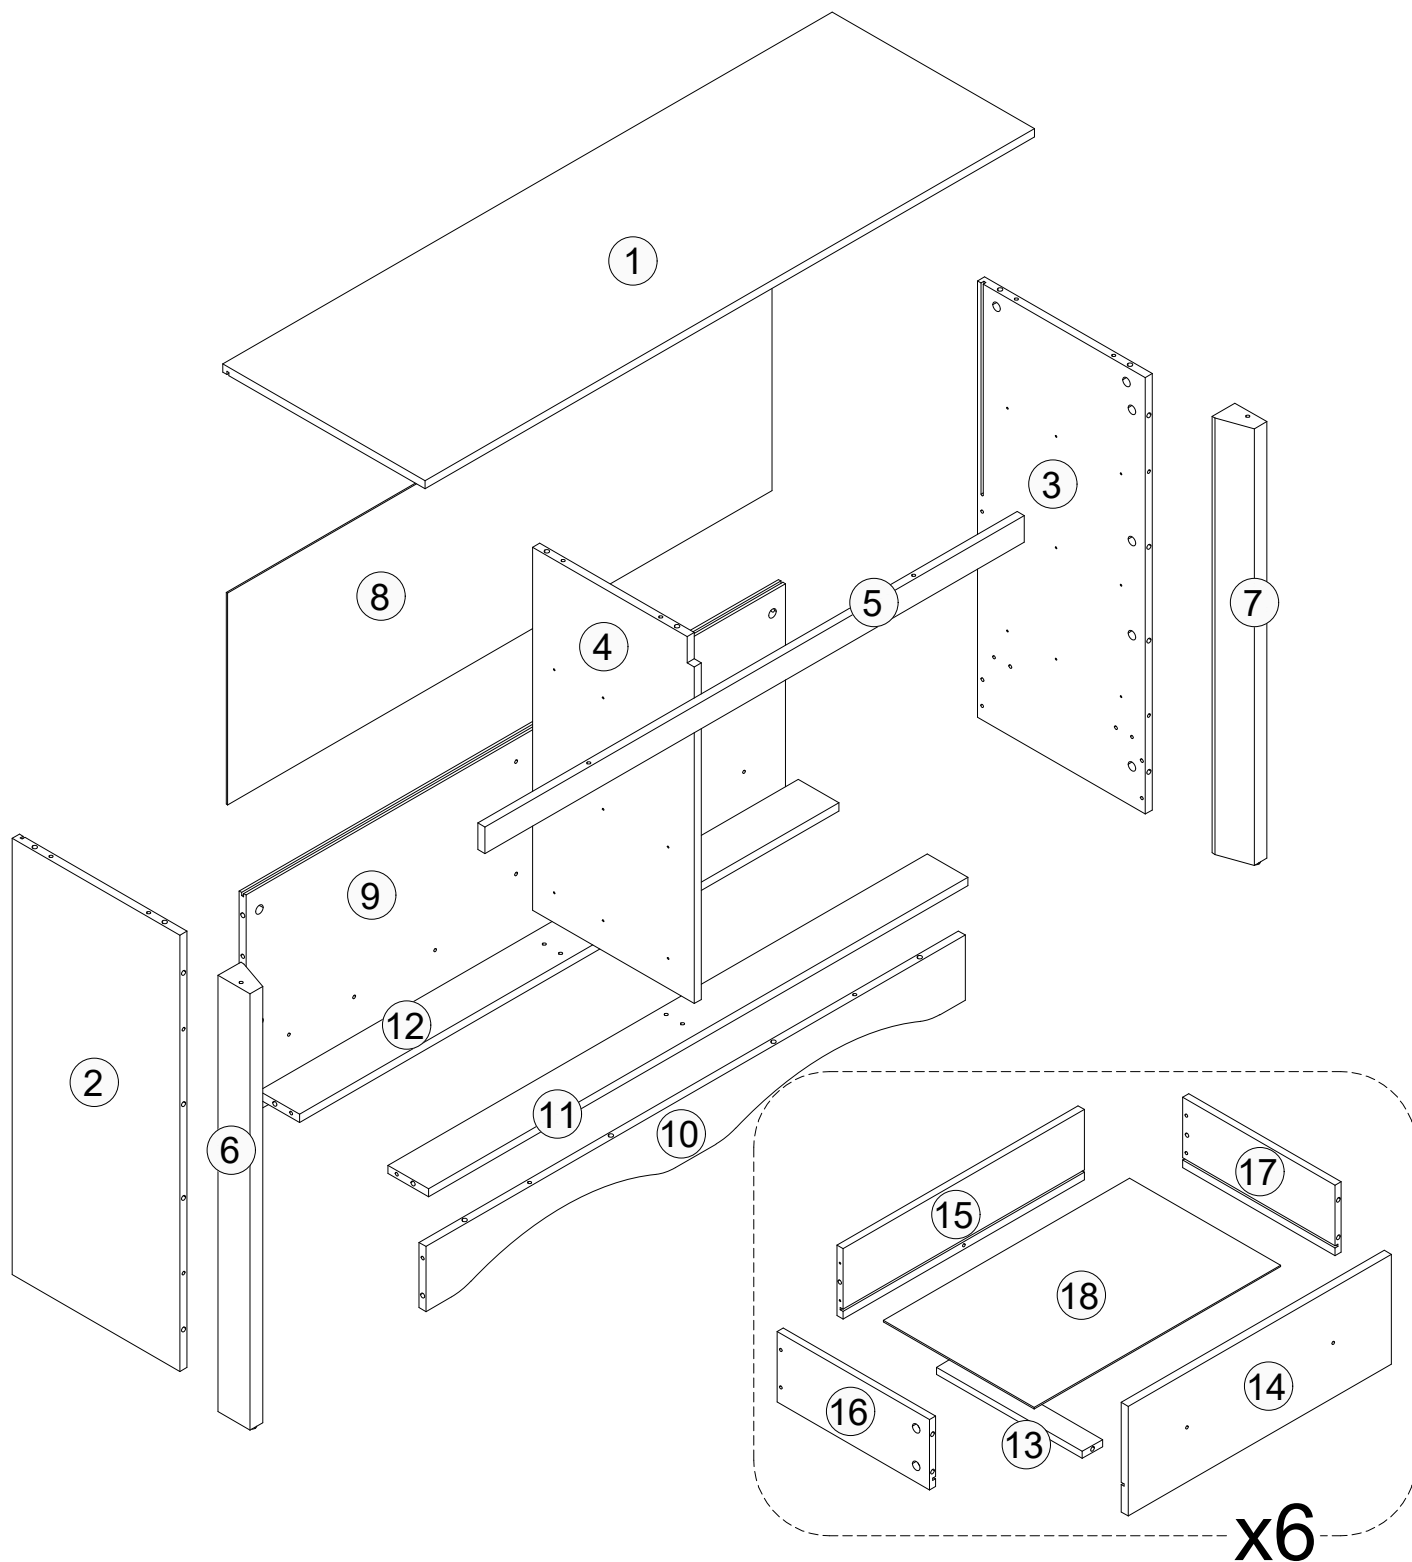


BOARD IDENTIFICATION


Not actual size

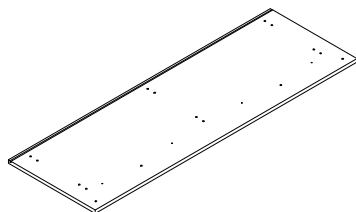


① x1

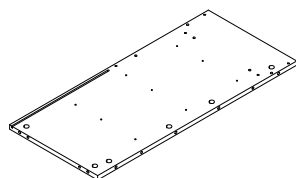


② x1

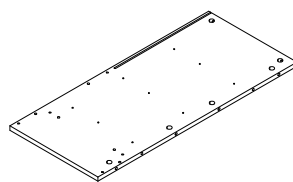


③ x1

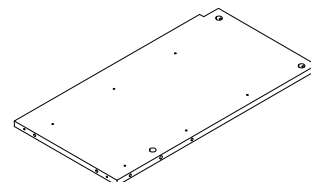


④ x1

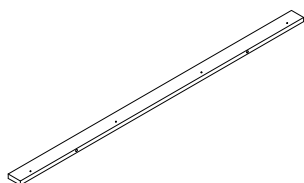


⑤ x1

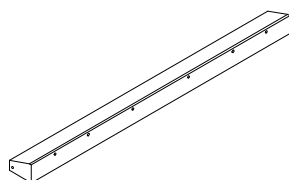


⑥ x1

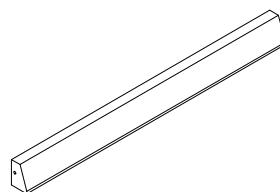


⑦ x1

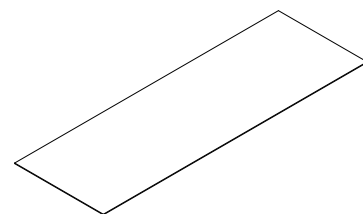


⑧ x1

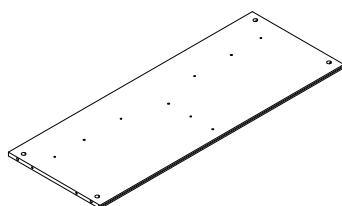


⑨ x1

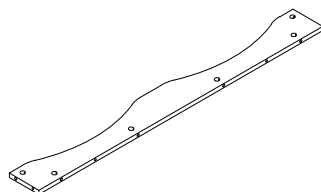


⑩ x1

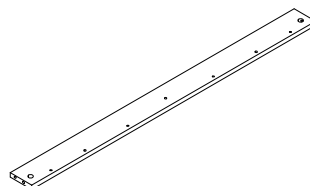


⑪ x1

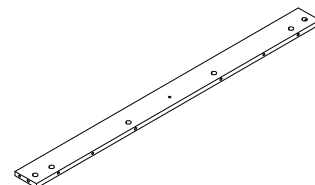


⑫ x1




⑬ x6

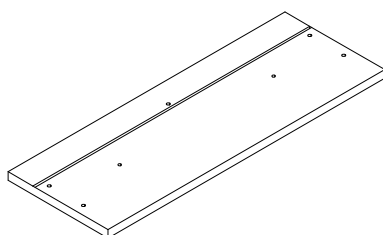


⑭ x6

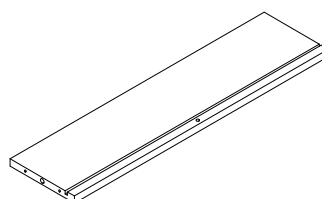


⑮ x6

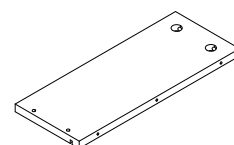

⑯ x6











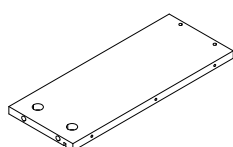


⑰ x6

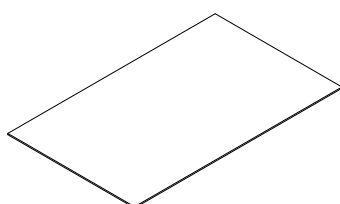


⑱ x6

HARDWARE LIST

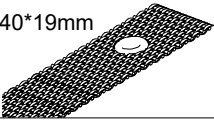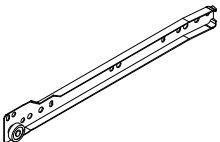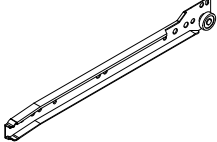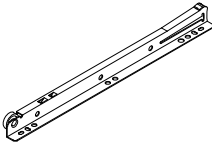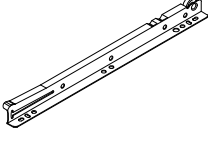
			
A	B	C	D
x63+6	Ø15*9.5mm x63+6	Ø6*30mm x44+4	Ø5*38mm x2+1
			
E	F	G	H
Ø3.5*12mm x77+7	x4	x12	M4*20mm x12
			
I	J	K	N
Ø4*38mm x30+3	x1	Ø3x15mm x6+1	x2+2
			
L1x2 140*19mm	L2x4 Ø16xØ6.5x1mm	L3x2 Ø4x16mm	M1x2 Ø6*30mm
L			M
			
CL	CR	DR	DL
x6	x6	x6	x6

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

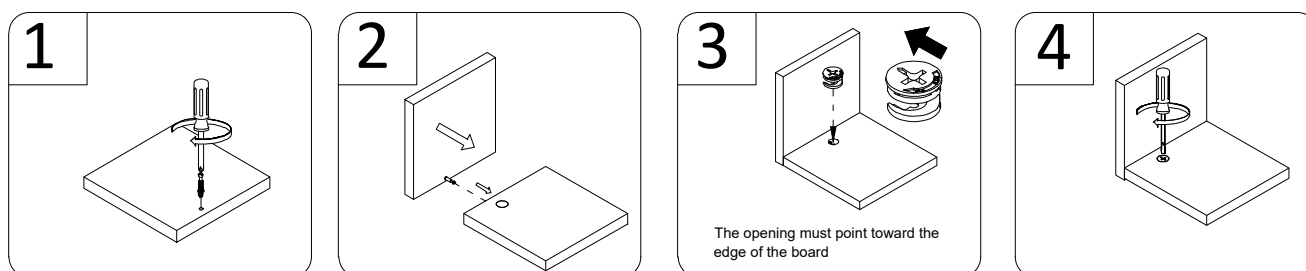





STEP 1

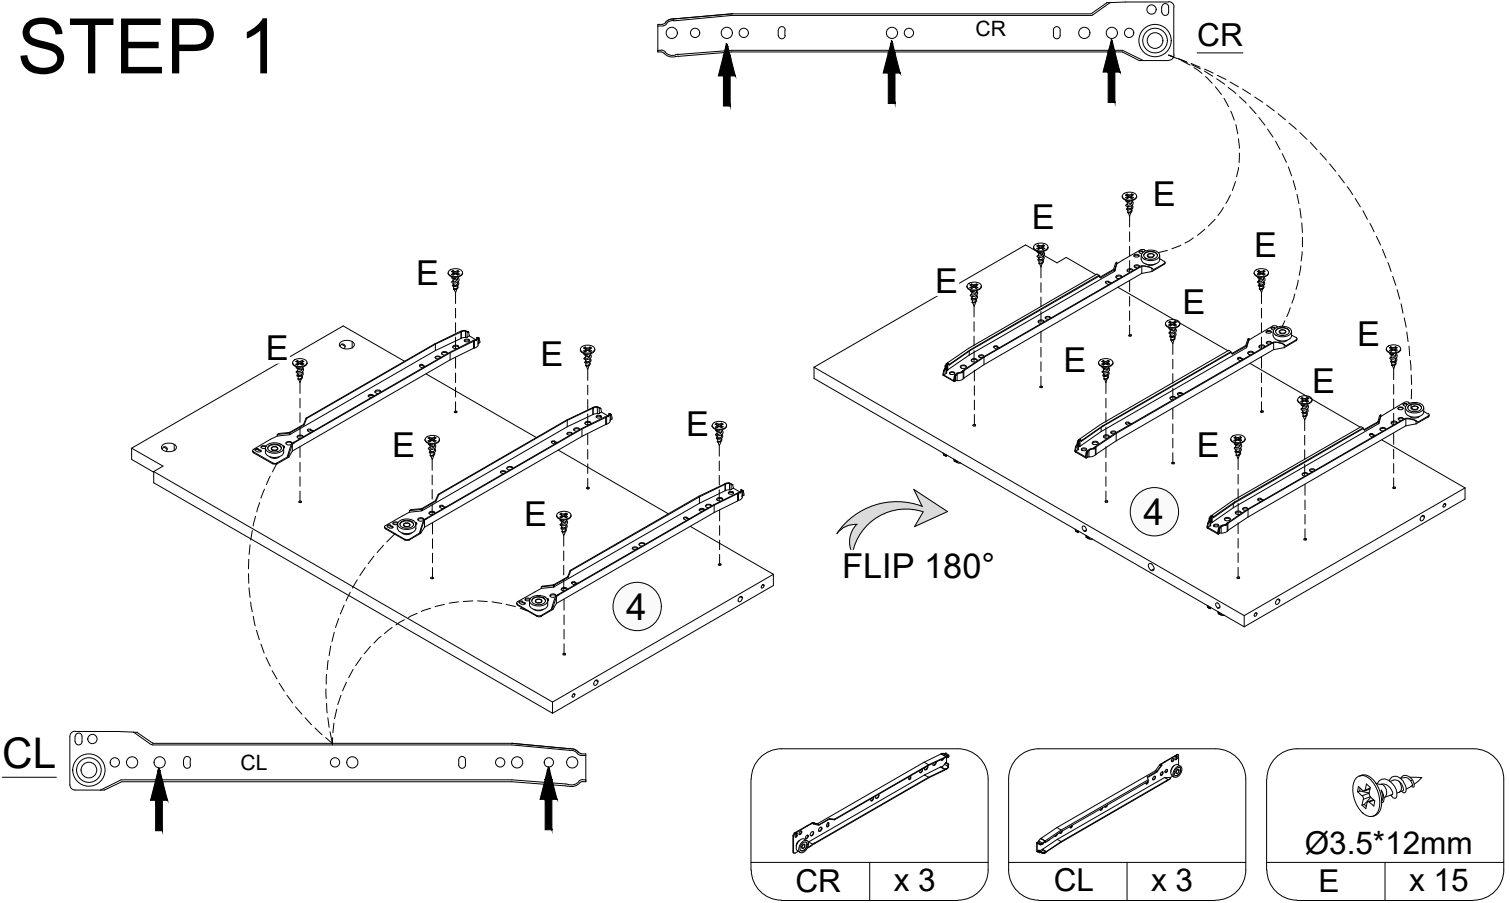





STEP 2

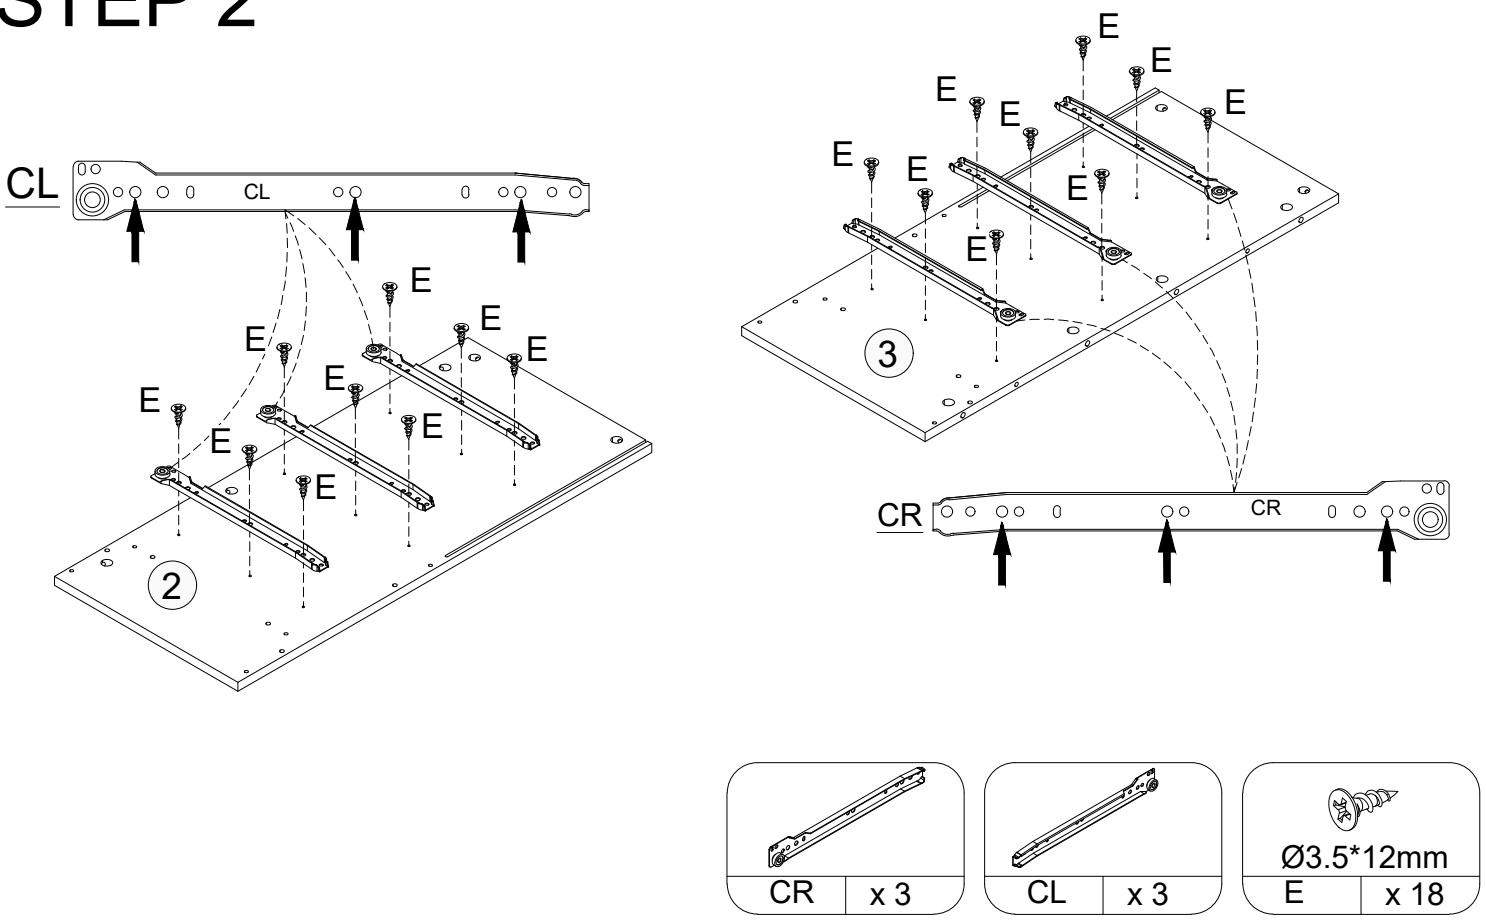


STEP 3

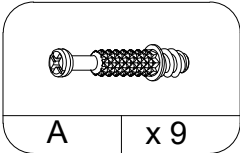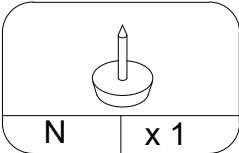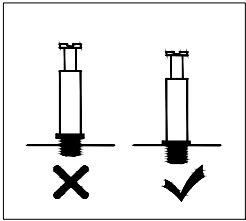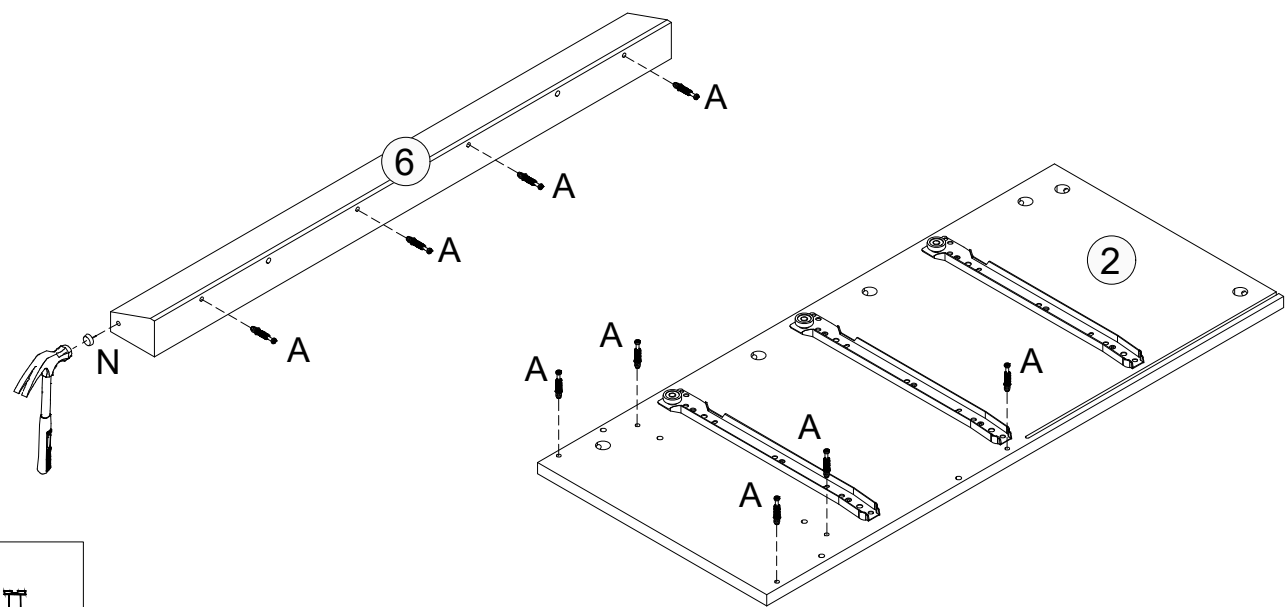


STEP 4

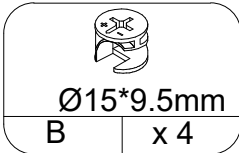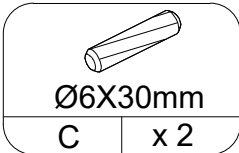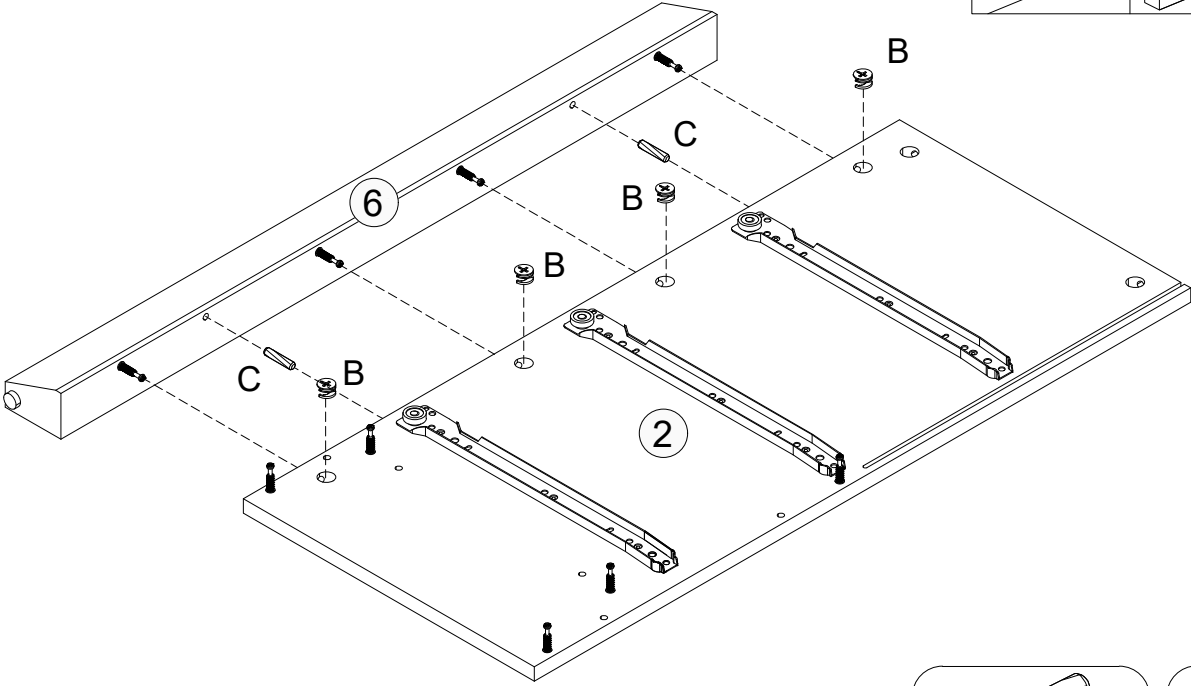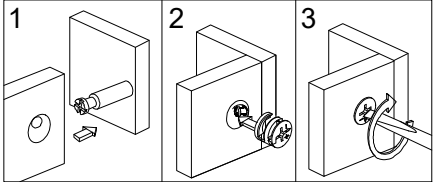




STEP 5

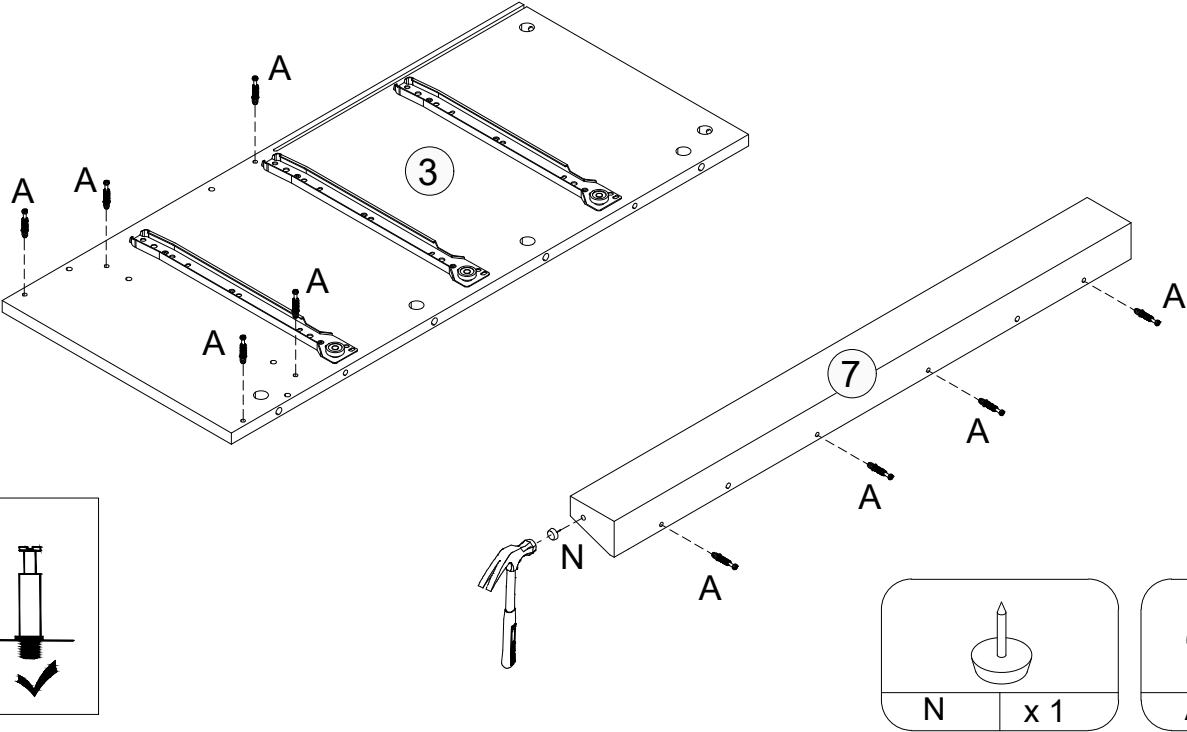




STEP 6

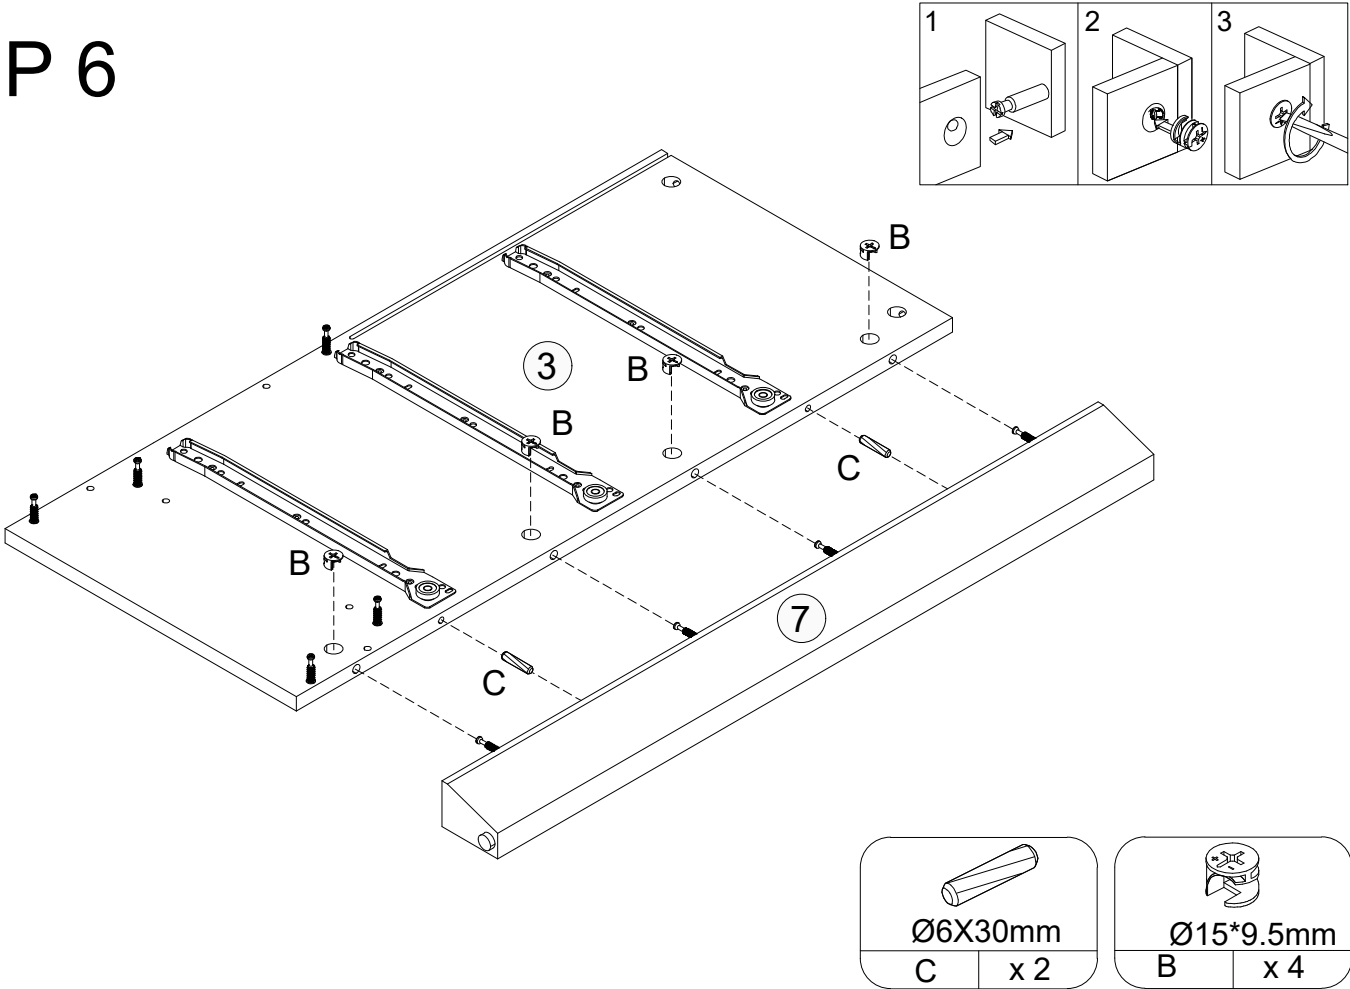


STEP 7

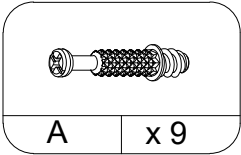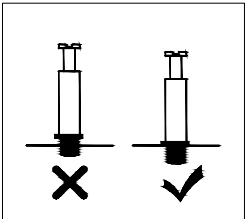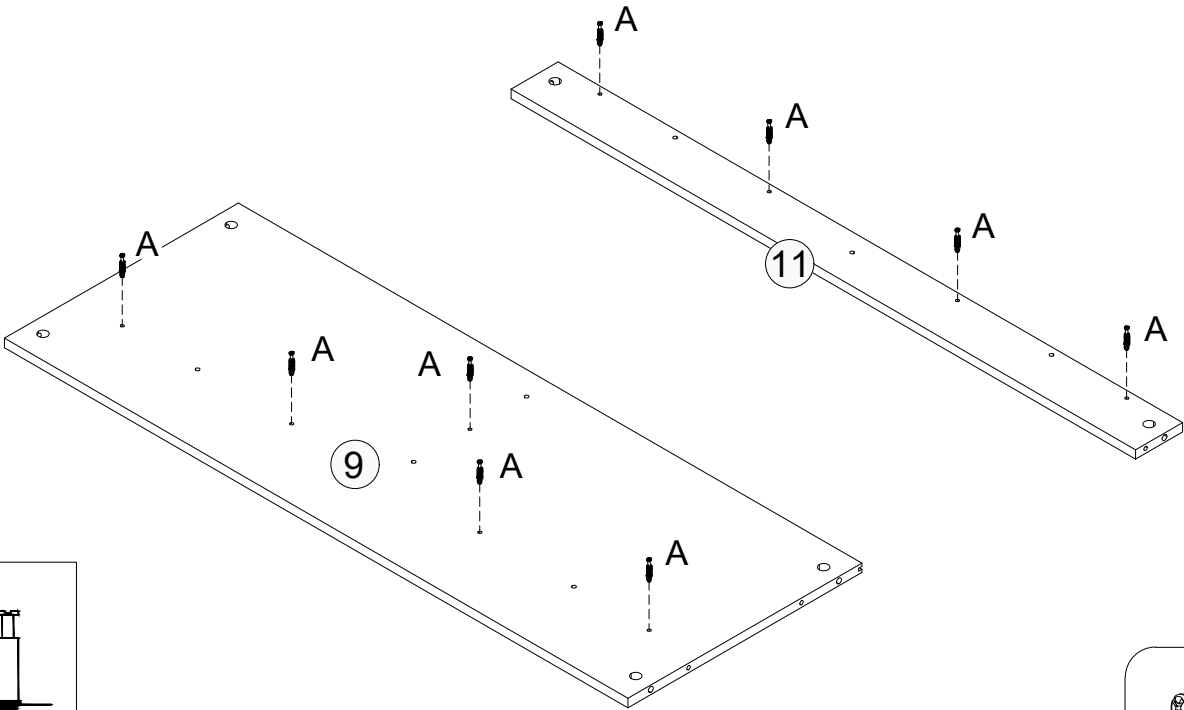


STEP 8

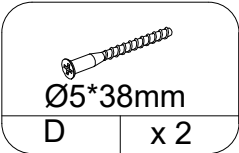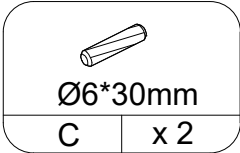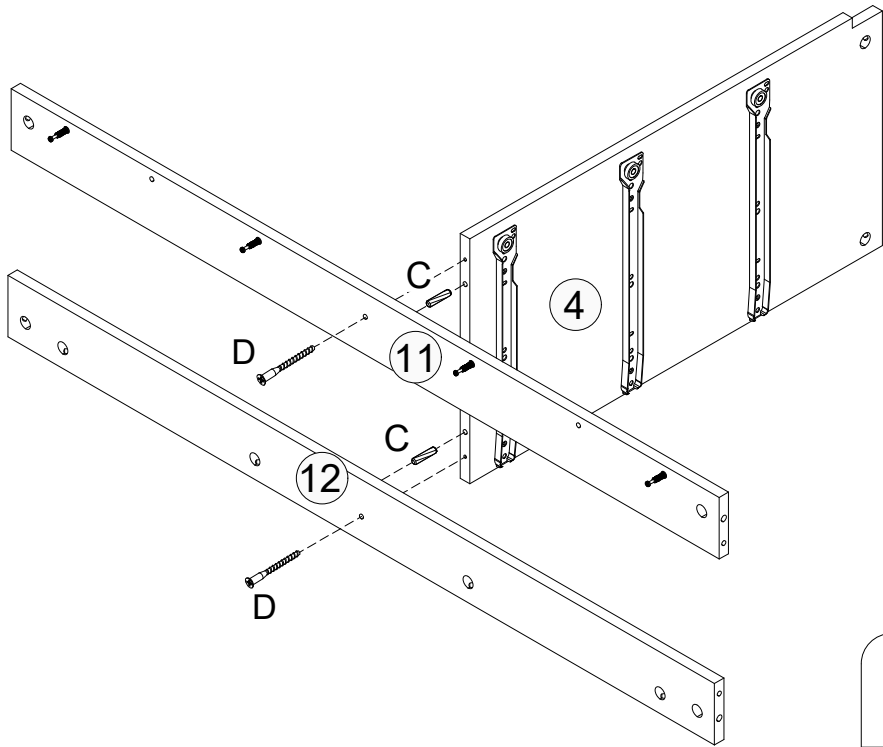


STEP 9

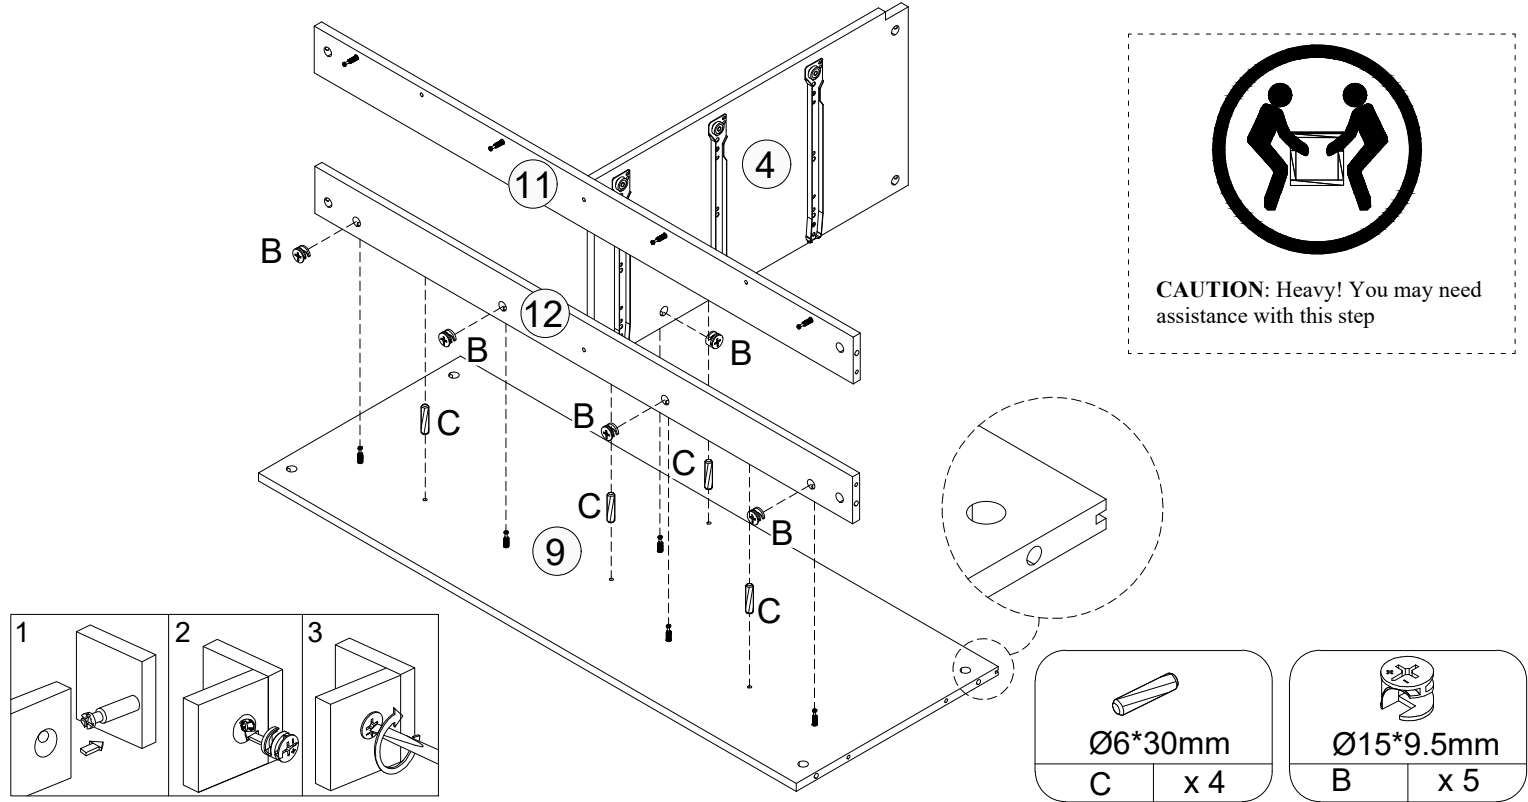

STEP 10

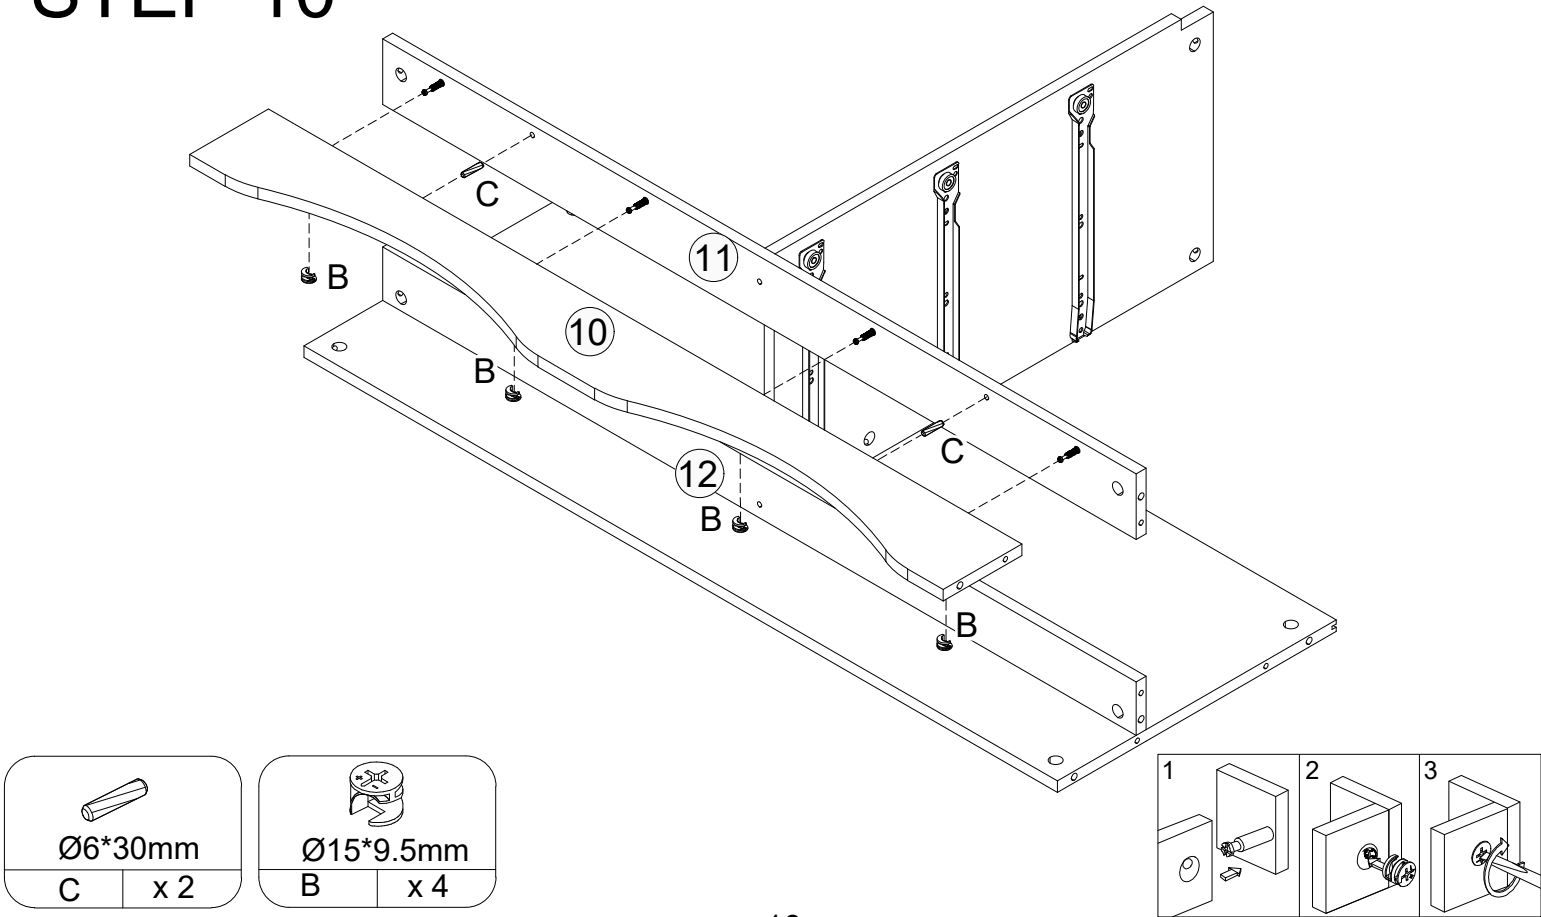

STEP 11

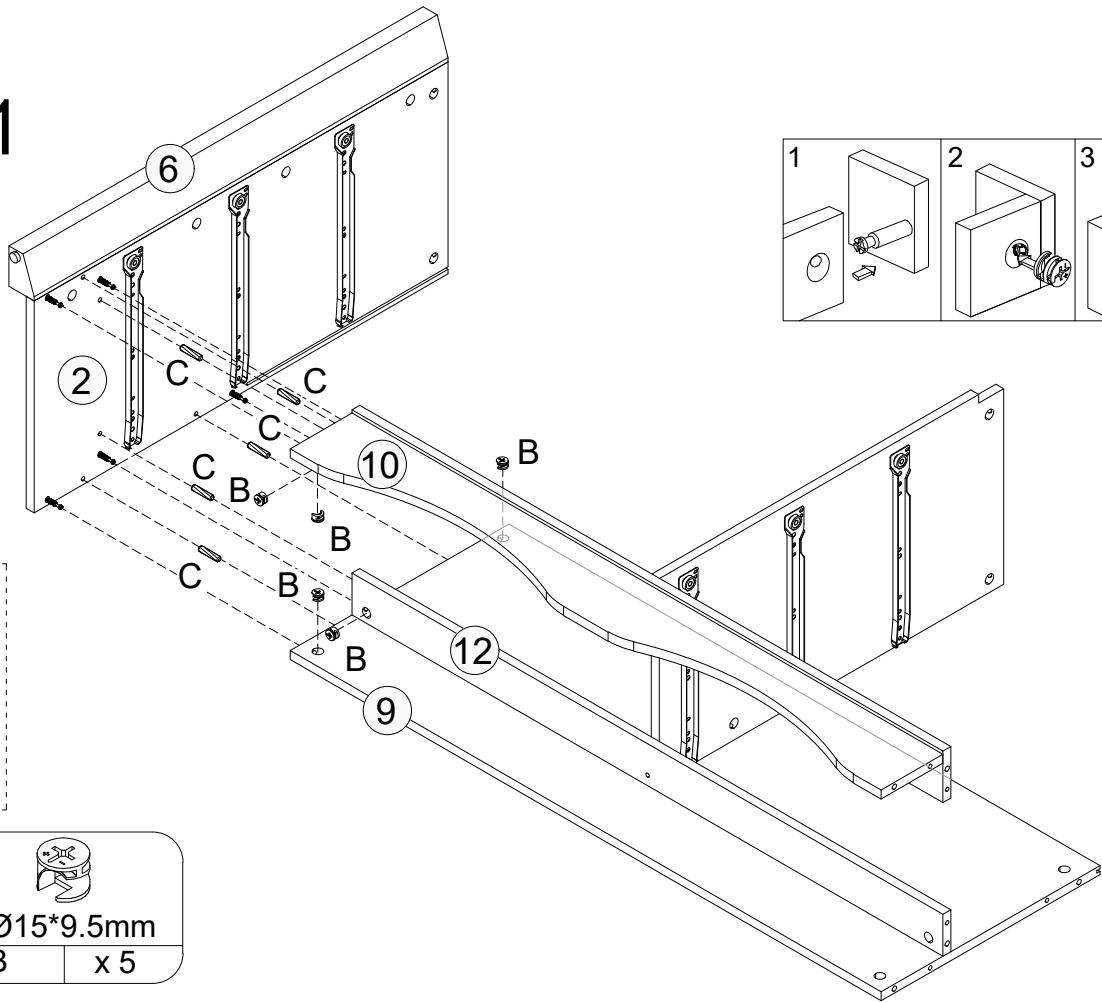


CAUTION: Heavy! You may need assistance with this step


Ø6*30mm
C x 5


Ø15*9.5mm
B x 5

STEP 12

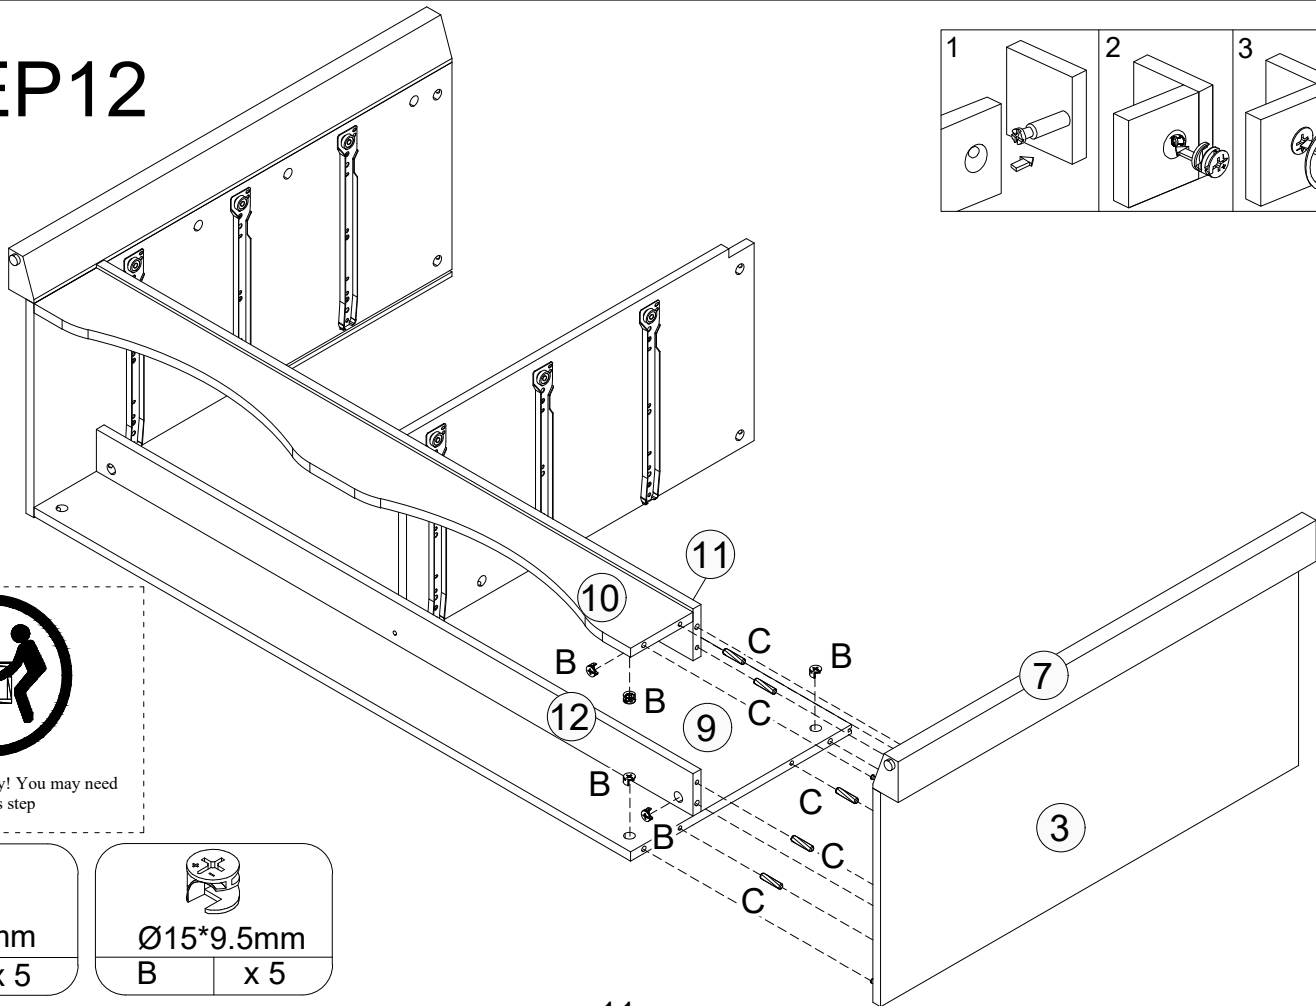


CAUTION: Heavy! You may need assistance with this step



Ø6*30mm
C x 5


Ø15*9.5mm
B x 5


STEP 13

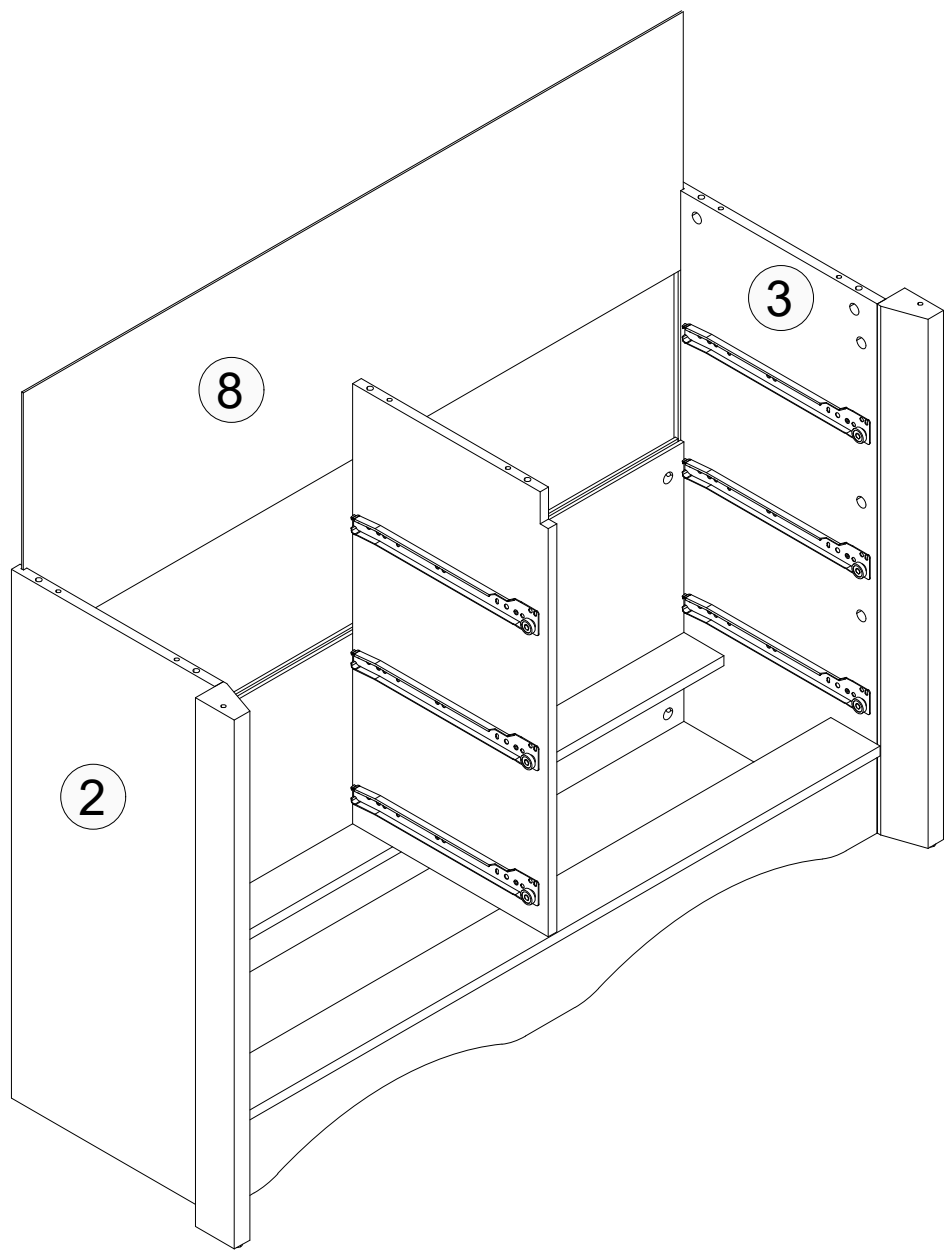



STEP 14

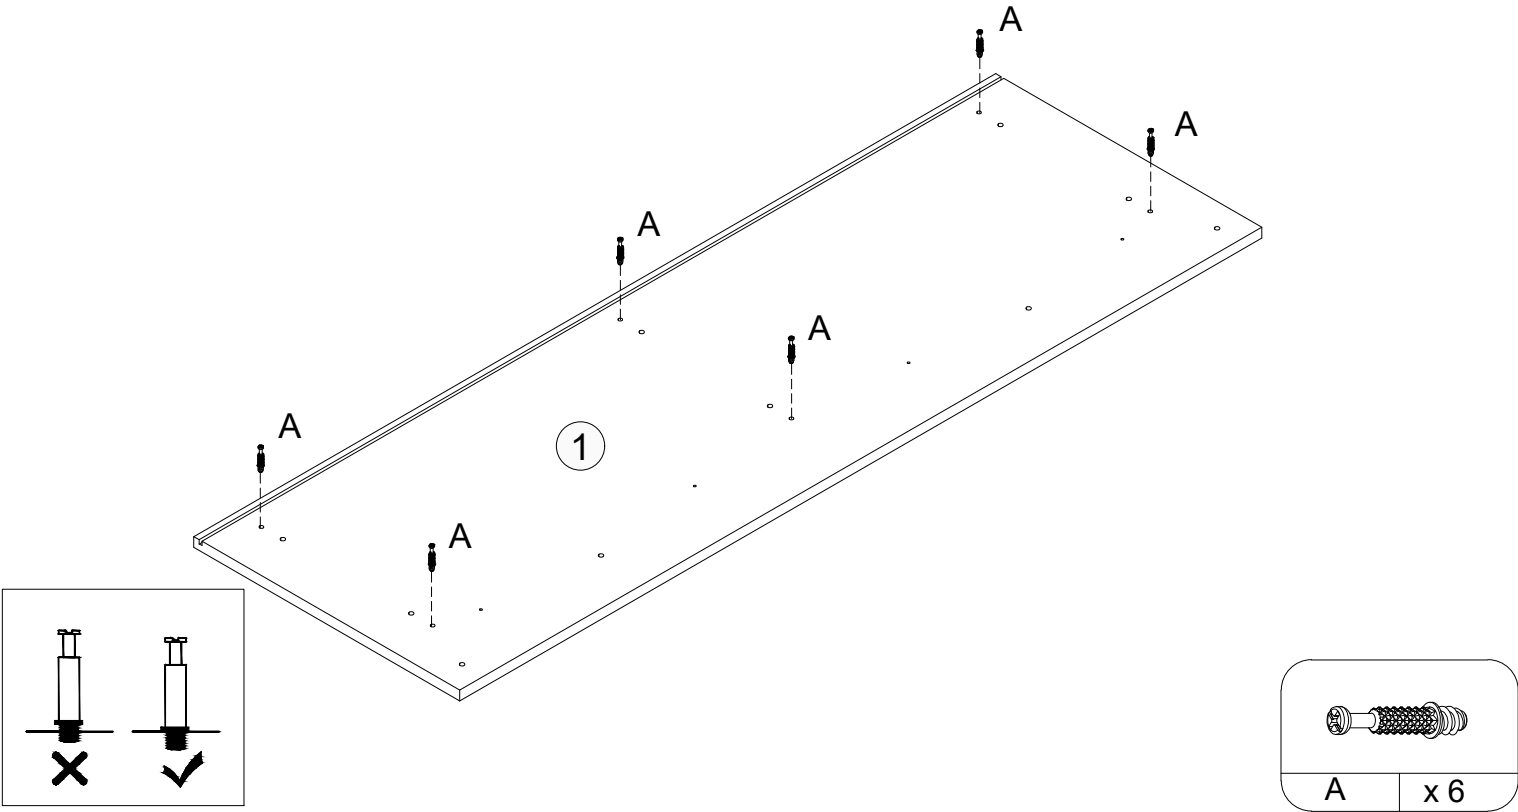


STEP 15

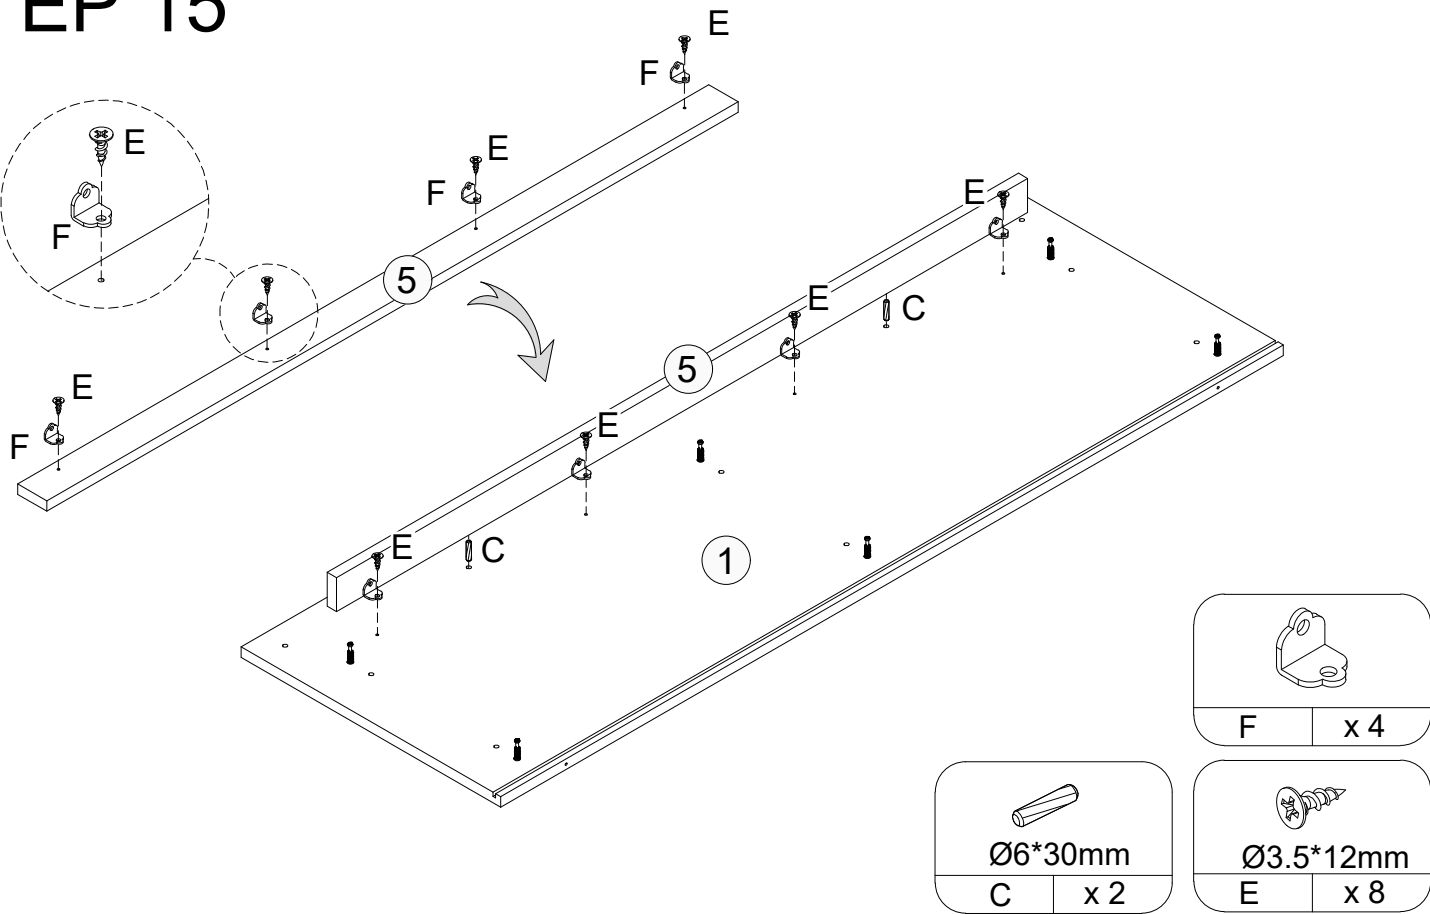

STEP 16

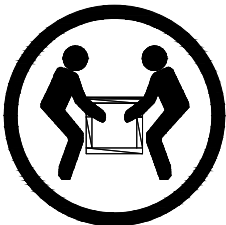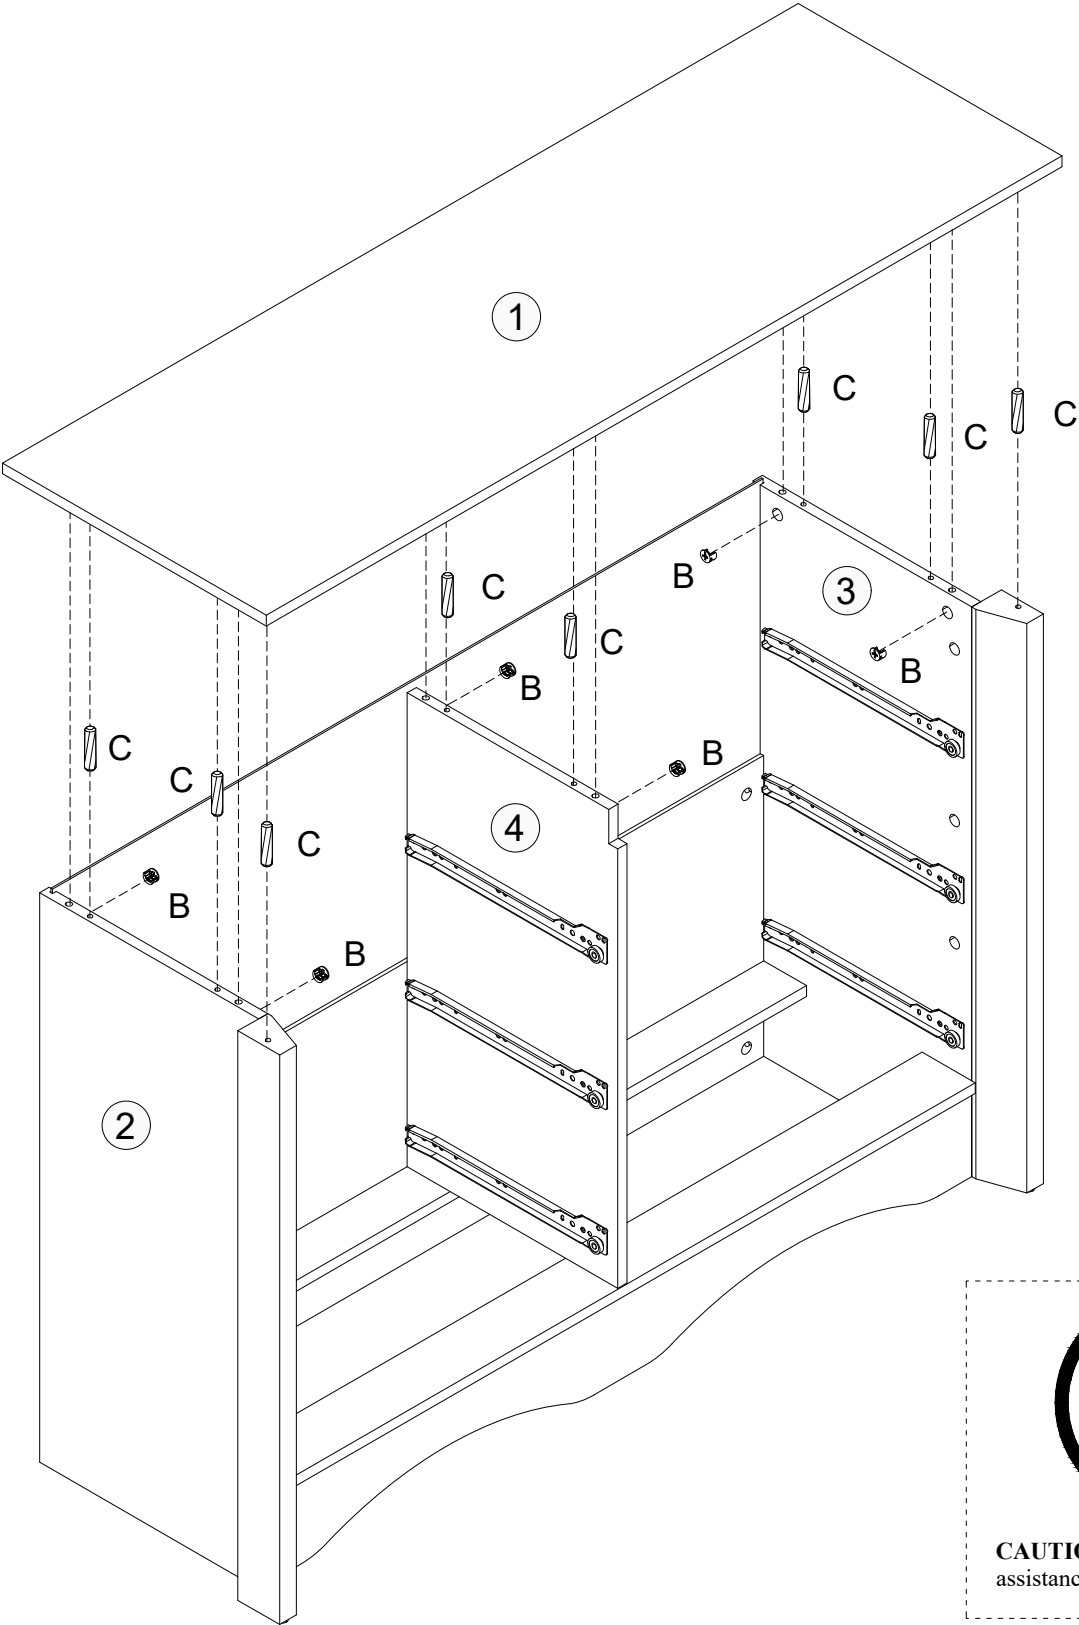




CAUTION: Heavy! You may need assistance with this step

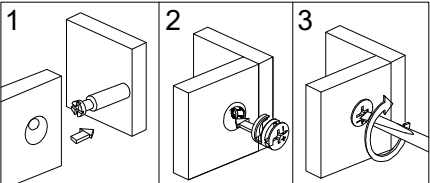




	
Ø6*30mm	
C	x 8

	
Ø15*9.5mm	
B	x 6


STEP 17

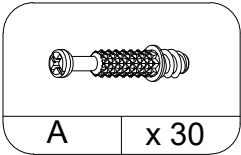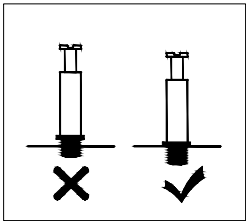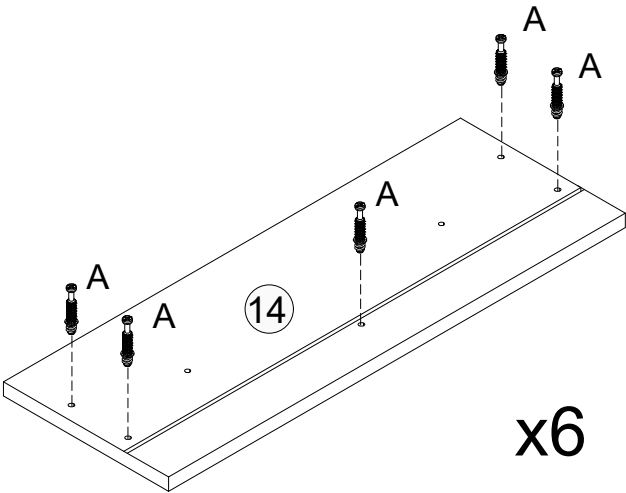


STEP 18

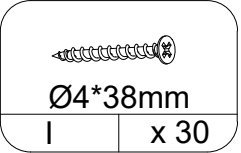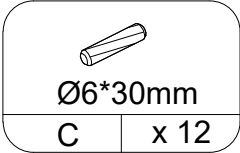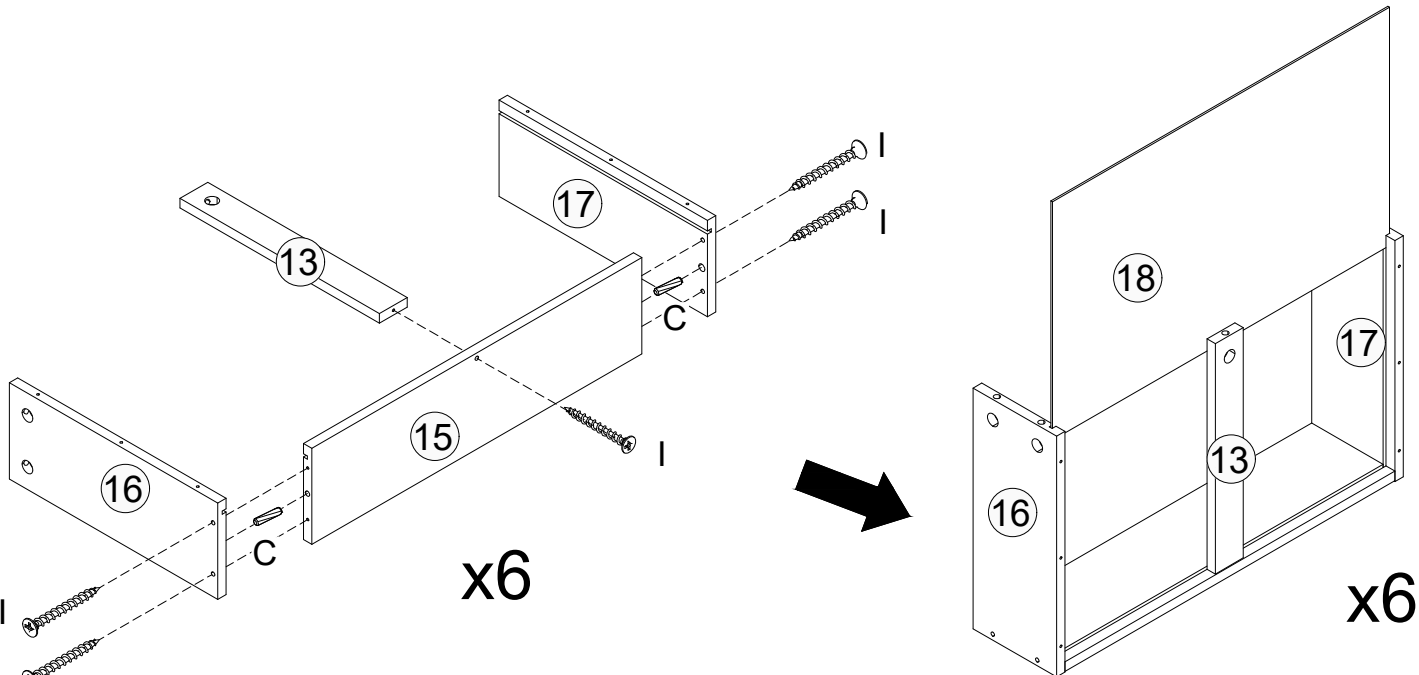


STEP 19

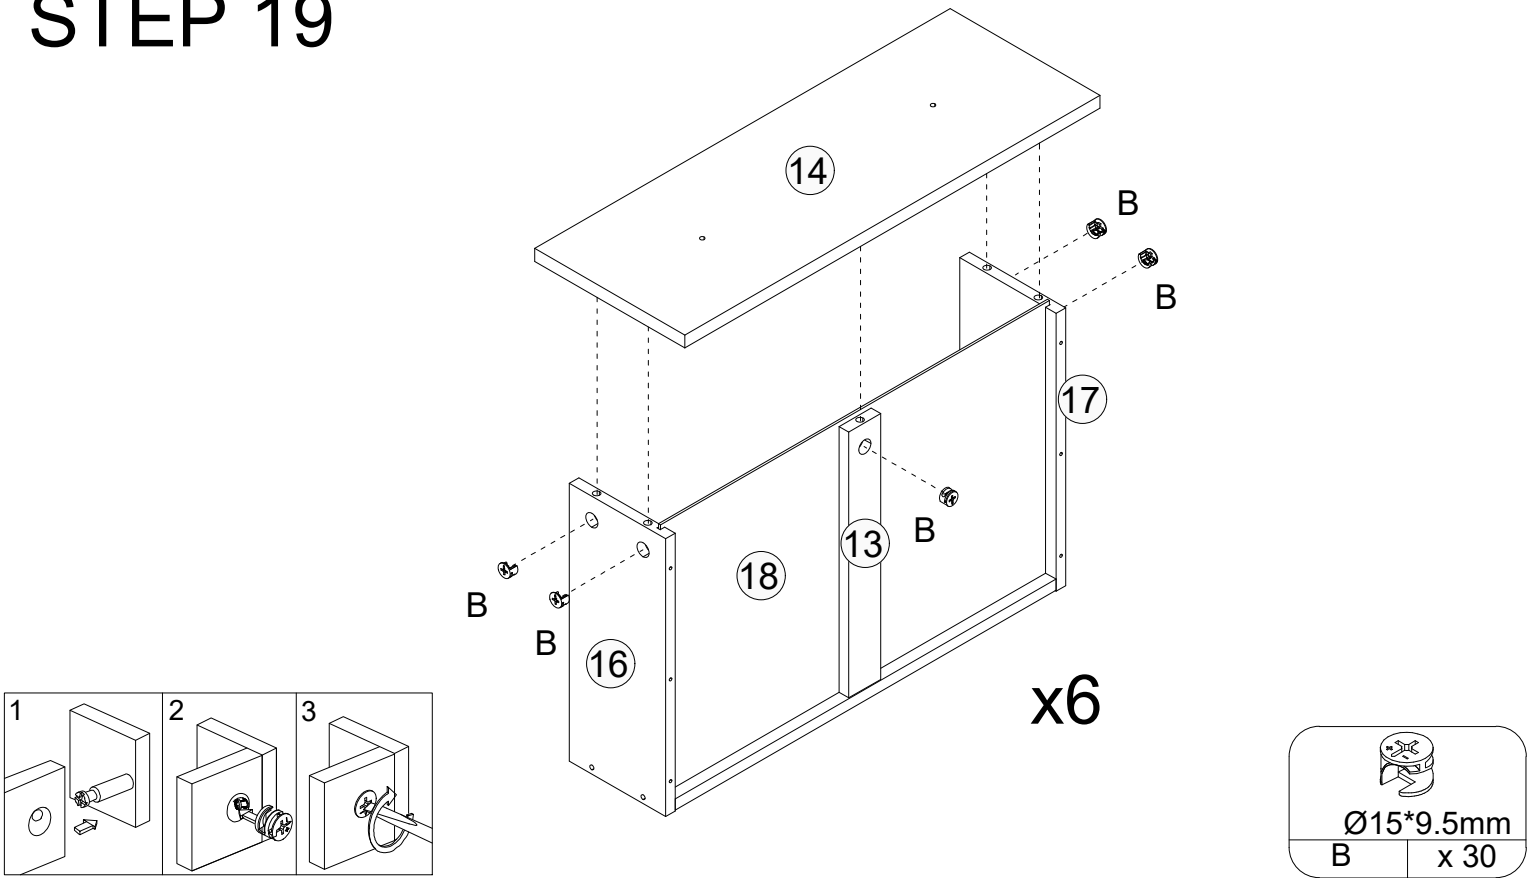

STEP 20

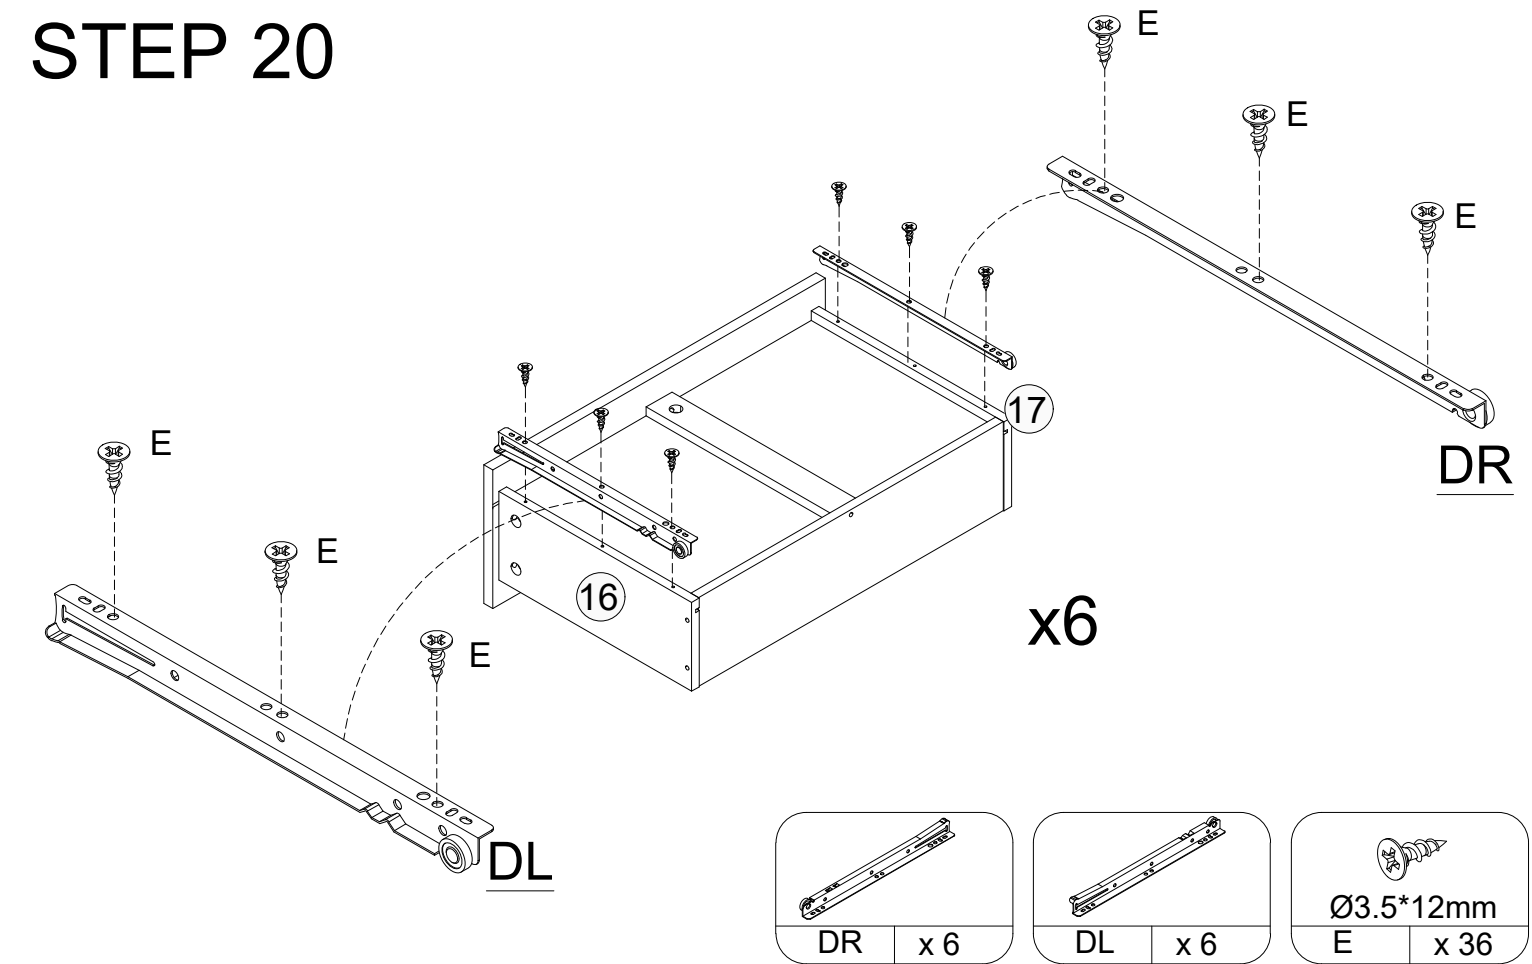


STEP 21

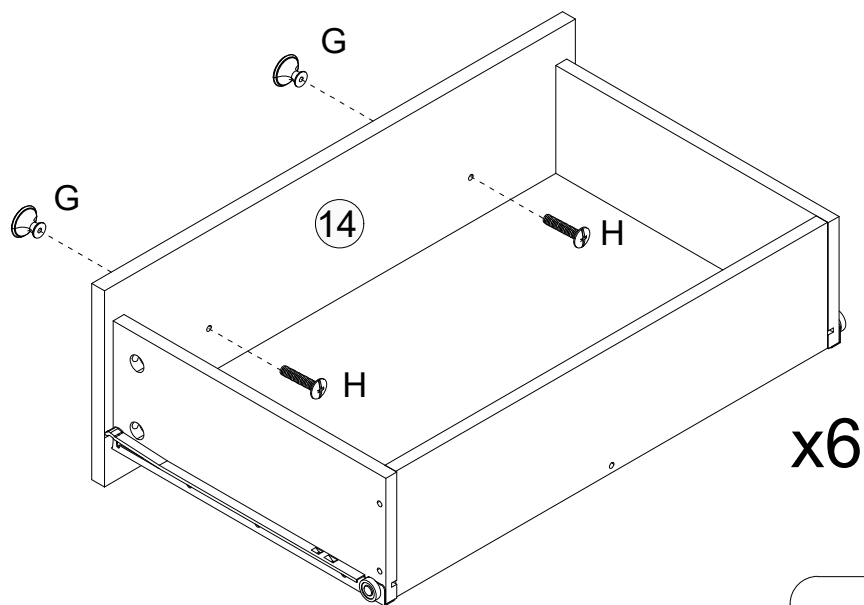


			
M4*20mm			
H	x 12	G	x 12


STEP 22

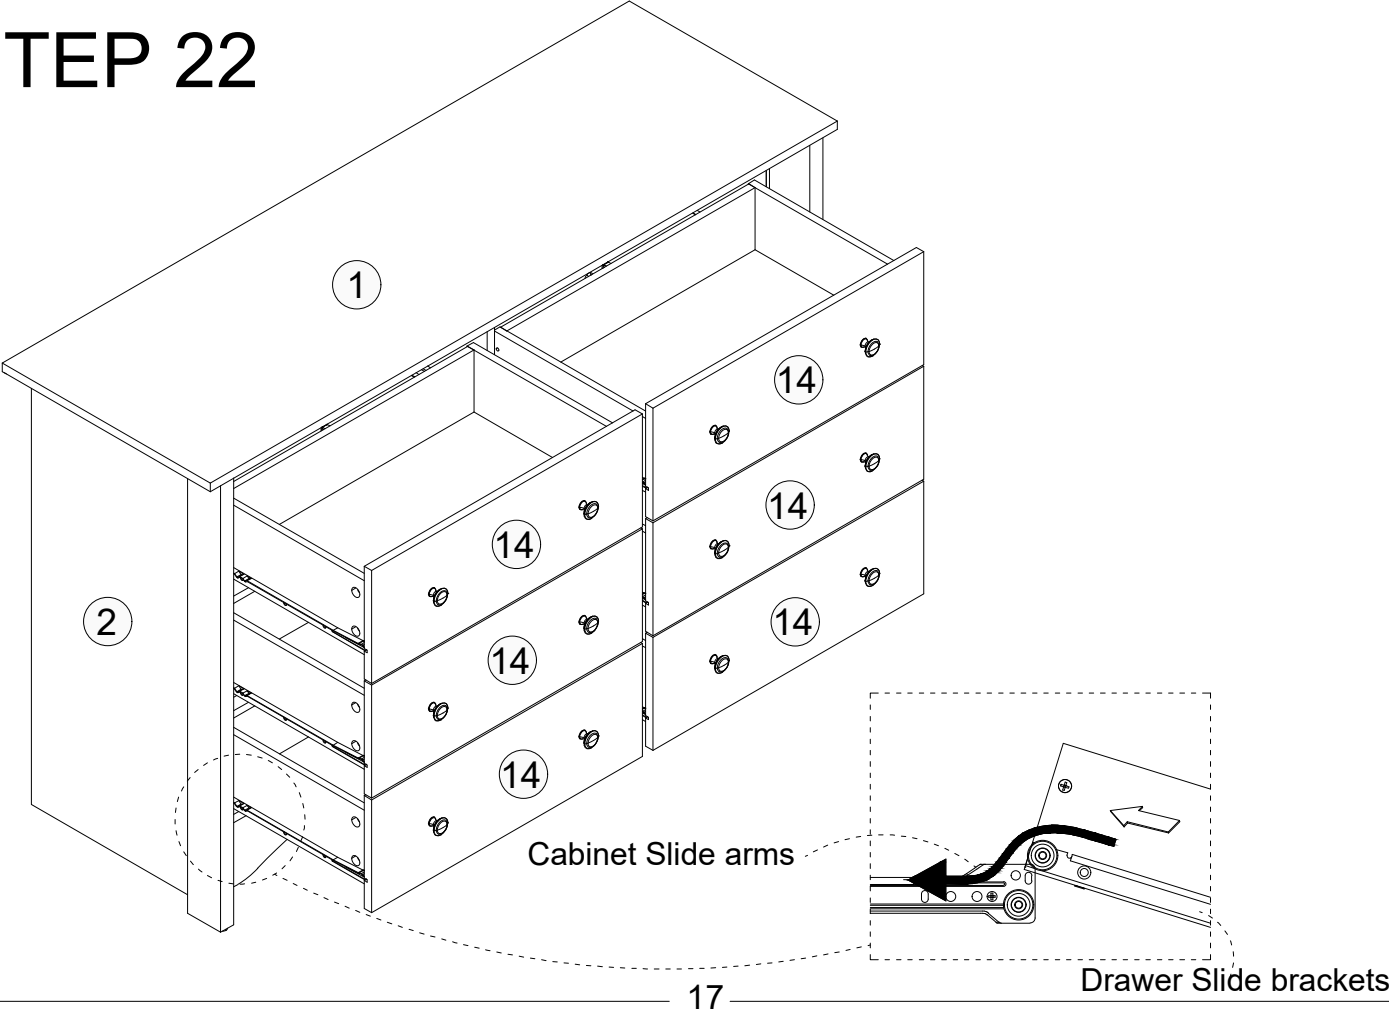

STEP 23

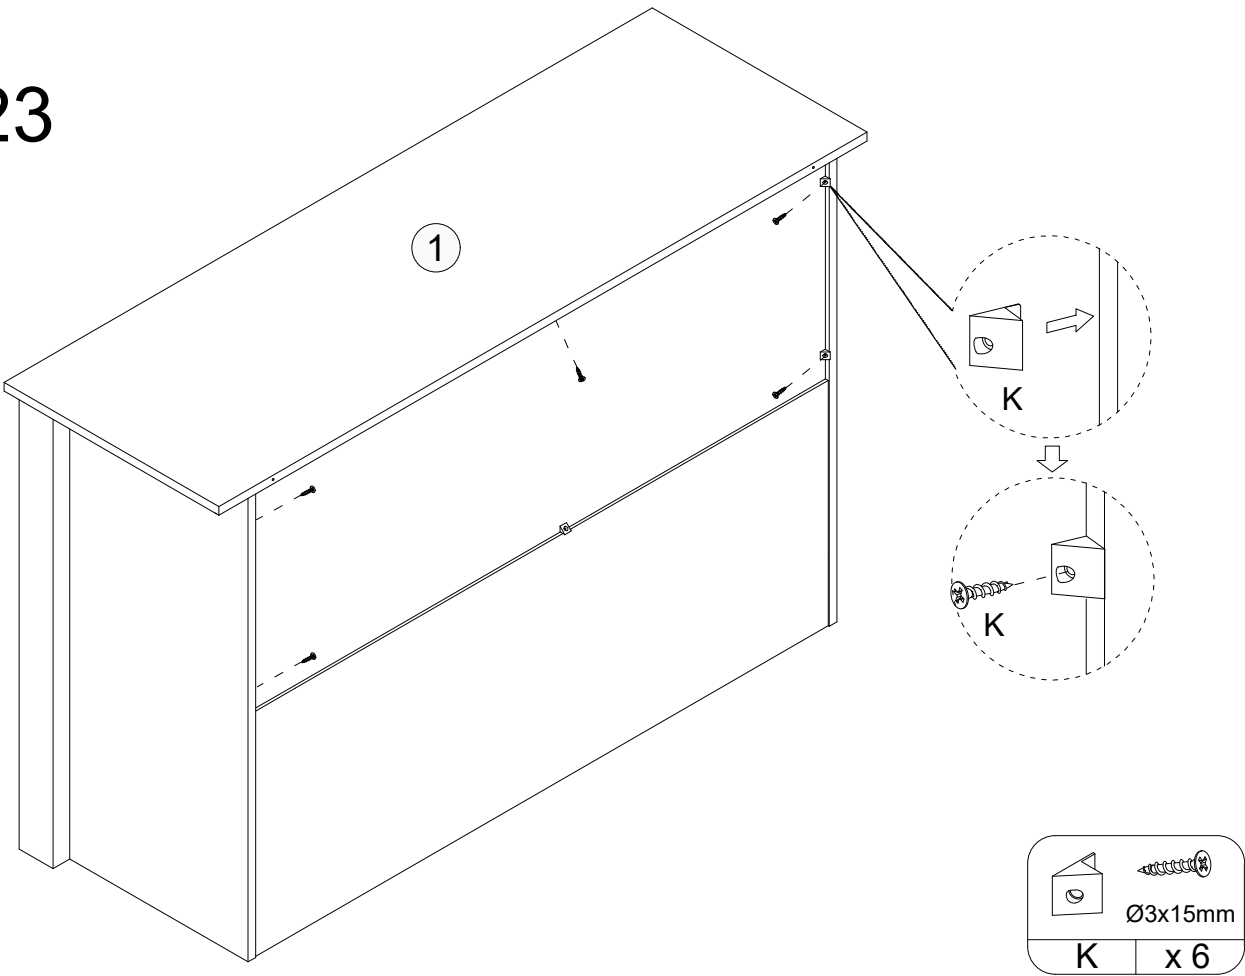


STEP 24

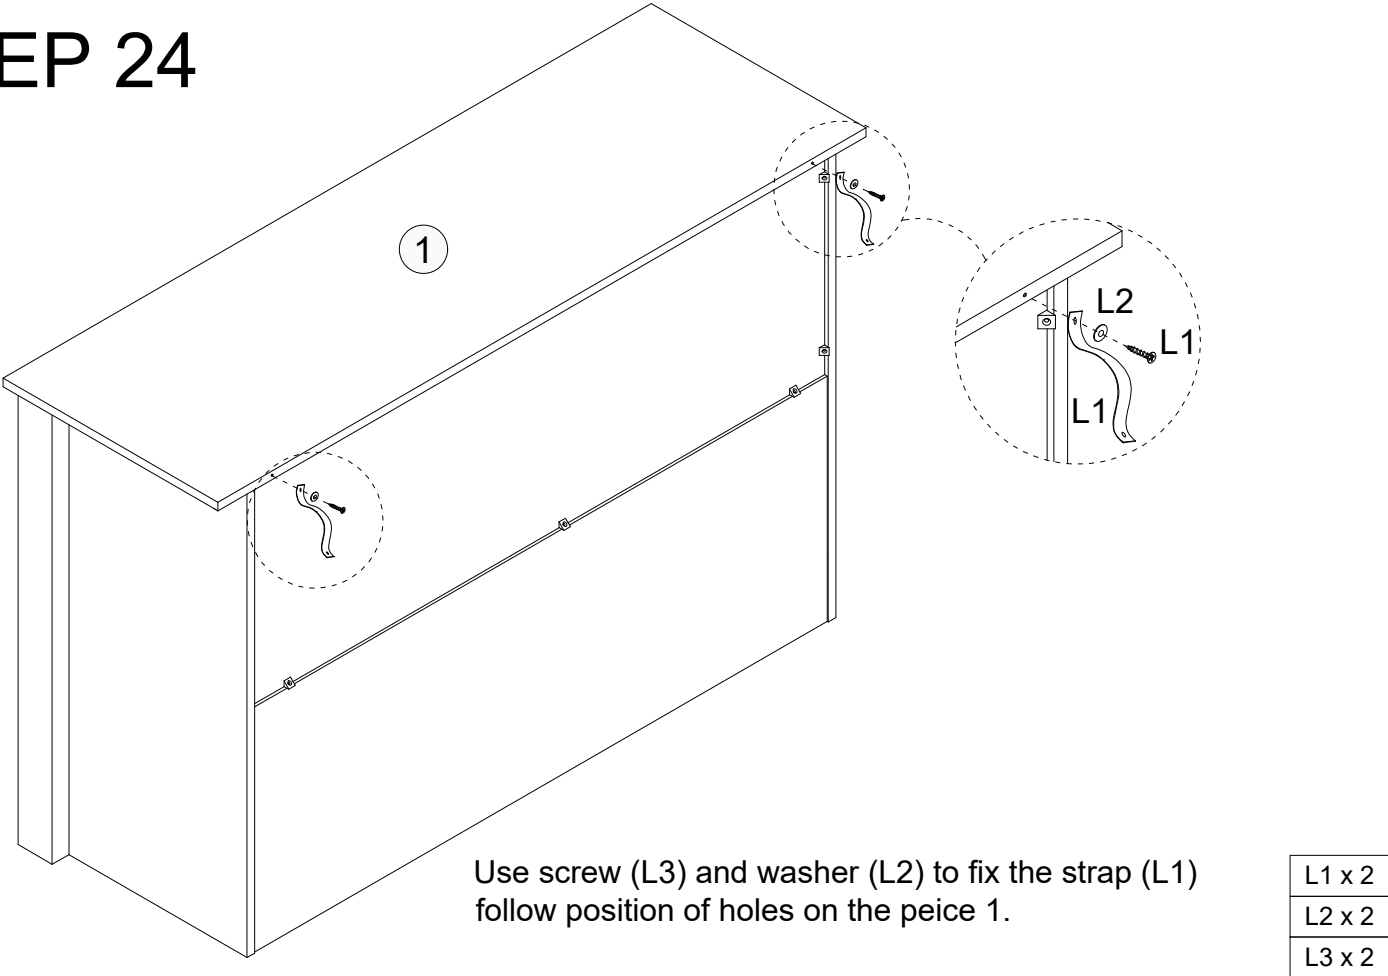

Use screw (L3) and washer (L2) to fix the strap (L1) follow position of holes on the peice 1.

STEP 25

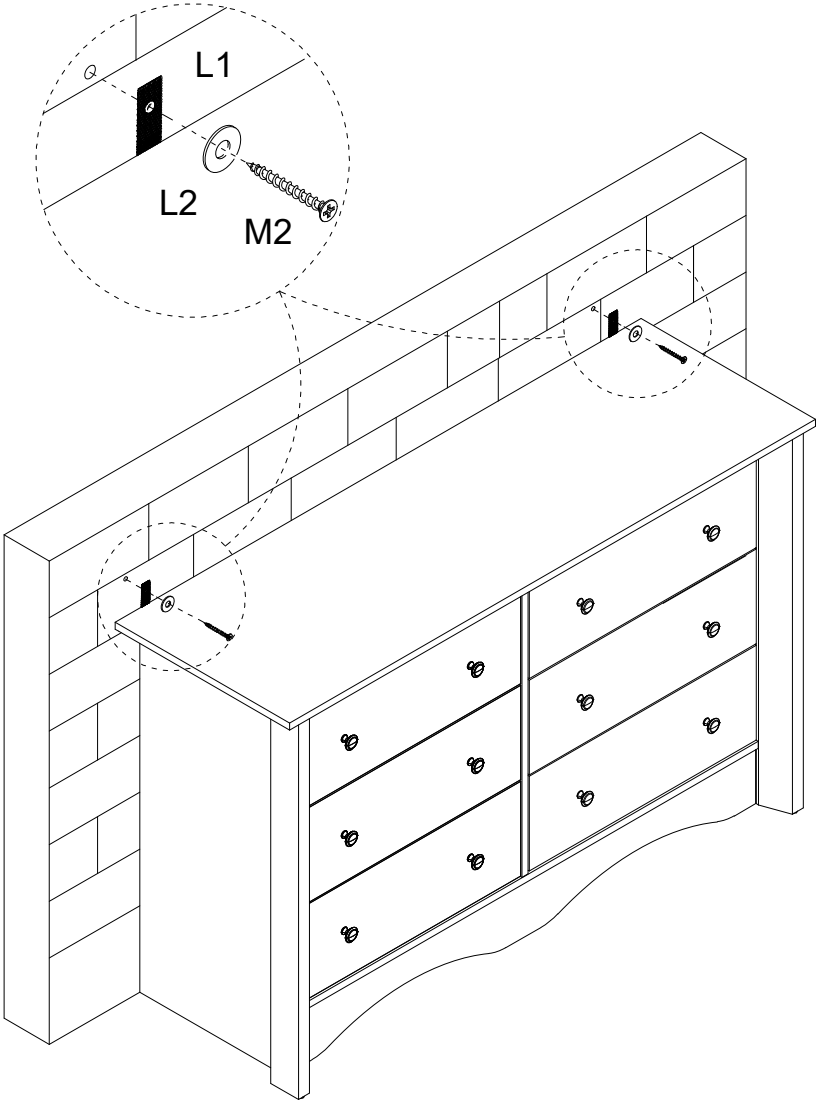

WALL

I Mark the hole drilling location

WALL

II Drill a hole

WALL

M1
Use a hammer to close anchor (M1)

- Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.
- Step 2: drill the hole and then fixed the anchor (M1) on the wall.
- Step 3: use screw (M2) to fix the strap (L1), (L2) on the wall .

M1 x2
M2 x2
L2 x2

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning