

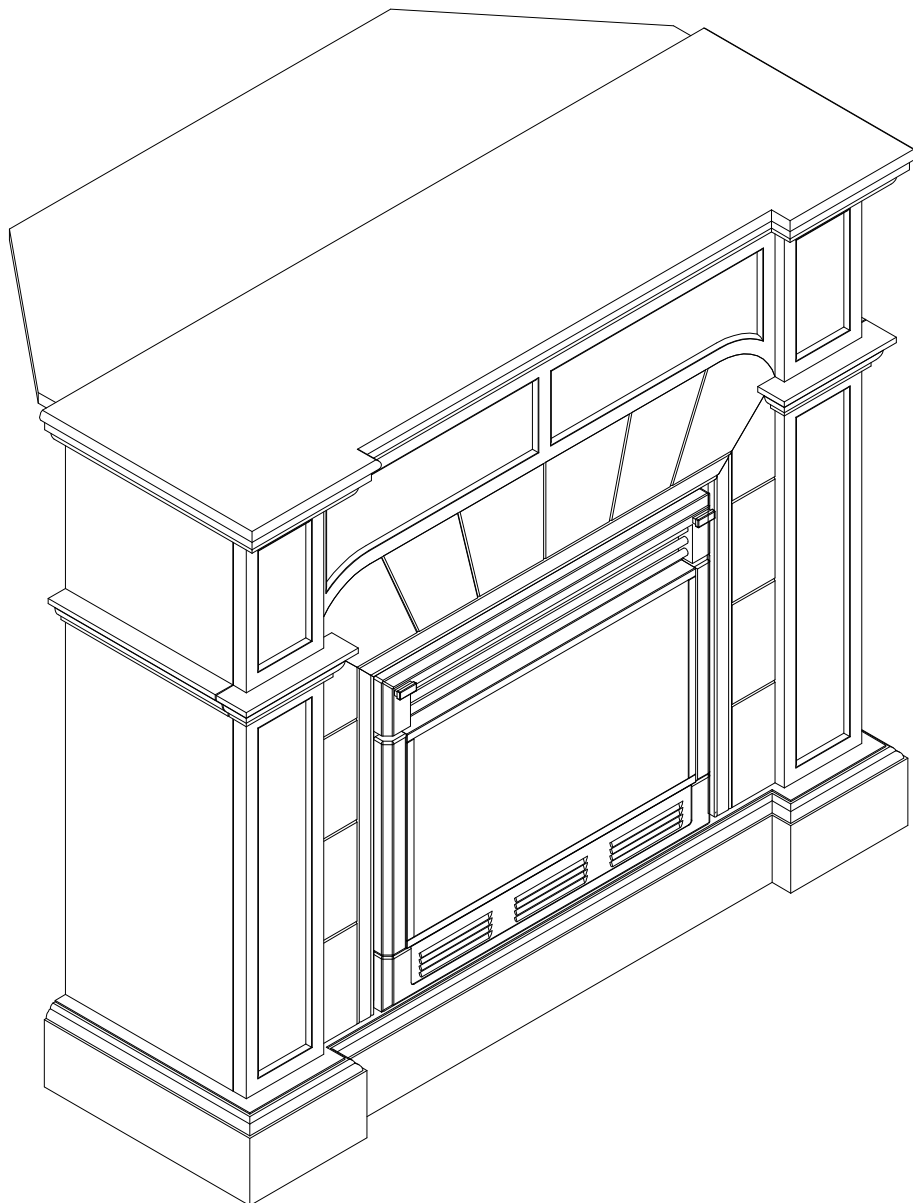
CONVERTIBLE FIREPLACE

Mission Oak

IVORY

ESPRESSO

ASSEMBLY INSTRUCTION



ATTENTION:

The Extension panel not be loaded with more than 6 LBS

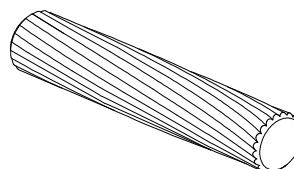
CONVERTIBLE FIREPLACE

Parts List

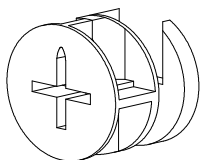
Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware. Do not return to store/retailer. Screws shown in actual size. Using a screw that is too long will cause damage. Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below. You may receive extra hardware with your unit.

AQuantity
Of 8

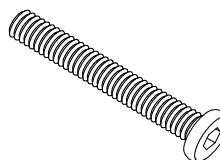
CAM BOLT

BQuantity
Of 14

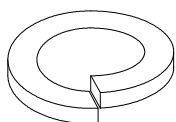
WOOD DOWEL

CQuantity
of 8

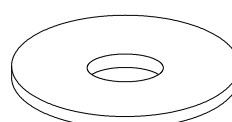
CAM LOCK

DQuantity
of 6

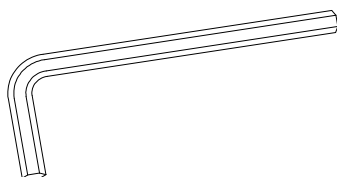
SOCKET HEXAGON BOLT

EQuantity
of 6

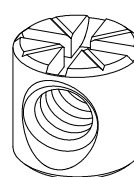
SPRING WASHER

FQuantity
of 6

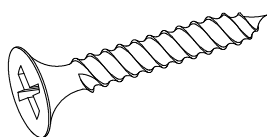
FLAT WASHER

GQuantity
of 1

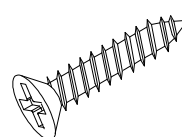
ALLEN WRENCH

HQuantity
of 6

CROSS SOCKET NUT

IQuantity
of 23

WOOD SCREW

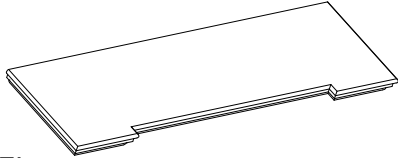

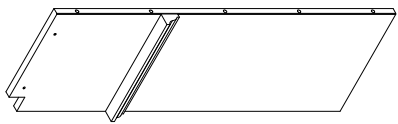


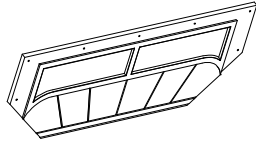


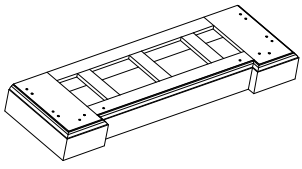
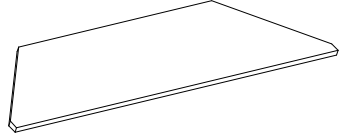
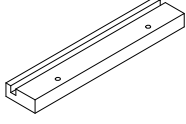

JQuantity
of 6

WOOD SCREW

CONVERTIBLE FIREPLACE

Parts List


Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware. Do not return to store/retailer. Using a screw that is too long will cause damage. Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below. You may receive extra hardware with your unit.

<p>(1)</p>  <p>TOP PANEL</p>	<p>Quantity of 1</p>	<p>(2)</p>  <p>LEFT SIDE PANEL</p>	<p>Quantity of 1</p>
<p>(3)</p>  <p>RIGHT SIDE PANEL</p>	<p>Quantity of 1</p>	<p>(4)</p>  <p>LEFT FRONT PANEL</p>	<p>Quantity of 1</p>
<p>(5)</p>  <p>RIGHT FRONT PANEL</p>	<p>Quantity of 1</p>	<p>(6)</p>  <p>MIDDLE FRONT PANEL</p>	<p>Quantity of 1</p>
<p>(7)</p>  <p>LEFT MIDDLE SIDE PANEL</p>	<p>Quantity of 1</p>	<p>(8)</p>  <p>RIGHT MIDDLE SIDE PANEL</p>	<p>Quantity of 1</p>
<p>(9)</p>  <p>BASE</p>	<p>Quantity of 1</p>	<p>(10)</p>  <p>CORNER TOP PANEL</p>	<p>Quantity of 1</p>
<p>(11)</p>  <p>INSERT FIXED BAR</p>	<p>Quantity of 2</p>	<p>(12)</p>  <p>INSERT (sold in a separate box)</p>	<p>Quantity of 1</p>

Care and Cleaning Instructions:

Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish . Avoid rubbing or scratching the surface with rough or abrasive objects. For replacement parts or questions, please

Assembly Tool Required
No.2 Phillips Screwdriver (Not Included)



CONVERTIBLE FIREPLACE

Assembly Instructions

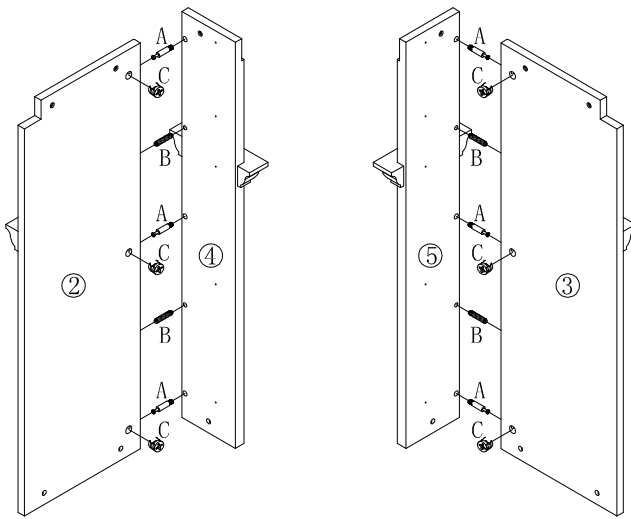


Figure 1

INSERT(A)CAM BOLT &(B)WOOD DOWEL TO THE RELATED HOLES OF (2) LEFT SIDE PANEL& (4))RIGHT SIDE PANEL,THEN USE (C)CAM LOCK TO CONNECT (2)LEFT SIDE PANEL&(4)LEFT FRONT PANEL , (3)&(5) CONNECT PLS DO THE SAME STEP AS (2)&(4).

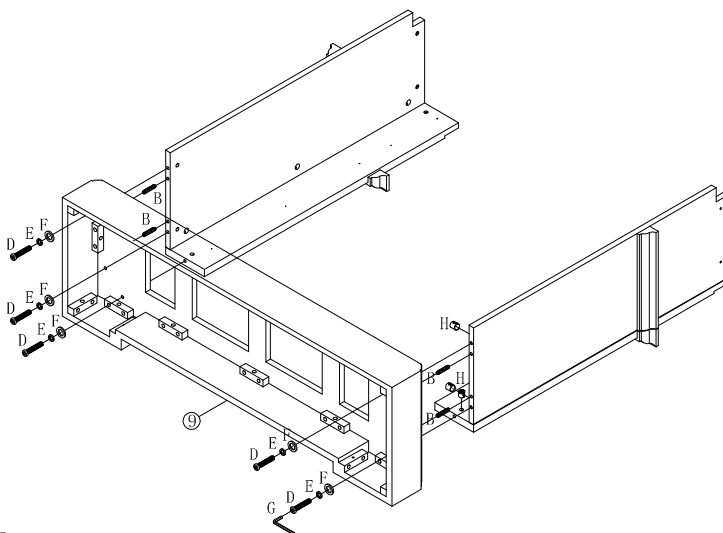


Figure 2

AFTER ASSEMBLED FIGURE 1,INSERT (B) WOOD DOWEL & (H) CROSS SOCKET NUT TO THE RELATED HOLES ,THEN USE (D) SOCKET HEXAGON SCREW CROSS (E) SPRING WASHER &(F) FLAT WASHER TO CONNECT (7) BASE.

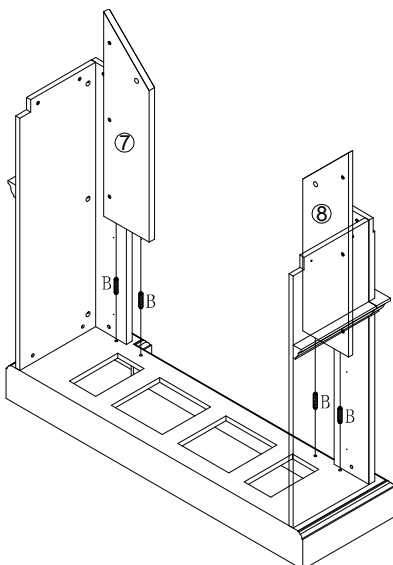


Figure 3

INSERT LEFT MIDDLE SIDE PANEL(7) & RIGHT MIDDLE SIDE PANEL(8) INTO ASSEMBLED UNIT IN THE FIGURE 2 BY WOOD DOWEL(B)

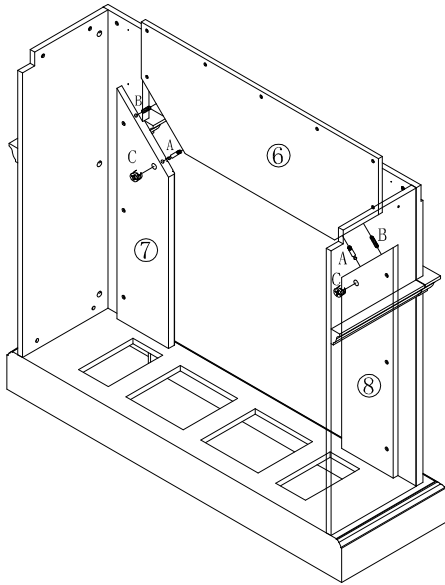


Figure 4

ATTACH MIDDLE FRONT PANEL(6) TO LEFT MIDDLE SIDE PANEL(7) & RIGHT MIDDLE SIDE PANEL(8) BY SLIPPING WOOD DOWEL(B) & CAM BOLT(A) UNTIL MIDDLE FRONT PANEL(6) & LEFT MIDDLE SIDE PANEL (7) & RIGHT MIDDLE SIDE PANEL (8)MEET.SECURE BY ROTATING CAM LOCK (C) COUNTERCLOCKWISE WITH PHILLIPS SCREWDRIVER

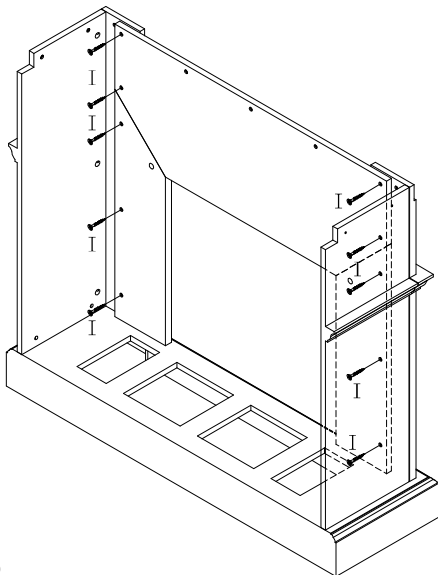


Figure 5

AFTER FINISHED FIGURE 4 ,INSERT (I) WOOD SCREW INTO BACK SIDE OF 6,7,8 AND HALFWAY FASTEN THESE SCREWS.

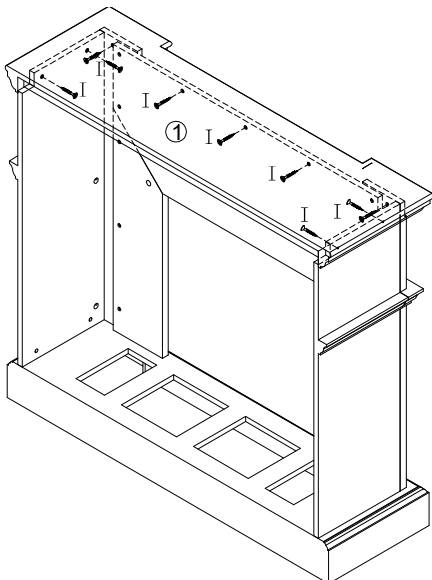


Figure 6

FIT TOP PANEL (1) ONTO FIGURE 5 THEN FASTEN ALL 6,7,8 WITH SCREWS (I). ALSO INSERT (I) WOOD SCREW INTO UPPER HOLES OF 2,3,4,5,6 PANELS TO CONNECT WITH TOP PANEL.

CONVERTIBLE FIREPLACE

Assembly Instructions

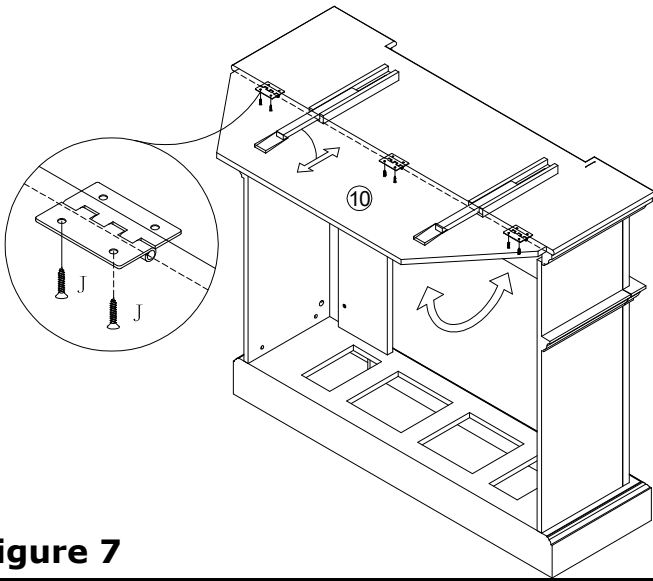


Figure 7

PUSH SUPPORT WOOD SLIDE TO LET THE CORNER PANEL PARALLEL WITH THE TOP PANEL. USING 6 SMALL WOOD SCREWS (J) FASTEN PRE-INSTALLED HINGES WITH CORNER PANEL (10).

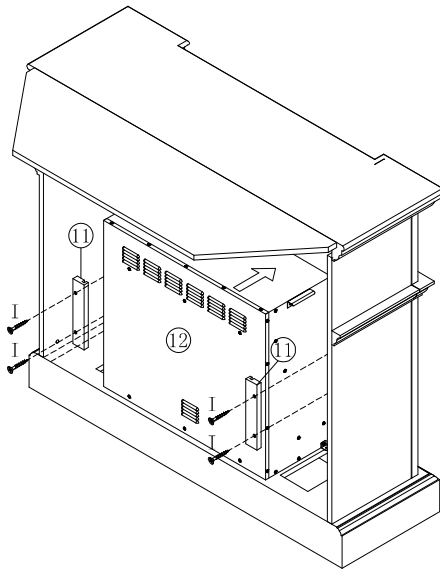


Figure 8

PUSH (12) INSERT TO THE RELATED PLACE OF MAIN BODY ,THEN INSERT (I)WOOD SCREW THROUGH (11)INSERT FIXED BAR TO LOCK TIGHTLY.

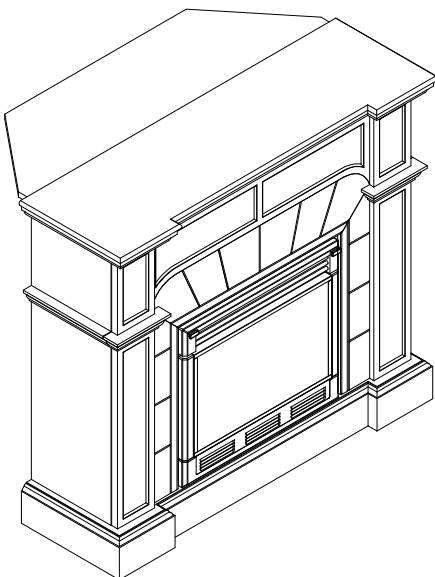


Figure 9

Parts Replacement Form

Customer Information

Name

Address

City/State/Zip Code

Phone Number

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No	Parts Letter	Parts Description	Quantity Needed
----------	--------------	-------------------	-----------------

--	--	--	--

--	--	--	--

--	--	--	--

Please contact the retailer that you purchased from for returns.