


MODULAR COUCHES

INSTRUCTION MANUAL

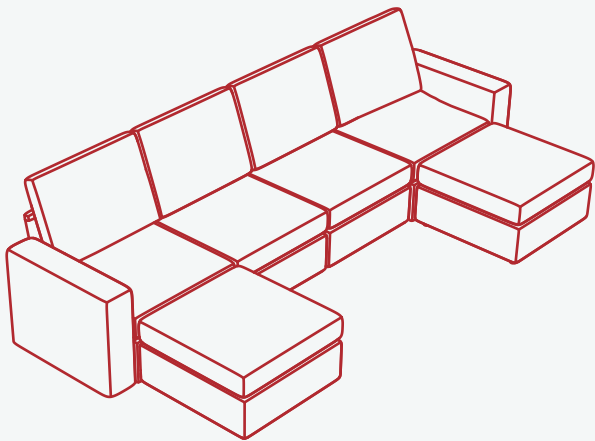

ULTIMATE COZY COMFORT

TIPS & PREP

Your new couch comes with an easy tool-free assembly that you can do at home using the provided instructions. But before we dive in, here are some key tips and prep steps to make the assembly process as smooth as possible.

Get a buddy or family member

Even though the assembly is completely tool-free, it involves lifting and aligning various parts. To make assembly easier, we suggest having at least two people there throughout the process.

Left or right matters!

Throughout assembly, we'll mention the Left and Right Arm Panels and movements to the left and right. We'll be using "left" and "right" based on the perspective of standing in front of your couch.

Don't overlook the glossary!

We've included a glossary with these instructions to help you identify every part and piece of hardware. If you run into any issues, consult the glossary to ensure you're using the right components.

Unbox and check your hardware

The hardware pack for your sofa is in the seat base. Open it up, lay out each piece, and double-check with the checklist to make sure you have everything you need. If anything's missing, reach out to customer service before moving forward.

Have your scissors handy!

Make sure you have scissors nearby. The cushions and seat pads are in compression bags. Carefully open them to prevent any damage or injury while unpacking.

Clear the space!

We recommend putting your couch together in a roomy, clutter-free area, away from pets and little ones. Lay down a sheet to keep the couch components clean and free of debris during assembly.


PRODUCT LIST

Please confirm the number of sets you purchased. This list shows all the accessories included in each set.

LS

Left Arm Seat

Includes the Seat Base, Seat Back, and Left Arm Panel attached.

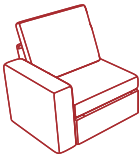

A

Leg × 5

B

U-shaped Connector × 2

C

Armrest Foam Insert × 2

D

Back Cushion Foam Insert × 1

F

Couch Cover × 1

G

Cushion Foam Insert × 1

SB

Seat Base × 1

LP

Left Arm Panel × 1

SK

Seat Back × 1

H

Screws × 8

I

Cushion Foam Insert × 1

RS

Right Arm Seat

Includes the Seat Base, Seat Back, and Right Arm Panel attached.



A

Leg × 5

B

U-shaped Connector × 2

C

Armrest Foam Insert × 2

D

Back Cushion Foam Insert × 1

F

Couch Cover × 1

G

Cushion Foam Insert × 1

SB

Seat Base × 1

RP

Left Arm Panel × 1

SK

Seat Back × 1

H

Screws × 8


I

Cushion Foam Insert × 1

MS

Middle Seat

Includes an attached Seat Base and Seat Back.

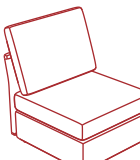

A

Leg × 4

B

U-shaped Connector × 2

F

Couch Cover × 1

G

Cushion Foam Insert × 1

D

Back Cushion Foam Insert × 1

SB

Seat Base × 1

SK

Seat Back × 1

H

Screws × 4

I

Cushion Foam Insert × 1

DISCOVER MORE MODULAR COUCH CONFIGURATIONS


2-PIECE

LS ×1 RS ×1



3-PIECE

LS ×1 RS ×1 OT ×1




LS ×1 MS ×1 RS ×1




4-PIECE

LS ×1 MS ×1 RS ×1 OT ×1



LS ×1 RS ×1 OT ×2




LS ×1 MS ×1 OT ×1 RS ×1




5-PIECE


LS ×1 MS ×2 RS ×1 OT ×1



LS ×1 MS ×1 RS ×1 OT ×2

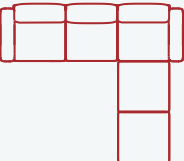


LS ×1 MS ×1 RS ×1 OT ×2




5-PIECE

LS ×1 MS ×2 RS ×1 OT ×1




6-PIECE

LS ×1 MS ×2 RS ×1 OT ×2



LS ×1 MS ×1 RS ×1 OT ×3

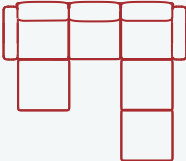


6-PIECE


LS ×1 MS ×2 RS ×1 OT ×2



LS ×1 MS ×1 RS ×1 OT ×3




LS ×1 MS ×2 RS ×1 OT ×2

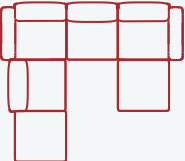


7-PIECE


LS ×1 MS ×2 RS ×1 OT ×3

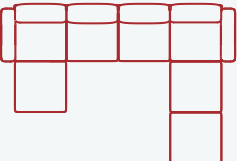

LS ×1 MS ×1 RS ×1 OT ×4

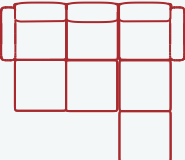

LS ×1 MS ×2 RS ×1 OT ×3

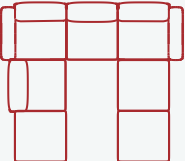

COUCH ASSEMBLY INSTRUCTIONS

We will demonstrate the installation process using the Left Arm Seat (LS) as an example. The remaining modules follow a similar installation method, so please follow the same process for the remaining modules.

STEPS

1

2

3

4

Fit the armrest foam(C-1).

C

Take out the armrest foam inserts(C-1) for natural decompression.

Don't worry. It may take at least 72 hours for all compressed foam to fully regain its shape after decompression.

Once the armrest foam(C-1) has decompressed, insert it into the arm panel(LP).

5

Fit the armrest foam(C-2).

D

Take out the armrest foam inserts(C-2) for natural decompression.

Don't worry. It may take at least 72 hours for all compressed foam to fully regain its shape after decompression.

Once the armrest foam(C-2) has decompressed, insert it into the seat back(SK).

6

D

Take out the back cushion(D) and cushion(G) foam inserts for natural decompression.

G

Take out the back cushion(D) and cushion(G) foam inserts for natural decompression.

Help the foam regain its shape by gently patting it repeatedly.

7

F-2,3

Take the back cushion(F-2), and cushion(F-3) cover out of the couch cover(F).

Fit the couch cover(F-2,3) over the corresponding foam(D,G).

F-2

D

F-3

G

8

Complete the installation.

9

When assembling two or more couches, insert the two U-shaped connectors into the base slots to complete the installation.

B