



# ASSEMBLY INSTRUCTIONS

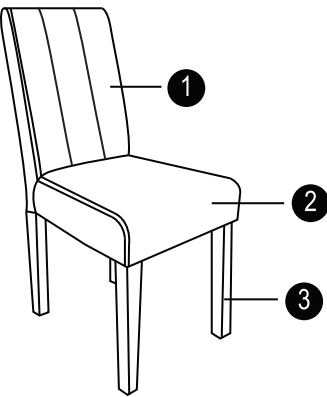


**1**

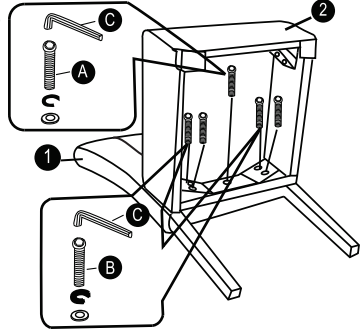


put the screws in the holes, tight the screws, but not too tight, 80% is ok.

**2**

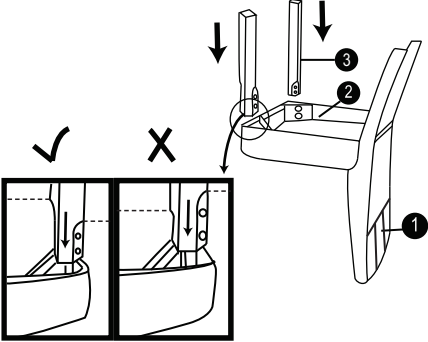


Important please make sure the cam studs face out as shown

**3**

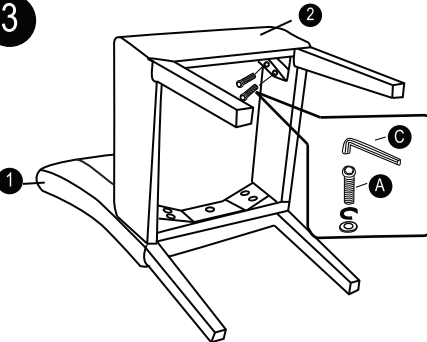


Put the screws in the holes, tight the screws, but not too tight, 80% is ok.

**4**

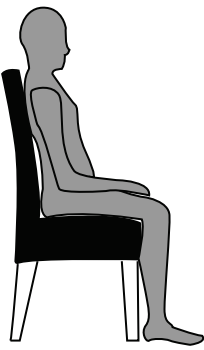


Then adjust the balance of the chair.

**5**

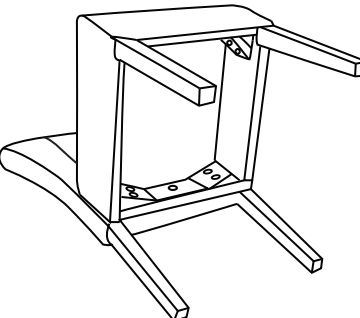


Tight all the screws to 100%

**6**

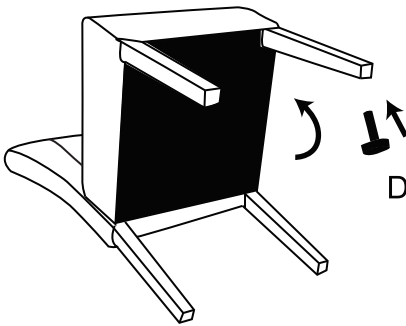



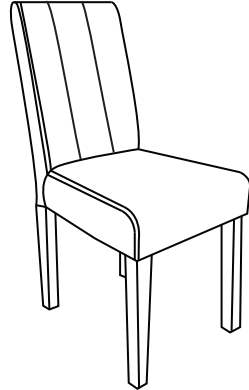

Stick the black part on the seat

**7**



HARDWARE LIST	CODE	PARTS	QTY.
	1	BACK	1
	2	SEAT	1
	3	FRONT LEG	2

HARDWARE LIST	CODE	PARTS	QTY.
	A	M8x65mm 	5
	B	M8x75mm 	4
	C	ALLEN KEY 	1
	D	FOOT NAIL 	2

If your chairs are wobbly after assembly, please check following instruction

