


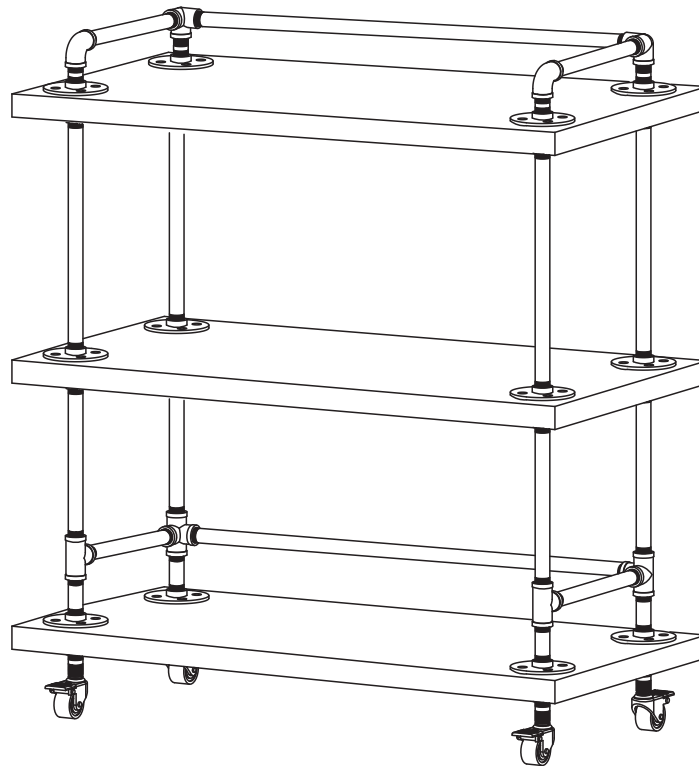

THREE-TIER WOOD SHELF INDUSTRIAL BAR CART

NEED HELP OR ADVICE PUTTING THIS KIT TOGETHER? MISSING PIECES?
EMAIL US AT [SUPPORT@PIPE-DECOR.COM](mailto:support@pipe-decor.com) FOR ANY QUESTIONS



HOW TO PREVENT PIPE CORROSION

PIPE DECOR industrial-grade black pipes and fittings are coated with a rust-preventive oil during manufacturing. For best results, **SEAL THE PIPES TO AVOID ANY RUSTING** after cleaning the kit.

CLEAN AND SEAL INSTRUCTIONS:

CLEAN: Recommended supplies: regular degreasing dish soap, washcloths, gloves (optional)
1. Wash your pipes and fittings with warm water and dish soap until the oil is completely removed.
2. Wipe the pipes with a dry washcloth and wait until the pipes are completely dry.

IMPORTANT: THE PIPES MUST BE COMPLETELY DRY BEFORE YOU START THE SEALING PROCESS.

SEAL:

IF USING POLYURETHANE SPRAY: Spray each dry pipe and fitting with a polyurethane matte or satin finishing spray and let it dry before assembling the kit.

IF USING FINISHING WAX: Coat each dry pipe with a finishing wax. Wait for 20 minutes, then polish the pipe with a dry washcloth by wiping them down. Faster wiping will result in a shinier finish.

RESORE PIPE DECOR®

THREE-TIER WOOD SHELF INDUSTRIAL BAR CART

PART	DESCRIPTION	QTY
A	1/2" FLANGE	24
B	1/2" TEE	2
C	1/2" SIDE OUTLET TEE	2
D	1/2" SIDE OUTLET ELBOW	2
E	90° ELBOW	2
F	1-1/2" NIPPLE	4

PART	DESCRIPTION	QTY
G	2" NIPPLE	4
H	4" NIPPLE	4
I	6" NIPPLE	4
J	8" NIPPLE	4
K	14" NIPPLE	4


PART	DESCRIPTION	QTY
L	30" NIPPLE	2
M	1/2" CASTER	4
N	WOOD PIECE	3
O	WOOD SCREW	96

EASY INSTALLATION:

RECOMMENDED TOOLS FOR INSTALLATION




STEP 1 Attach flanges, side outlet tee, tee, and nipples together.

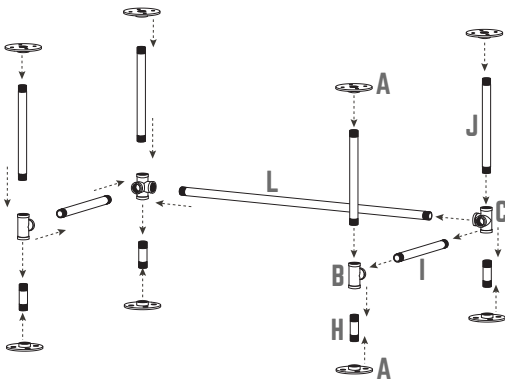


STEP 2 Attach the assembled parts to the wood piece, then align and attach 4 flanges to the bottom of wood piece using wood screws.

NOTE: To make room for both sets of screws, flange holes cannot be perfectly aligned. Rotate top flange approximately 45° to avoid interference.

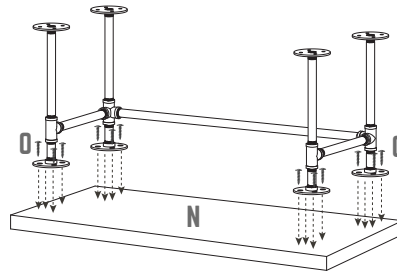


STEP 3 Attach another wood piece using wood screws.

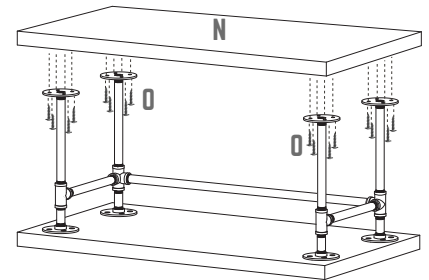


STEP 4 Attach 14" nipples to flanges, then attach to the third wood piece using wood screws.

NOTE: To make room for both sets of screws, flange holes cannot be perfectly aligned. Rotate top flange approximately 45° to avoid interference.

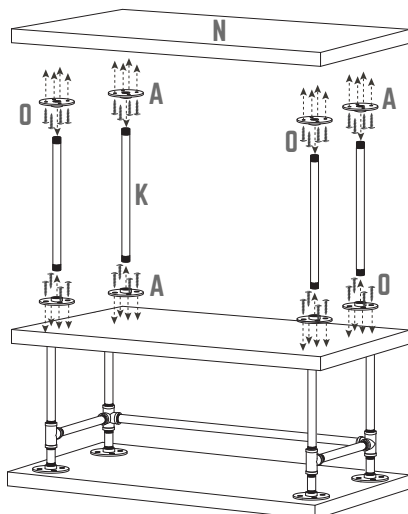

STEP 5 Assemble flanges, side-out elbows, 90° elbows, nipples, and flanges together, then attach to the assembled parts using wood screws.

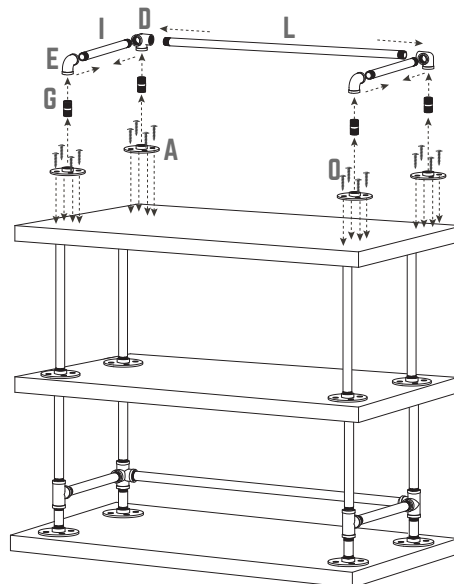

STEP 6 Attach 1-1/2" nipples and casters.

