



INSTALLATION INSTRUCTION









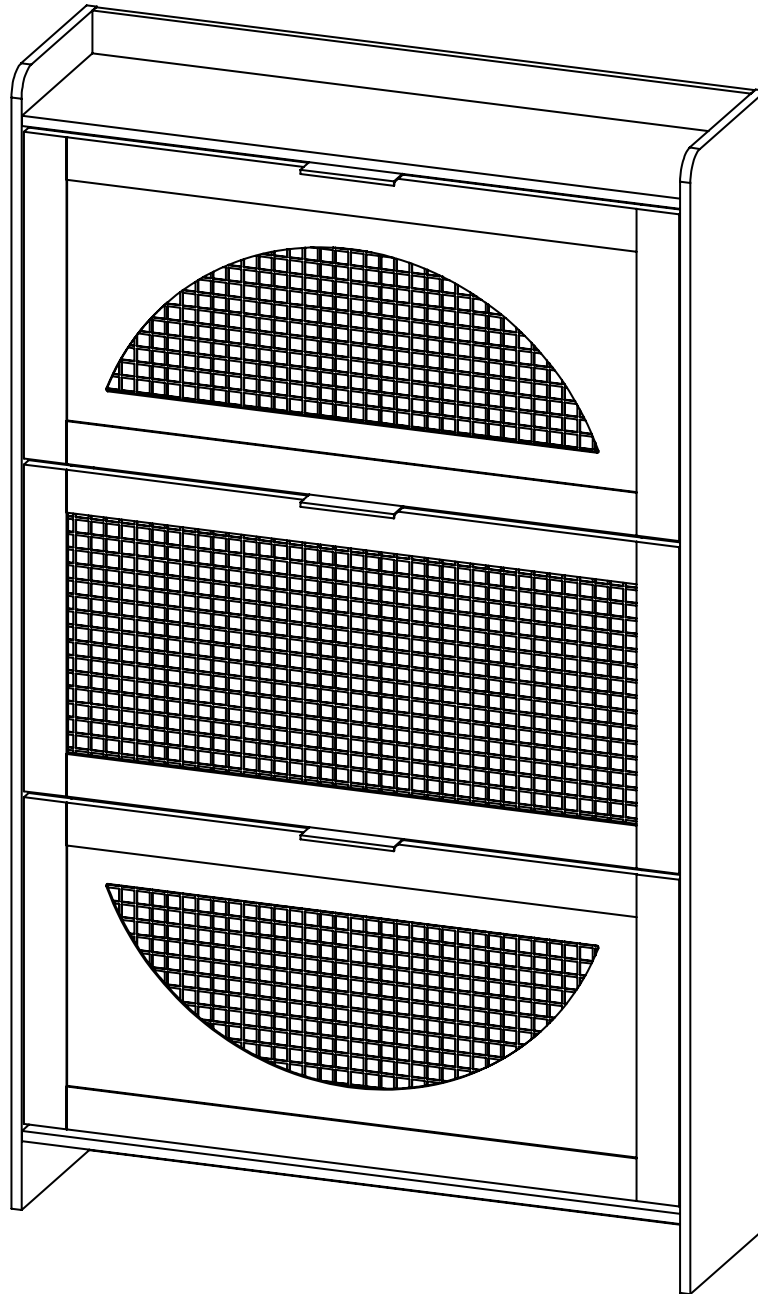


Thank you for purchasing our products. Please contact us if you have difficulty with assembly or need replacement parts. Our customer service is here to assist you. Please attach your User Name and Order ID so that we can assist you better.

BOARD IDENTIFICATION

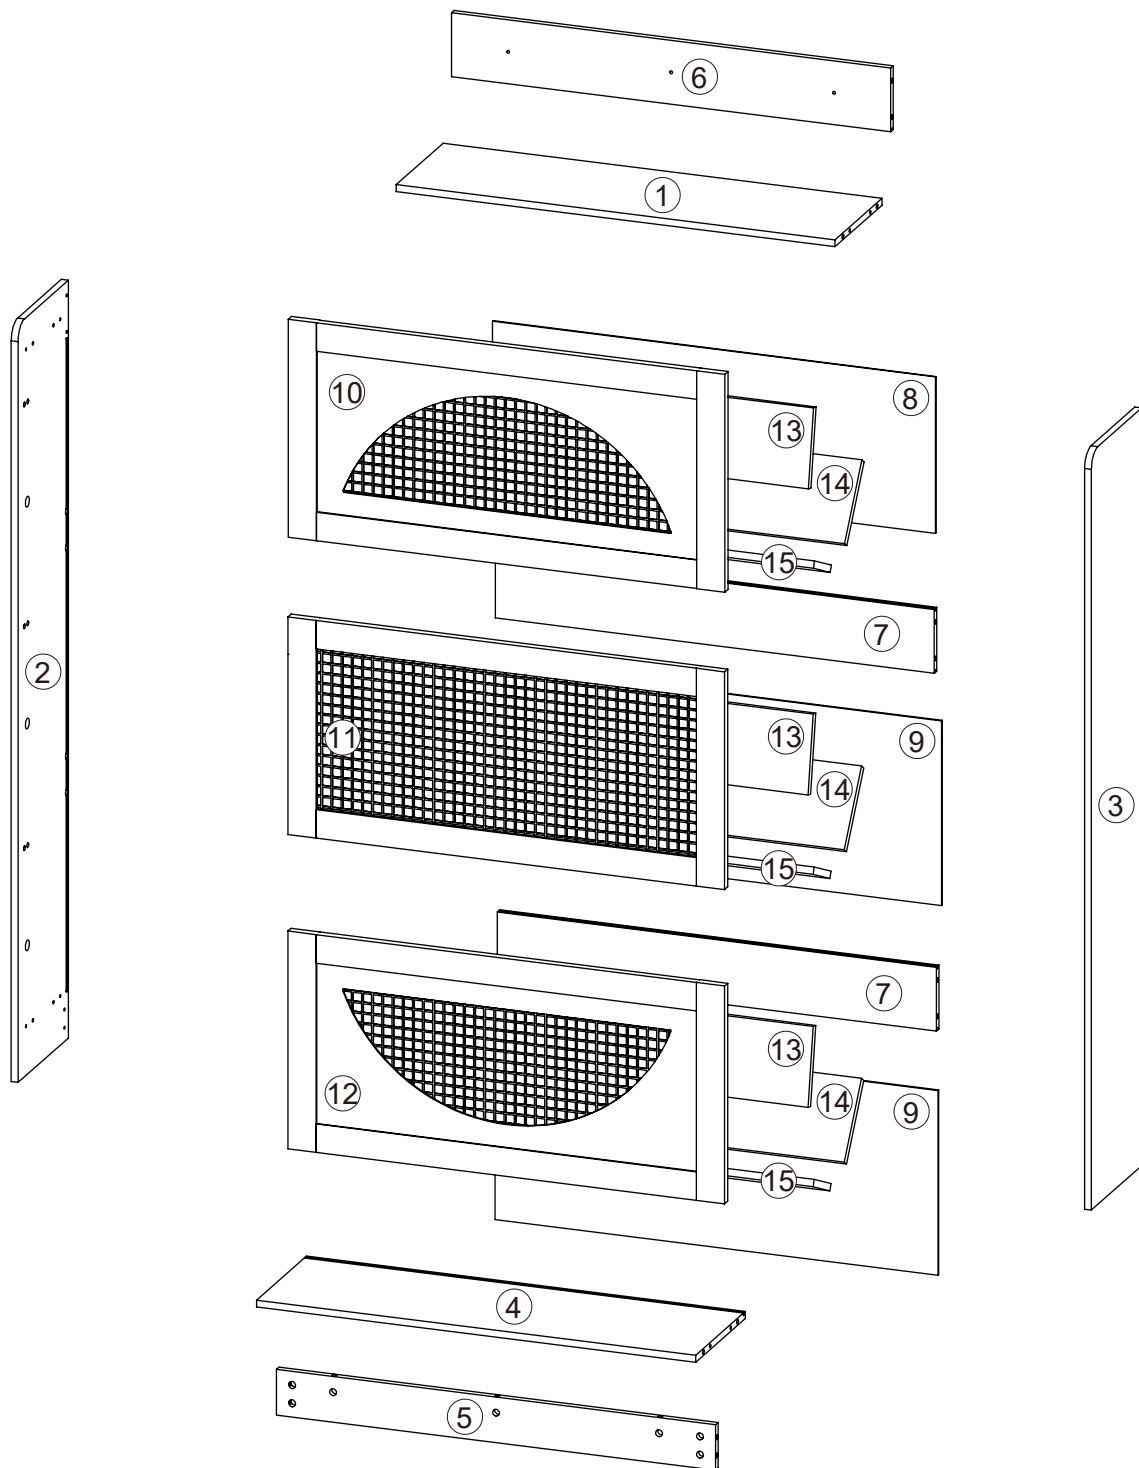


BOARD IDENTIFICATION

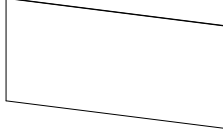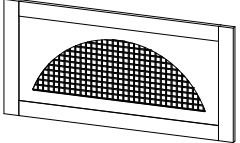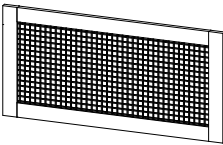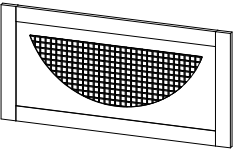				
① × 1	② × 1	③ × 1	④ × 1	⑤ × 1
				
⑥ × 1	⑦ × 2	⑧ × 1	⑨ × 2	⑩ × 1
				
⑪ × 1	⑫ × 1	⑬ × 3	⑭ × 3	⑮ × 3
⑯	⑰	⑱	⑲	⑳
㉑	㉒	㉓	㉔	

BOARD IDENTIFICATION


Installation of Eccentric Wheel Nut Set

1

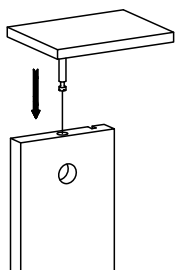


Screw the end of cambolt on the board, find the corresponding board and insert the other end.

2

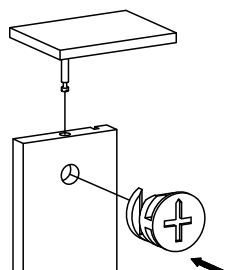


Stuff the camlock into the round hole. The arrow points to the cambolt.


3

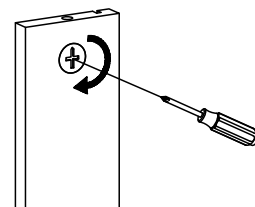


Turn clockwise about 180° to lock the plate.

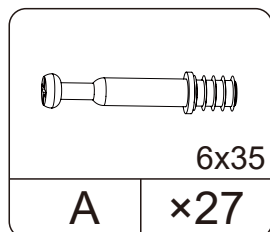


Cam bolt

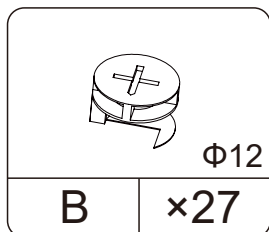


Cam lock

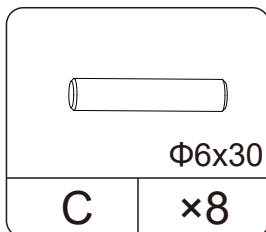







Wood dowel

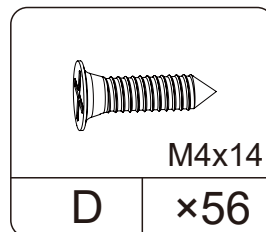




Screws

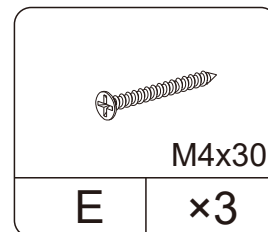

Screws

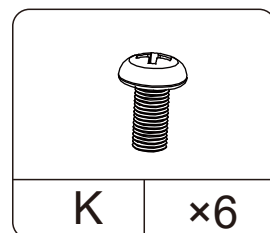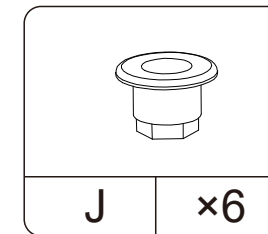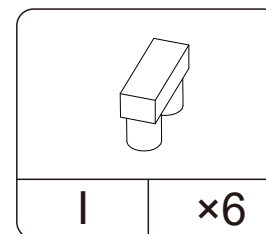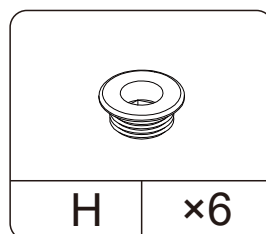
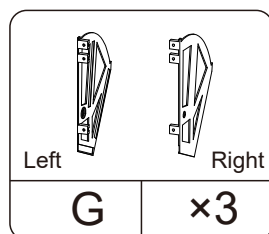
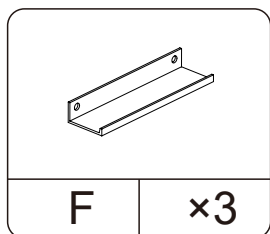


Screws

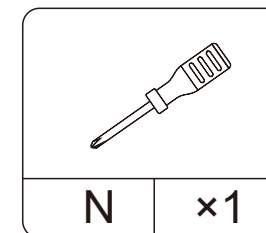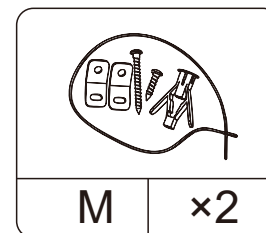
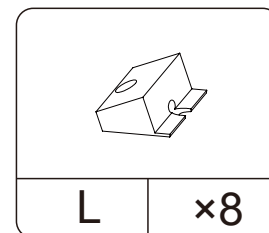


INSTALLATION STEPS

STEP1:

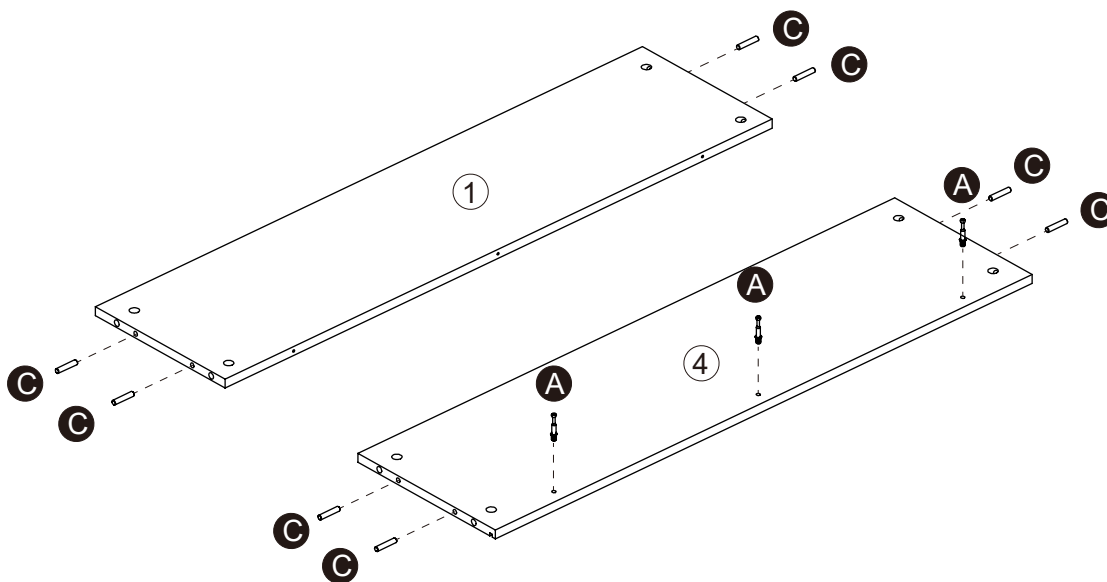
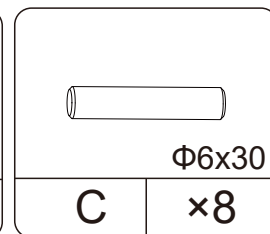
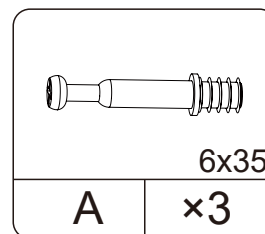


STEP2:

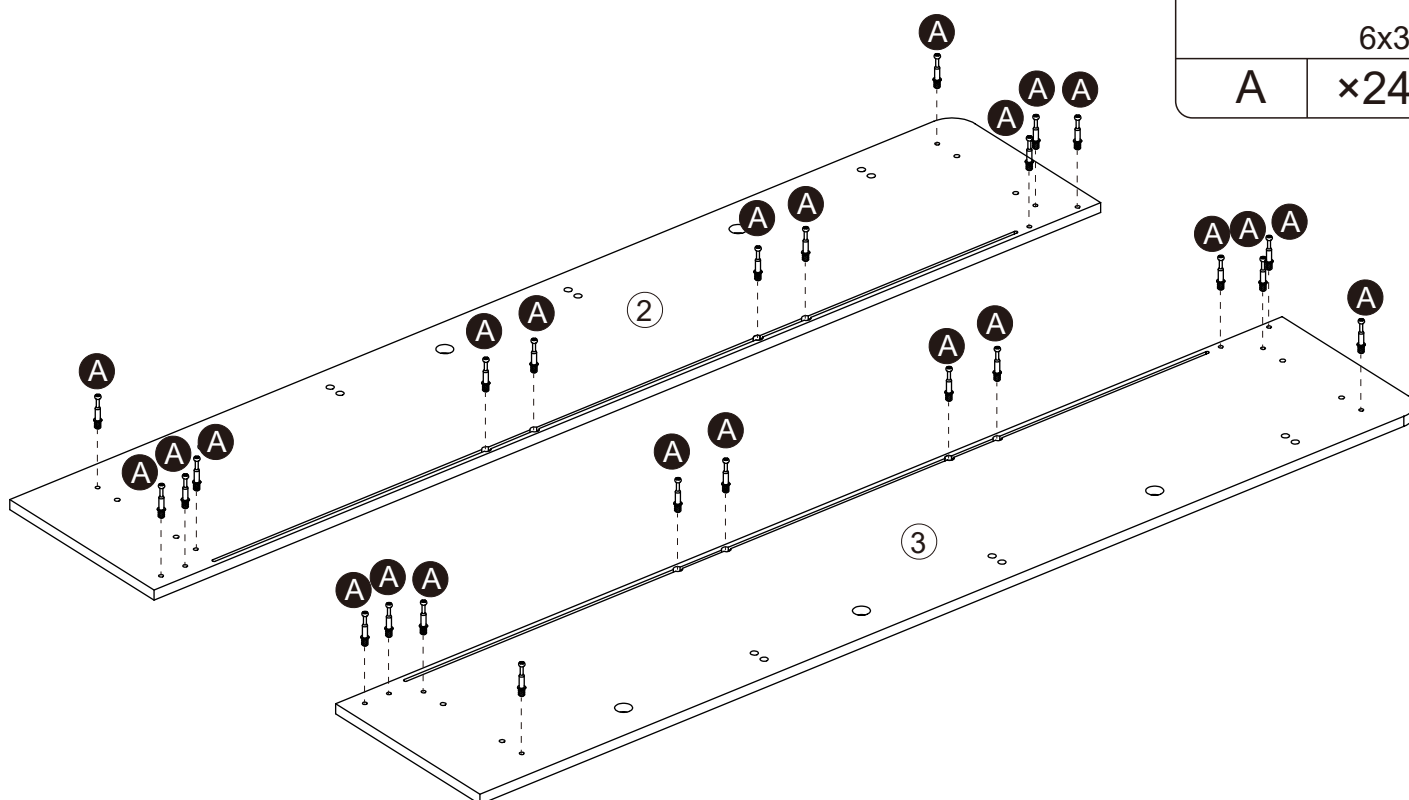
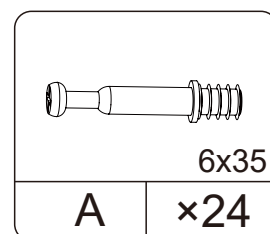


INSTALLATION STEPS

STEP3:

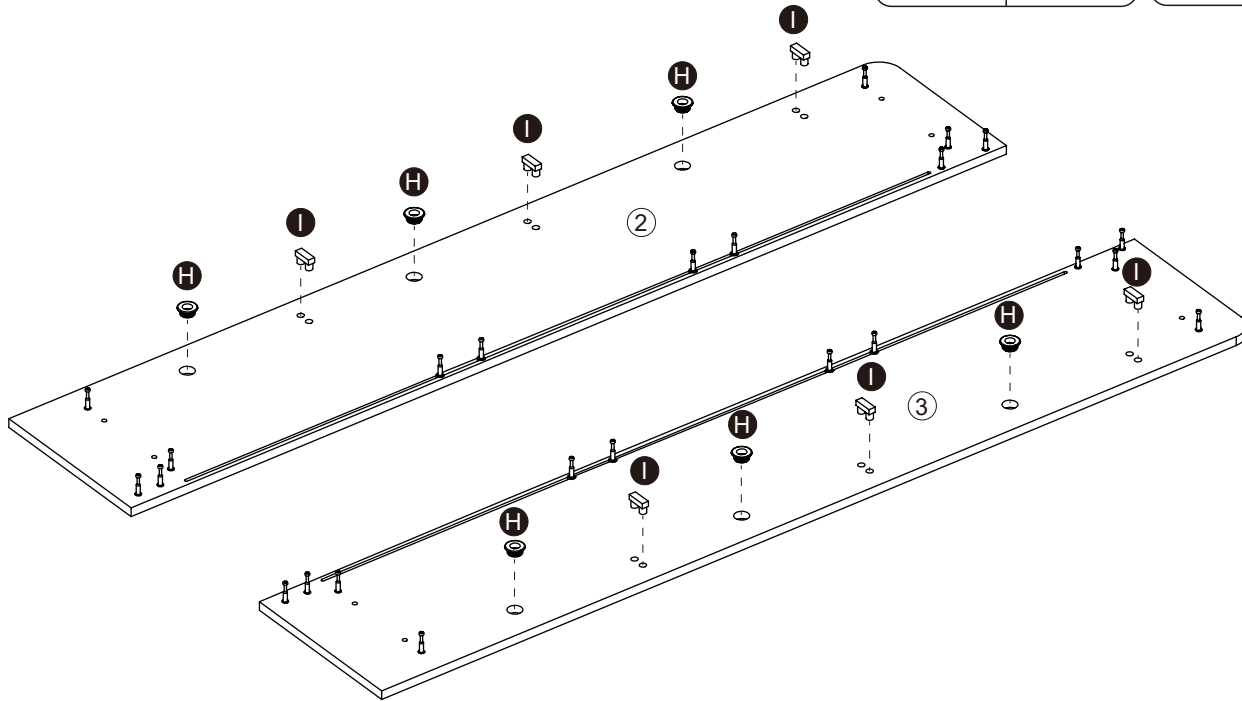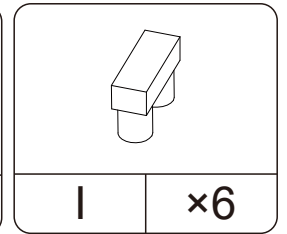
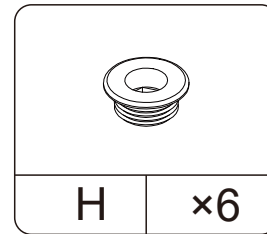


STEP4:

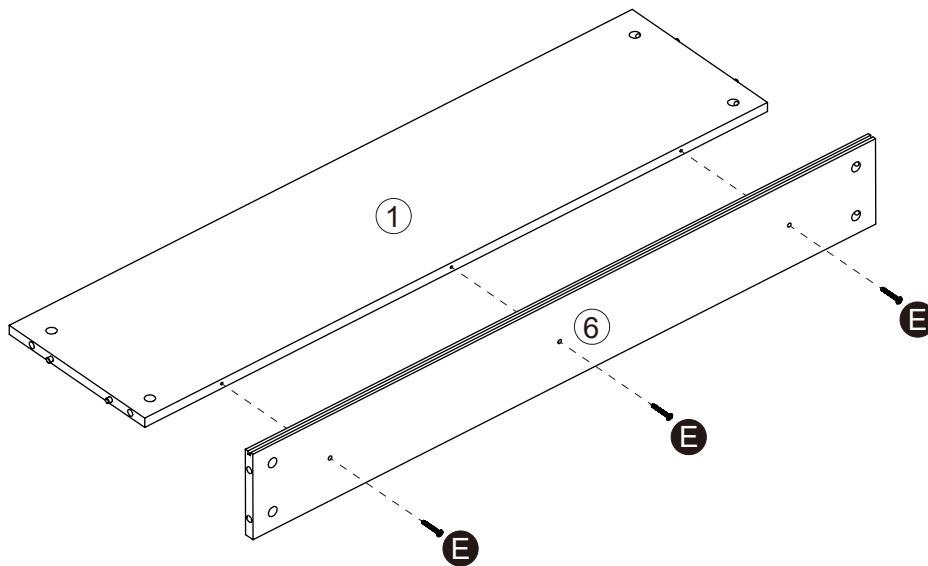
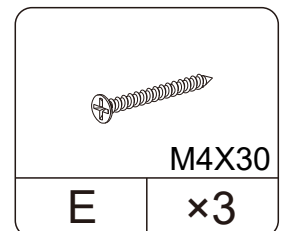


INSTALLATION STEPS

STEP5:

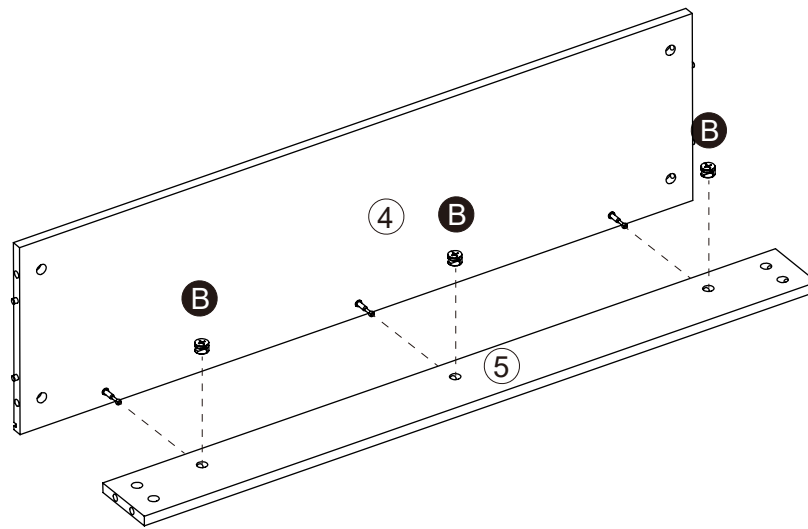
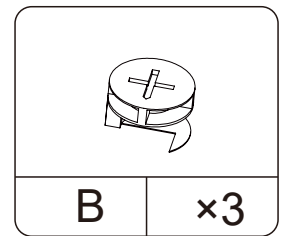


STEP6:

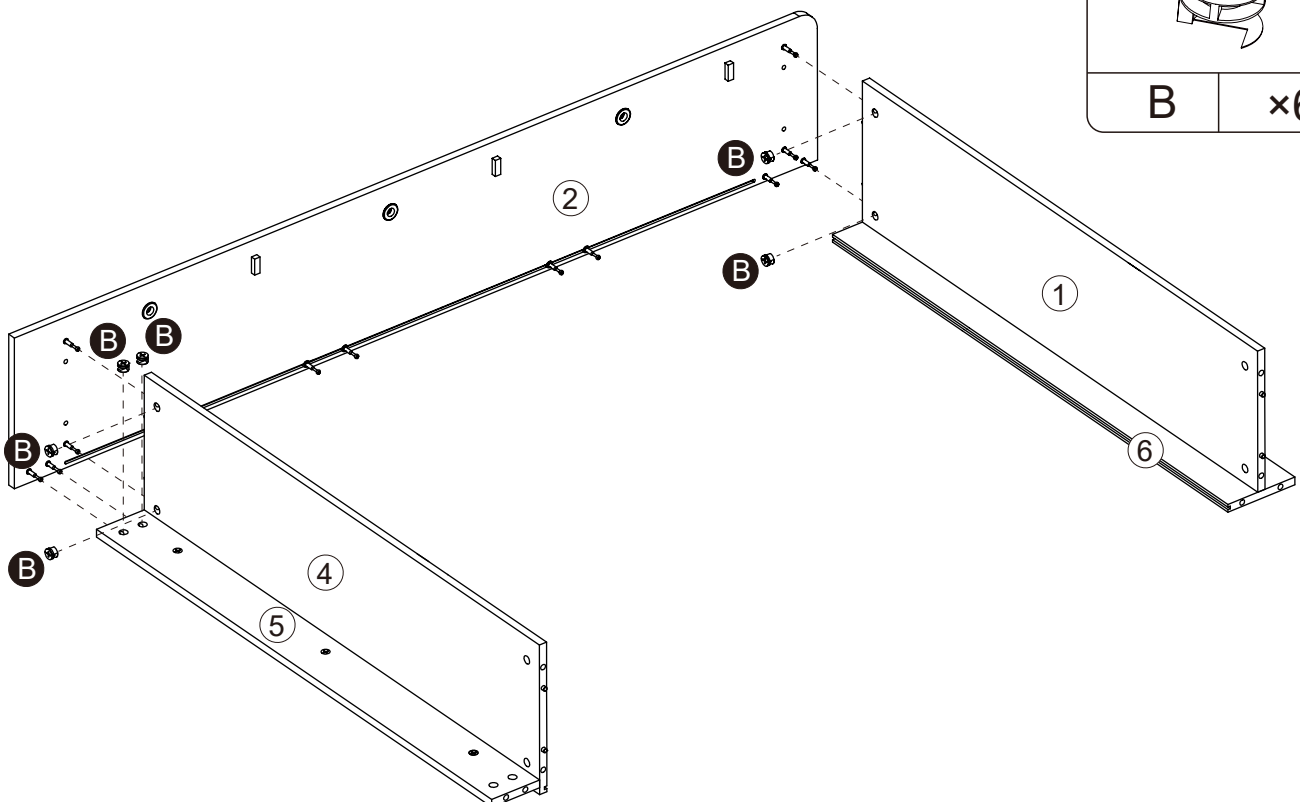
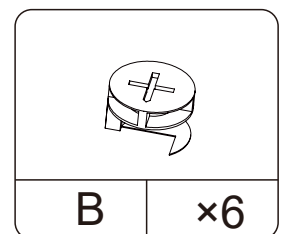


INSTALLATION STEPS

STEP7:

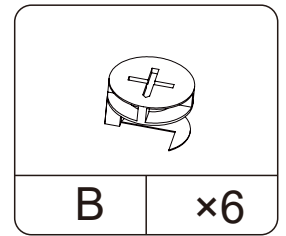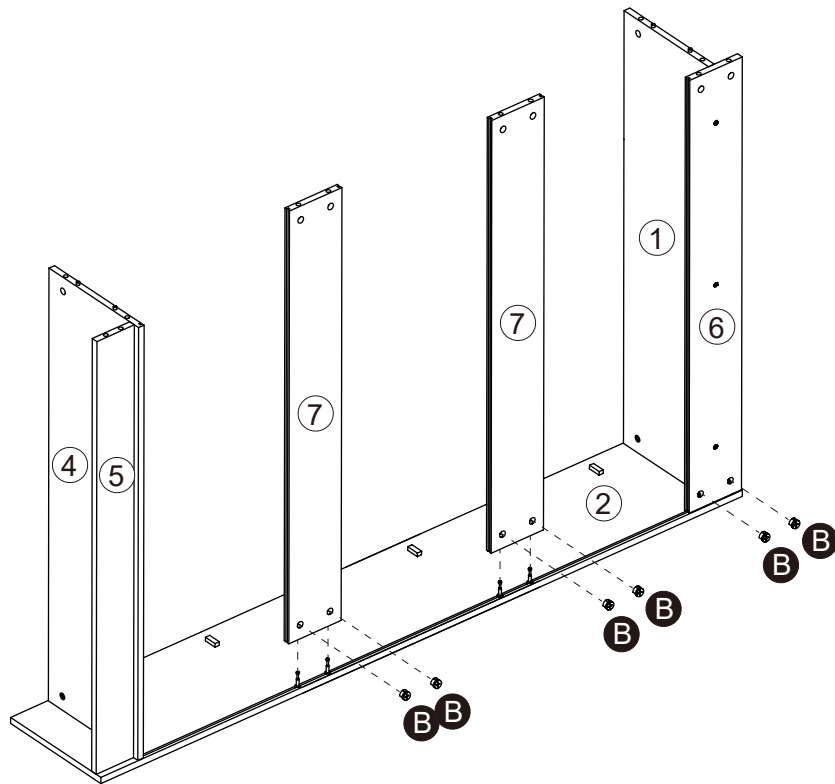


STEP8:



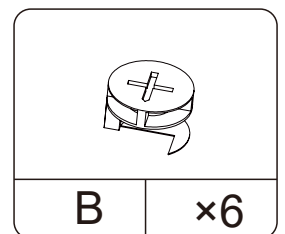
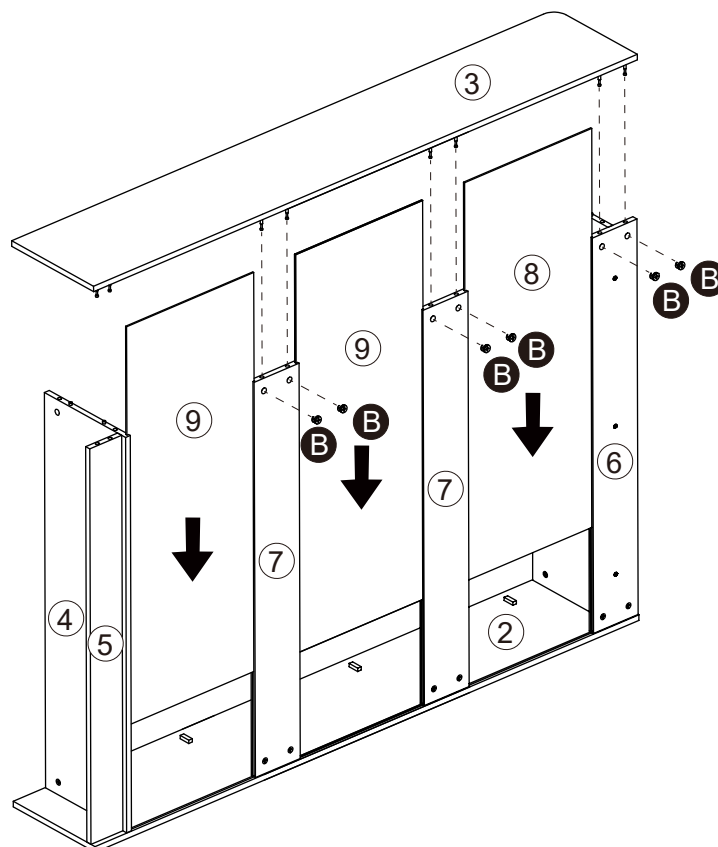


INSTALLATION STEPS

STEP9:


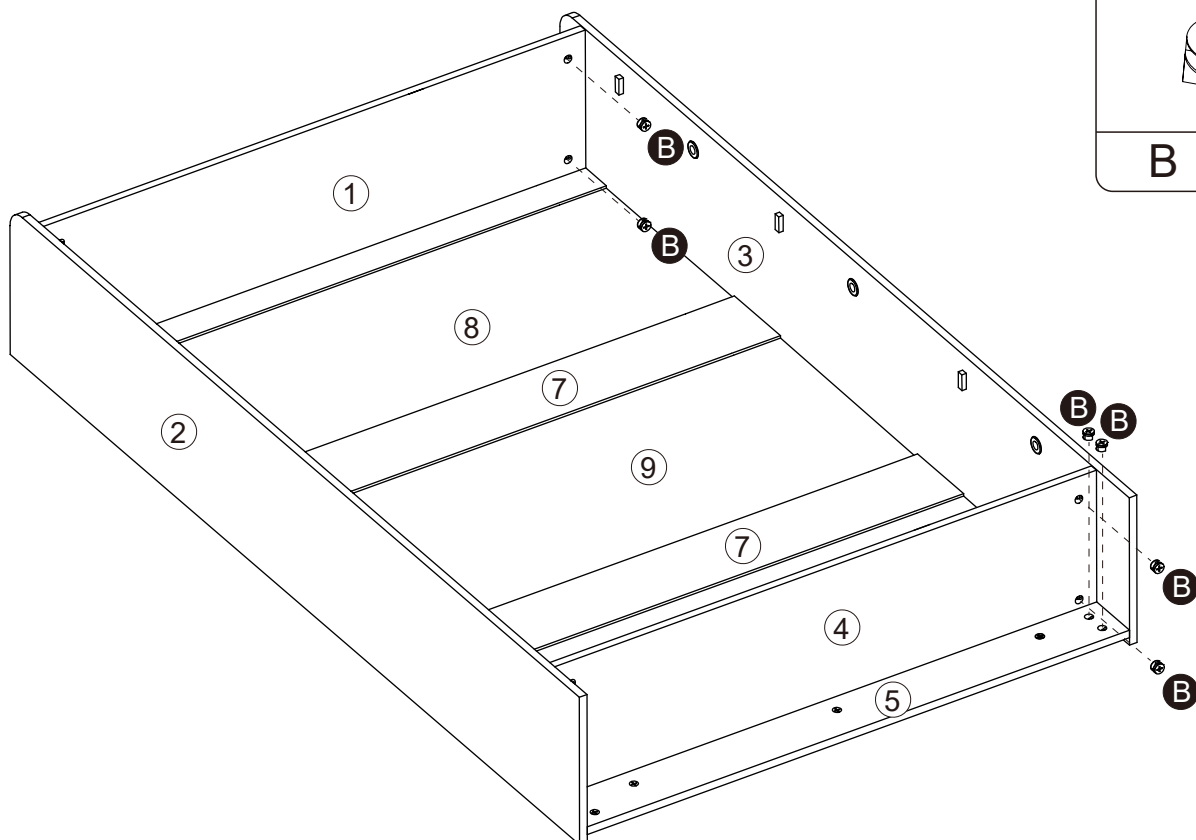


STEP10:

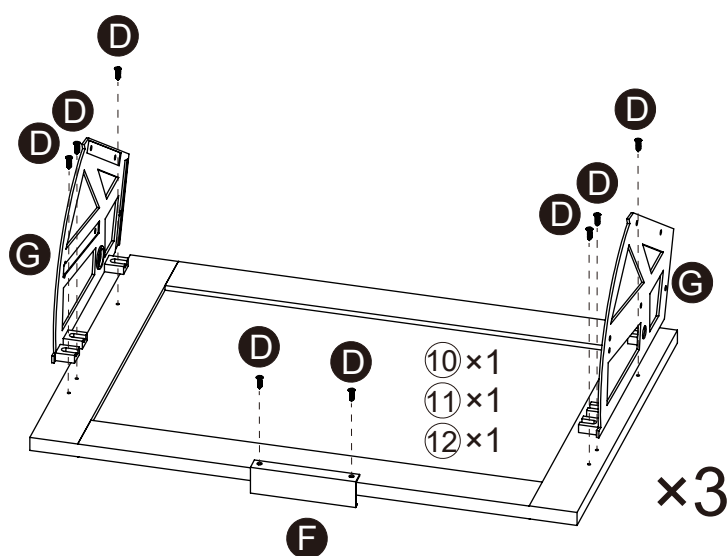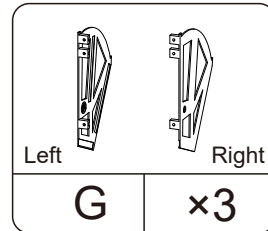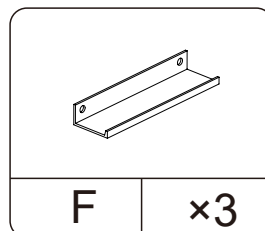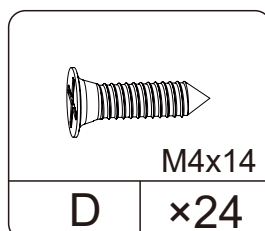


INSTALLATION STEPS


STEP11:

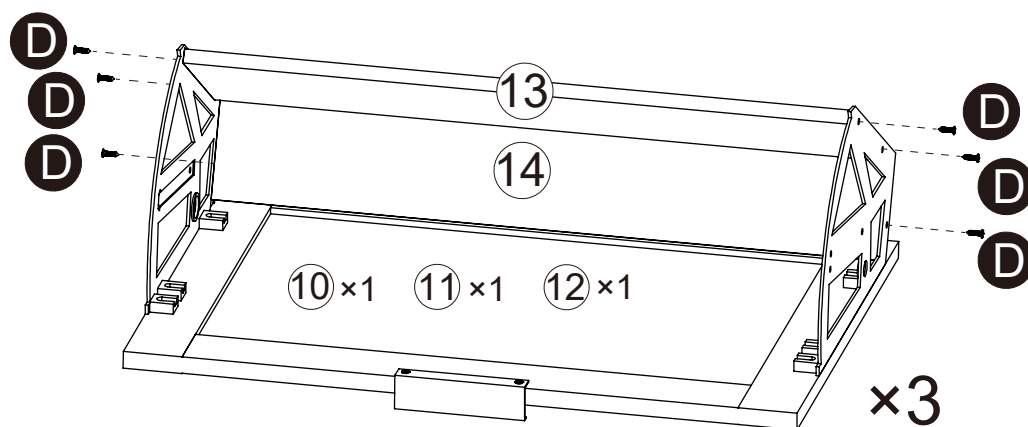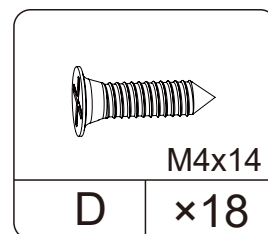


STEP12:

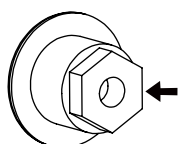

hexagon of
Part J

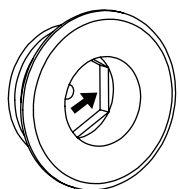

hexagonal groove
of Part H




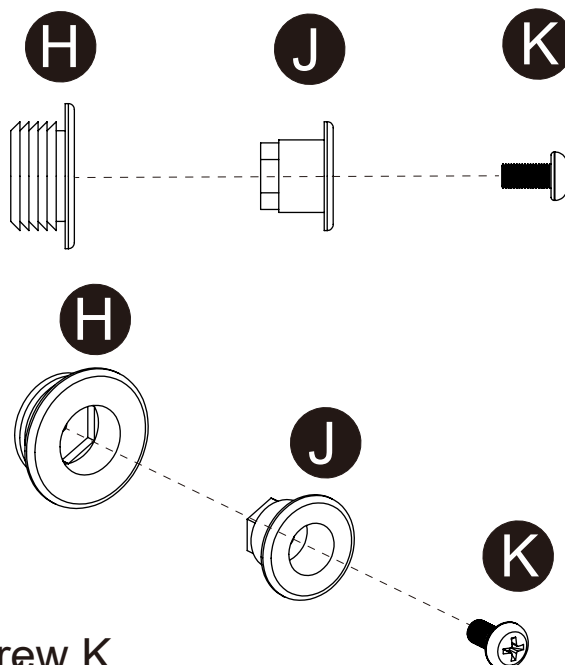


NOTICE:



Before tighten Part H and Part J with Screw K ,
Part H and Part J must be matched properly ,
the hexagon of Part J must be correctly
inserted into the hexagonal groove of Part H

INSTALLATION STEPS

STEP13:

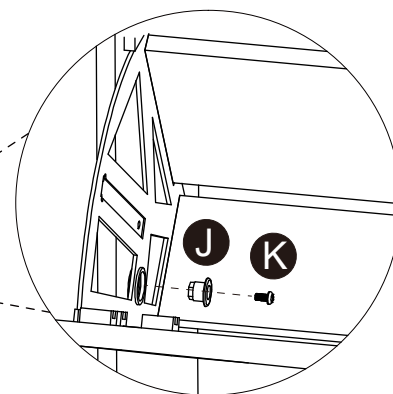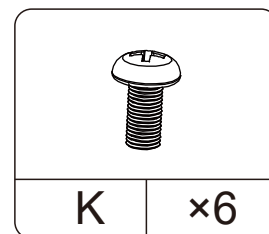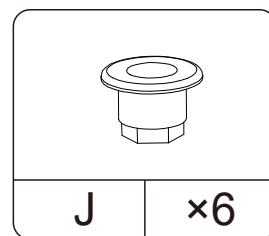
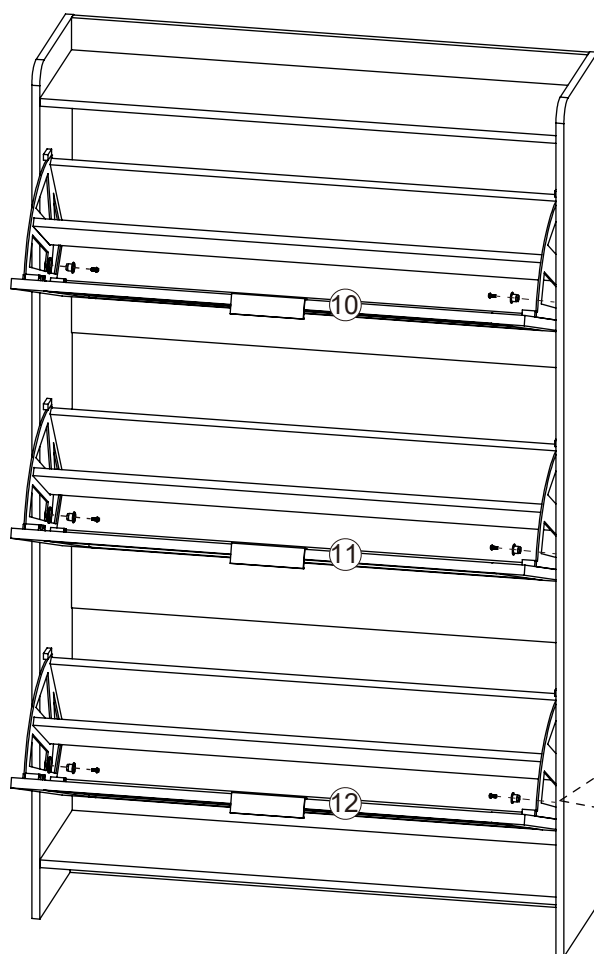


STEP14:

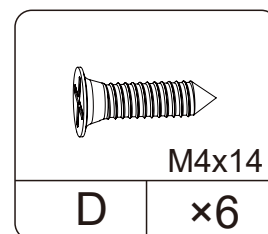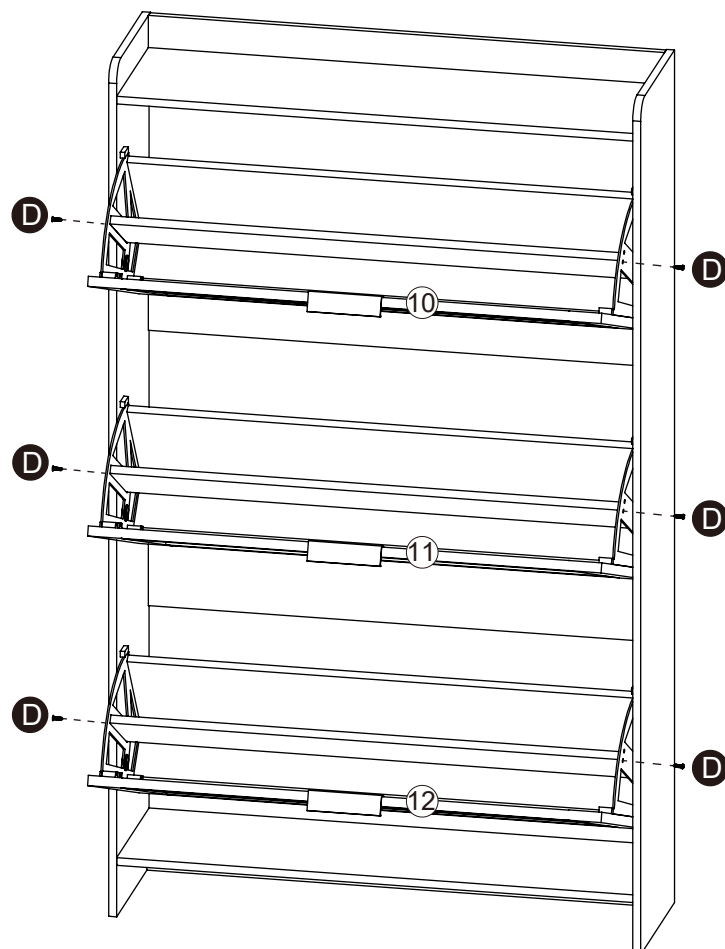

INSTALLATION STEPS


STEP15:

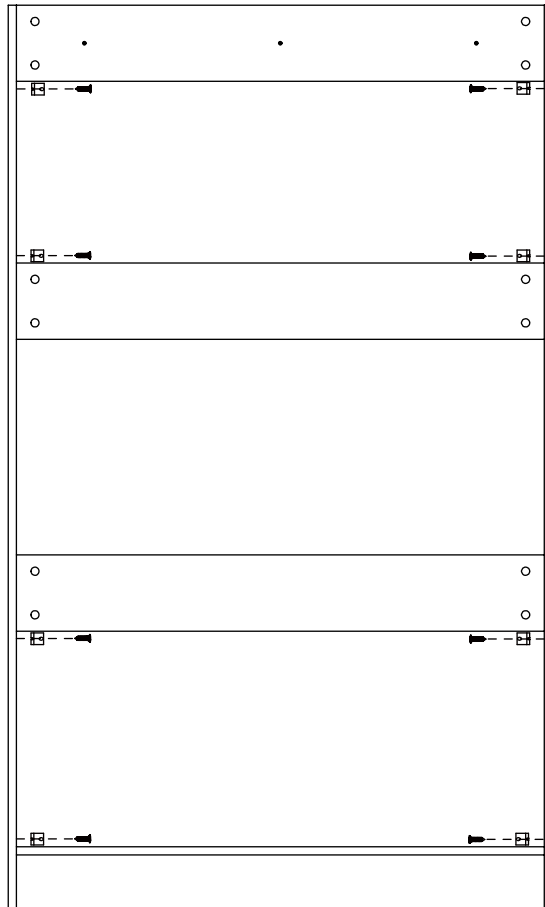

M4x14


D

×8



L


×8

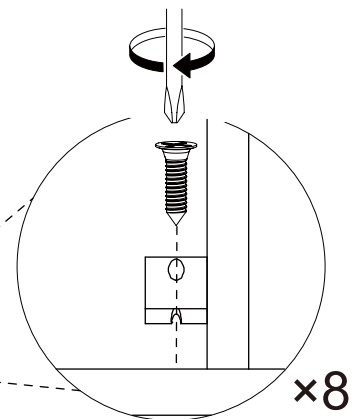

×8

STEP16:


- ① Drill a hole in the solid wall (Wood wall or Concrete wall) :
using a 0.41~0.43 inches (10.5~11mm) drill bit.

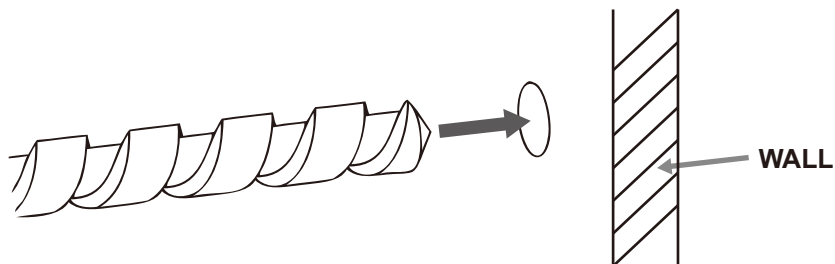

M


×2

②

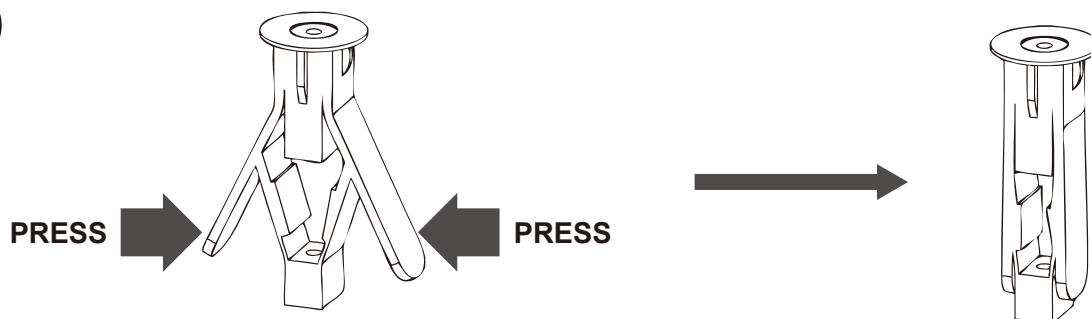


INSTALLATION STEPS


3

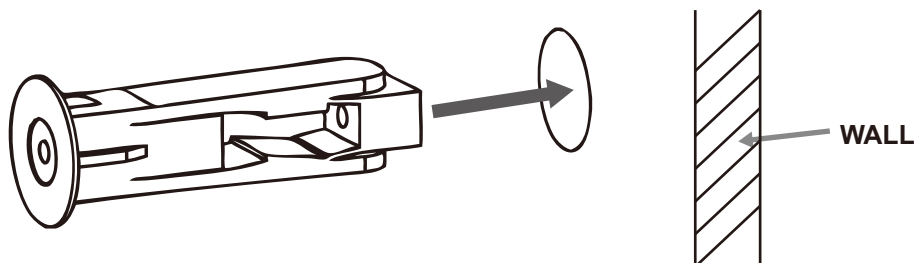

4


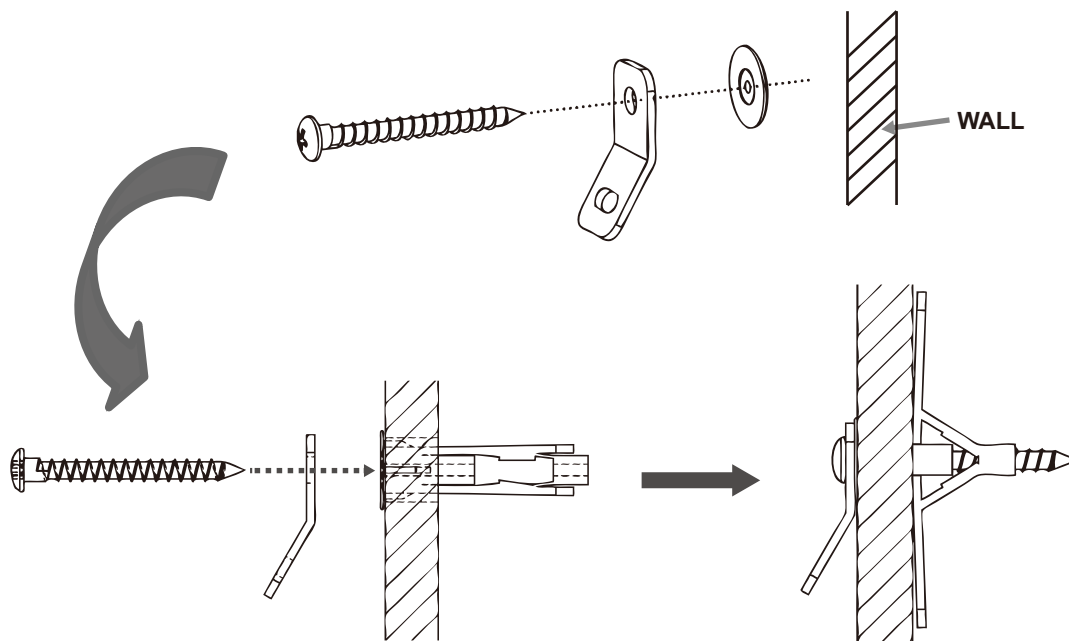


5

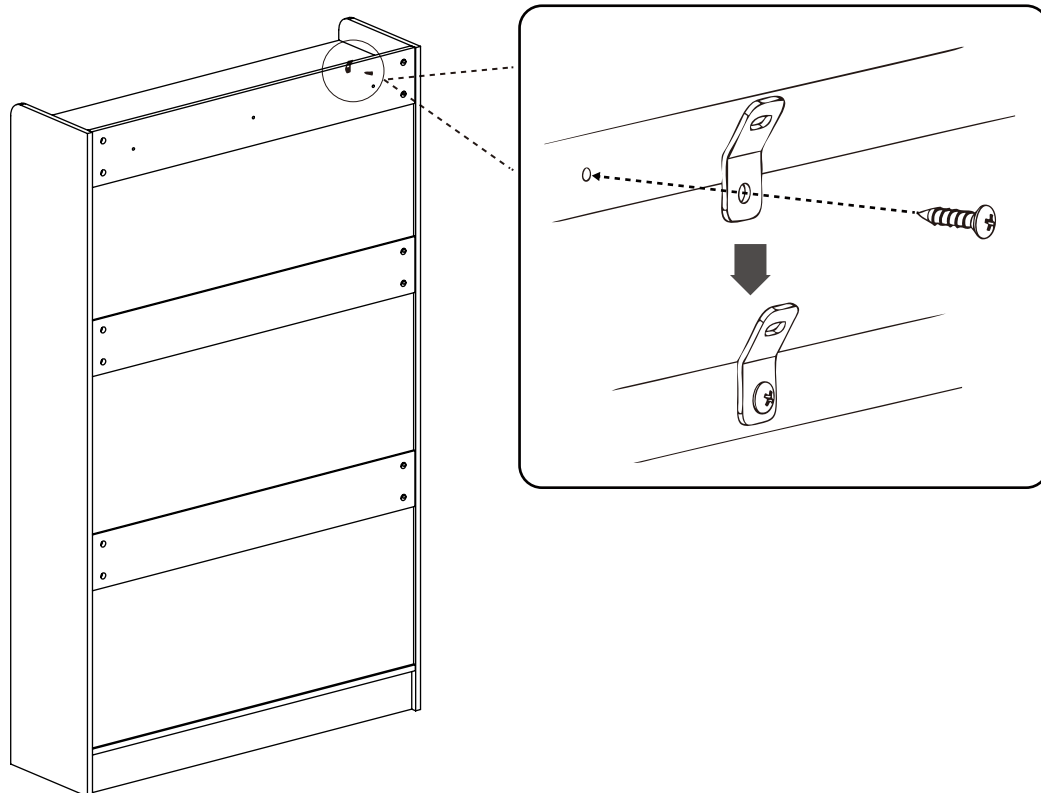

INSTALLATION STEPS

⑥

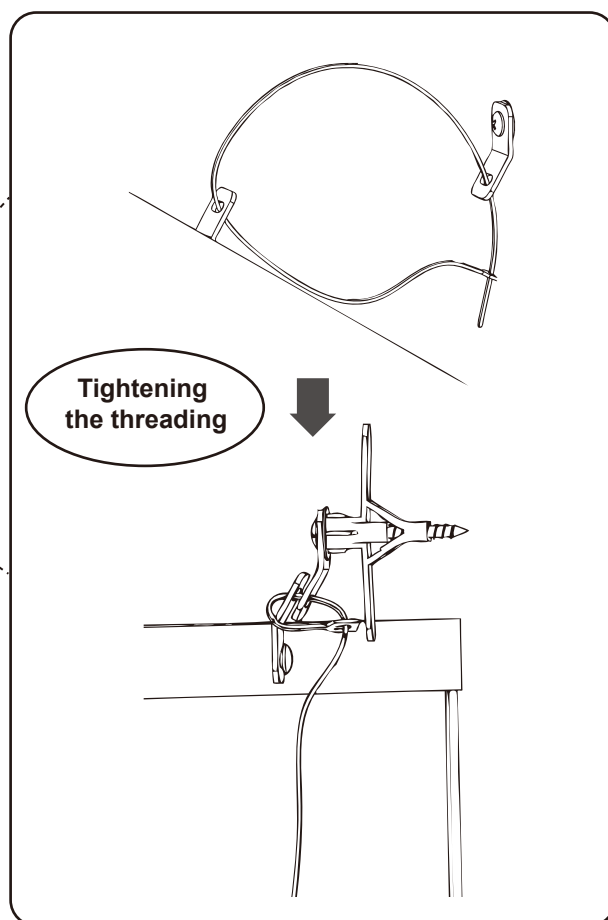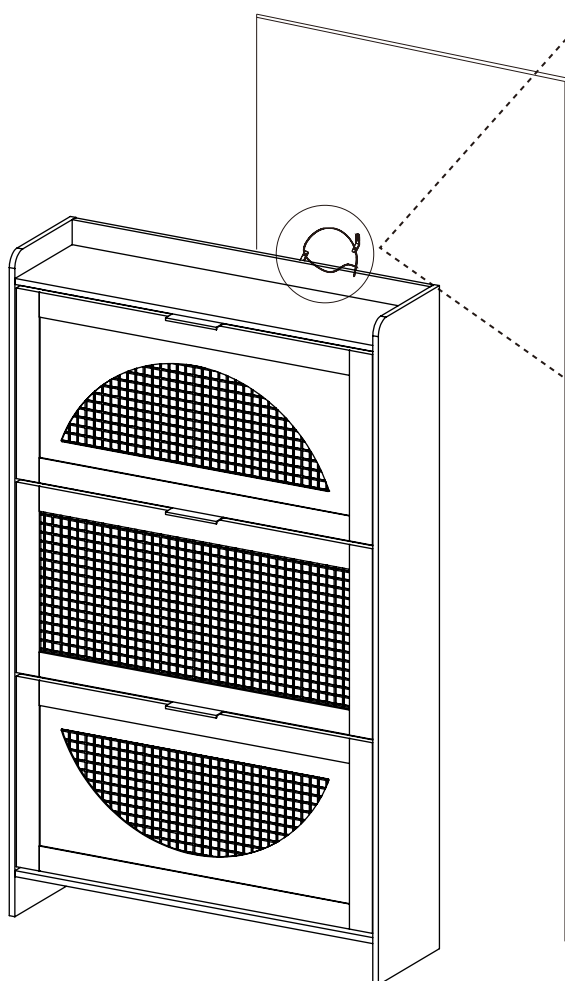

Thank you for purchasing our products. Please contact us if you have difficulty with assembly or need replacement parts. Our customer service is here to assist you. Please attach your User Name and Order ID so that we can assist you better.