


CUTOUT & INSTALLATION GUIDE

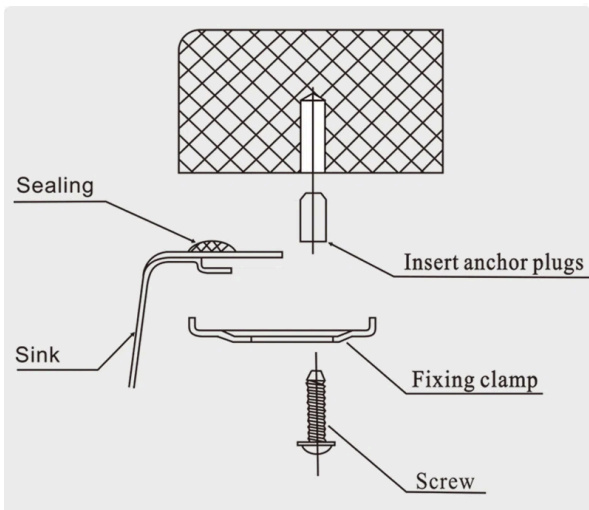

UNDERMOUNT INSTALLATION INSTRUCTION

This sink is specifically designed to be under-mounted in a solid surface countertop only.

CAUTION: Sink edge may be sharp; handle with caution.

Do not install a damaged sink - inspect carefully.

Detailed Installation Steps

1. Cut out countertop using this template.
2. Determine placement of clip brackets as indicated by template.
Pre-drill holes according to method desired based on countertop material.
3. Apply a bead of Silicon evenly along edge on underside of countertop.
4. Position and align sink over opening. Press sink onto Silicon seal.
5. After re-checking alignment, tighten clip brackets against sink edge.
6. Remove excess Silicon.

NOTE: THIS TEMPLATE IS ONLY A GUIDE. ACTUAL SINK SHOULD BE PRESENT TO ENSURE PERFECT CUT OUT.

HINT: After Silicon cures, wipe inside edge with denatured alcohol. This will smooth out any rough areas.