
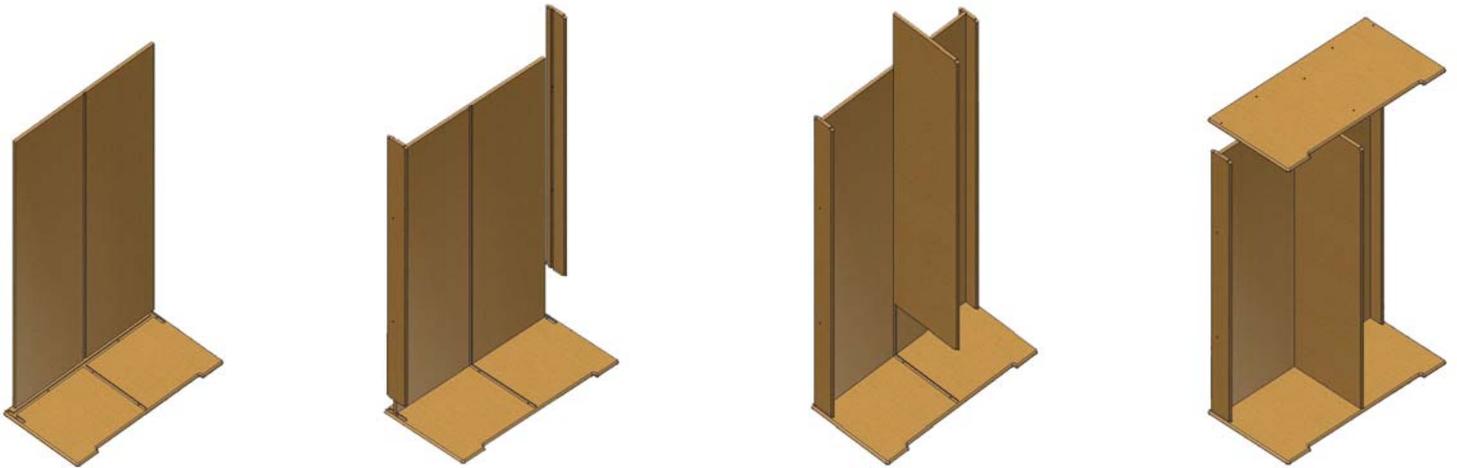


990753 ASSEMBLY INSTRUCTIONS

Parts:

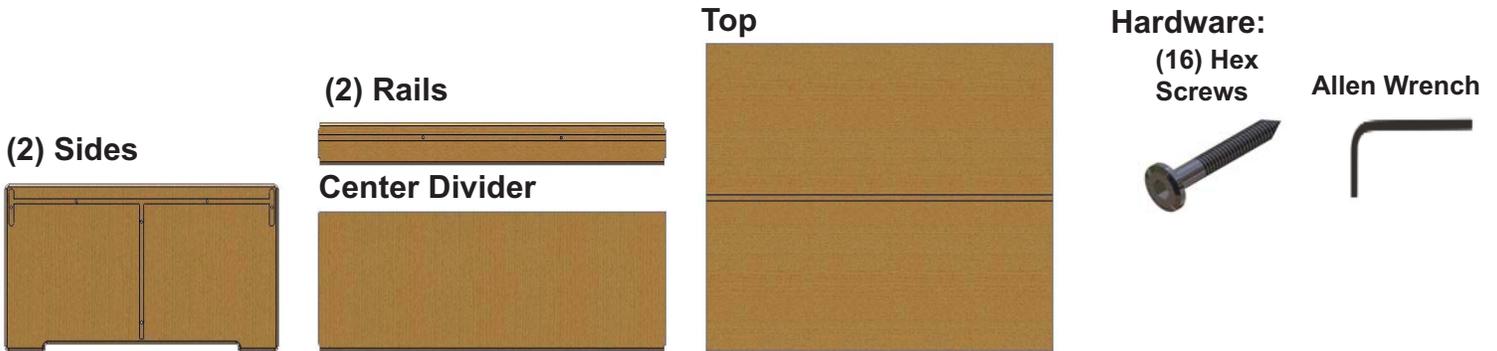

Step 1: Attach **Top** to **Side**, aligning groove in underside of Top with dado in Side. Attach components together with (2) Hex screws and Allen wrench.

Step 2: Attach **Rails** to **Top** and **Side**, aligning groove on inside of each Rail with edge of Top. Notched ends of Rails should overlap dado in Side component. Attach Rails to Top using (2) Hex screws per Rail and Allen wrench. Attach Rail to Side using (1) Hex screw per Rail and Allen wrench.

Step 3: Attach **Center Divider** to **Side**, guiding long, flat face of Center Divider down groove in underside of Top until short edge of Center Divider rests in dado of Side component. Notch in Center Divider overlaps edge of dado in Side component. Attach components together using (2) Hex screws and Allen wrench.

Step 4: Attach second **Side**, aligning edges of previously assembled components into dado of Side component. Attach components together with remaining (6) Hex screws and Allen wrench.

Step 5: Tighten all screws snugly. **DO NOT OVER-TIGHTEN. DO NOT DRILL.** Assembly is now complete.



For assistance, call: Customer Service 1-800-247-8465