



1

IDENTIFY ALL PARTS AND HARDWARE THAT ARE INCLUDED WITH YOUR A-FRAME LADDER. FOR EASE IN BUILDING, WE SUGGEST EITHER A PARTNER OR A PAIR OF CLAMPS.


A  2" 8 pcs

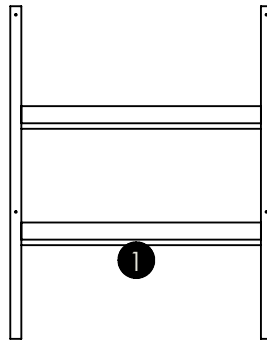


FRONT LADDER RAIL

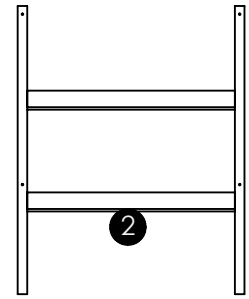

REAR LADDER RAIL

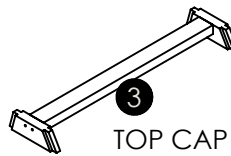


TOP CAP

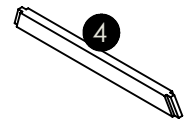


(2) SUPPORT BARS

2


ALIGN THE FRONT LADDER RAIL (1) WITH THE TOP CAP (3) AND INSERT/SLIDE THE TONGUE/GROOVE SECTION IN A SNUG MANNER. REPEAT WITH REAR LADDER RAIL (2). TAKE CAUTION IN ENSURING THE TOP SECTION OF THE LADDER IS SMOOTH AND EVEN ACROSS THE TOP. INSERT SCREWS (A) ONE AT A TIME INTO OUTSIDE PRE-DRILLED HOLES AND LOOSELY TIGHTEN WITH EITHER A SCREWDRIVER OR A DRILL. PLEASE NOTE, YOU WILL SECURE THESE 4 SCREWS LATER AS THE LAST STEP.

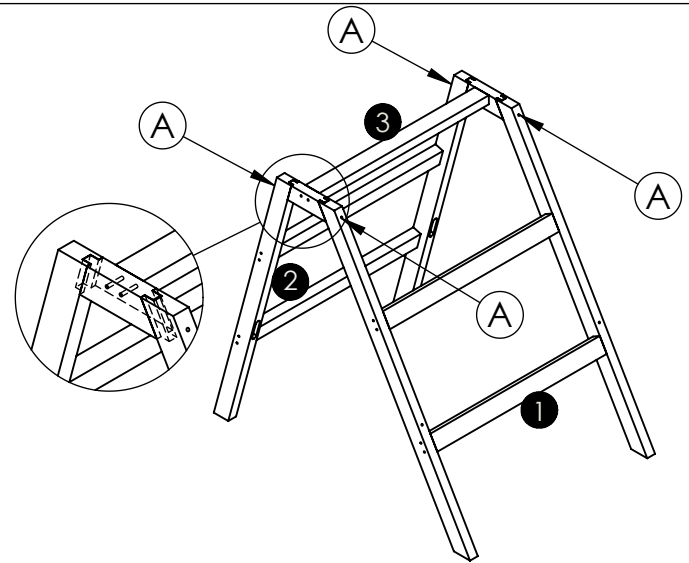

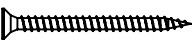A  4x

3

INSERT SUPPORT BAR (4) ONE AT A TIME INTO TONGUE/GROOVE INSERTS AND PLACE SCREWS (A) INTO OUTSIDE PRE-DRILLED HOLES ONE AT A TIME. REPEAT WITH OPPOSITE SIDE.

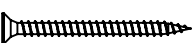A  4x

4

TIGHTEN TOP SCREWS

5

FOR LONGER LIFE, A SEALANT IS RECOMMENDED FOR THE WHOLE UNIT. SET OUTSIDE FOR FREE-RANGE BIRDS OR WITHIN YOUR COOP SETTING AND LET YOUR BIRDS ENJOY!

