



ASSEMBLY INSTRUCTION

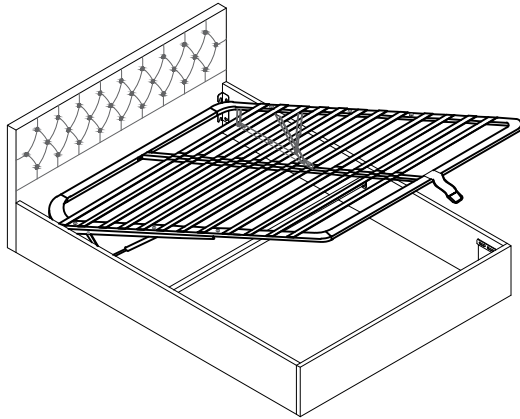


TIPS

1. This product is divided into 2 parcels for delivery. They may not arrive at the same time. Please wait patiently.
2. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
3. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws can not target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
4. 2 people are recommended to finish








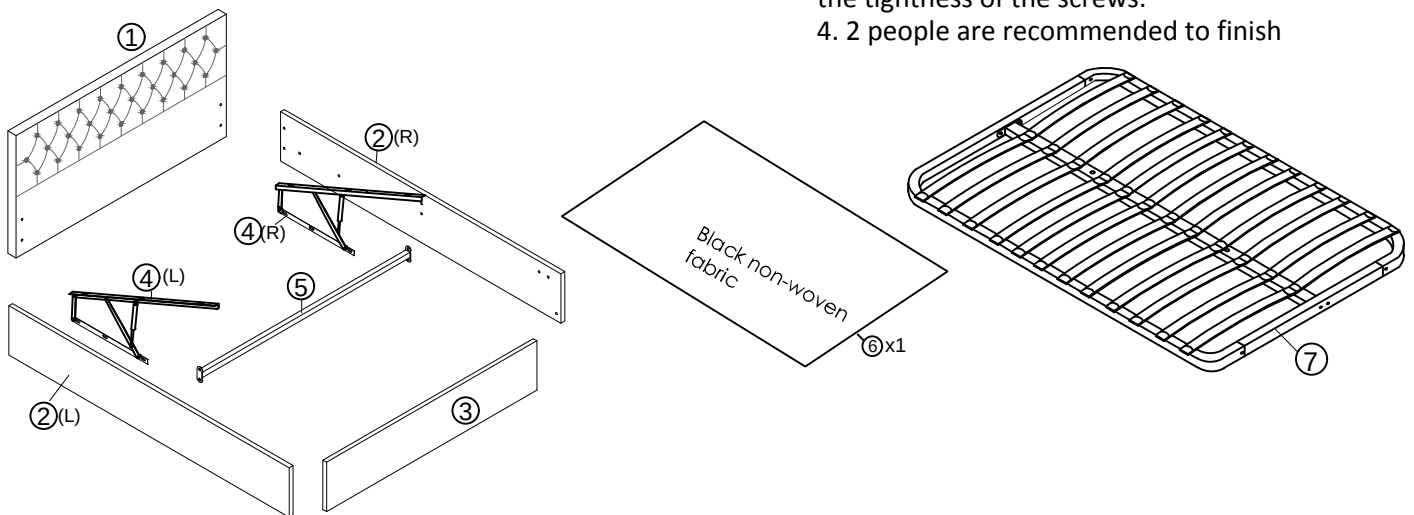


Parts List			Hardware List		
NO	ITEM	QTY	NO	ITEM	QTY
1	Head board	1	A	Allen Key	1
2	Side rails	2	B	Bolts (M8x45mm)	14
3	Foot board	1	C	Hinge	2
4	Gas lift	2	D	Bolts (M8x20mm)	32
5	Cross bar	1	E	Nuts	14
6	Non woven fabric	1	F	Little "7" Connector	2
7	Slat frame	1	G	Metal Corner	2
			H	Nuts	2
			I	Spanner	1
			J	"7" Connector	1
			K	Middle slats	12
			L	End slats cap	24
			M	Pull tape	1

Part List

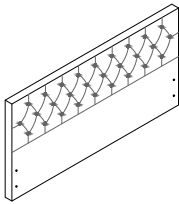1  Head board-1pc	4  Gas lift-2pcs
---	--


Hardware List

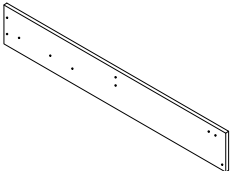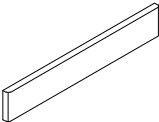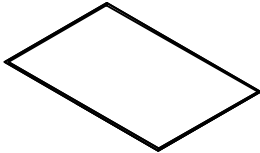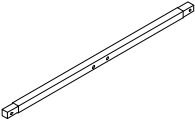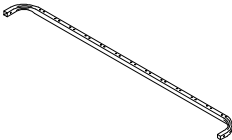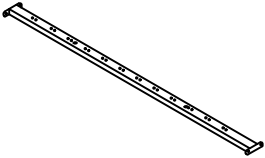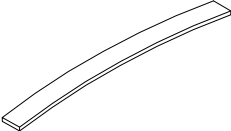2  Side rails -2pcs	3  Foot board -1pc	5  Cross bar-1pc
6  Non woven fabric-1pc	7.1  Metal frame cross bar-2pcs	7.2  Metal frame side bar-2pcs
7.3  Metal frame middle bar-1pc	7.4  Slat-24pcs	

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.


Step 1 x2

Fix the Siderails② to the Head board① with Bolt D and Hinge C by using Allen key A.

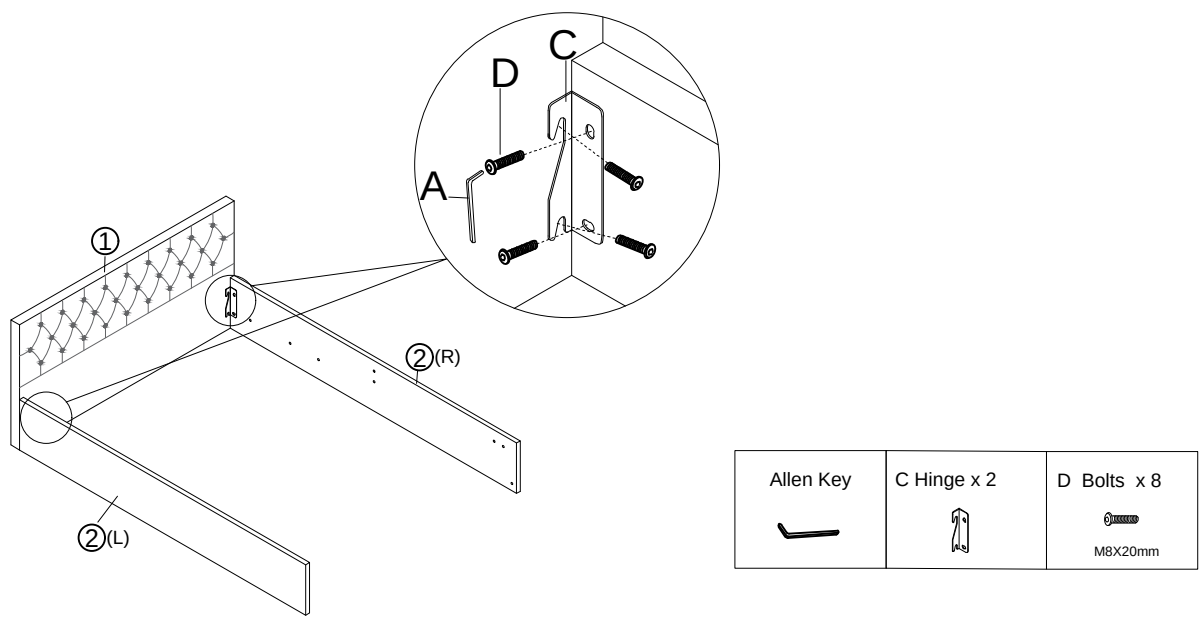


Step 2 x2

Fix the Siderails② to the footboard③ with Metal corner G, Little "7"Connector F and Bolt D by using Allen key A.

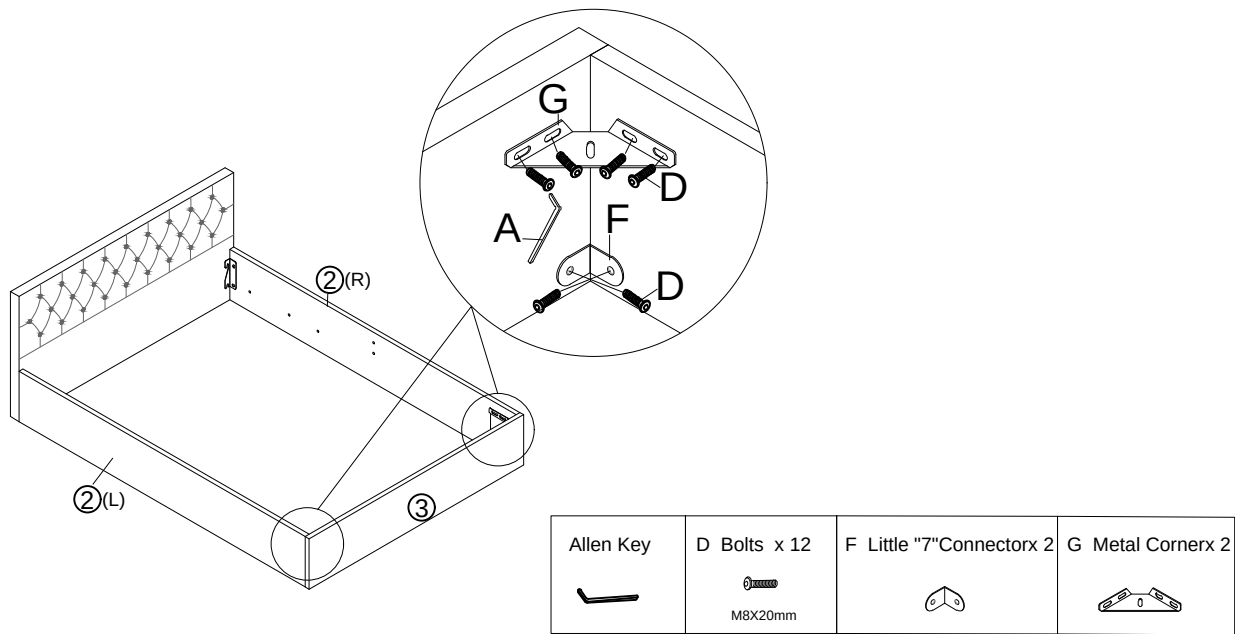


Step 3

Fix the "7" Connector J to the footboard③ with Bolt D by using Allen key A.

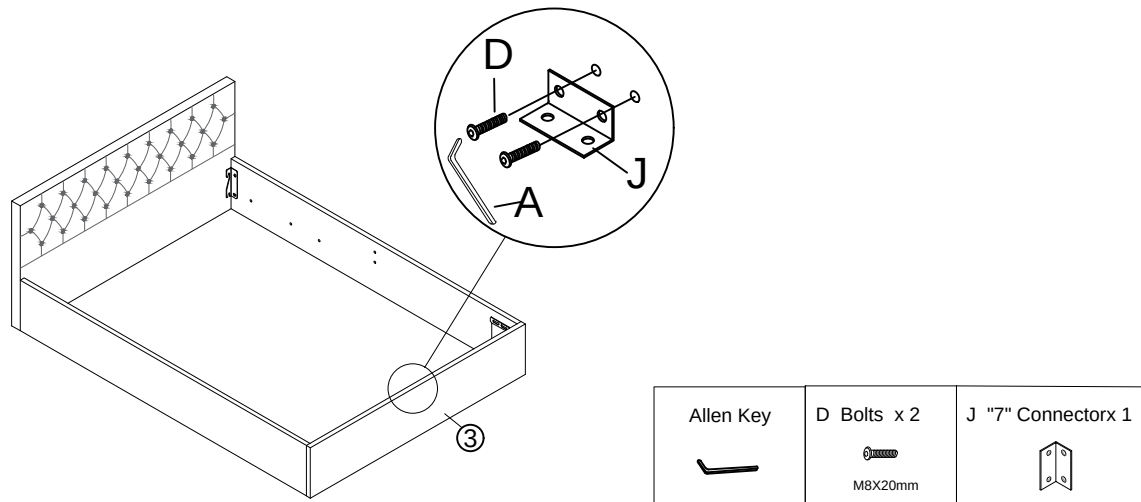

Step 4 x2


Fix the gas lifts ④ to the Siderails ② with Blots D by using Allen Key A or electric drill. fix the gas bar to the gas lifts ④ with nuts H .

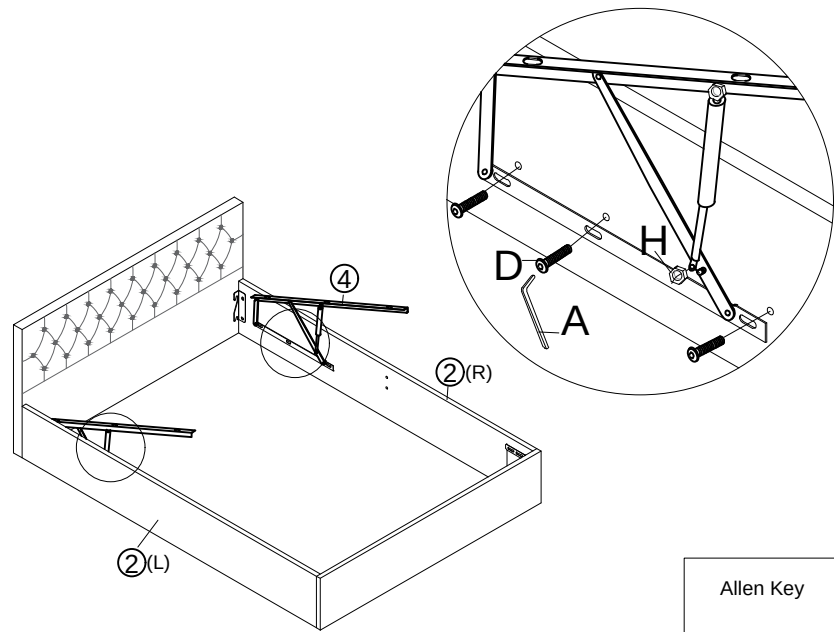

Allen Key	D Bolts x 6	H Nuts x2
	 M8X20mm	

Step 5


Fix the cross bar ⑤ to the Siderails ② with Bolts D by using Allen Key A.

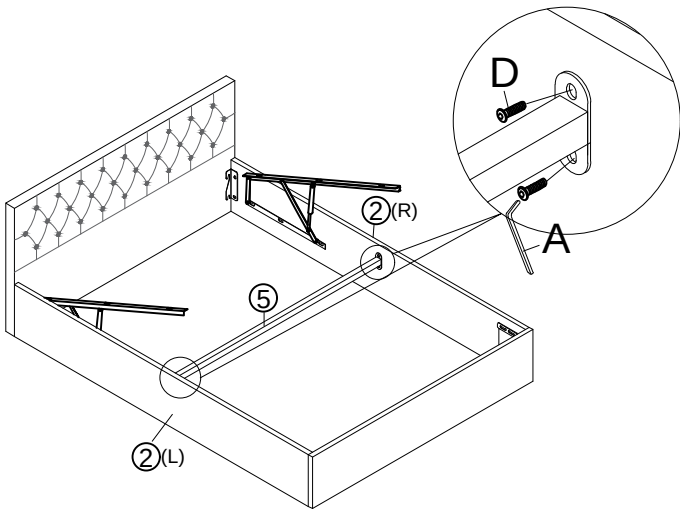

Allen Key	D Bolts x 4
	 M8X20mm


Step 8

Stick the black non-woven fabric ⑥ to the bottom of bed .

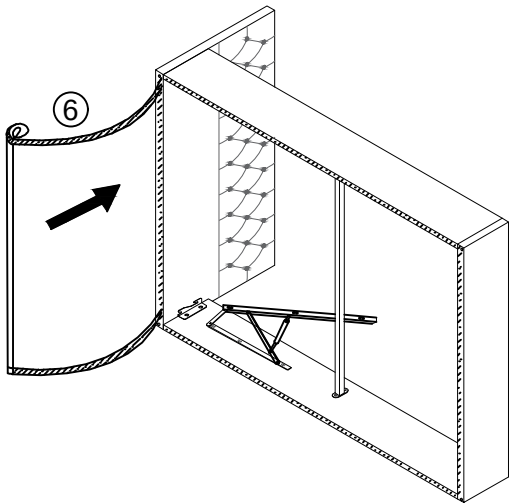

Step 7


Assemble the slats frame with bolts B and nuts E by using Spanner I and Allen Key A.

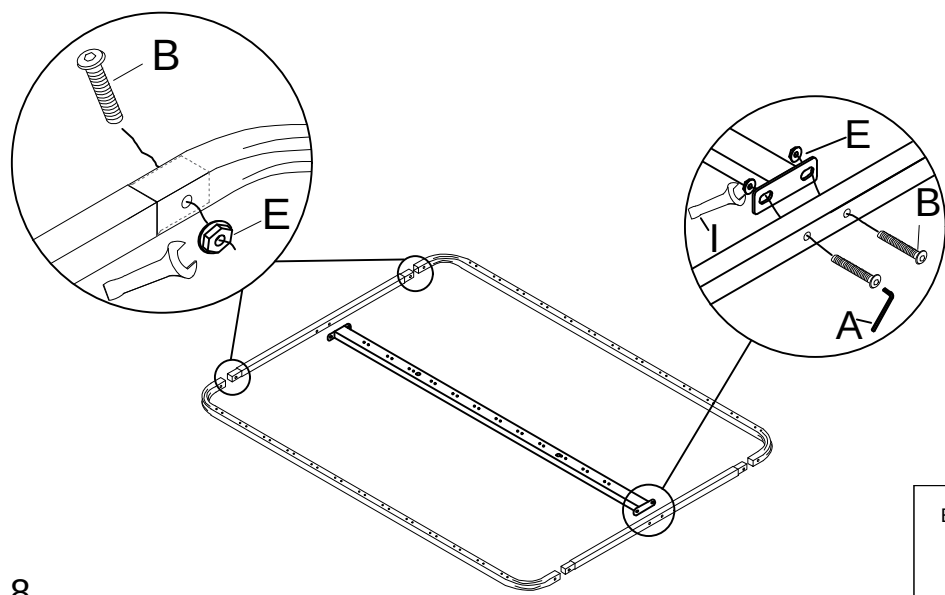

B Bolts x8	E Nuts x8	I Spanner x1
		
M8X45mm		

Step 8


Assemble the slats into the assembled slats frame with middle slats cap K and end slats cap L

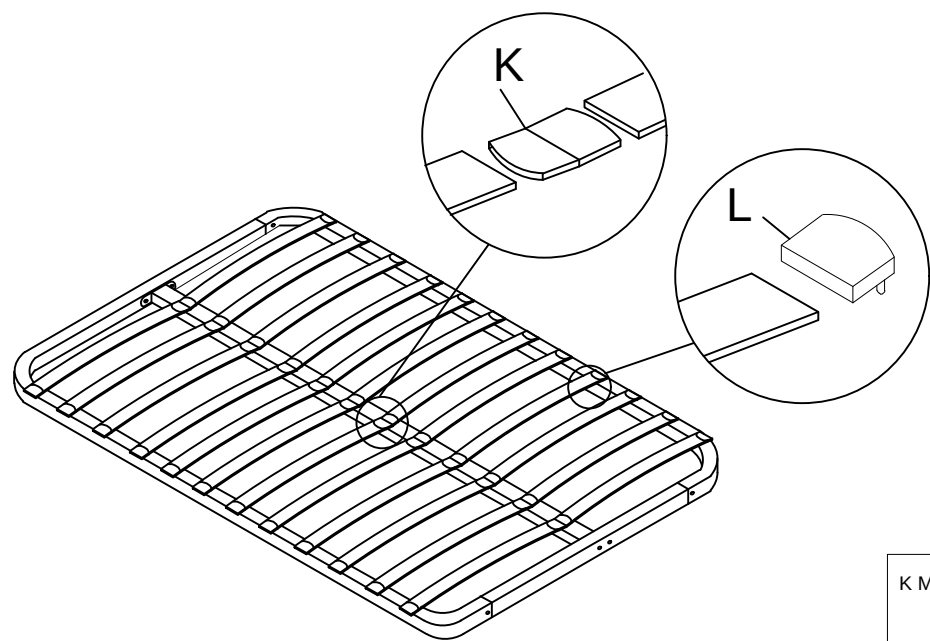

K Middle slats x12	L End slats cap x24
	

Step 9

Assemble the slats frame⑥ to the gas lifts④ with Bolts B and Nuts E,put the Pull tape M in the end of the slat frame,then please tighten all hardvoare and enjoy the bed.

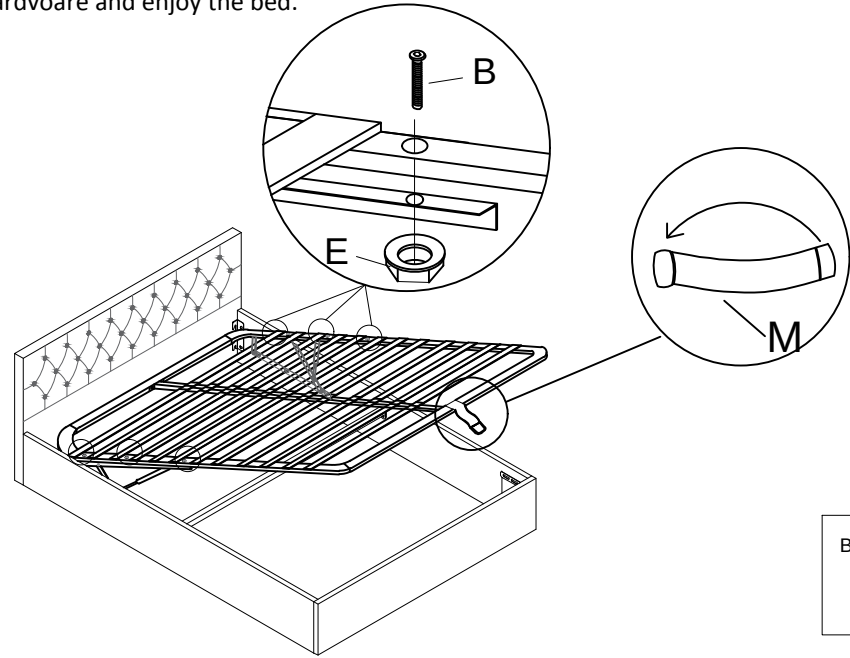

NOTICE:If it is difficult to press the slats frame down, you can try to put the mattress up first, so that you can press the slats frame down with very little strength.

B Bolts x6	E Nuts x6	M Pull tape x1
		
M8X45mm		