

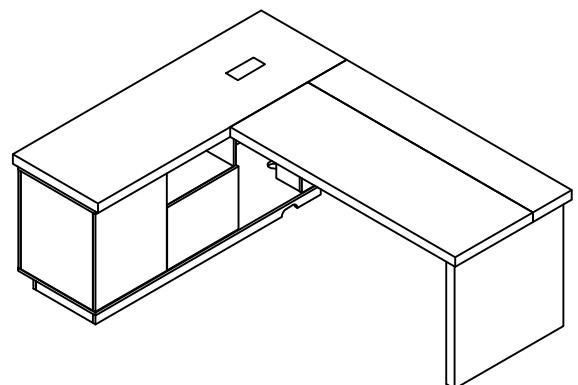


INSTALLATION


Product Manual

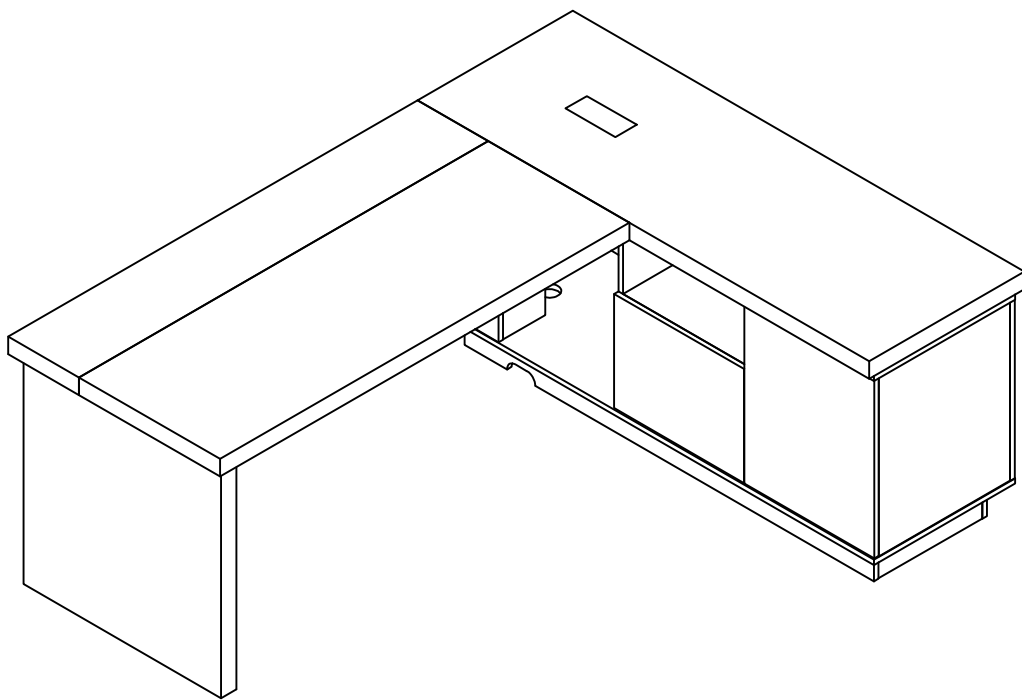

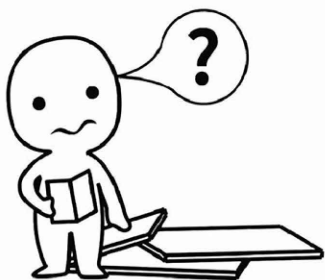


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

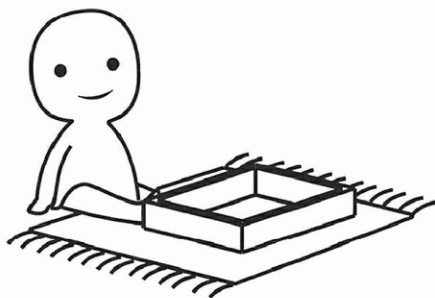




AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

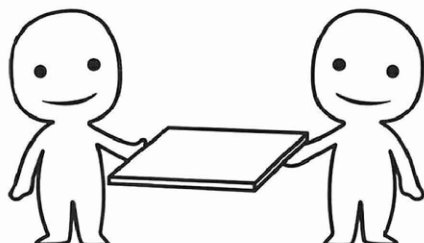

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

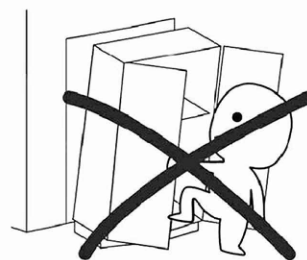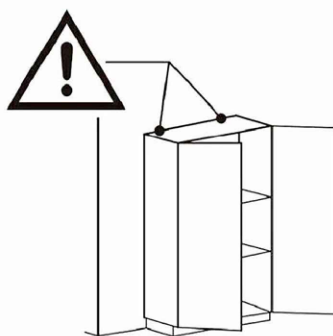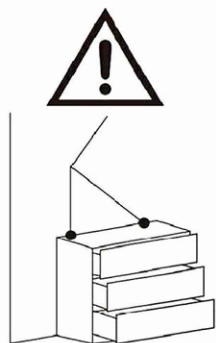

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.




















IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.











For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

Part List -1

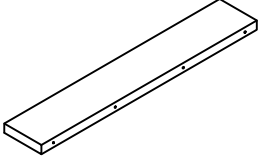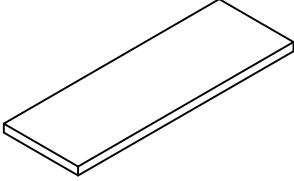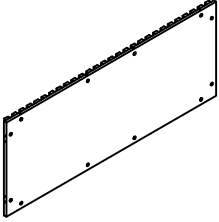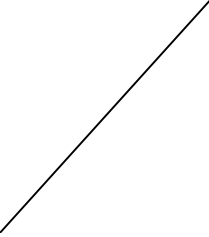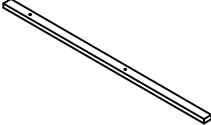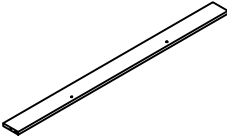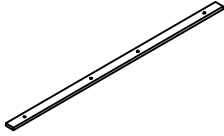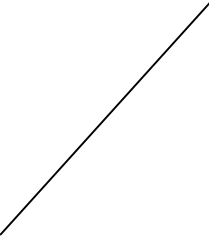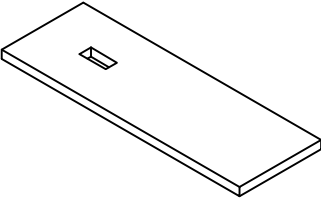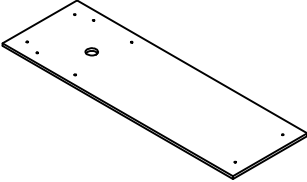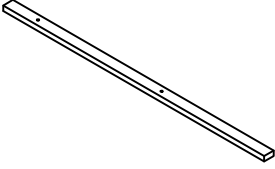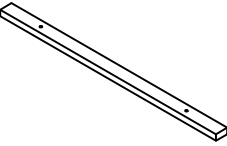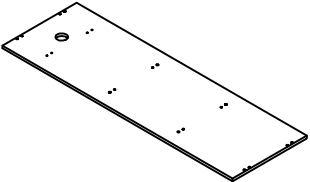


①×1 	②×1 	③×1 	④×1 
	⑥×1 	⑦×1 	⑧×1 
	⑩×1 	⑪×1 	⑫×1 
⑬×1 	⑭×1 	⑮×1 	⑯×1 
⑰×1 	⑱×1 	⑲×1 	⑳×1 

Part List -2

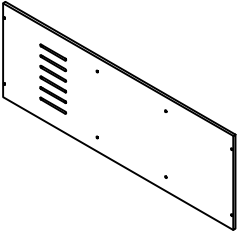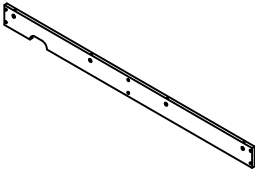②1×1 	②2×1 	②3×1 	②4×1 
②5×1 	②6×1 	②7×1 	②8×2 
②9×1 	③0×1 	③1×2 	③2×3 

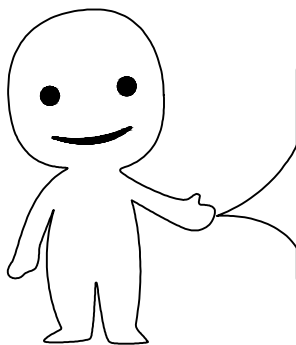

Please prepare the following tools



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A×74



B×74



C×40



D×4



E×4



F×4



G×4



H×4



I×4



M5×10

J×4




M6×35

K×4



L×4



80MM

M×4



N×26




M4×14

O×16



M4×20

P×12




M4×40

Q×4




M3×30

R×1set

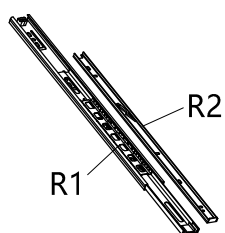


S×2

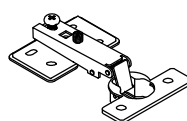


T×24




U×2




V×1





W×2

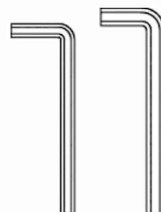

X×1




Y×2

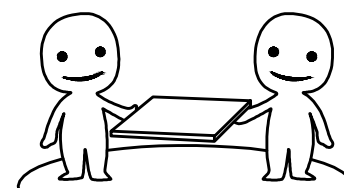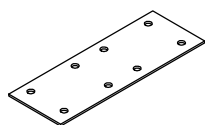


ASSEMBLED BY 2 ADULTS


Die Rutschen müssen vor dem Zusammenbau getrennt werden.
Nach dem Trennen beiseite legen, bis sie für die Montage benötigt werden.

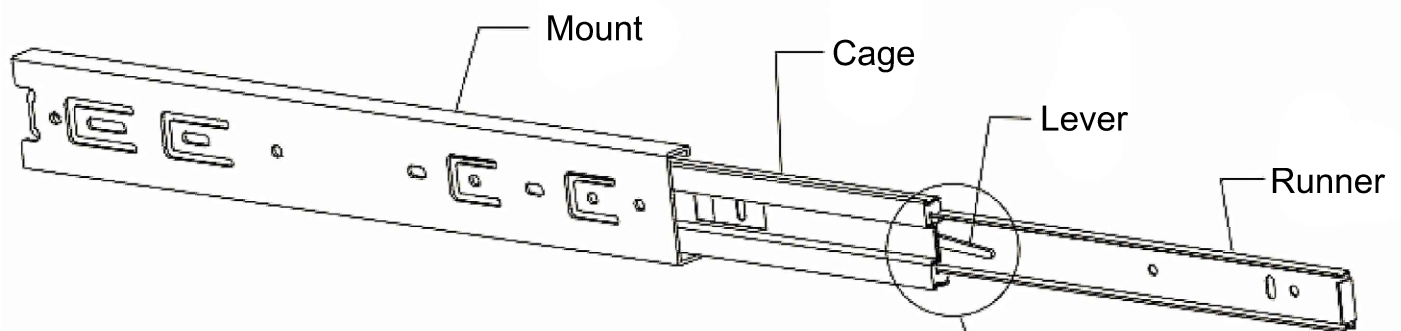


SCHRITT 1: Rutsche ausfahren

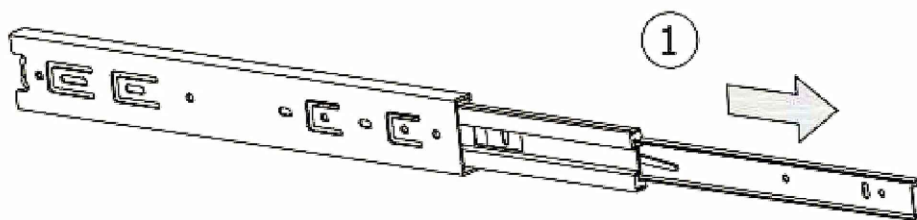

SCHRITT 2: Hebel nach oben drücken

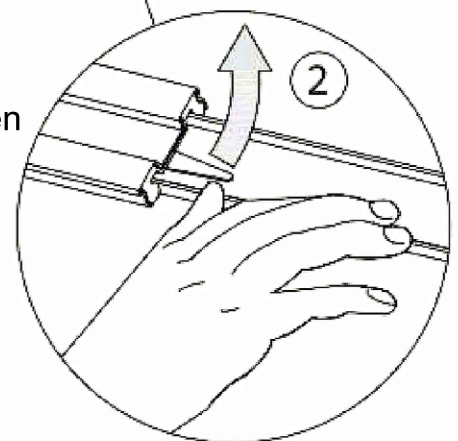

SCHRITT 3: Läufer entfernen

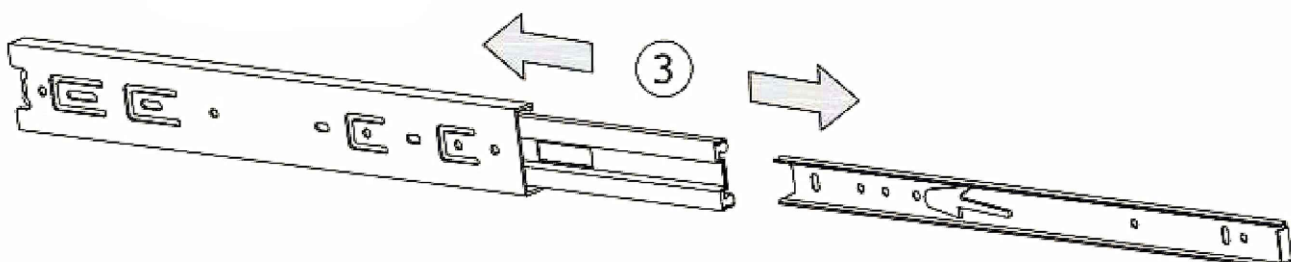


ATTENTION: The side cabinet can be installed on either the left or right side. This manual uses the right-side installation as an example.

01


N×4



R1×2



Achten Sie dabei auf die Locher, in die das Zubehör eingesetzt wird. Befestigen Sie die Gleitschienen R1 mit der Schraube (N) wie abgebildet an beiden Seiten der Platte ②1×2.

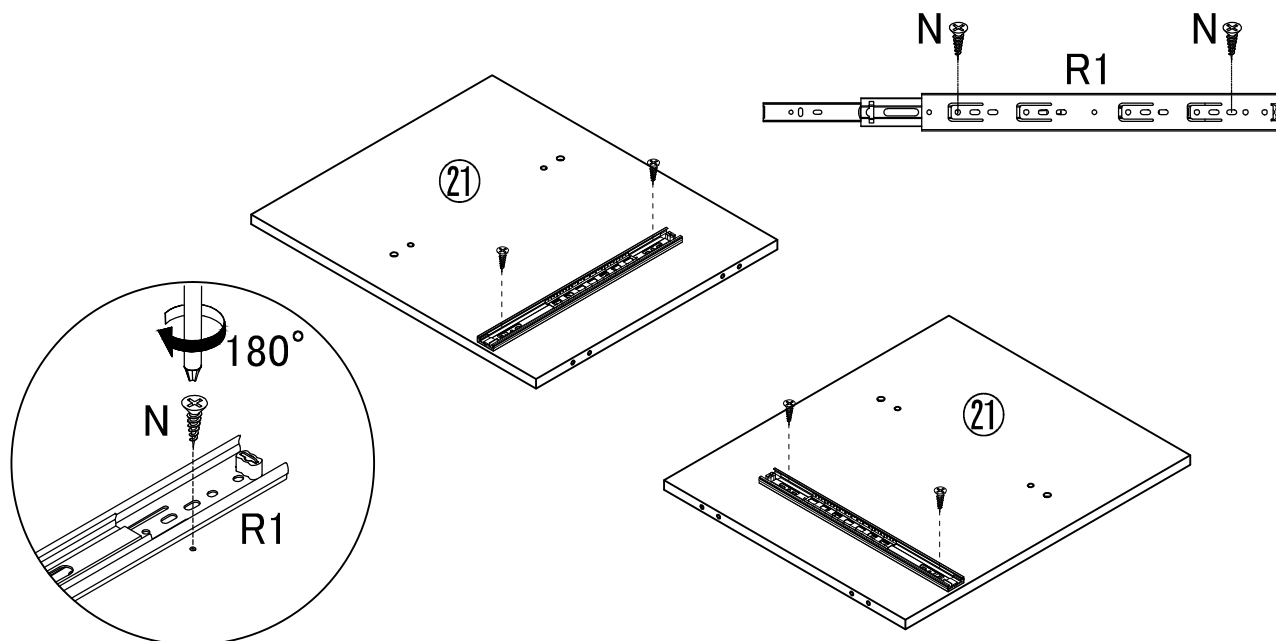


02



A×4



C×4




Insert the wooden dowels (C) halfway into Panels ②1, and then use a screwdriver to screw the bolts (A) into Panels ②1. Be careful not to use the wrong holes.

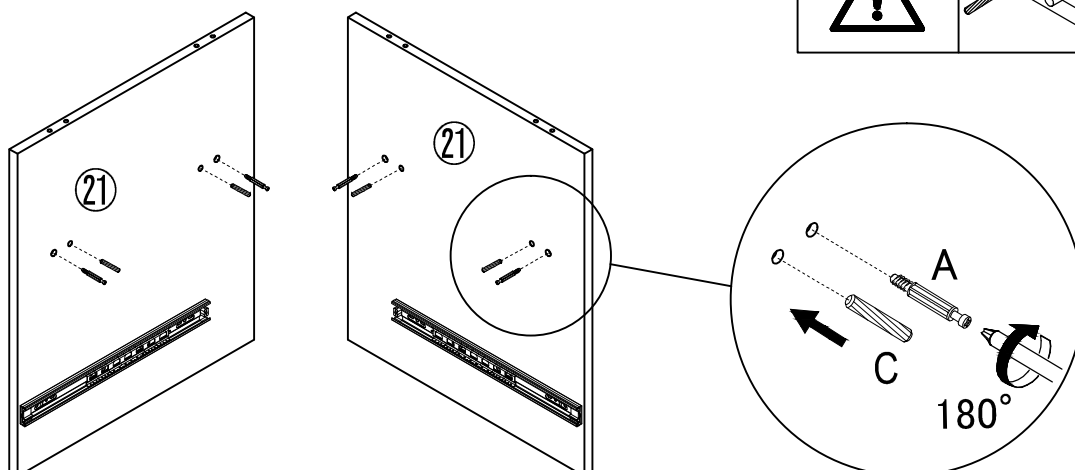
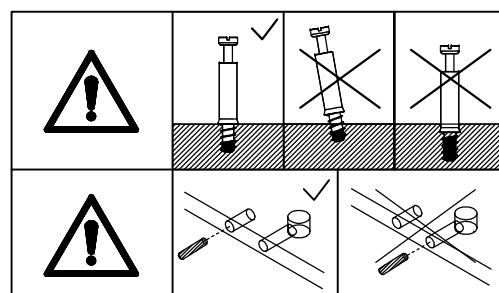


03

B×4

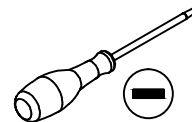


Align the holes in the Panel ⑱ with the holes in Panels ⑳. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

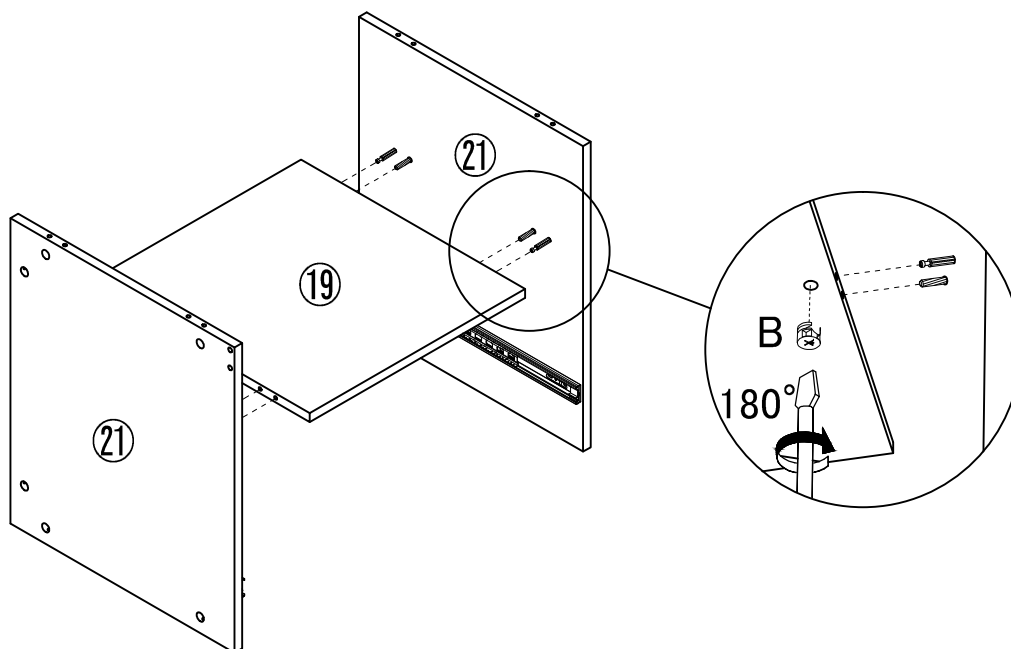
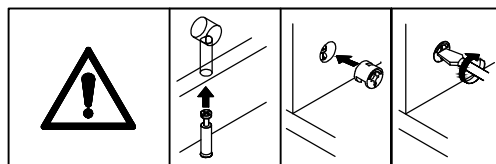


04

A×2




Use a screwdriver to screw the bolts (A) into Panel ⑳.

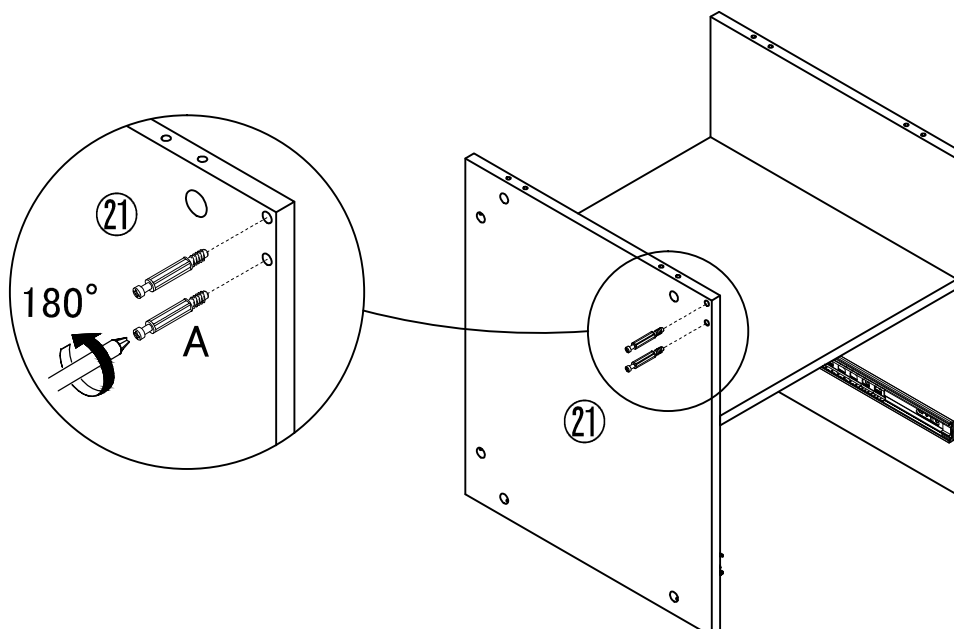
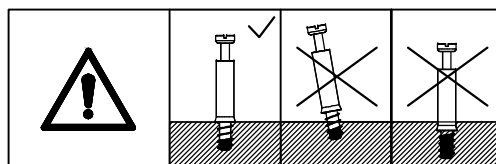


05

A×2




Use a screwdriver to screw the bolts (A) into Panel ②②.

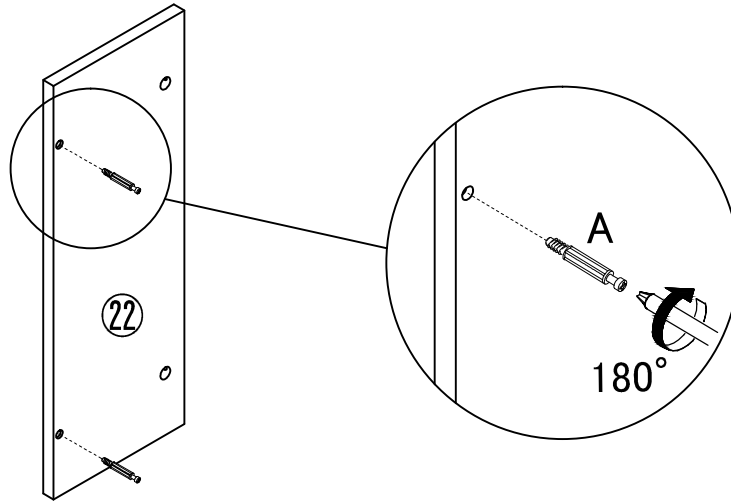
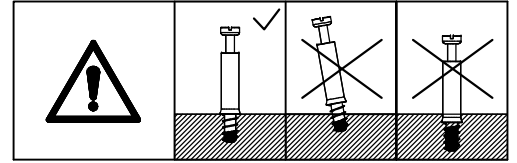


06

B×2

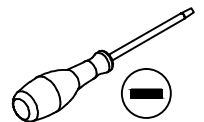


Align the holes in the Panel ②③ with the holes in Panels ②②. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

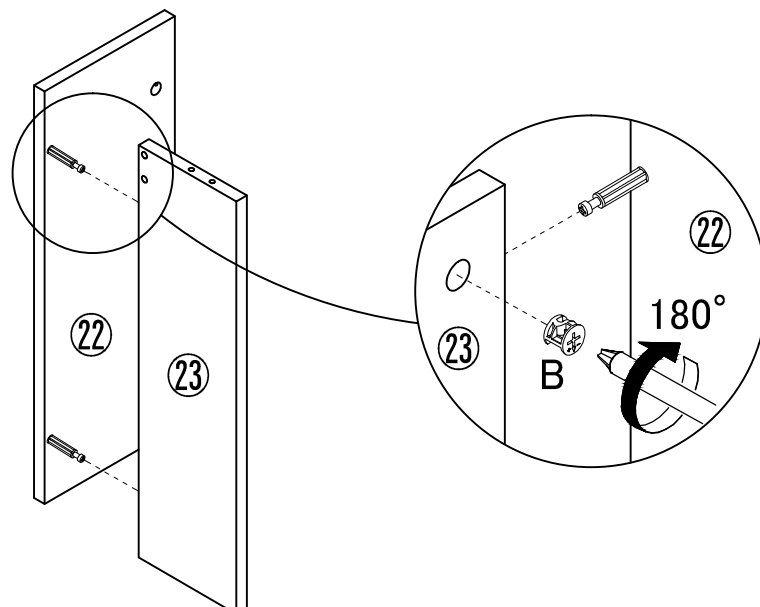
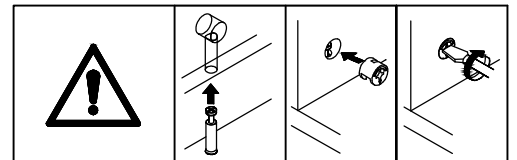


07

A×2




Use a screwdriver to screw the bolts (A) into Panel ⑰.

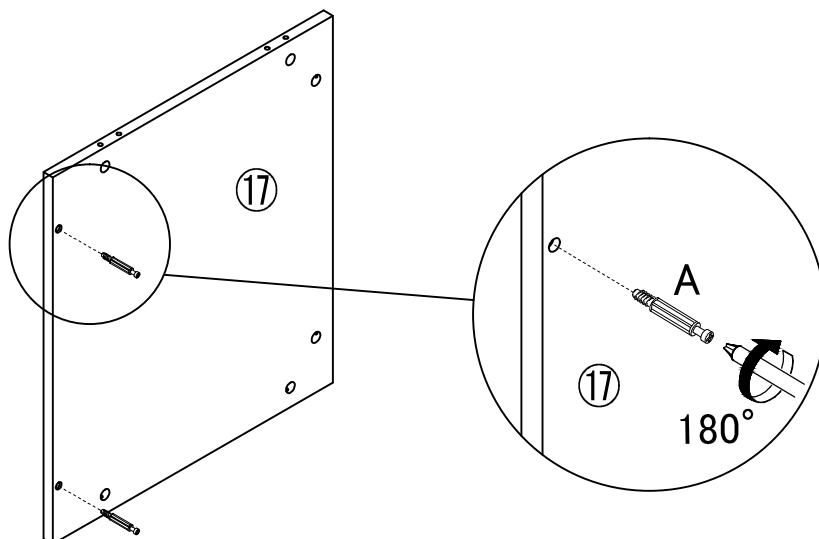
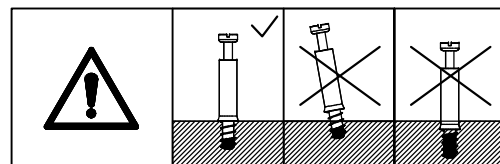


08

B×2

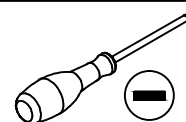


Align the holes in the Panel ⑳ with the holes in Panel ⑰.
Insert the cam locks from the three-in-one connectors into the holes and tighten them.

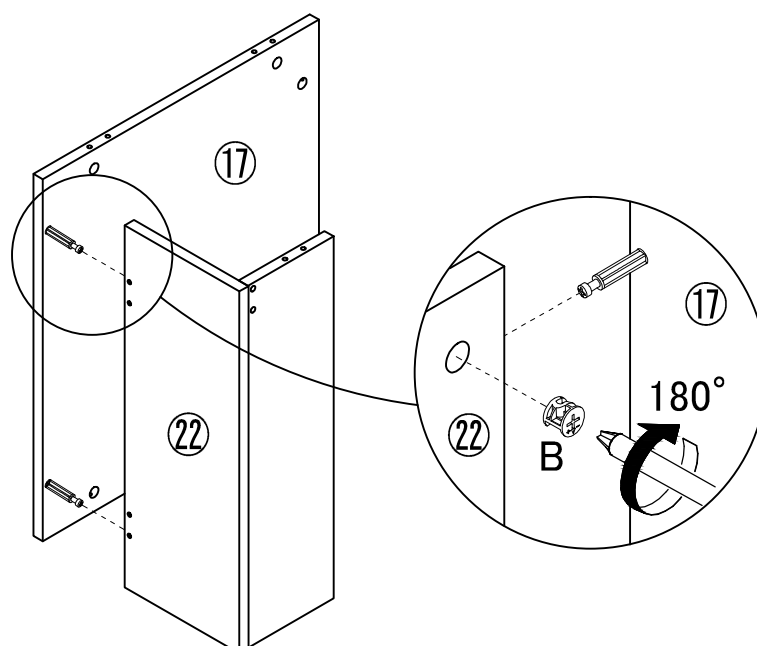
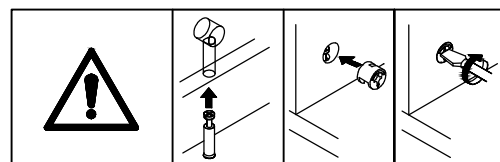


09

A×2




Use a screwdriver to screw the bolts (A) into Panel ②③.

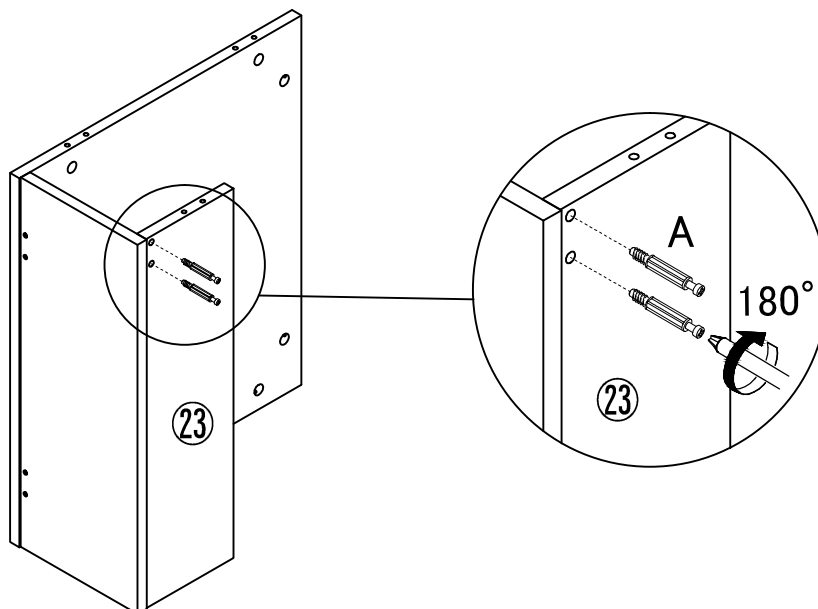
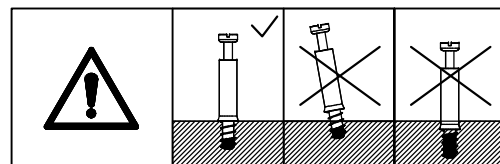


10

B×4

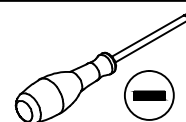


Align the holes in the Panel ⑤ with the holes in Panels ②①②③. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

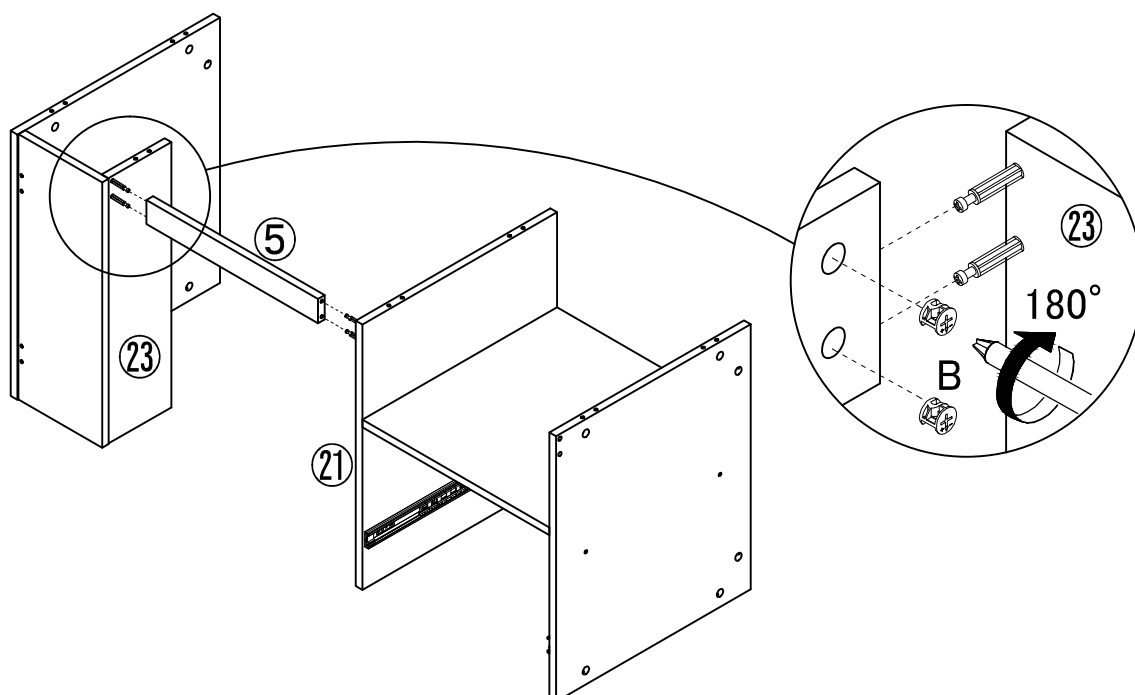
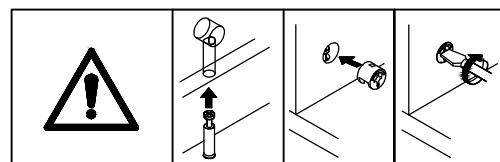


11

A×8




Use a screwdriver to screw the bolts (A) into Panel ②⑤.

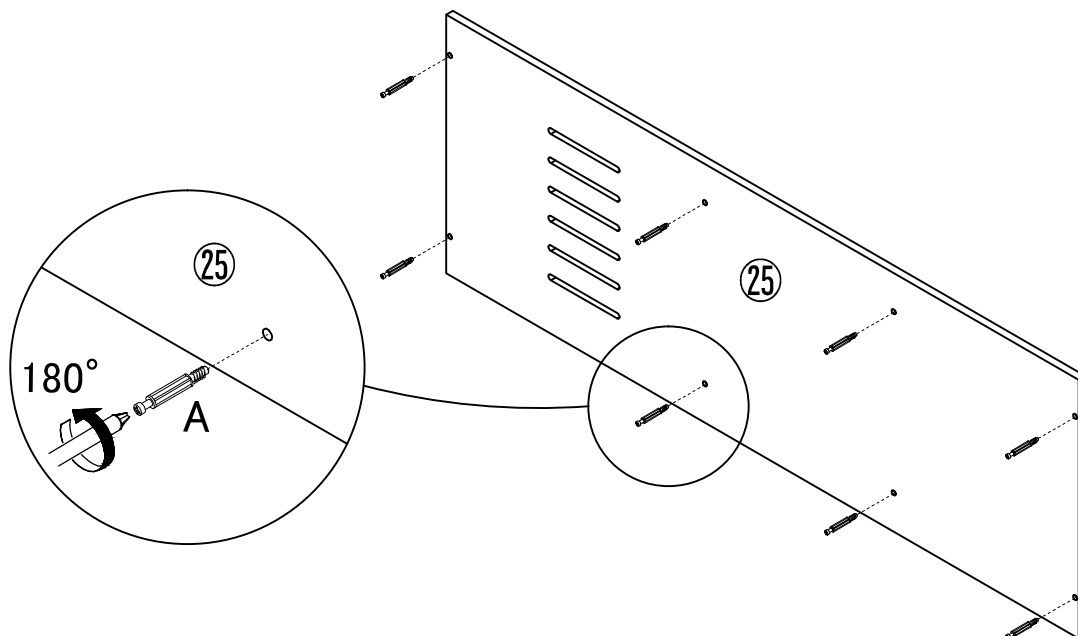
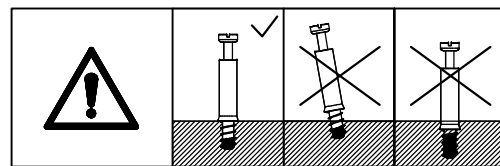


12

B×8

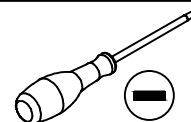


Align the holes in the Panel ②⑤ with the holes in Panels ①⑦②①①⑧. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

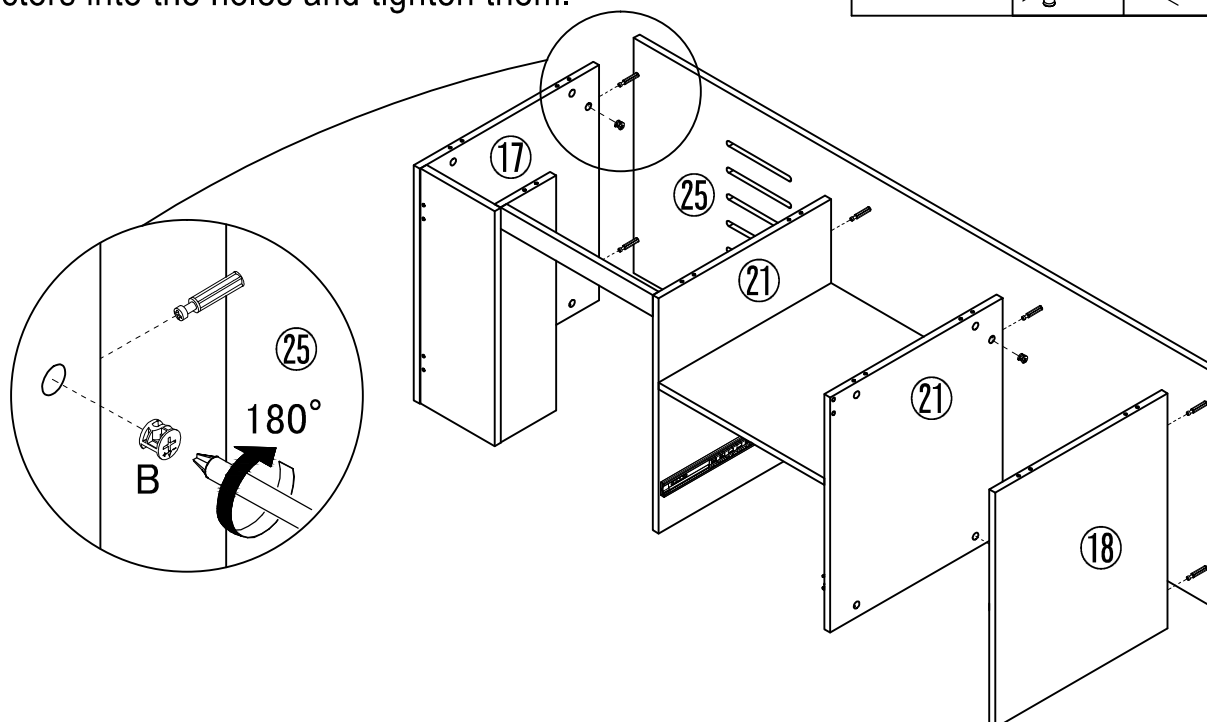
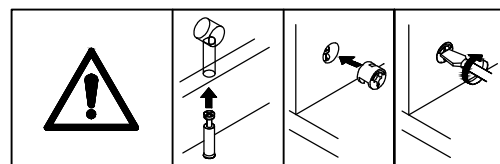


13

A×12




Use a screwdriver to screw the bolts (A) into Panel ③①×2.

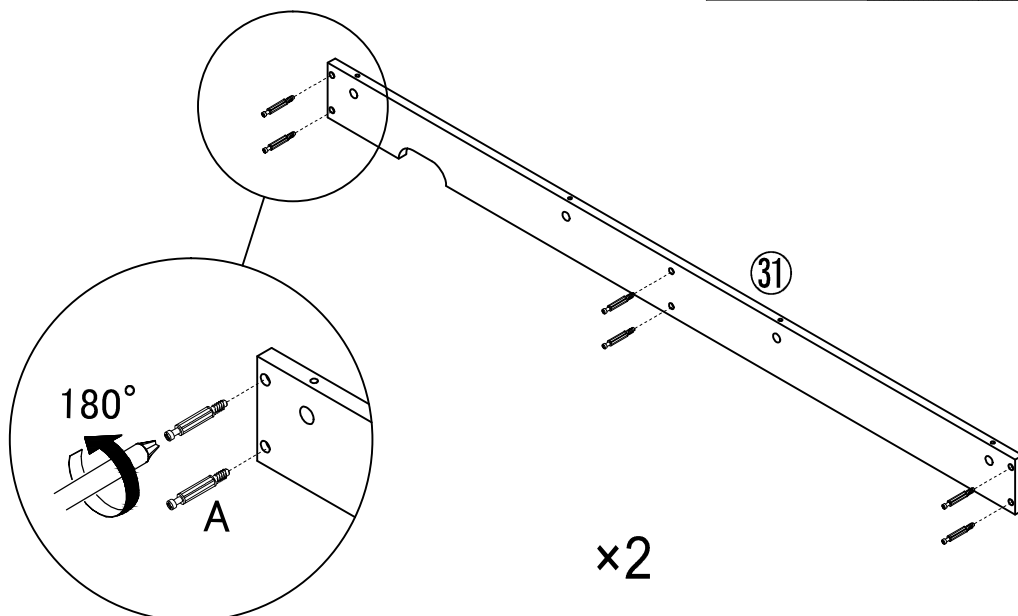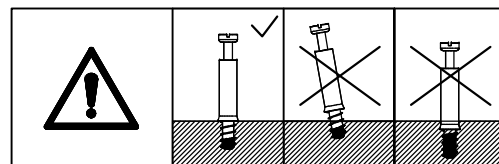



×2

14

B×12

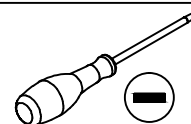


Align the holes in the Panels ③① with the holes in Panels ③②. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

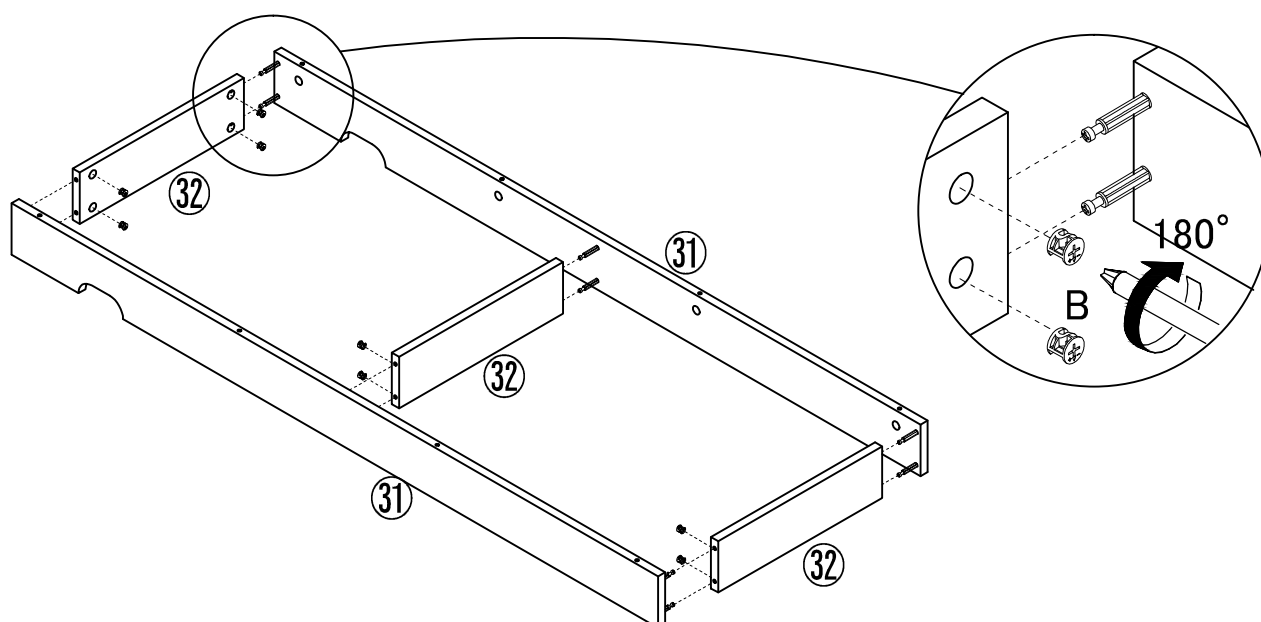
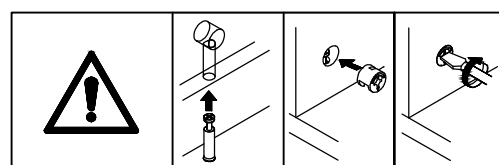


15

A×8




Use a screwdriver to screw the bolts (A) into Panel ⑩⑥.

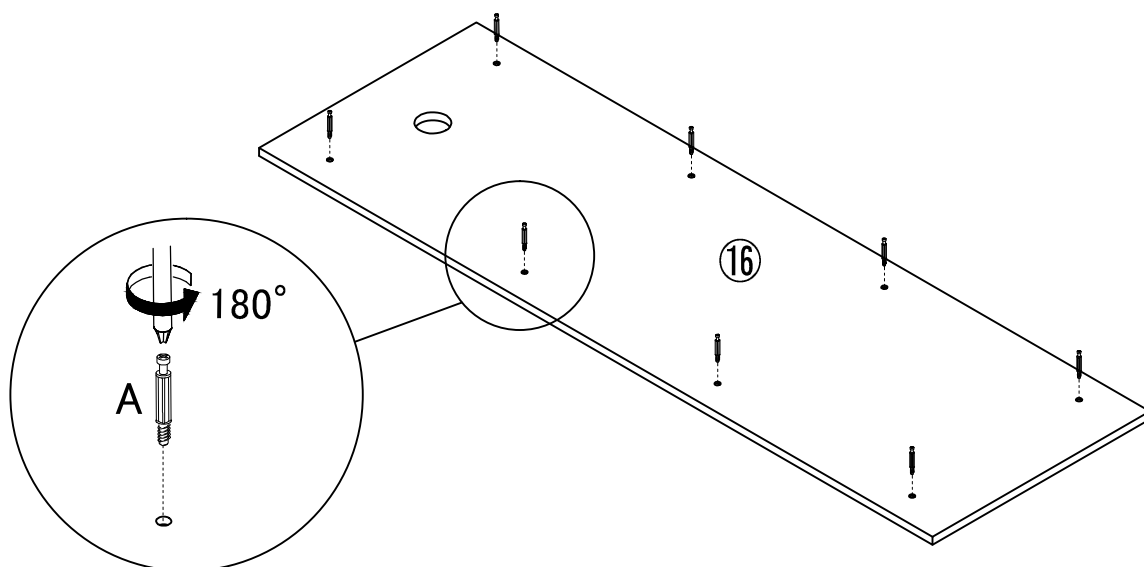
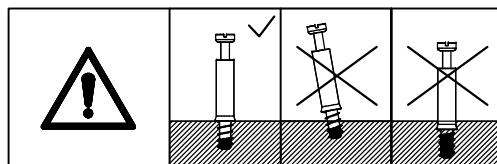


16

B×8

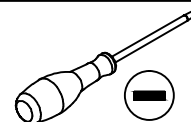

Align the holes in the Panel ⑩⑥ with the holes in Panels ③①③②. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

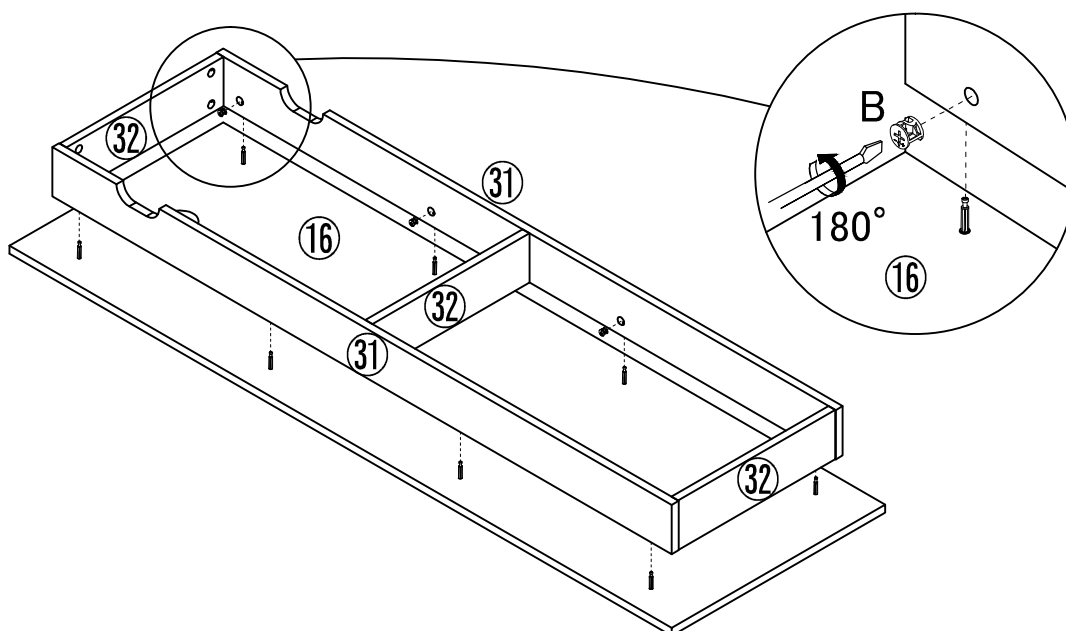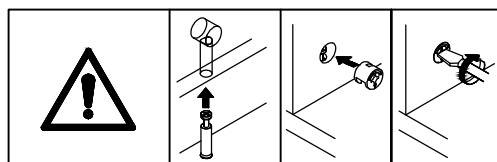


17



A×10



C×8




Insert the wooden dowels (C) halfway into Panels ②①, and then use a screwdriver to screw the bolts (A) into Panels ②①. Be careful not to use the wrong holes.

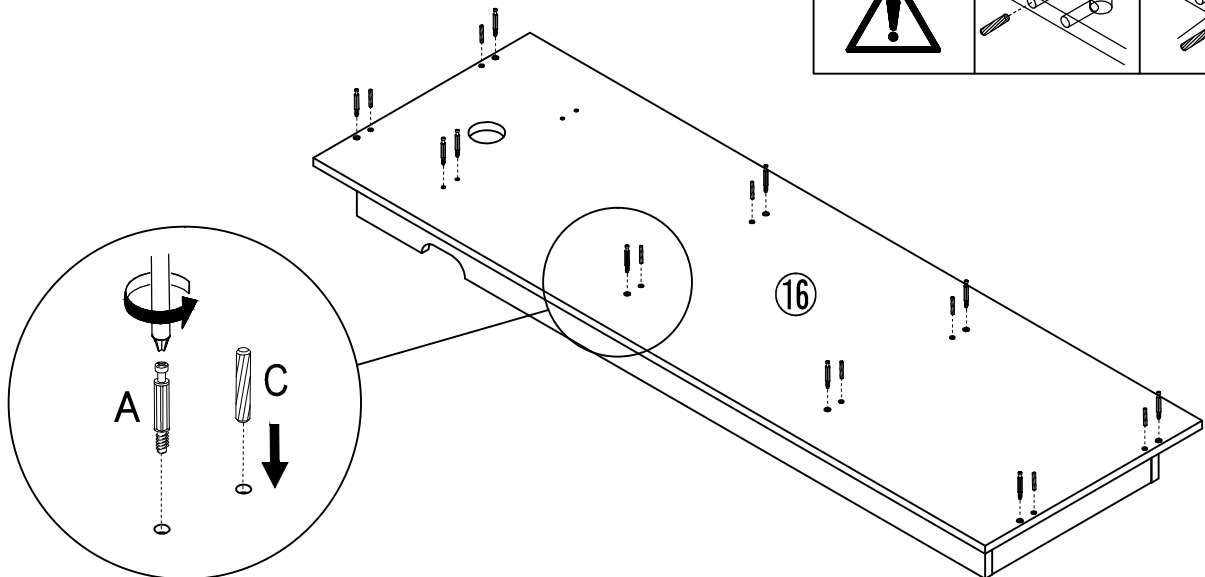
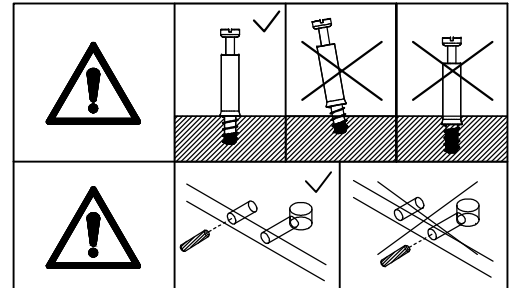


18

B×10

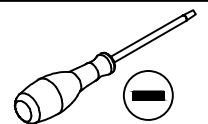

Align the holes in the Panel ①⑥ with the holes in Panels ①⑦②③②①①⑧. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

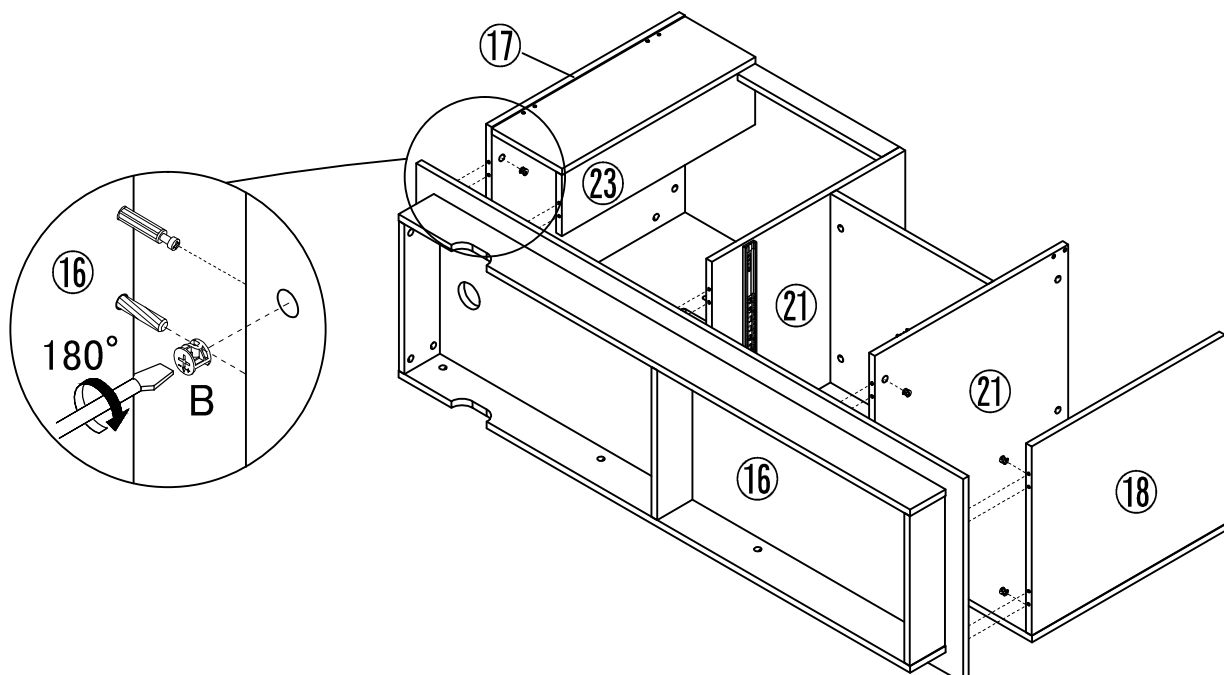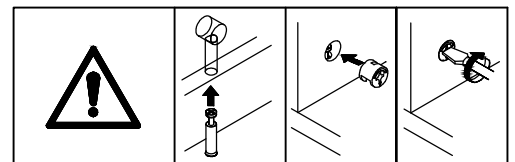


19



A×10



C×8




Insert the wooden dowels (C) halfway into Panels ⑪, and then use a screwdriver to screw the bolts (A) into Panels ⑪. Be careful not to use the wrong holes.

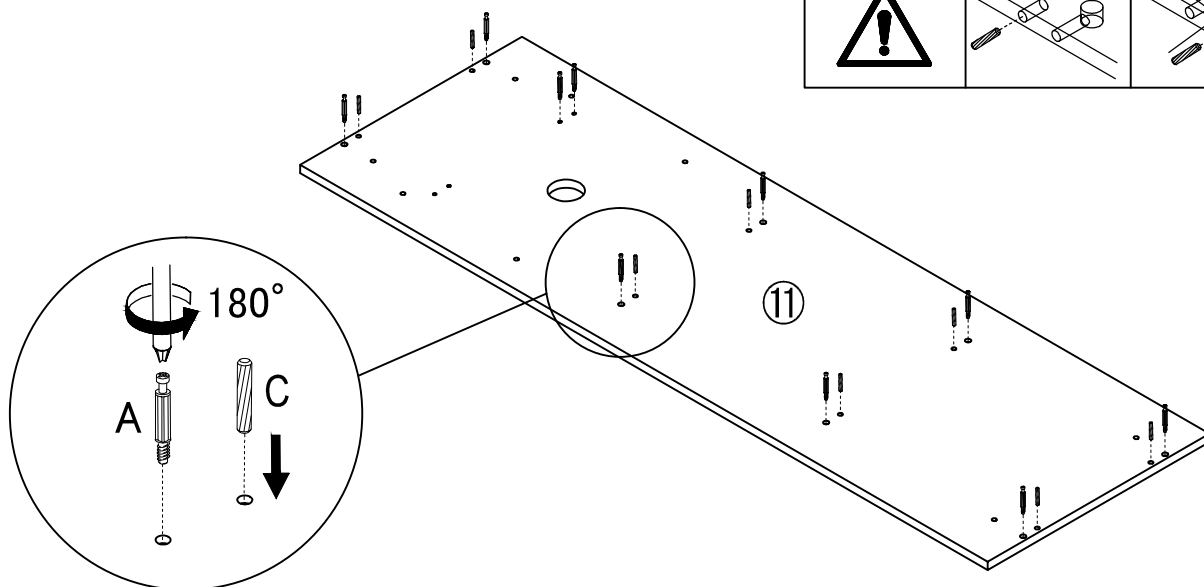
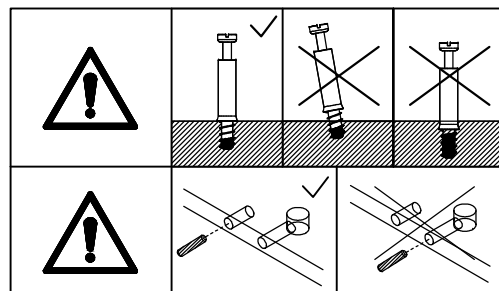


20

B×10

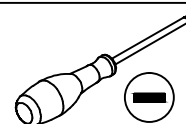


Align the holes in the Panel ⑪ with the holes in Panels ⑰⑳㉑㉒㉓. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

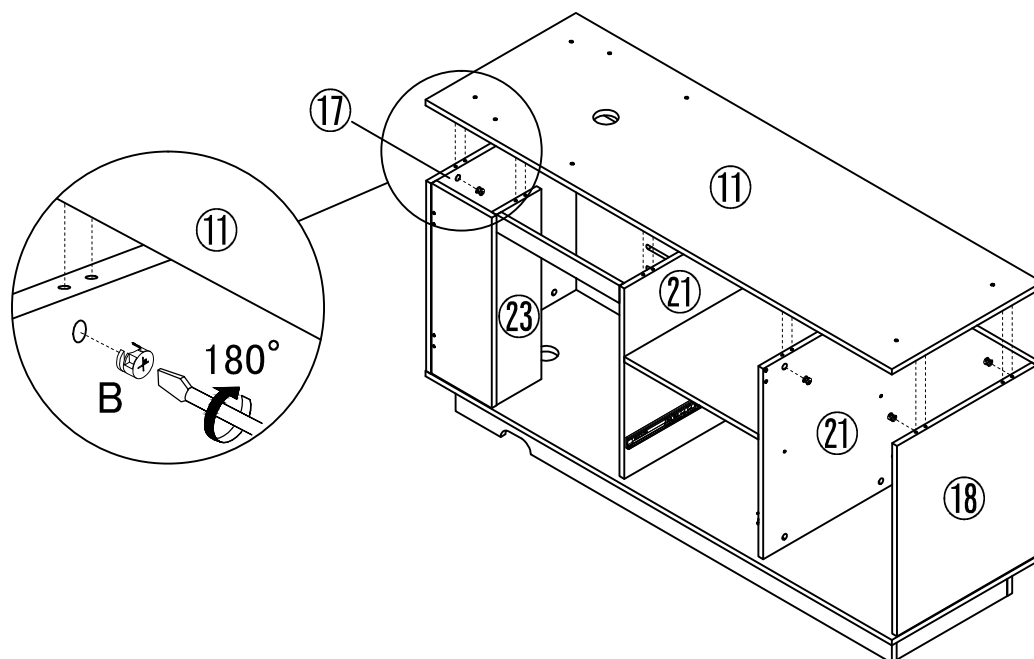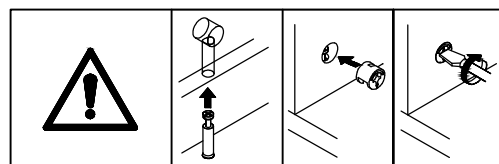


21

P×4



Use screws (P) for part ⑫⑬ as shown in the picture.

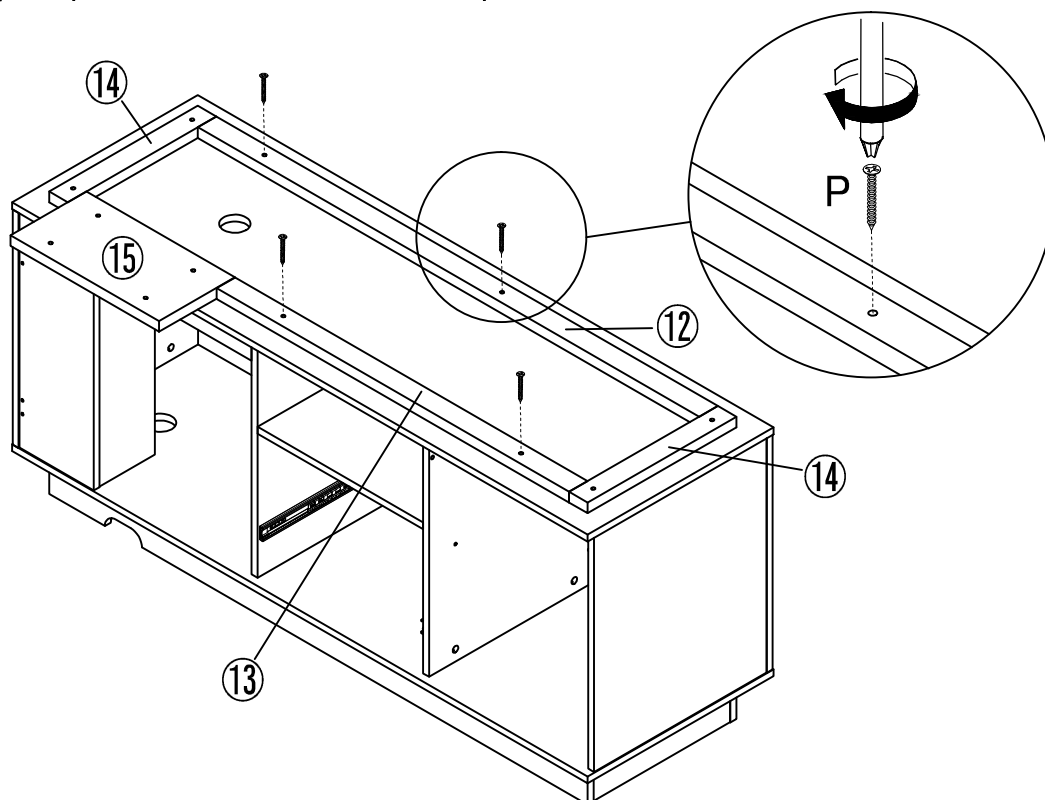


22


L×4





Use screws (L) for part ⑩ as shown in the picture.

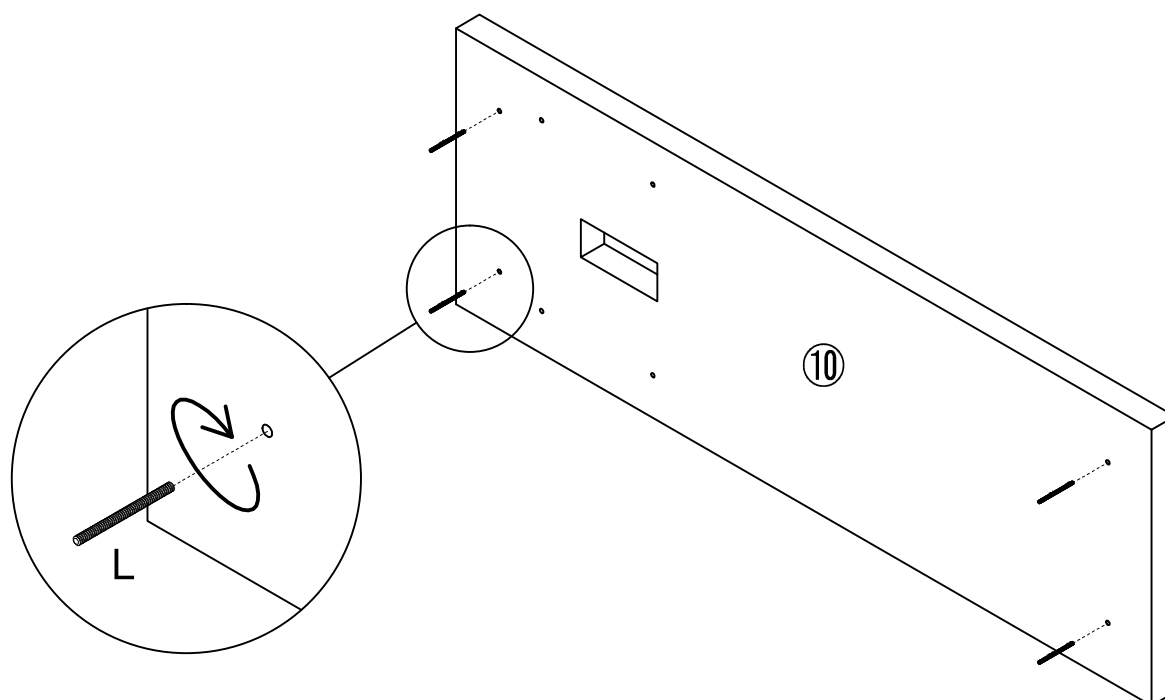


23

J×2 	K×4 	M×4 	X   
--	--	--	--


Use screws (J) (K) (M) for part ⑩ ⑪ ⑮ as shown in the picture.

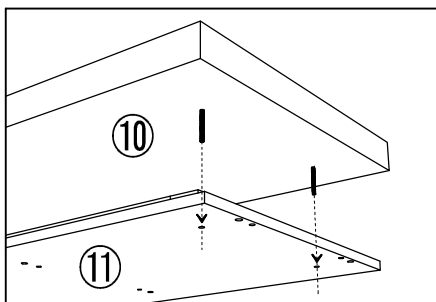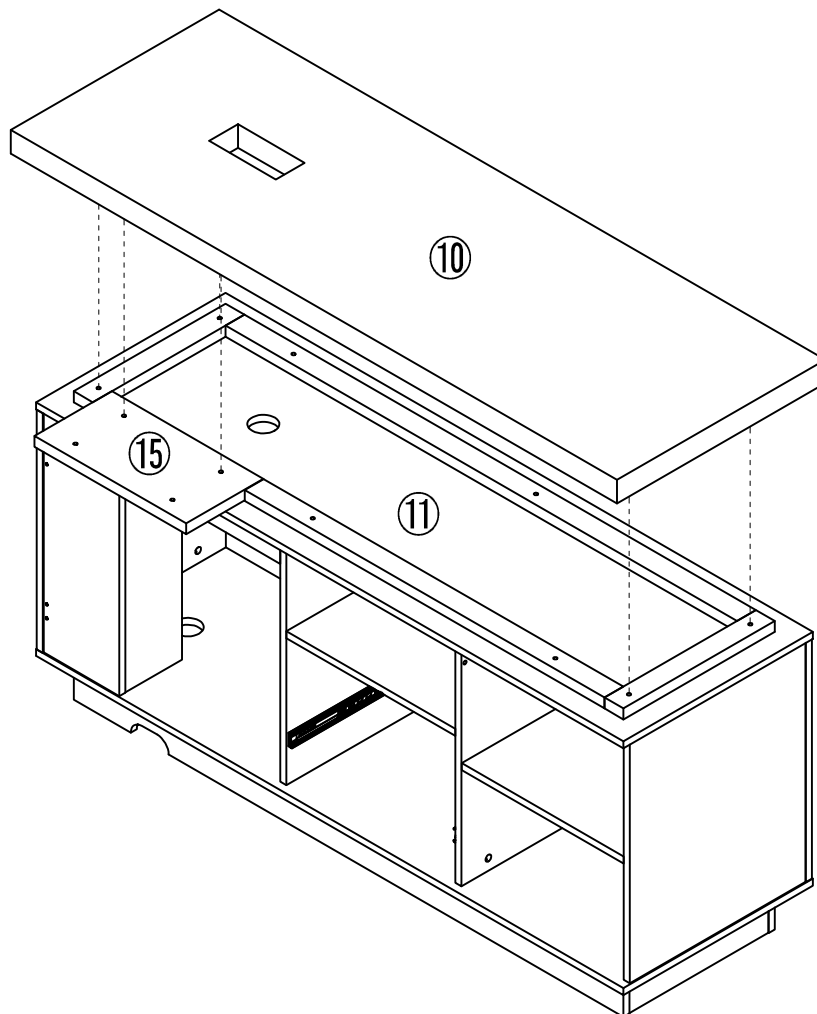


step 1

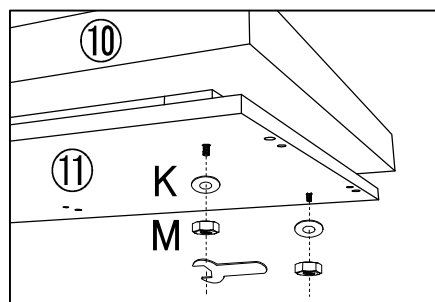

step 2

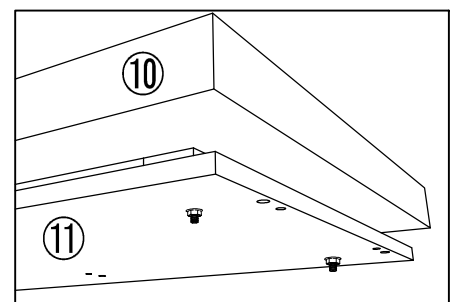

step 3

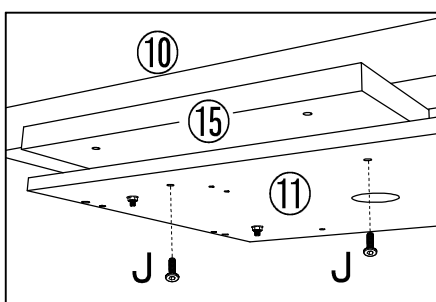


step 4

24

F×4




G×4



Use the bolts (F) into Panel 18/21.

Use the bolts (G) into Panel 20.

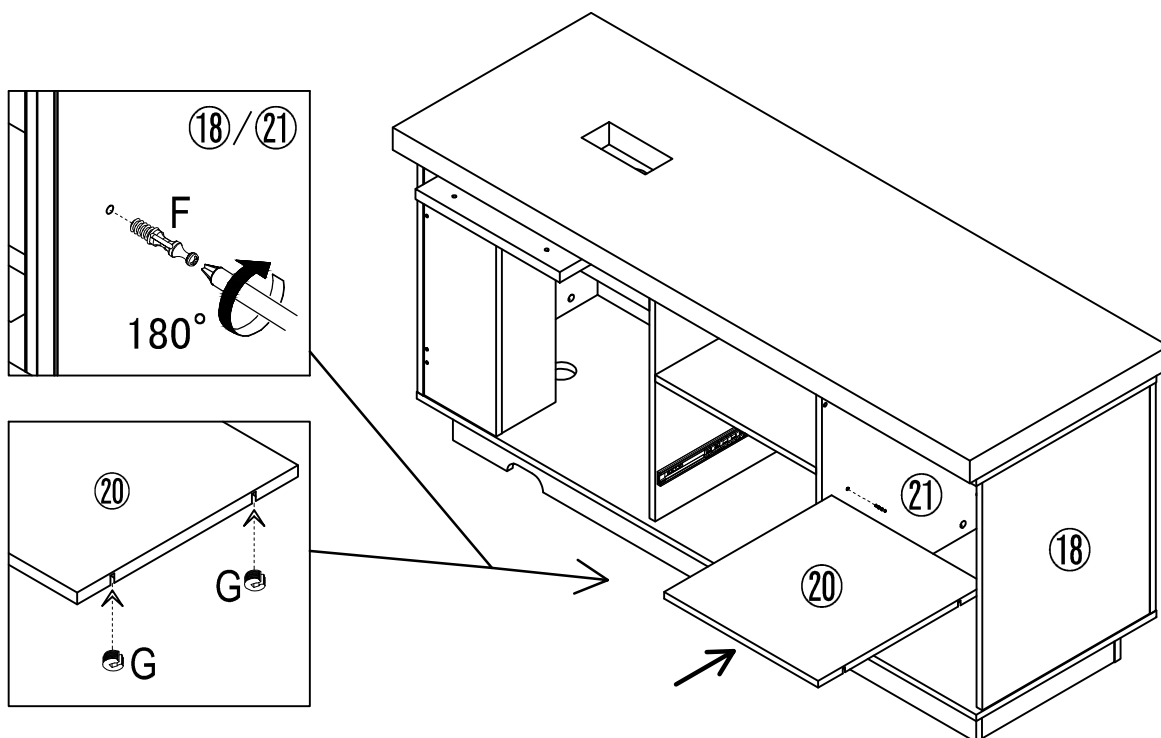

25



N×8




I×4



S×2





Install cabinet doors 26.

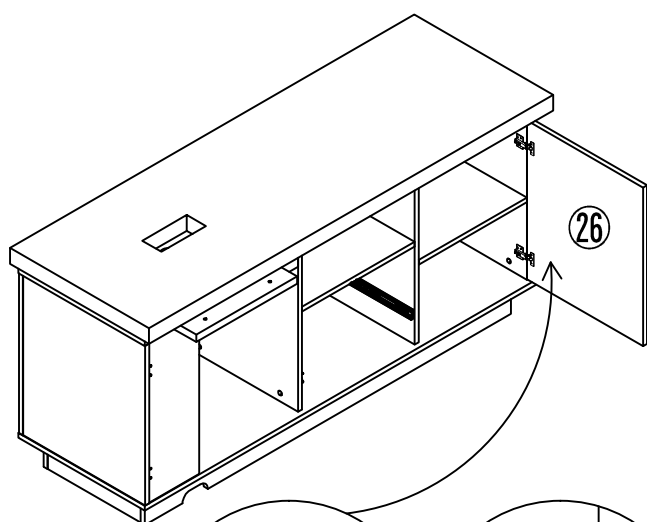


DEPTH ADJUSTMENT

Loosen screw, do not loose screw to the end, push hinge arm upwards or backwards, re-tighten screw.

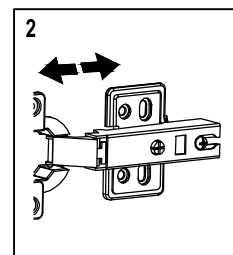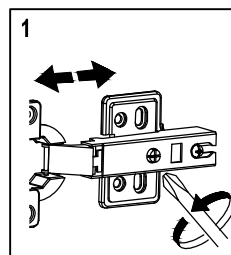


FOR-AND-AFT ADJUSTMENT

Adjust screw to make hinge move backwards or forwards to the ideal place, then tighten screw.


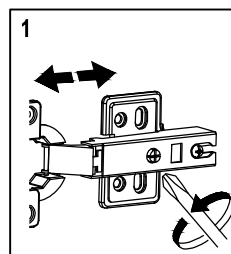


26

D×4




Insert the screws (D) halfway into Panel ②①.

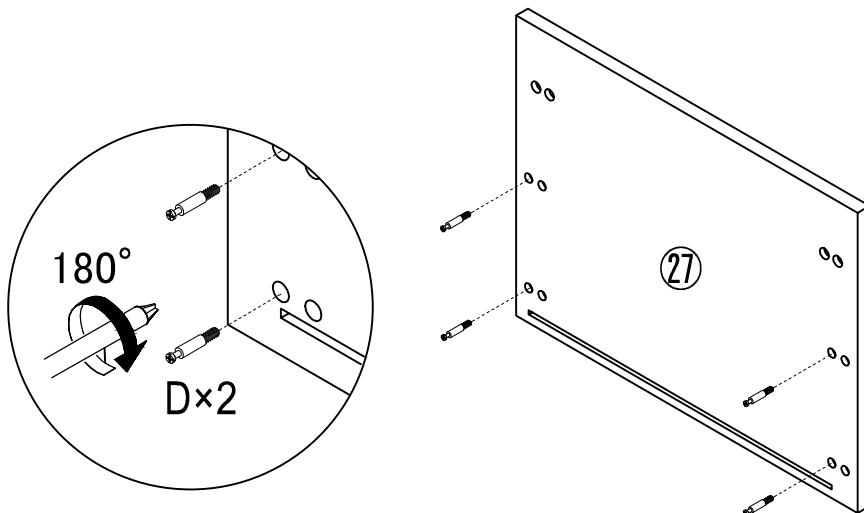
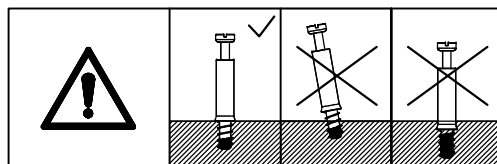


27

E×4

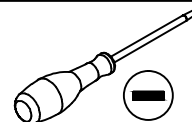

Align the holes in the Panel ②⑦ with the holes in Panel ②⑧②⑧. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

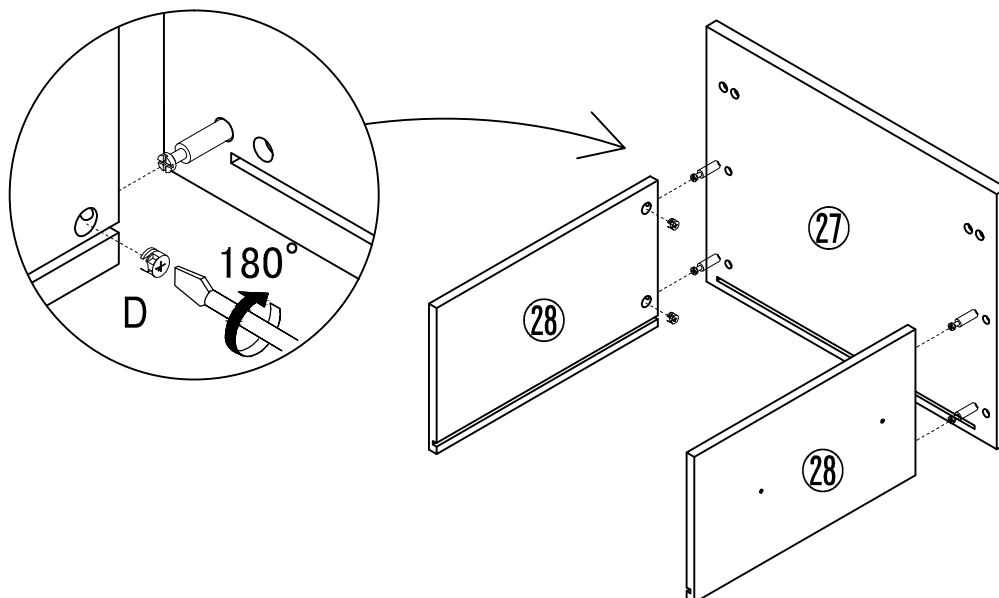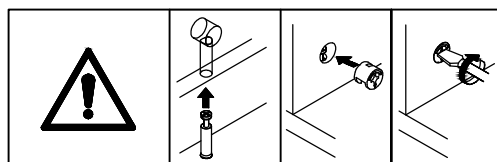


28

U×2



Place the plank ③① and part (U) as shown in the picture.


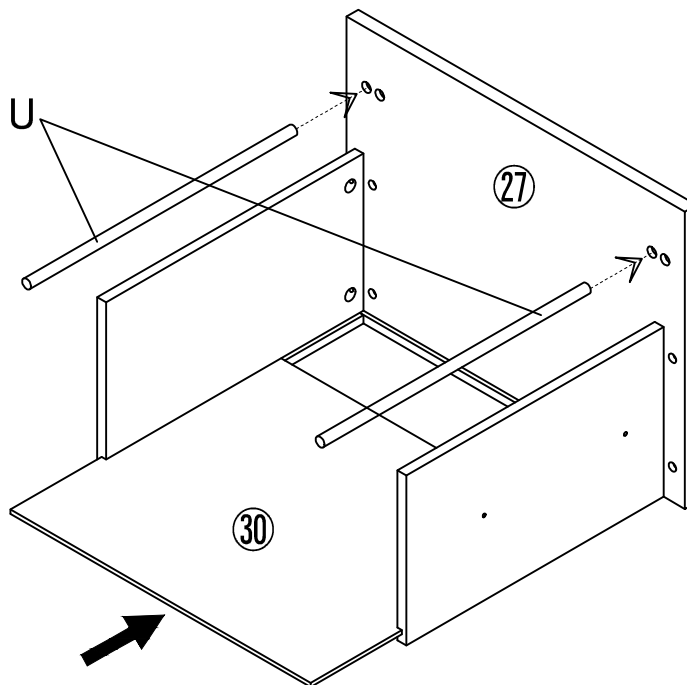


29


P×4




Use screws (P) for part ②⑧②⑨ as shown in the picture.

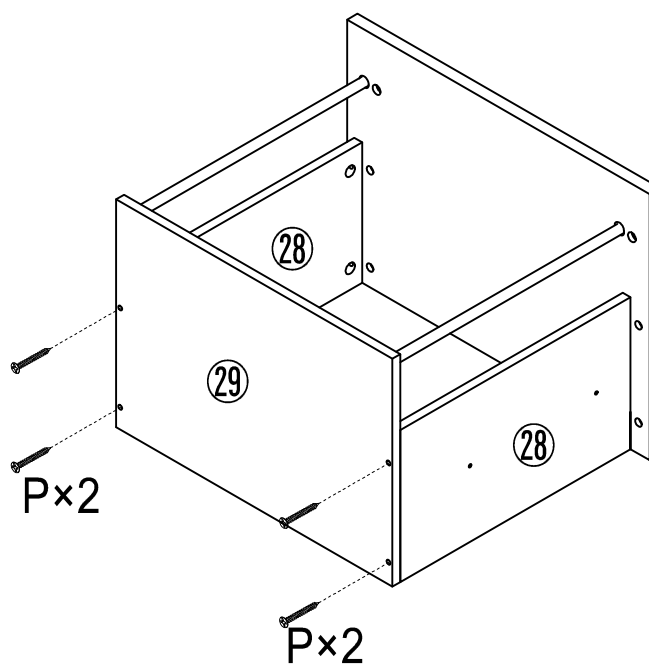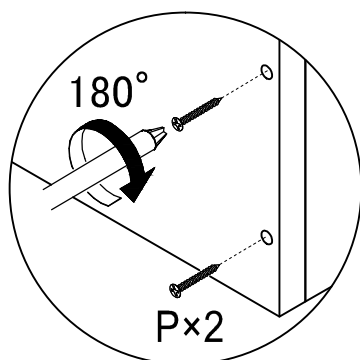

30


N×4 	R2×2 	
--	---	--

Befestigen Sie die Laufschiene R2 mit der Schraube (N) wie gezeigt an den Brettern (28)(28).

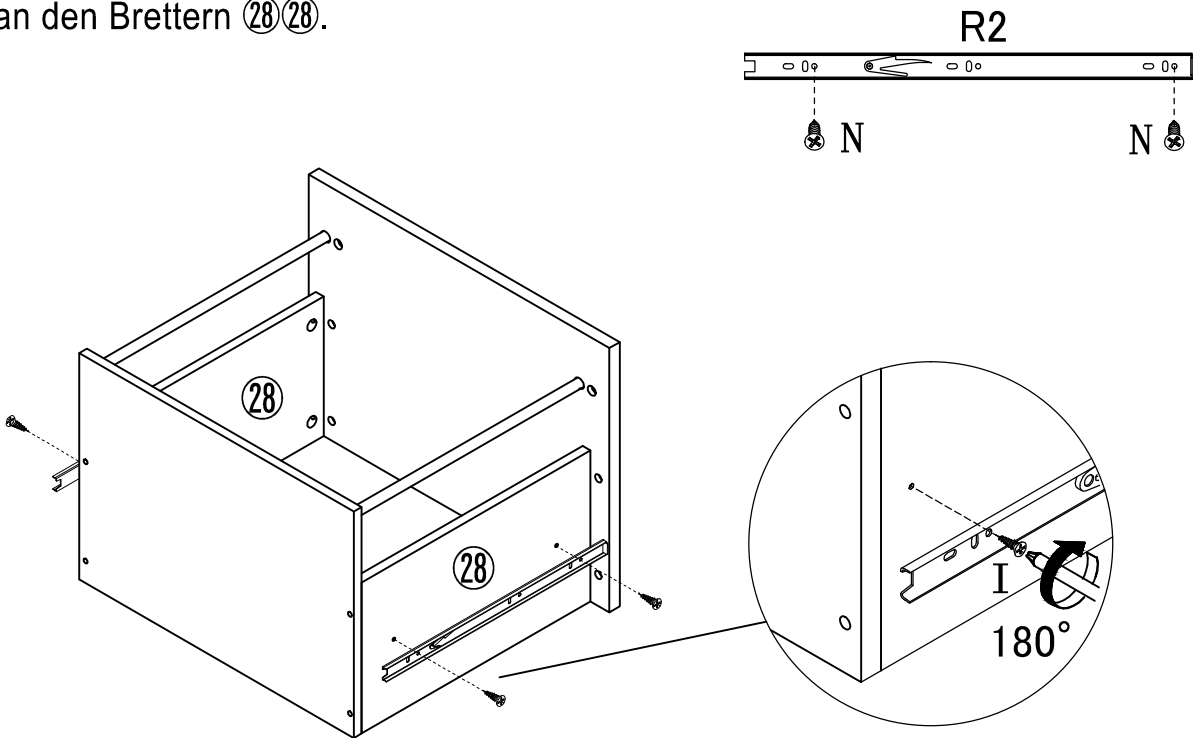


31

Schienen ausrichten, Schubladen wie gezeigt einschieben.


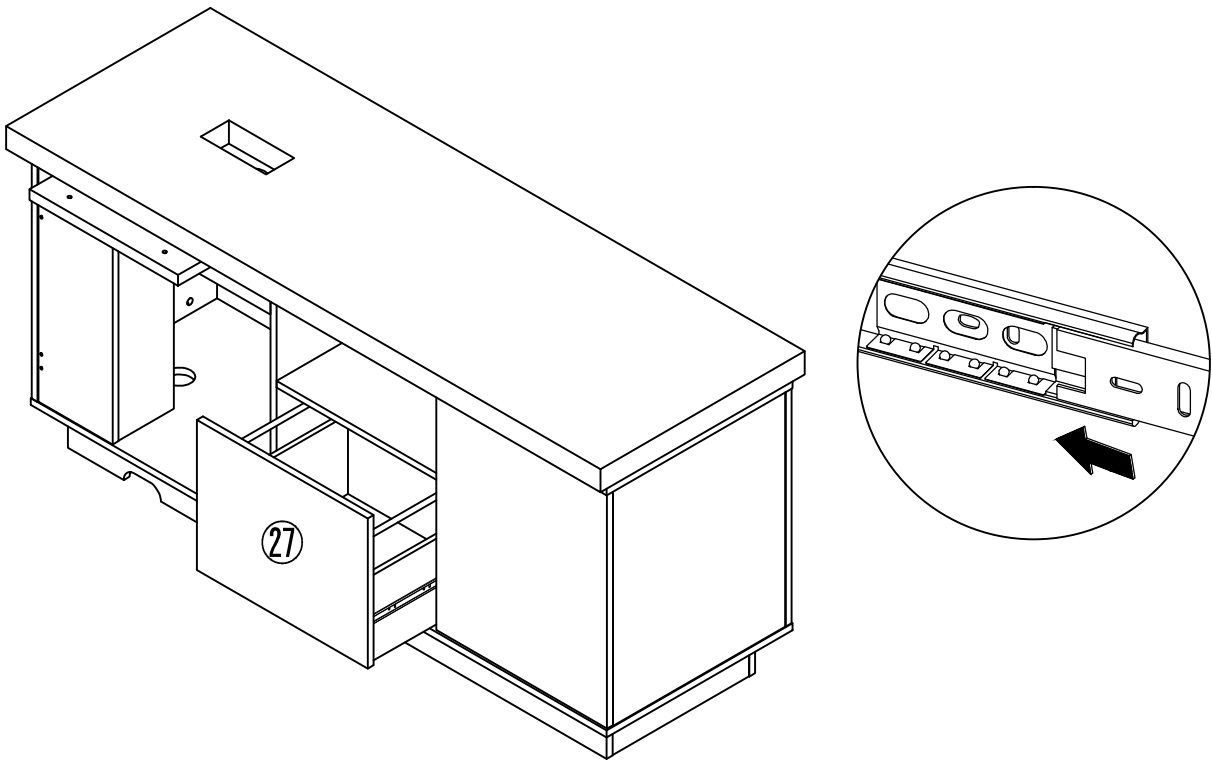


32

A×4




Use a screwdriver to screw the bolts (A) into Panel ⑧.


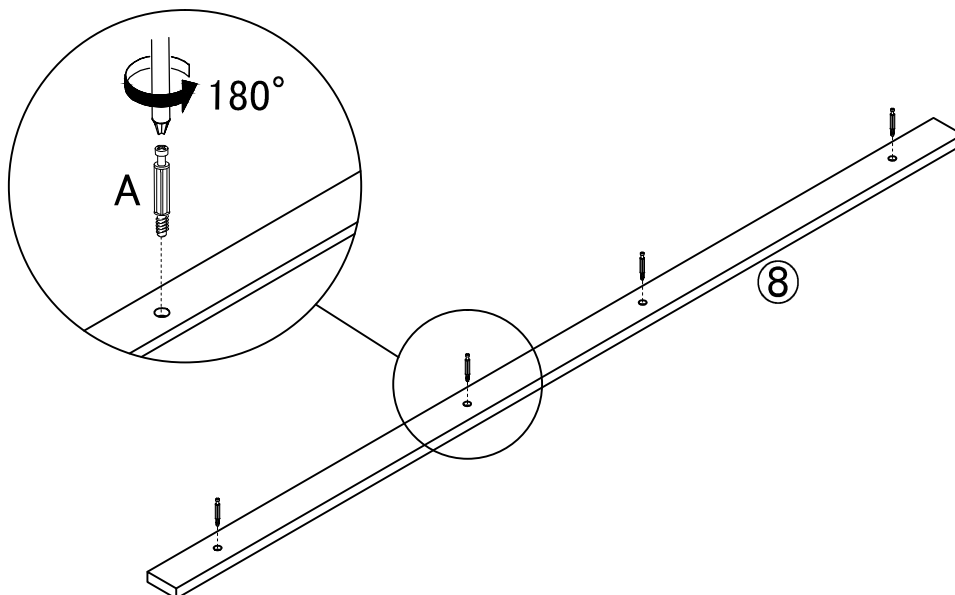
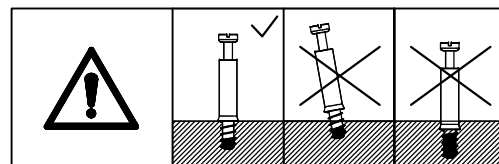


33

B×4

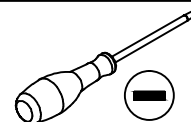


Align the holes in the Panels ⑧ with the holes in Panels ④. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

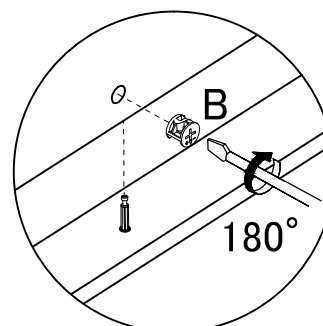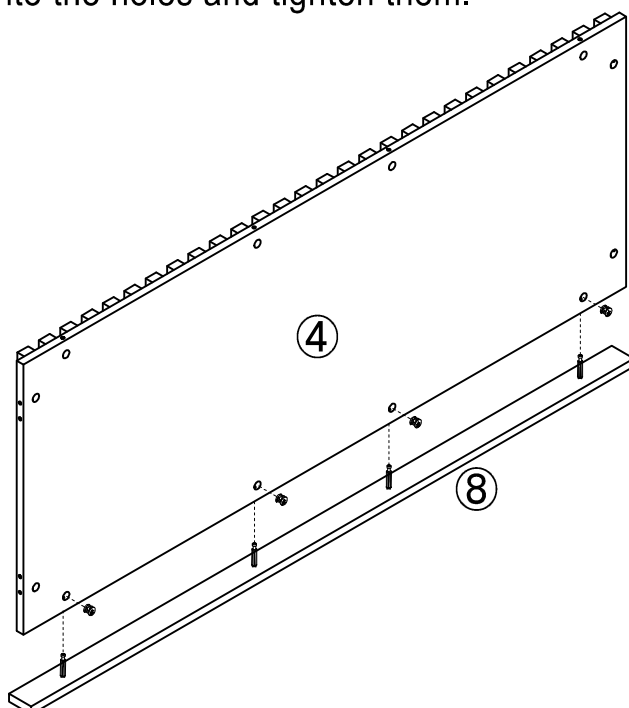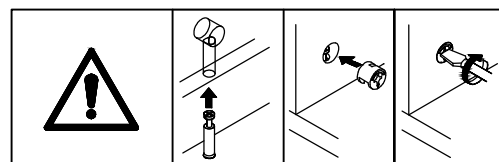


34

P×2




Use screws (P) for part ⑥⑦ as shown in the picture.


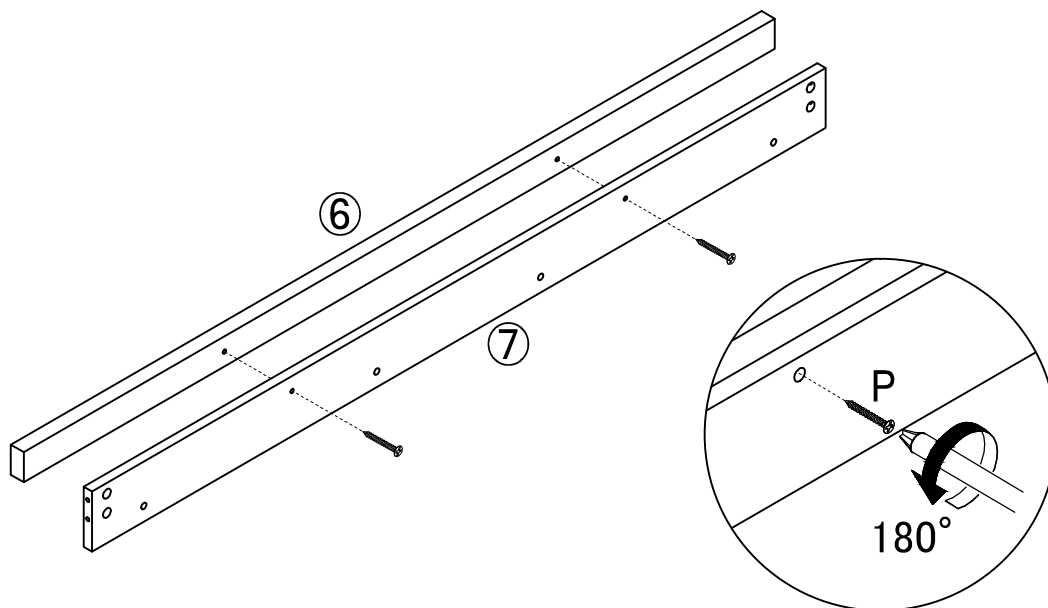


35

A×4




Use a screwdriver to screw the bolts (A) into Panel ⑦.


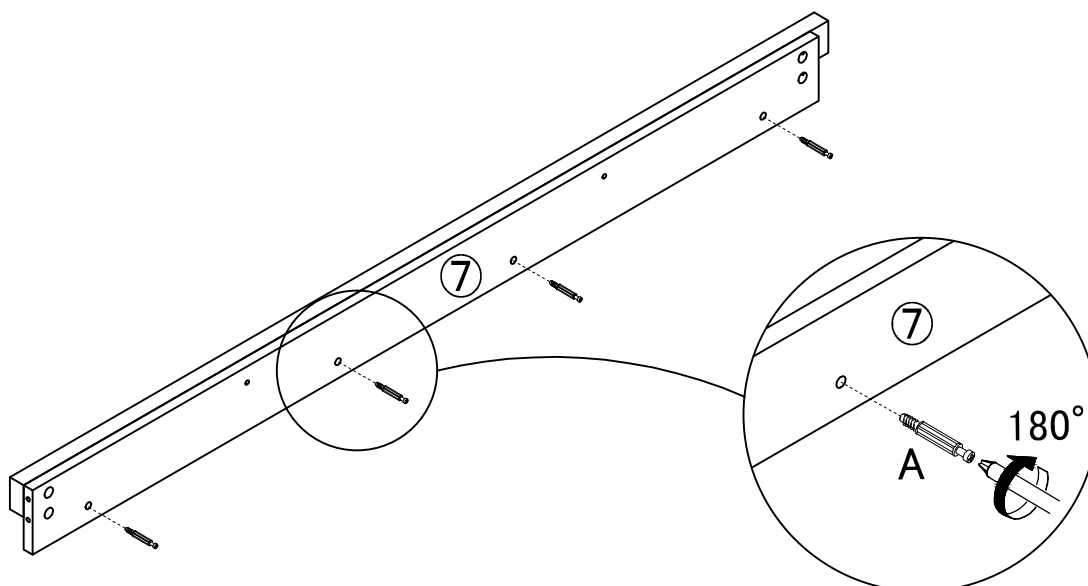
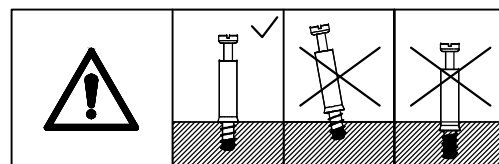


36

B×4

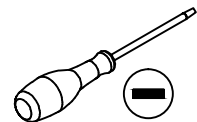

Align the holes in the Panel ④ with the holes in Panels ⑦. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

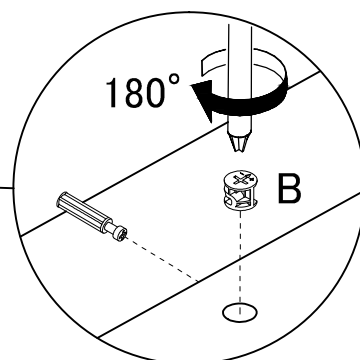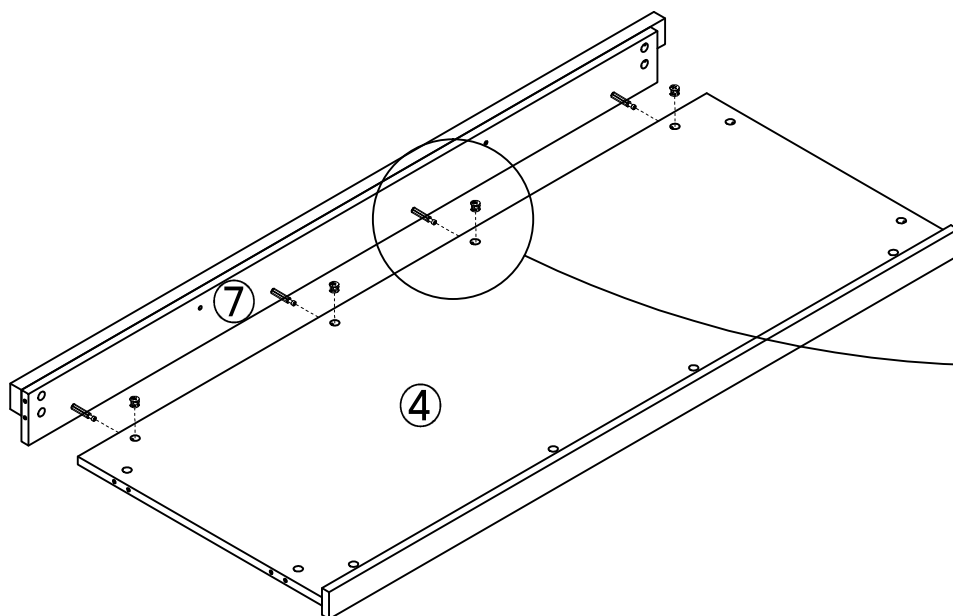
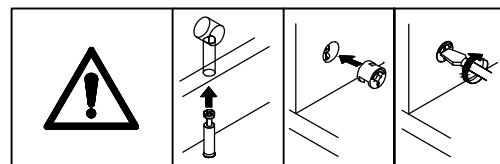


37




A×2



C×2




Insert the wooden dowels (C) halfway into Panel ③, and then use a screwdriver to screw the bolts (A) into Panels ③. Be careful not to use the wrong holes.

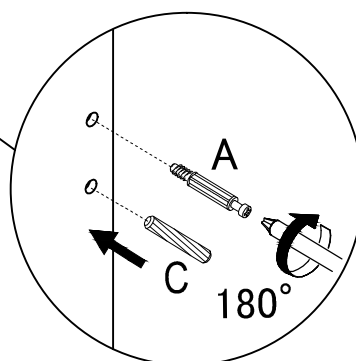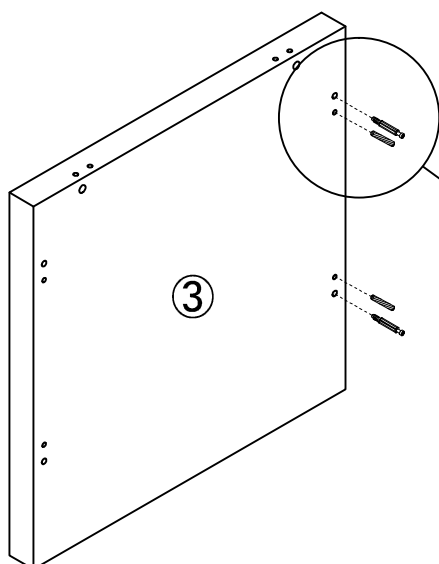
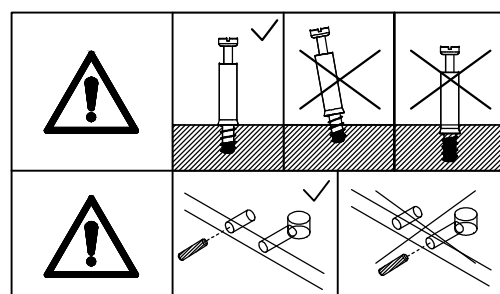


38

B×2

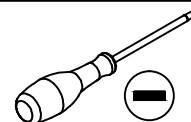

Align the holes in the Panel ④ with the holes in Panels ③. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

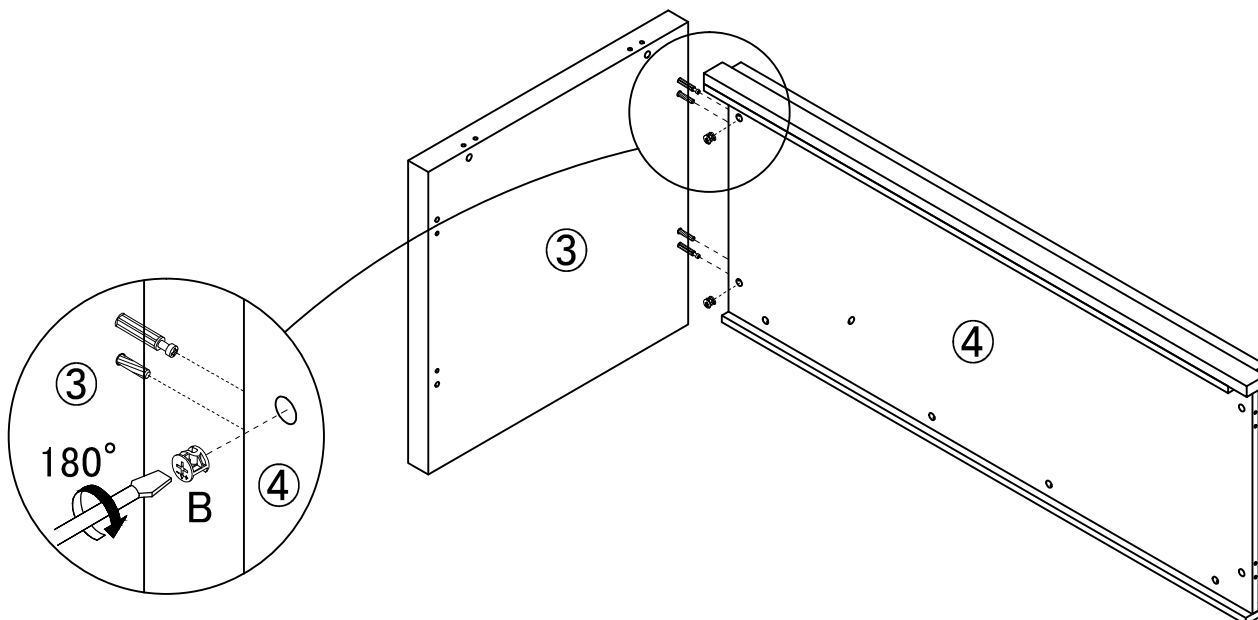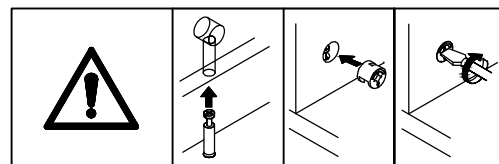


39



A×2



C×2




Insert the wooden dowels (C) halfway into Panel ②②, and then use a screwdriver to screw the bolts (A) into Panels ②②. Be careful not to use the wrong holes.


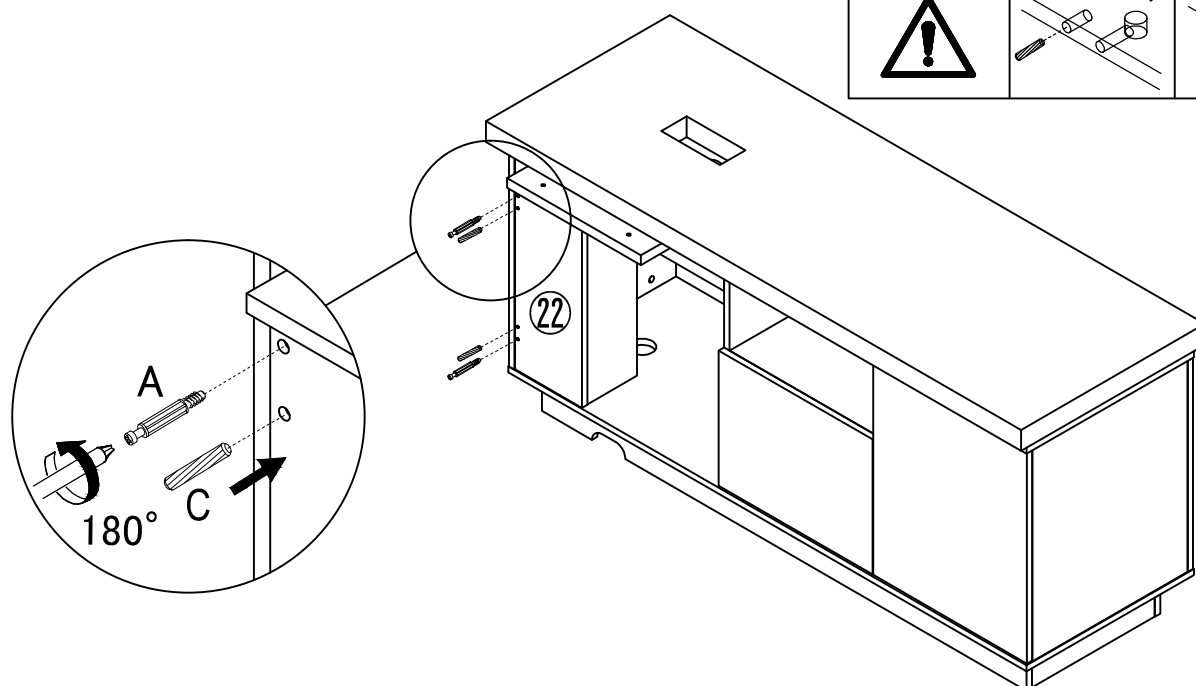
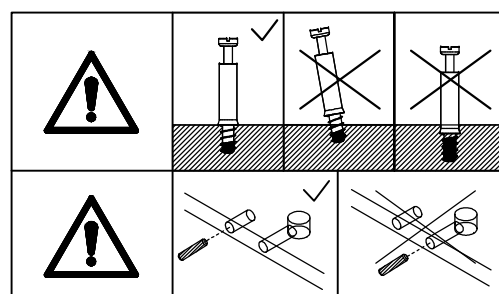


40

B×2

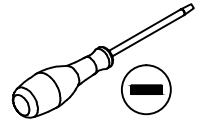


Align the holes in the Panel ②② with the holes in Panels ④. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

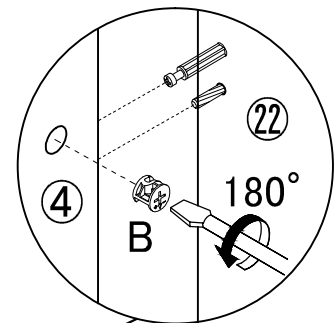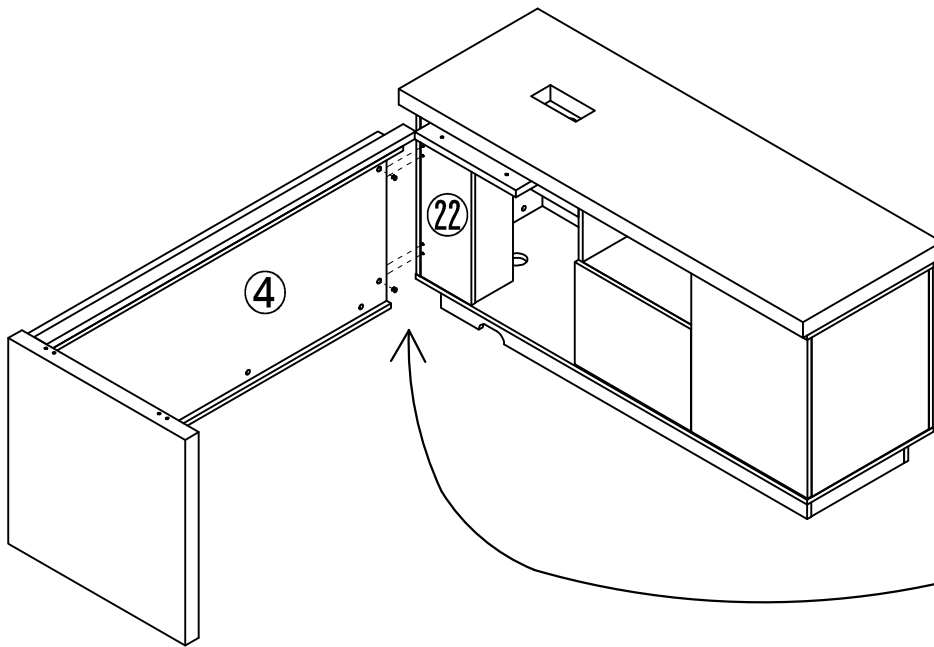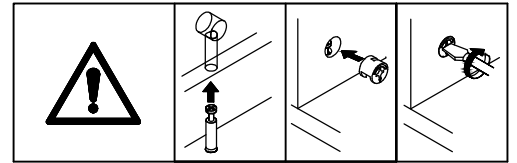


41

H×4



Insert the wooden dowels (H) halfway into Panel ① ②.

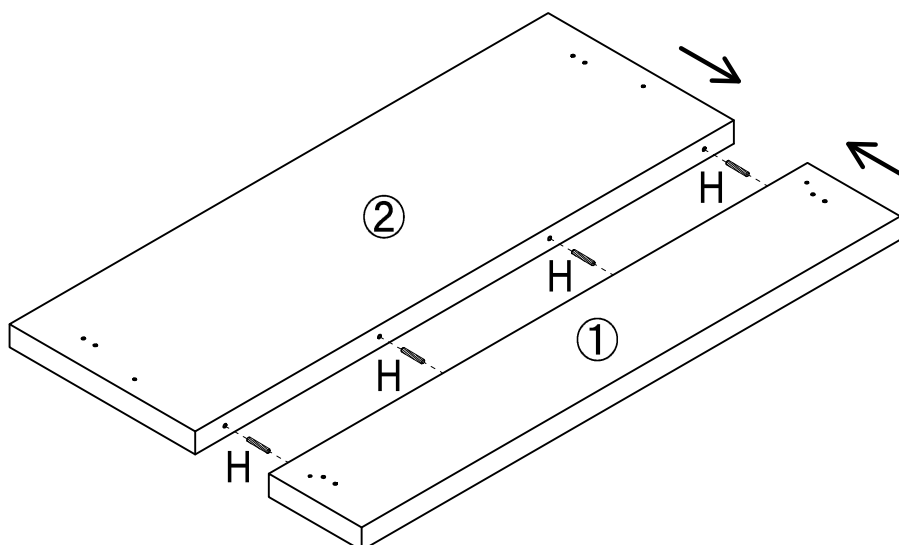

42

A×2





C×2



O×16







Y×2




Insert the wooden dowels (C) halfway into Panel ③, and then use a screwdriver to screw the bolts (A) into Panels ③. Be careful not to use the wrong holes.

Use screws (P) for part ⑳㉔㉕ as shown in the picture.

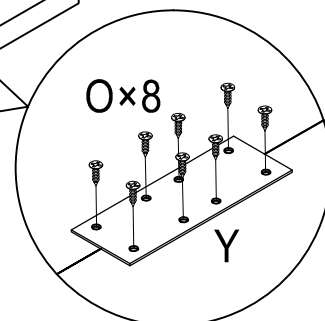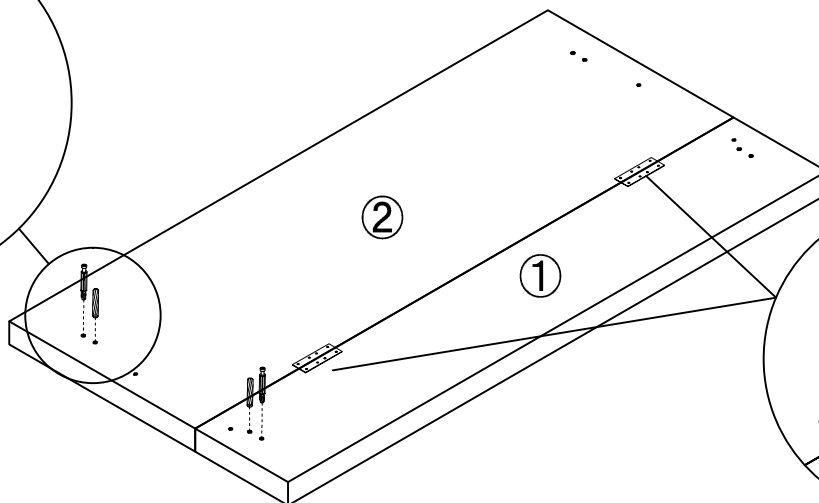
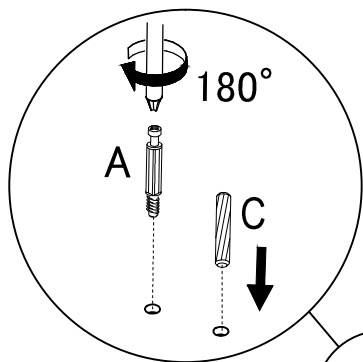
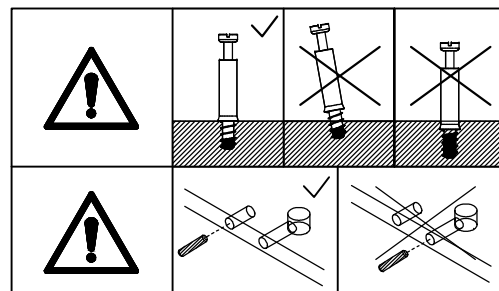


43

B×2

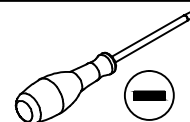

Align the holes in the Panel ①② with the holes in Panels③. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

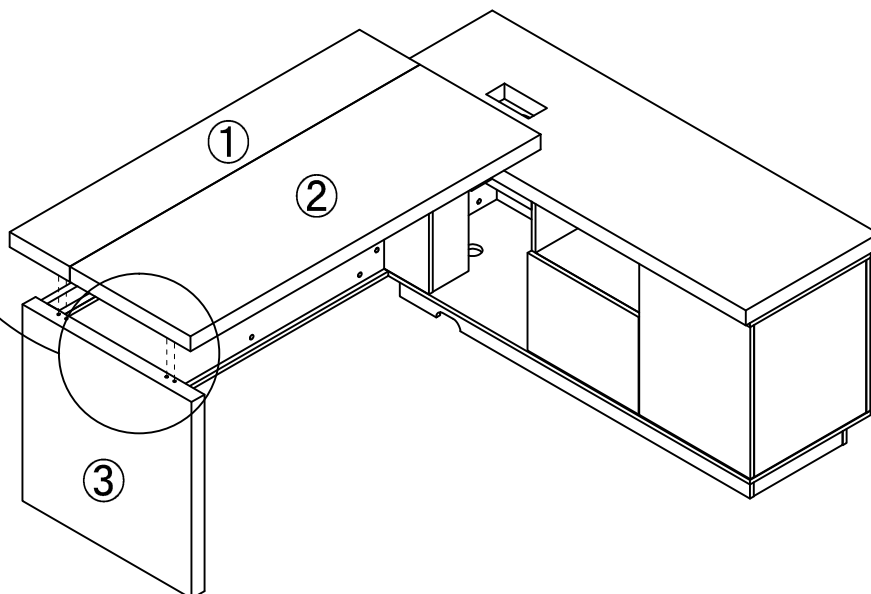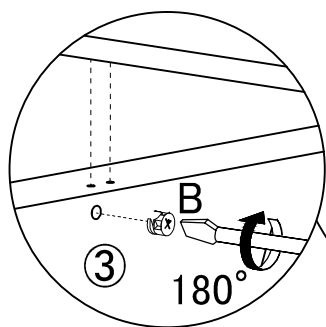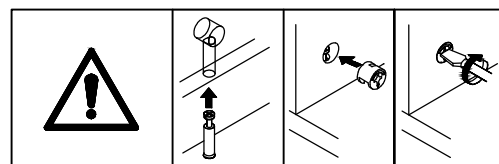


44

J×2



Use screws (J) for part ①②⑮ as shown in the picture.

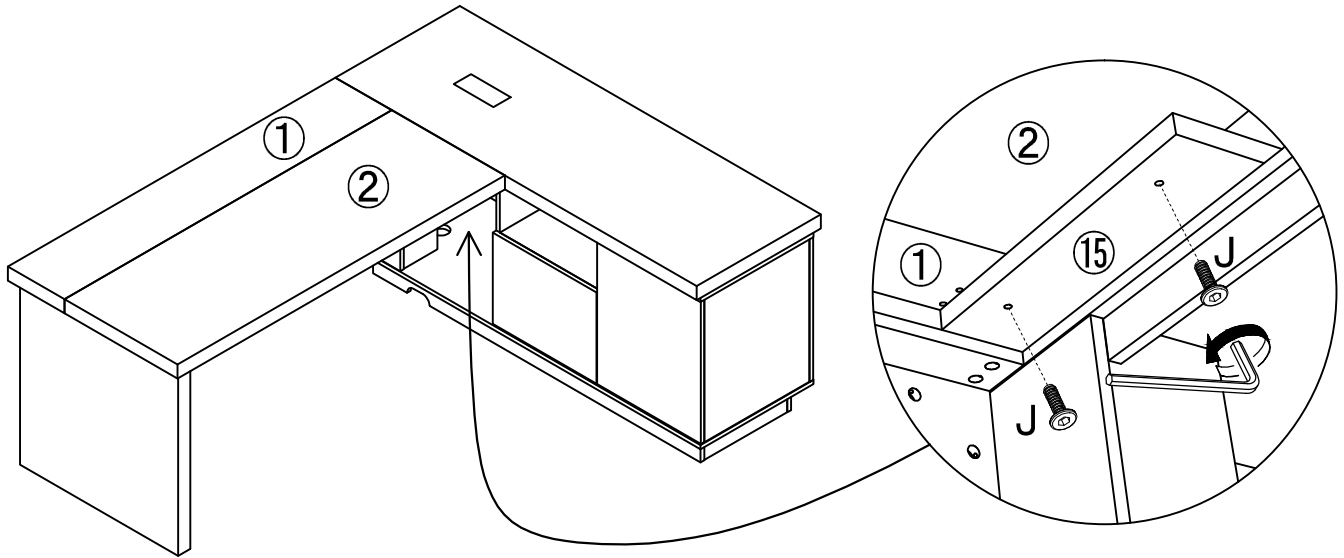

45

V×1



Install socket (V) as shown in the picture.

