

**ATTENTION: DO NOT RETURN THIS PRODUCT!!!
PLEASE READ THE FOLLOWING!!!**


















**NOTICE REGARDING HIGH GLOSS
PROTECTIVE FOIL AND PRODUCT CARE:**

After removing the protective foil from the gloss fronts, the acrylic surface of the boards is still soft and easy to scratch. With air contact, the hygroscopic acrylic layer hardens, and the board becomes more resistant to scratches. It takes approximately 48 hours for the acrylic layer of the board to fully harden.

Replacement parts are shipped out in one business day. You will receive a tracking number via email once your parts request has been processed.



**DO NOT CLEAN, WIPE, OR POLISH THE
ACRYLIC FRONTS FOR 48 HOURS AFTER
REMOVING THE PROTECTIVE FOIL!!!**




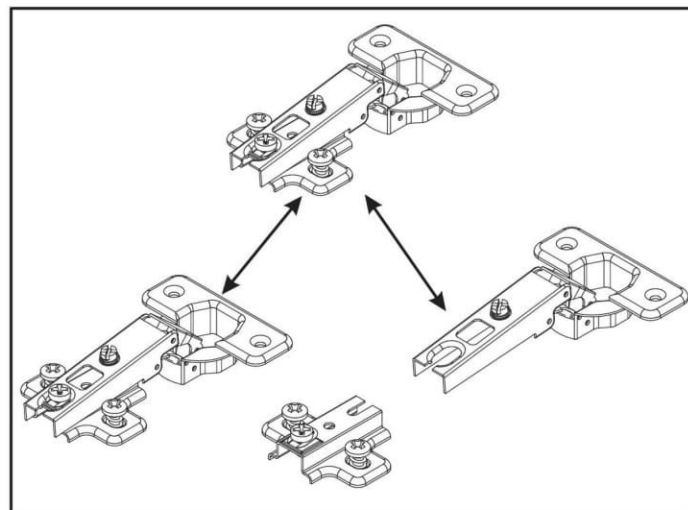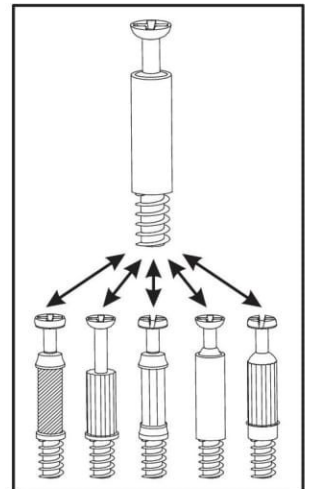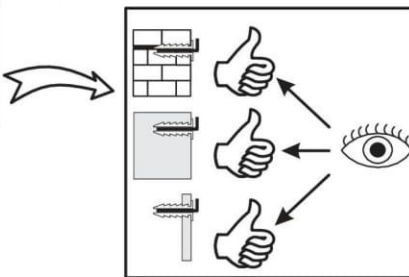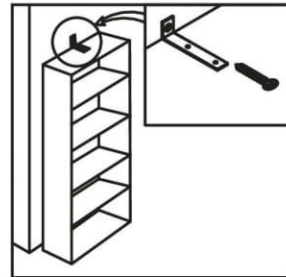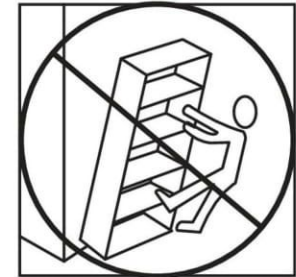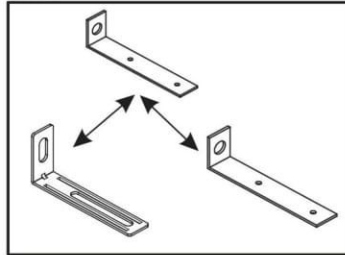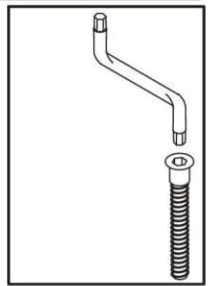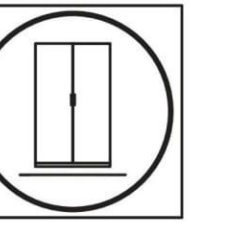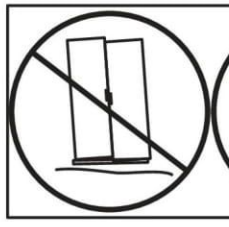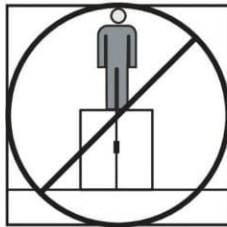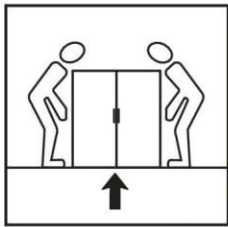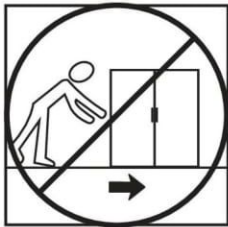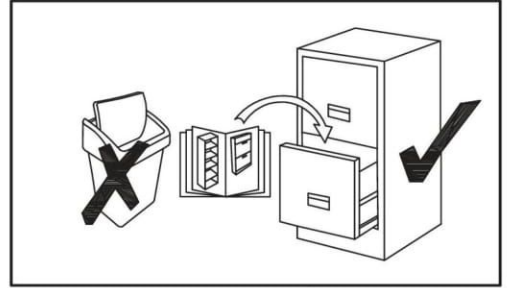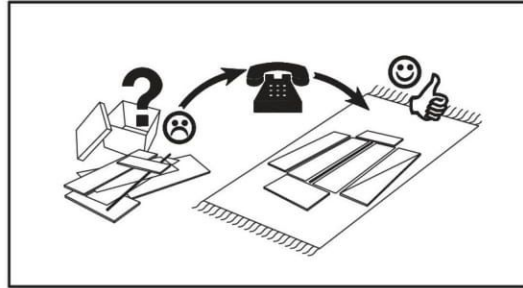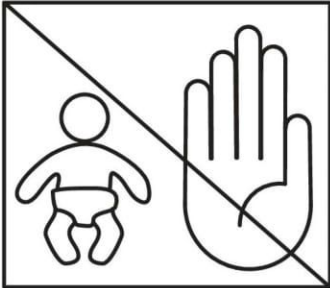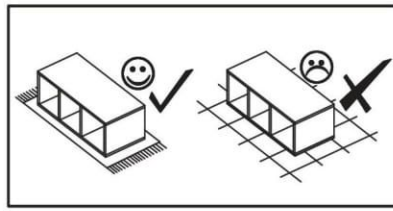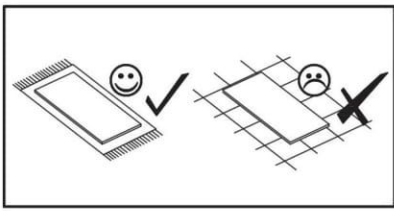


SIDEBOARD

 15 kg

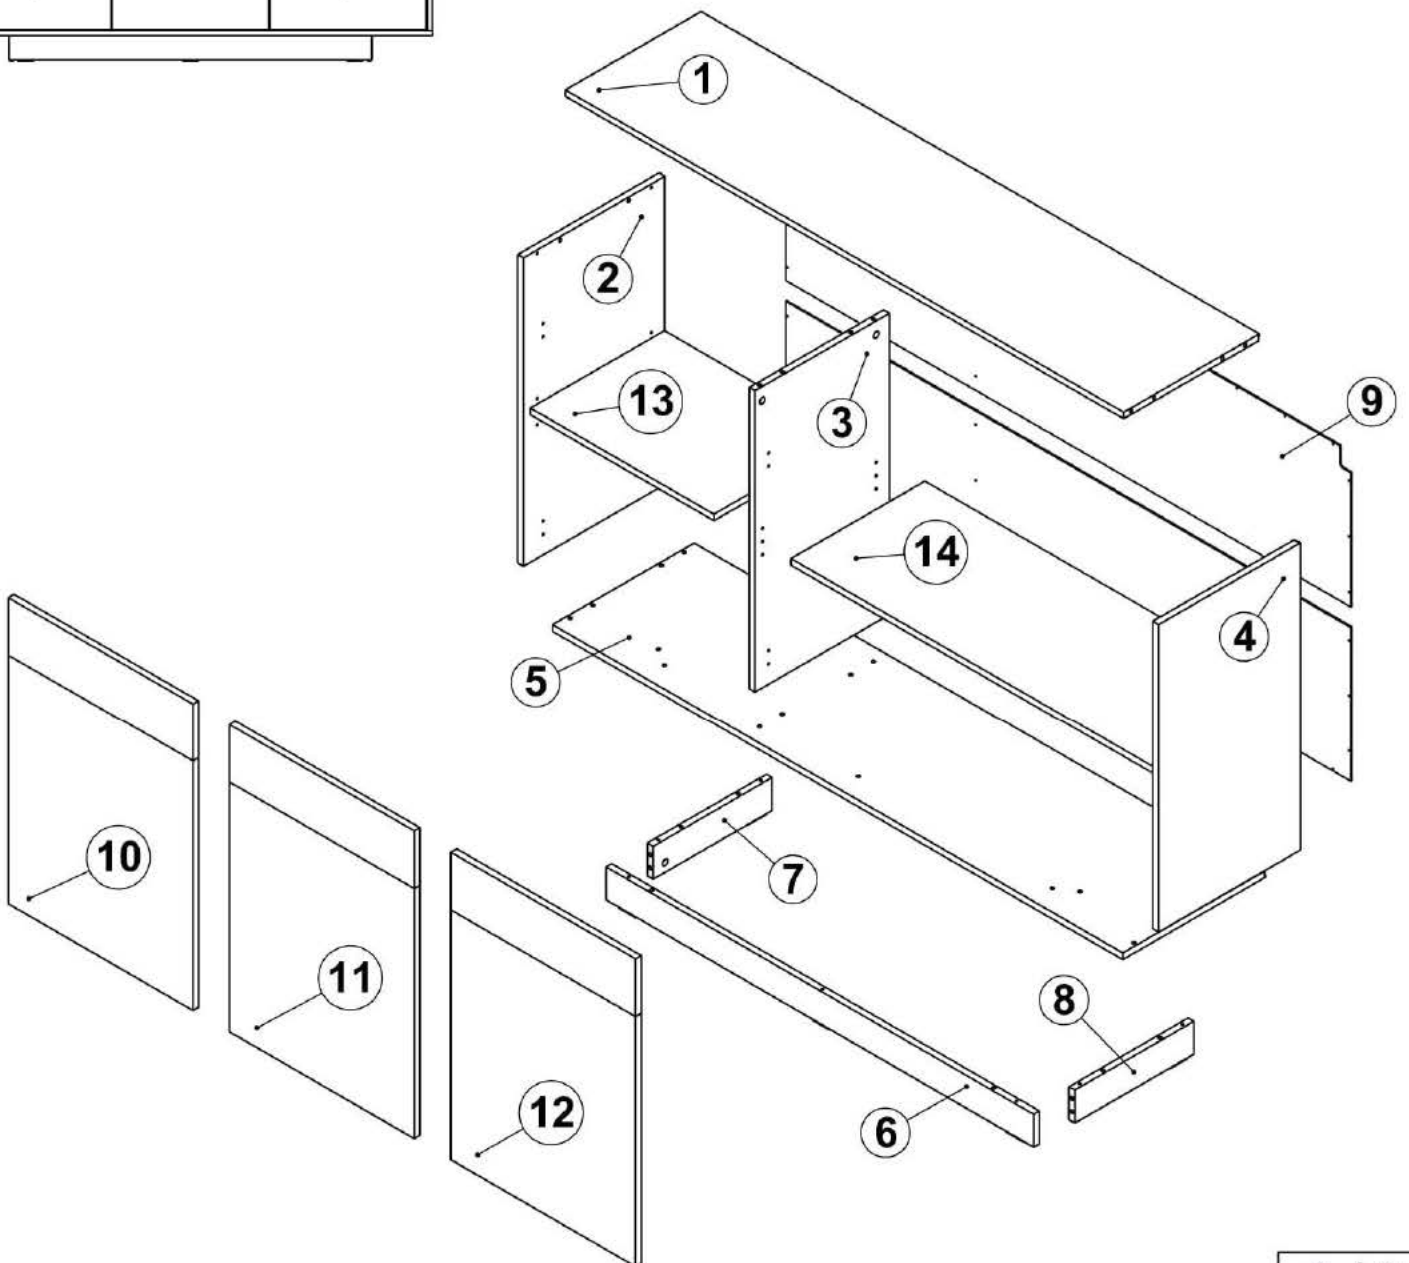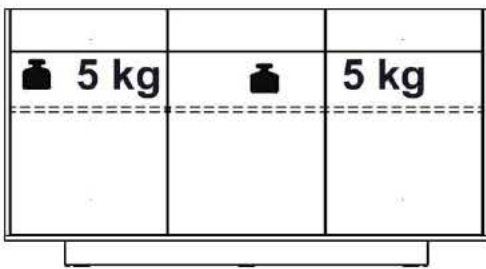


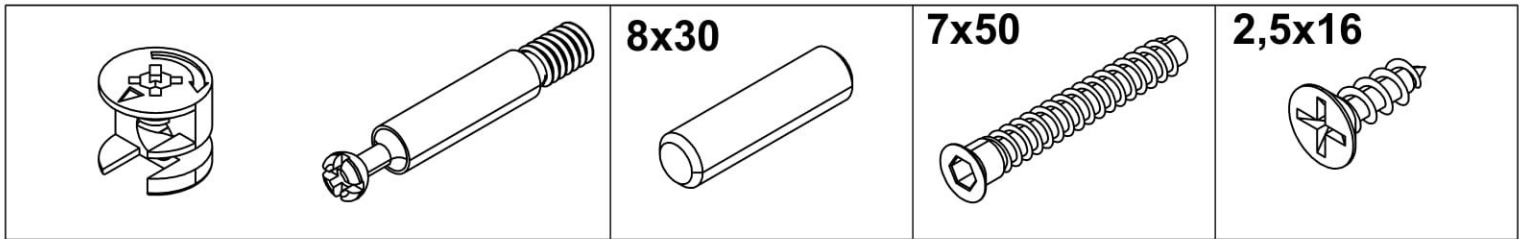


A x 8	B x 8	C x 20	D x 13	E x 42
--------------	--------------	---------------	---------------	---------------

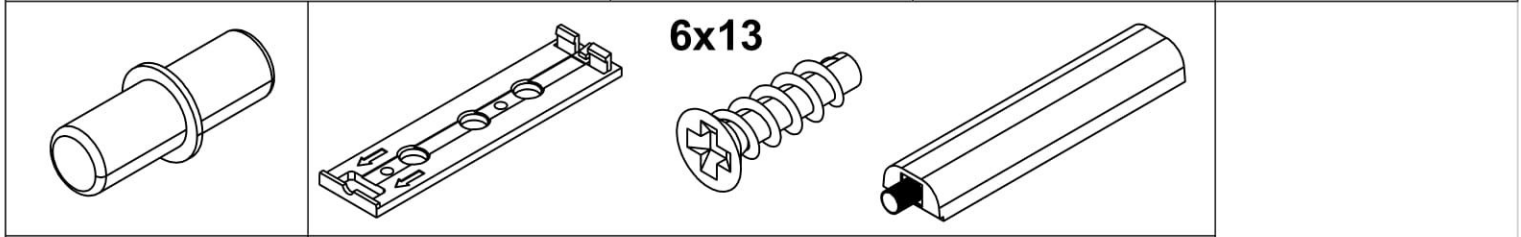


F x 8	H1 x 3	H2 x 6	H3 x 3
--------------	---------------	---------------	---------------

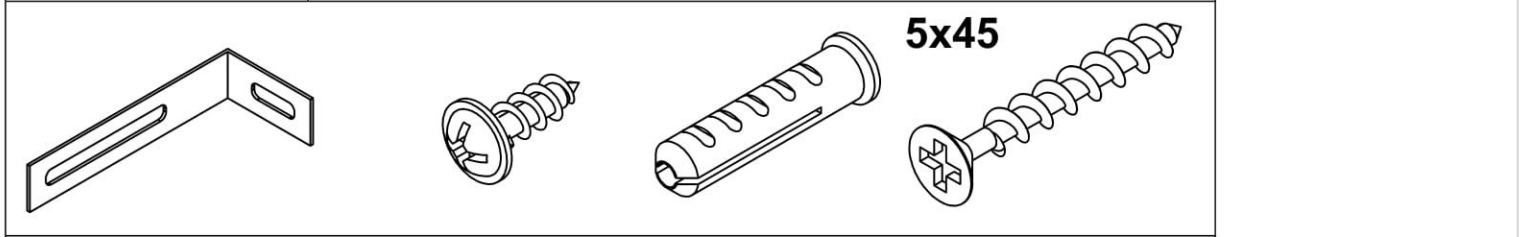

I1 x 2	I2 x 2	I3 x 2	I4 x 2
---------------	---------------	---------------	---------------

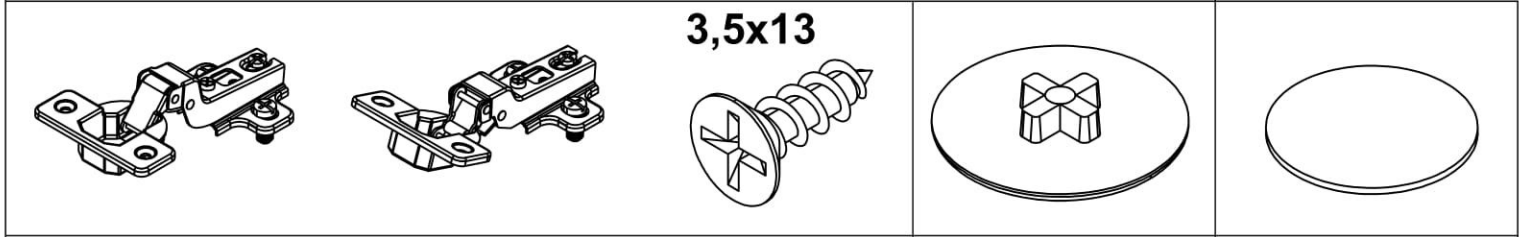

J x 4	K x 2	L x 12	M x 6	N x 7
--------------	--------------	---------------	--------------	--------------

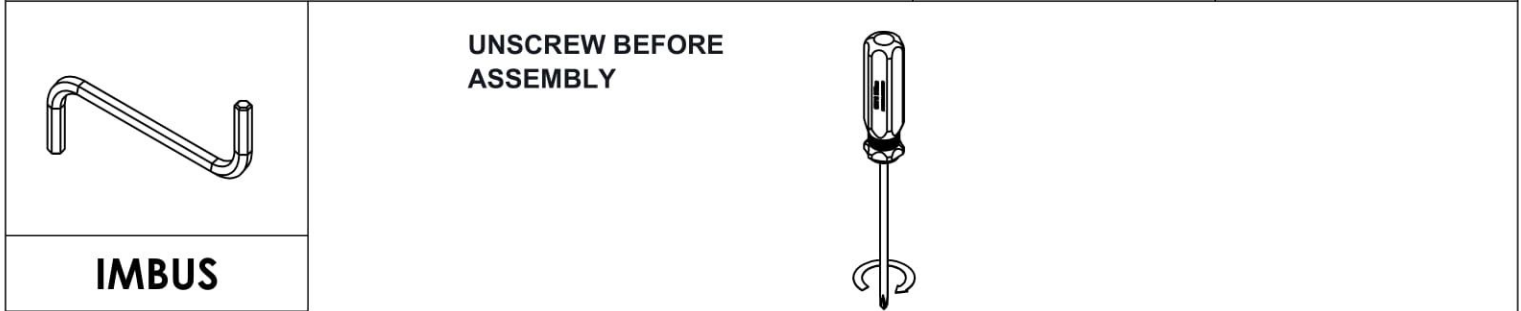






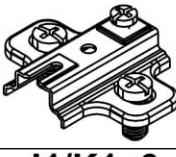
UNSCREW BEFORE ASSEMBLY








J2/K2

J1/K1




60 MIN.

STEP - 1

					
Ax8	Bx8	Cx20	H1x3	H2x6	J1/K1x6

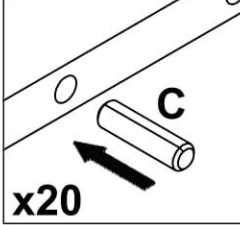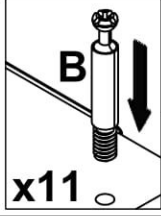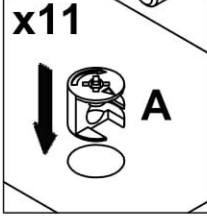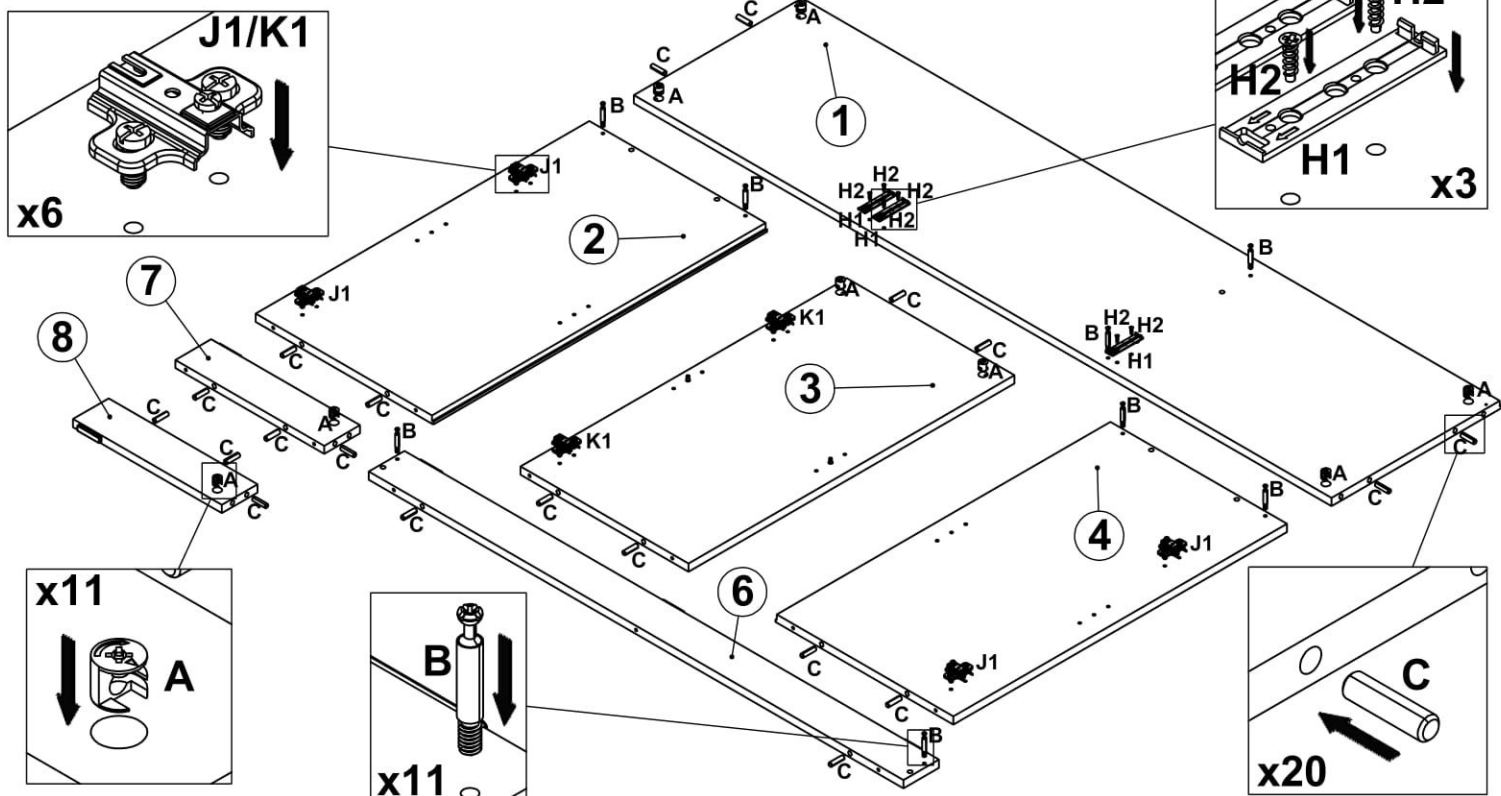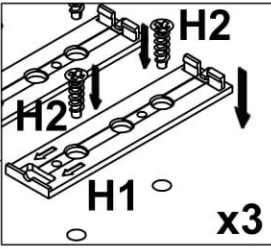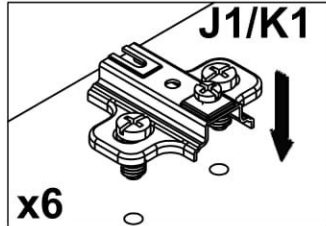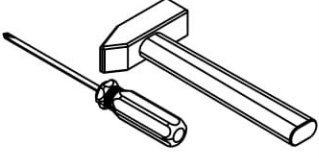

STEP - 2

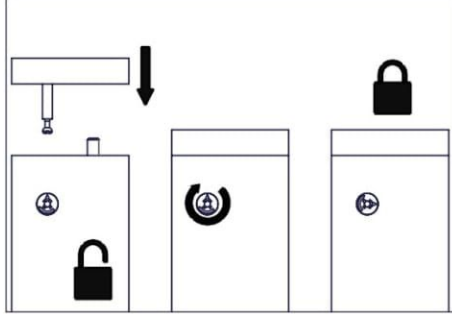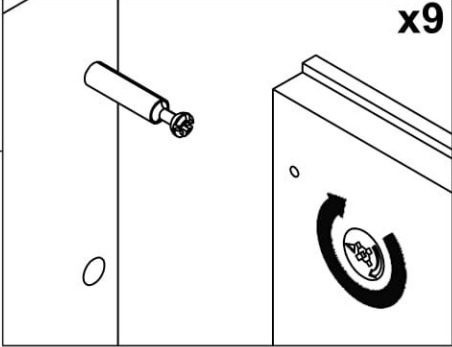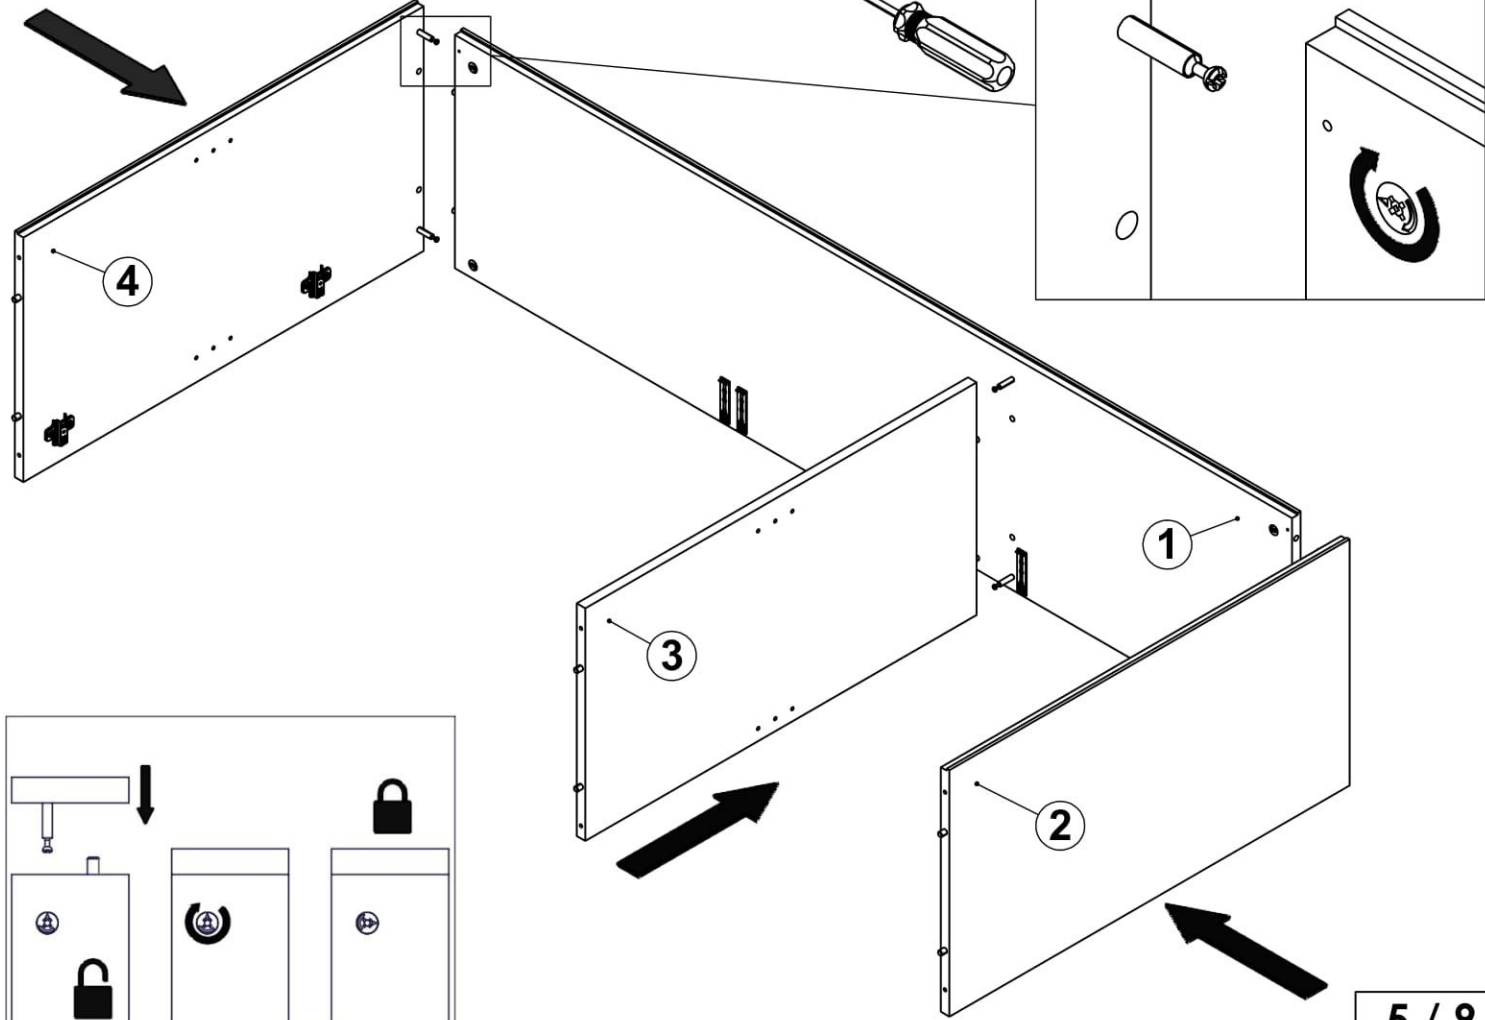


STEP - 3


7x50




Dx6

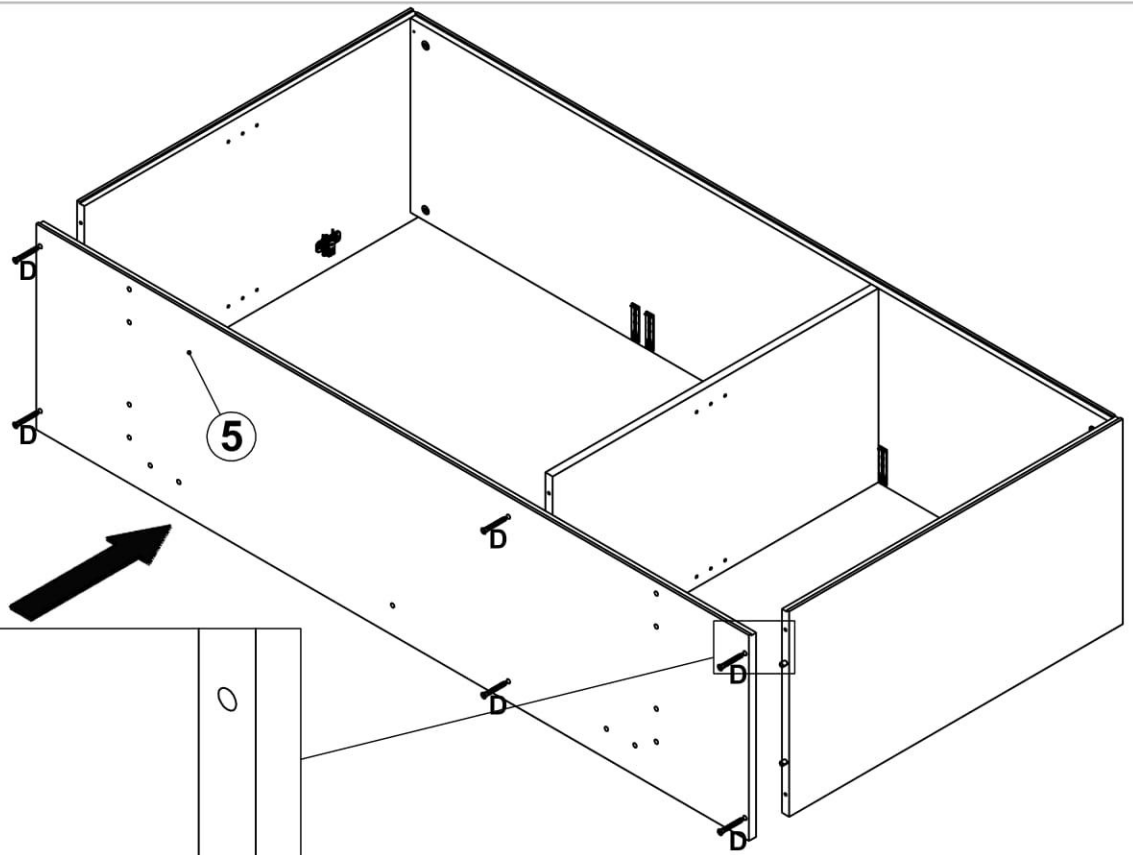


x9

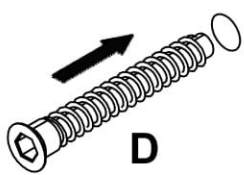


STEP - 4

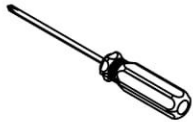


8

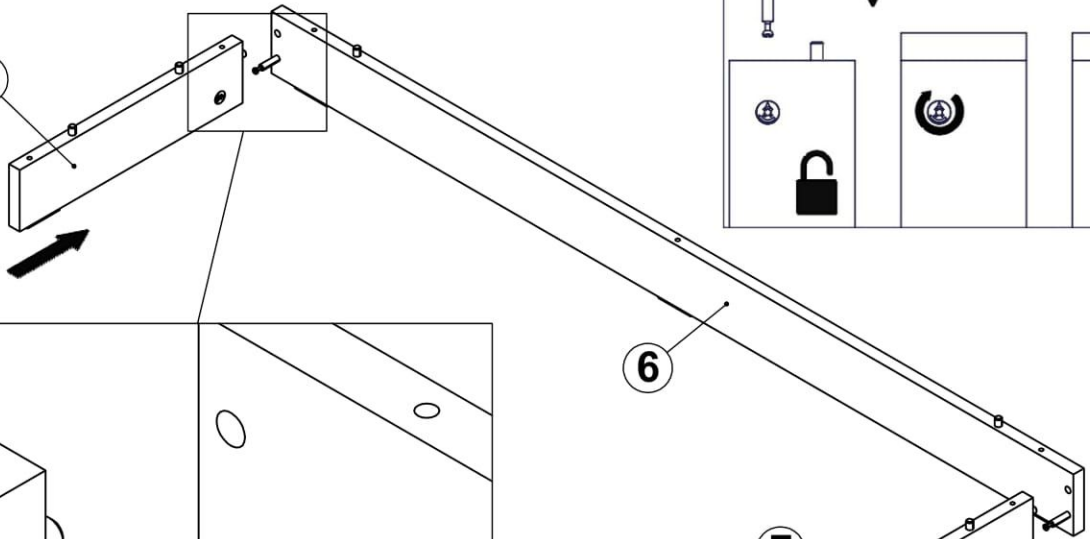


x2

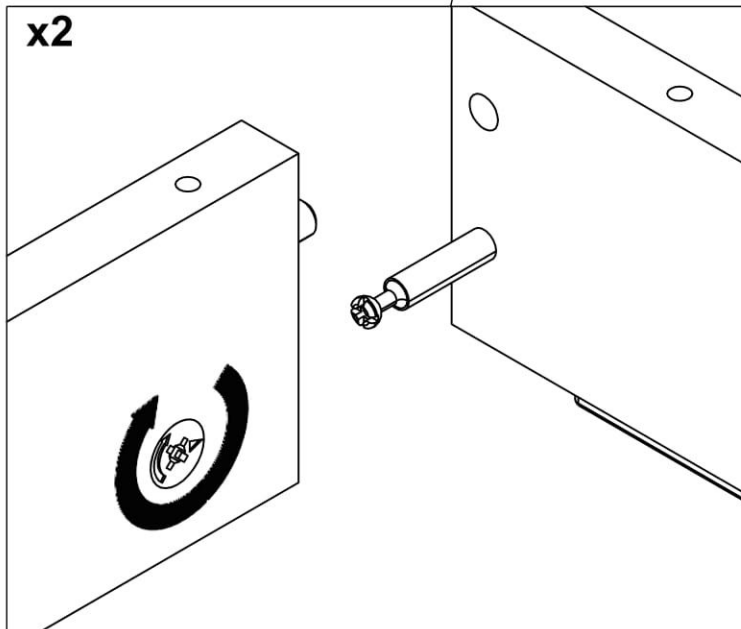

STEP - 7



Fx8



H3x3




I1x2



I2x2




Mx6


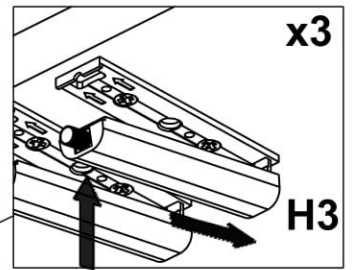


x3

H3

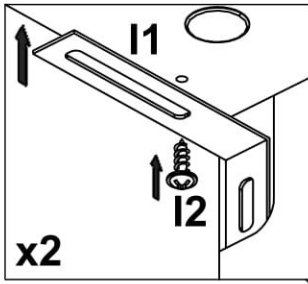


x2

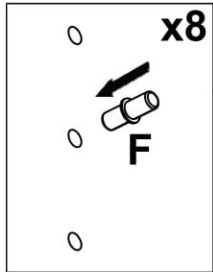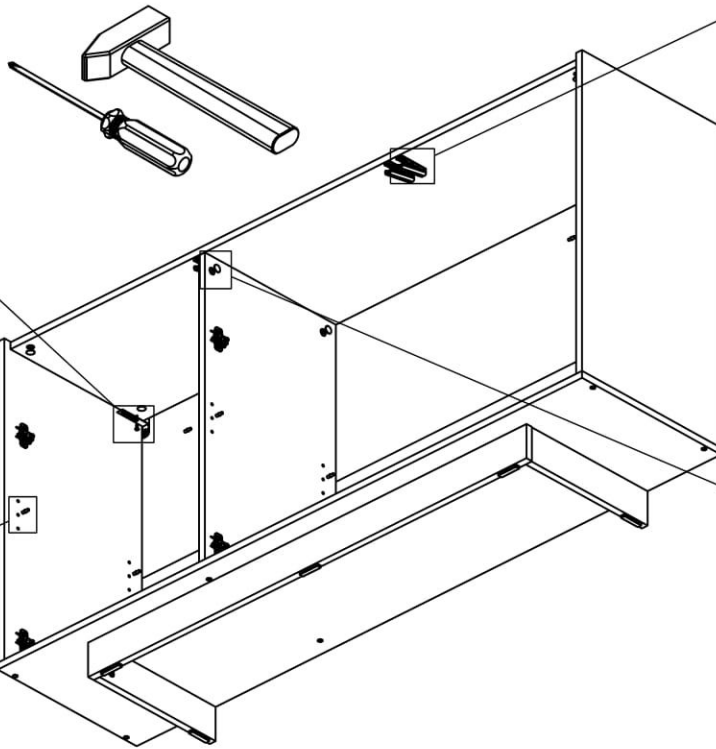

x8

F

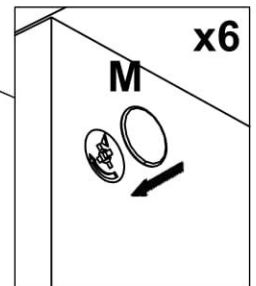

x6

M


STEP - 8



J2x4




K2x2


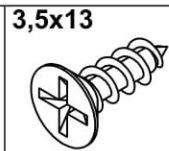


3,5x13


Lx12

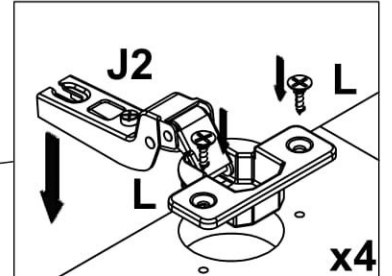

x4

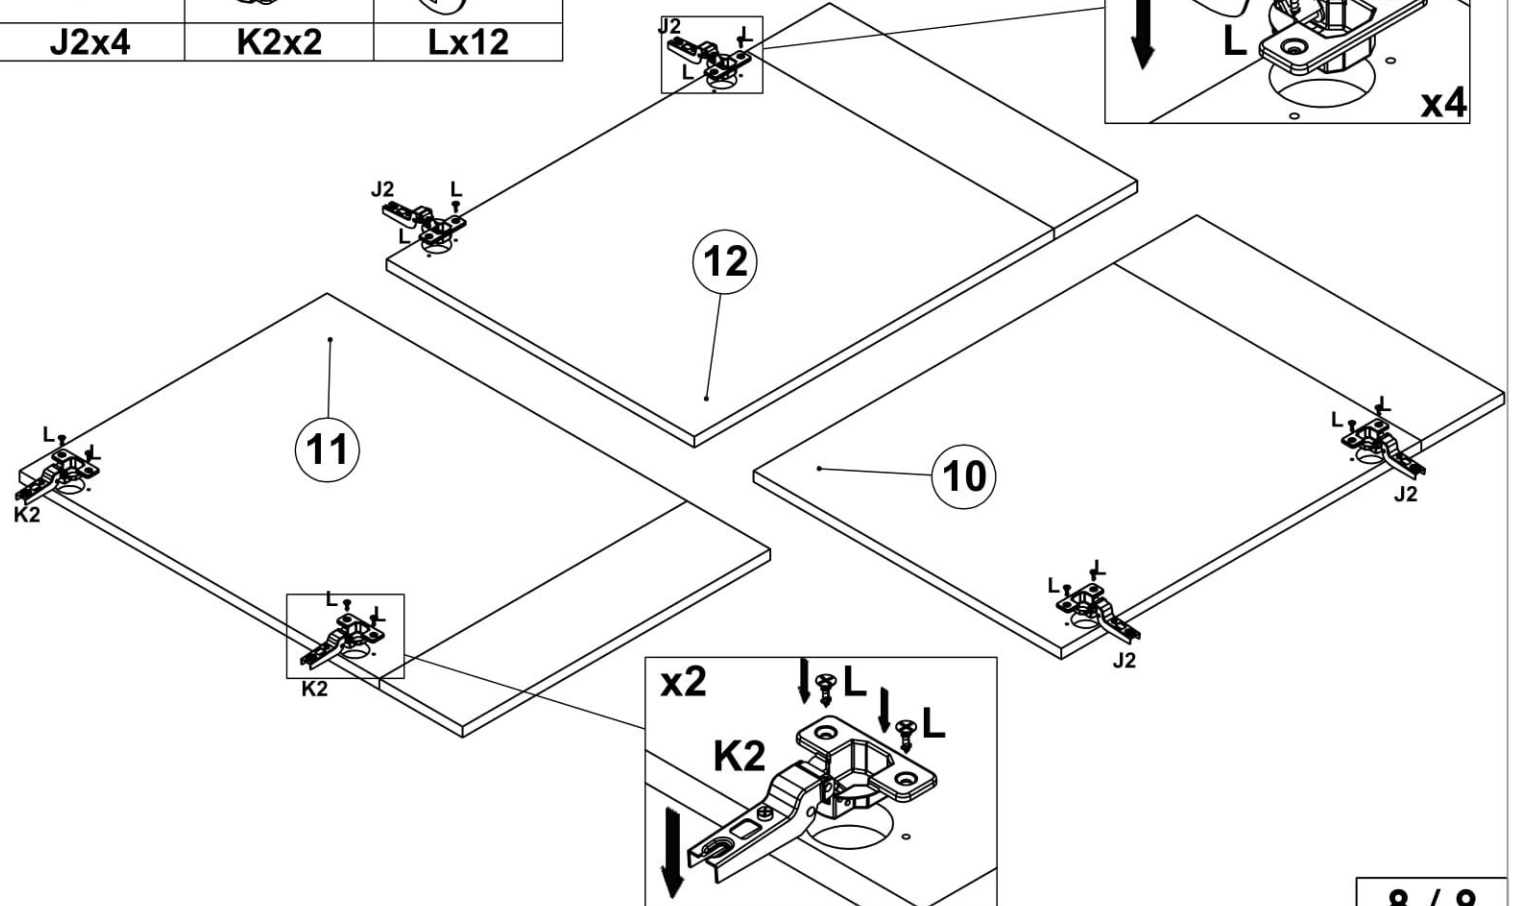


12




11

10



K2

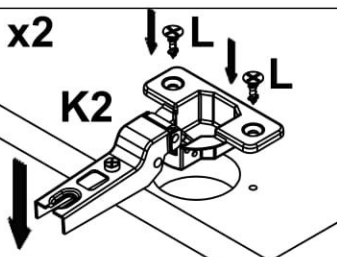

x2


K2

STEP - 9

!!! ATTENTION !!!



Nx7

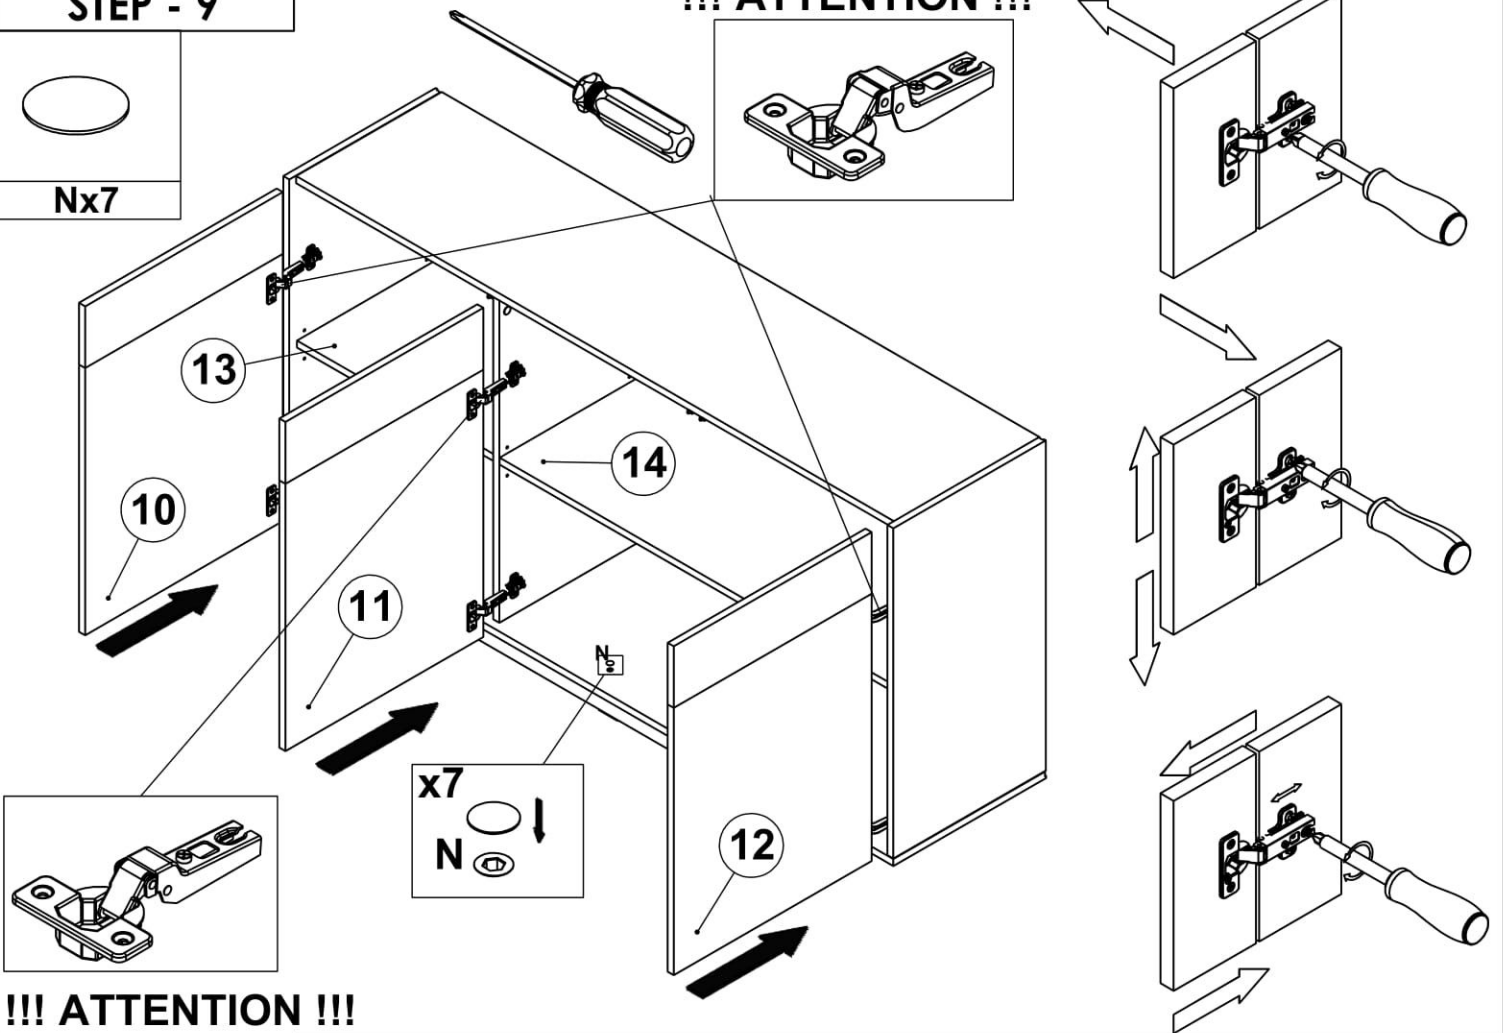

!!! ATTENTION !!!

STEP - 10




13x2

5x45



14x2

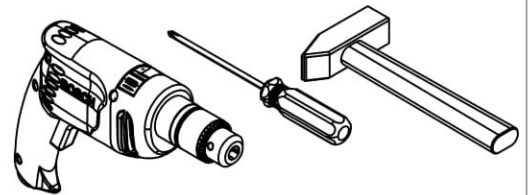

x2

