




1

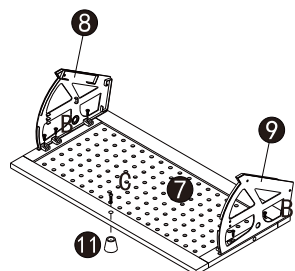


Fix handle 11 to door 7 with screw C
Attach side plate 8 and side plate 9
to door 7 with screw B

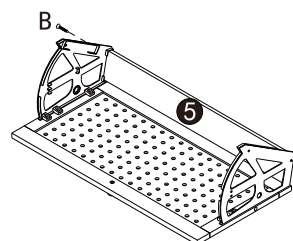

Fix the laminate 5
with screw B

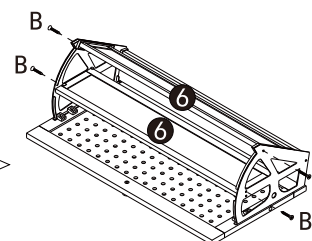


Fix the laminate 6
with screw B

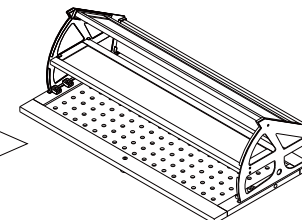


OK

2

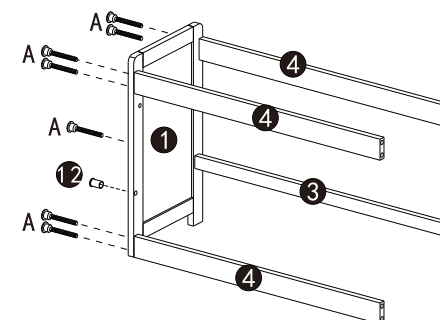


Fix wide bar 4 and narrow
bar 3 with screw A
Put the smooth interface 12 into the hole

3

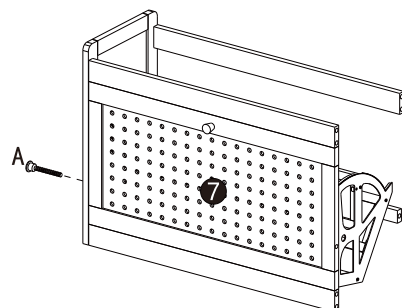



Screw A is screwed on the
door through the smooth interface

4

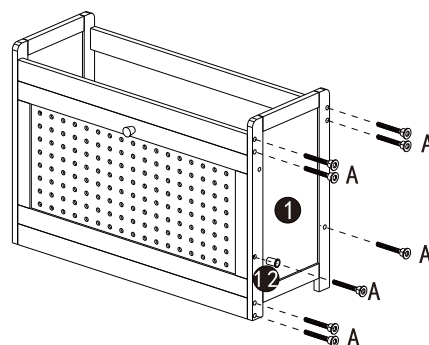


Fix the other bracket 1 with screw
A One of them is again screwed to the
door with screw A through the smooth joint 12

5

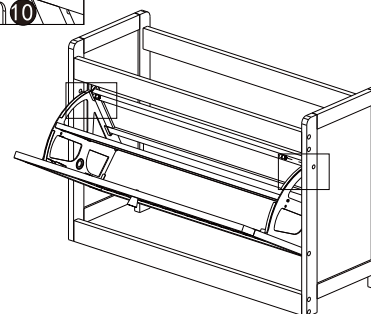

Insert iron pin 10 into the
holes of both brackets

6

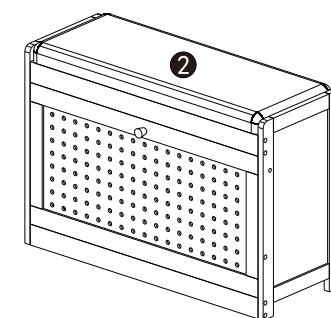

Put on the bench surface and
the installation is complete