












Installation & Assembly

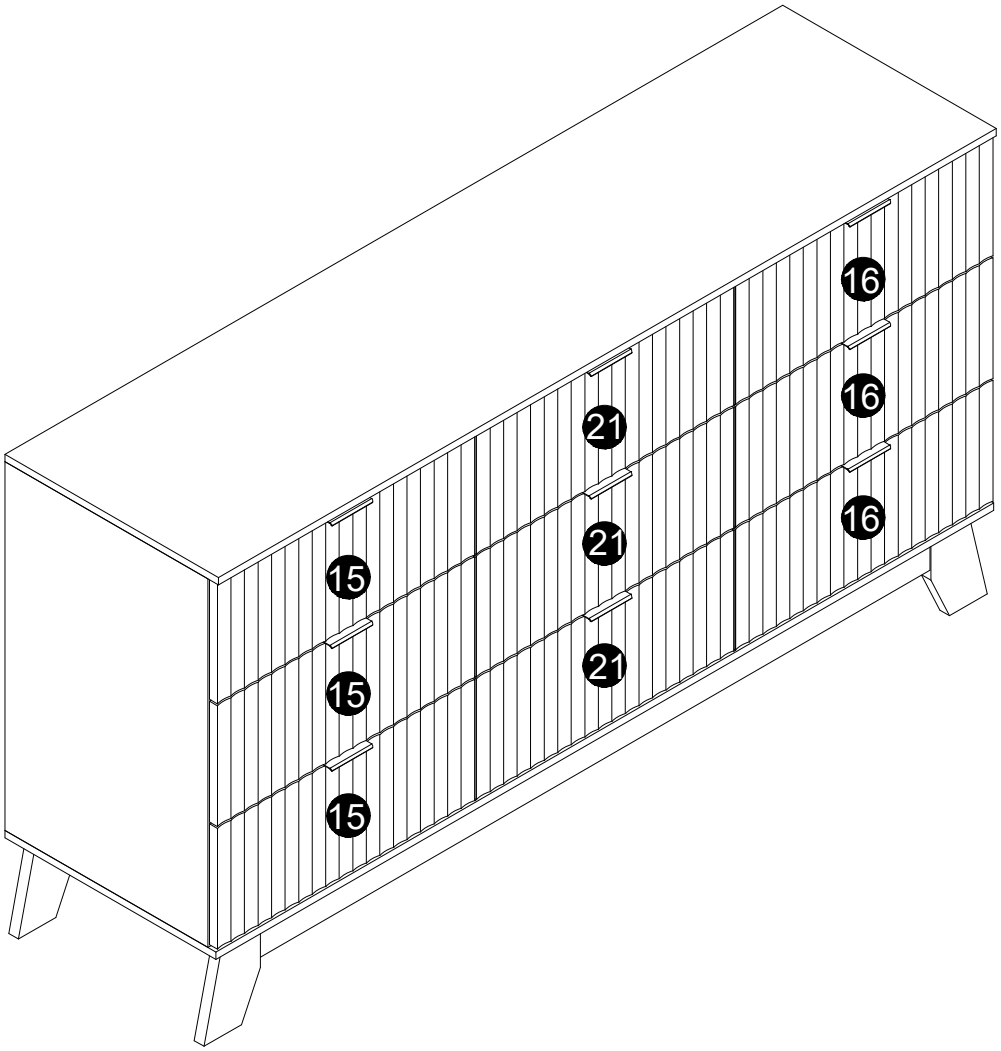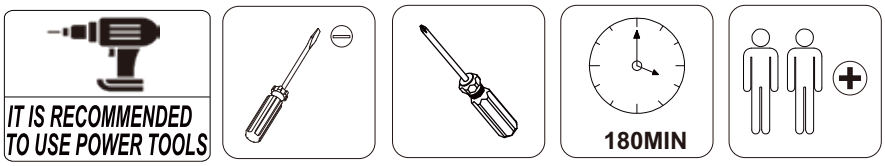
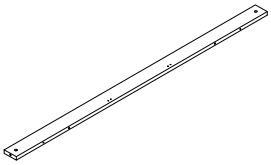
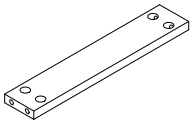


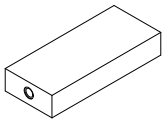
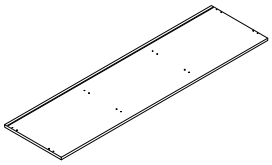
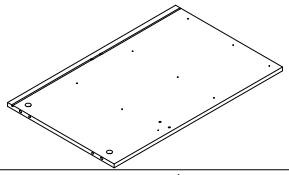
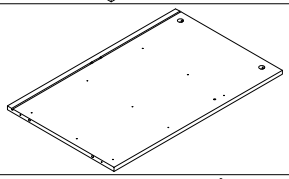
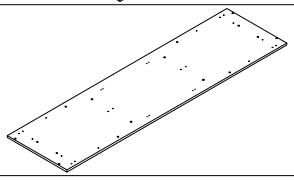
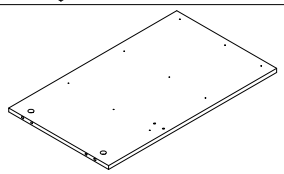


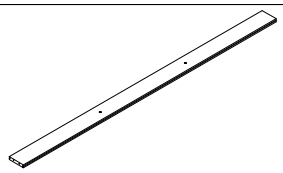



***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

PACKING DELALS


NO.	PARTS	QTY	SPARE
①		x2	
②		x2	
③		x2	
④		x2	
⑤		x2	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x2	
⑪		x1	

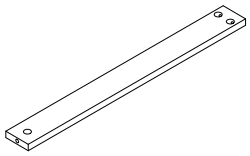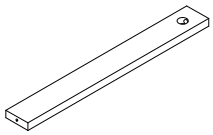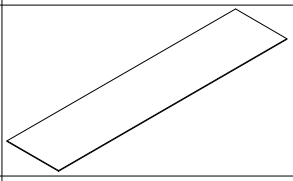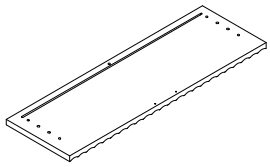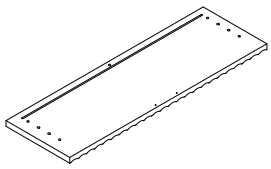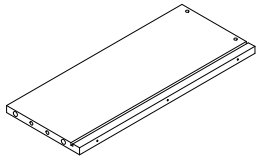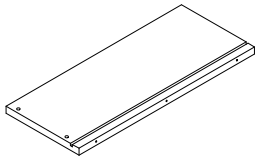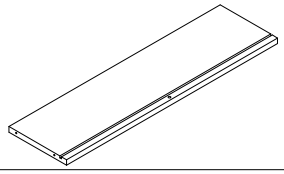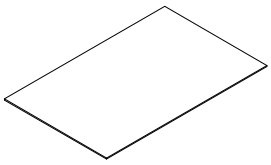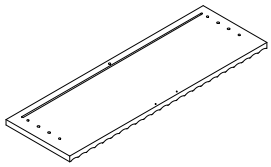NO.	PARTS	QTY	SPARE
⑫		x3	
⑬		x9	
⑭		x2	
⑮		x3	
⑯		x3	
⑰		x9	
⑱		x9	
⑲		x9	
⑳		x9	
㉑		x3	
	 Hardware Kit		

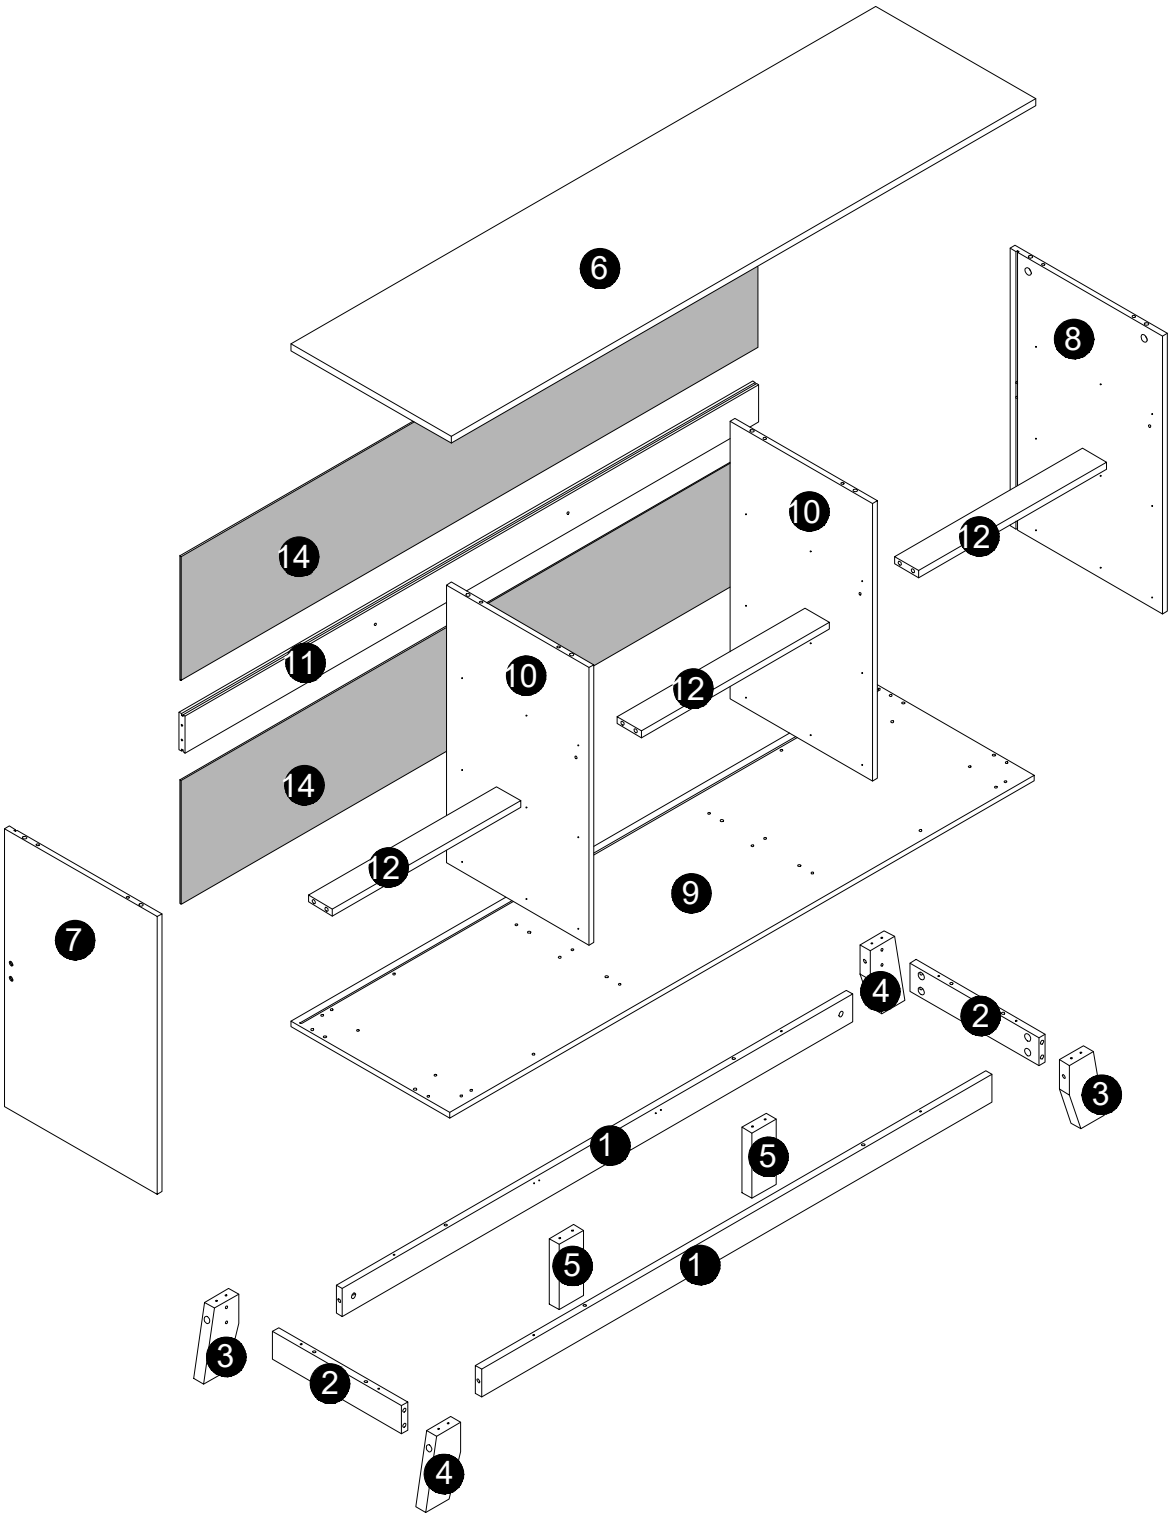

6
8
14
10
12
11
10
12
14
12
9
7
4
2
3
1
5
5
1
3
2
4

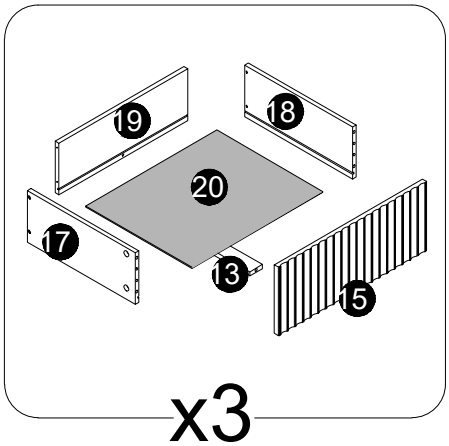
19
18
20
17
13
15

x3

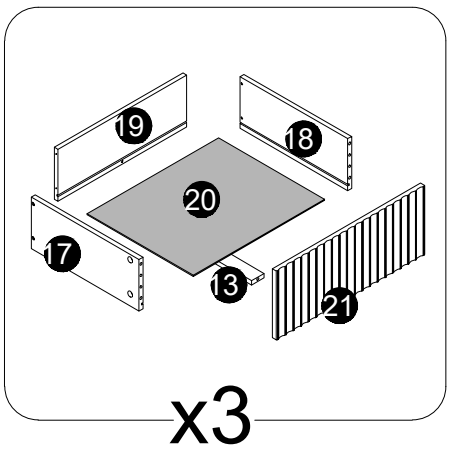
19
18
20
17
13
21

x3

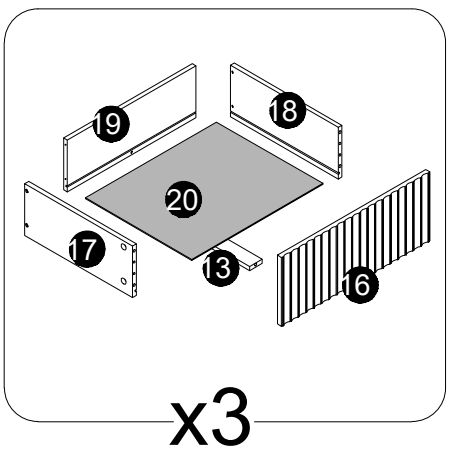
19
18
20
17
13
16

x3


HARDWARE


A x70 Ø6x35mm +3(spare)	B x70 Ø15x10mm +3(spare)	C x60 Ø6x30mm +3(spare)	D x59 Ø4x35mm +3(spare)	E x108 Ø3.5x12mm +5(spare)	F x9 F1 F2
G x2	H x14 Ø3x16mm +1(spare) H1 H2	I x2 Ø6x30mm I1 I2	J x2 Ø4x14mm	K x20 Ø5x35mm +2(spare)	L x2
CL x9 L350mm	CR x9 L350mm	DL x9 L350mm	DR x9 L350mm	M x4 M1 M2	N x4
O x16 Ø4x12mm	P x4	Q x8			


A x15	B x15	D x15	C x12


x3


01

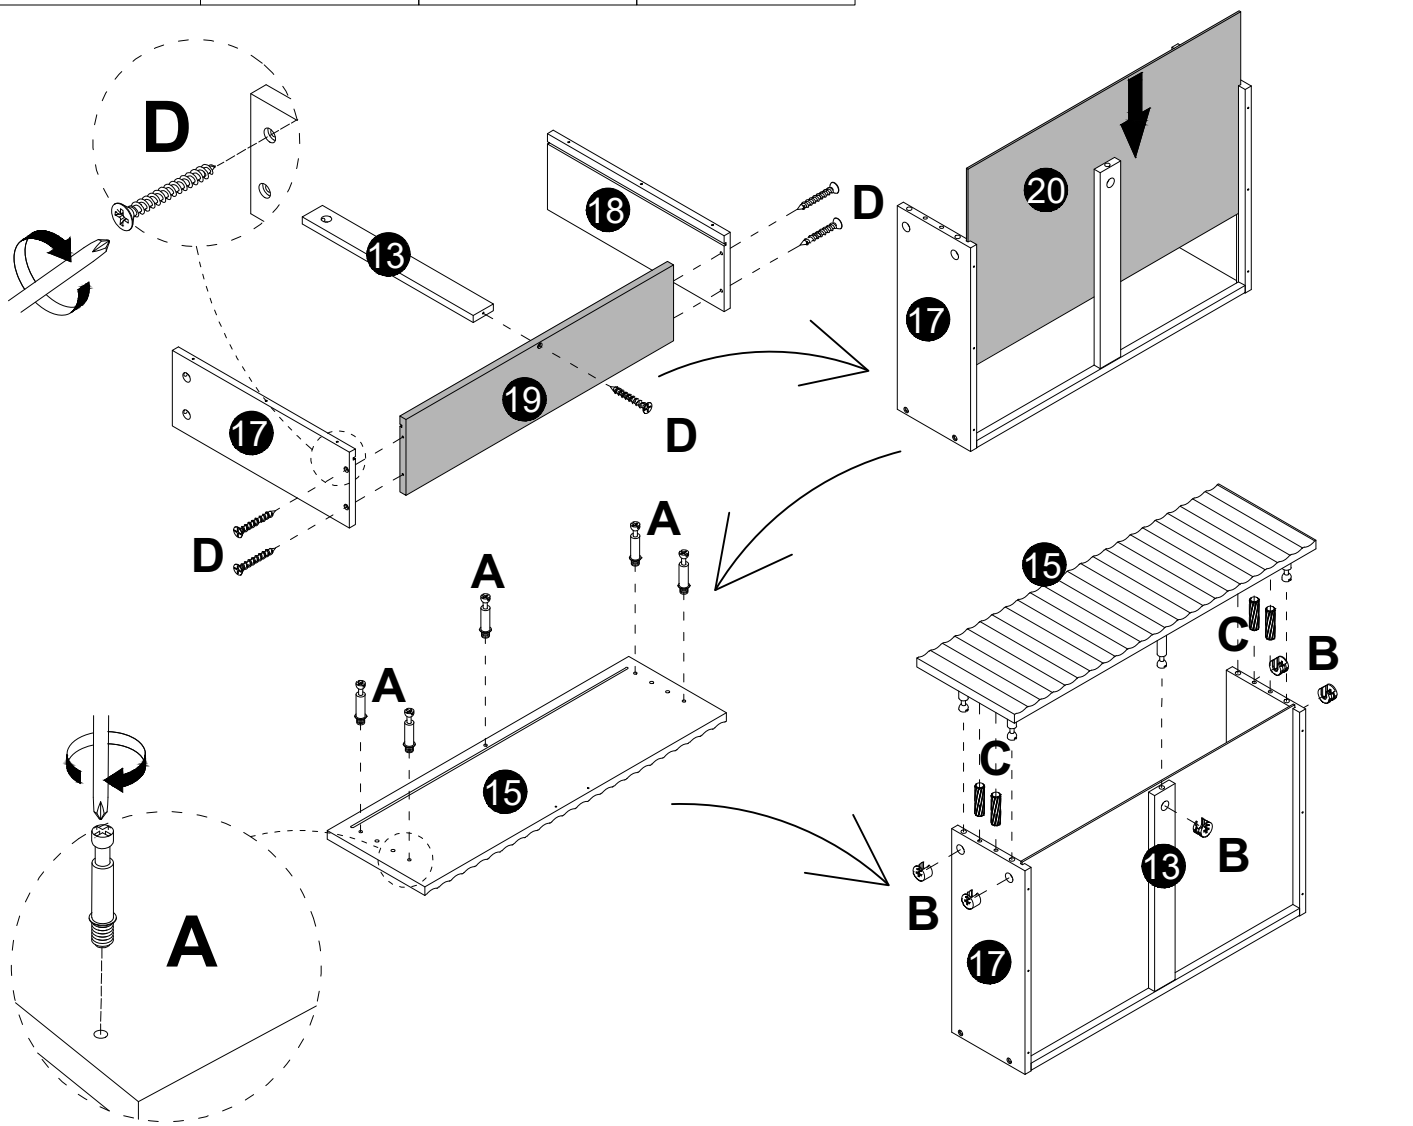


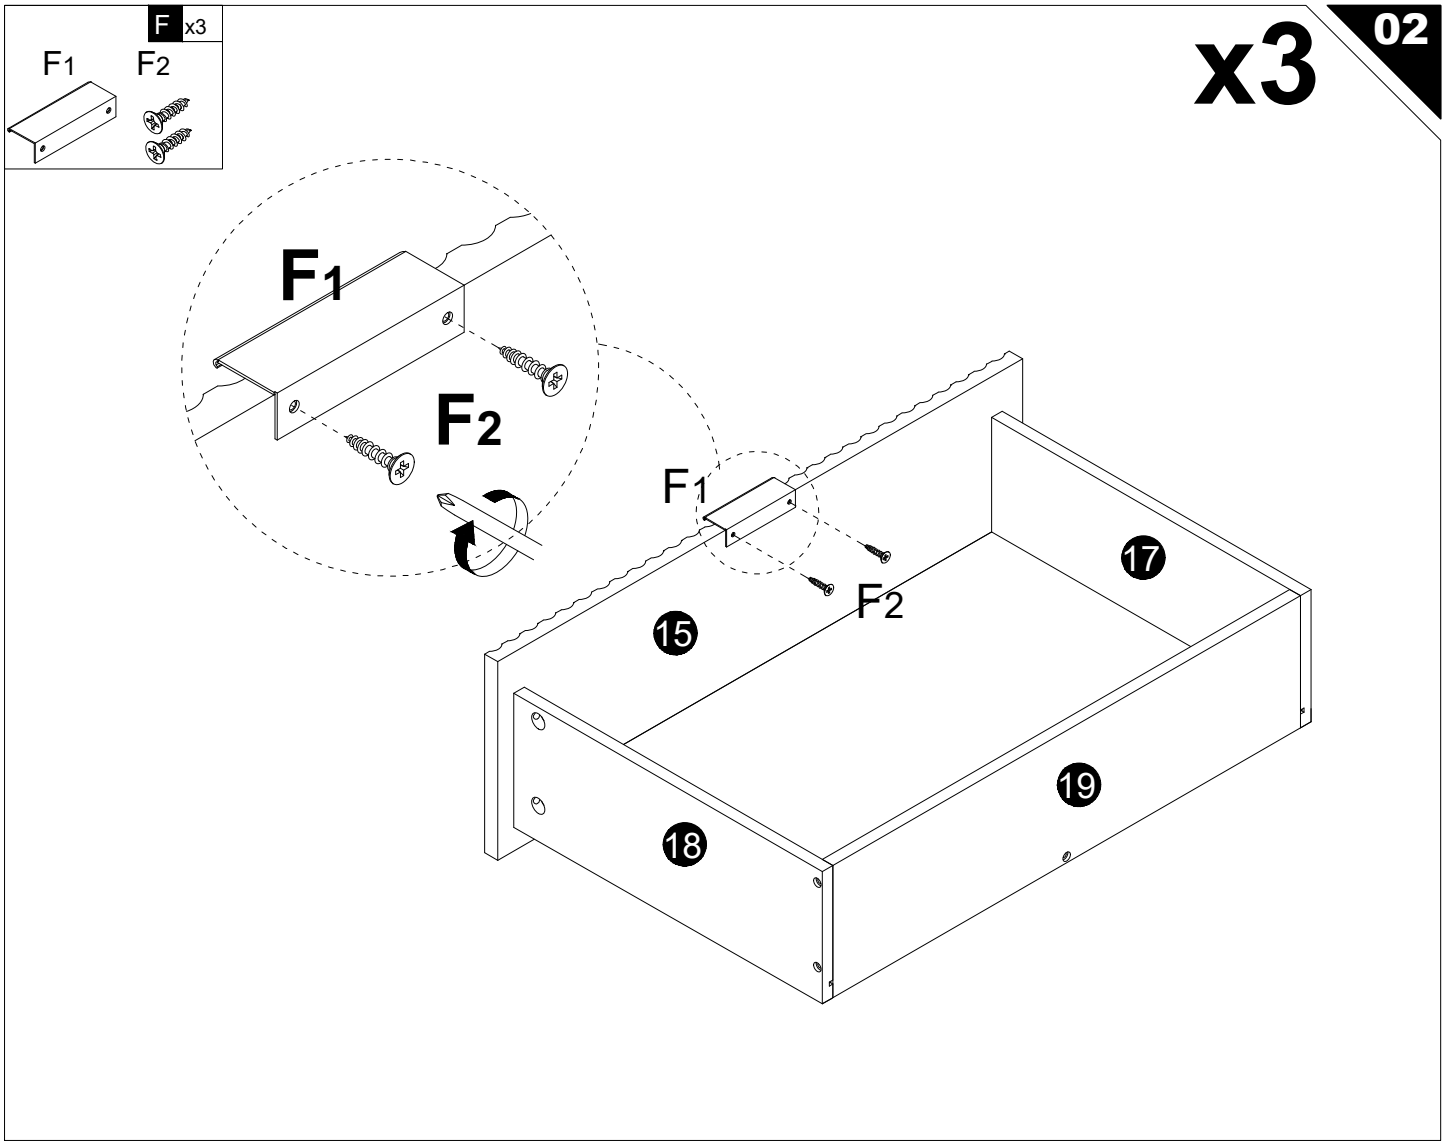

F x3
F1
F2
x3
02
F1
F2
F1
F2
17
15
19
18

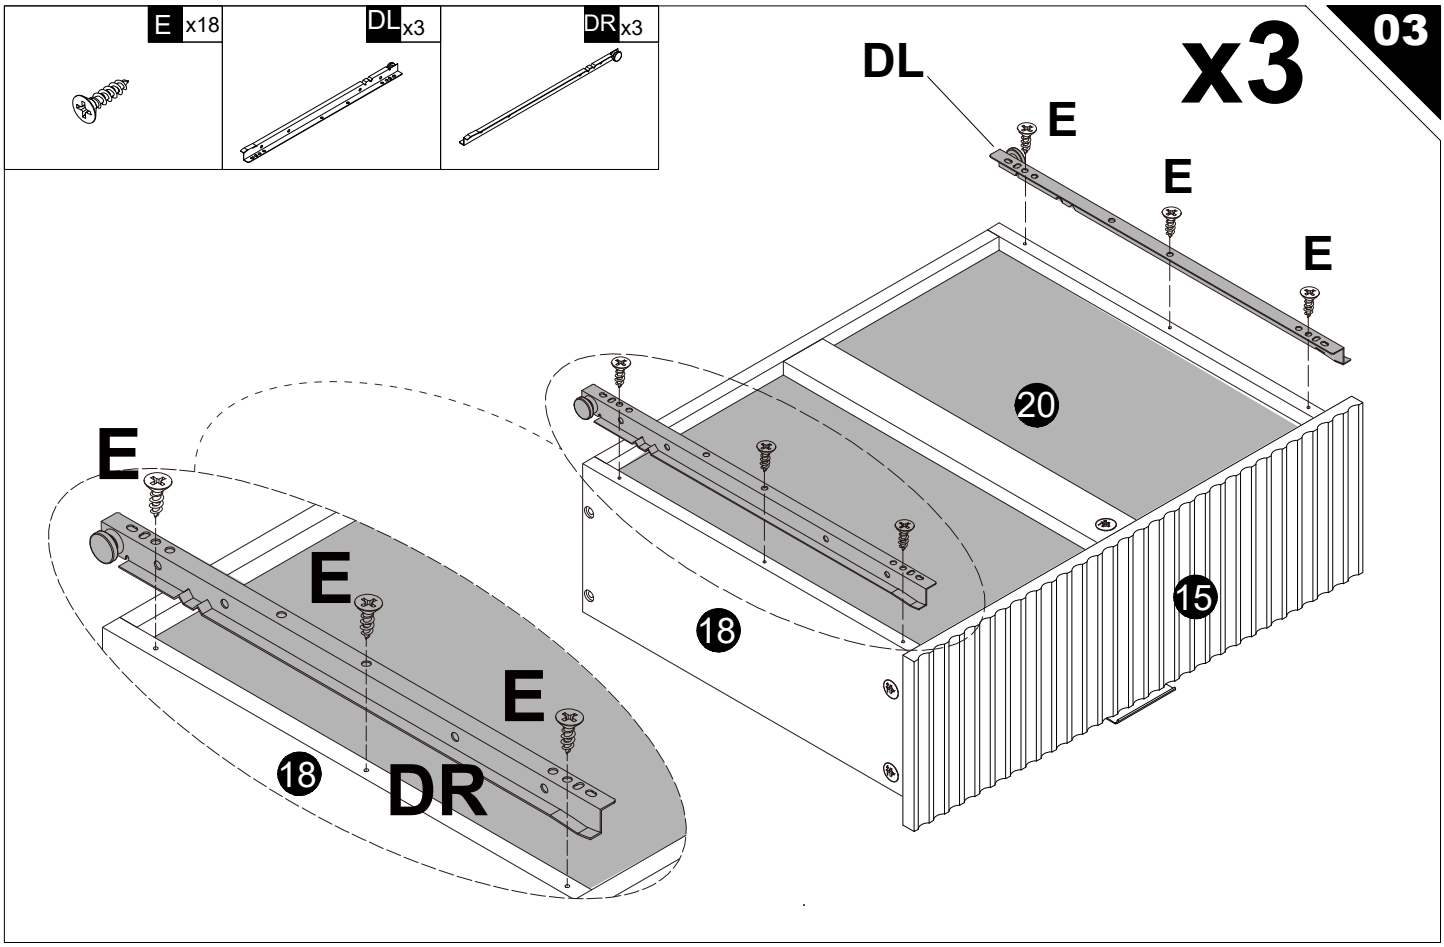
E x18
DL x3
DR x3
x3
03
DL
E
E
E
20
E
E
E
18
DR
18
15

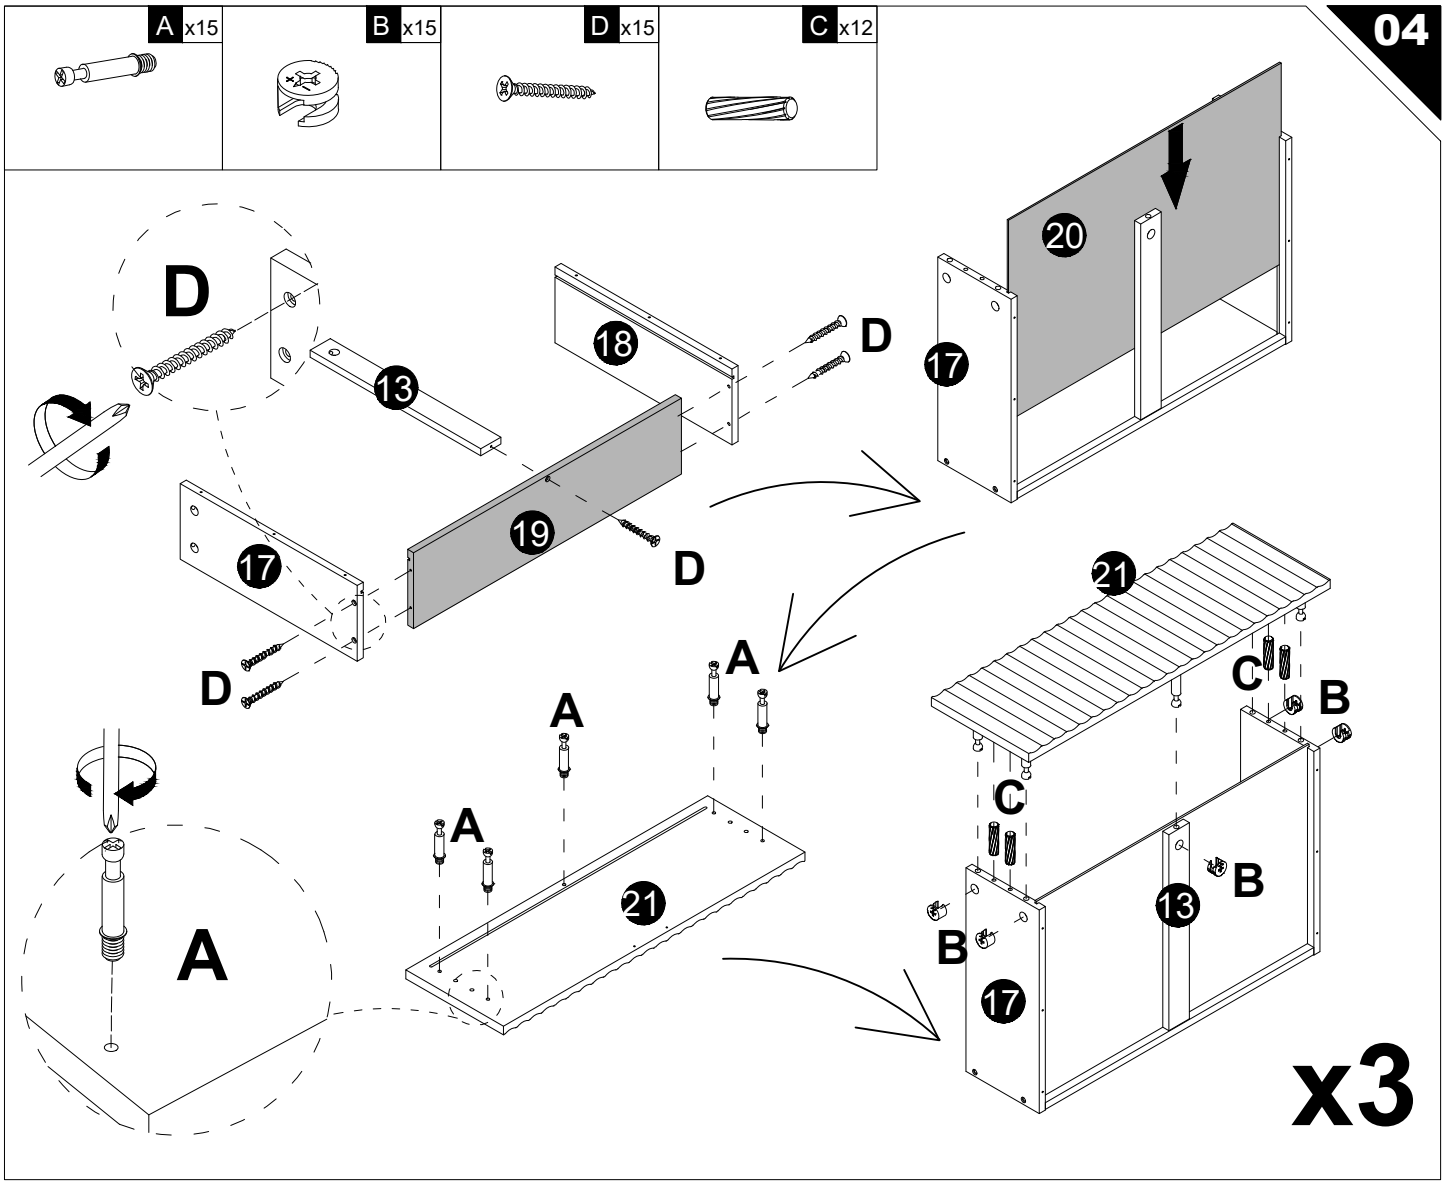
04
A x15
B x15
D x15
C x12
D
13
18
D
20
17
19
D
17
D
21
A
A
A
C
B
C
B
13
B
17
A
21
x3

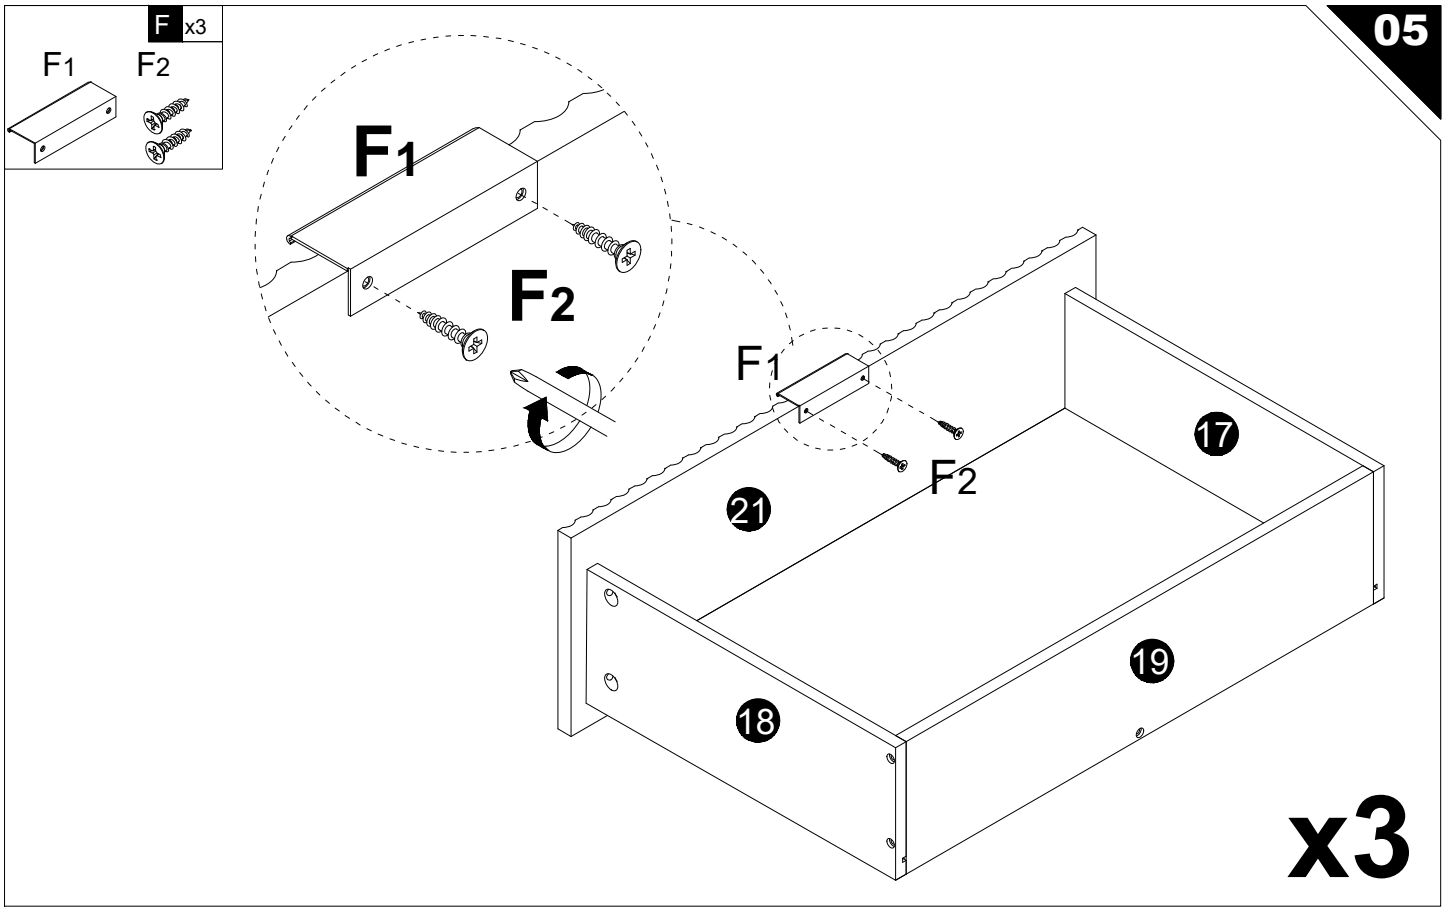

05
F x3
F1
F2
F1
F2
F1
F2
17
21
19
18
x3

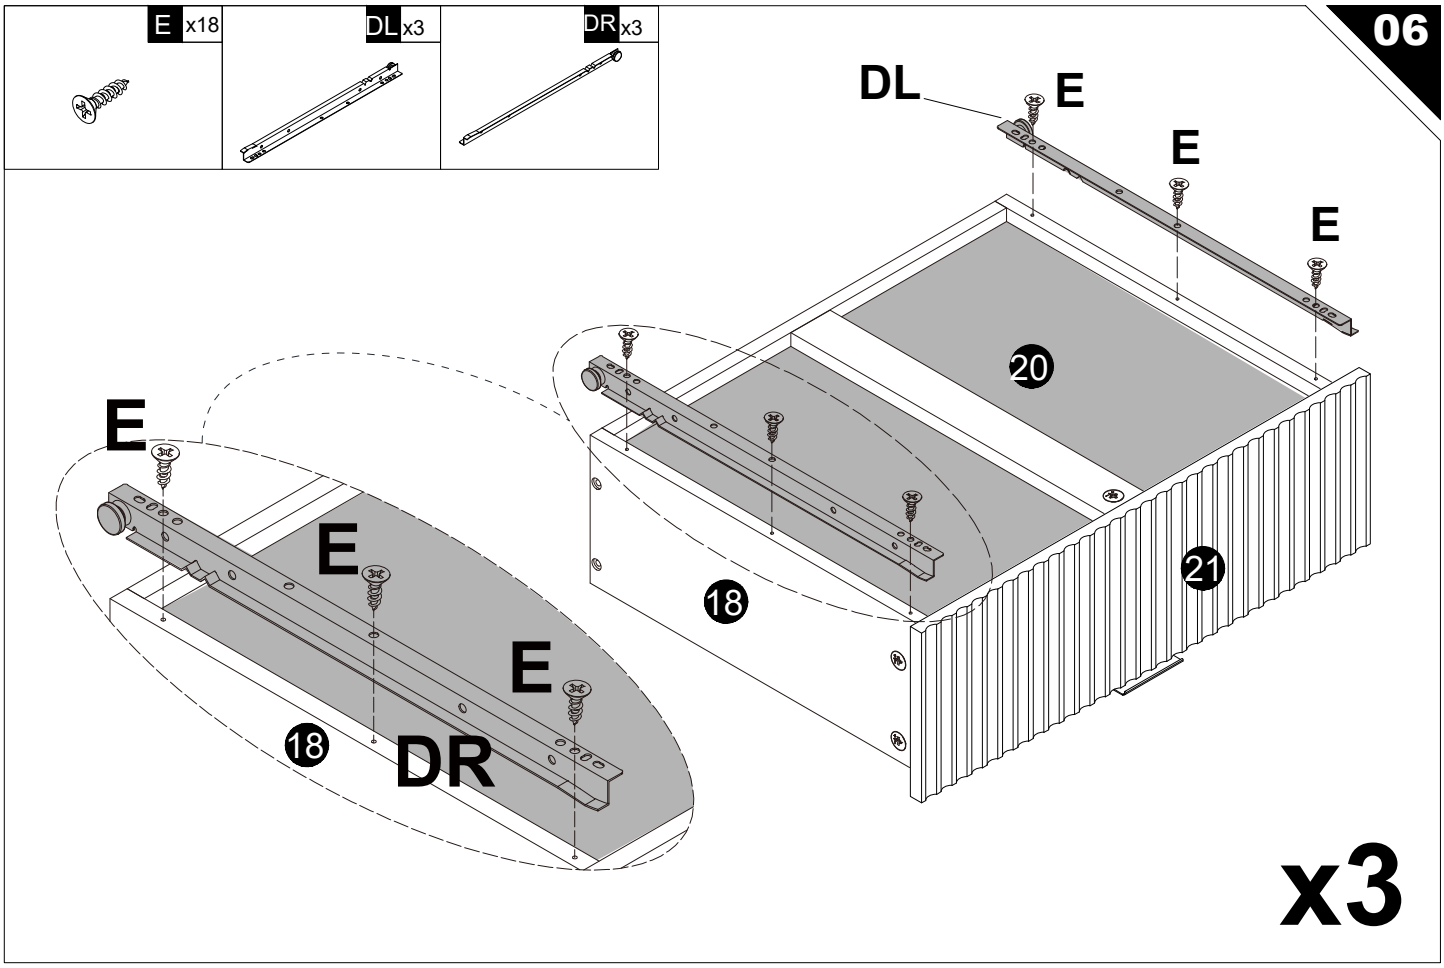
06
E x18
DL x3
DR x3
DL
E
E
E
20
E
E
E
18
DR
18
21
x3

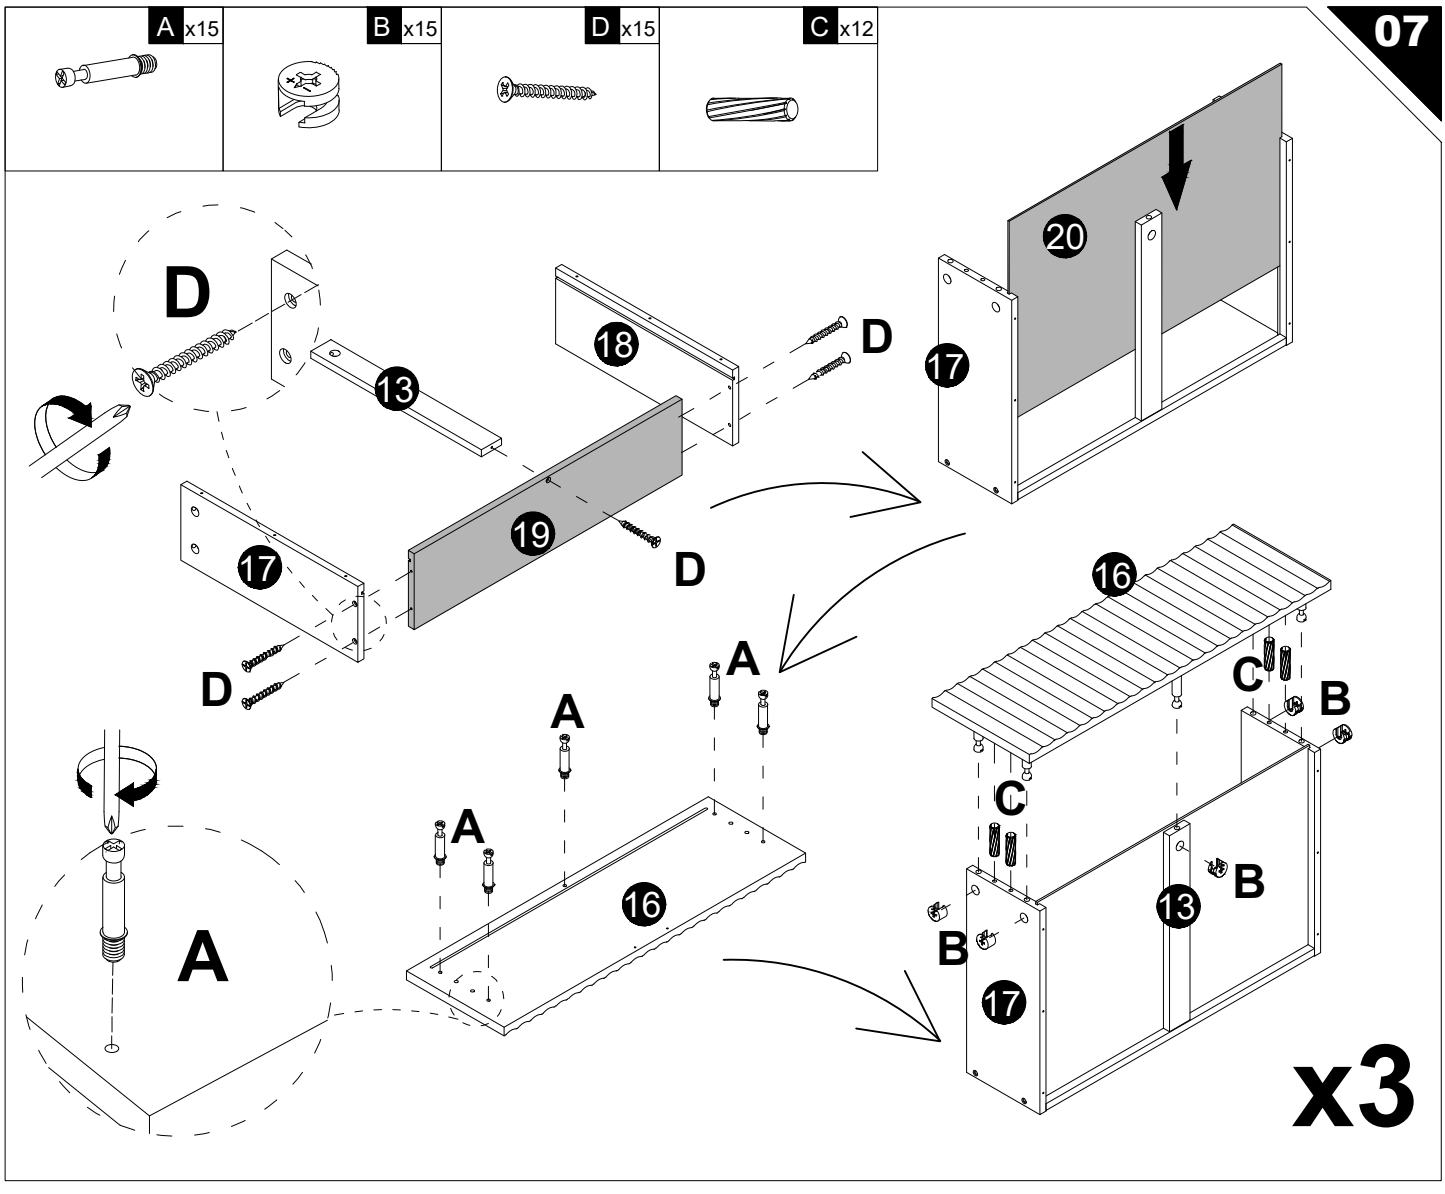
07
A x15
B x15
D x15
C x12
D
18
13
D
20
17
19
D
17
D
16
A
A
C
B
A
A
16
C
B
13
B
B
17
x3


F x3

F1 F2

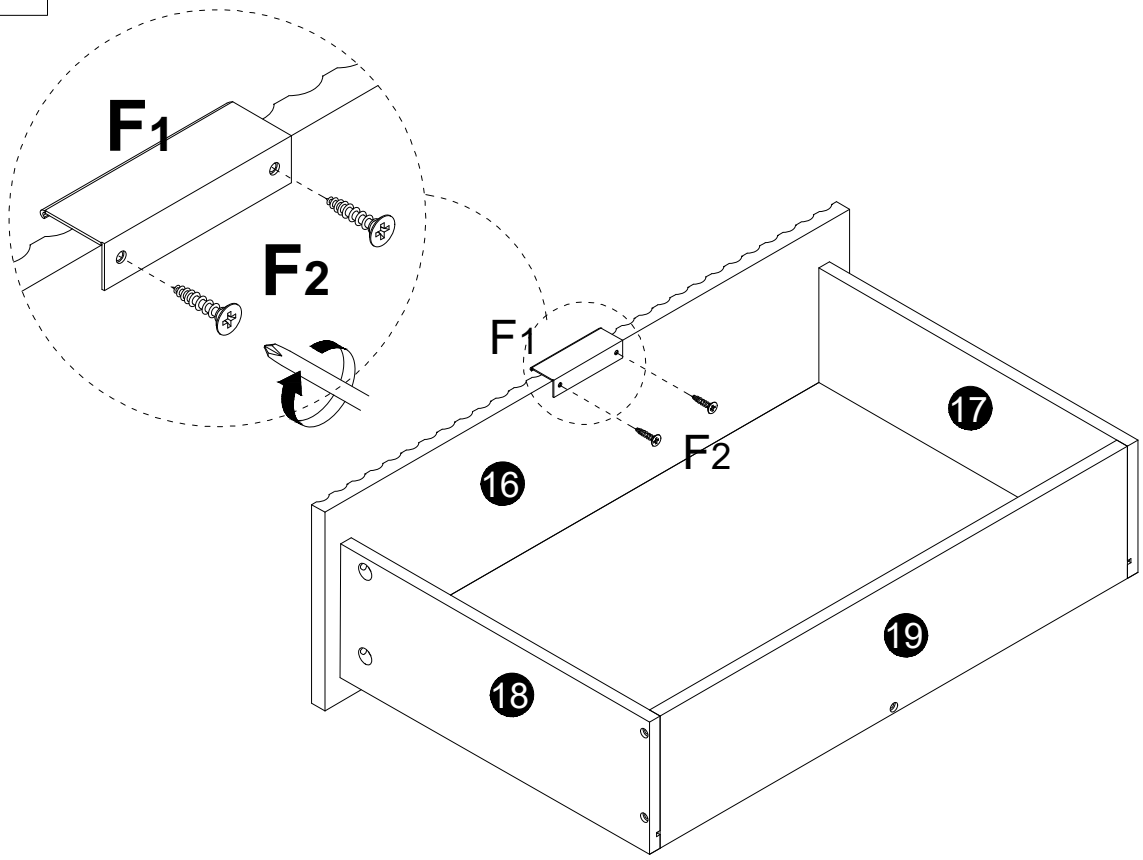



x3


E x18 DL x3 DR x3

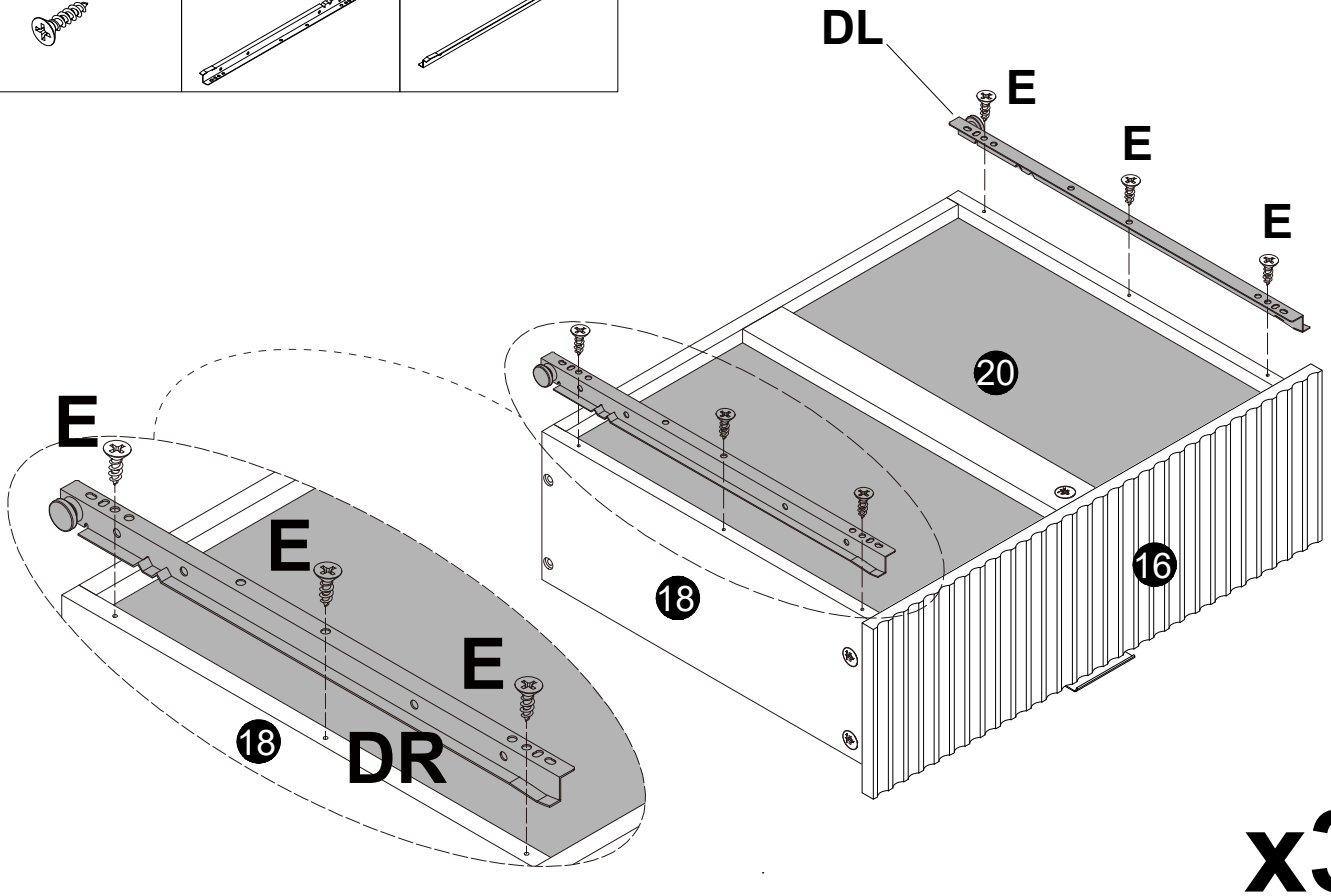



x3

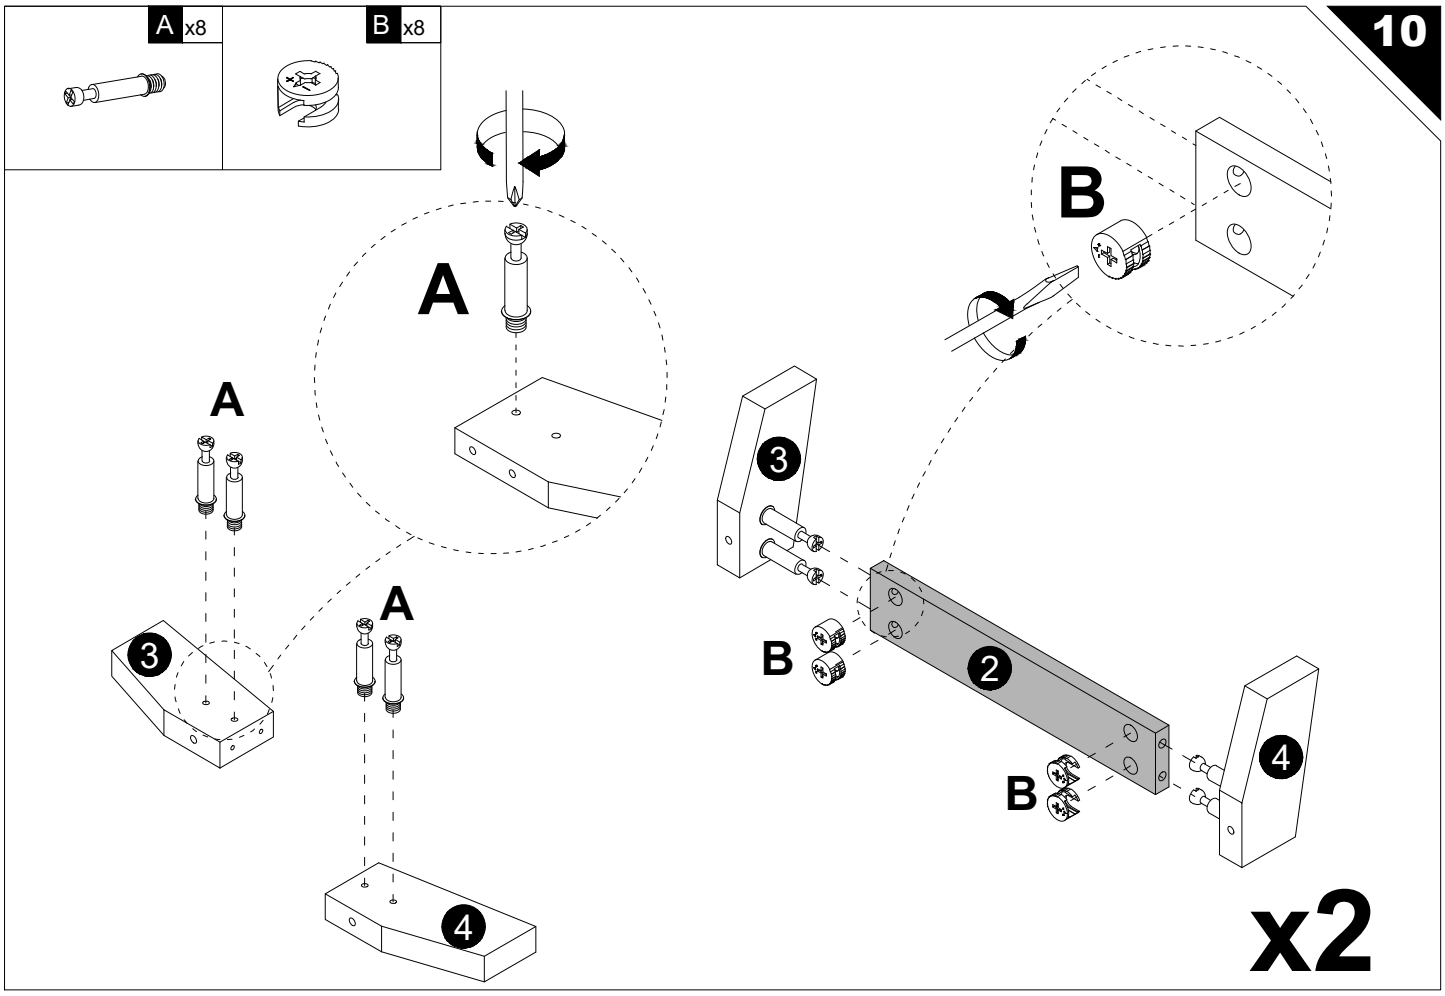

10
A x8
B x8
A
B
A
A
3
4
3
B
2
B
4
x2

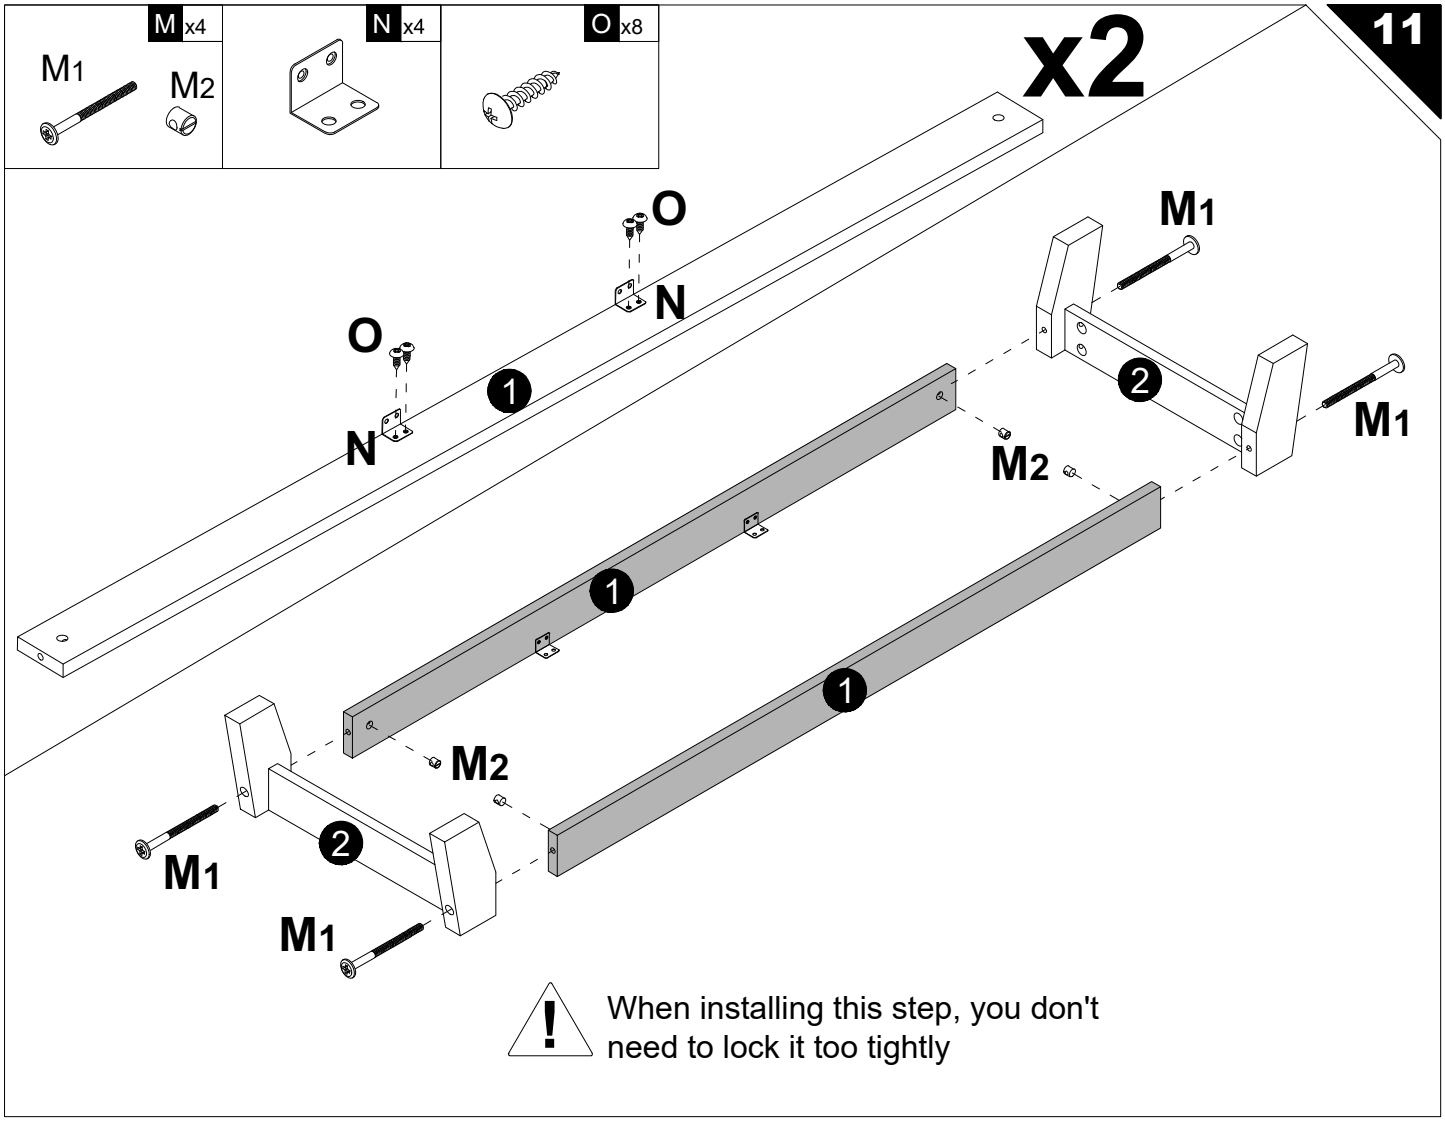
11
M x4
N x4
O x8
M1
M2
x2
O
N
O
N
1
M1
2
M1
M2
1
1
M2
2
M1
M1
When installing this step, you don't need to lock it too tightly

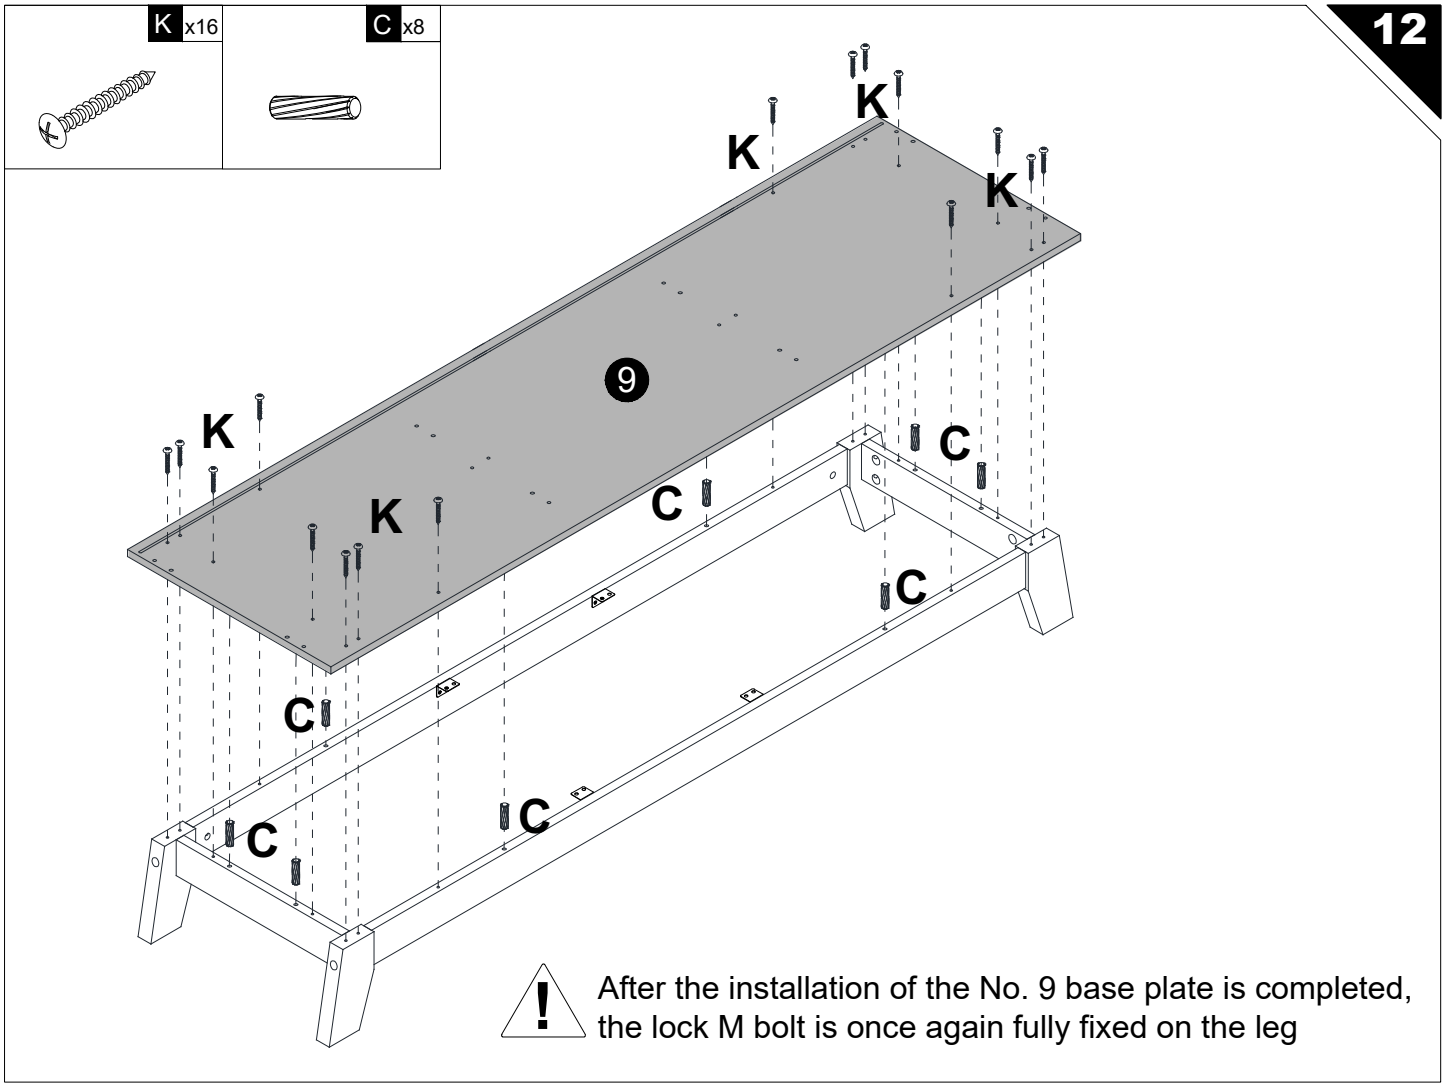

K x16
C x8
K
K
K
K
9
K
K
C
C
C
C
C
!
After the installation of the No. 9 base plate is completed, the lock M bolt is once again fully fixed on the leg

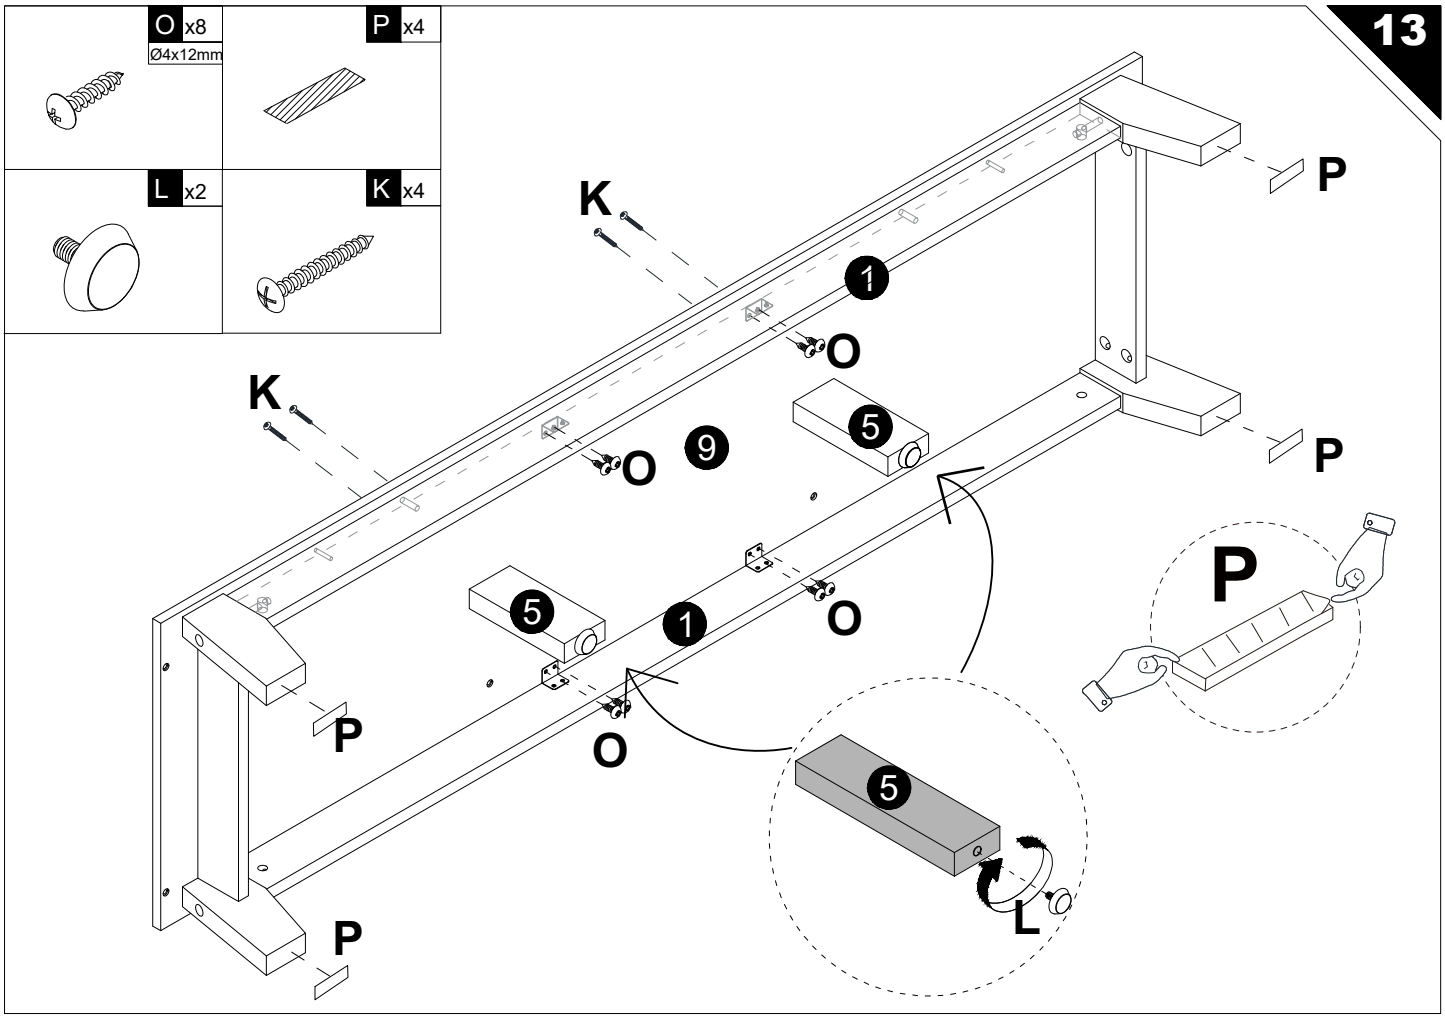
O x8
Ø4x12mm
P x4
L x2
K x4
K
1
O
P
K
O
9
5
P
5
1
O
P
O
P
5
L

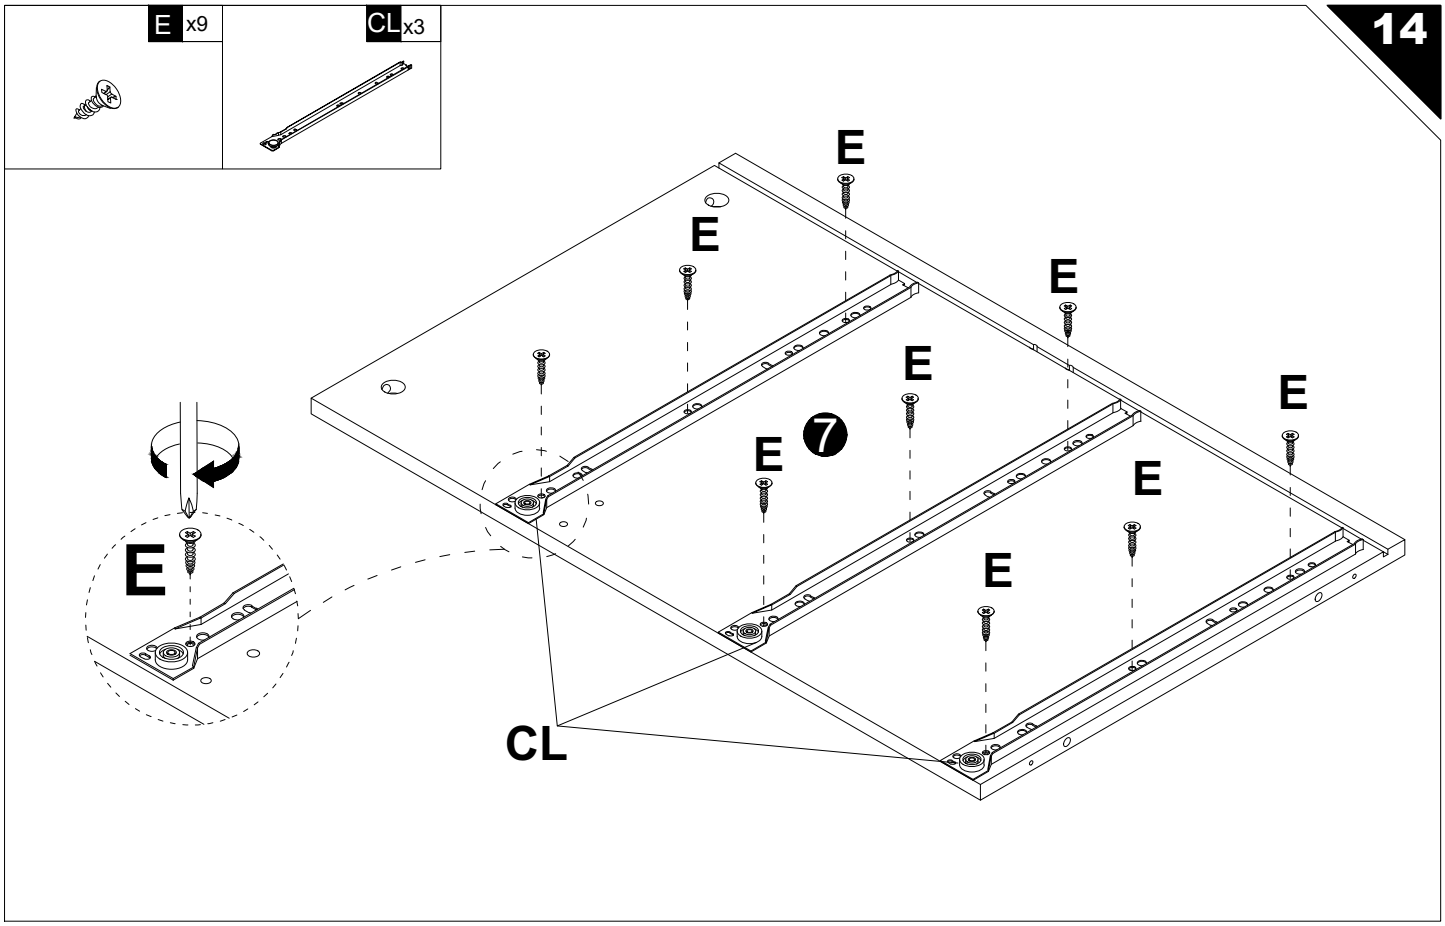

E x9
CL x3
14
E
E
E
E
E
E
E
E
E
7
E
CL

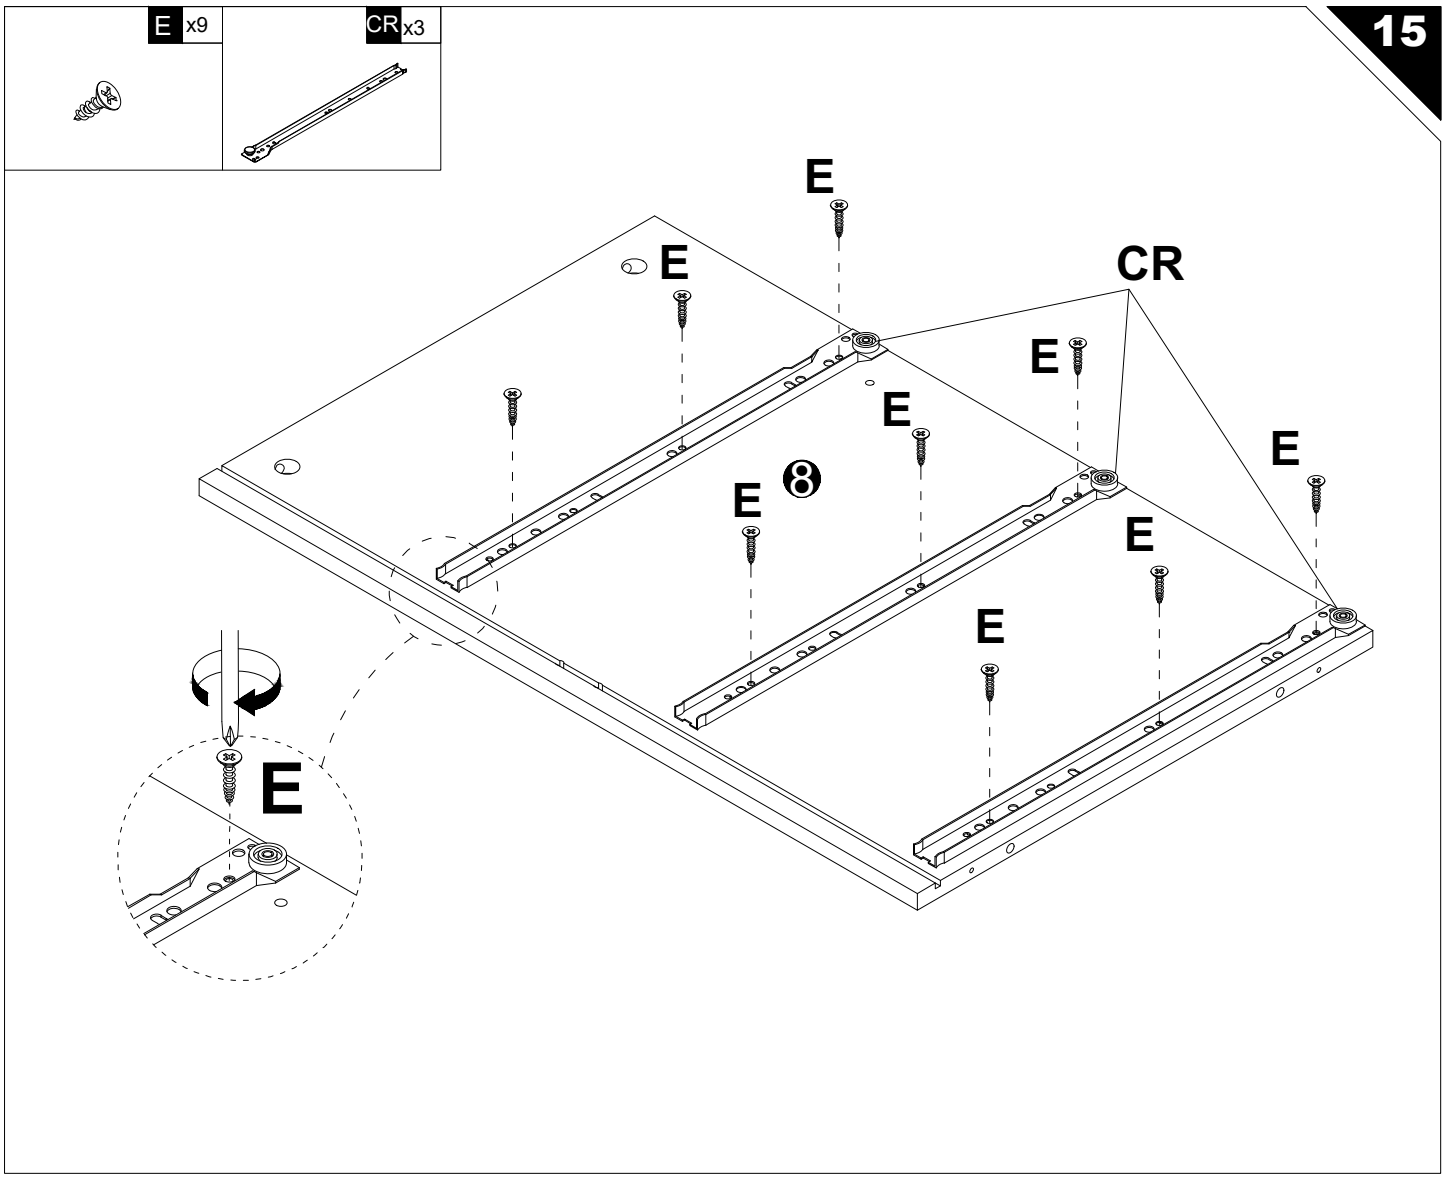
E x9
CR x3
15
E
E
CR
E
E
E
E
E
E
8
E

A x3




A x4




E x18



CL x6



x2

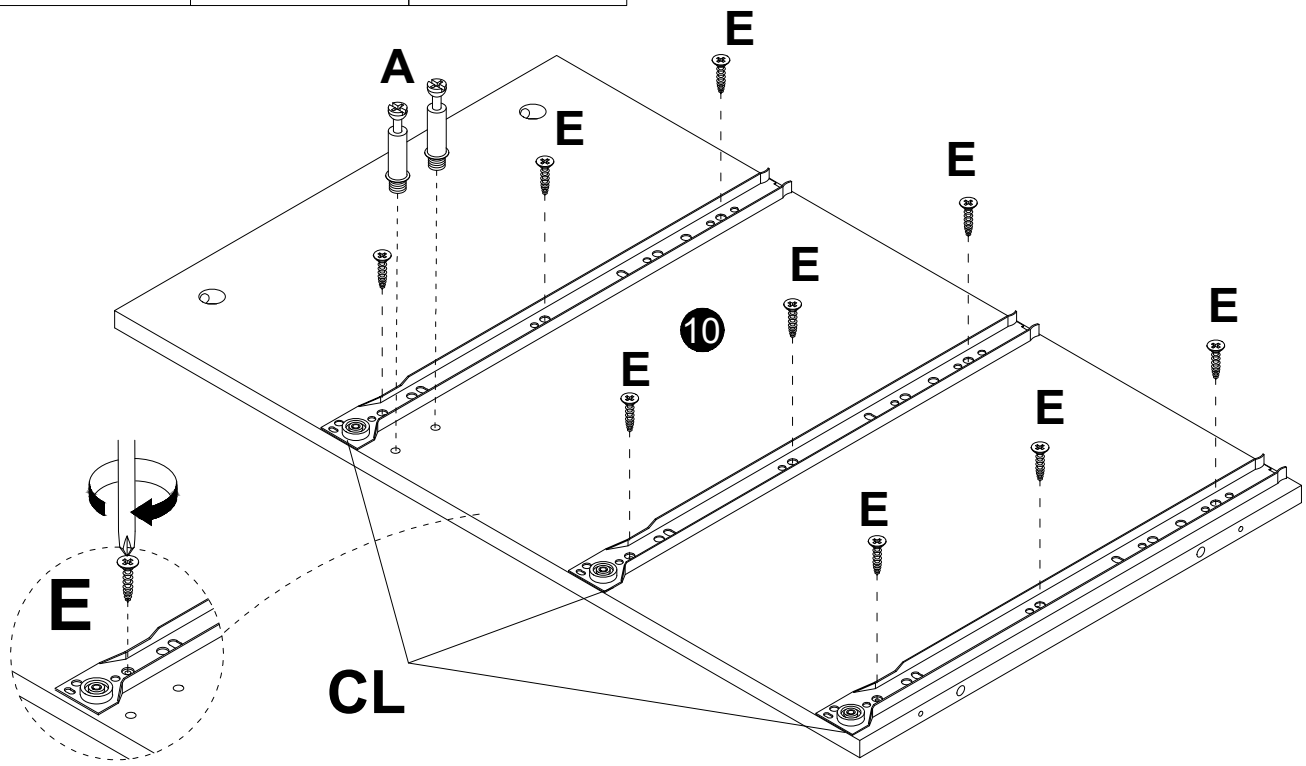


A x2


E x18

CR x6


x2

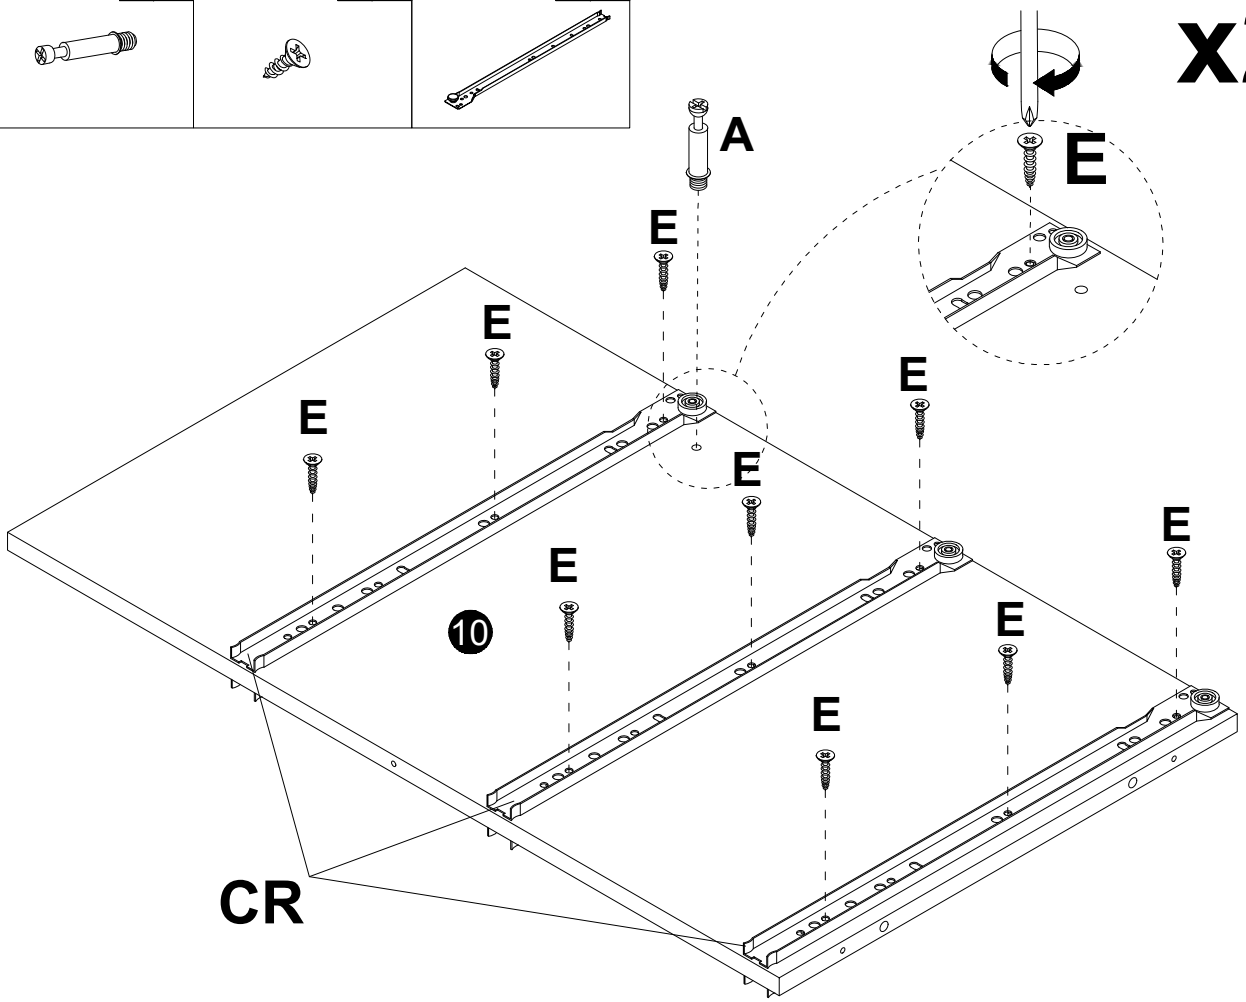


B x3

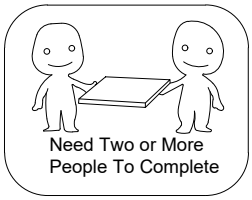

For easier installation, please pad two pieces of foam under the product (take it from the packaging box).

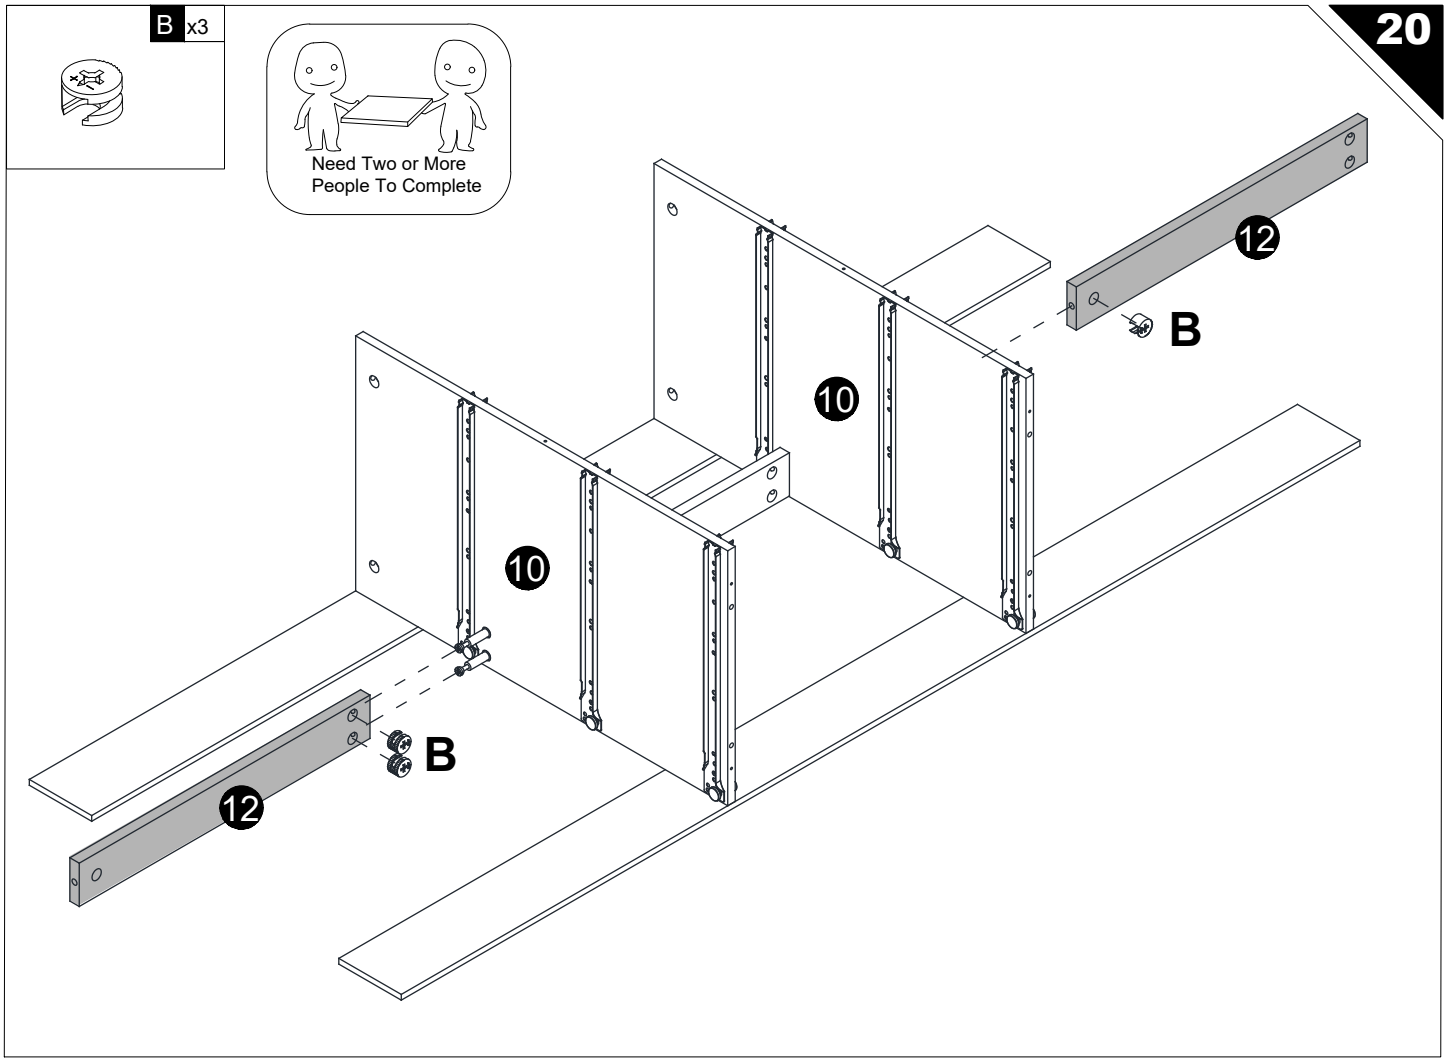
B x3
Need Two or More
People To Complete
12
B
10
10
12
B

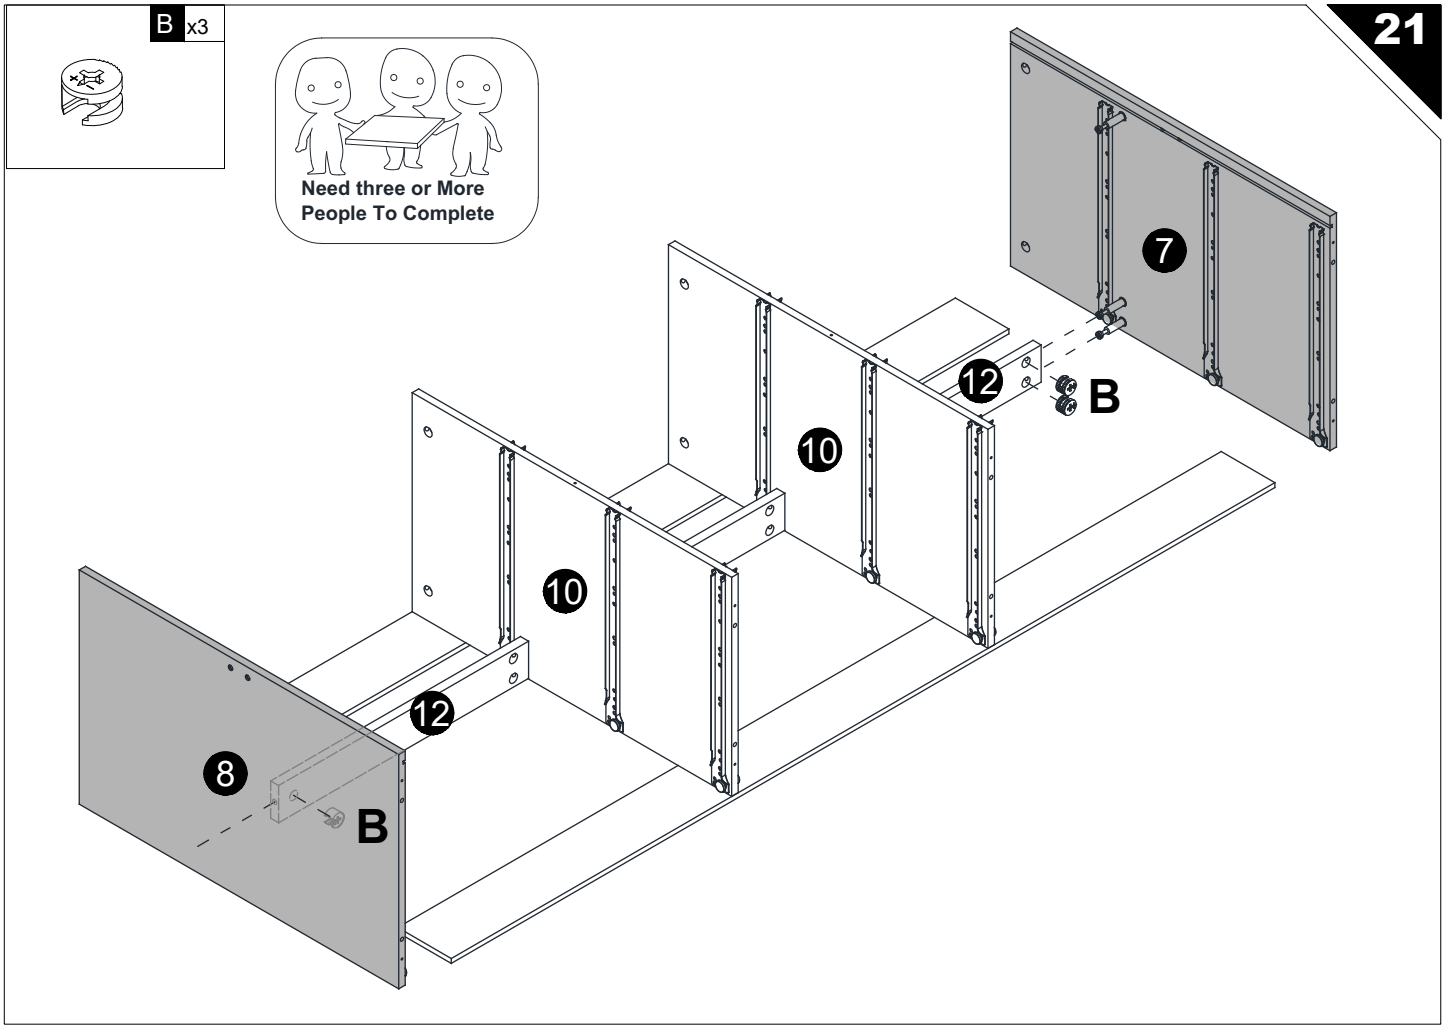

B x3
Need three or More
People To Complete
7
12
B
10
10
12
8
B

C x8



D x8




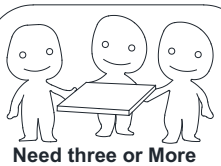


Need three or More People To Complete

D x5




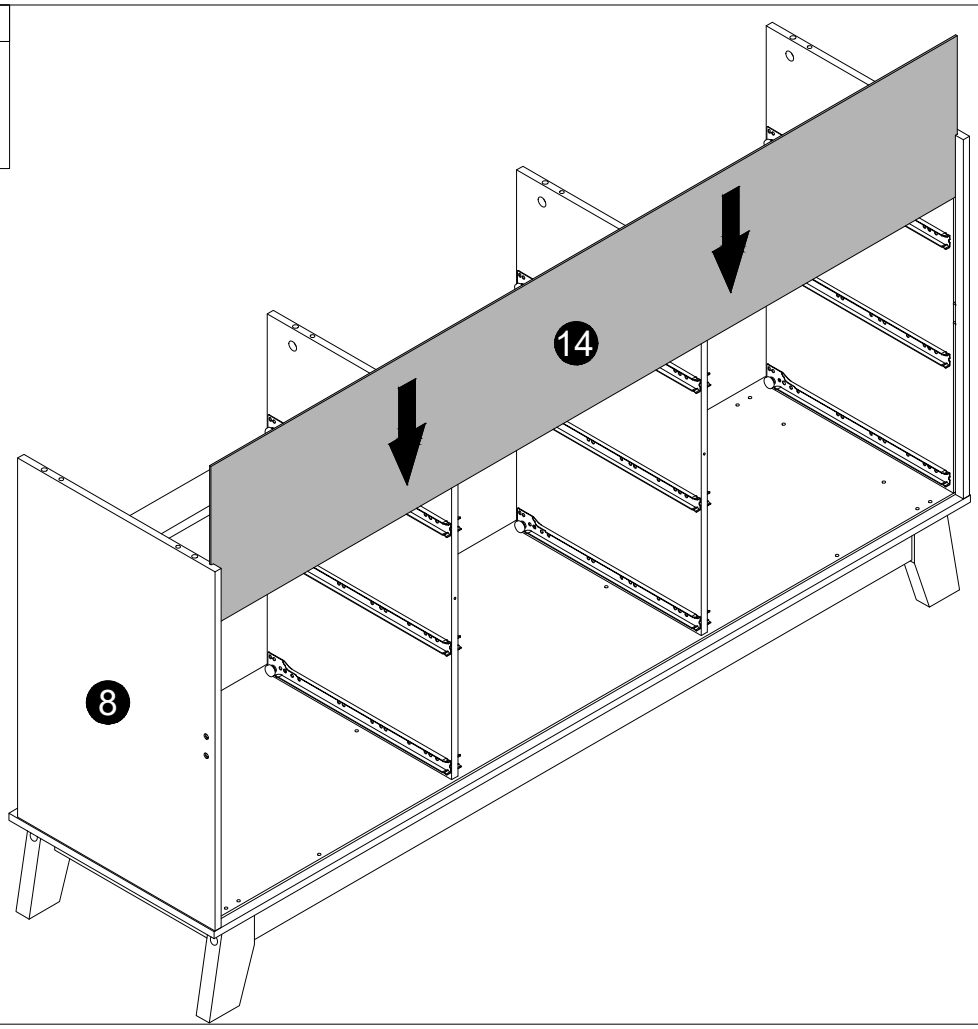


D x6




24

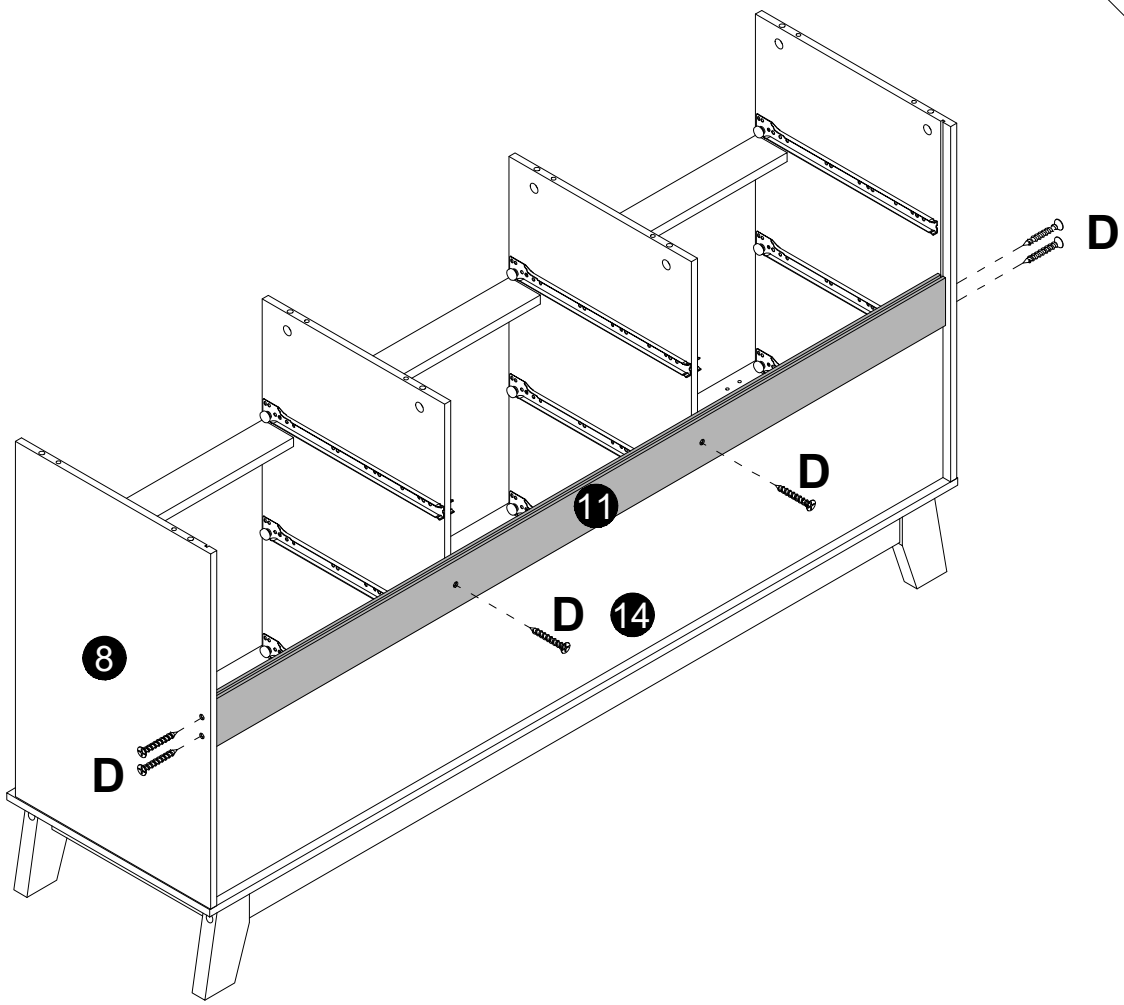

25

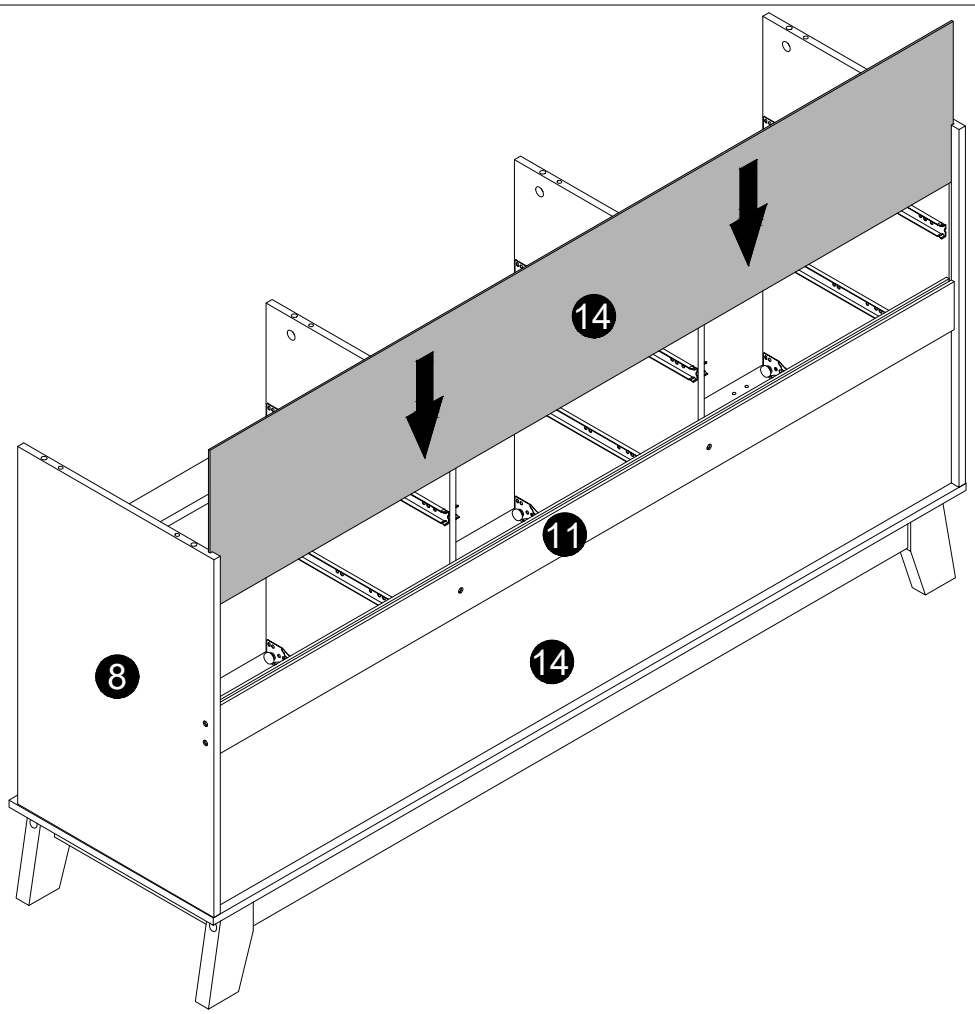

A x8

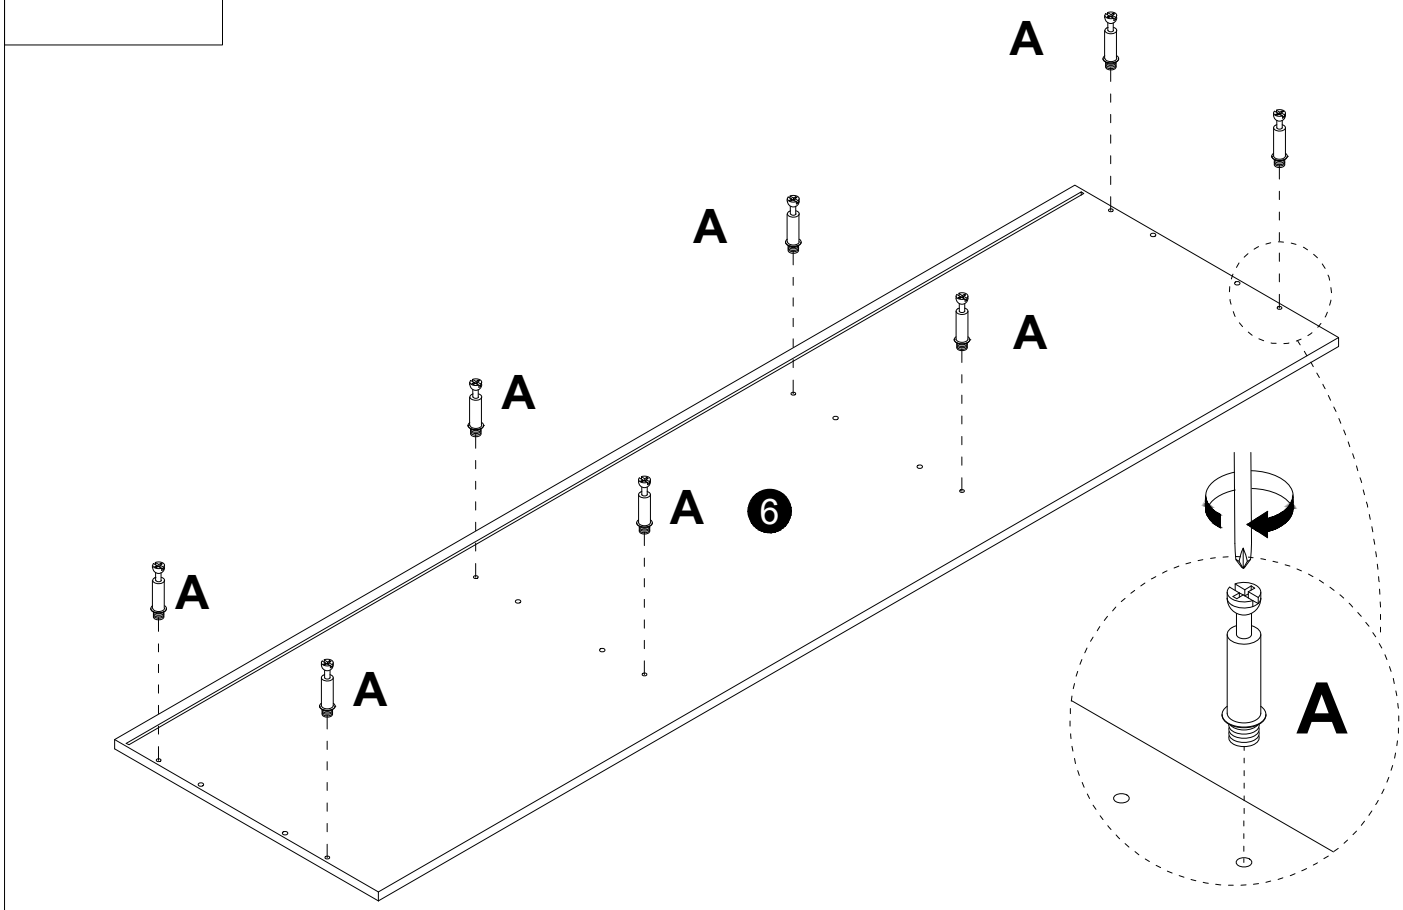


B x8


C x8








The backplate slots are rearward

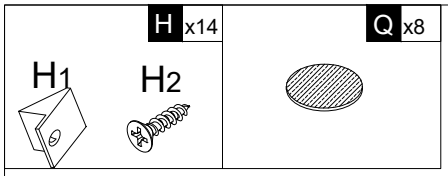
H x14
Q x8
H1
H2

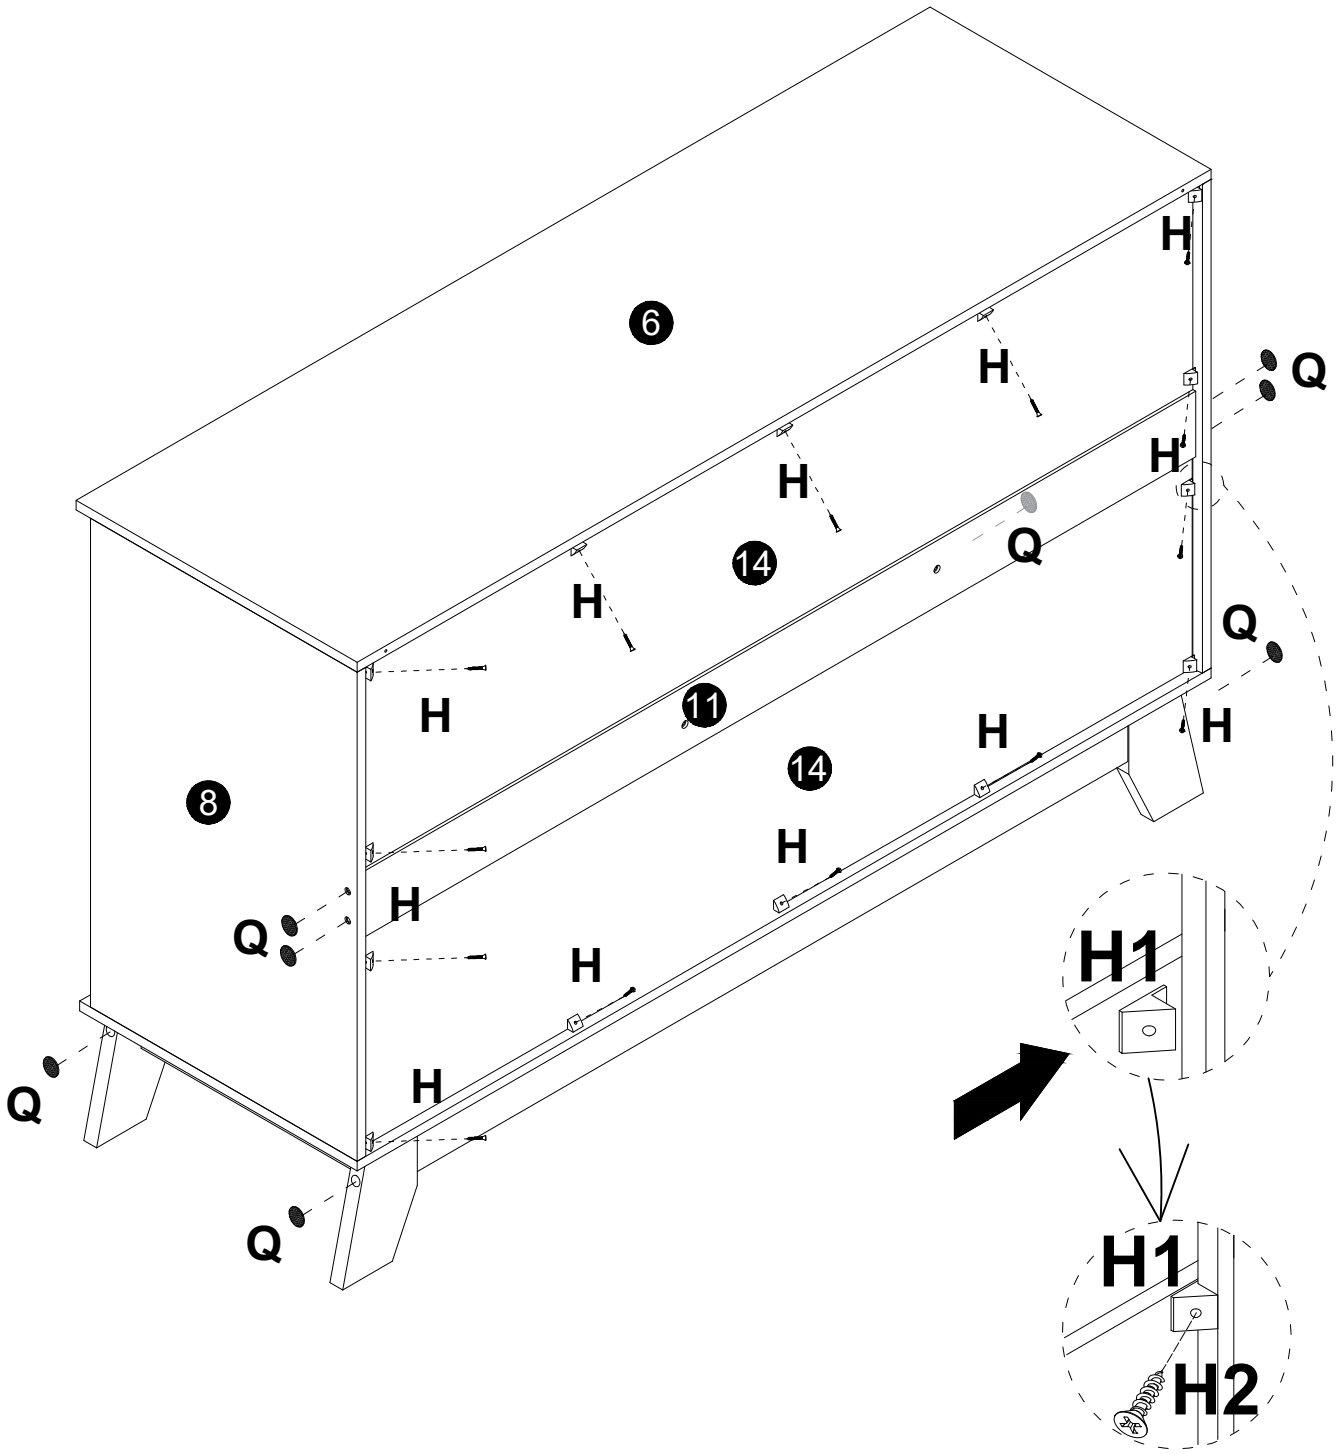

6
8
11
14
14
H
H
H
H
H
H
H
H
H
H
H
Q
Q
Q
Q
Q
H1
H1
H2

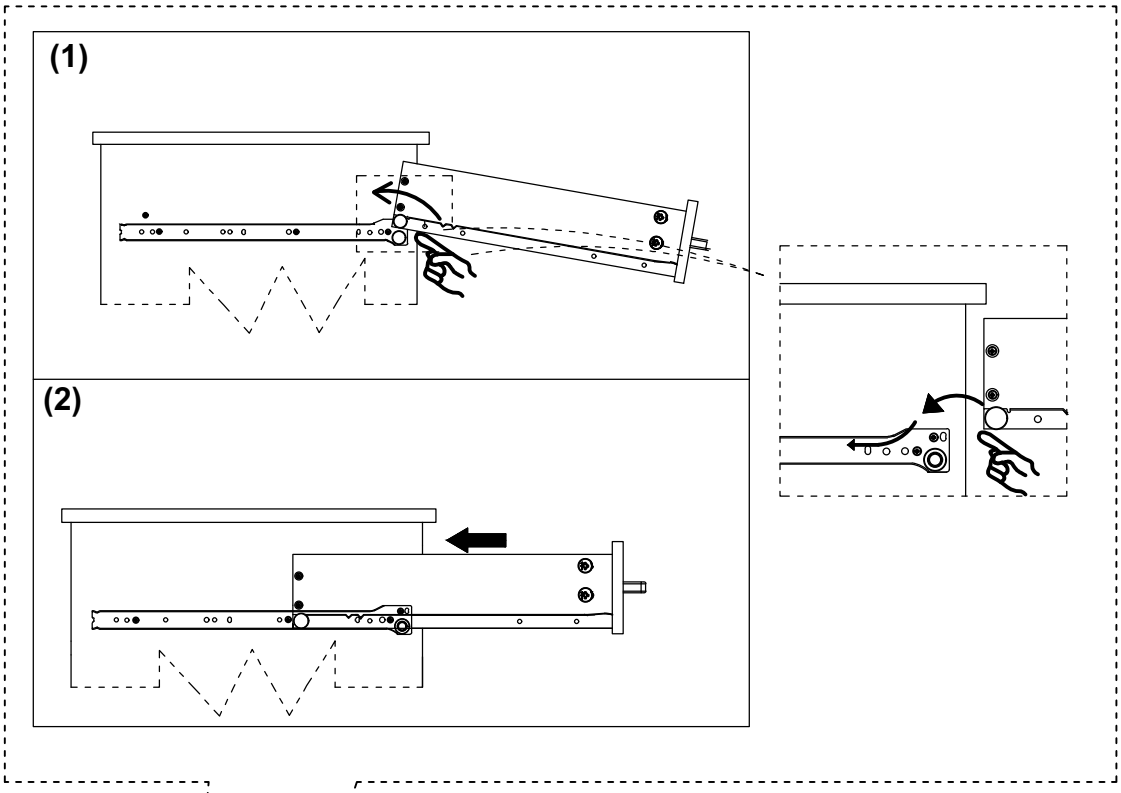


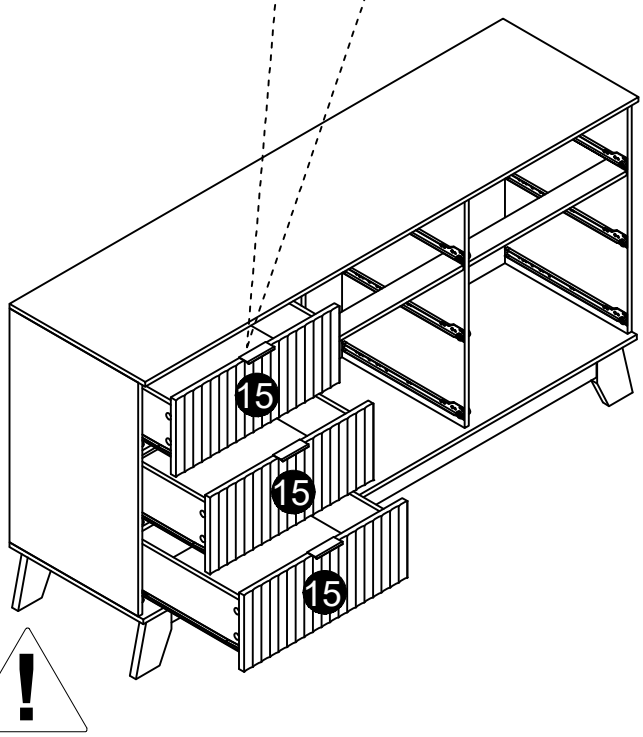


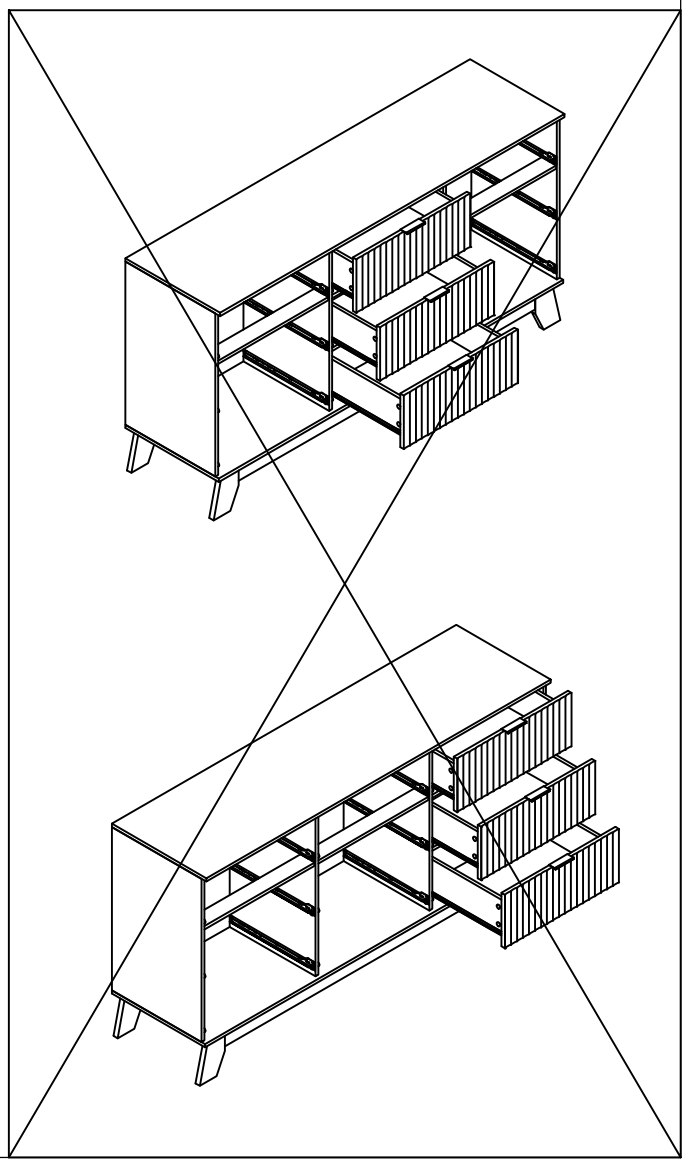


Please install drawer 15 on the left side of the cabinet according to the diagram. After installation, the gap on the left side is about 3mm.

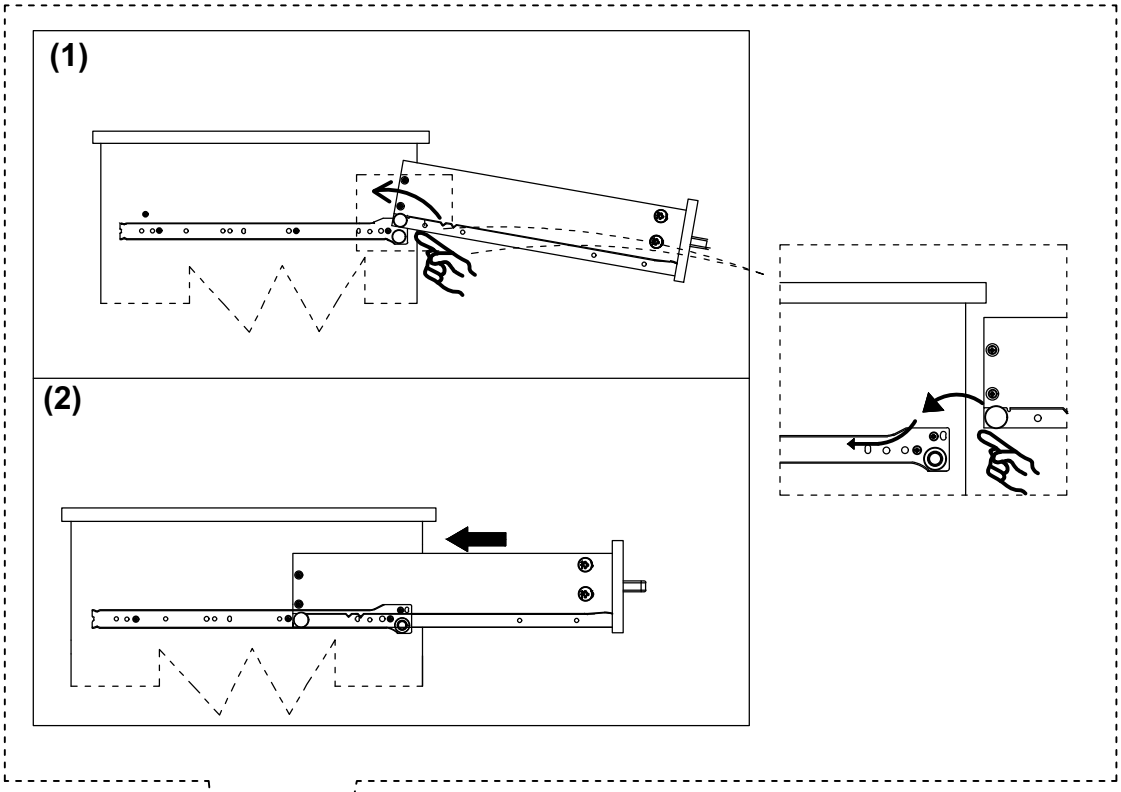


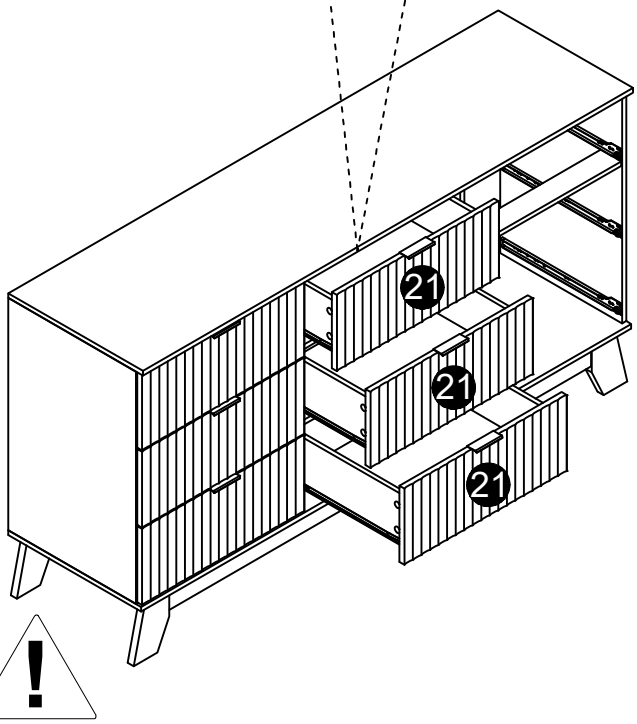

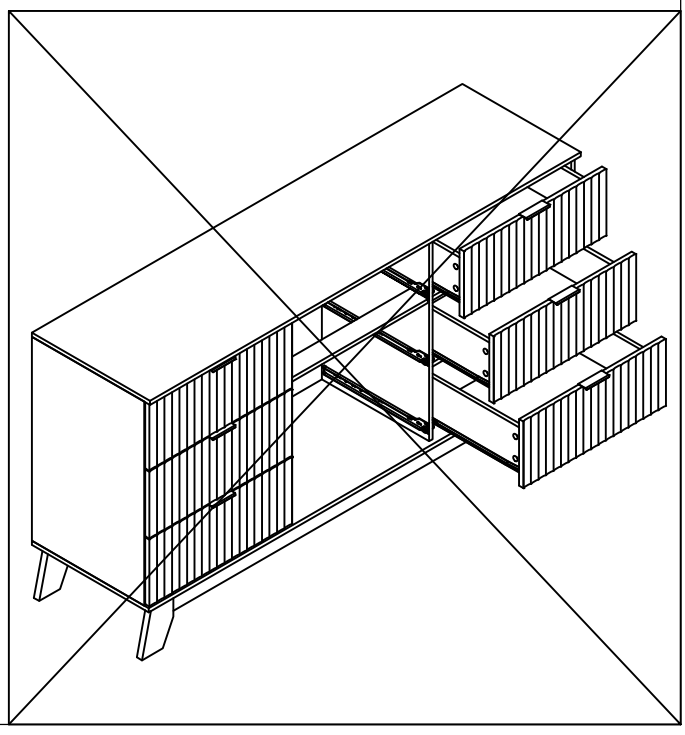


Please install drawer 21 in the middle of the cabinet according to the diagram. After installation, the left gap should be about 3mm.

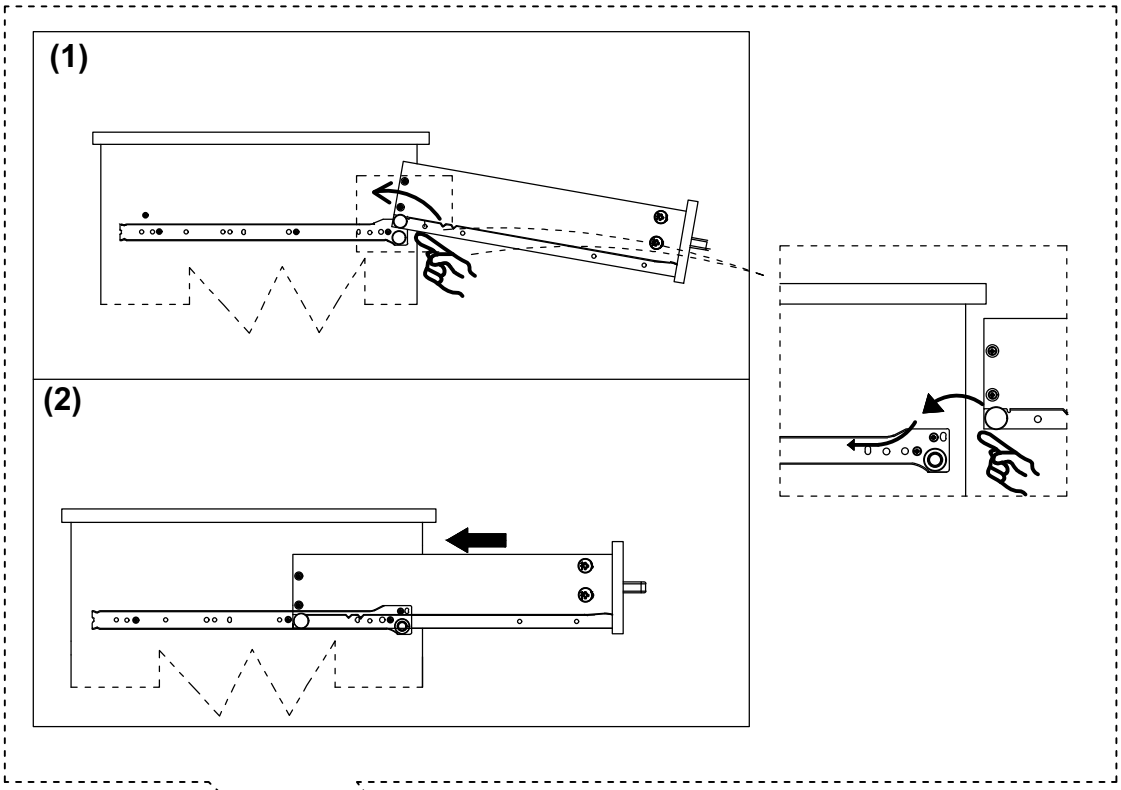


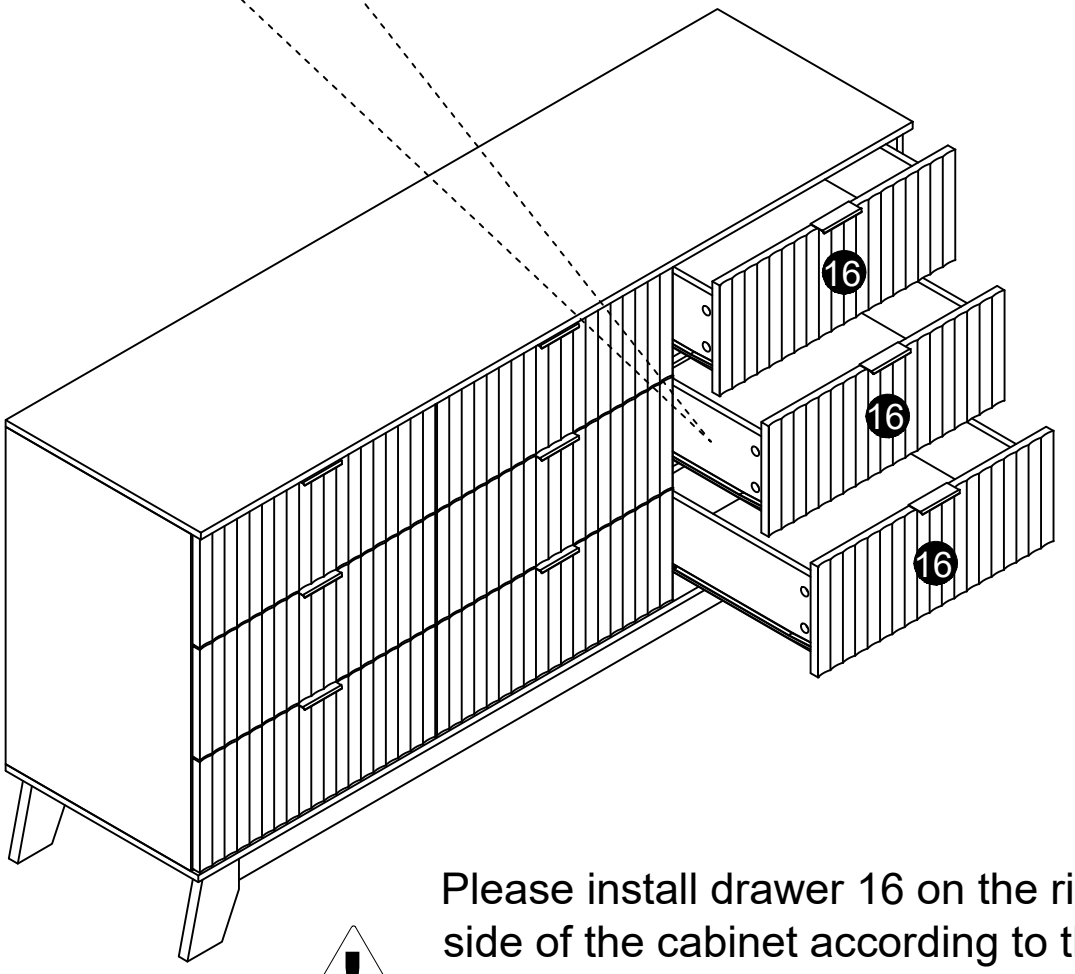


Please install drawer 16 on the right side of the cabinet according to the diagram. After installation, the gap on both sides should be about 3mm.

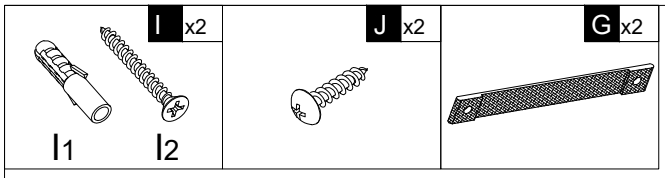


Done

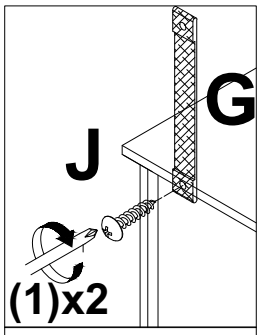


First fix the anti-rewind screw in the reserved hole of the product.

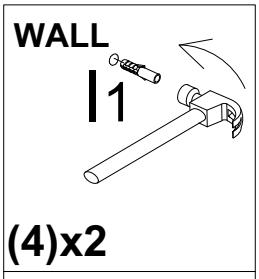


Then,put the expansion bolt into the hole

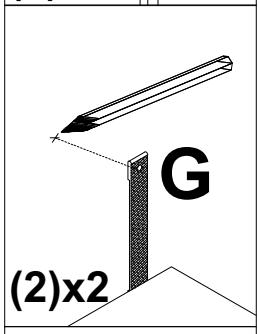

then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.

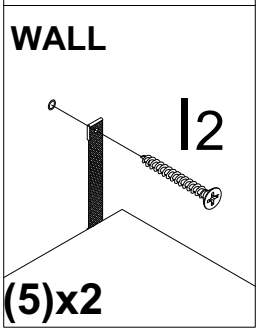

Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

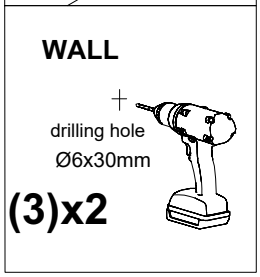

Then use a tape drill to make holes in the wall that are suitable for the product screws.