


# ASSEMBLY INSTRUCTIONS

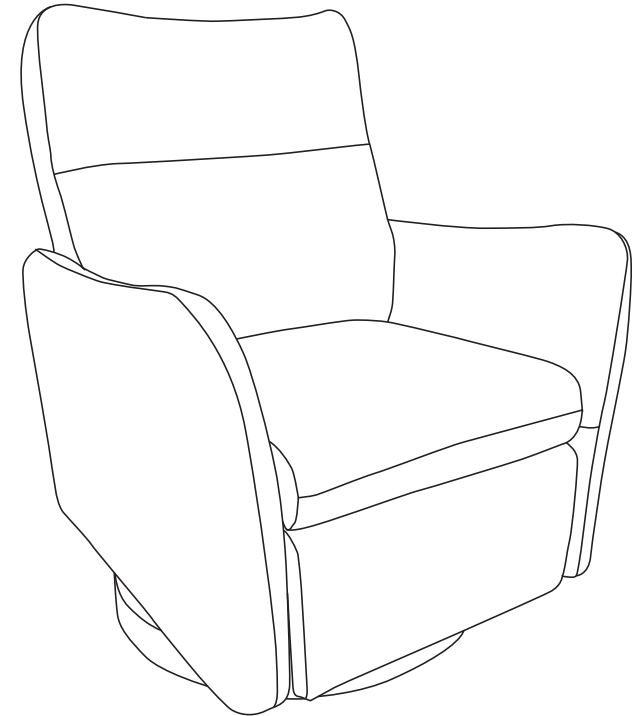

[www.artleon.com](http://www.artleon.com)  
Email: [hello@artleon.com](mailto:hello@artleon.com)  
16000 Phoebe Avenue La Mirada, CA 90638

## LEATHER SOFA

# SPARE PARTS

---



**Ax1**



**Bx1**



**Cx1**



**M6×25mm**

**Dx4+1extra**



**(Φ6+Φ18) \*1.5mm  
M6**

**Ex4+1extra**



**Φ25\*3mm**

**Fx4+2extra**



**M6**

**Gx1**

# 1



Ax1



Cx1




M6 x 25mm

Dx4



(Φ6+Φ18) \*1.5mm  
M6

Ex4

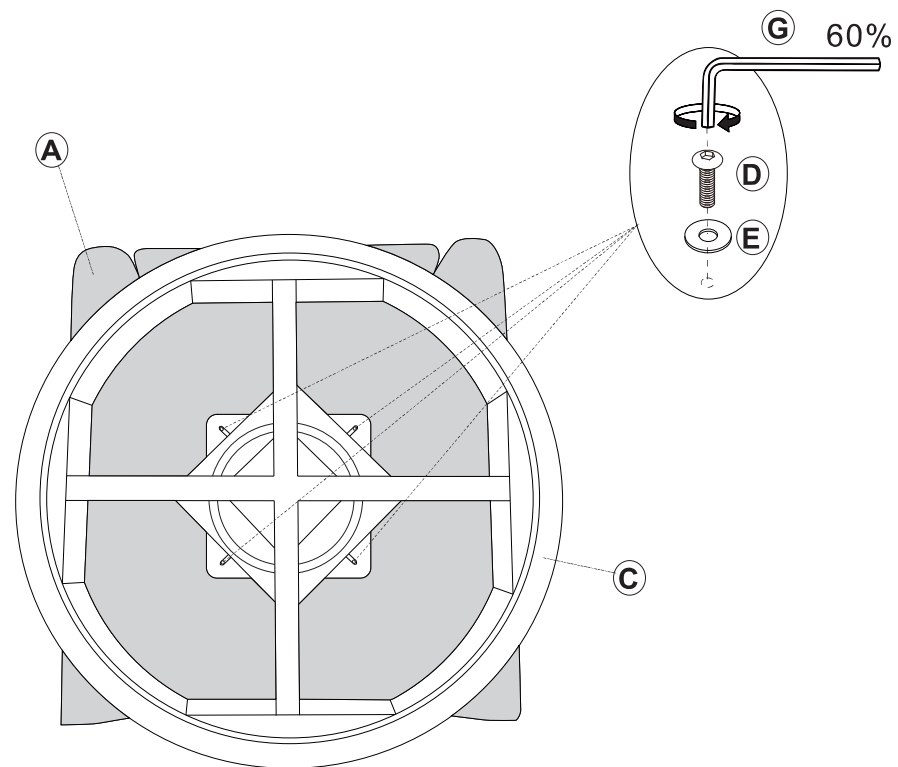

**2**





Φ25\*3mm

Fx4

**3**



Bx1

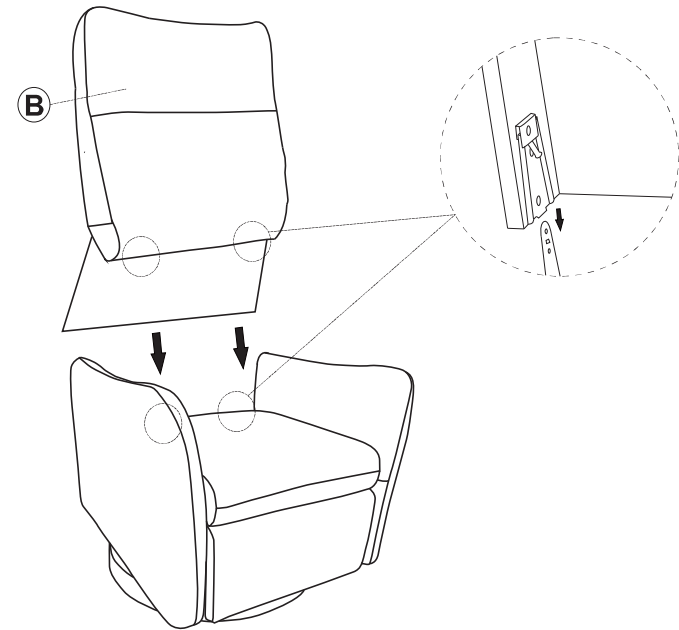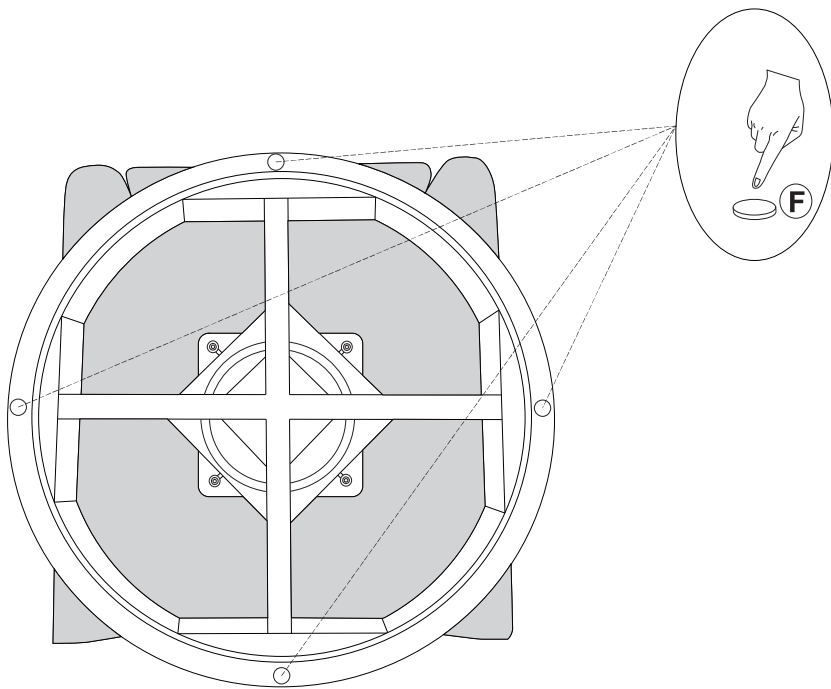

Attach four felt pads to the base.  
Use the two extra pads provided  
for adjustment if the surface is uneven.