


Installation Instruction

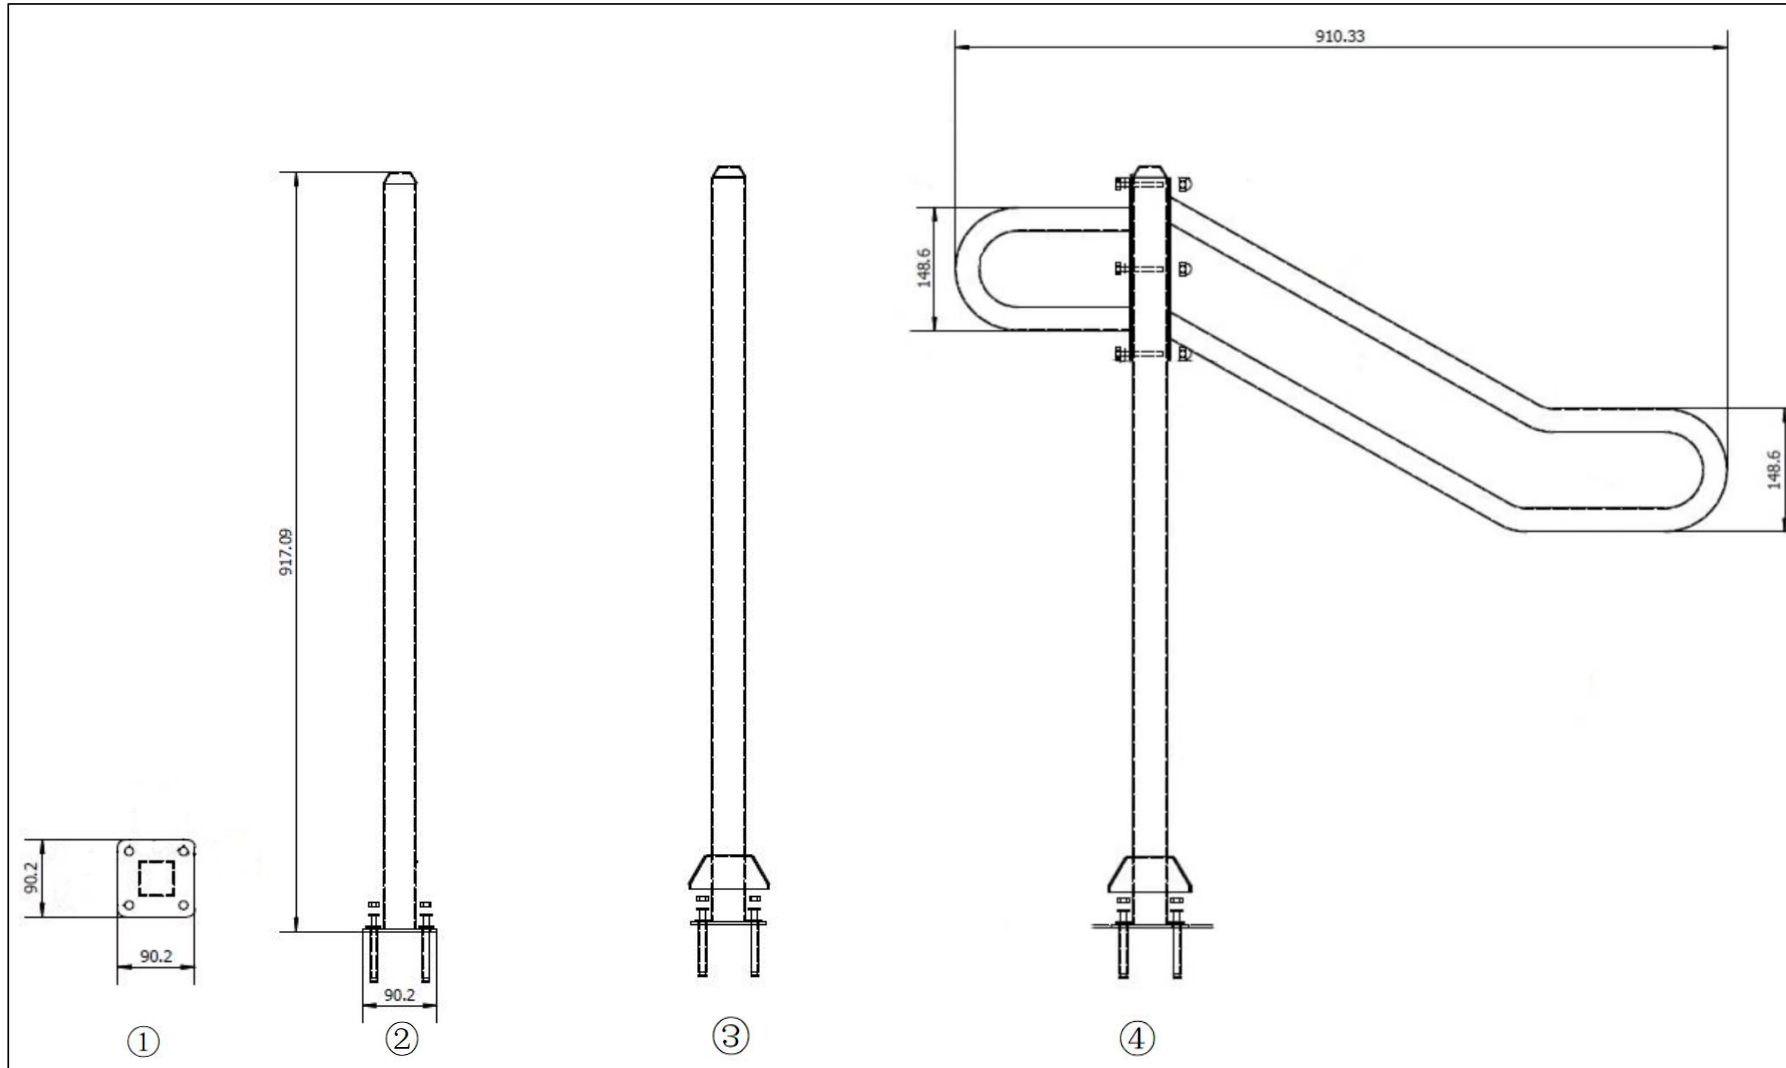

- ① Prepare the mounting holes in the ground of 3/8" diameter and 2.5" depth.
- ② Install the column and fix it with 4PCS expansion bolts.
- ③ Insert the bottom cover of the column from the top to the bottom.
- ④ Install the handrail with 3PCS connecting bolts.