
MonBlari

SHOWER ROOM

TW101

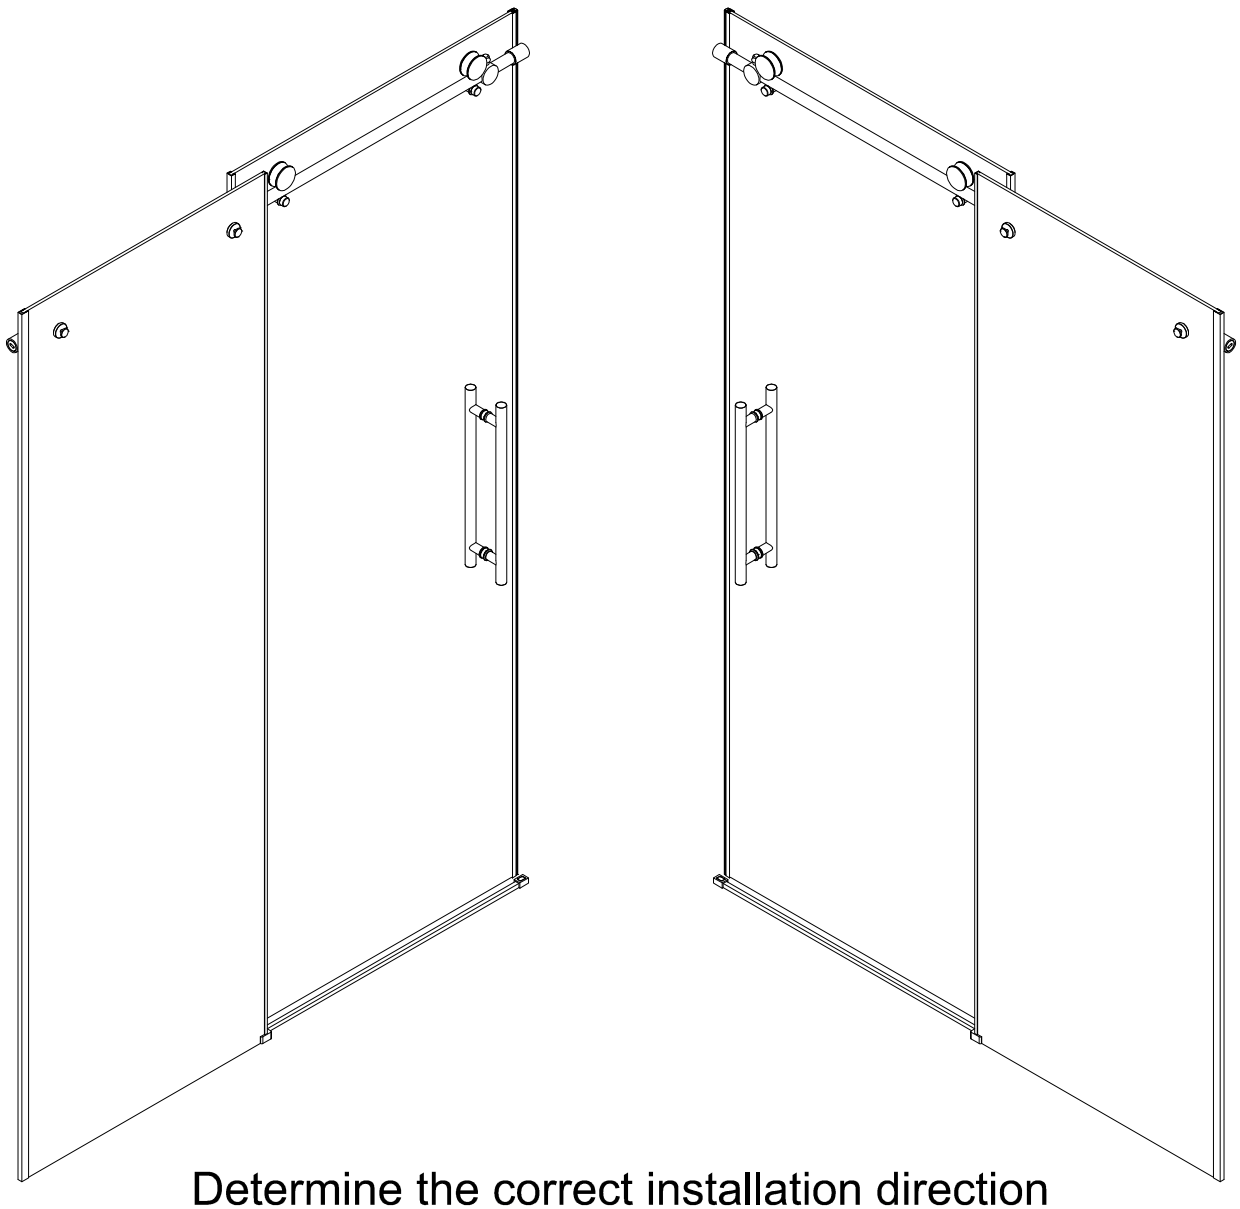

Determine the correct installation direction
(left/right) before installation

IMPORTANT SAFETY INFORMATION

⚠ WARNING

- Risk of injury. Tempered glass may shatter if damaged.
- Do not cut or drill tempered glass.
- Do not subject glass to impact.
- Wear safety gloves and safety goggles.
- Two-person installation is recommended.
- Failure to follow these instructions may result in serious injury.
- Always protect glass edges and corners during handling and installation.


INSTALLATION REQUIREMENTS


- Professional installation is strongly recommended.
- Install on a flat, finished, and plumb wall surface.
- Wall thickness tolerance should be within ±1/8 inch.

INSTALLATION NOTES

- Apply silicone sealant as instructed.
- Allow sealant to cure for at least 24 hours.
- Do not use the shower during this time.


TOOLS REQUIRED

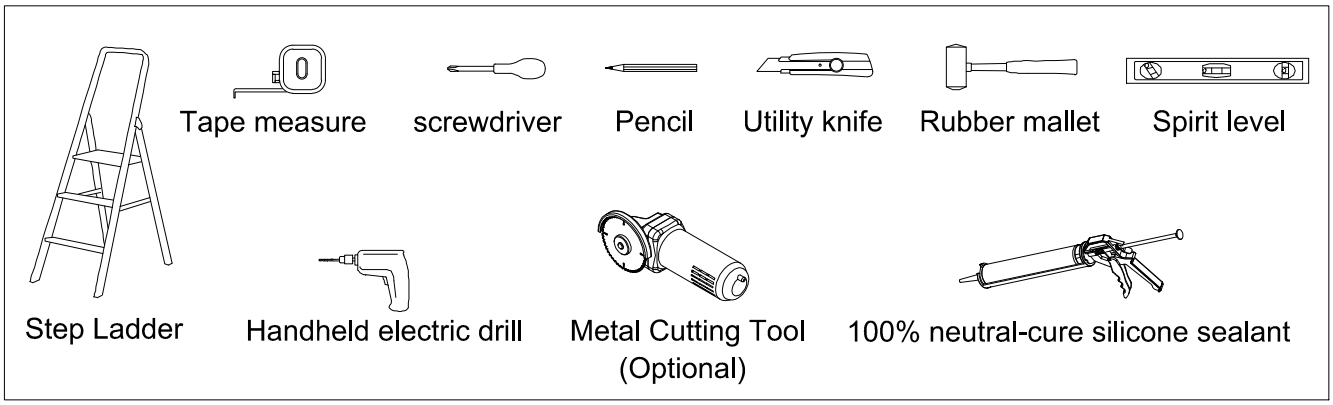

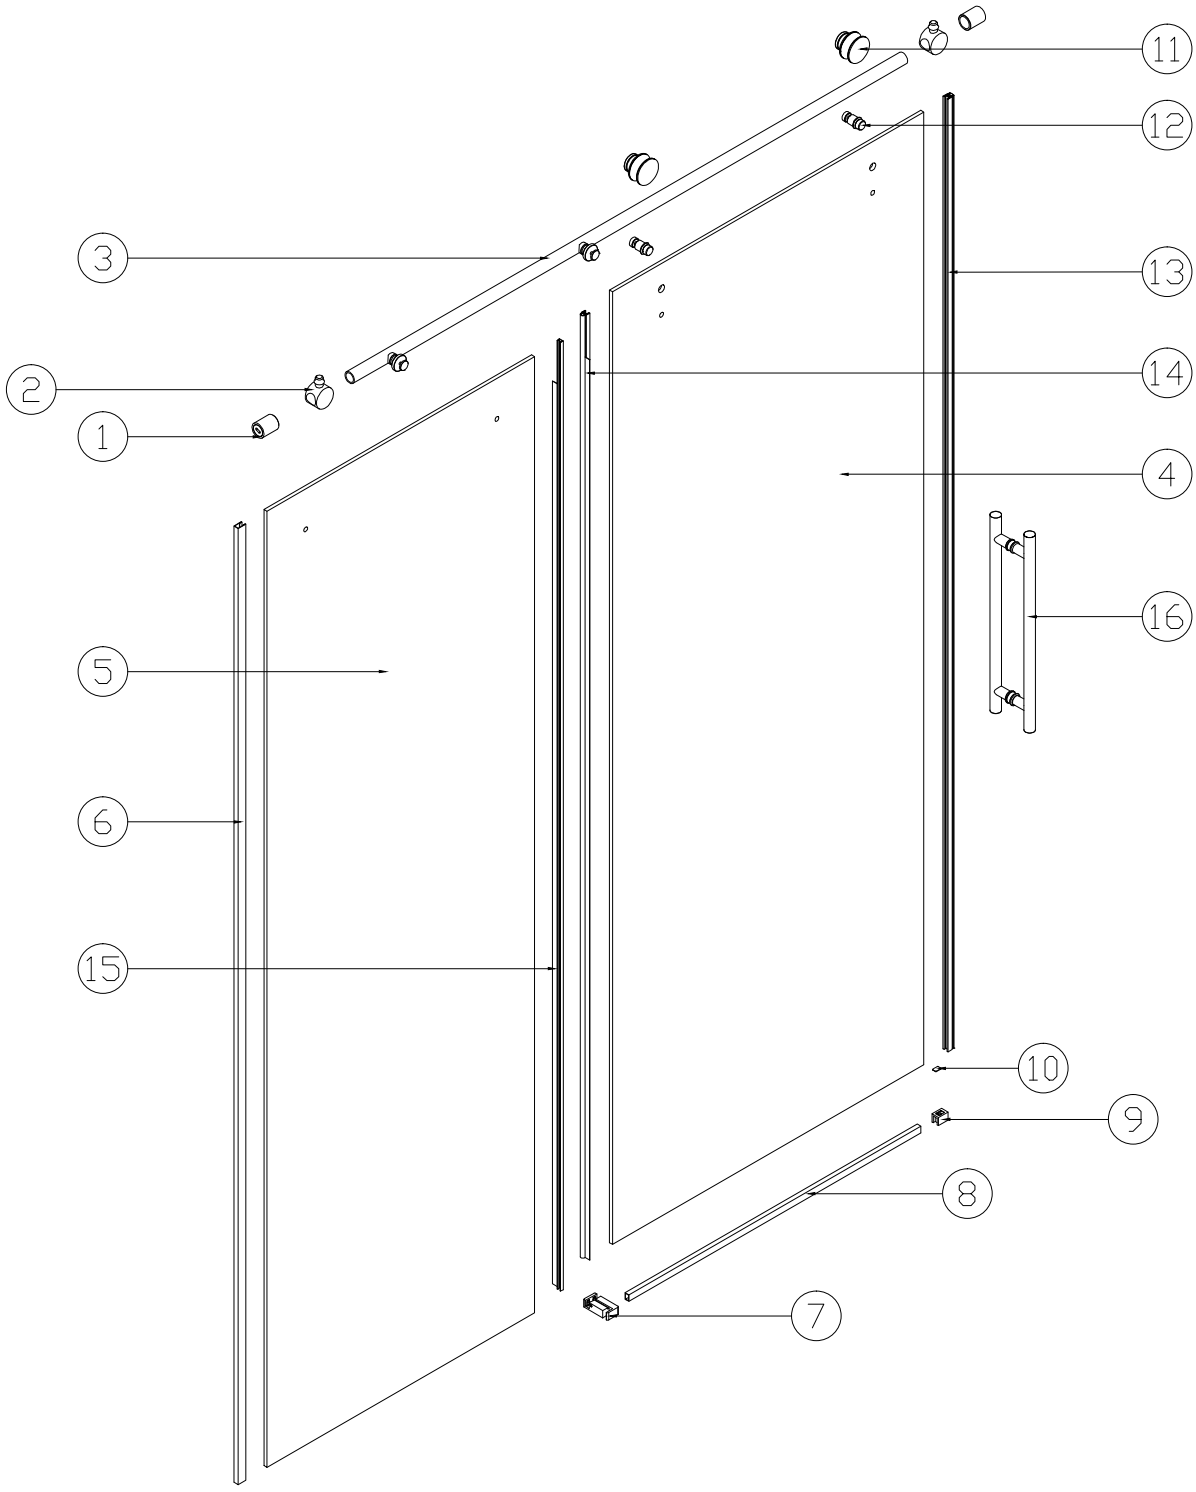


1	×2	6	×1	11	×2	16	×1
2	×2	7	×1	12	×2	17	×4
3	×1	8	×1	13	×1	18	×1
4	×1	9	×1	14	×1	19	×3
5	×1	10	×1	15	×1	20	

1

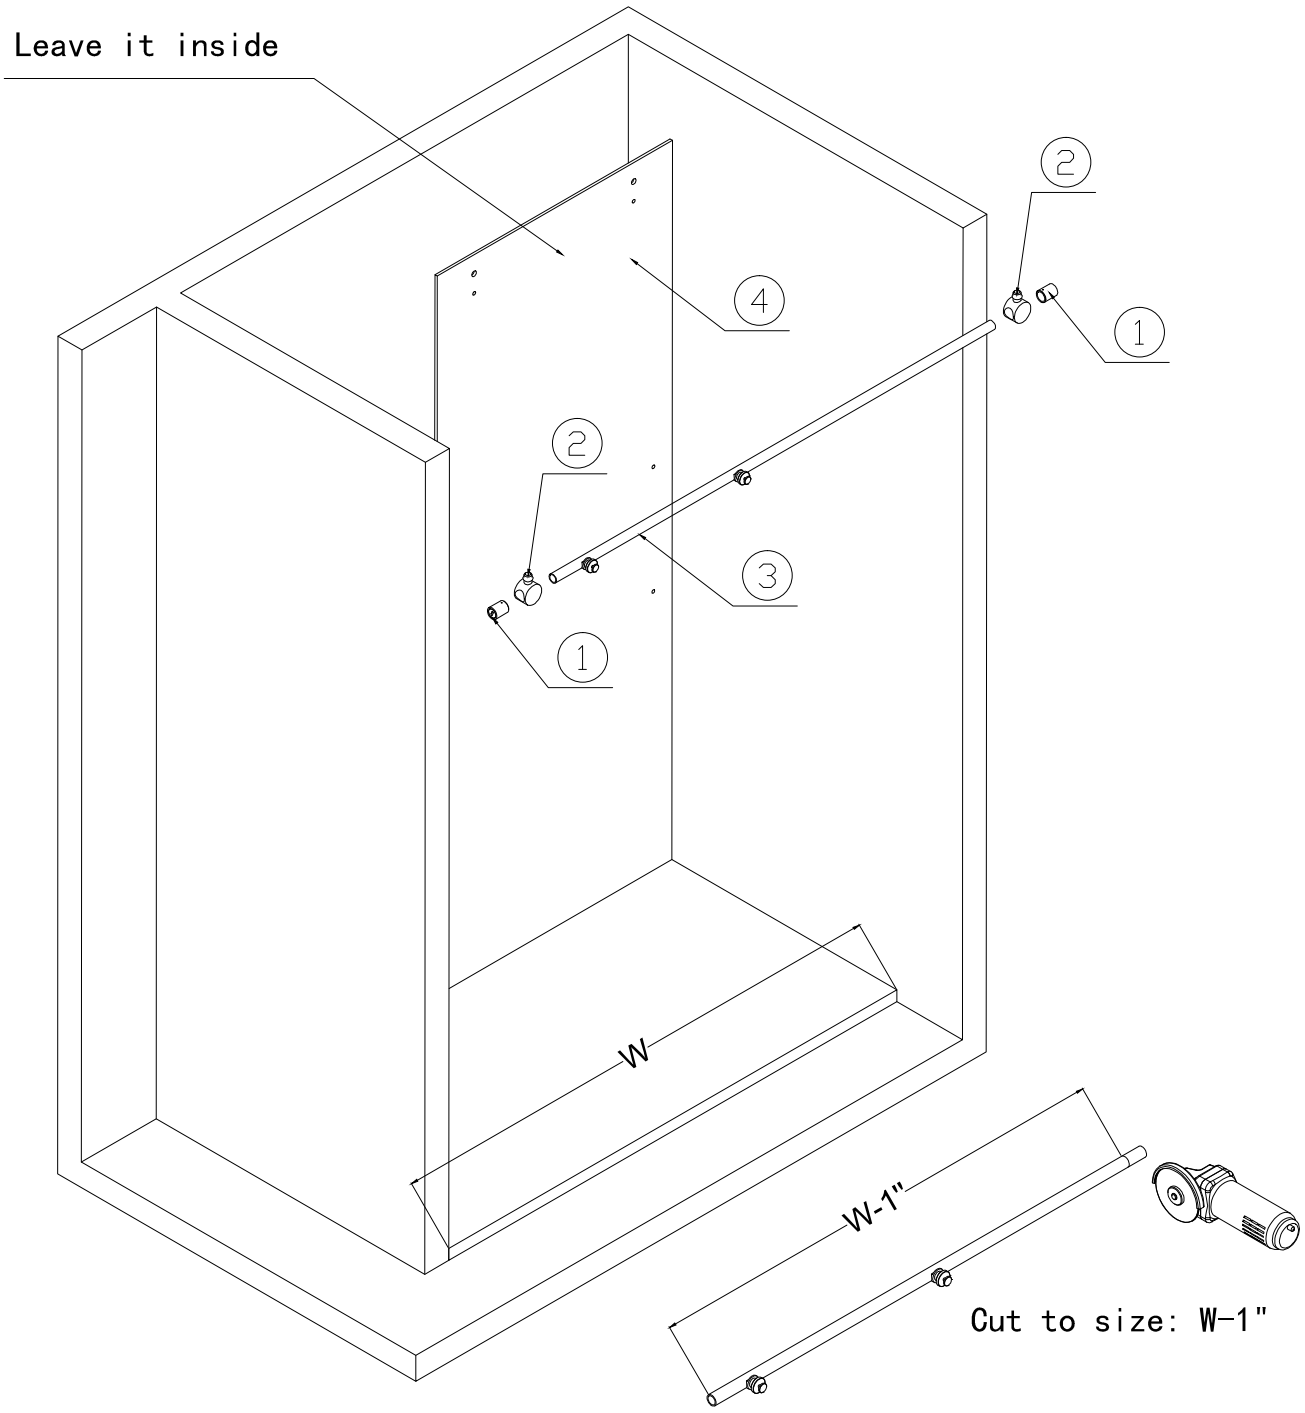


Cut to size: W-1"

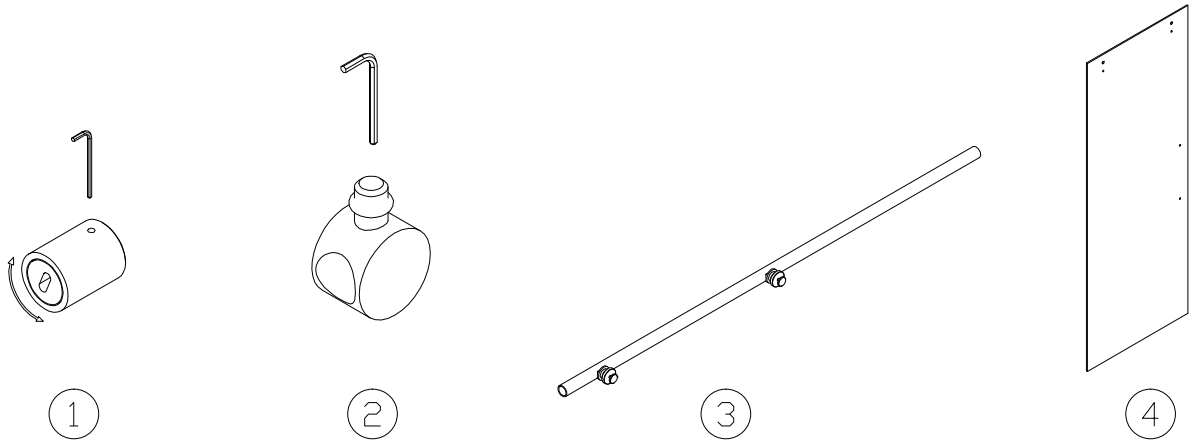


Position the panel on the inside first

2

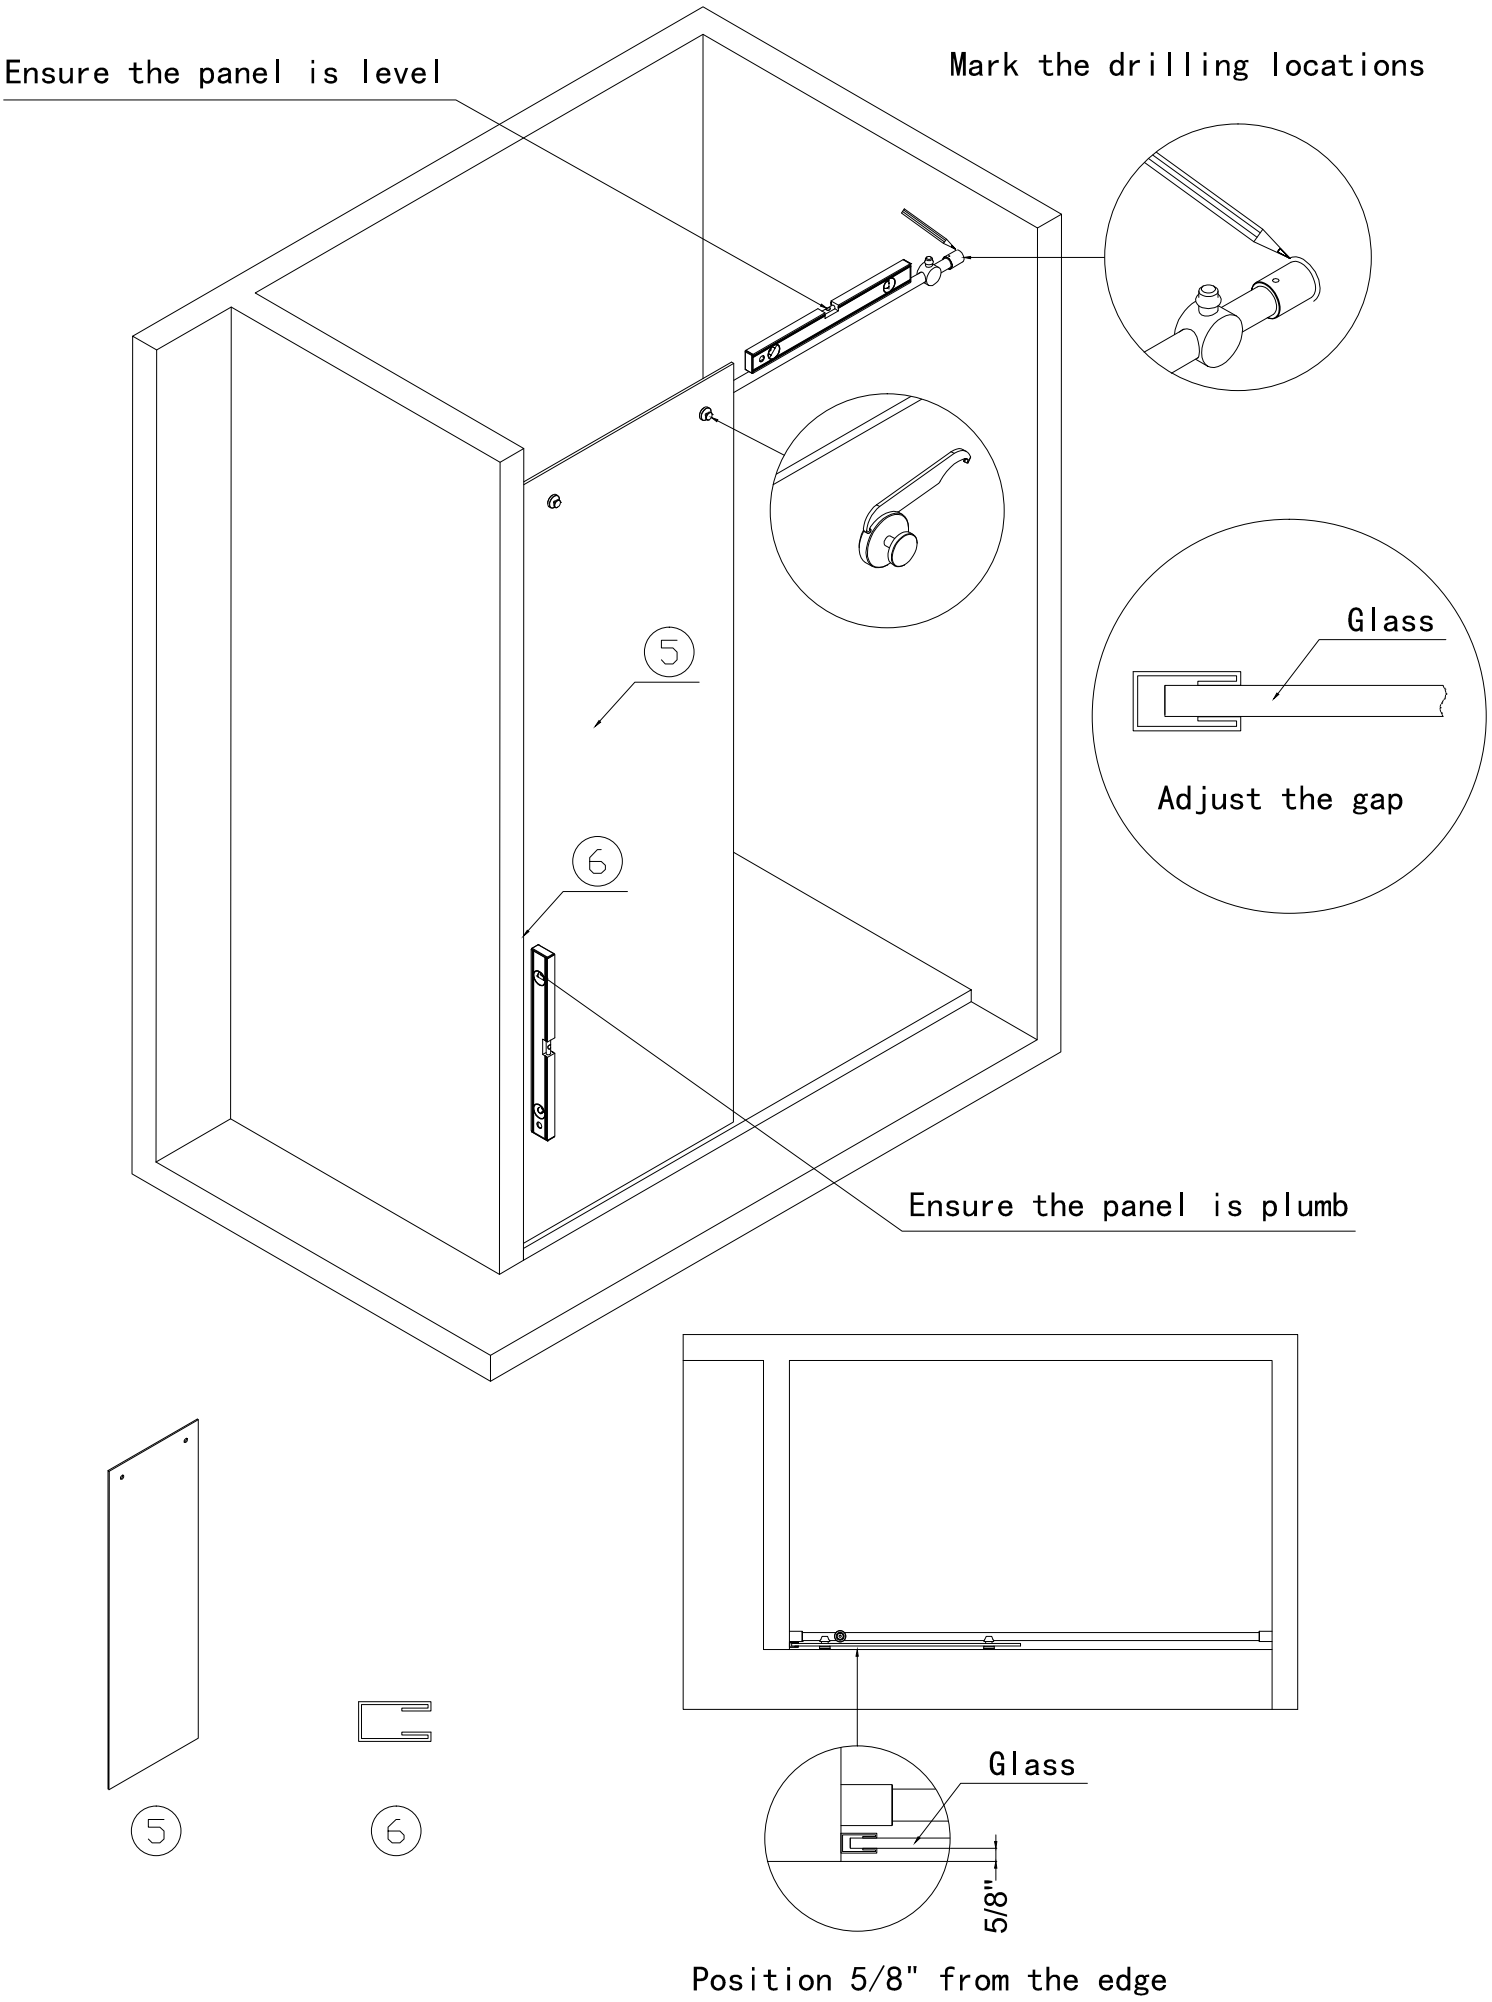
Ensure the panel is level
Mark the drilling locations
Glass
Adjust the gap
5
6
Ensure the panel is plumb
5
6
Glass
5/8"
Position 5/8" from the edge

3

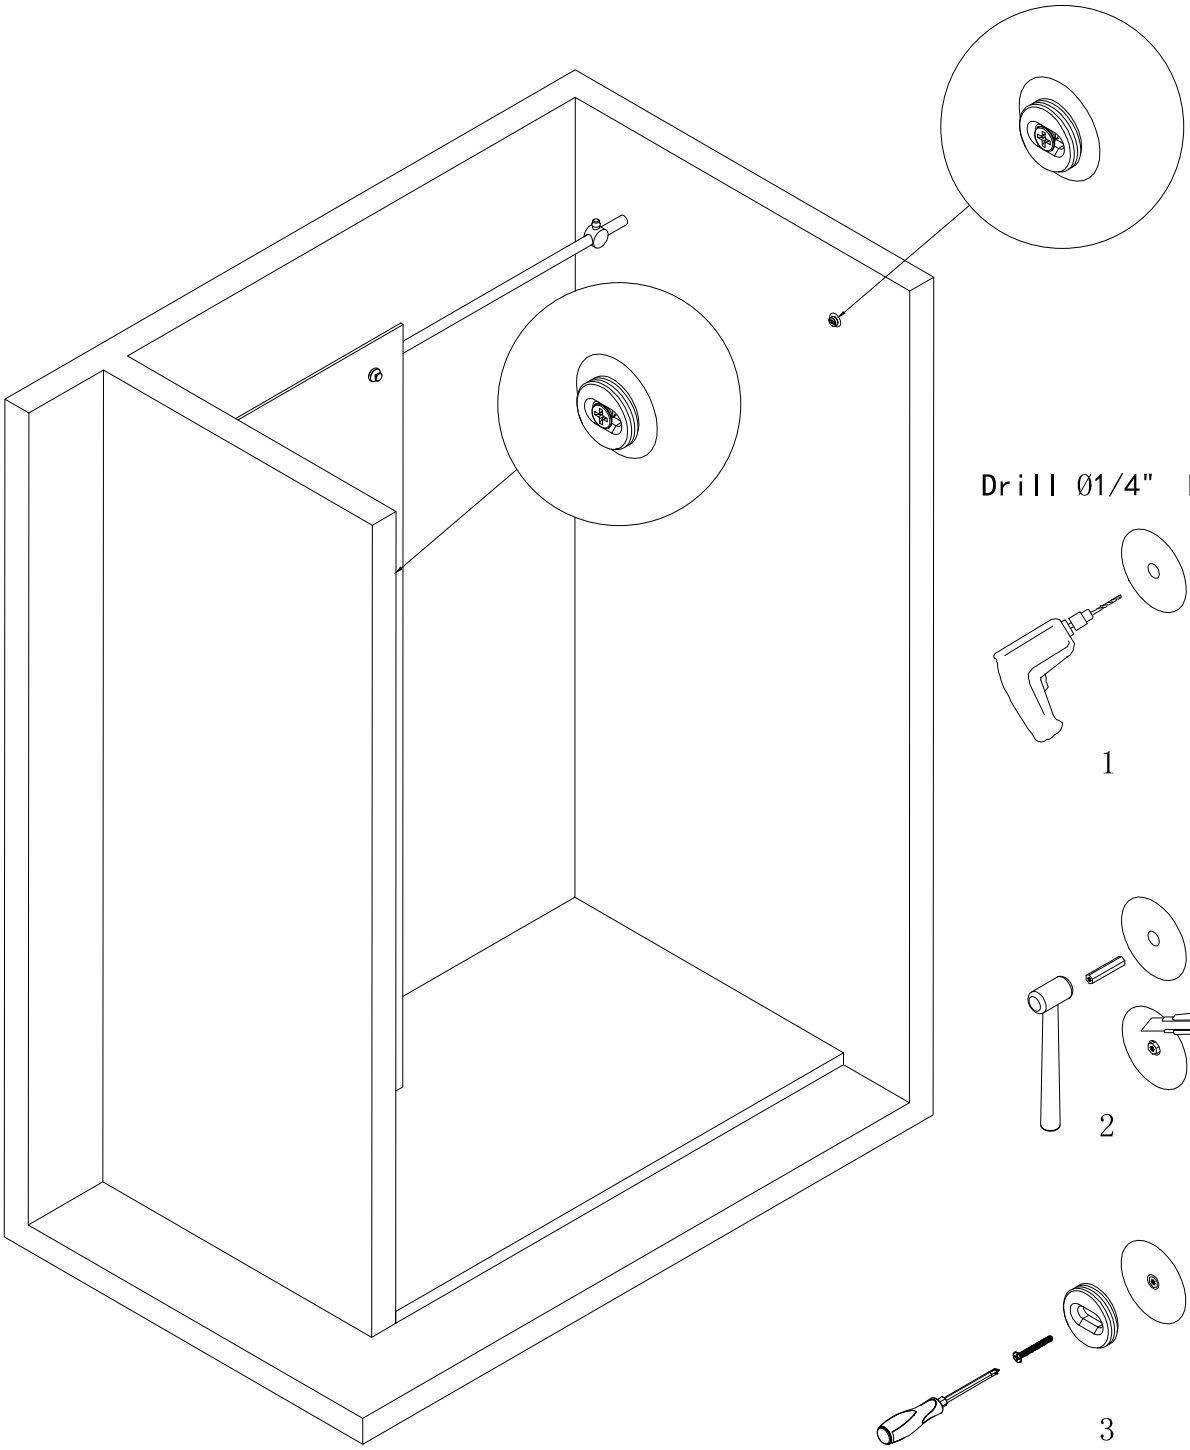


Drill Ø1/4" holes


1

2

3

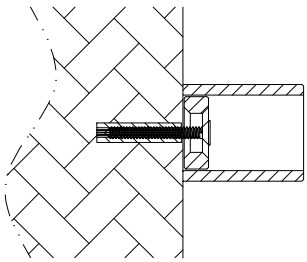



Please use M4x30mm self-tapping screws

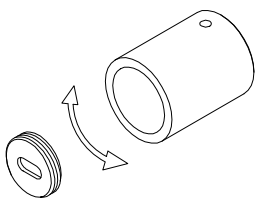

Drill holes at the marked locations


4

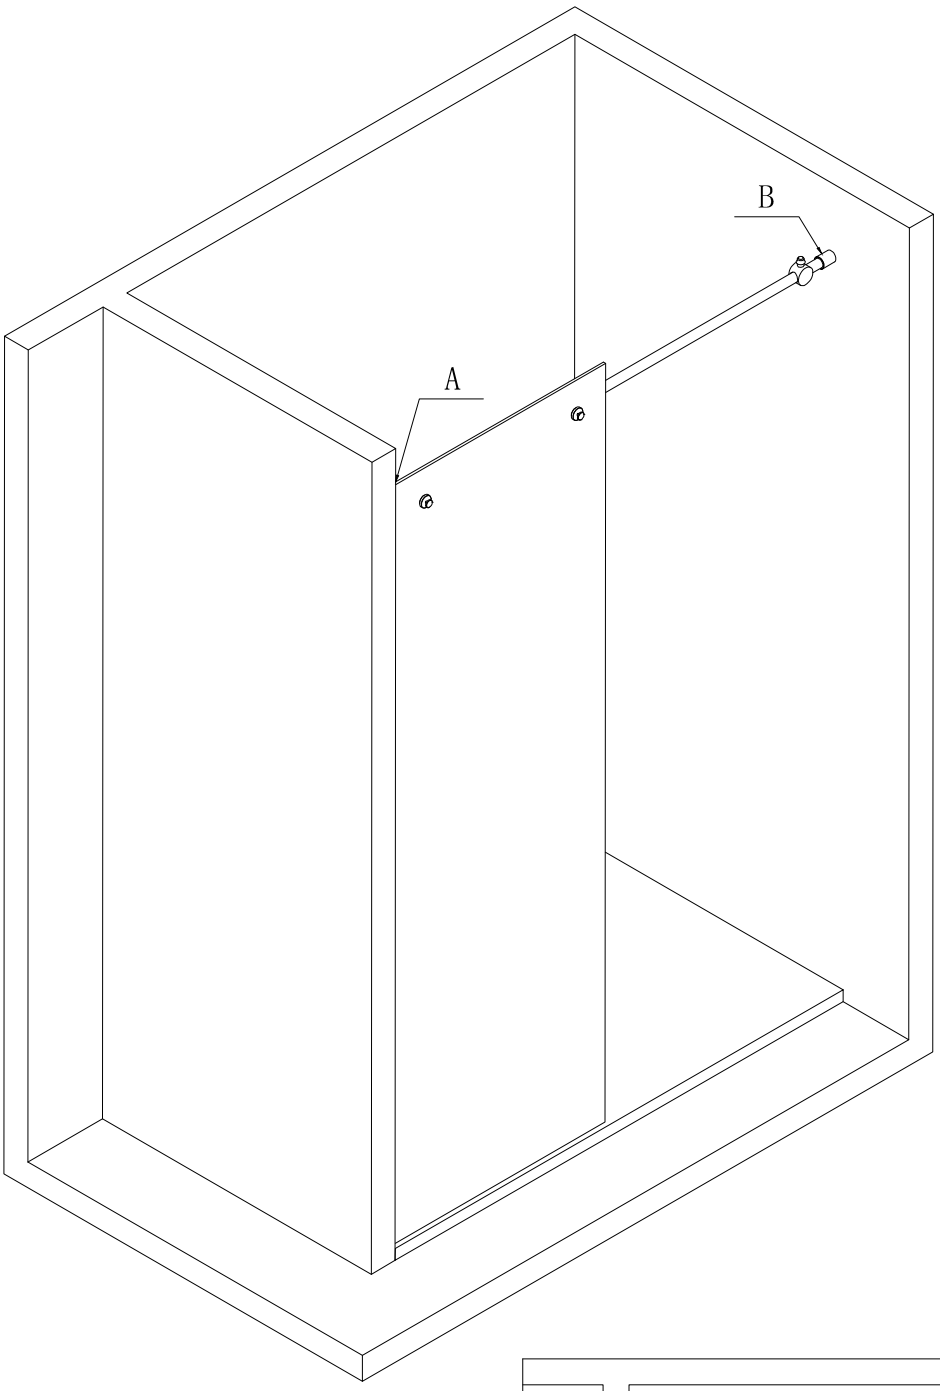

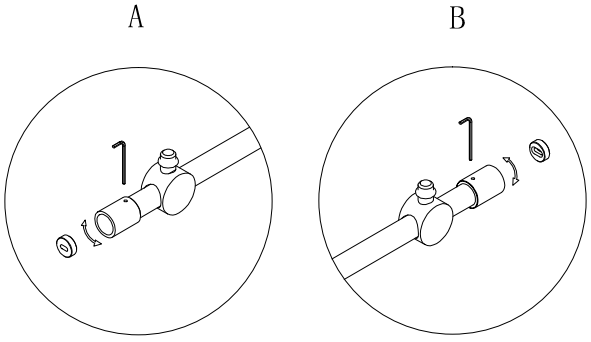


Rotate the mounting base

Use a wrench to tighten the screws.

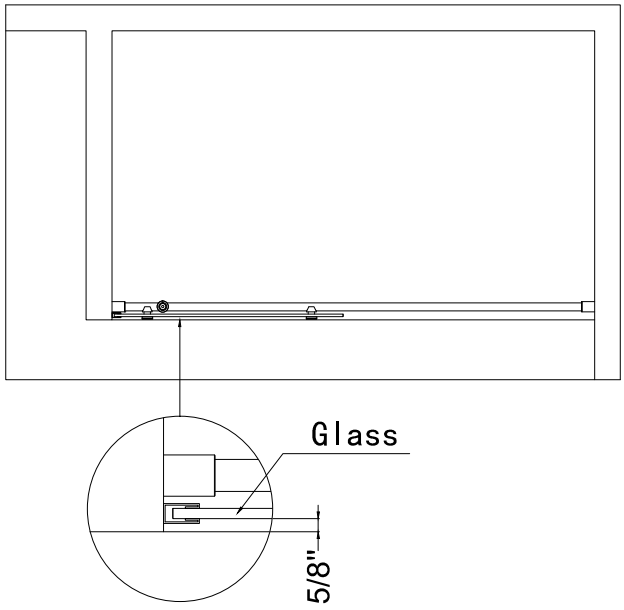


Position 5/8" from the edge

5

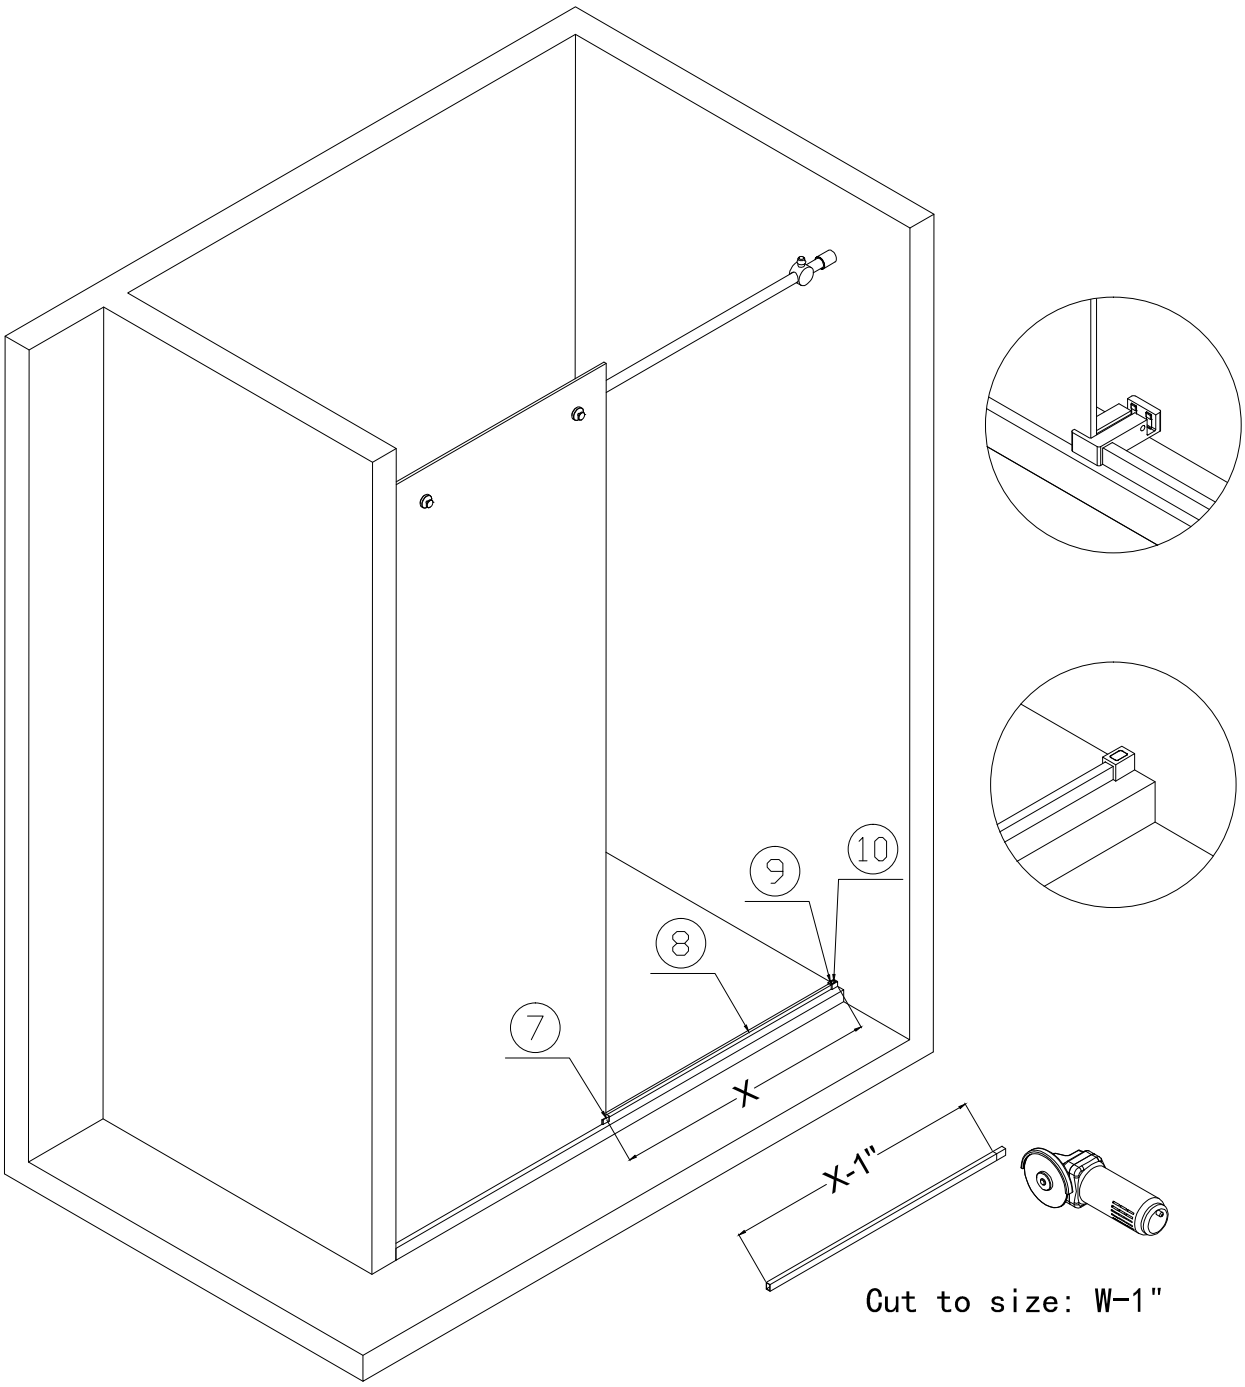


Cut to size: W-1"

Please use M4x18mm self-tapping screws

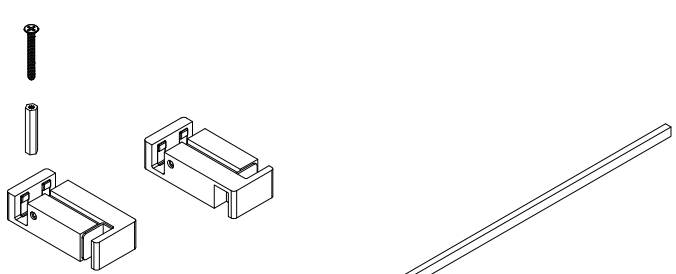

7 8


Different installation directions require different components

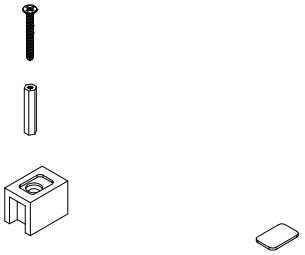



9 10

Please use M4x30mm self-tapping screws


6

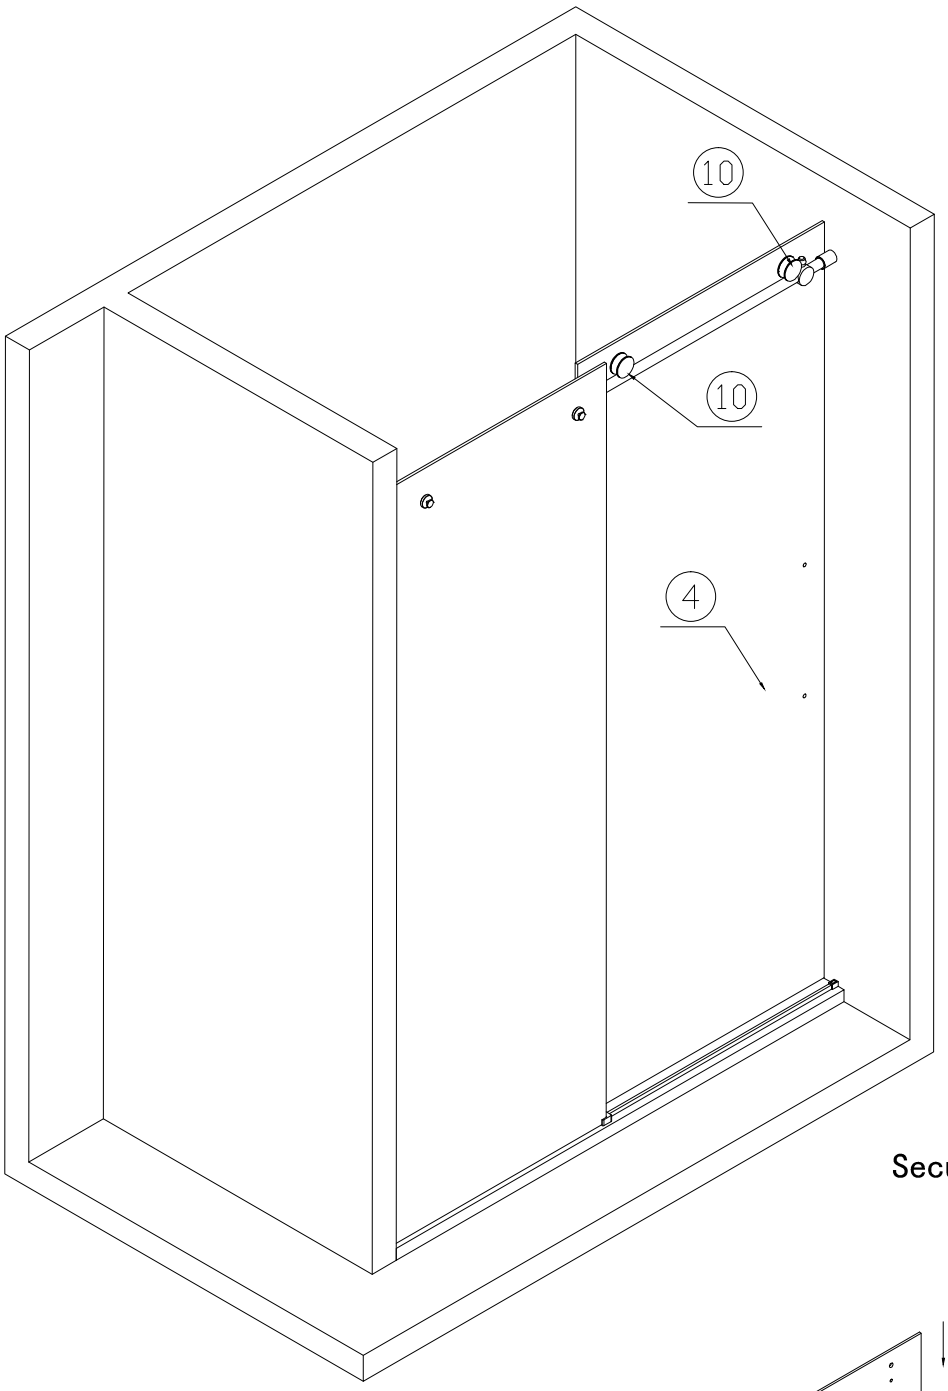

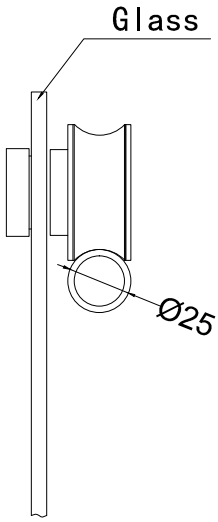

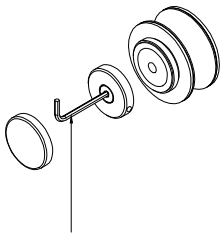


Secure the glass panel




4





10

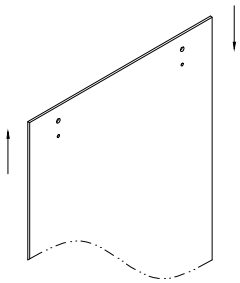

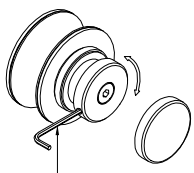


Adjust the height of the glass panel

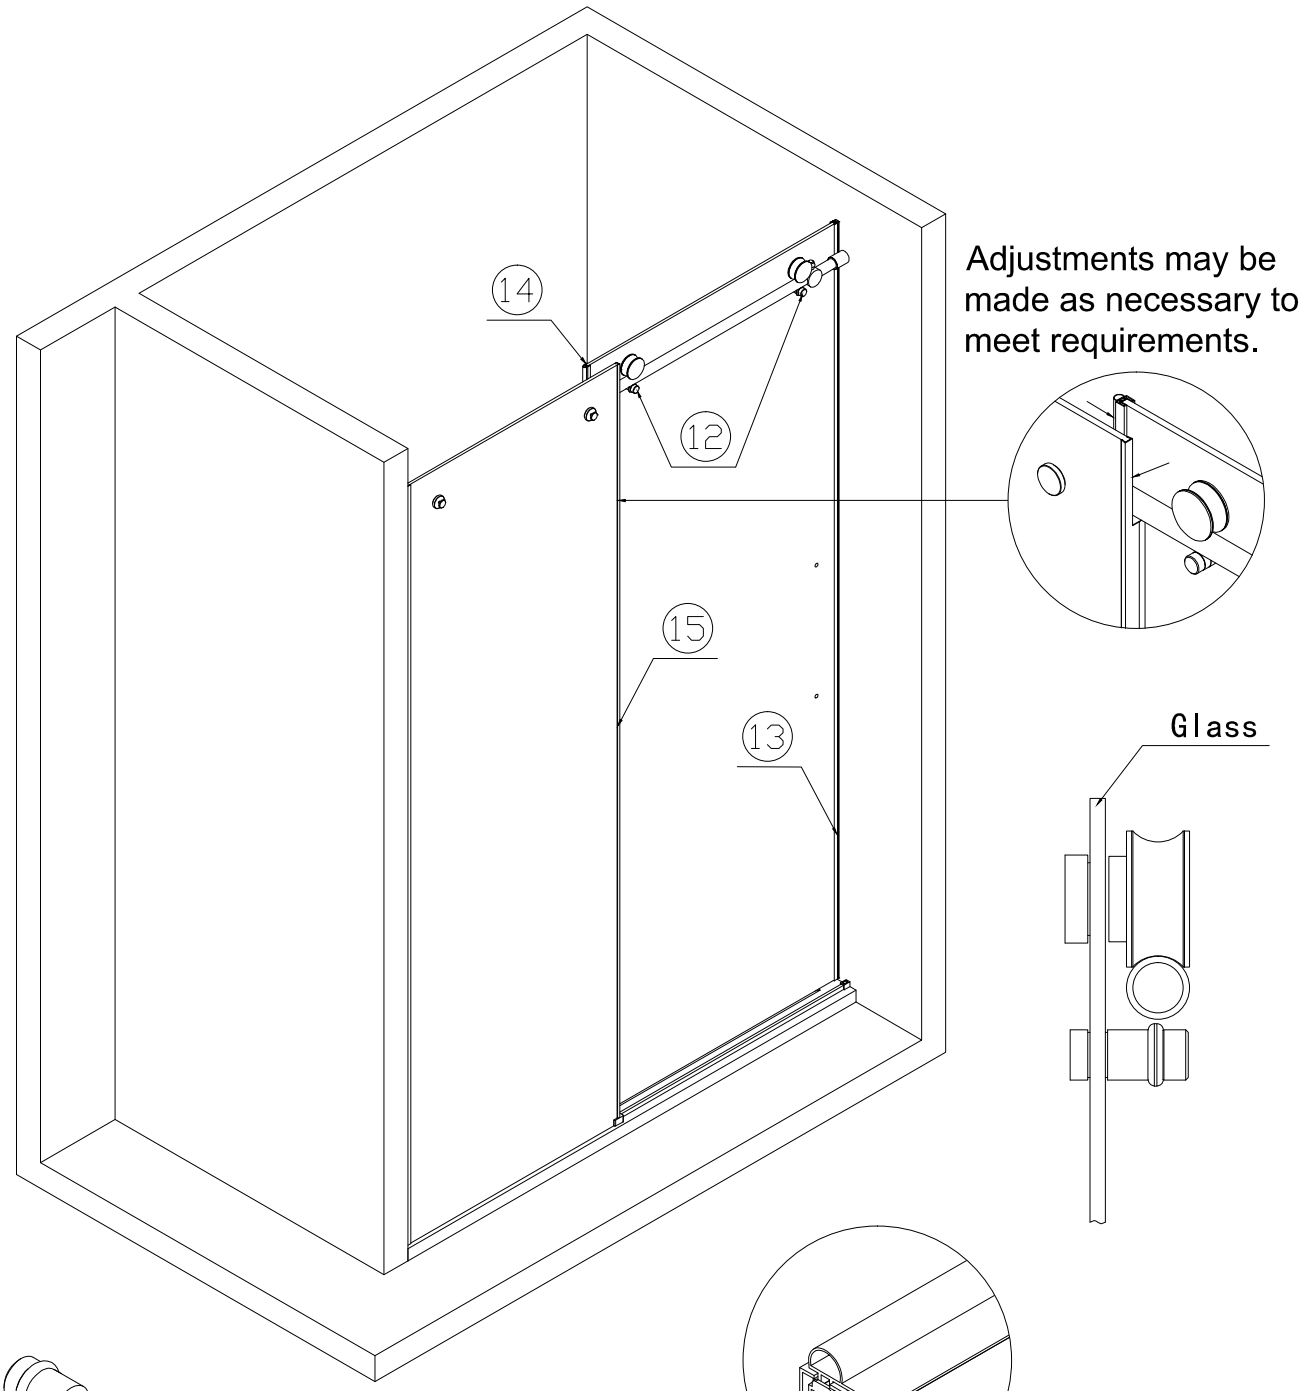

14
12
15
13
Adjustments may be made as necessary to meet requirements.
Glass
bottom
Misaligned adjustable



12



13



14


15

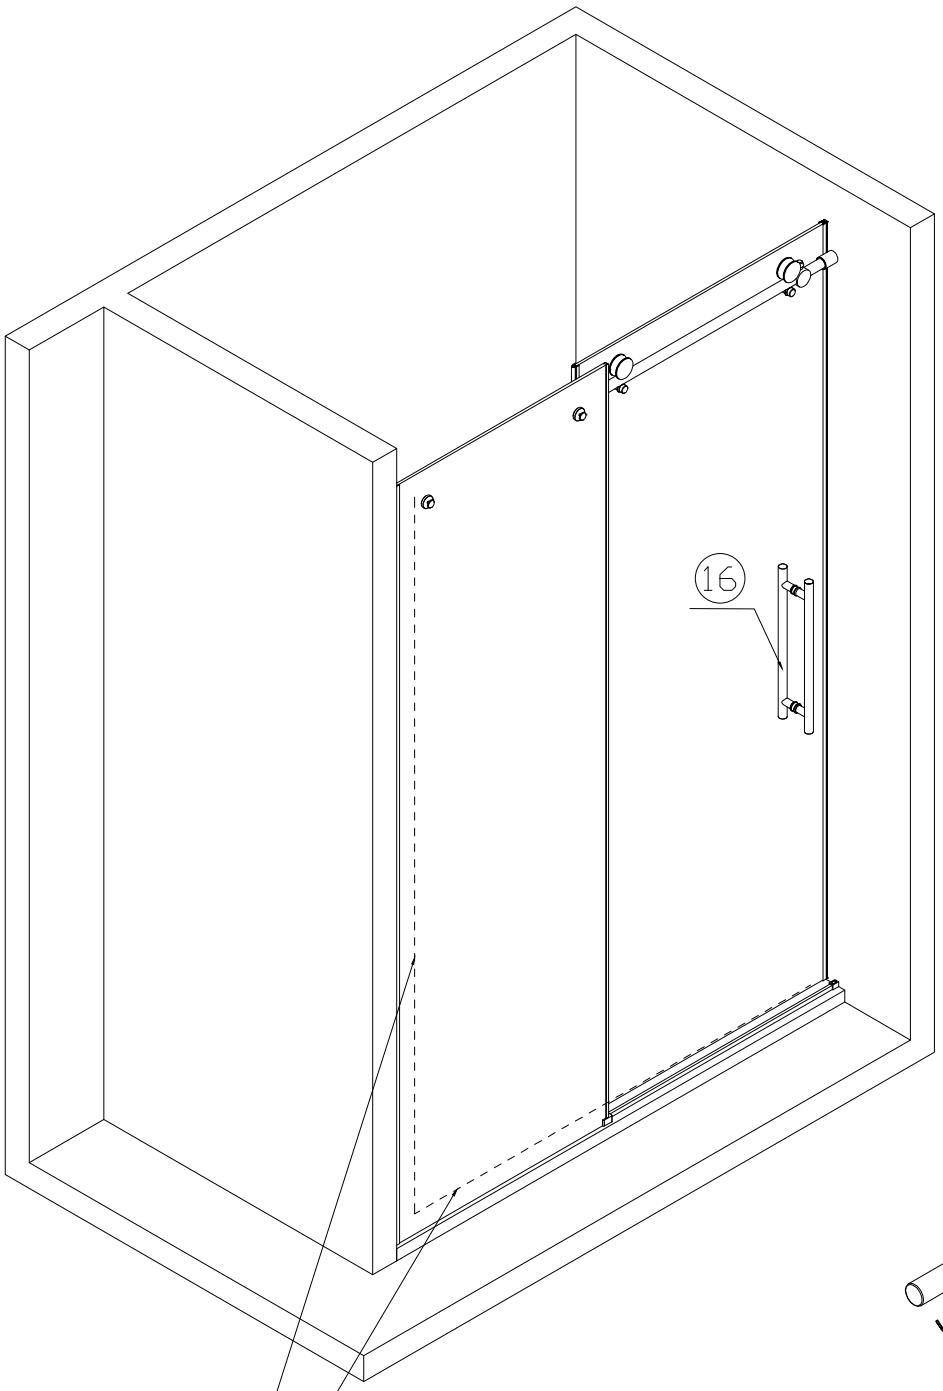

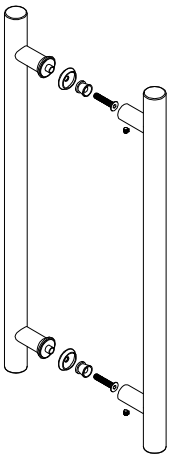

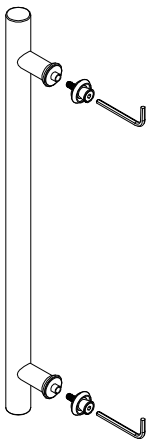

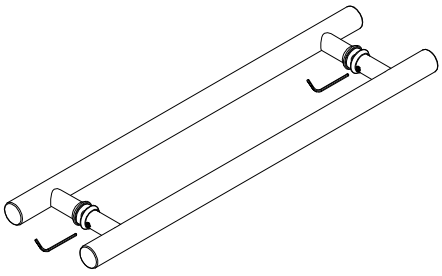

Apply silicone sealant to the gaps between the wall and the metal frame, and between the metal frame and the floor.



16

Allow 24 hours for silicone to fully cure before use

