


ASSEMBLY INSTRUCTIONS
HALL TREE WITH STORAGE BENCH
PATÈRE AVEC BANC COFFRE
PERCHERO CON BANCO BAÚL

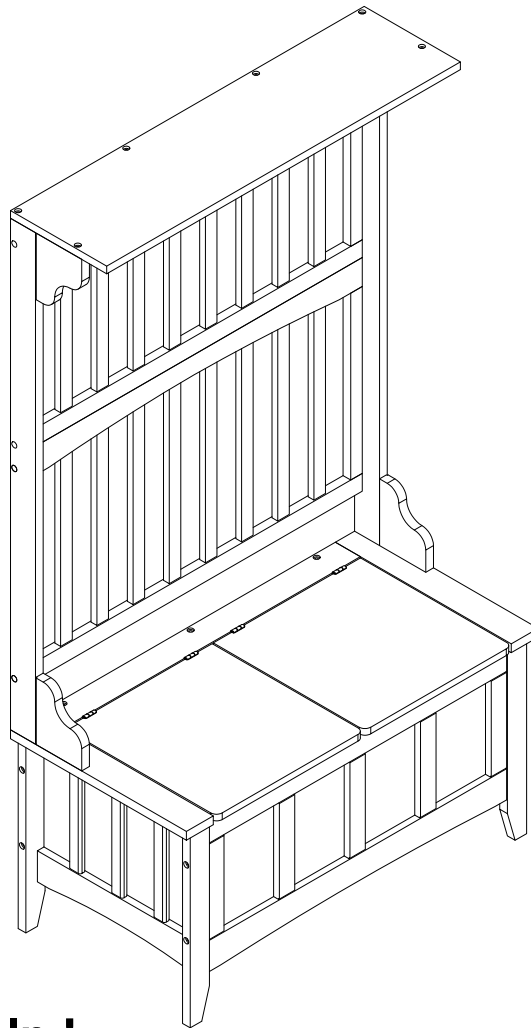


We are here to help !


HARDWARE IDENTIFICATION:




A x 08
(Ø1/4" x 2-1/2"L)

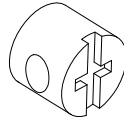


B x 08
(Ø1/4" x 1/2"L)




C x 18
(Ø1/4" x 1-1/2"L)



D x 03
(Ø1/4" x 2"L)

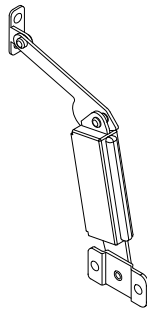

E x 01

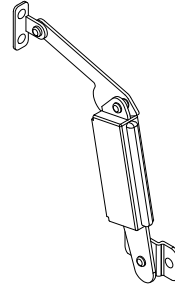


F x 01



G x 29
(Ø5/16" x 1-3/16"L)




H x 04



I x 16
(#3.5 x 5/8"L)


HARDWARE IDENTIFICATION:

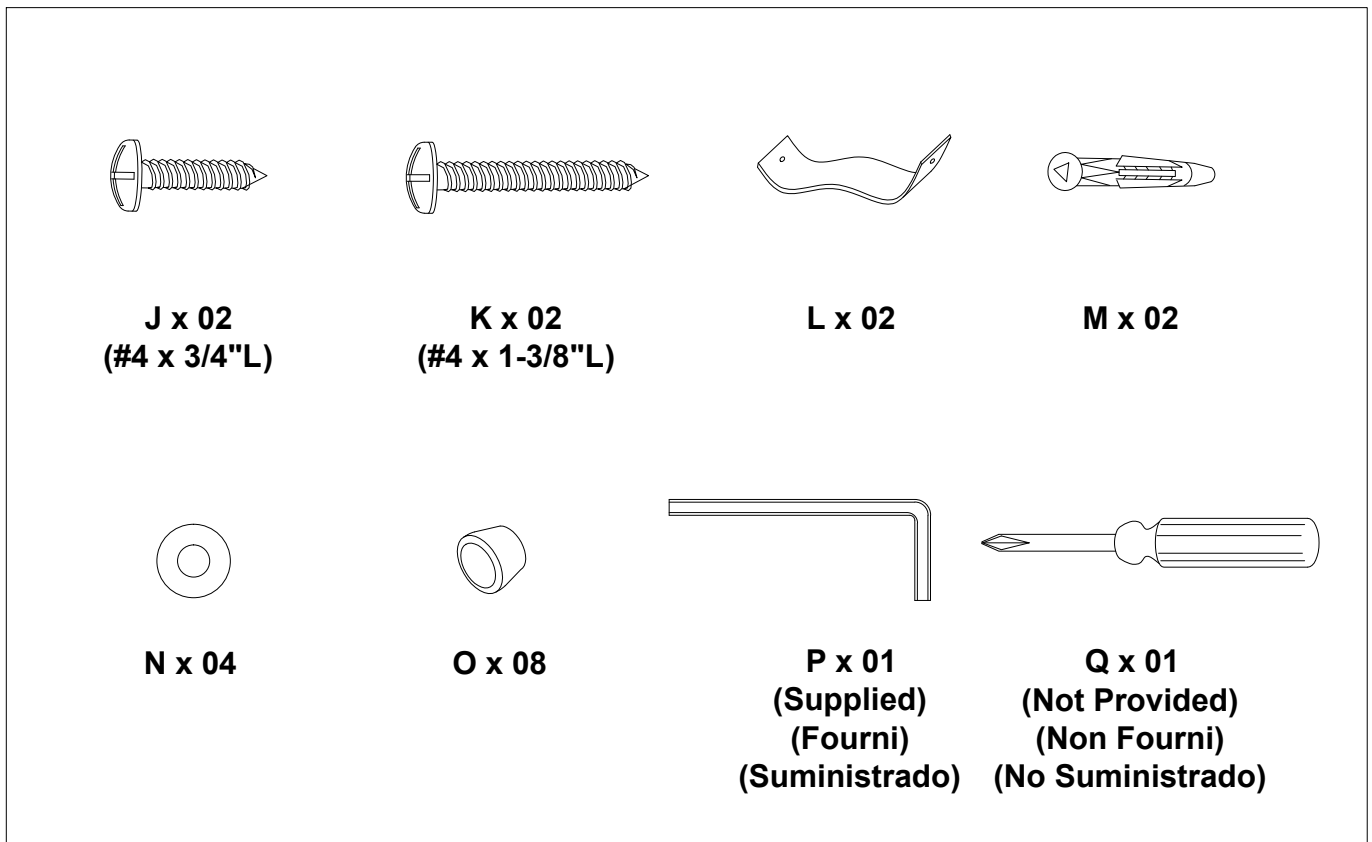

PART IDENTIFICATION:

PARTS	DESCRIPTION	QTY
#1	SEAT	01
#2	LEFT SIDE FRAME	01
#3	RIGHT SIDE FRAME	01
#4	BACK FRAME	01
#5	FRONT FRAME	01
#6	BOTTOM PANEL	01
#7	LEFT SIDE RAIL	01
#8	RIGHT SIDE RAIL	01
#9	TOP PANEL	01
#10	UPPER BACK FRAME	01
#11	LOWER BACK FRAME	01

PART IDENTIFICATION:

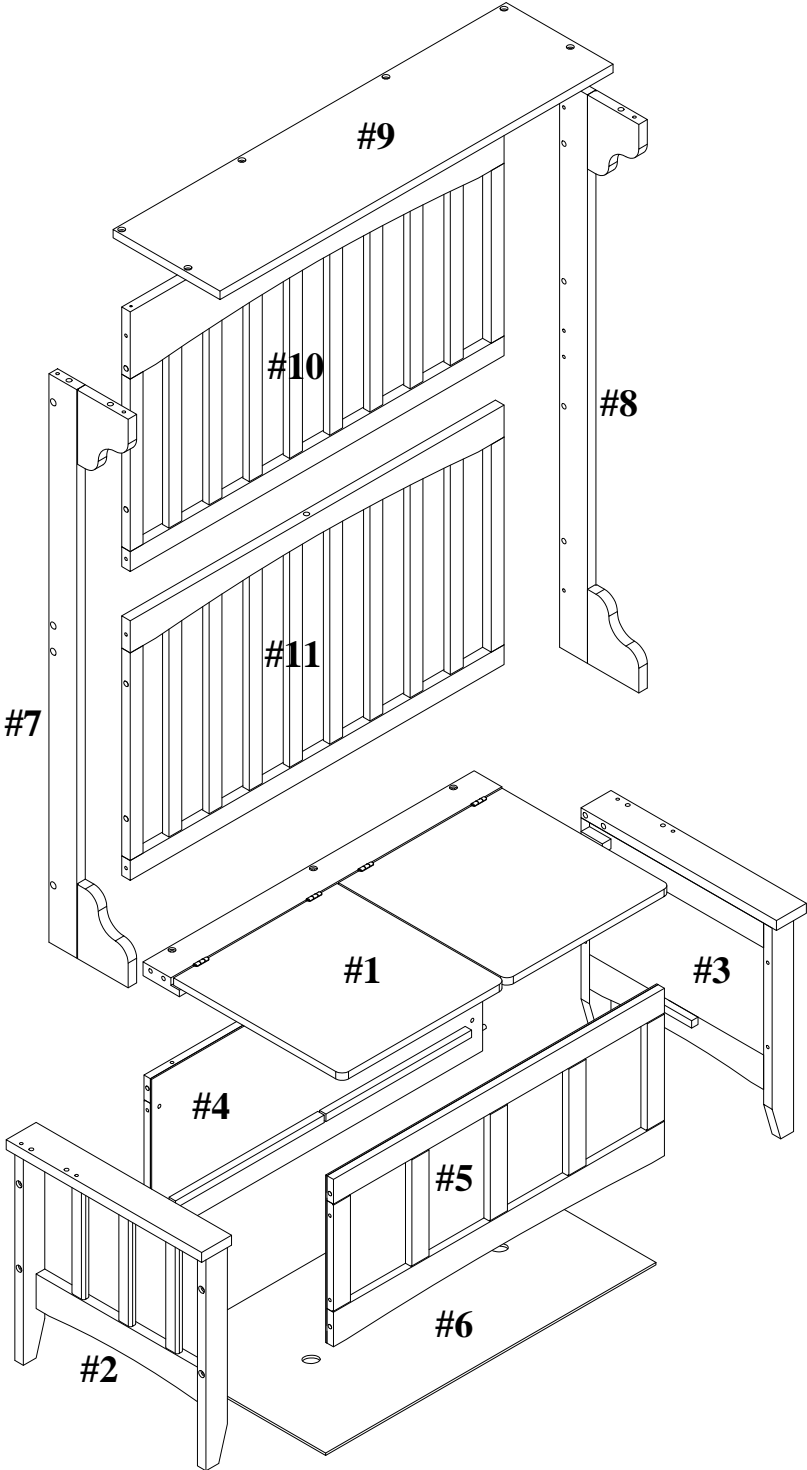

IMPORTANT: - Do not tighten bolts completely until all bolts are completely lined up and inserted into holes/nuts.

- Do not over tighten bolts to avoid stripping.


IMPORTANT: - Ne serrez pas complètement les boulons jusqu'à ce qu'ils soient bien alignés et insérés dans les trous et les écrous.






- Ne serrez pas excessivement les boulons pour éviter d'érafler la surface.

IMPORTANT: - No apriete completamente los pernos hasta que estén bien alineados e insertados en los orificios y las tuercas.


- No apriete exageradamente los pernos para evitar dañar el recubrimiento.

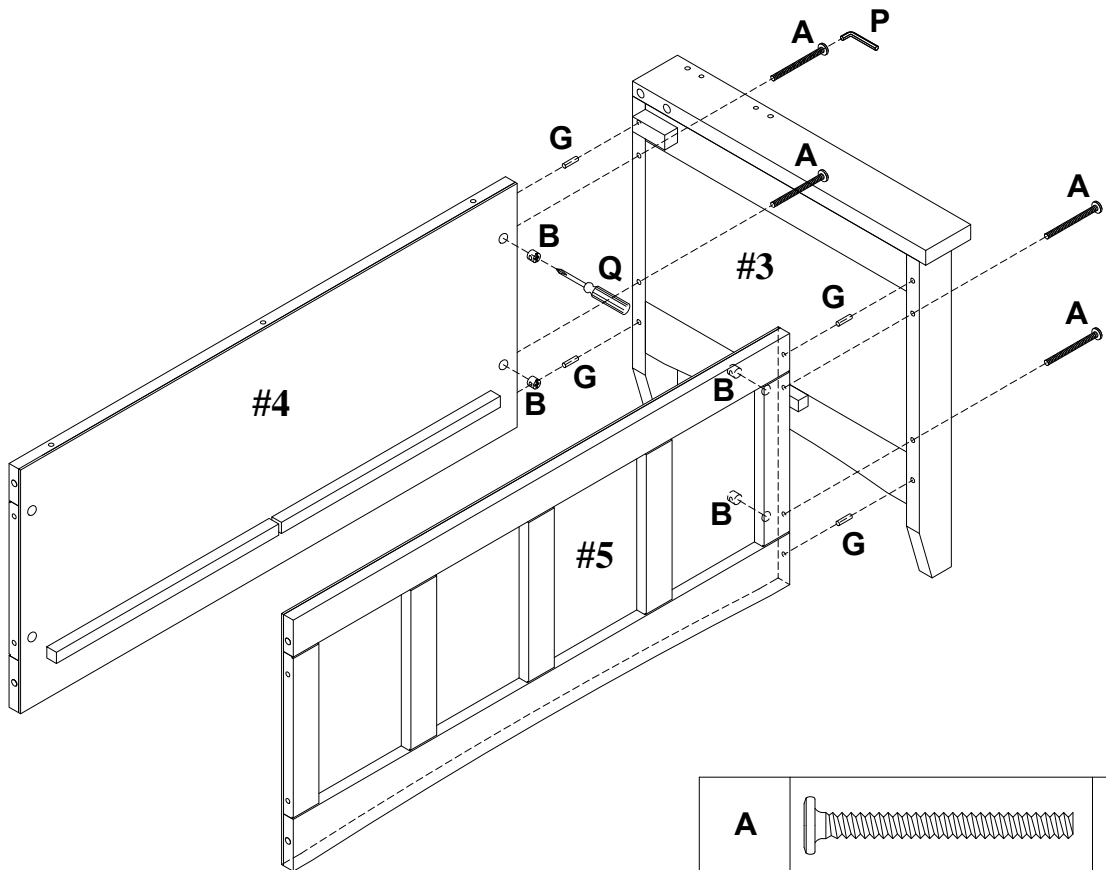
1.




A		04
B		04
G		04
P		01
Q	 (Not Provided)	01




2.

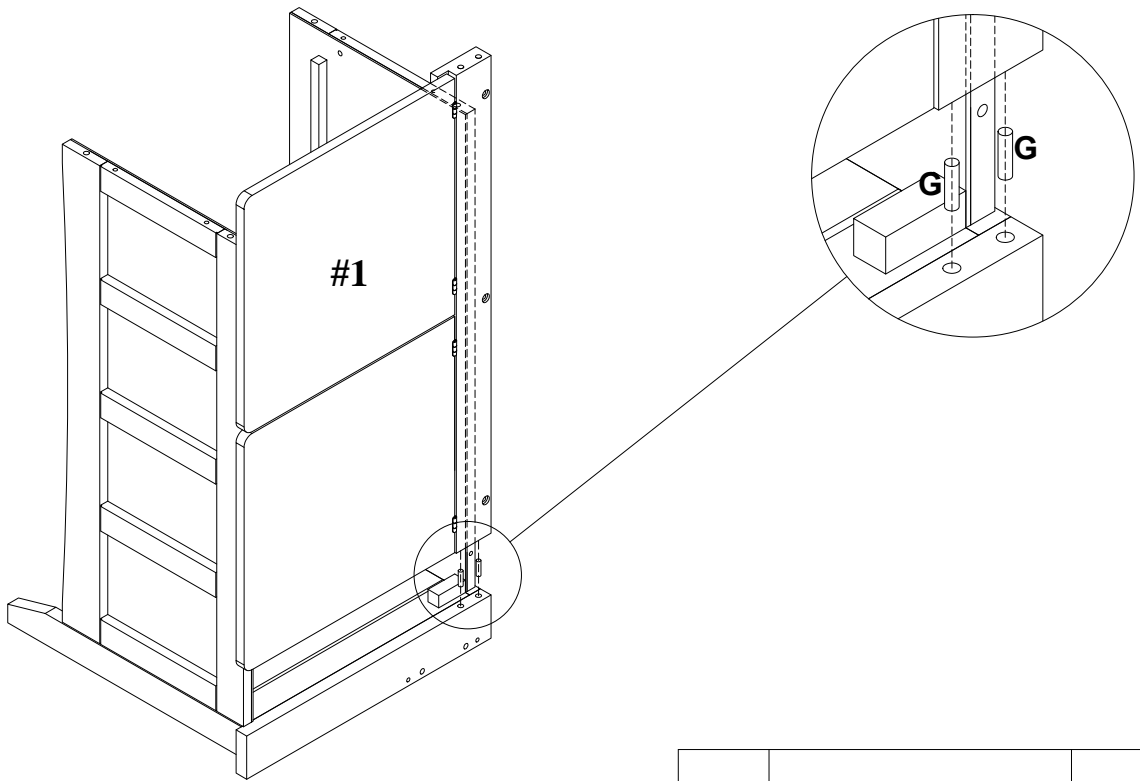


G		02
----------	---	-----------



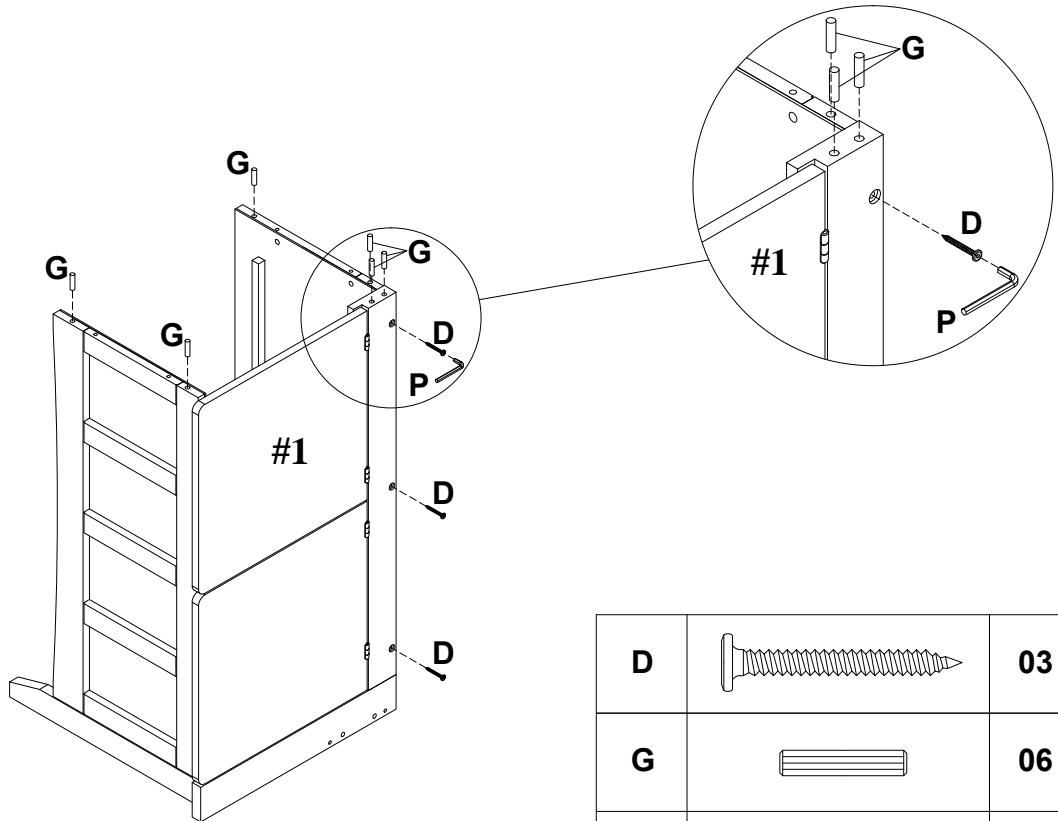

3.

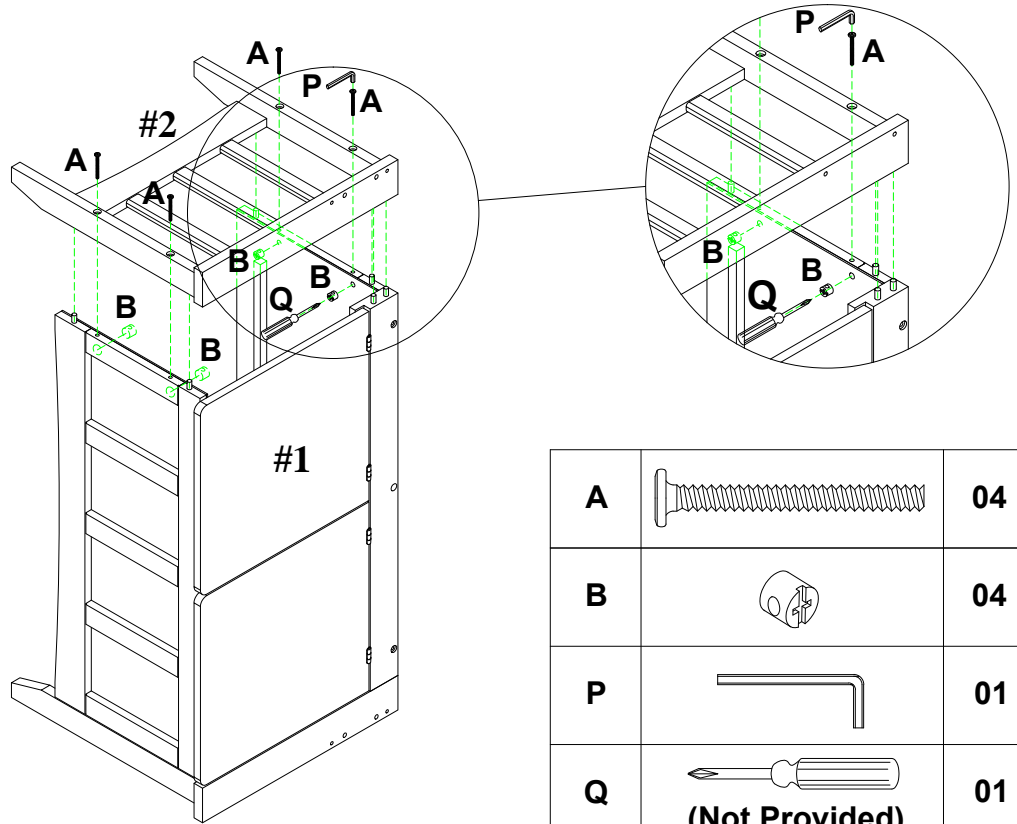


D		03
G		06
P		01





4.




A		04
B		04
P		01
Q	 (Not Provided)	01

5.

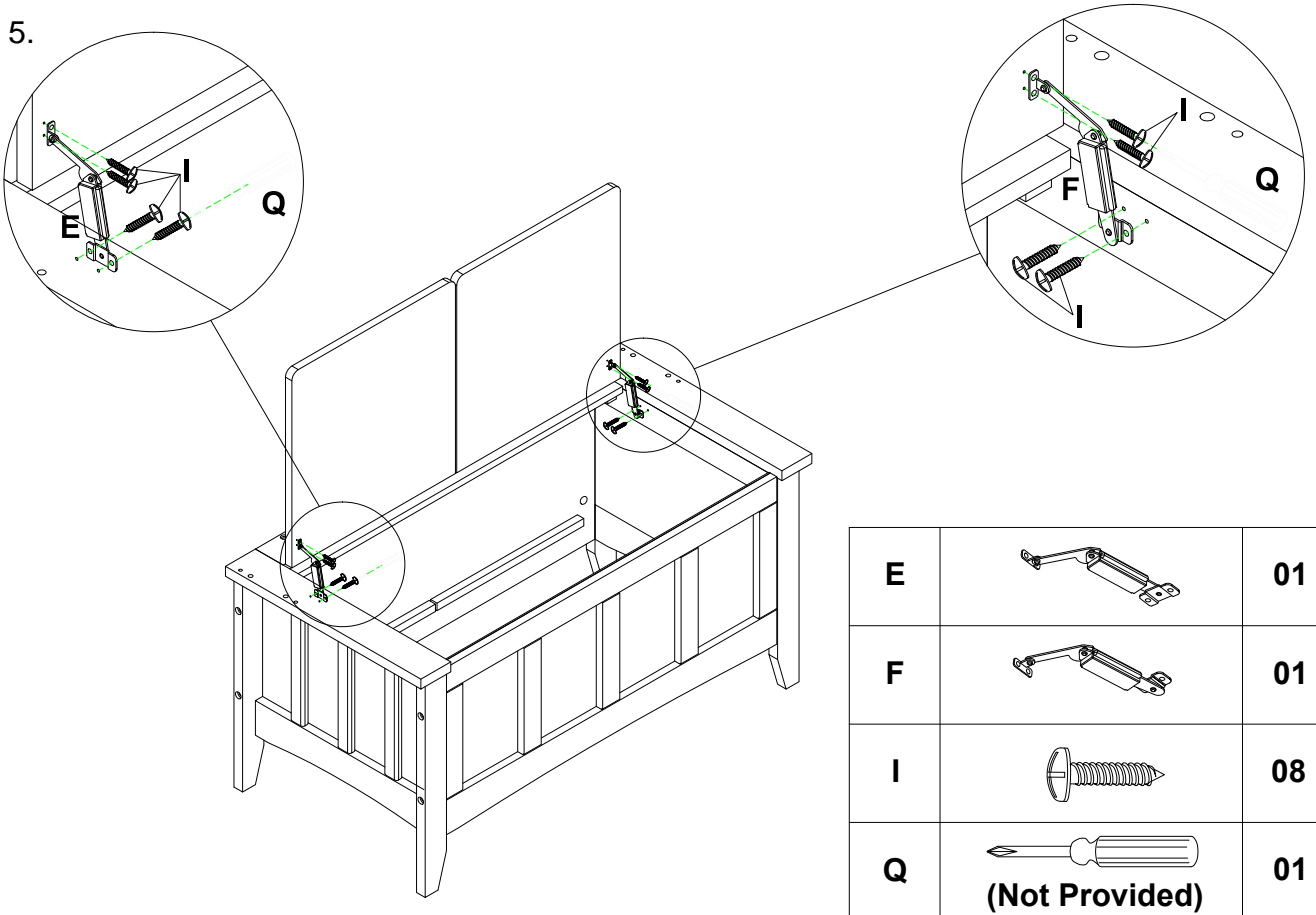


E		01
F		01
I		08
Q	 (Not Provided)	01

6.

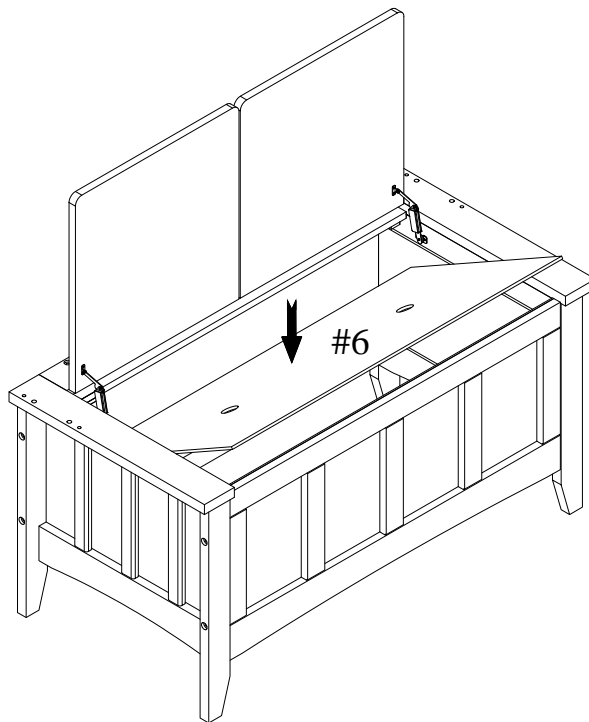

7.


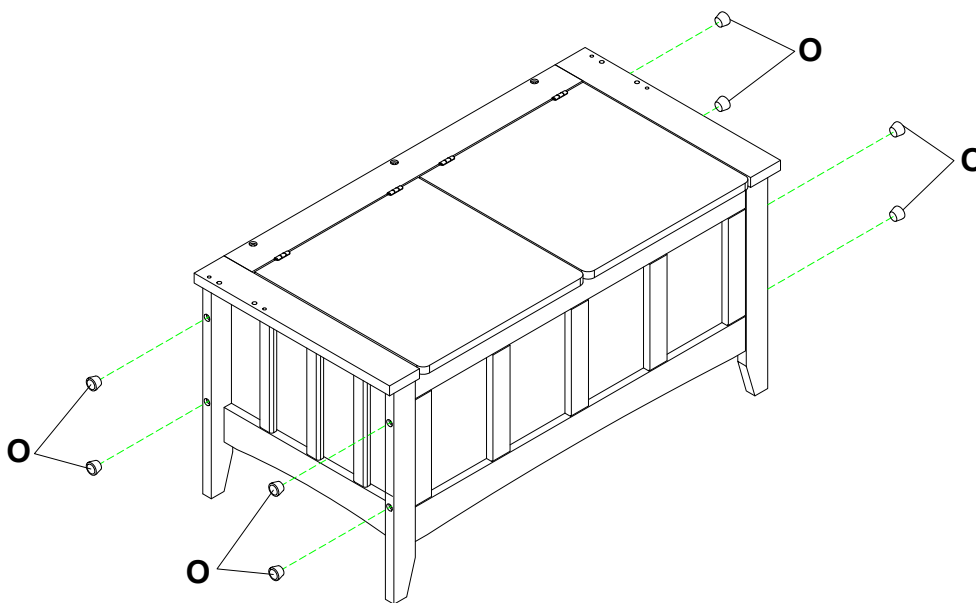






0






08



8.

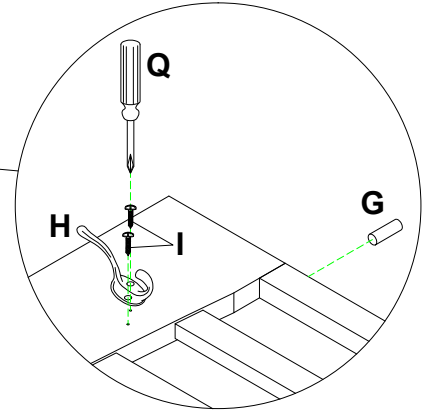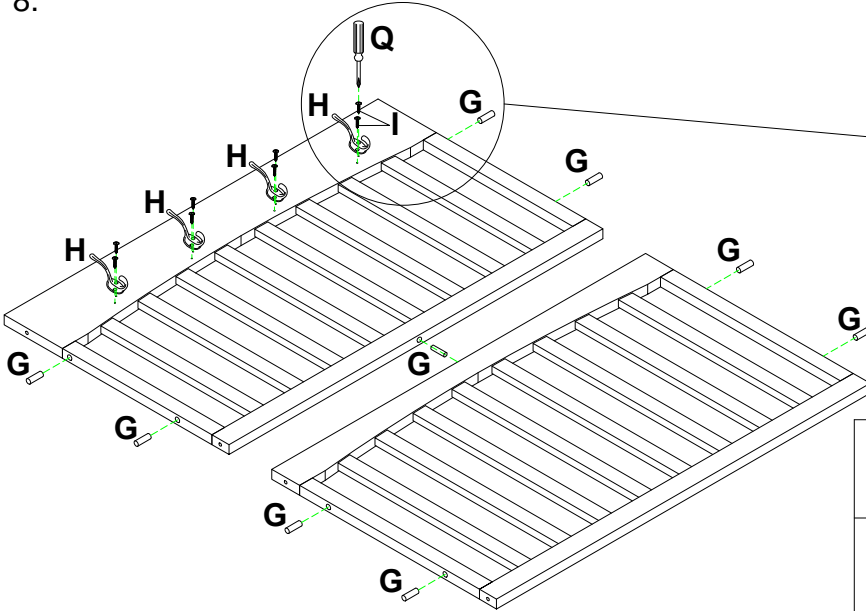


H		04
G		09
I		08
Q	 (Not Provided)	01



9.

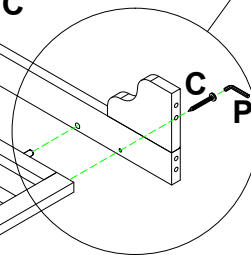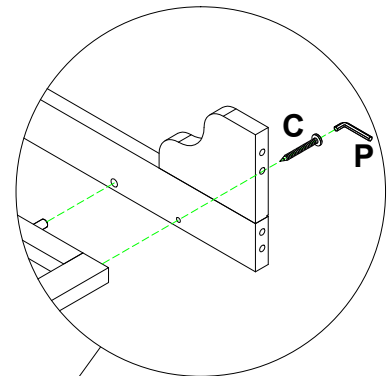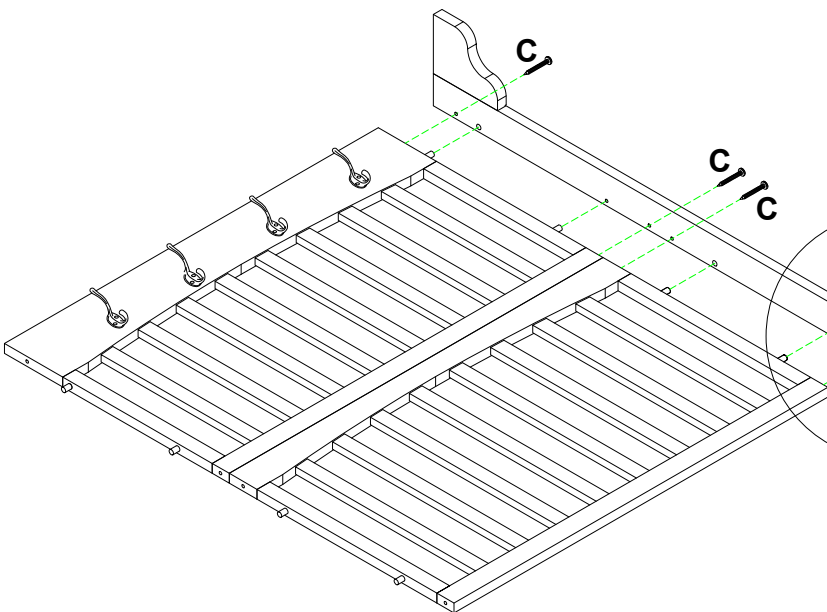


C		04
P		01




10.

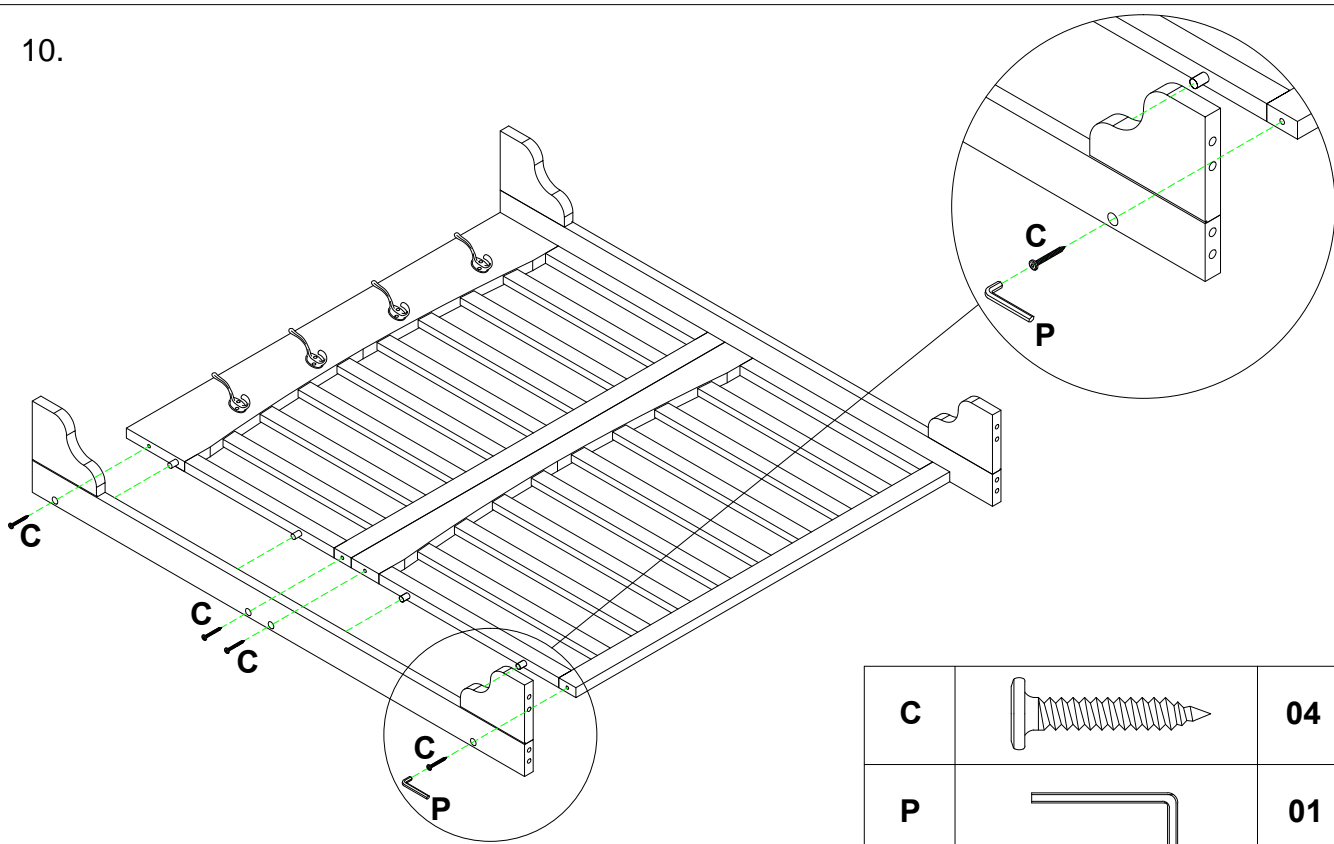


C		04
P		01




11.

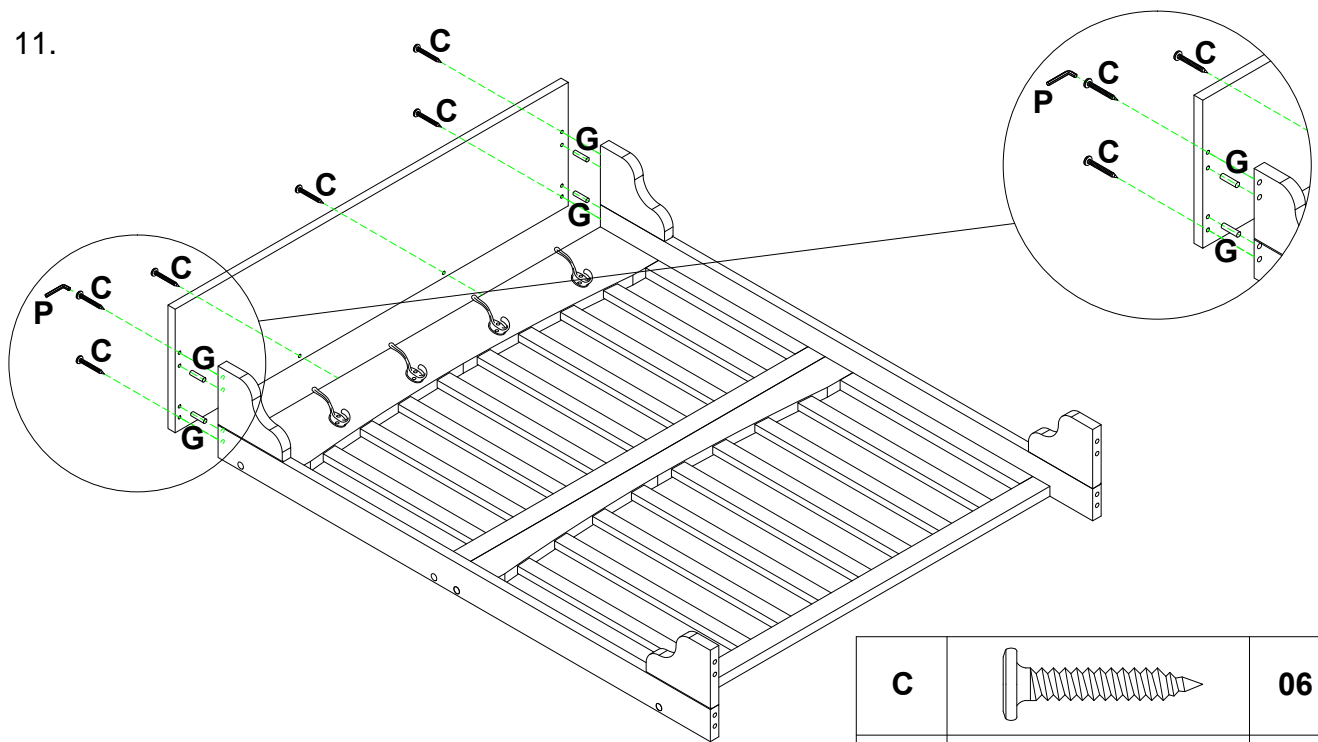


C		06
G		04
P		01





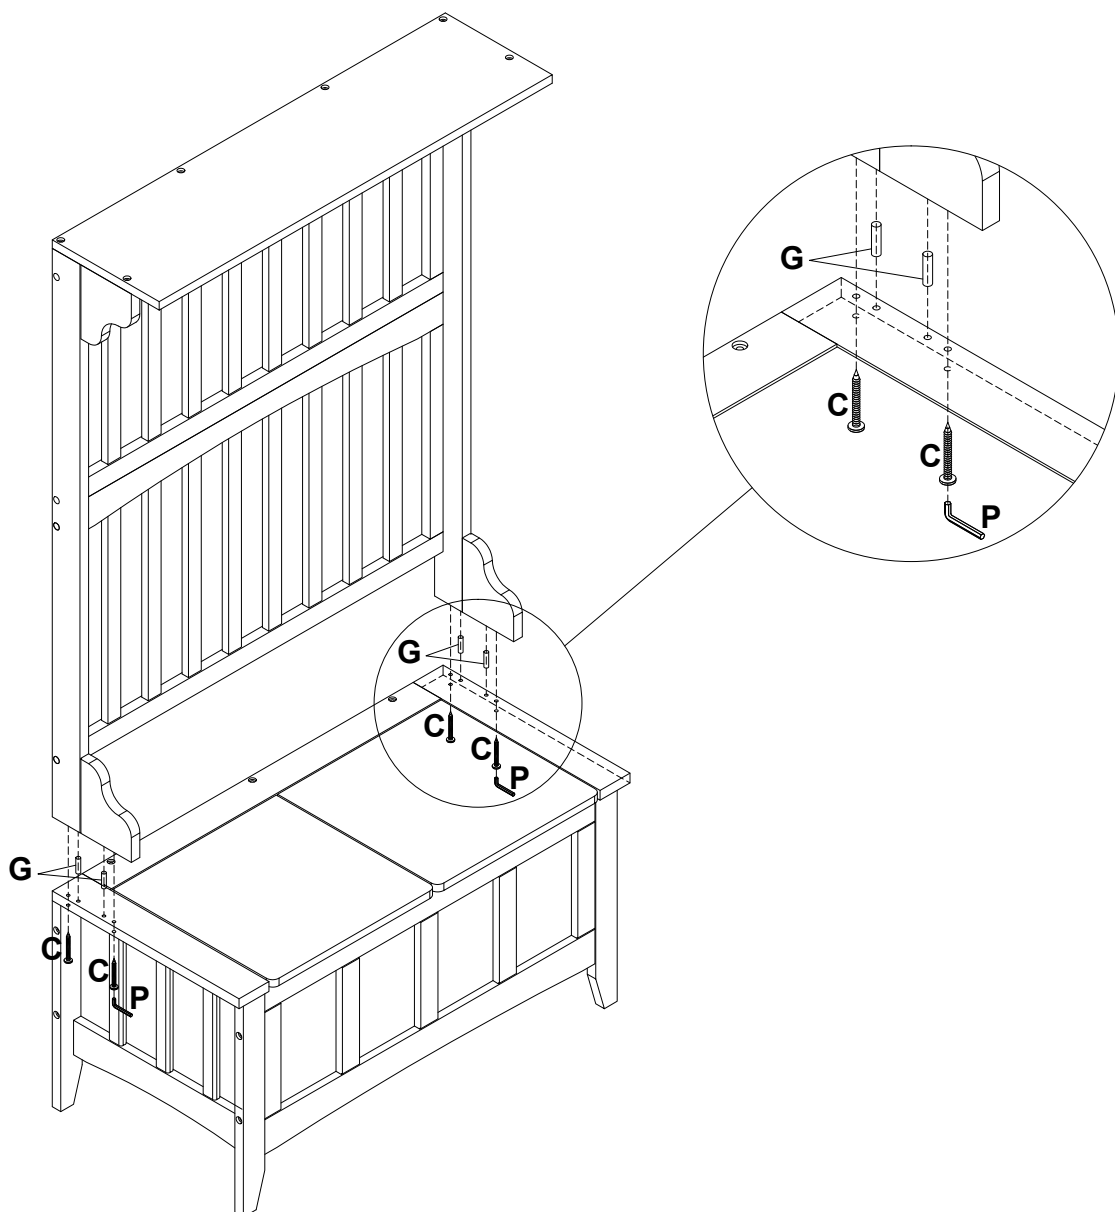

12.

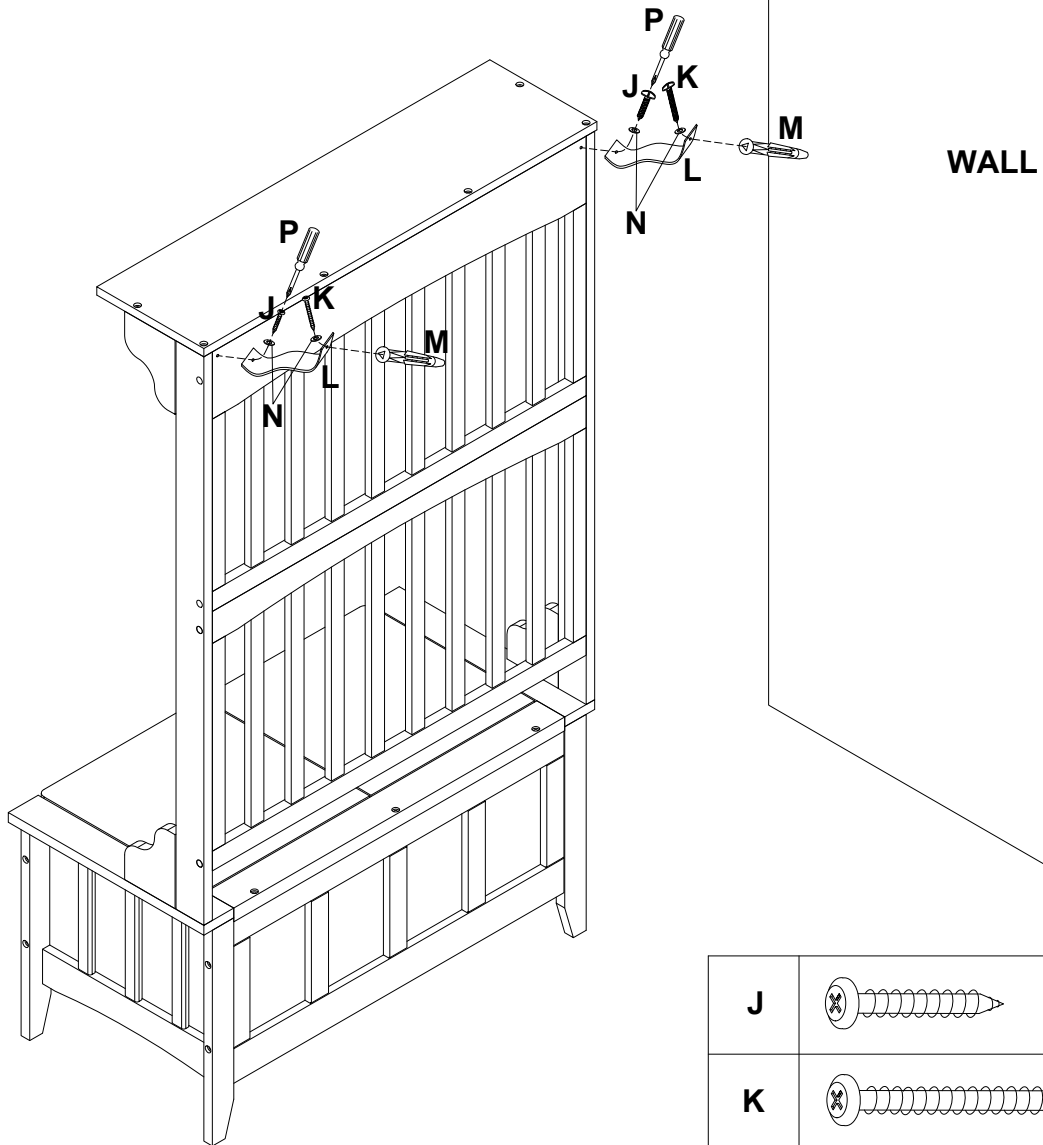


C		04
G		04
P		01

13.



J		02
K		02
L		02
M		02
N		04
Q	 (Not Provided)	01

COMPLETED ASSEMBLY

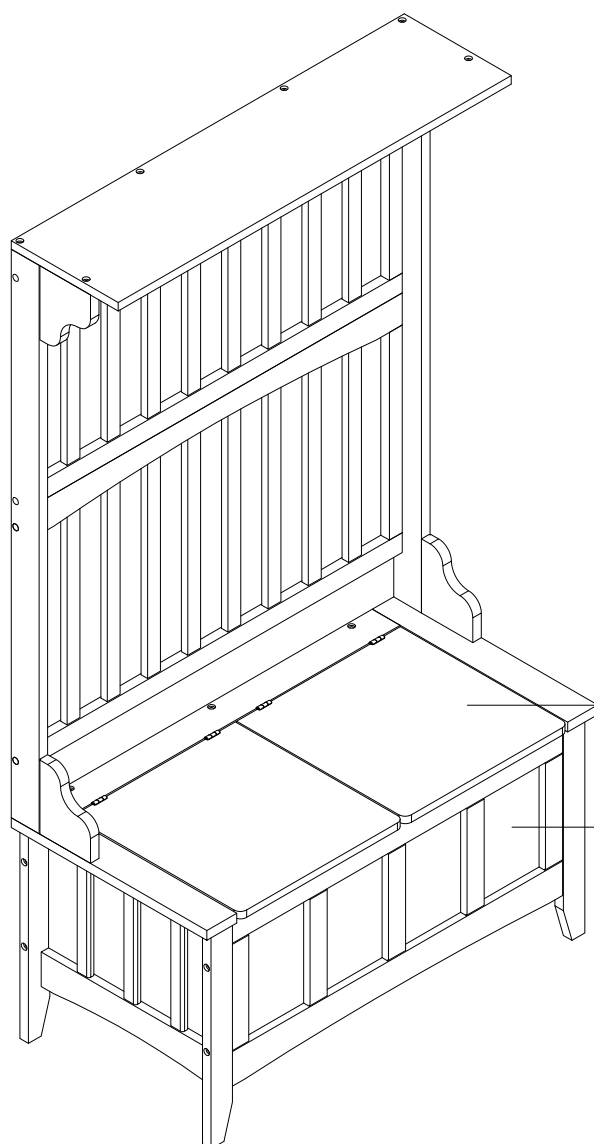

WEIGHT LIMITS

SEAT: 275 LBS
COUVERCLE: 275 LBS
CUBIERTA: 275 LBS

STORAGE BOTTOM: 30 LBS
COFFRE: 30 LBS
BAÚL: 30 LBS

LIMITED WARRANTY
GARANTIE LIMITÉE
GARANTÍA LIMITADA

WHAT IS COVERED

QU'EST-CE QUI EST COUVERT

QUÉ ESTÁ CUBIERTO

WHAT IS NOT COVERED

QU'EST-CE QUI N'EST PAS COUVERT

QUÉ NO ESTÁ CUBIERTO

MADE IN VIETNAM
FABRIQUÉ EN VIETNAM
HECHO EN VIETNAM