

Pure & Easy





HSHS-GDOSSH-0001+GDOSSH-0002
HSHS-GDOSSH-0018+GDOSSH-0019
HSHS-GDOSSH-0024+GDOSSH-0025

ASSEMBLY INSTRUCTIONS

NOTICE

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY
WICHTIG, FÜR SPÄTERE NACHSCHLAGE AUFBEWAHREN: SORGFÄLTIG LESEN
IMPORTANTE, GUARDAR PARA REFERENCIA FUTURA: LEER ATENTAMENTE
IMPORTANTE, CONSERVARE PER RIFERIMENTI FUTURI: LEGGERE ATTENTAMENTE
IMPORTANT, À CONSERVER POUR RÉFÉRENCE FUTURE : LIRE ATTENTIVEMENT

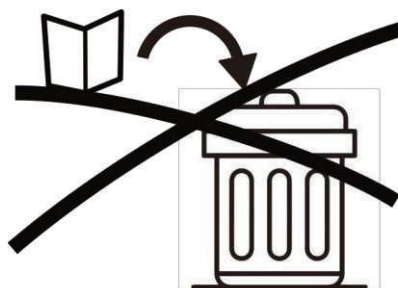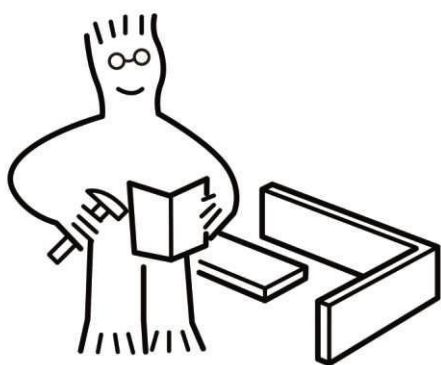

Assemble on a flat and solid surface. To avoid the unstable surface affecting the overall frame stability during installation.

Montieren Sie auf einer ebenen und festen Oberfläche. Um zu verhindern, dass eine unebene Oberfläche während der Montage die Gesamtrahmen-Stabilität beeinträchtigt.

Ensamblar en una superficie plana y sólida. Afin d'éviter que la surface inégale n'affecte la stabilité générale du cadre lors de l'installation.

Assemblare su una superficie piana e solida. Per evitare che una superficie irregolare influisca sulla stabilità complessiva della struttura durante l'installazione.

Assembler sur une surface plate et solide. Para evitar que la instalación en una superficie irregular afecte la estabilidad general del marco.

Professional installation is highly recommended.

Eine professionelle Installation wird dringend empfohlen.

Une installation professionnelle est fortement recommandée.

Si raccomanda vivamente l'installazione professionale.

Se recomienda altamente la instalación profesional.



Periodically Check That All Components Are Tightly Secured.

Überprüfen Sie Regelmäßig, Dass Alle Komponenten Fest Gesichert Sind.


Vérifiez Périodiquement Que Tous Les Composants Sont Bien Fixés.

Controllare Periodicamente Che Tutti I Componenti Siano Ben Fissati.

Verifique Periódicamente Que Todos Los Componentes Estén Bien Asegurados.



It is recommended that multiple people assemble this product.
Es wird empfohlen, dass mehrere Personen dieses Produkt zusammenbauen.
Il est recommandé que plusieurs personnes assemblent ce produit.
Si raccomanda che più persone assemblino questo prodotto.
Se recomienda que varias personas ensamblen este producto.

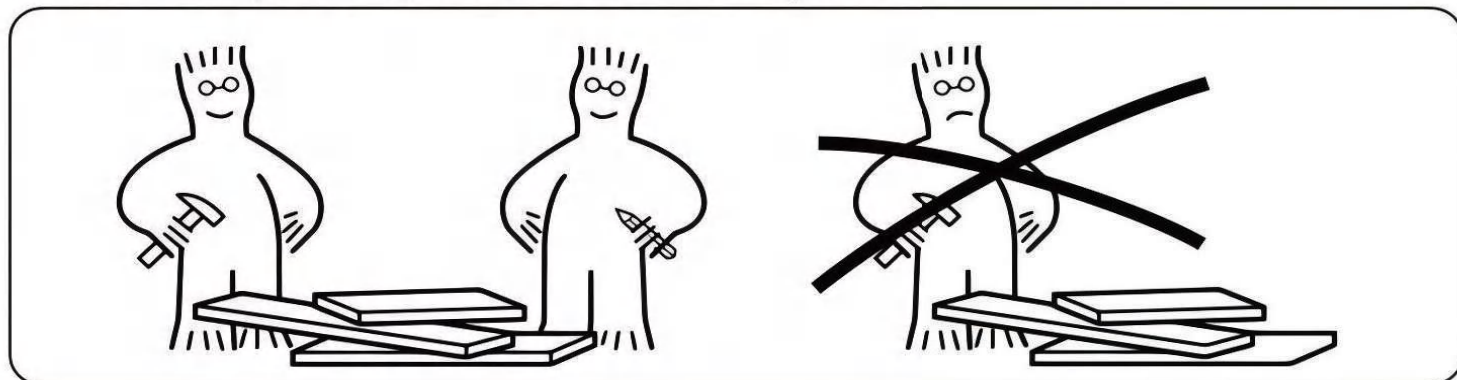

Please have the following auxiliary tools ready:




SITE PREPARATION | PRÉPARATION DU SITE | PREPARACIÓN DEL LUGAR | VORBEREITUNG DES AUFSTELLUNGORTES | VOORBEREIDING VAN HET TERREIN | PREPARAZIONE DEL LUOGO DI ASSEMBLAGGIO | PREPARAÇÃO DO LOCAL


Level the ground surface | Nivelez la surface du sol | Nivela la superficie del suelo | Ebnen Sie die Bodenoberfläche | Maak de bodem vlak | Livellare la superficie del terreno | Nivela a superfície do solo



Recommendation: Construct a wooden or concrete base as a foundation | Recommandation: fabriquez une base en bois ou en béton en guise de fondation | Recomendación: construya una base de madera o de cemento a modo de cimiento | Empfehlung: Bauen Sie als Fundament eine Grundfläche aus Holz oder Beton | Aanbeveling: maak een houten of betonnen ondergrond als fundering | Raccomandazione: Costruire una base di legno o di cemento come fondamenta | Recomendação: Construa uma base de madeira ou de cimento como fundação

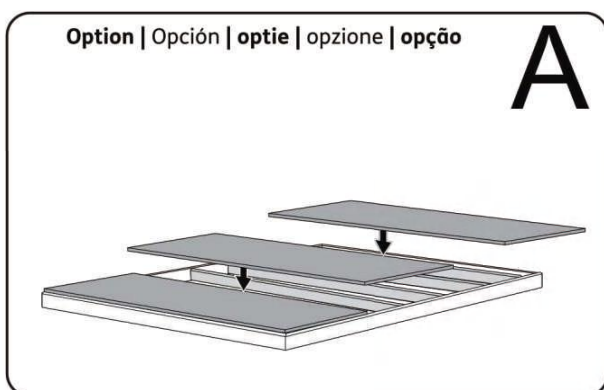

External floor measurements are: | Les mesures externes de la étage sont: | Las medidas del suelo externo son: | Die Außen-Bodenmaße betragen: | De afmetingen van de externe vloer zijn: | Le dimensioni esterne del pavimento sono: | As medidas externas do chão são:

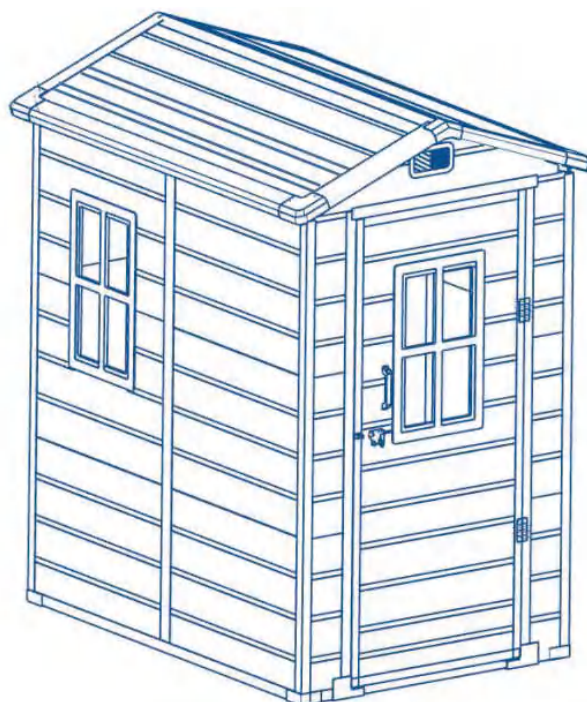

BEFORE STARTING ASSEMBLY | AVANT DE COMMENCER LE MONTAGE | ANTES DE EMPEZAR EL ARMADO | VOR MONTAGEBEGINN | VOORDAT U BEGINT TE MONTEREN | PRIMA DI INIZIARE L'ASSEMBLAGGIO | ANTES DE INICIAR A MONTAGEM

Read the care and safety guidelines at the end of this manual | Check to ensure that there are no missing or damaged parts BEFORE starting or arranging assembly | Remove all parts from the package(s) and spread them out on a clean work surface | Review all assembly instructions | Assemble all the parts according to the directions in this manual. Do not skip any steps.

Lisez les instructions de précaution et de sécurité à la fin de ce manuel | Assurez-vous qu'il n'y a pas de pièces manquantes ou endommagées AVANT de commencer ou d'organiser l'assemblage | Retirez toutes les pièces du/des paquet(s) et étalez-les sur une surface de travail propre | Lisez toutes les instructions de montage | Assemblez toutes les pièces selon les instructions de ce manuel. Ne sautez aucune étape.

Lea las instrucciones de precauciones y seguridad que están al final de este manual | Asegúrese de que no faltan piezas ni están dañadas ANTES de comenzar o disponer el montaje | Saque todas las piezas del paquete o paquetes y póngalas sobre una superficie de trabajo limpia | Revise todas las instrucciones de montaje | Monte todas las piezas según las instrucciones de este manual. No se saltee ningún paso.

Lesen Sie die Sicherheitsrichtlinien am Ende des Benutzerhandbuchs durch | Prüfen Sie bitte VOR dem Zusammenbau, dass keine Teile beschädigt sind oder fehlen | Nehmen Sie alle Teile aus der Verpackung und breiten Sie sie auf einer sauberen Arbeitsfläche aus | Gehen Sie noch einmal die komplette Aufbauanleitung durch | Bauen Sie alle Teile entsprechend der Anleitung in diesem Handbuch zusammen. Lassen Sie dabei keinen Arbeitsschritt aus.

Lees de richtlijnen voor zorg en veiligheid achterin deze handleiding | Controleer dat er geen onderdelen mankeren, of beschadigd zijn, VOORDAT u met de montage begint | Haal alle onderdelen uit het pakket (of uit de pakketten) en leg ze op een schoon werkoppervlak | Bekijk alle montagehandleidingen | Monteer alle onderdelen volgens de aanwijzingen van deze handleiding. Sla geen stappen over.

Leggere le linee guida di assistenza e sicurezza alla fine di questo manuale | Assicurarsi che non ci siano parti mancanti o danneggiate PRIMA di iniziare l'assemblaggio | Estrarre tutti i componenti dall'imballo e posizionarli su una superficie di lavoro pulita | Consultare tutte le istruzioni di montaggio | Assemblare tutti i componenti secondo le istruzioni contenute nel manuale. Non saltare nessuna fase.

Leia as diretrizes de cuidados e segurança que constam da parte final deste manual | Verifique para se assegurar de que não há peças em falta ou danificadas ANTES de começar a preparar a montagem | Retire todas as peças da embalagem e espalhe-as numa superfície de trabalho limpa | Reveja todas as instruções de montagem | Monte todas as peças de acordo com as instruções do manual. Não salte quaisquer passos.

SPATULA | SPATULE | ESPÁTULA | SPACHTEL | SPATEL | SPATOLA | ESPÁTULA

- Use spatula (part "AJ7") for easier insertion of panel into profile.
- Utilisez la spatule (partie "AJ7") pour une meilleure insertion du panneau dans le profil.
- Utilice una espátula (pieza "AJ7") para una mejor inserción del panel en el perfil.
- Benutzen Sie den Spachtel (Bezeichnung "AJ7"), um die Platten leichter in die Nut einführen zu können.
- Gebruik spatel (onderdeel AJ7) voor het gemakkelijk invoeren van het paneel in het profiel.
- Utilizzare la spatola (parte AJ7) per inserire il pannello più facilmente nel profilo.
- Utilize uma espátula (peça "AJ7") para facilitar a inserção do painel no perfil.










AJ7 x1


- Use spatula  (part "AJ7") for easier insertion of panel into profile
- Please ensure the panels are all installed on position before screwing
- Please be mindful of the screw size used during installation; using screws that are too long may damage the shed.






PARTS

Item no.	Reference Image	Qty.
AF3-1		X1
AF3-2		X1
AF3-3		X1
ARW2-1		X2
ARW2-2		X1
AWB4-1		X7
AWB4-2		X1
AWB4-3		X1
AWB4-4		X3
ADS3-1		X4
ADS3-2		X1

Item no.	Reference Image	Qty.
ADS3-3		X1
AR2-1		X2
AR2-2		X2
AD3-1		X1
AD3-2		X1
AD3-3		X1
AT2-1		X1
AT2-2		X1
AP1		X1
AP2		X2
AP3		X2

Item no.	Reference Image	Qty.
AP4		X1
AP5		X4
AP6		X1
AP7		X4
AP8		X2
APA1		X2
AA1L		X1
AA1R		X1
AA2		X1
AA3L		X1
AA3R		X1

Item no.	Reference Image	Qty.
AA6		X2
AAS2-1		X4
AAS2-2		X4
M1		X2
M2		X1
M512		X130
M516		X30
M8*20		X2
M6*60		X4
AJ1		X4
AJ2-1		X1

Item no.	Reference Image	Qty.
AJ2-2		X1
AJ3		X4
AJ4		X2
AJ5		X1
AJ6-1		X2
AJ6-2		X2
AJ7		X2
AJ8		X4
AJ9		X2
AJ10		X1
AEB		X17





FLOOR ASSEMBLY



Use spatula (part "AJ7") for easier insertion of panel into profile





Note: The crease line of the floor must be underneath

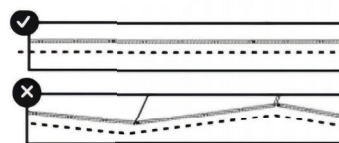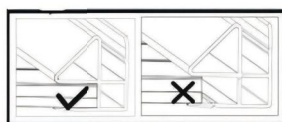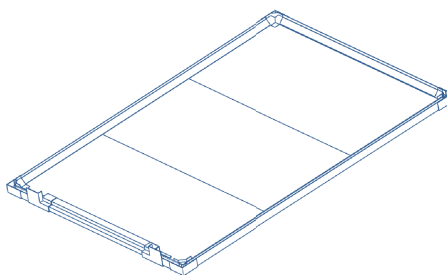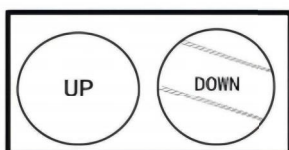

- Fully fit the panel inside the profile



1

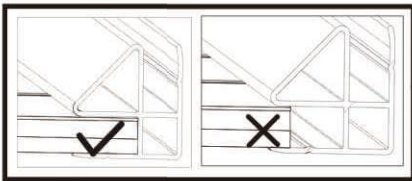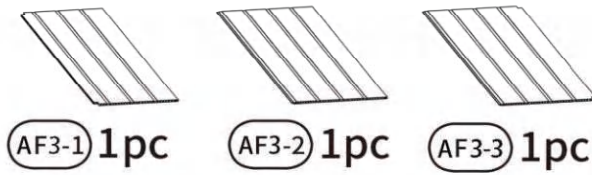

- Fully fit the panel inside the profile




AJ7

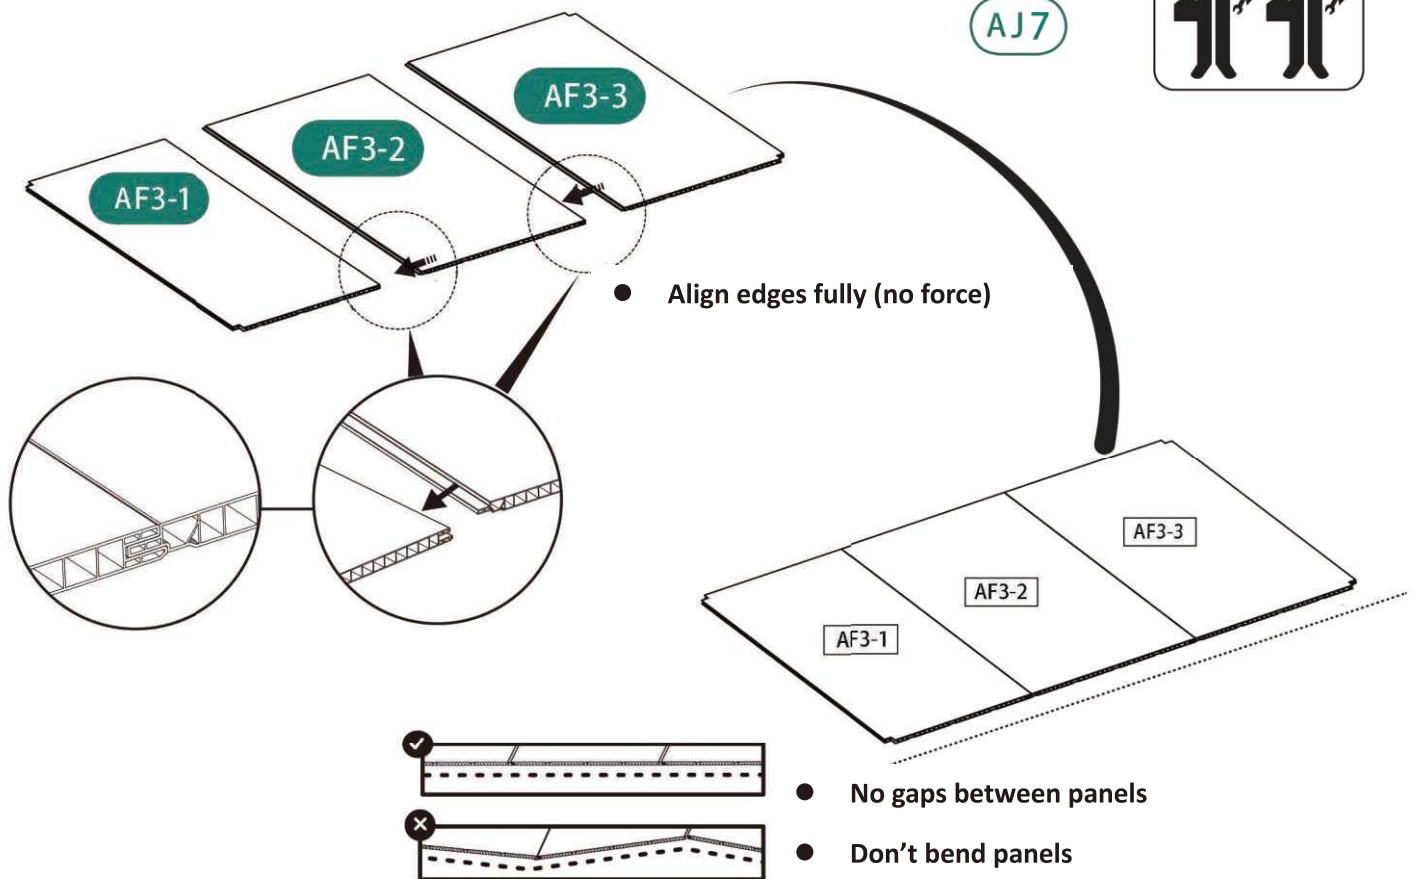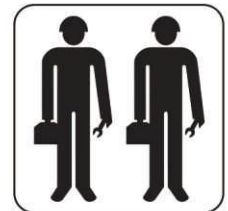

2




AJ1 2pcs





AP1 1pcs



AP2 2pcs

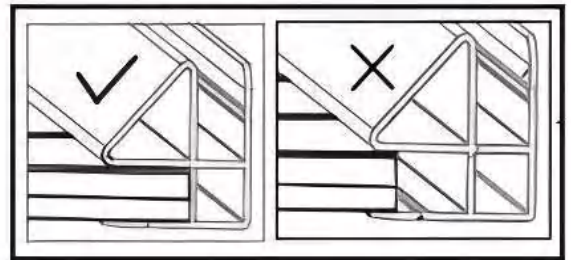

● Fully fit e panel inside the profile

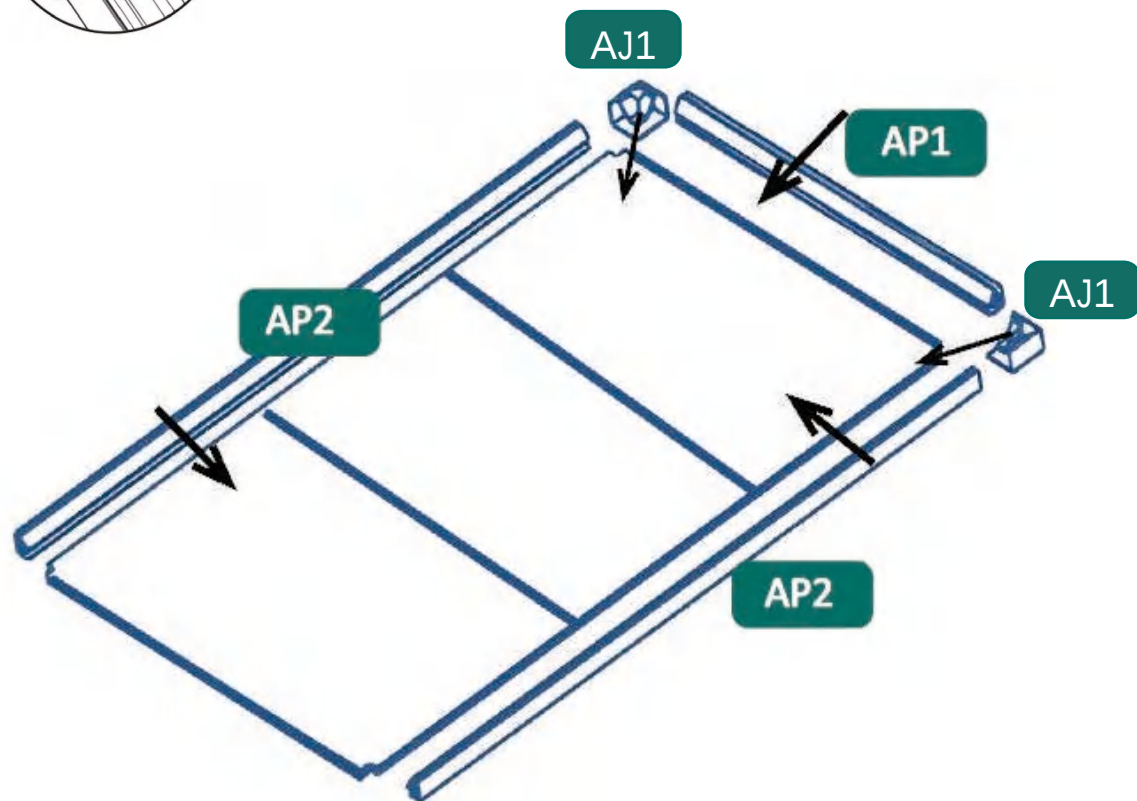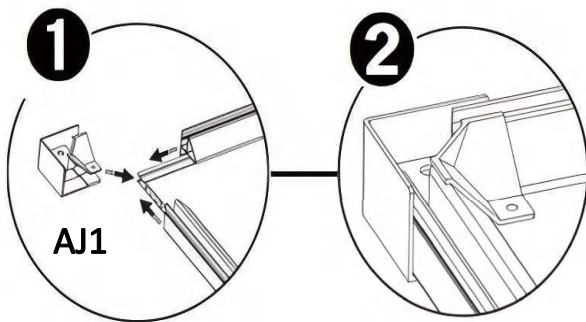

3



AJ1 2pcs



AP3 2pcs








AP4 1pcs



AJ2-1 1pcs




AJ2-2 1pcs

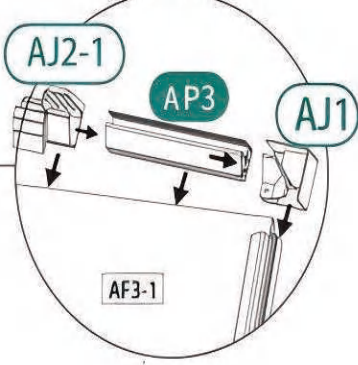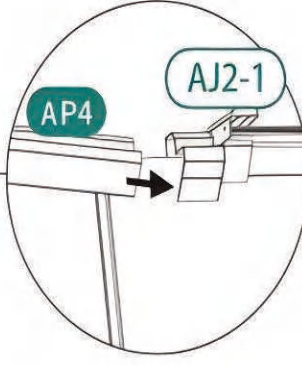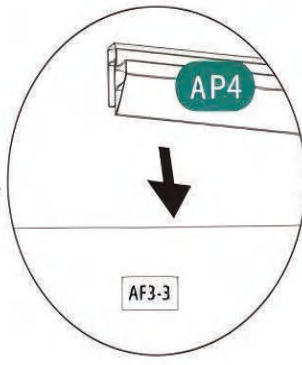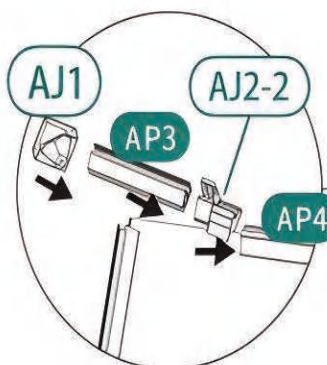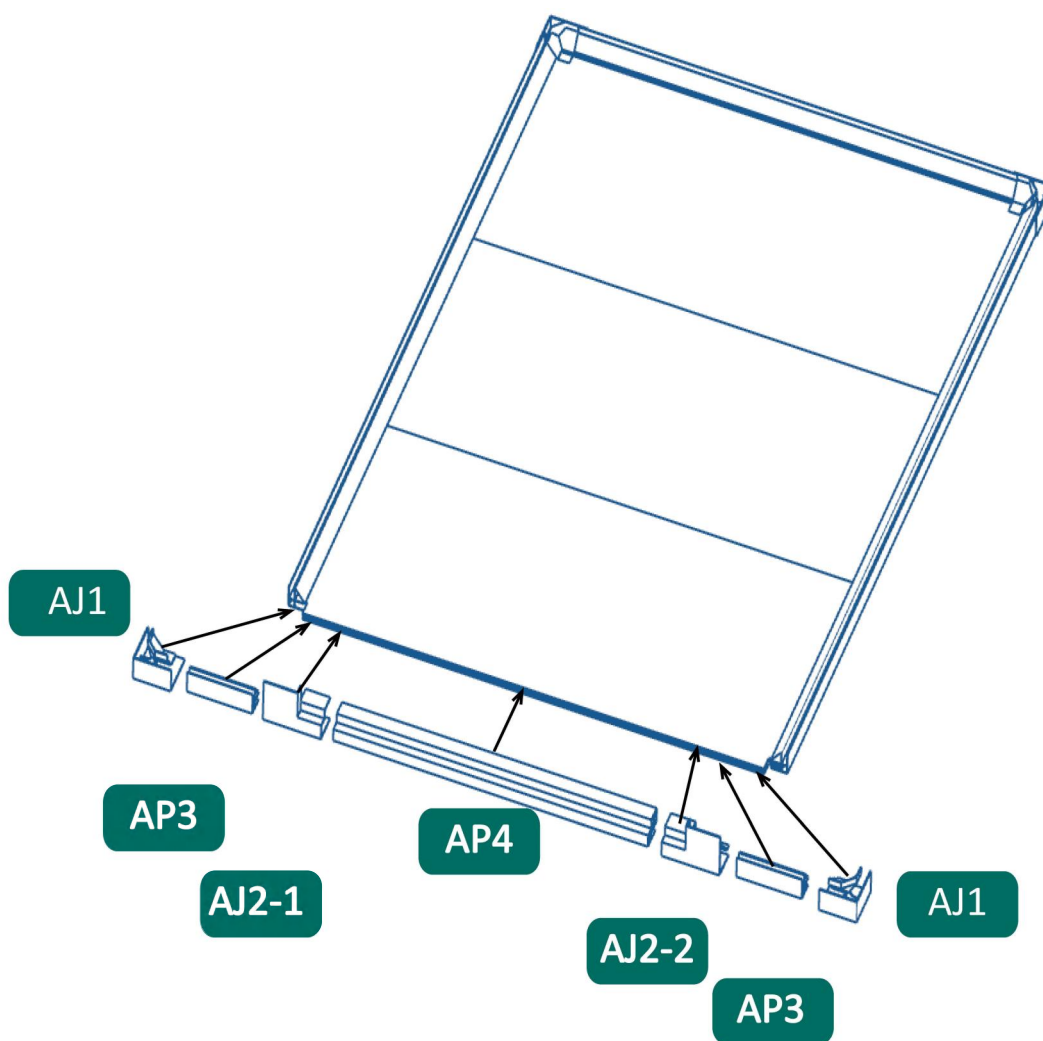


4





M512 18pcs





Please use Drill to predrill a hole at depth 1mm before screw.

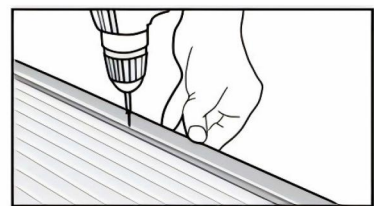

Screw along the marked lines in profile

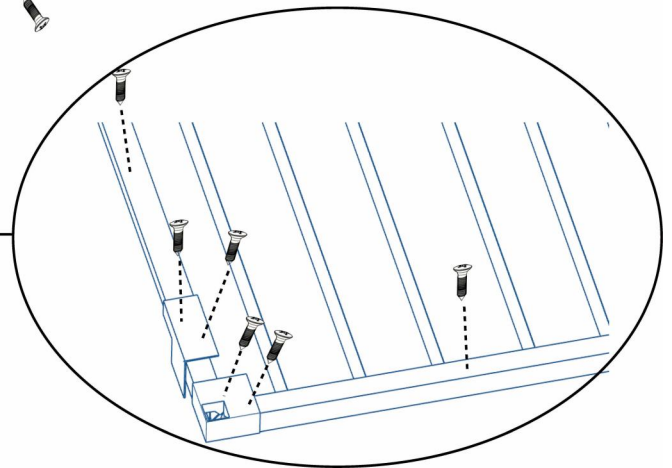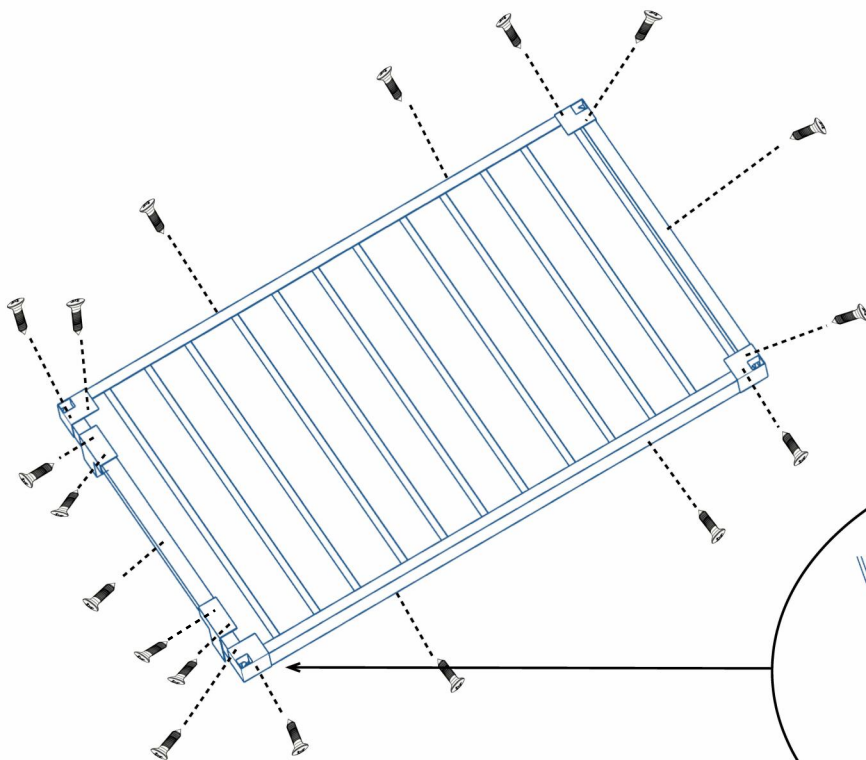






flip the panel

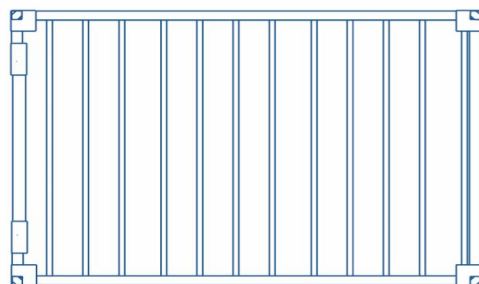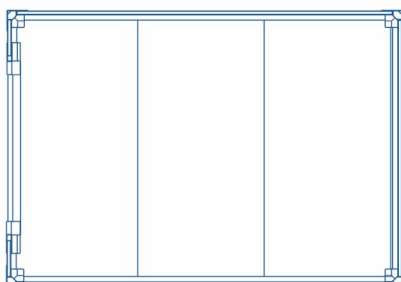

this side down

5



WALL ASSEMBLY

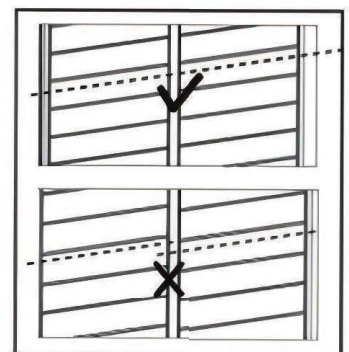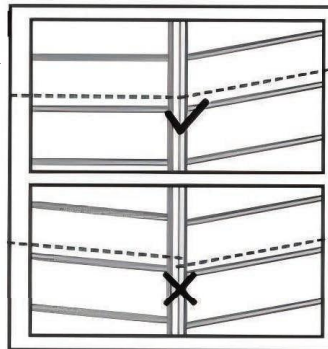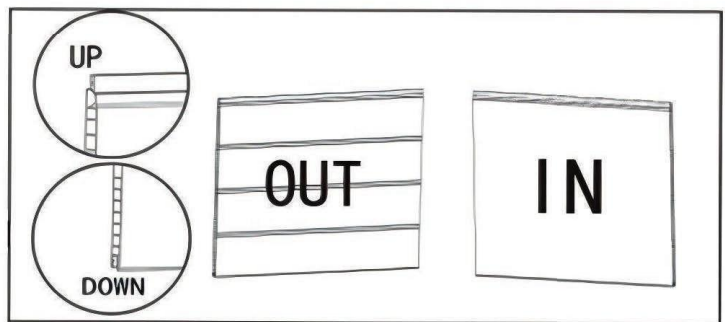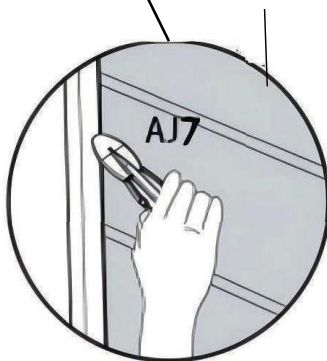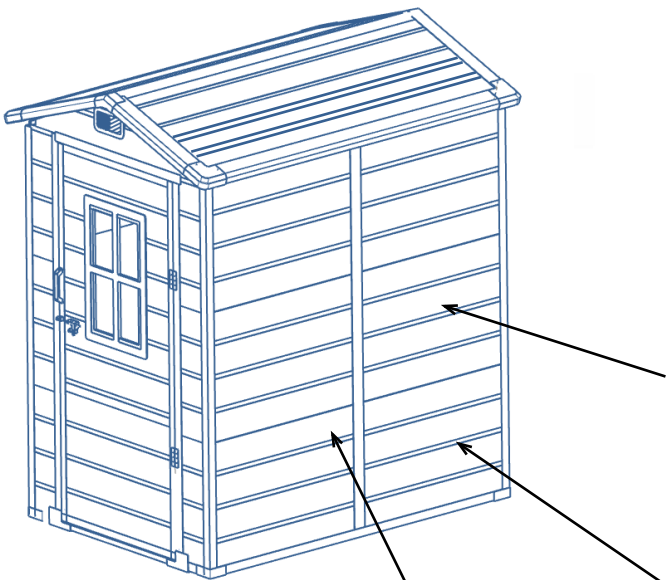

6






AP5 1pcs



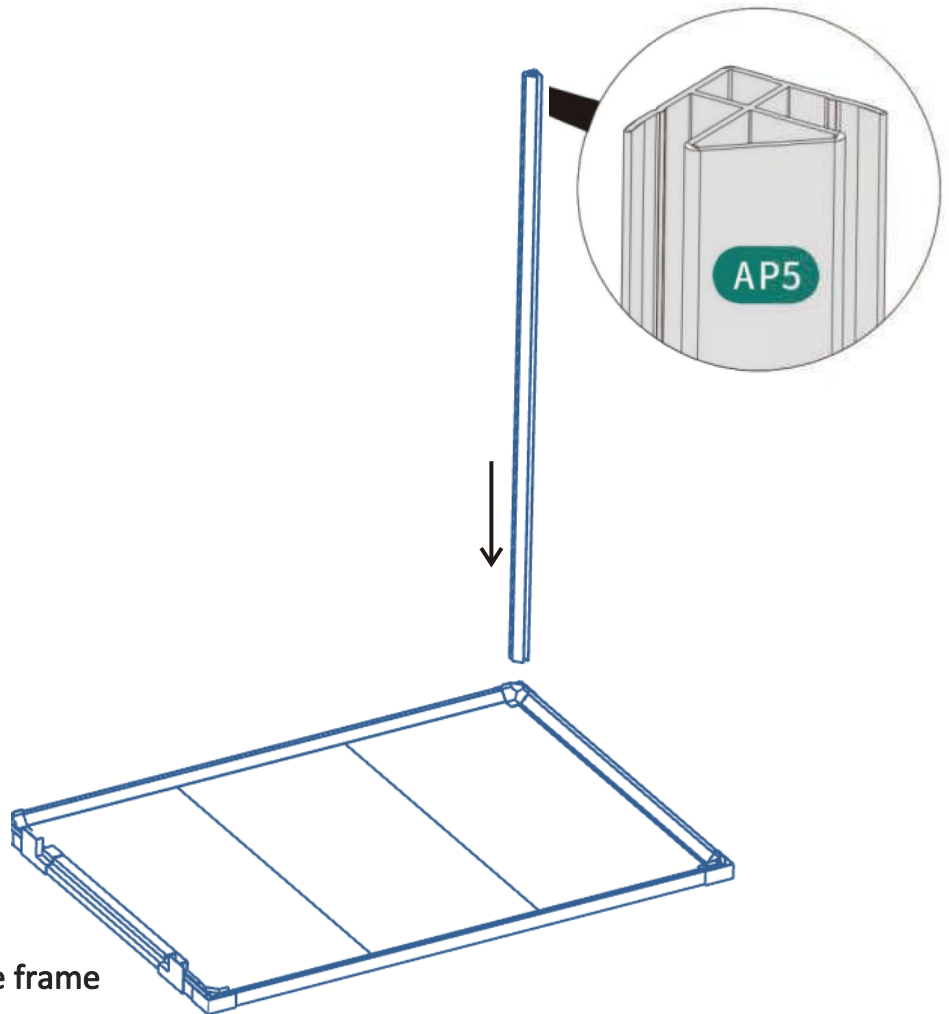
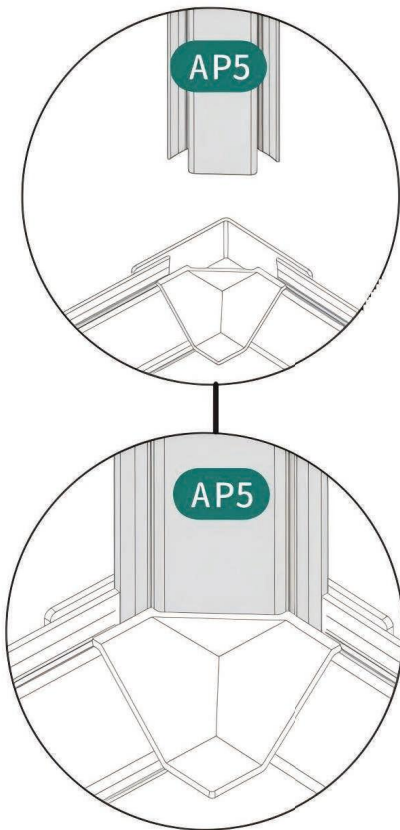


● Insert AP5 vertically into base frame


7

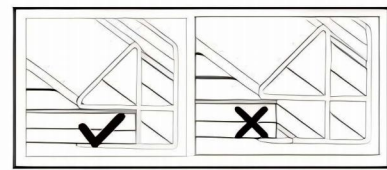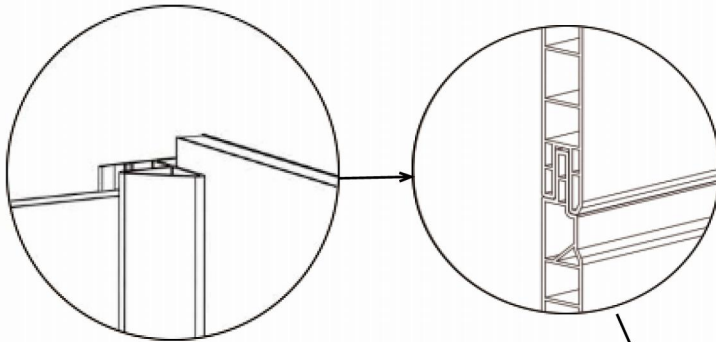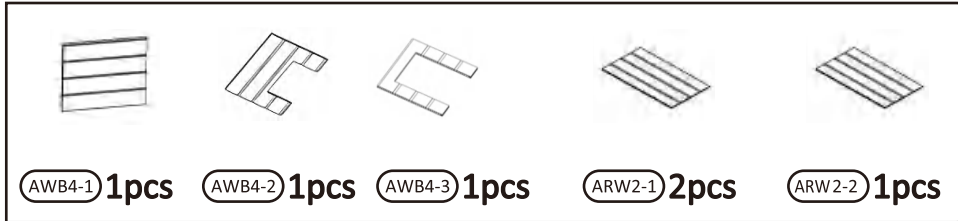

● Fully fit the panel inside the profile

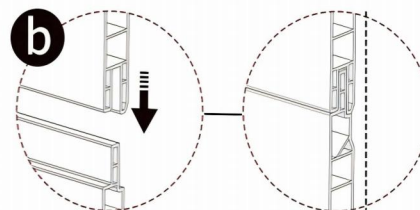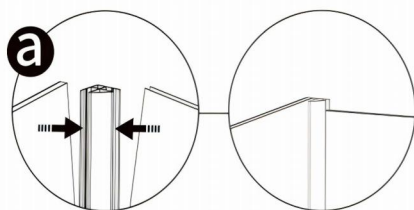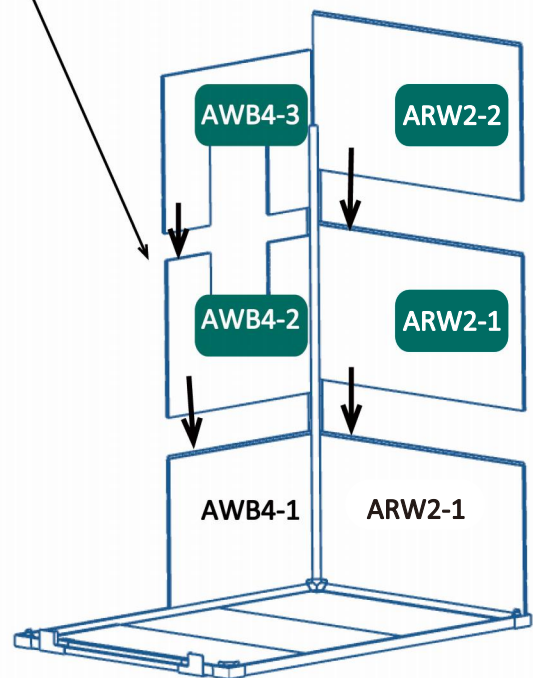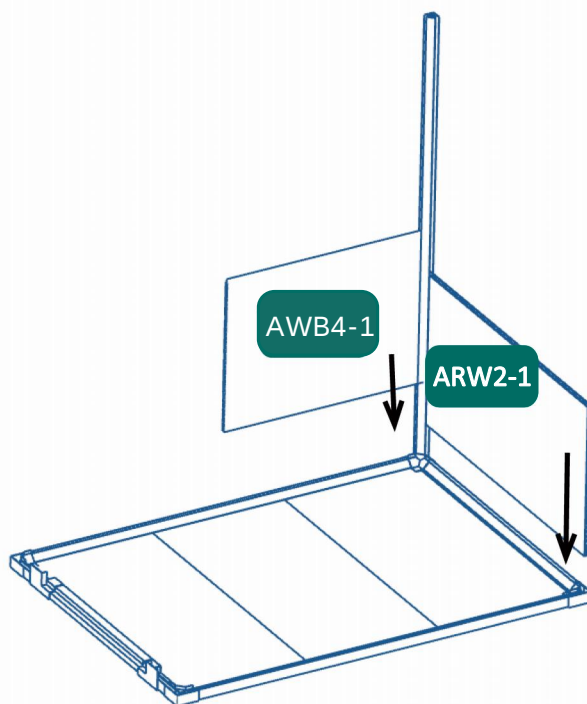

8

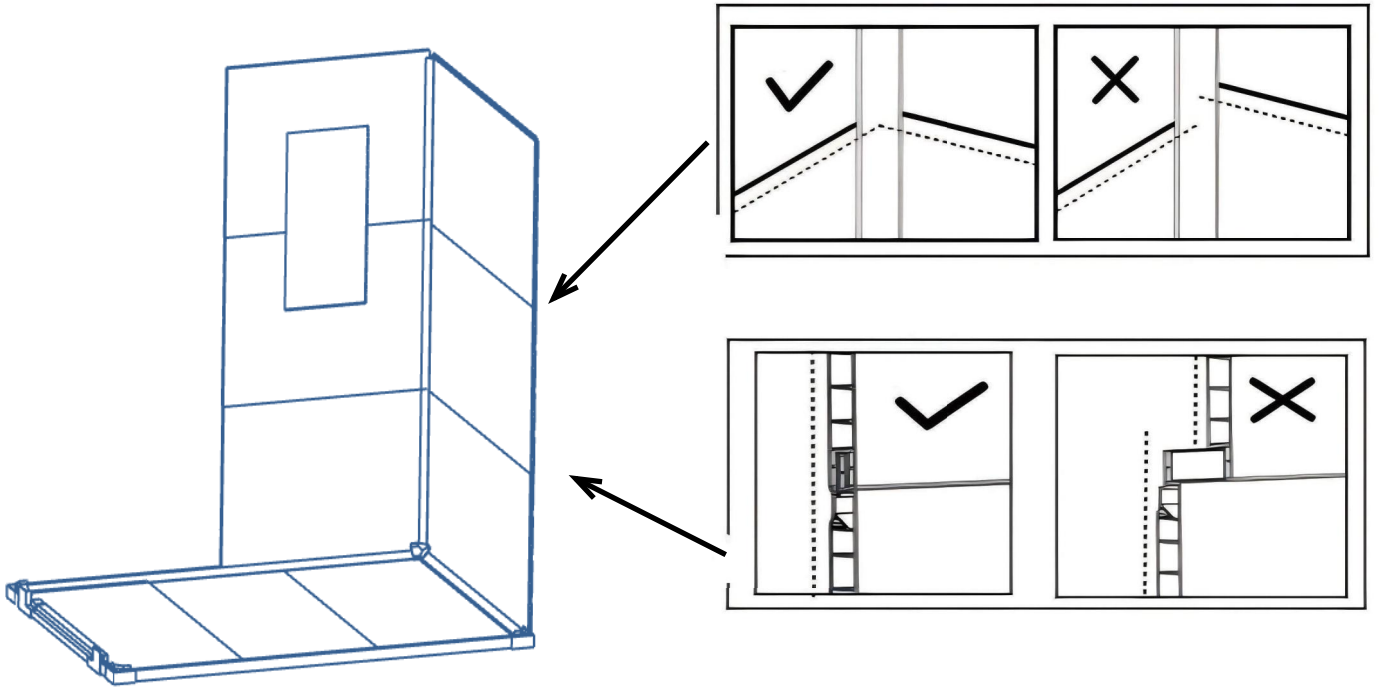


9



APA1 1pcs



AP5 1pcs

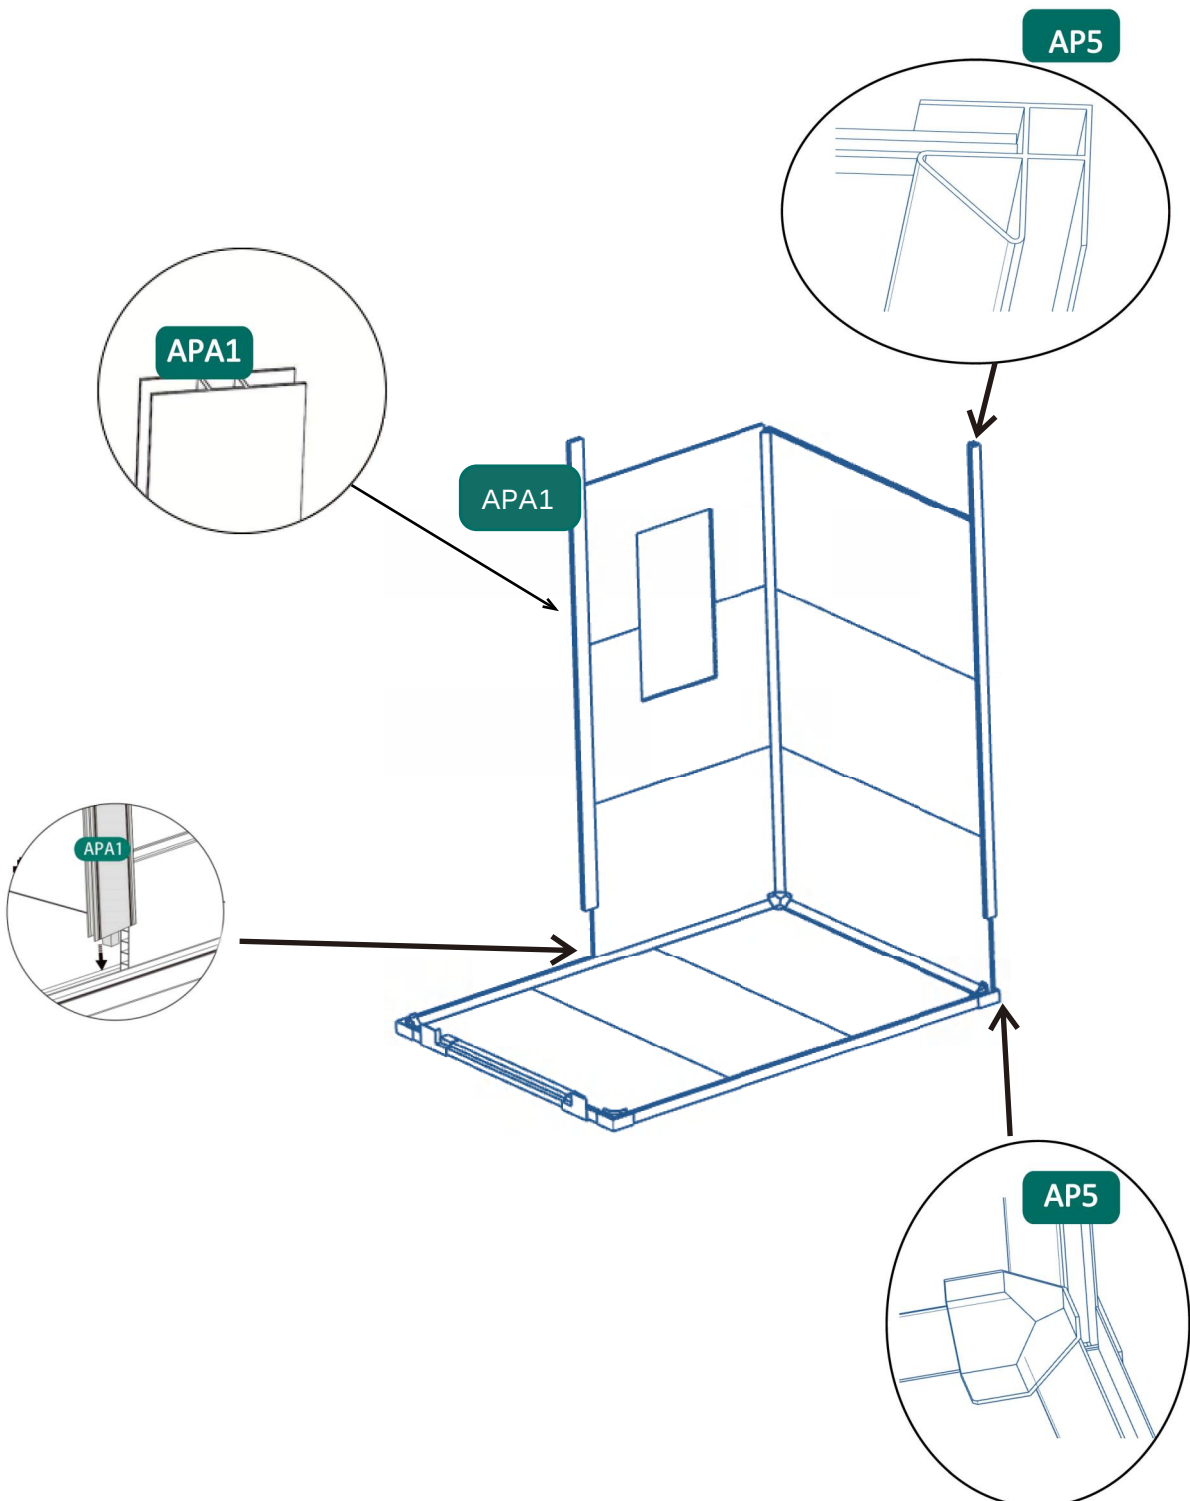





10



AWB4-1 2pcs



AWB4-4 1pcs

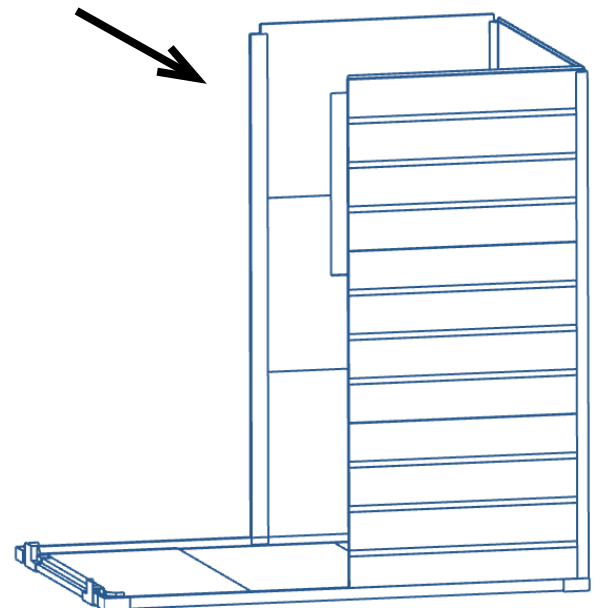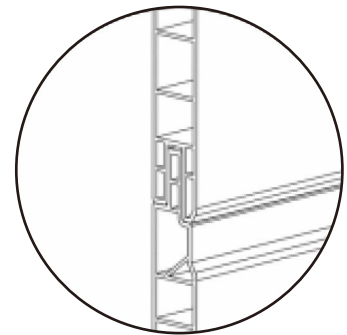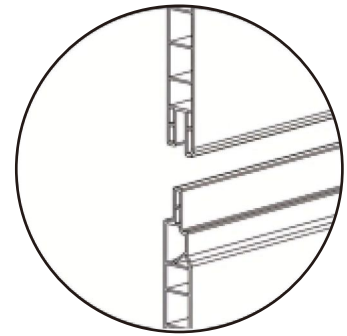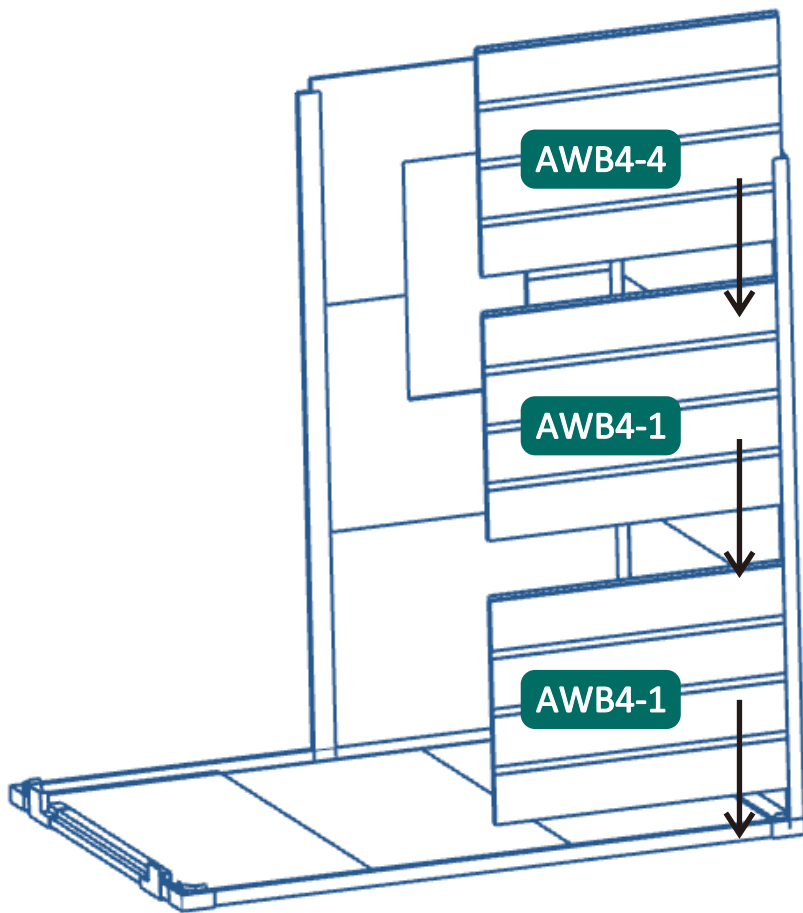

11



AWB4-1 2pcs




AWB4-4 1pcs




APA1 1pcs

APA1

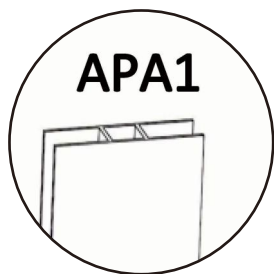

APA1

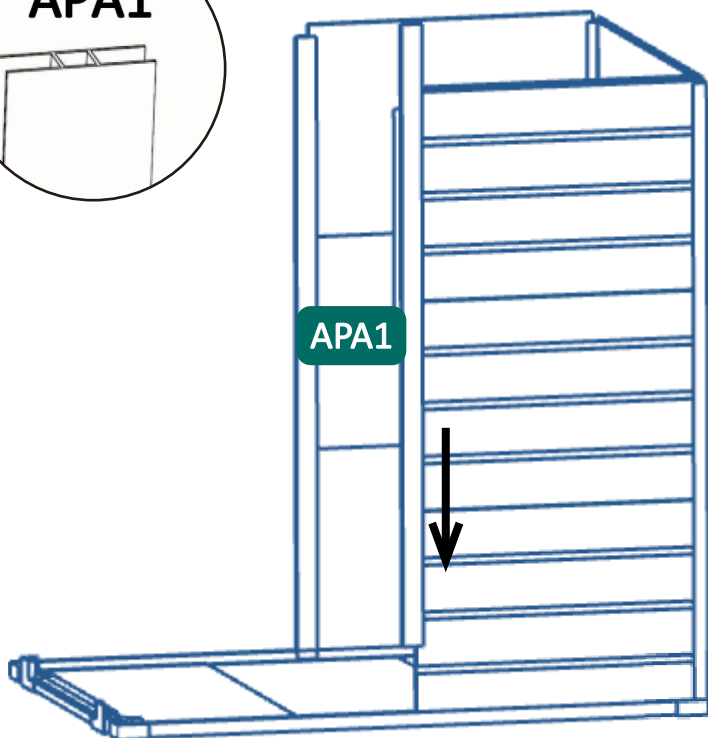


AWB4-4



AWB4-1






AWB4-1

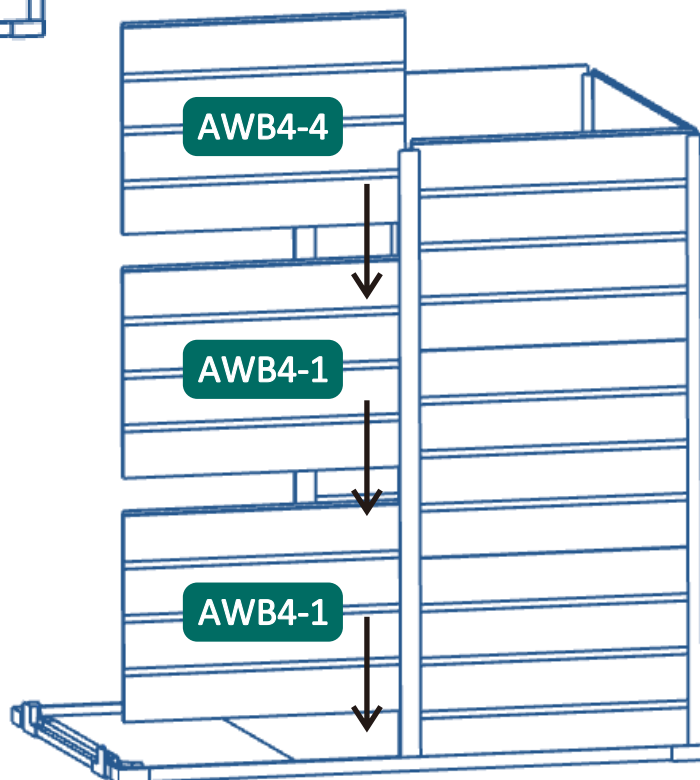

12



AP5 1pcs

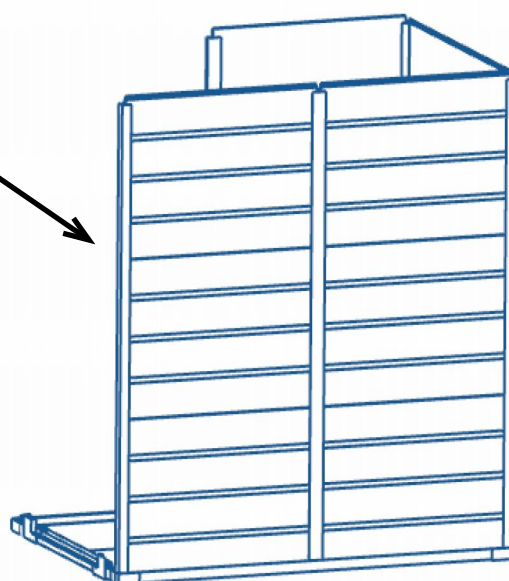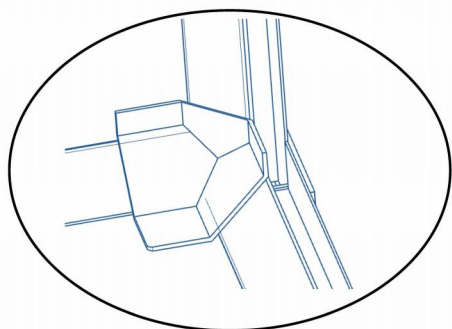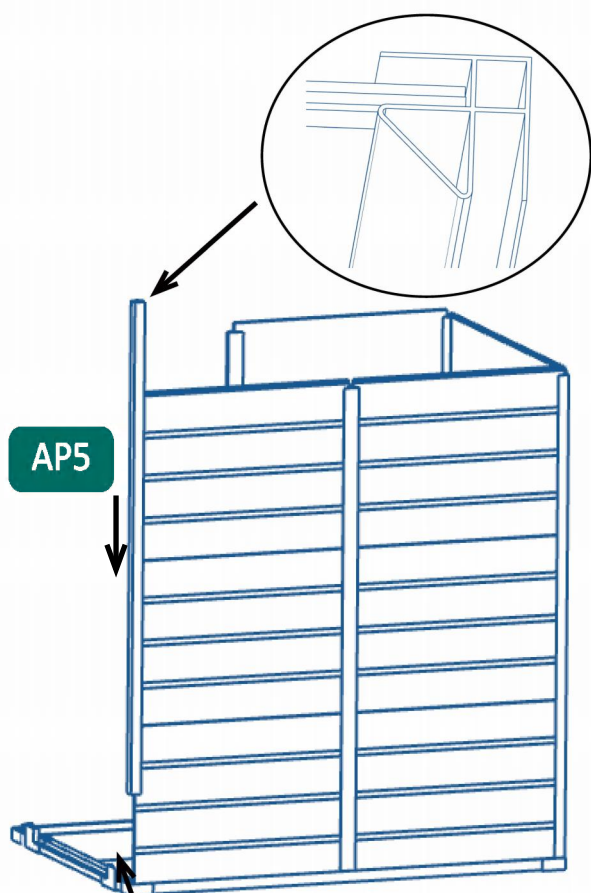






13



AWB4-1 2pcs



AWB4-4 1pcs

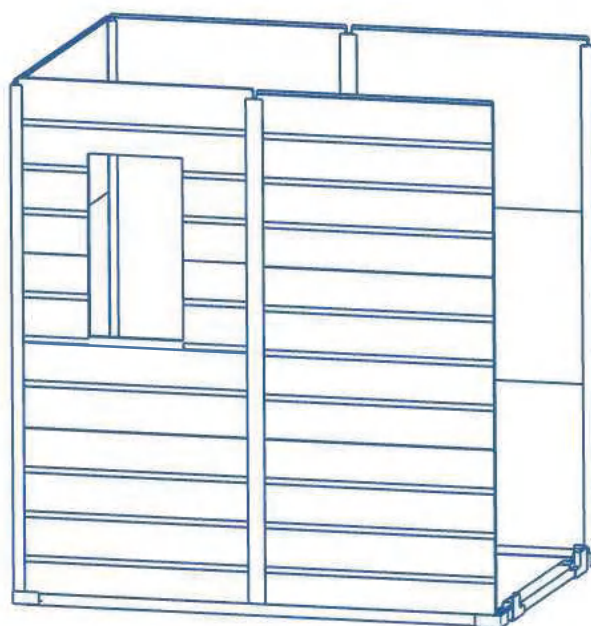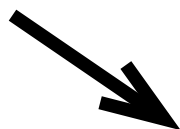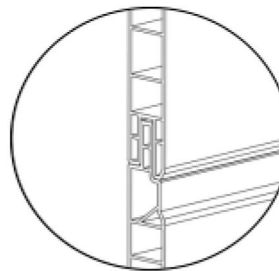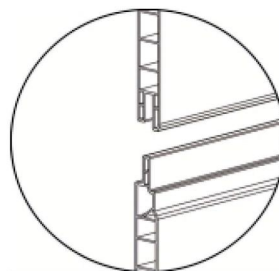
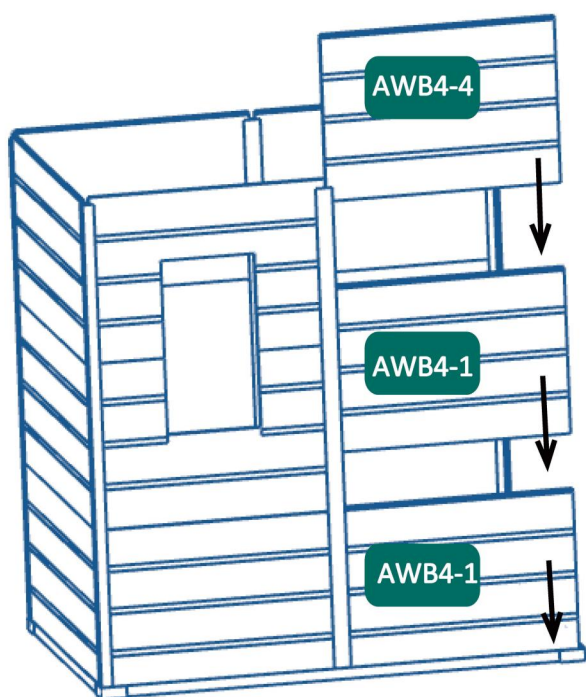


14




AP5 1pcs



AP5

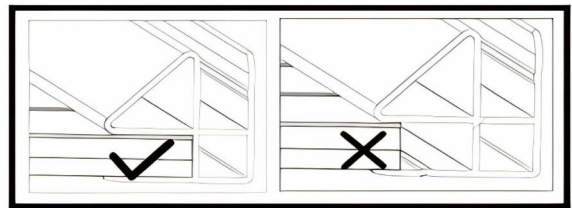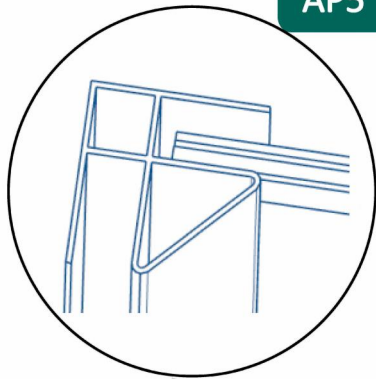


● Fully fit the panel inside the profile

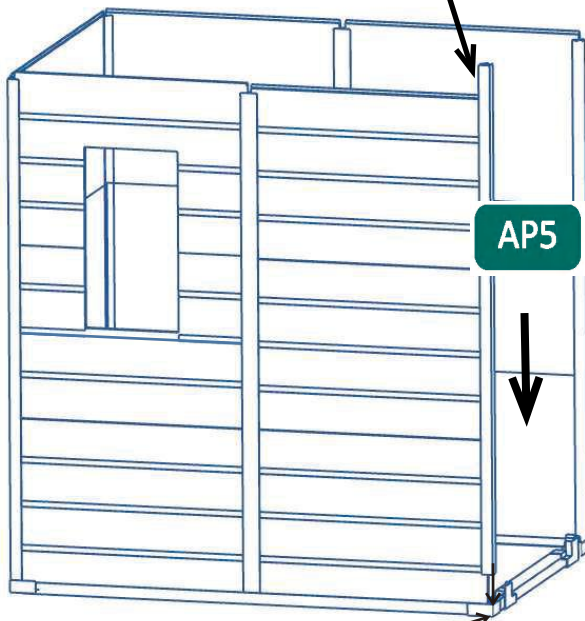

AP5

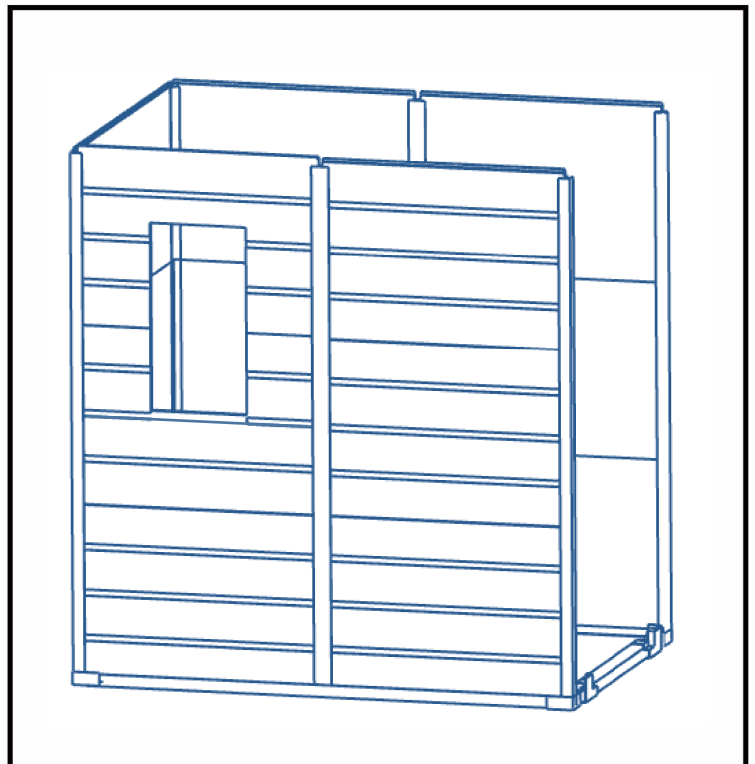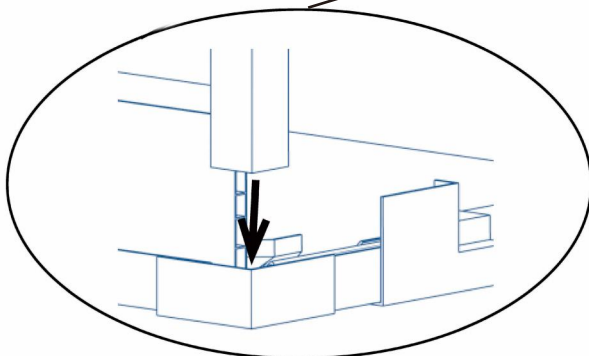



15

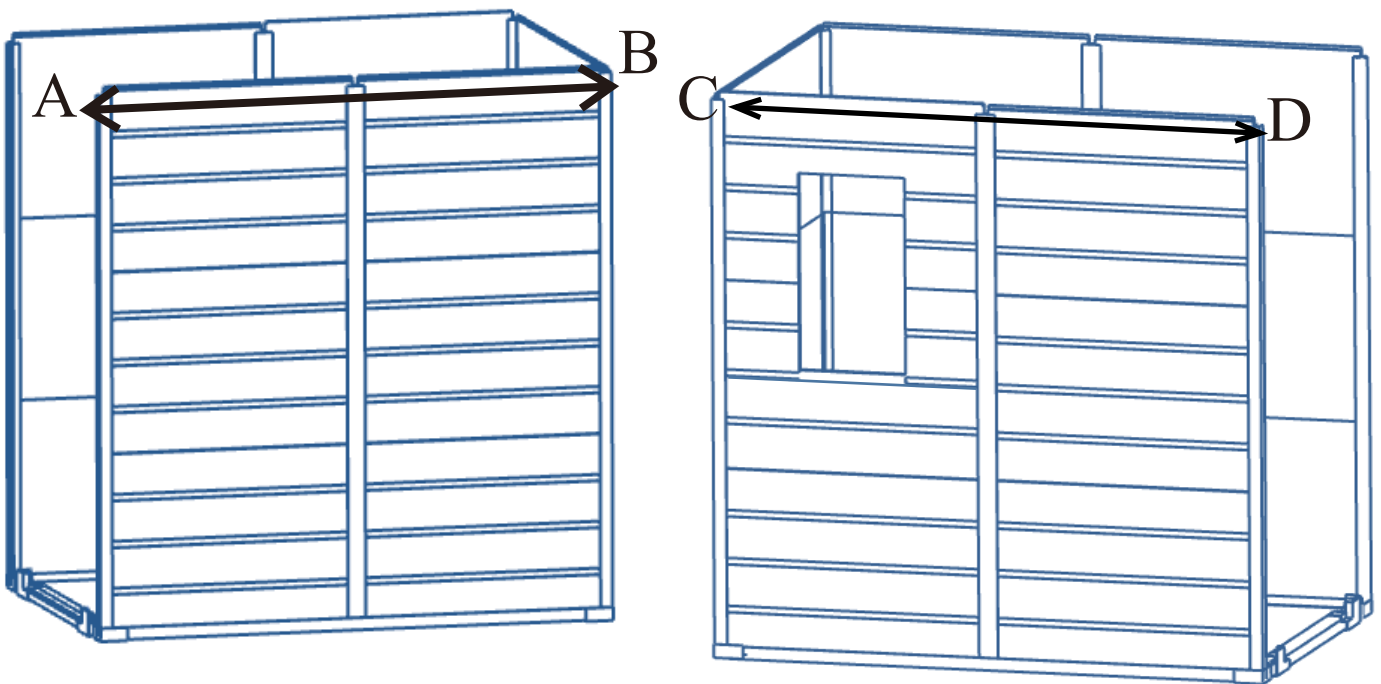


● Make sure $AB=CD$

16




- Ensure AB equal to CD before nailing
- Grain of the wall should be horizontal
- Fully fit the panel inside the profile

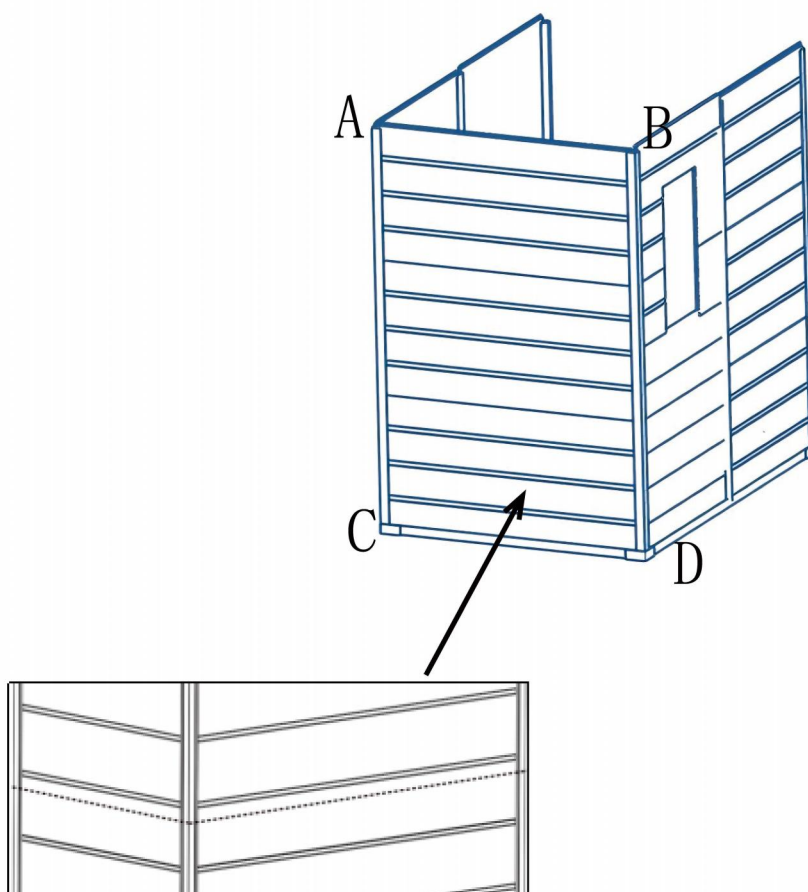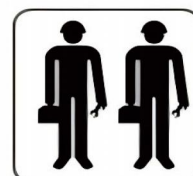

17

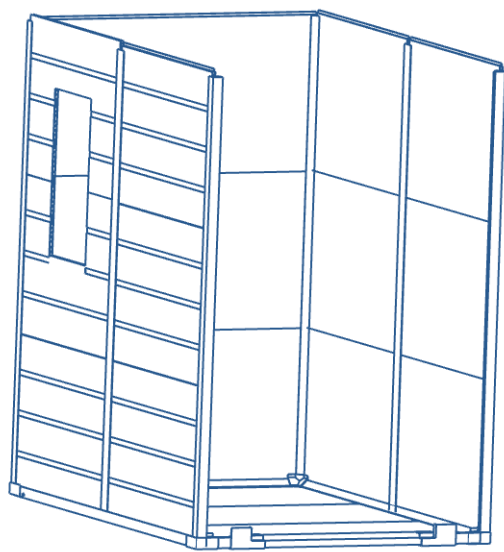


●Panel joint should be horizontal

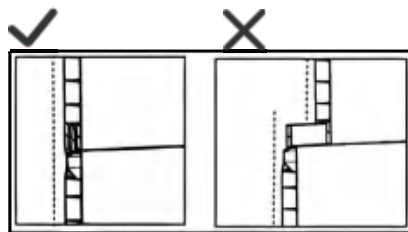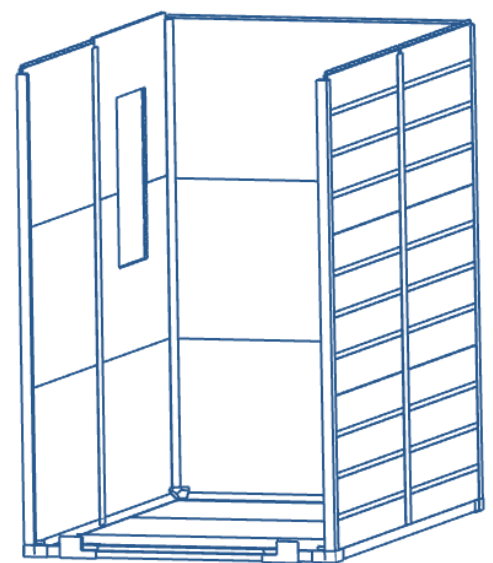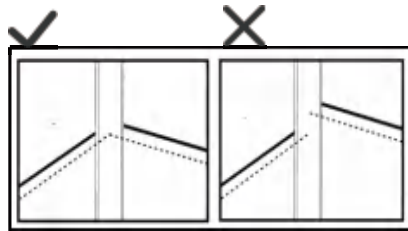


●Vertical direction of two panels should be aligned


18

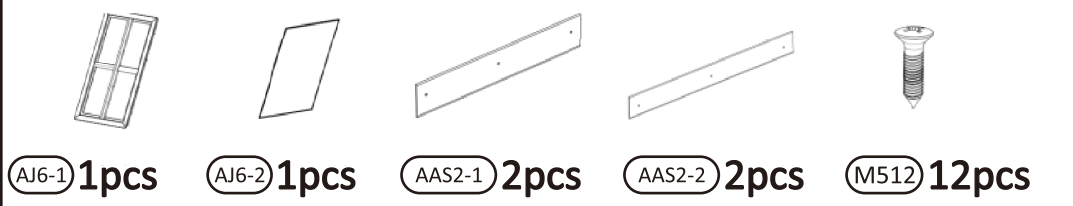

Window section

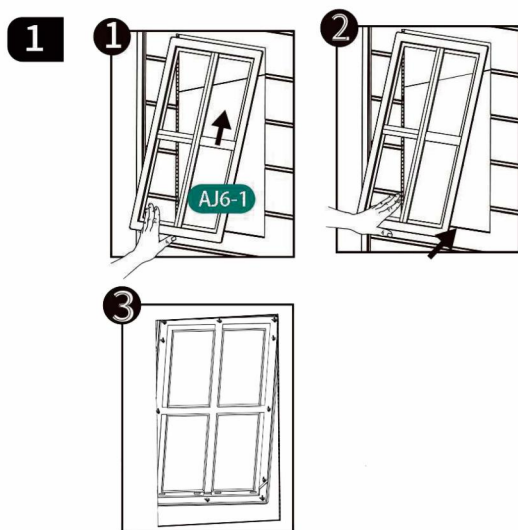


THE WINDOW AFTER ASSEMBLING

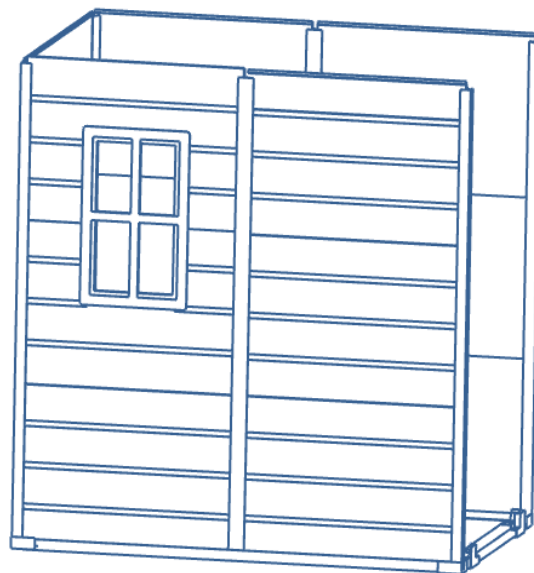


2




- Two persons are needed for this step, AJ6-1 to press AJ6-2 from outside and inside.

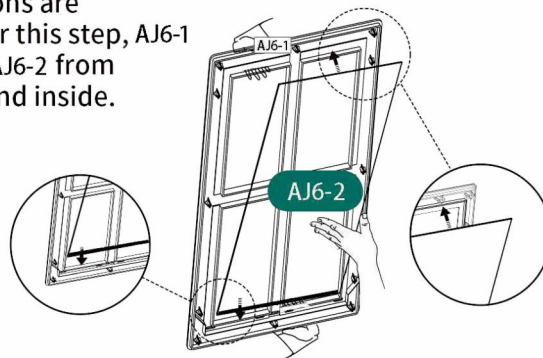

3

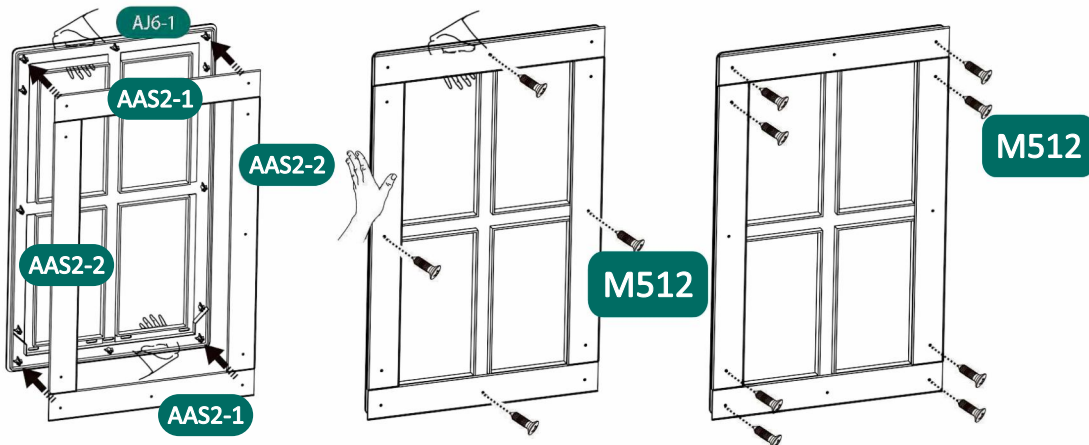


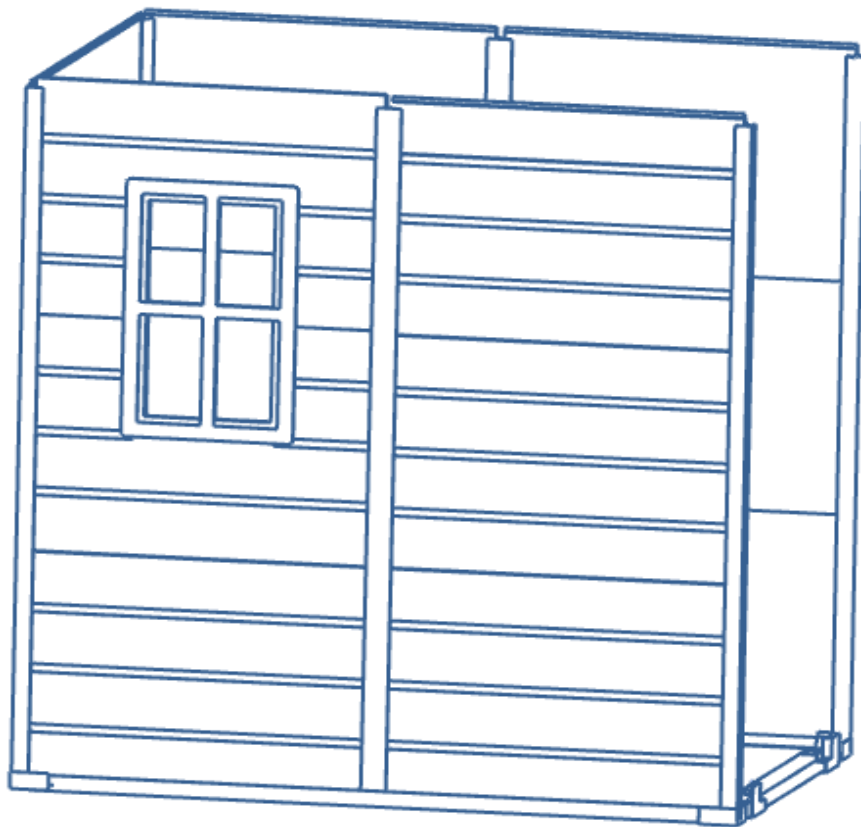

20




M5x12 12 pcs

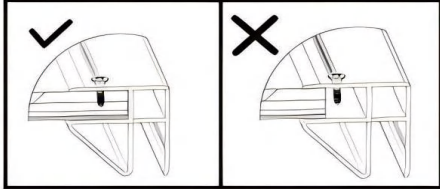

Screw along the marked lines in profile



Please use Drill  to predrill a hole at depth 1mm before screw.

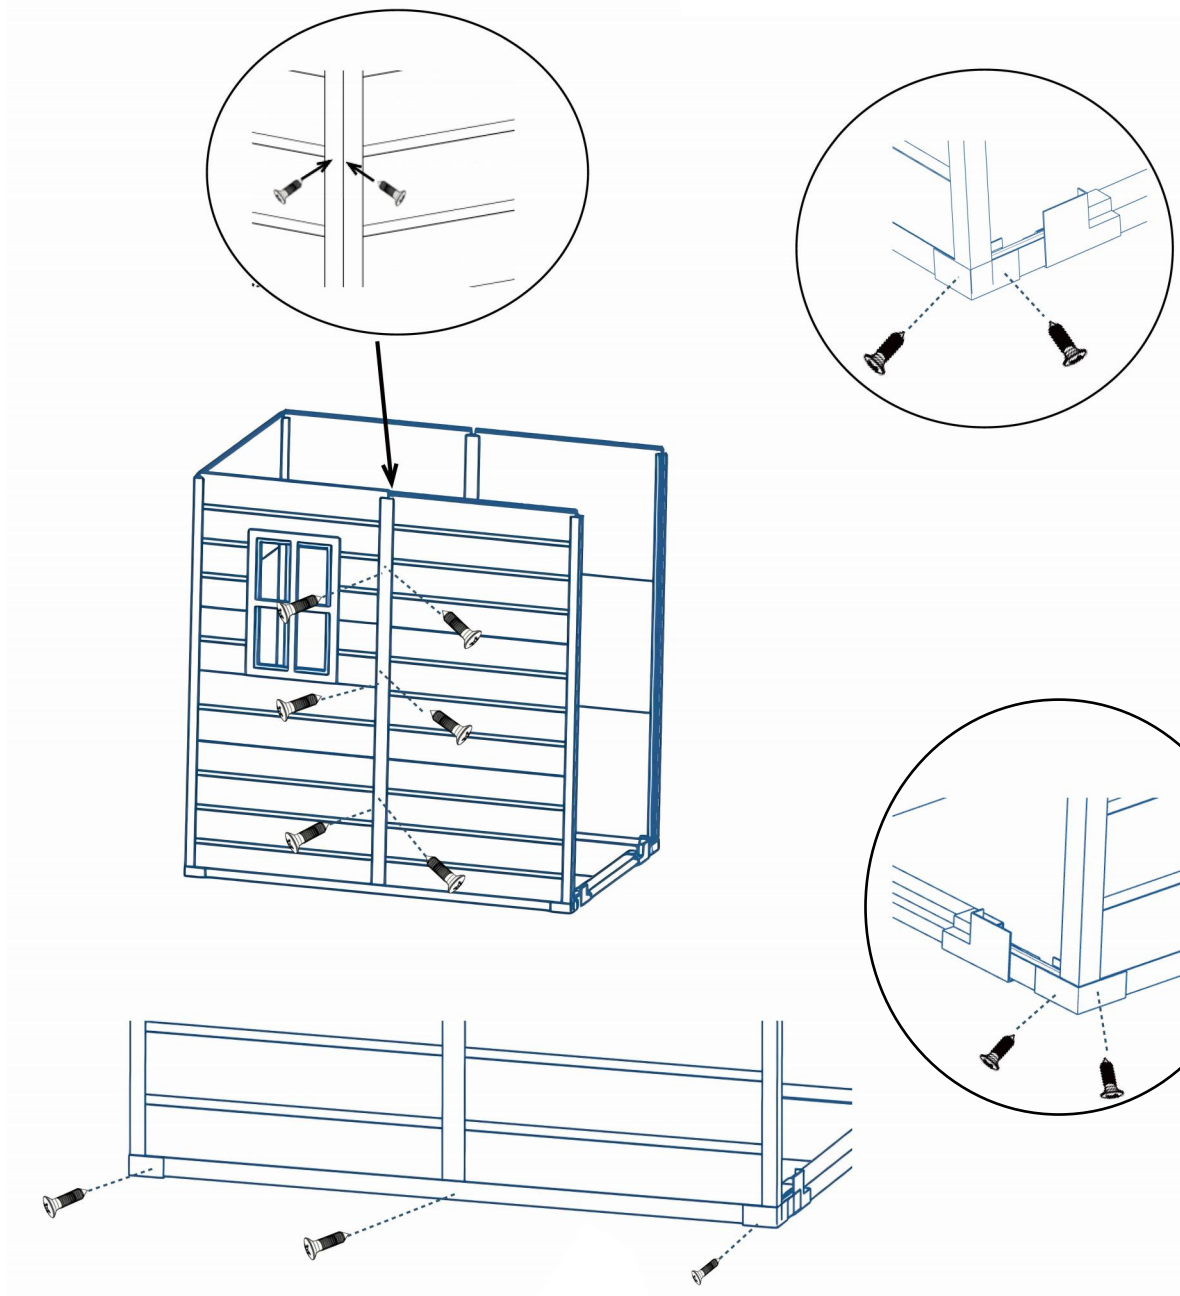

21



M512 11pcs

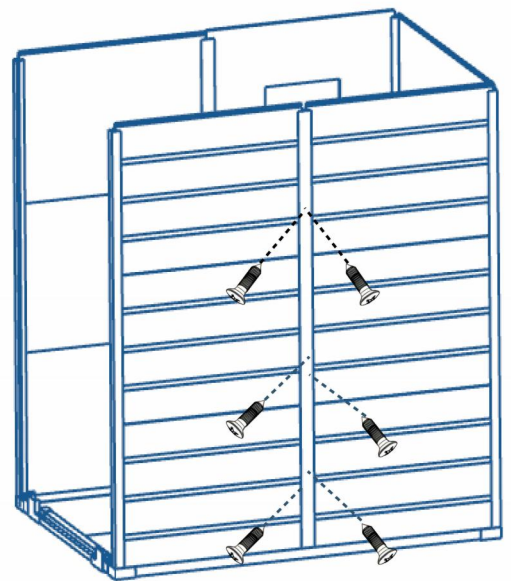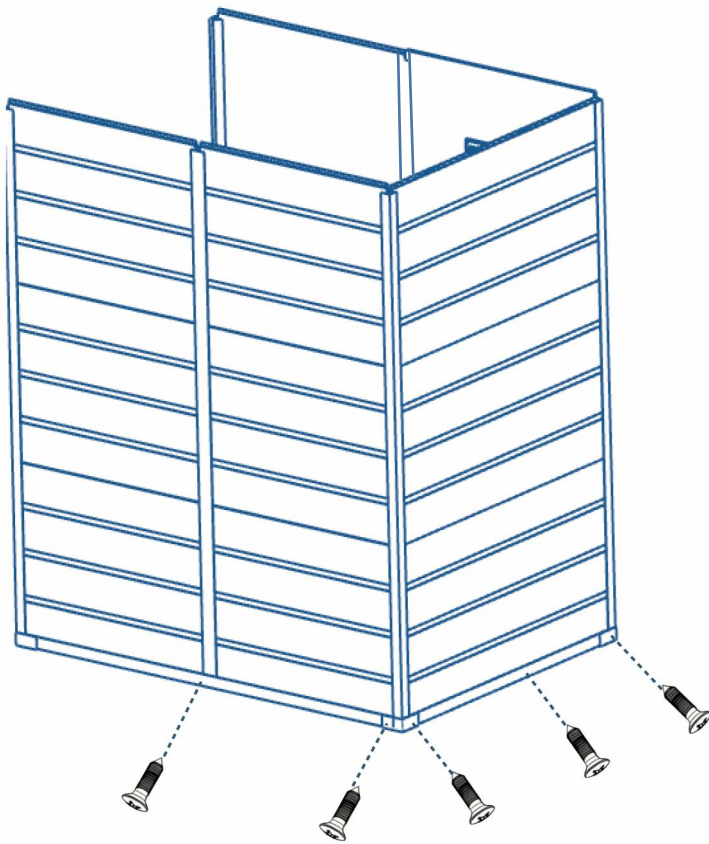


22






(M5x12) 12pcs

Please use Drill  to predrill a hole at depth 1mm before screw.

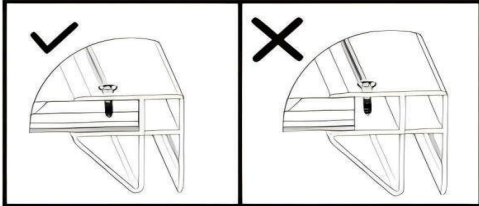

Screw along the marked lines in profile

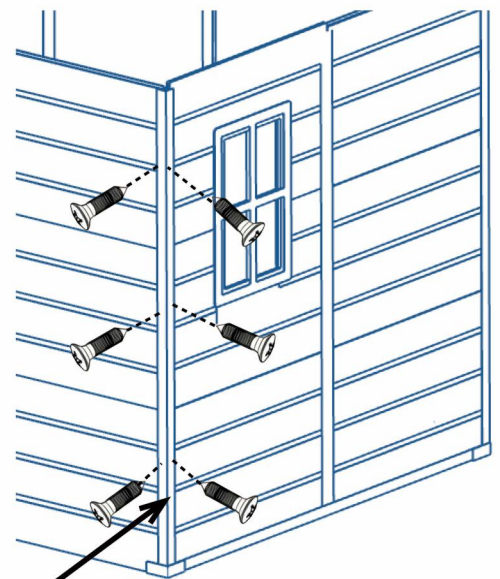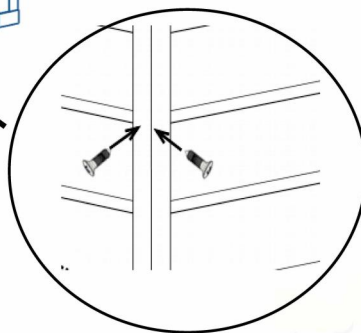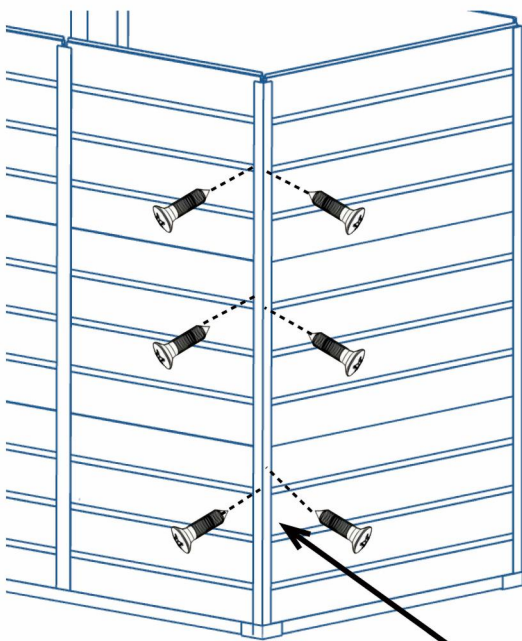



23

AEB


4pcs

ADS3-1

4pcs

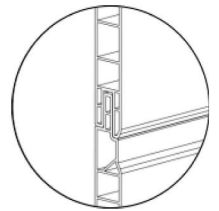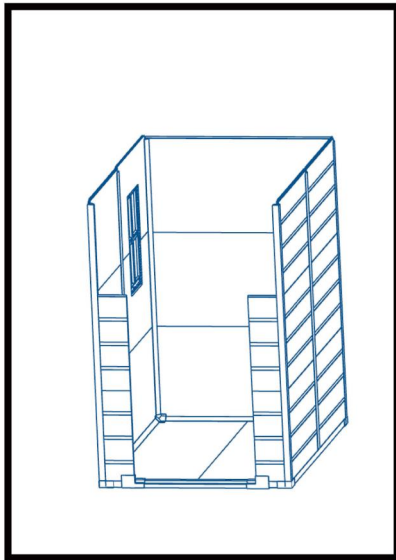

AEB

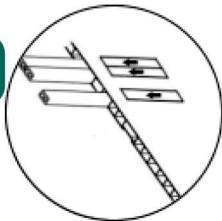



ADS3-1

ADS3-1

ADS3-1

ADS3-1


AEB

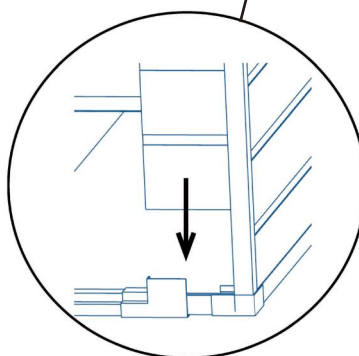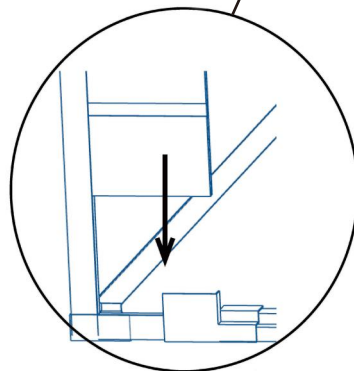


24







AEB 3pcs



ADS3-2 1pcs





ADS3-3 1pcs

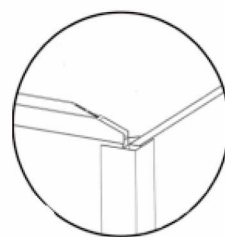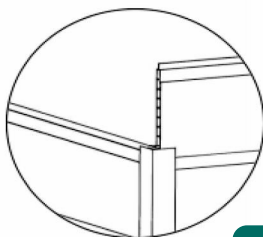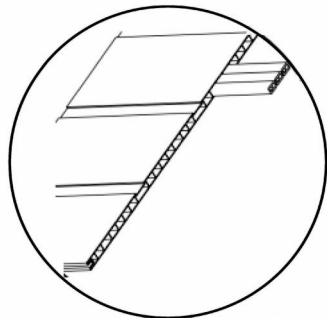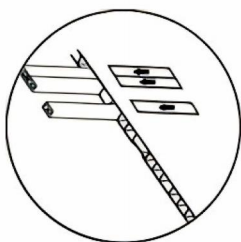

ADS3-2

ADS3-3

AEB

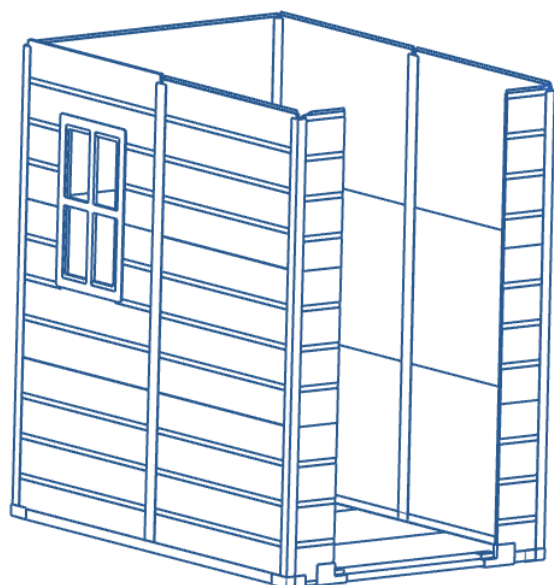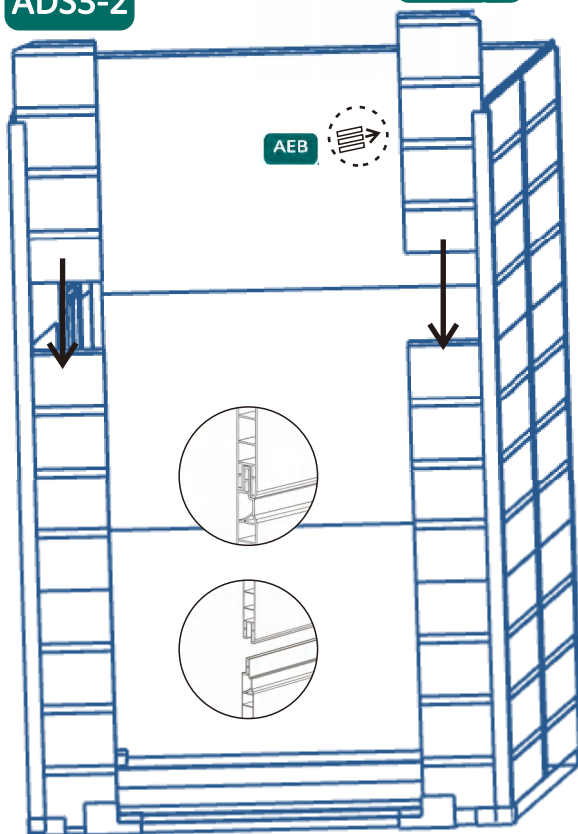

25




AA1L

1pcs



AA1R




1pcs

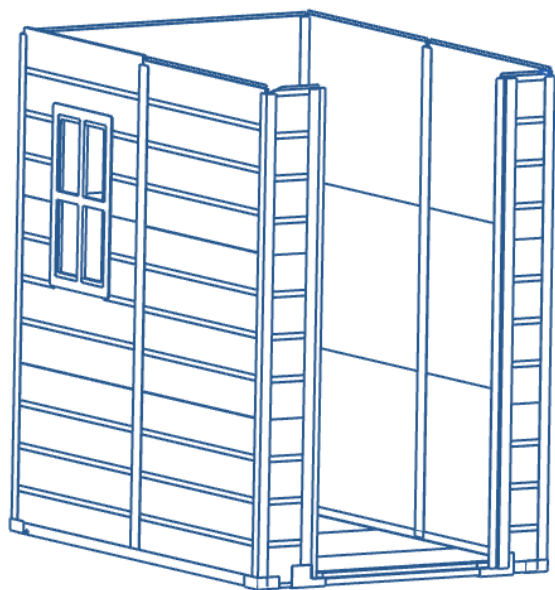

AA1L








AA1R

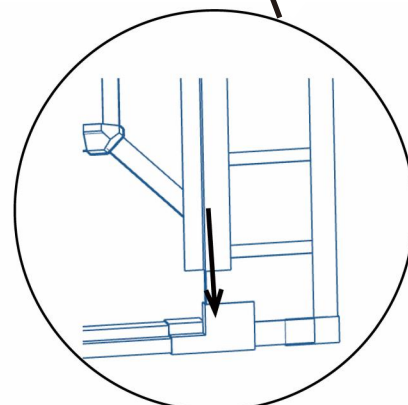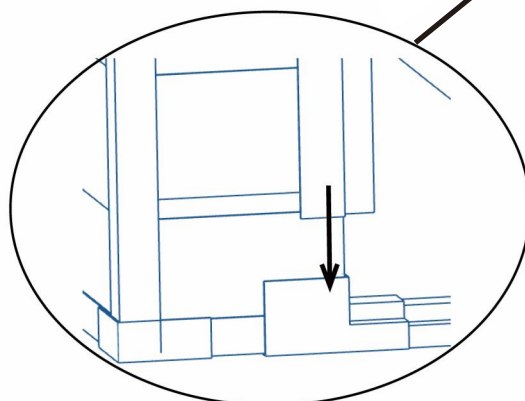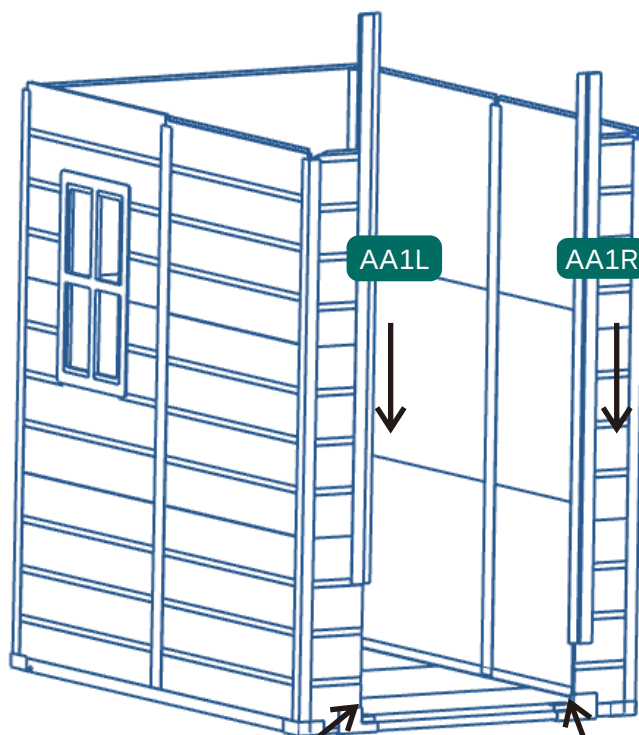

26



AA2 1pcs

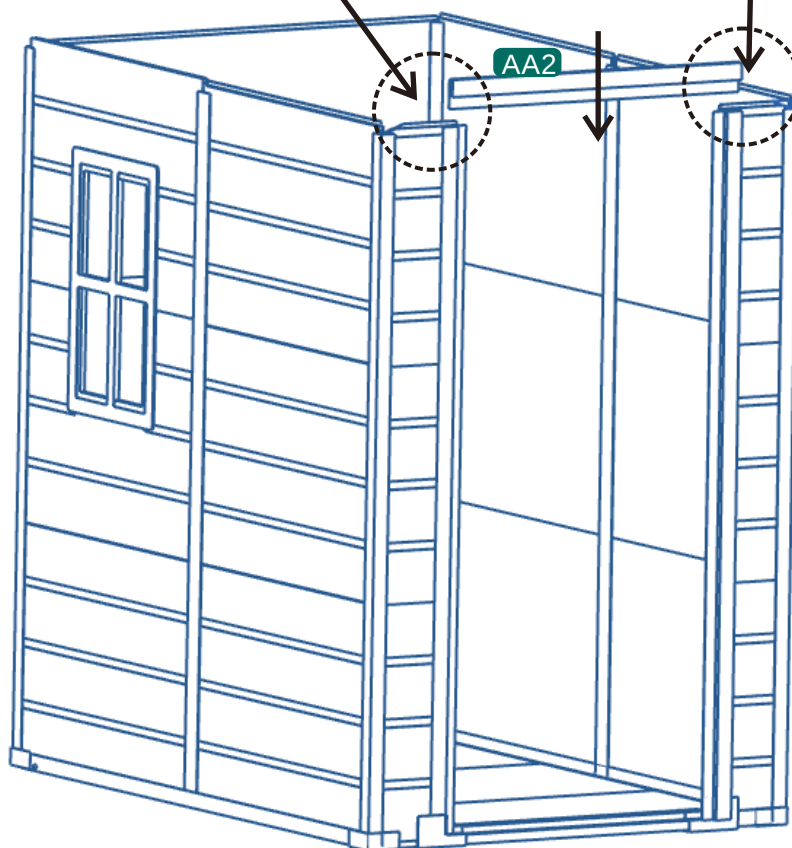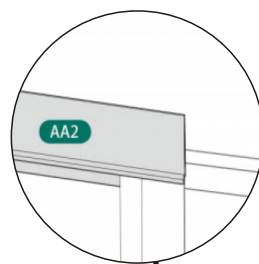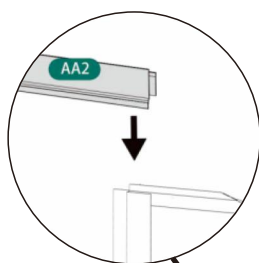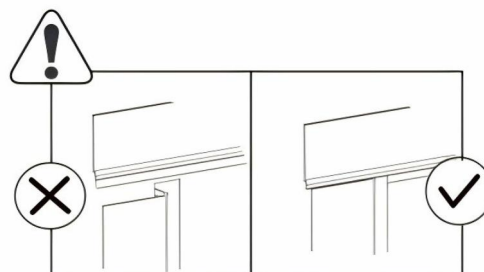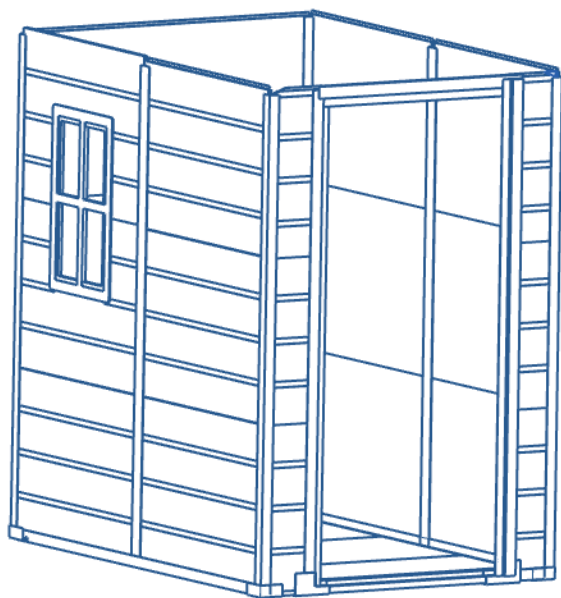

27





AT2-2

1pcs





M516

2PCS

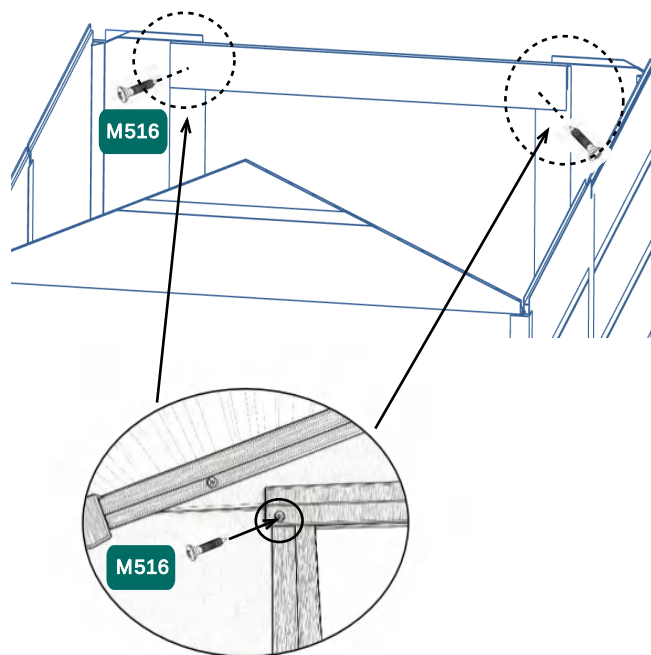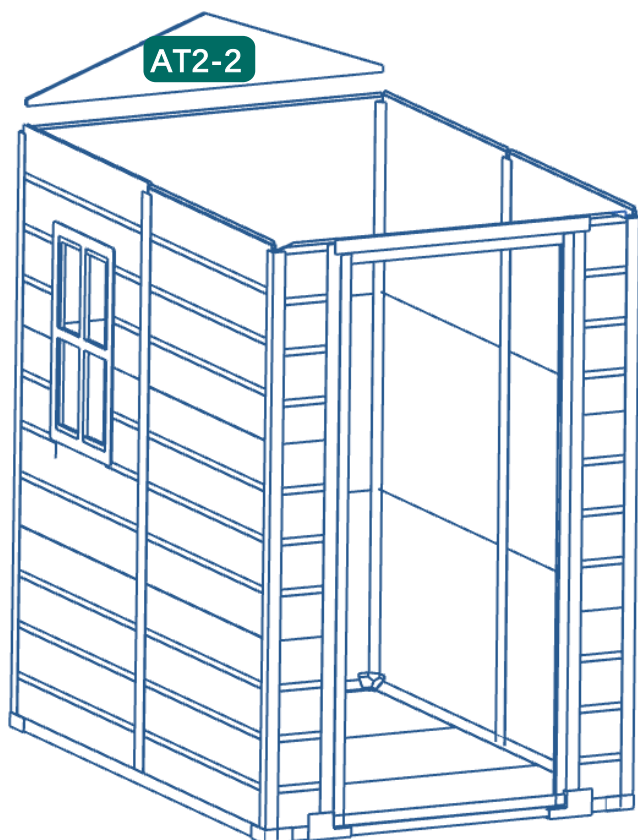

- To prevent the door from warping, you can screw it in place at AA6.

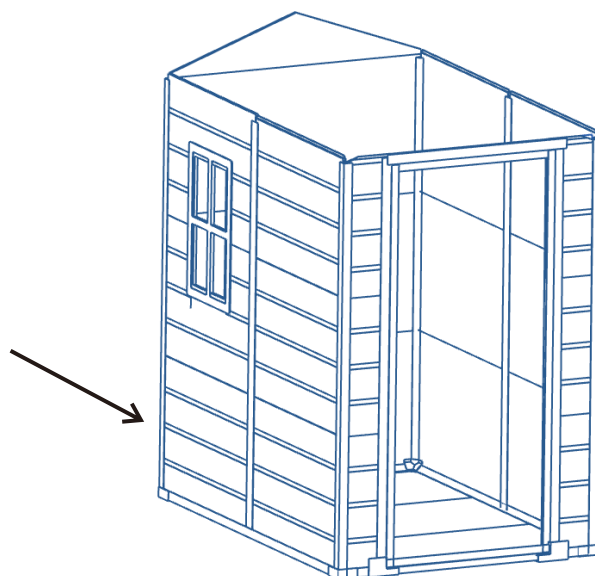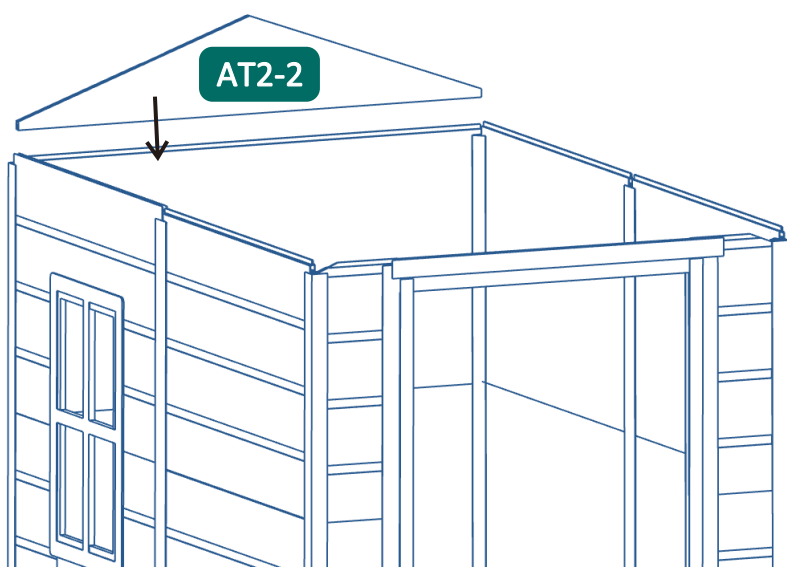

28



AT2-1 1pcs









AJ5 1pcs




M512 4pcs

X4

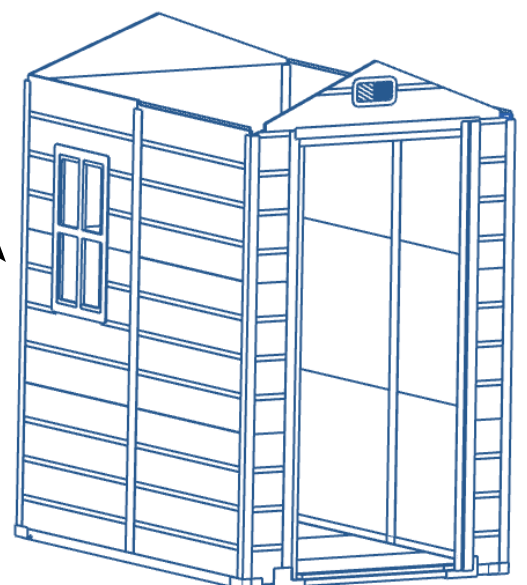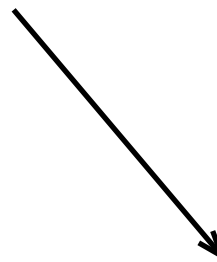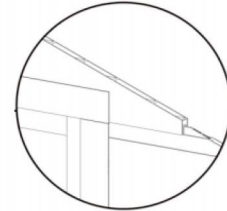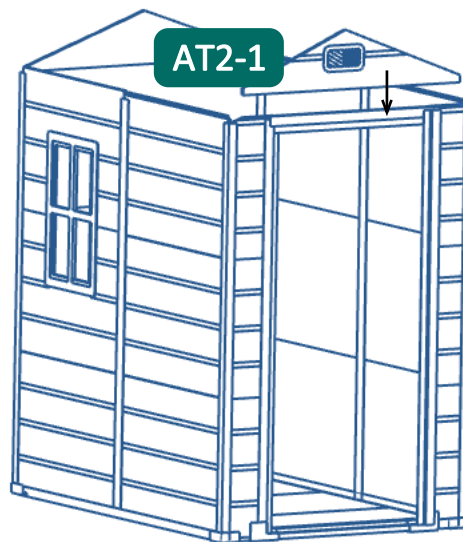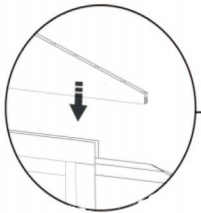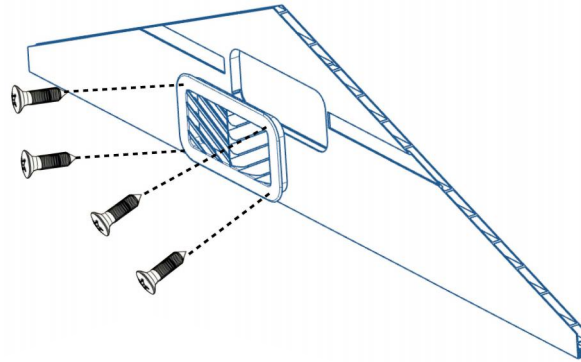

29


$$AB=CD$$

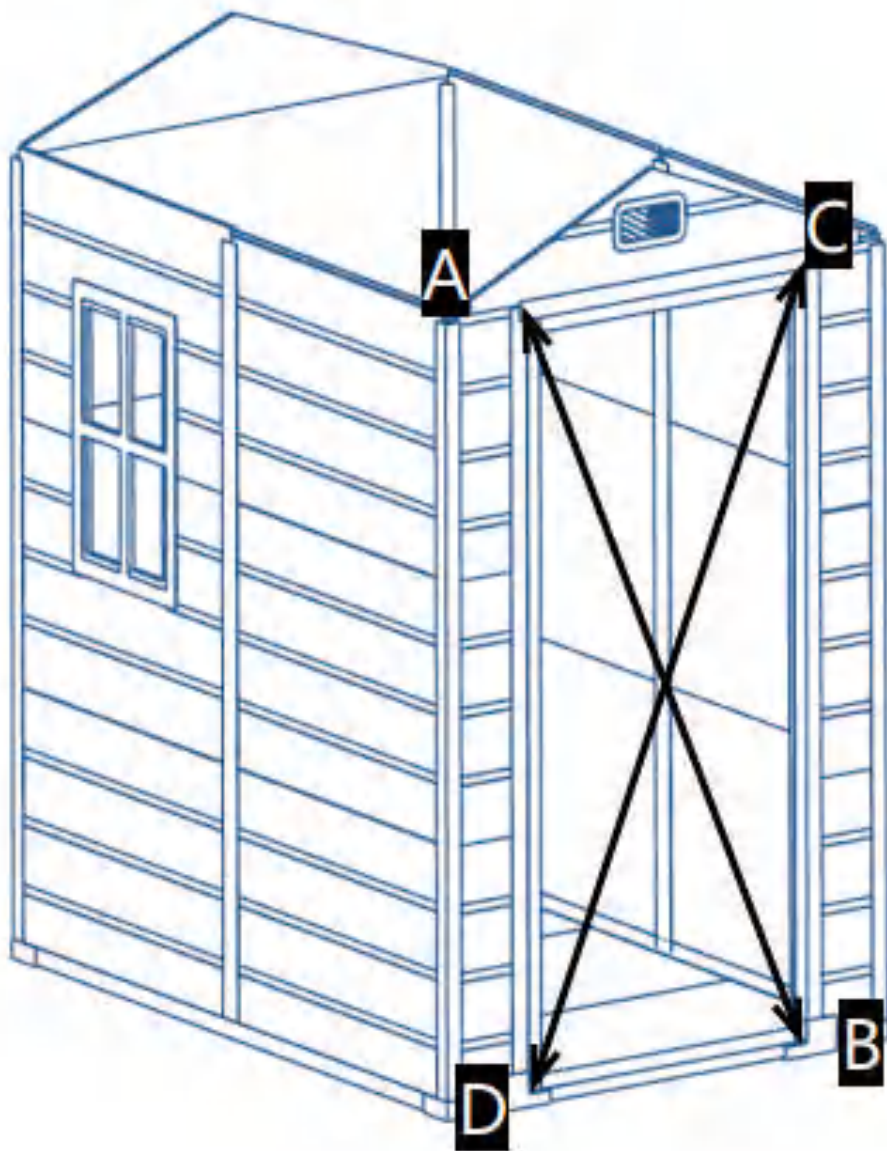


30




(M512) 12pcs

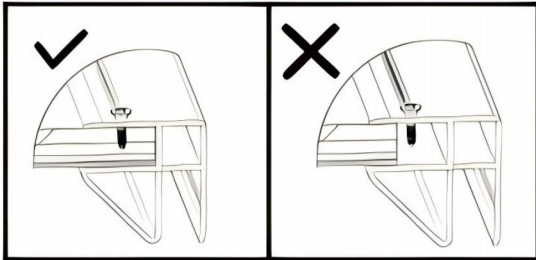


Fully fit the panel inside the profile
Screw along the marked lines in profiles

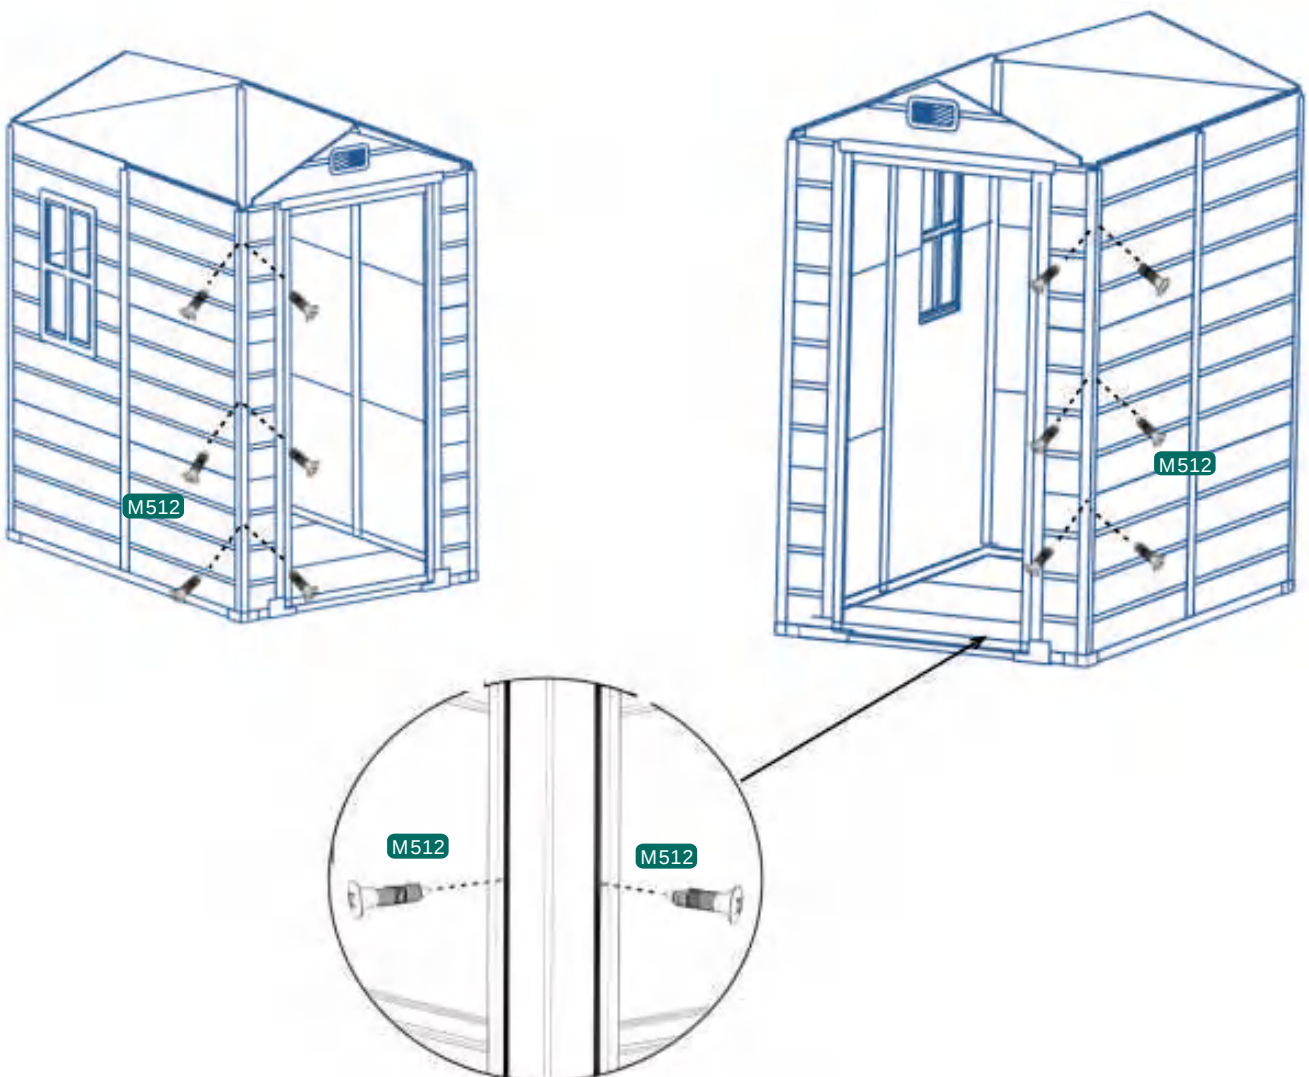


ROOF PARTS

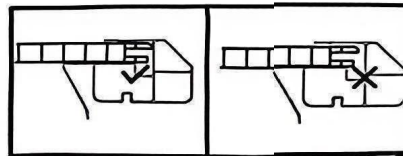



Fully fit the panel inside the profile

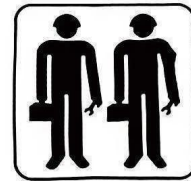

AJ7

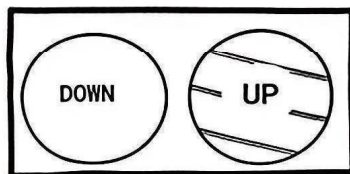

The stripes should be upwards

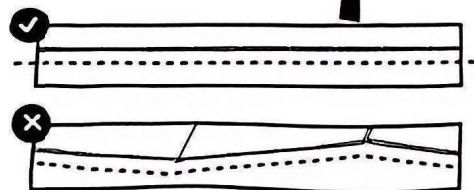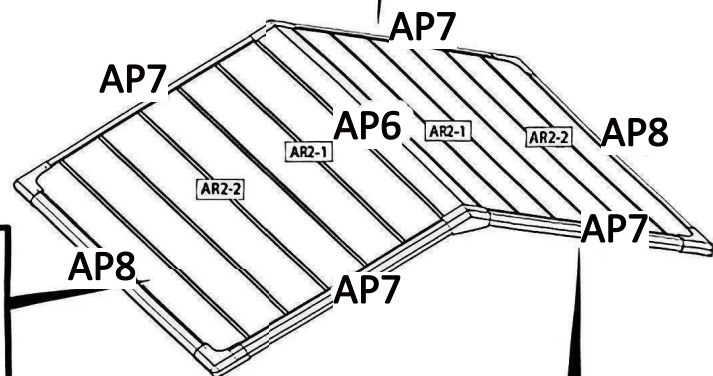

32





AR2-2 2pcs







AR2-1 2pc



AP6 1pc

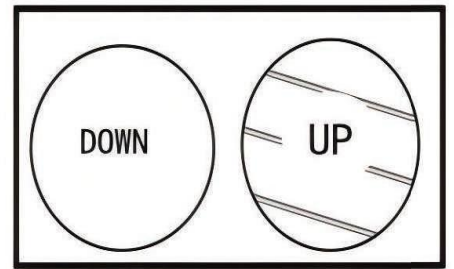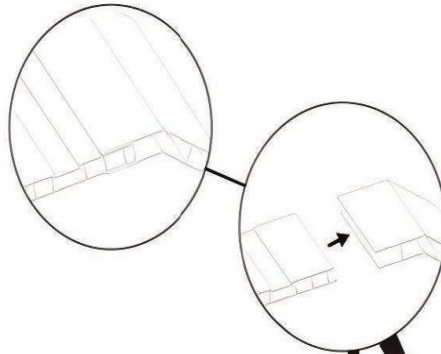

The stripes should be upwards

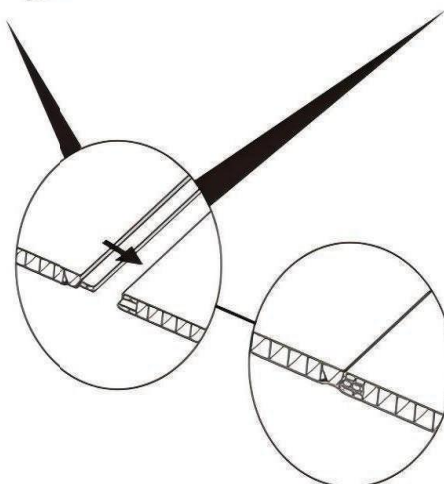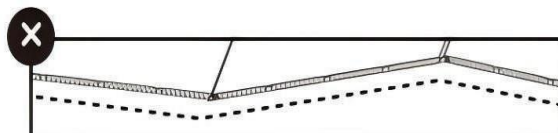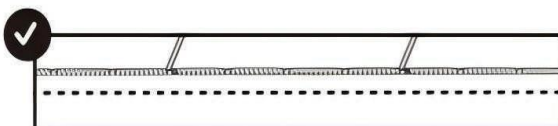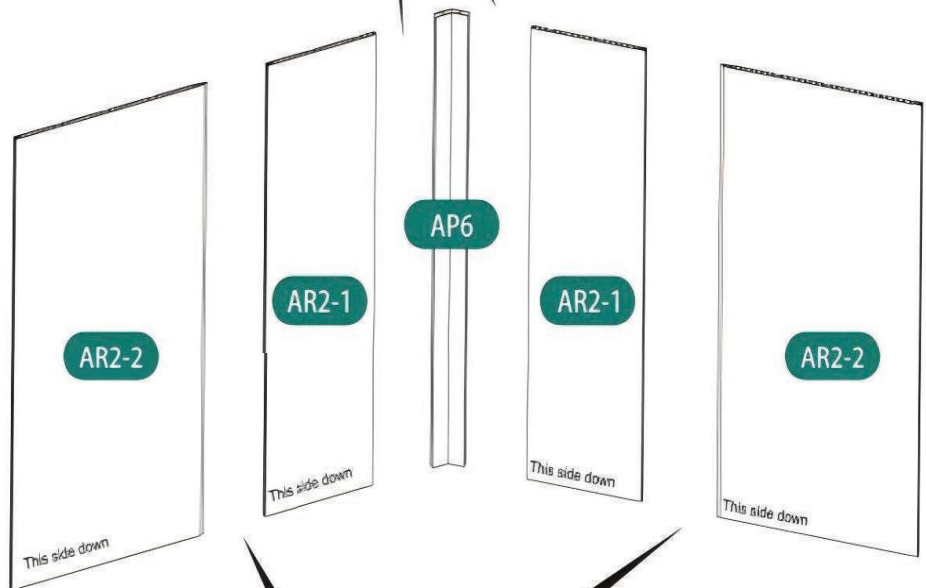

33






AP8 2pcs




AP7 4pcs



AJ3 4pcs

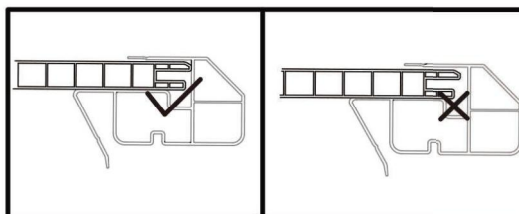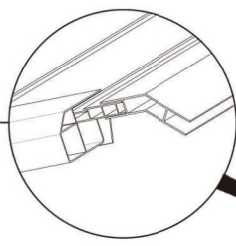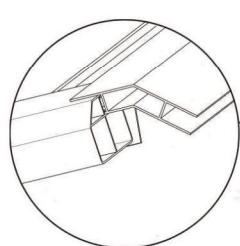

Fully fit the panel inside the profile


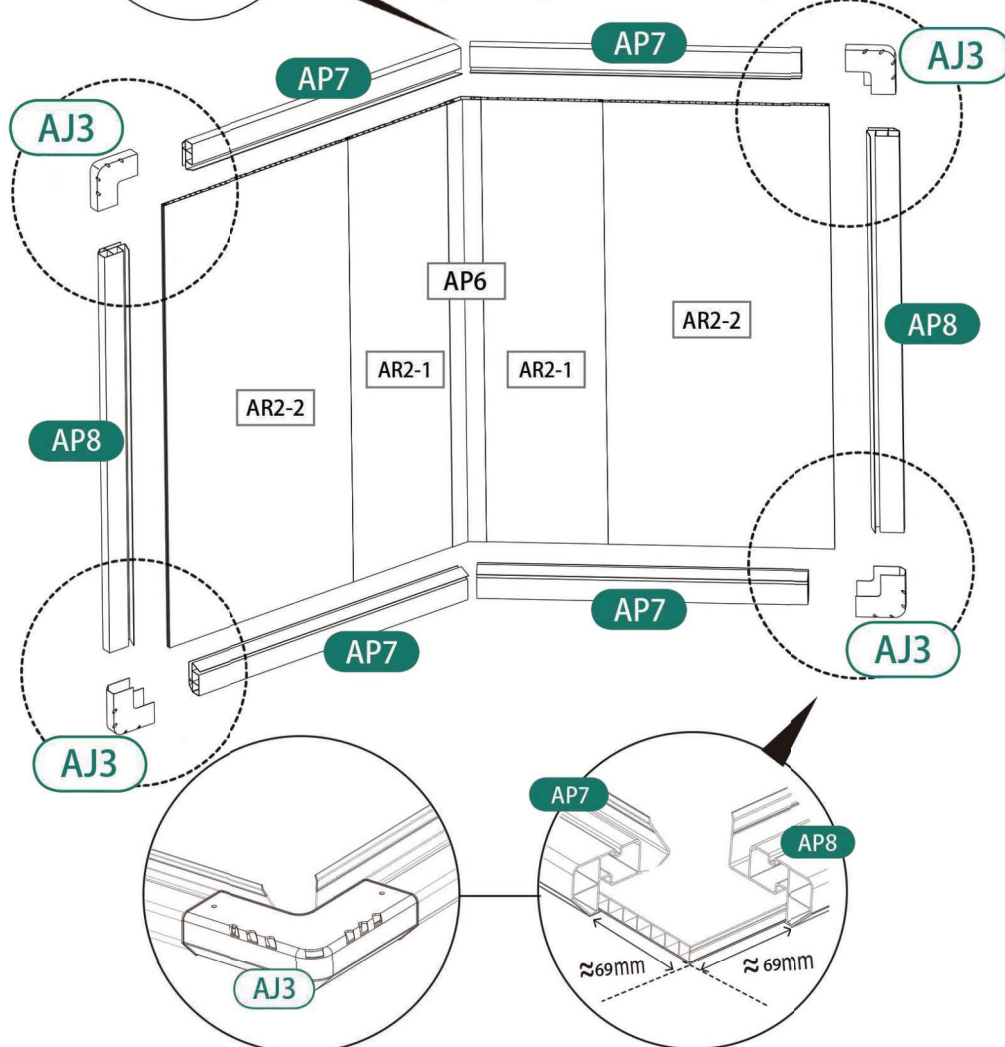


● Please note the measurement dimensions

34




M512 8pcs

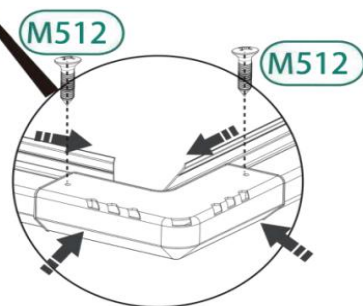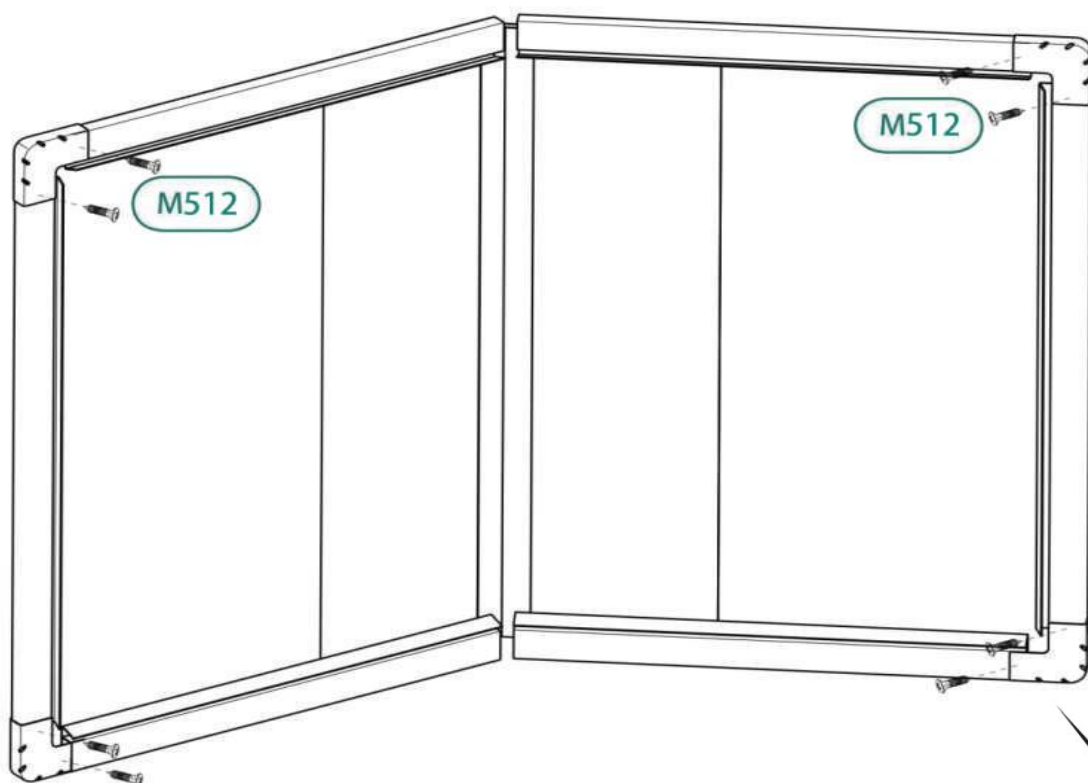

35



M512 24pcs

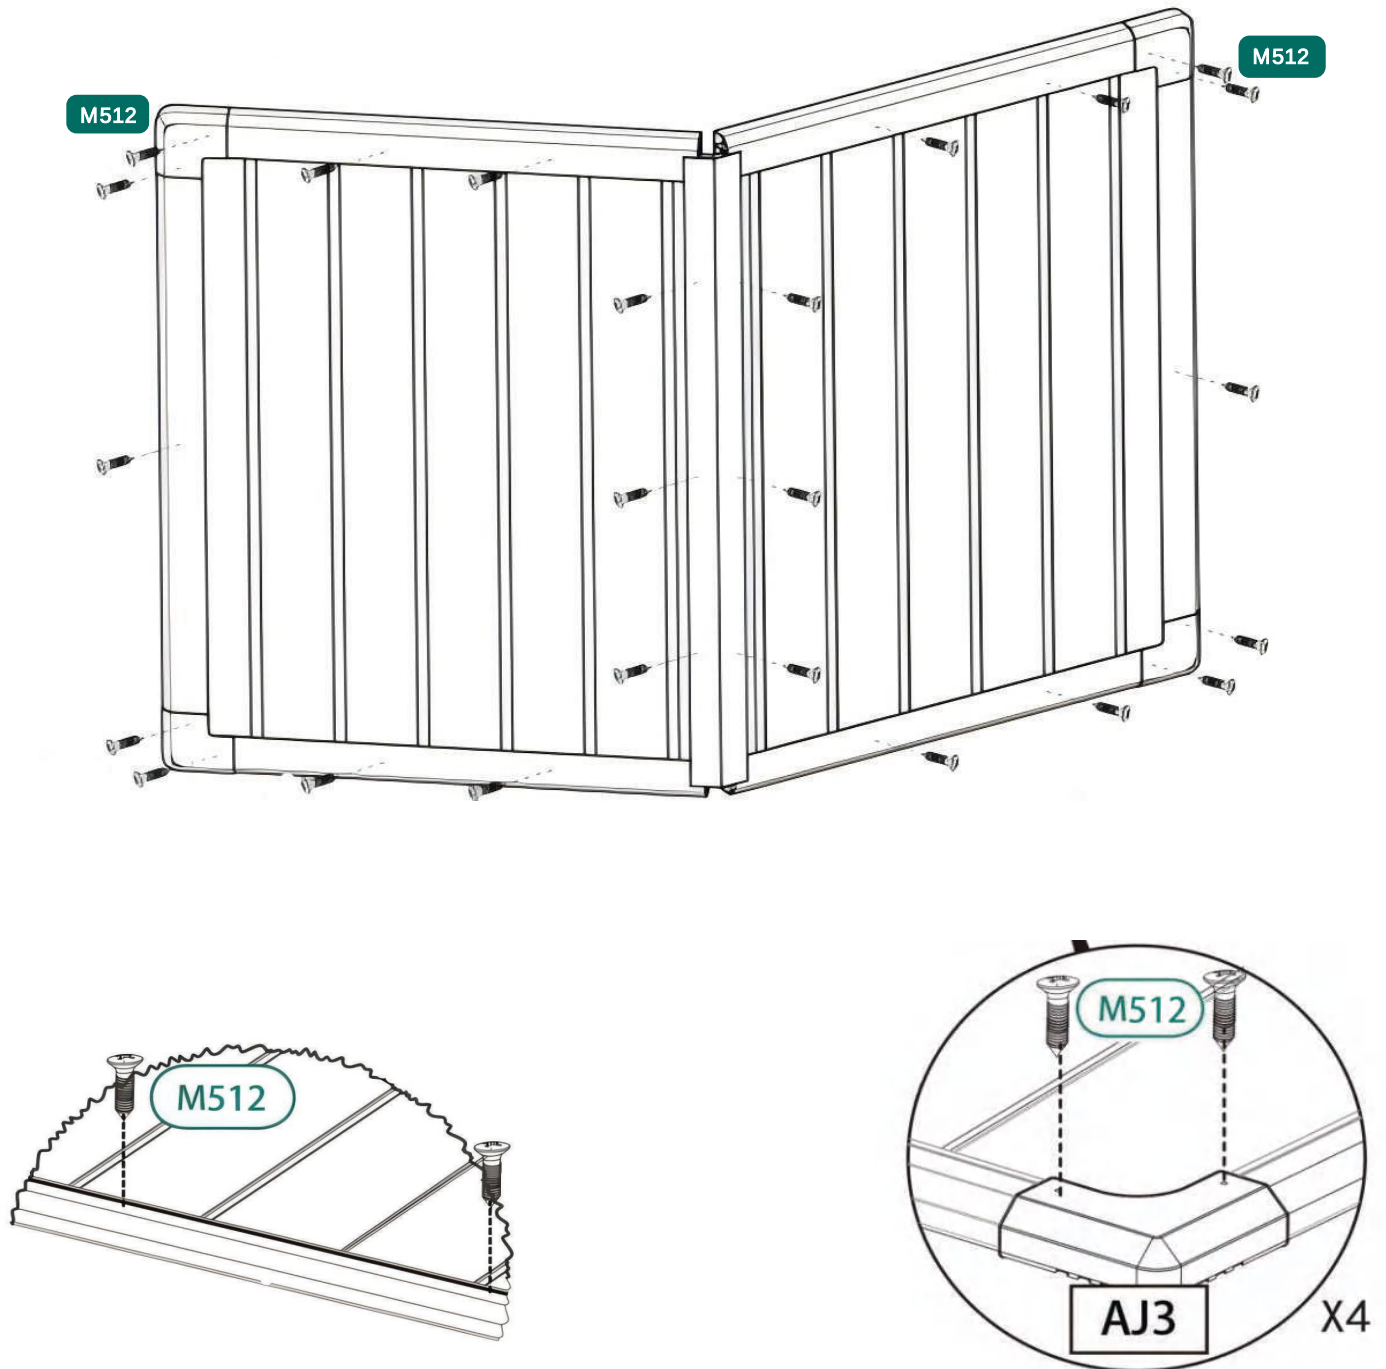





36








AJ4 2pcs



M512 4pcs

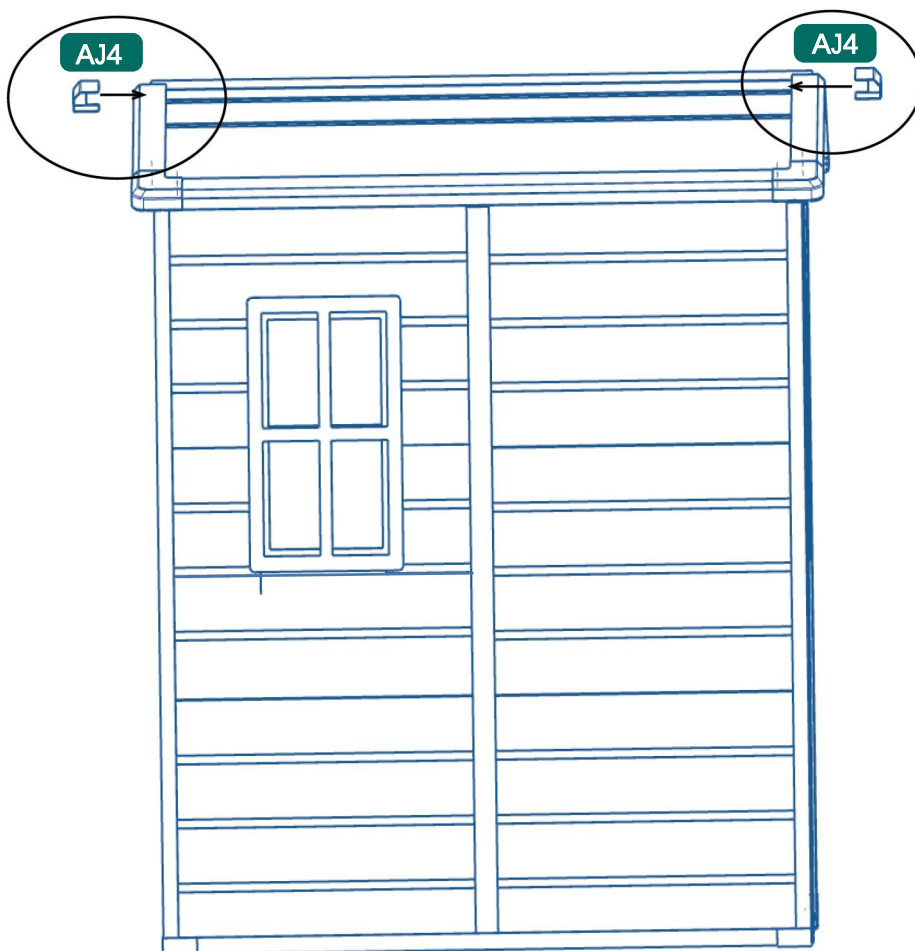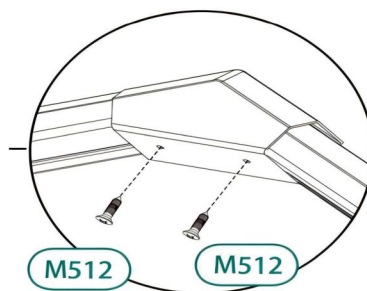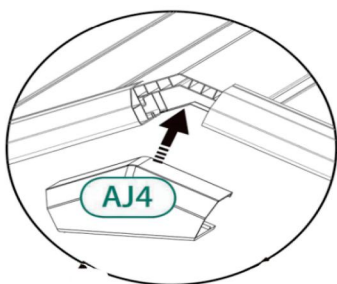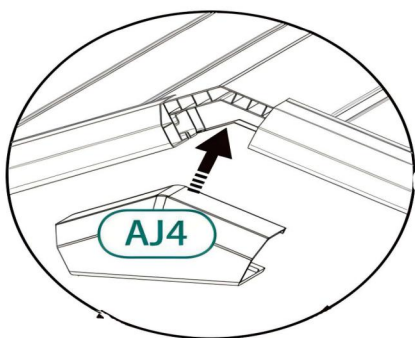

37

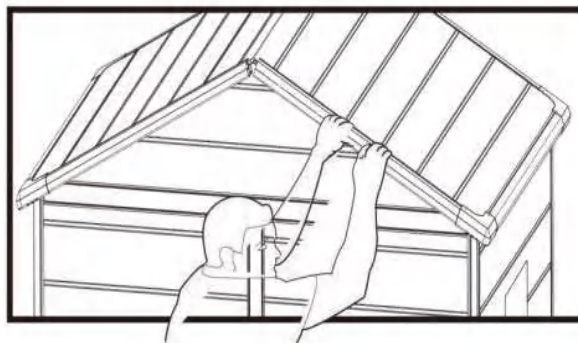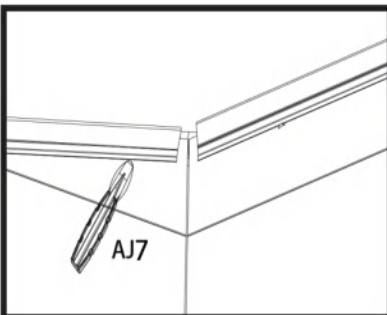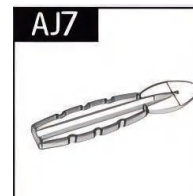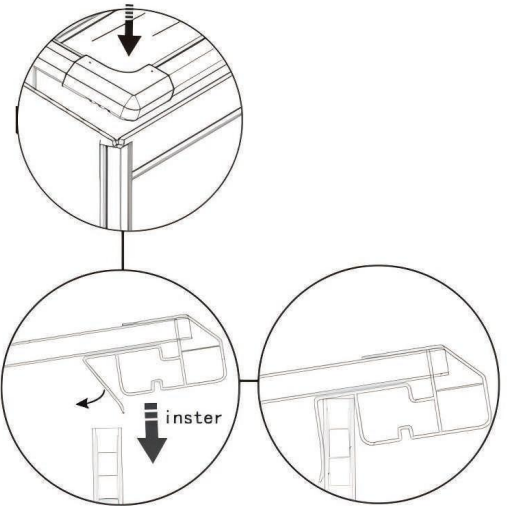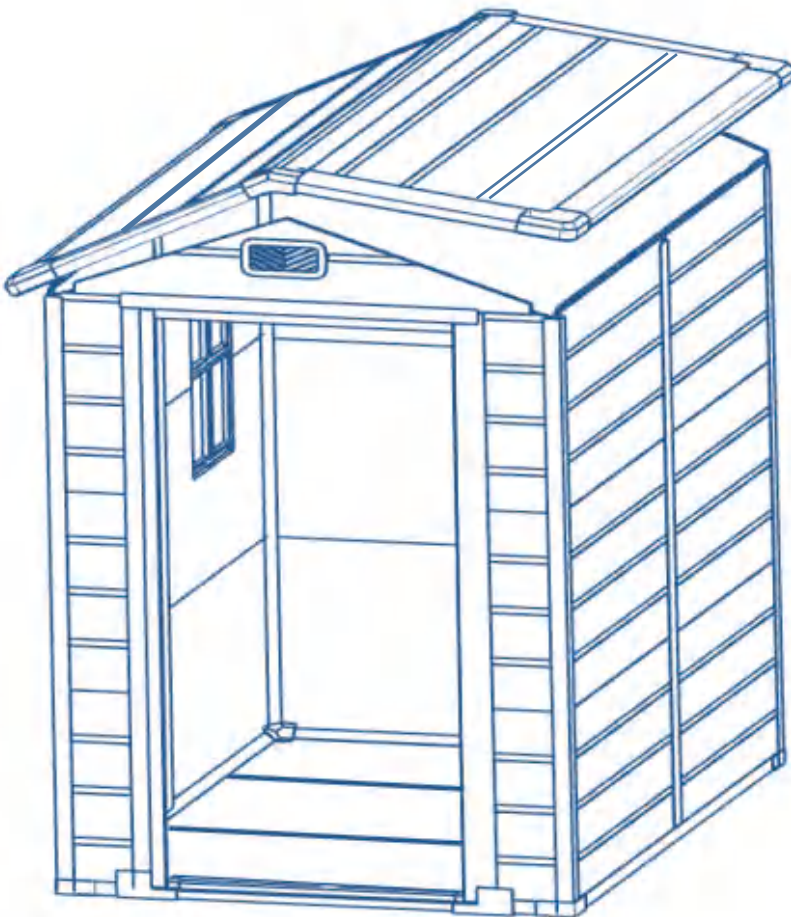

Fully fit the panels inside the profiles of roof




38



M512 12pcs




Please use Drill to predrill a hole at depth 1mm before screw.

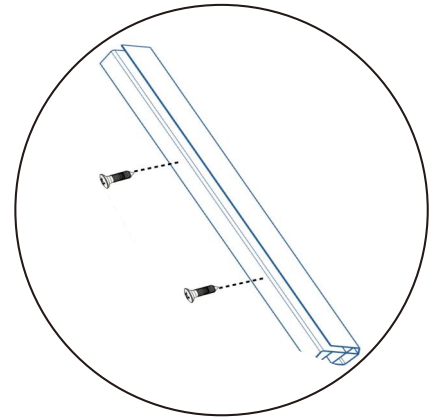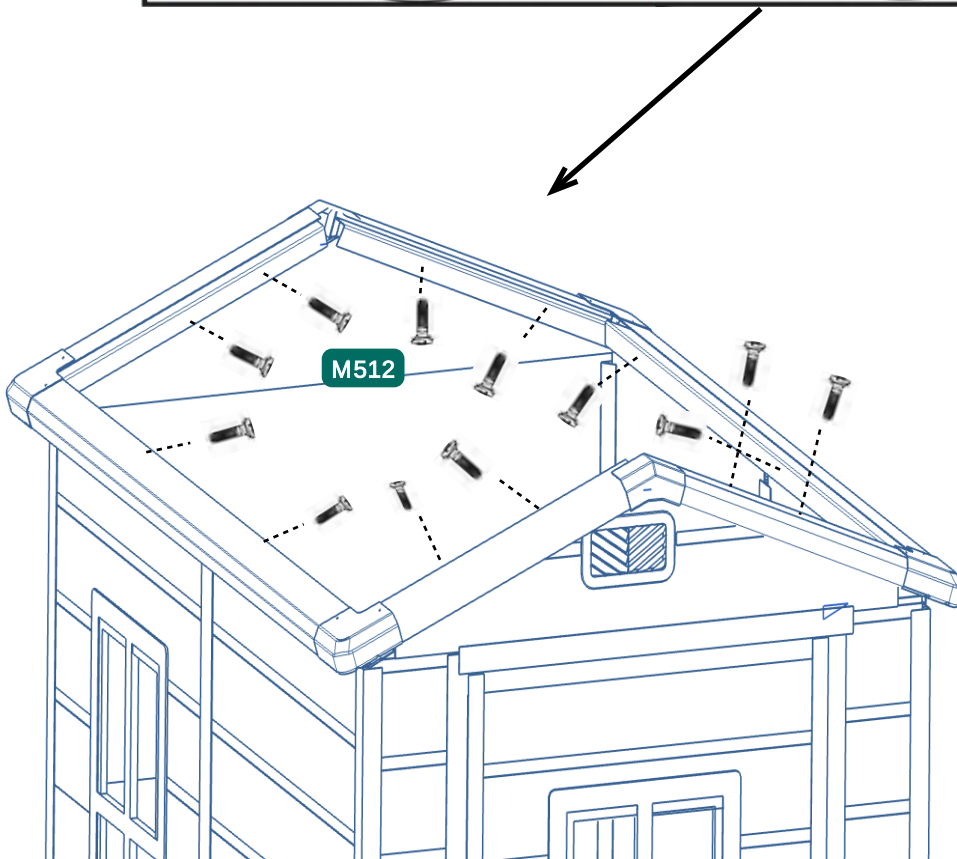
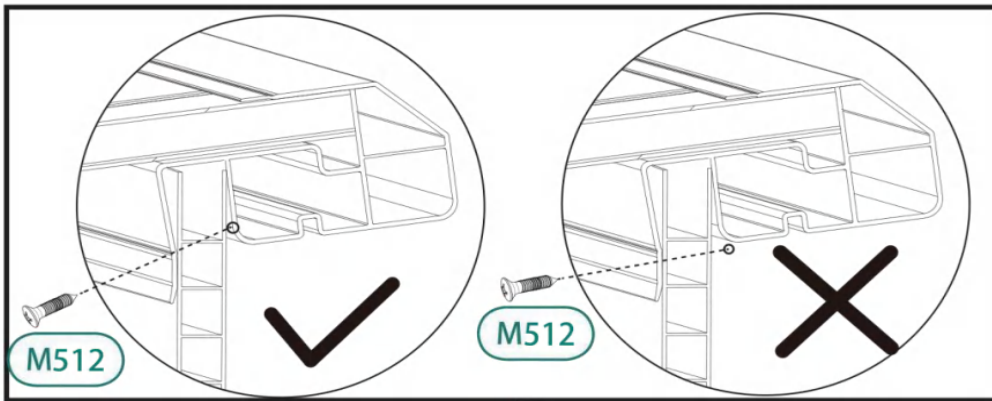


39

DOOR SECTION

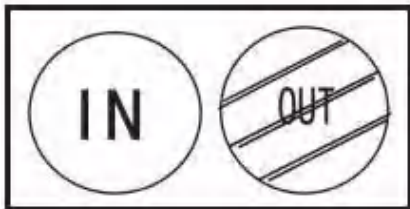

The stripes should be outside

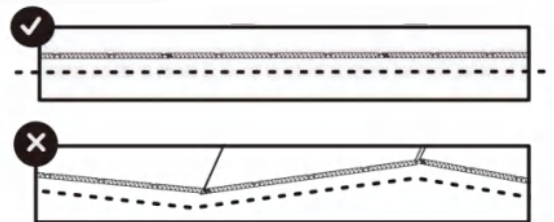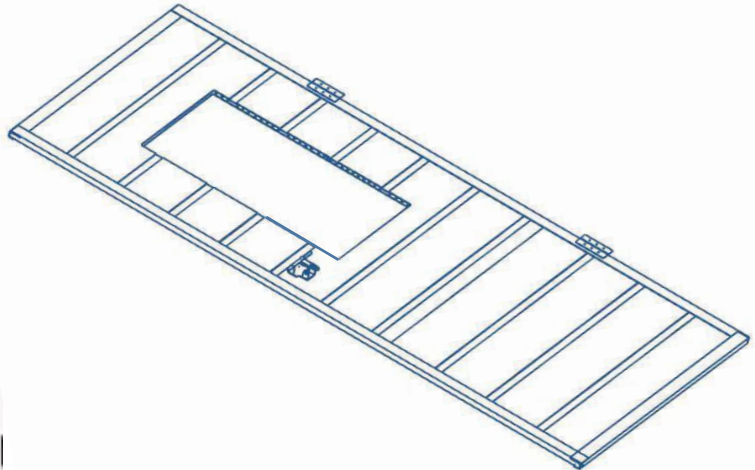

40



AD3-1 1pcs








AD3-2 1pcs



AD3-3 1pcs



AEB 10pcs

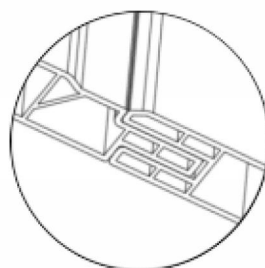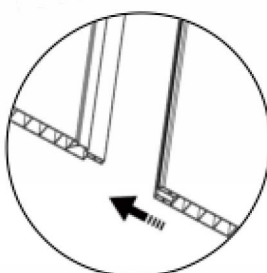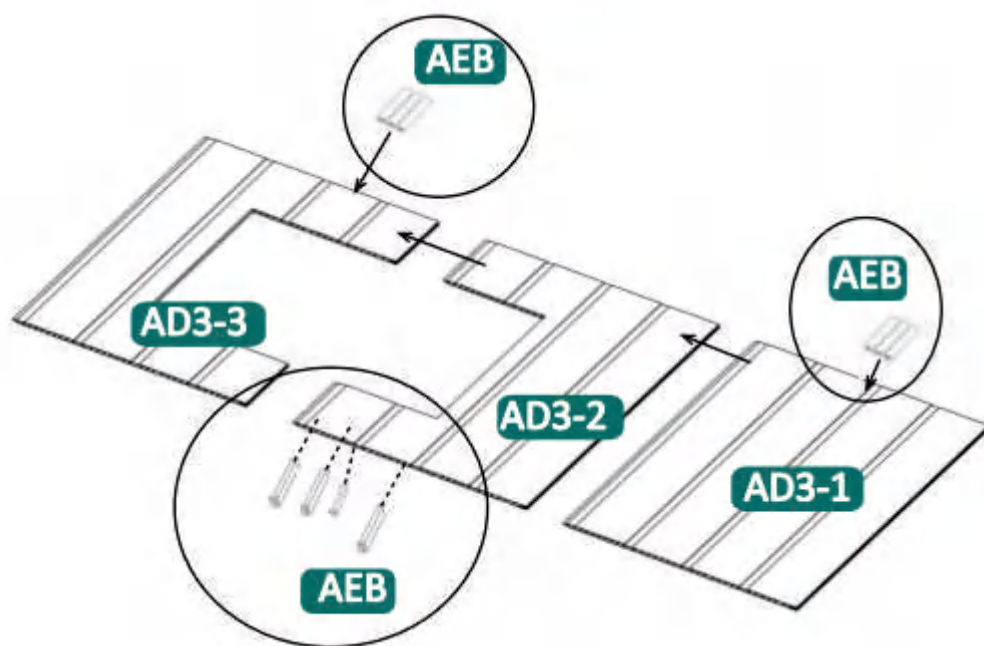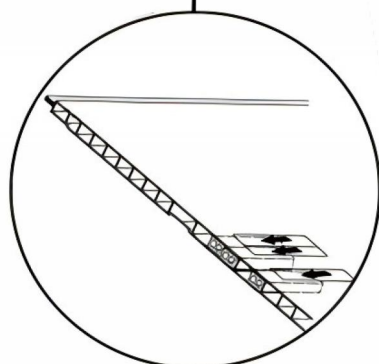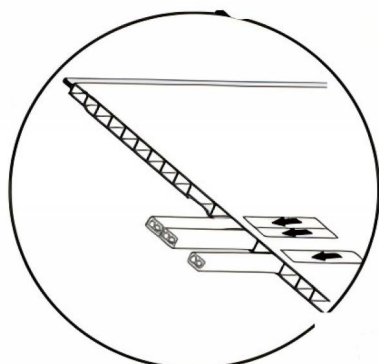

41



AA3L

1pcs





AA3R

1pcs



AA6

2pcs

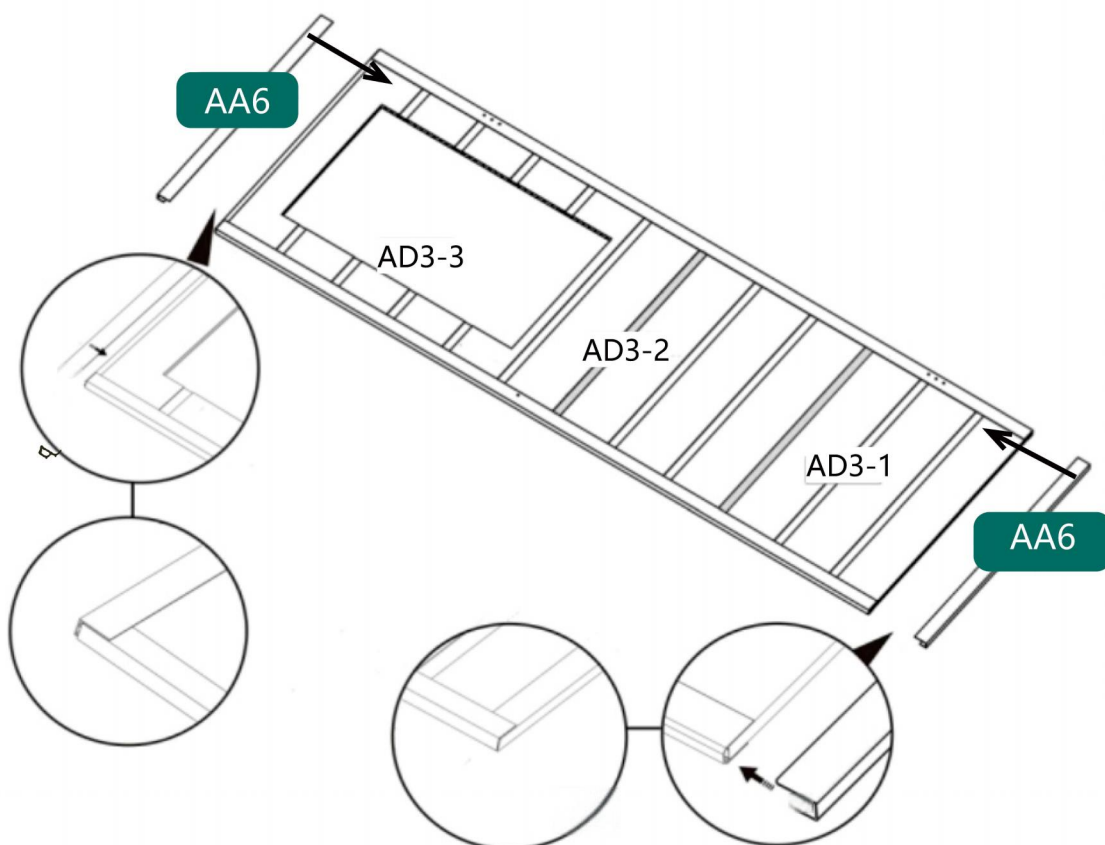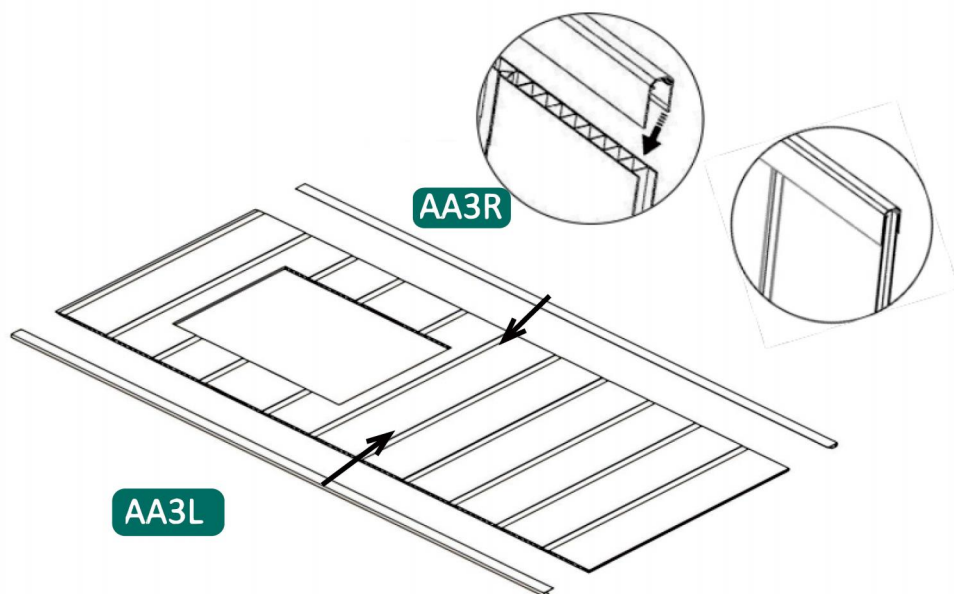

42



M1 2pcs




M2 1pcs



M516 9pcs

Don't fasten the screws in this step, to adjust the positions of doors

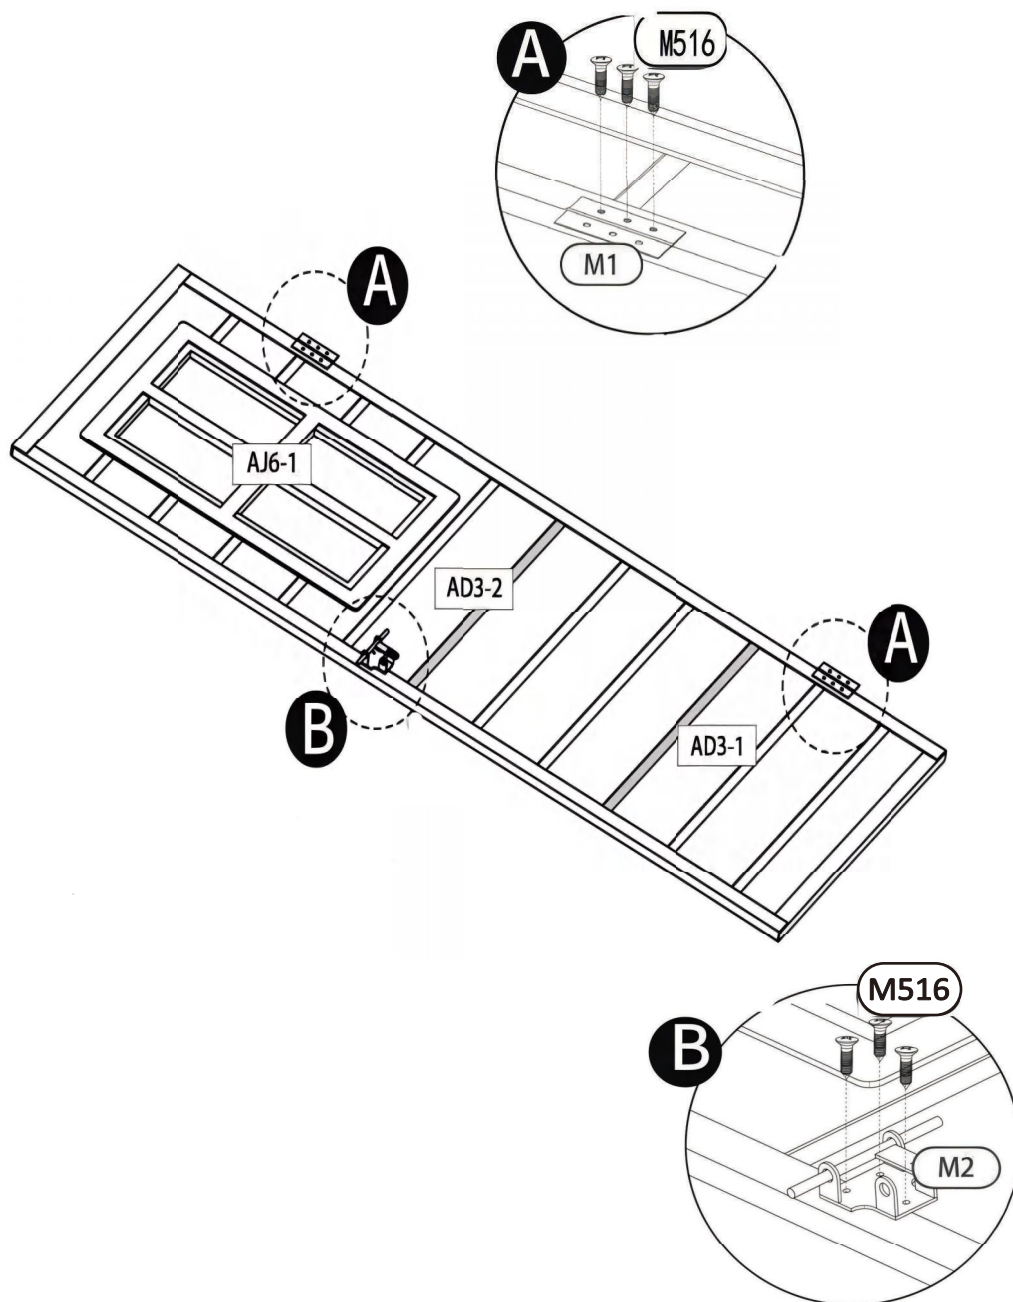

43



AJ6-1 1pcs



AJ6-2 1pcs



AAS2-1 2pcs




AAS2-2 2pcs




M512 12pcs

Window section

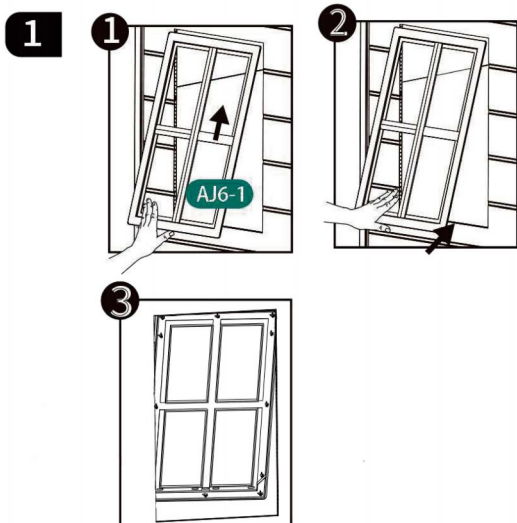


How the Windows look when they are installed

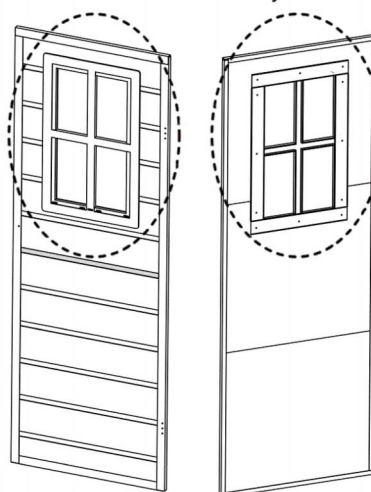


2



- Two persons are needed for this step, AJ6-1 to press AJ6-2 from outside and inside.

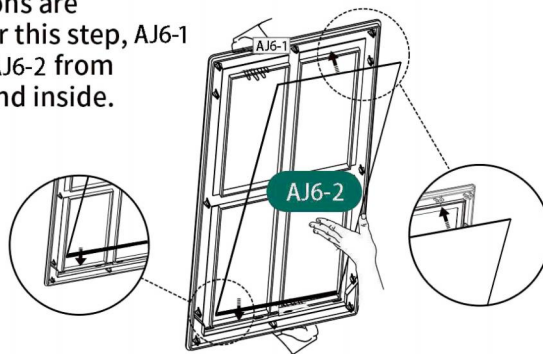

3

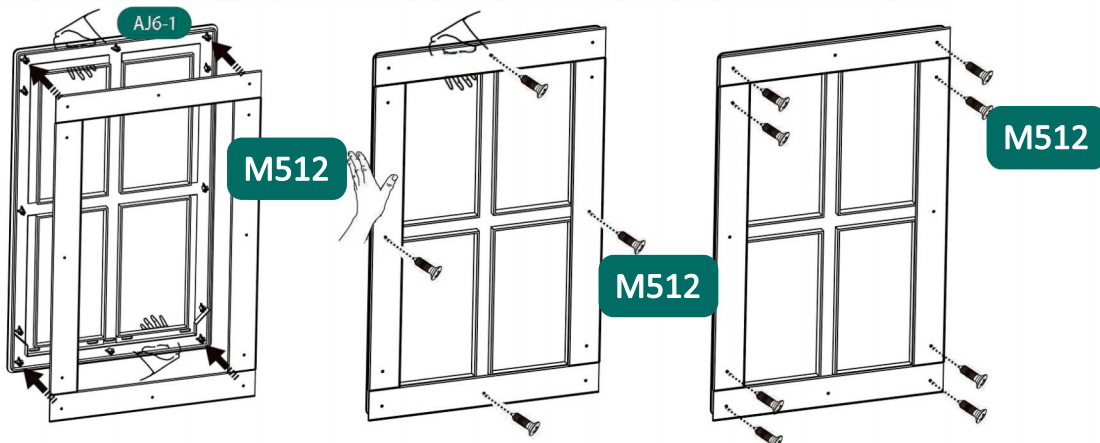


44




M516 8pcs

A

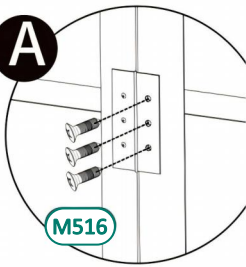


M516

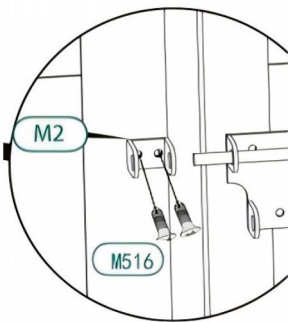

M2

M516

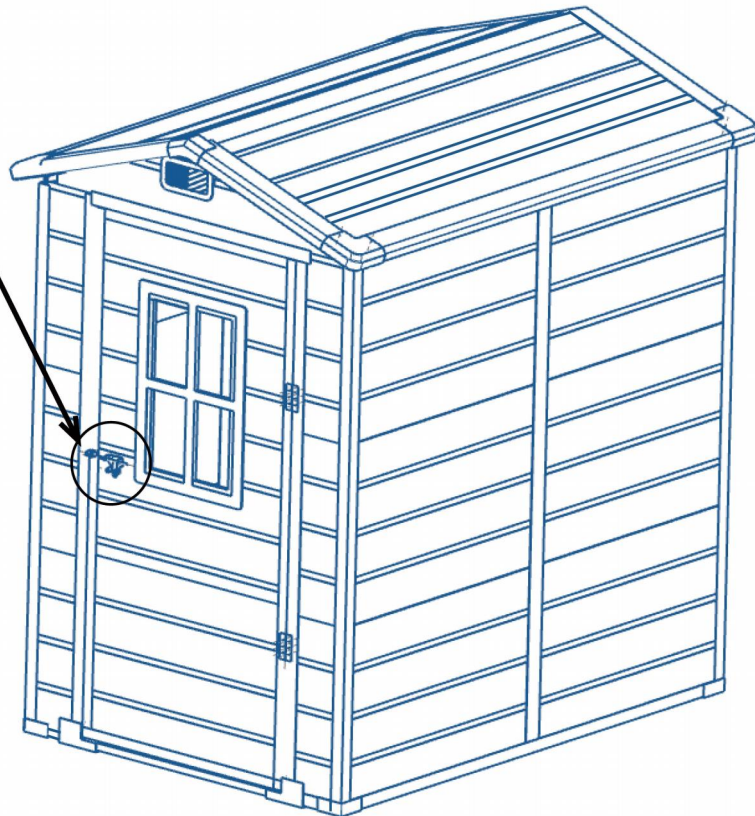

The stripes on the wall panels should be aligned.

45






AJ9 2pcs



AJ8 4pcs



M512 8pcs

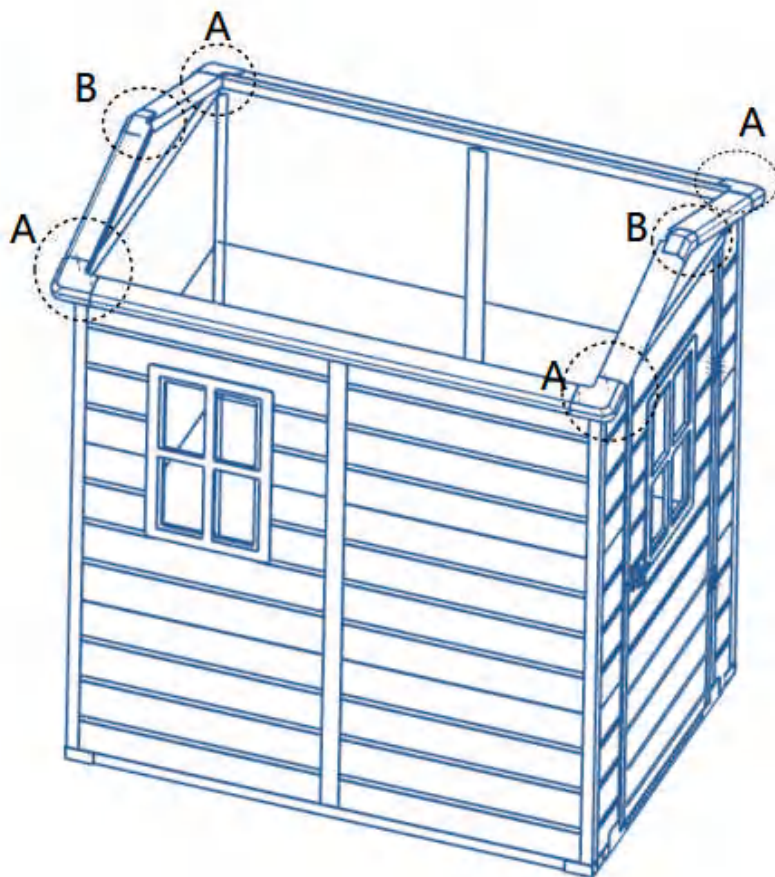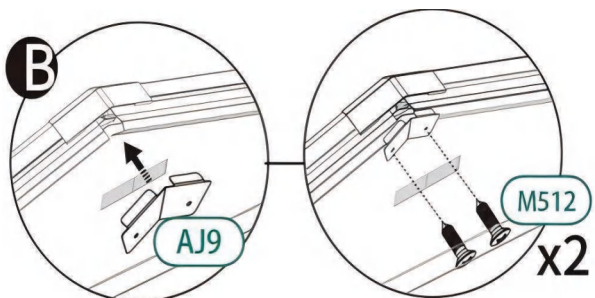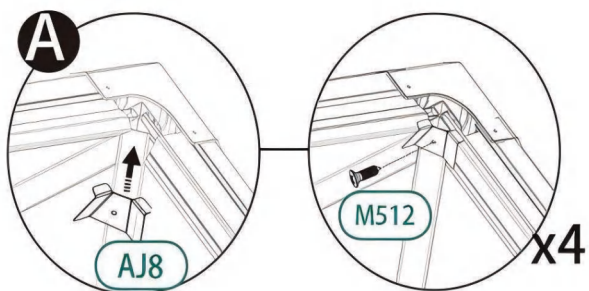



46



M8*20 2pcs




AJ10 1pcs

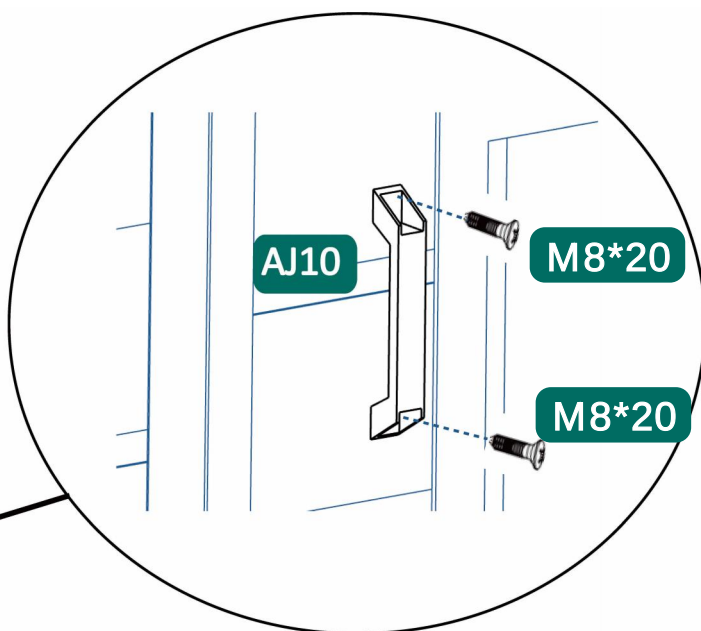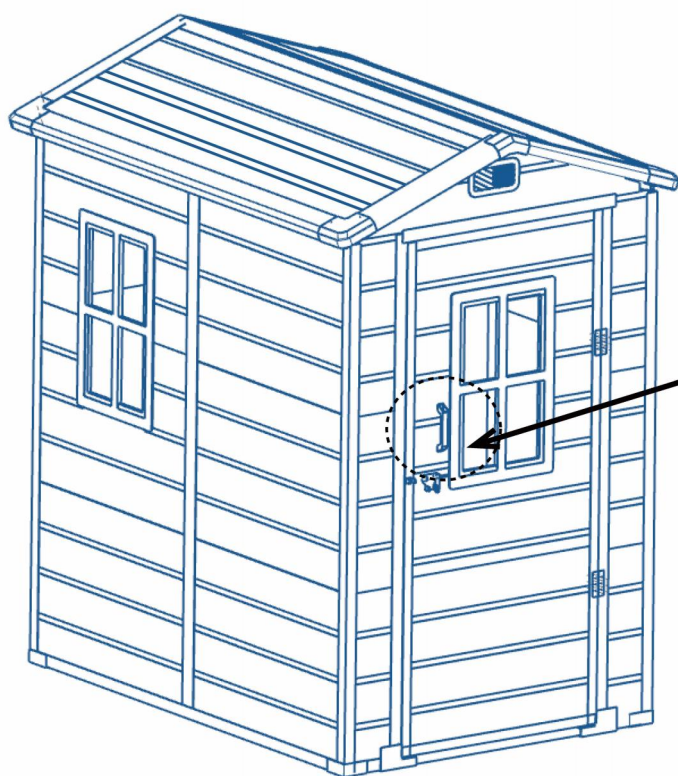


47



M6*60 4pcs

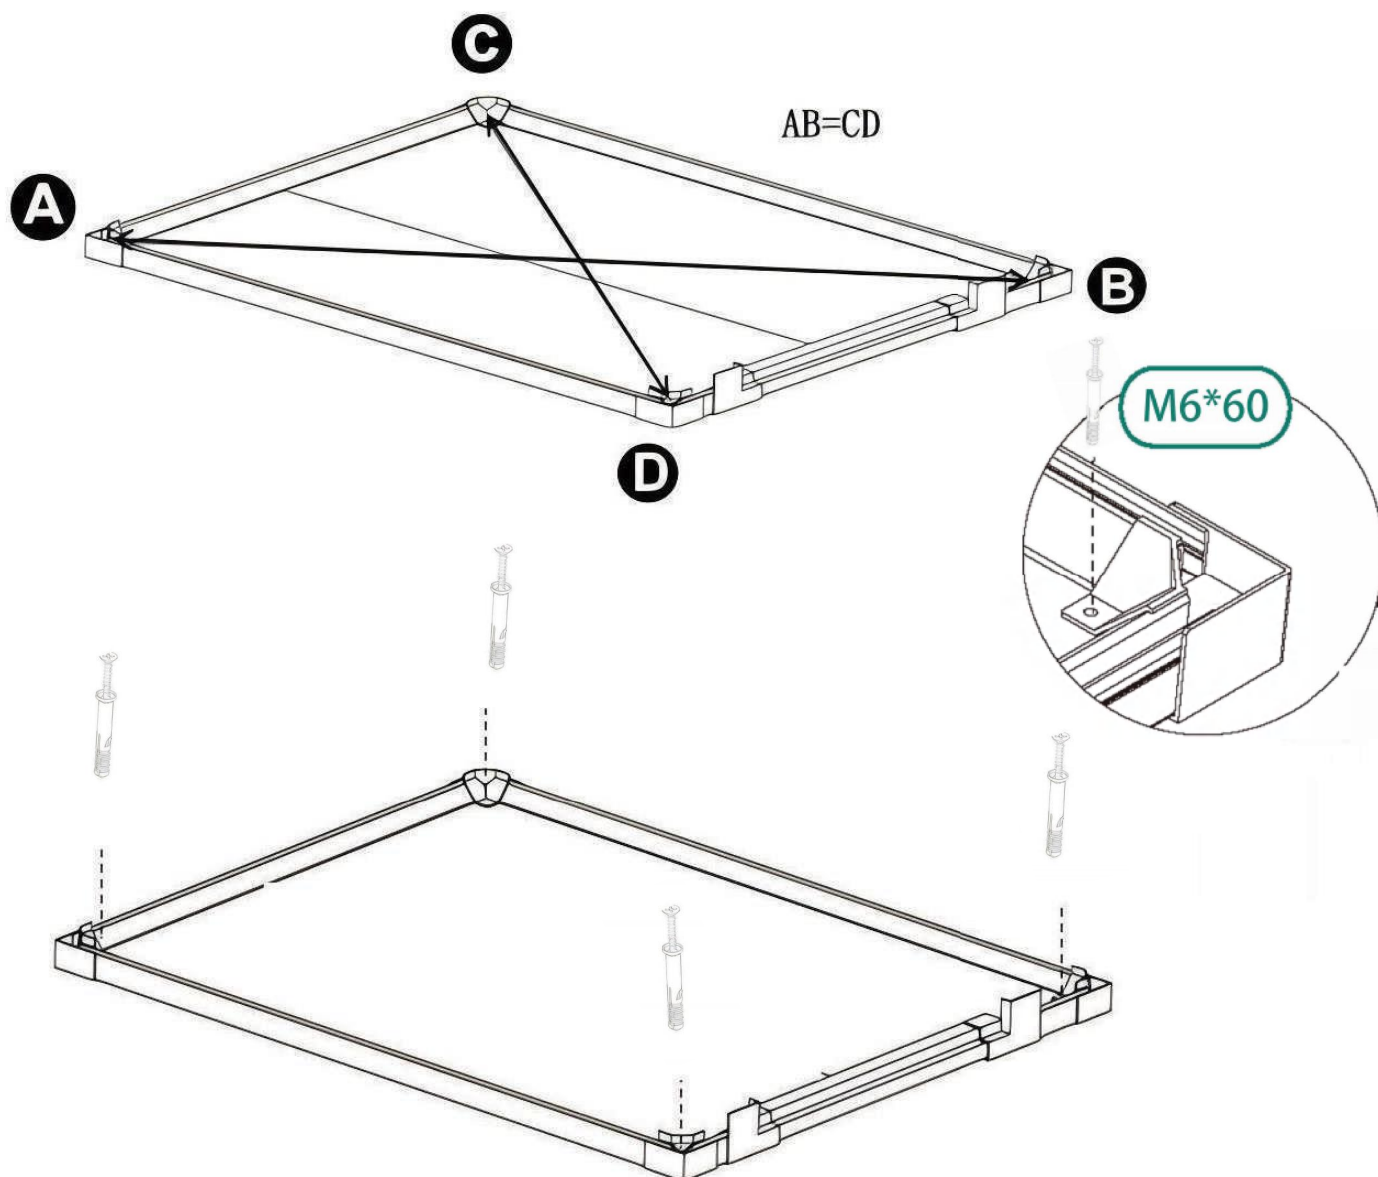

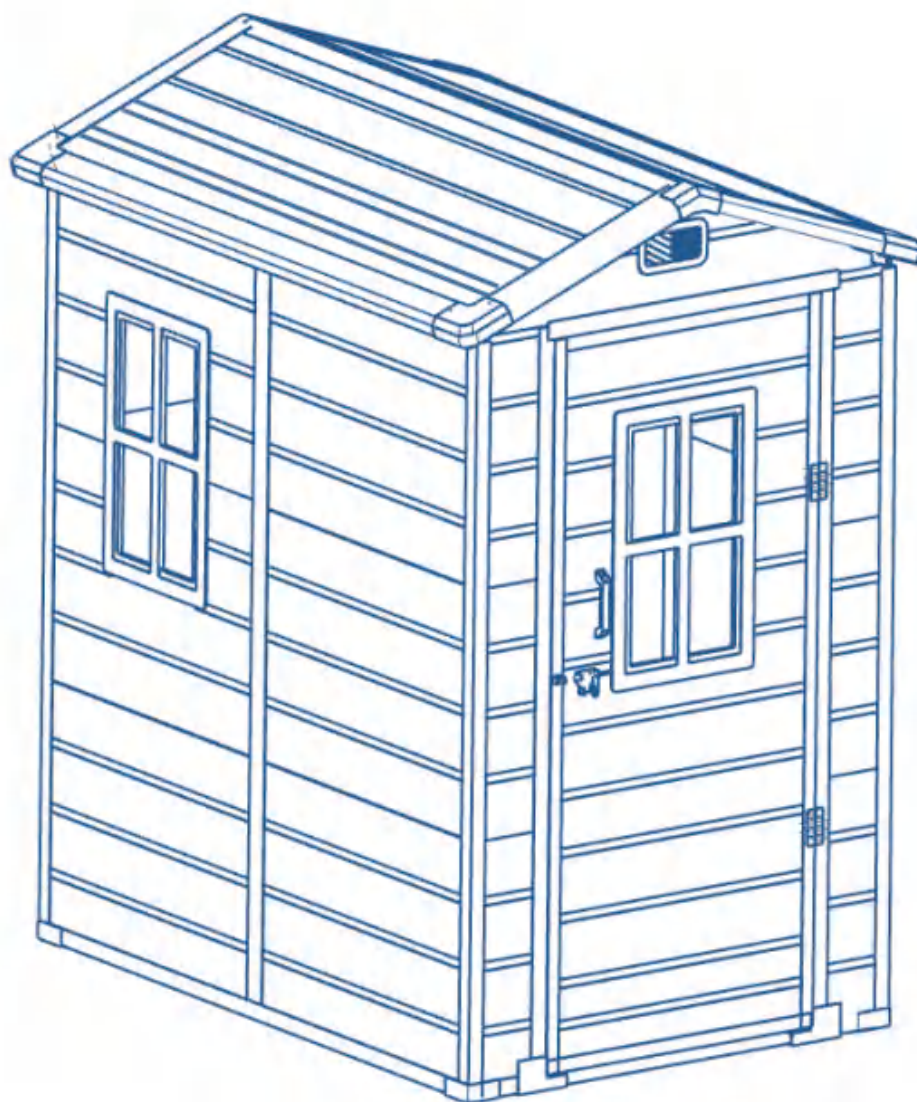

- Installation Completed
- Installation Abgeschlossen
- Installation Complétée
- Installazione Completata
- Instalación Completada