


7


SIDE RODS

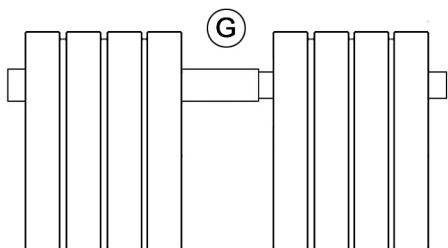

Extend telescoping rod (G) slightly. Place drapery panels (not included) on the rod.


8

SIDE RODS

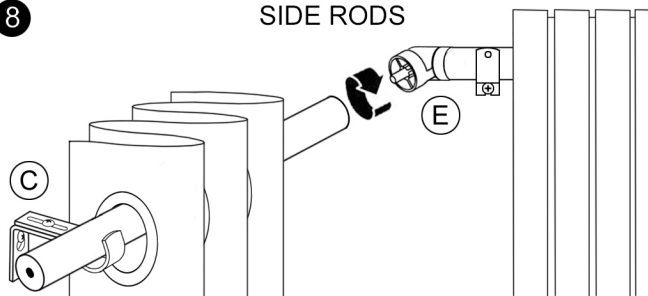


Extend rod to desired length. Hang rod on bracket (C) and screw rod onto corner connector (E). Repeat for other side rod.

9

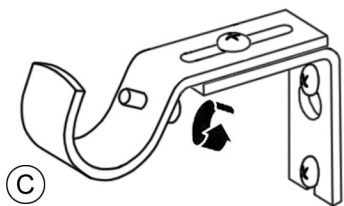

Tighten set screws on all brackets (C) to secure rods in place.

10

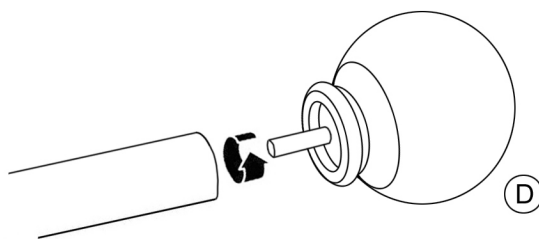

Screw finials (D) onto the ends of the rod.