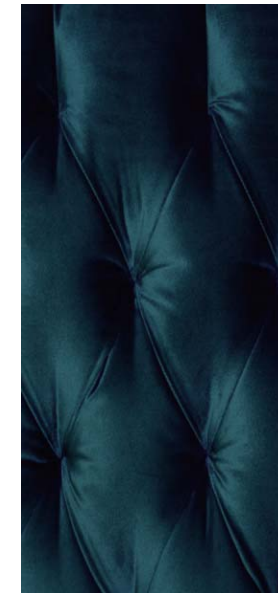


MIMO

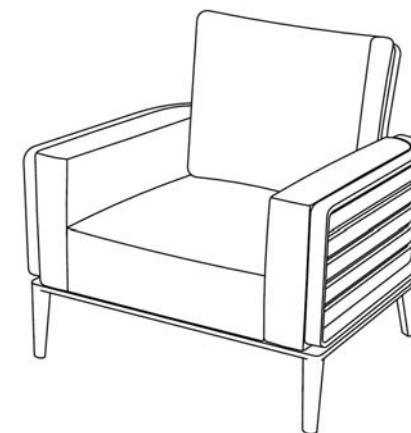
Easy Living, Beautiful Home

For more information, please visit our website:

mimo-living.com



MIMO



MIMO-AUREL-SS

INSTRUCTION MANUAL

Hello! Please read these important attentions...

Please put a thick carpet on the ground to protect the furniture finish and corners. During the installation process, **DON' T** fasten screws tight 100% at a time.



FORM FOR REPLACING MISSING OR DAMAGED PIECES.

Please email to : Help@mimo-living.com

Model # of product: _____
Ordered by: _____
Ordered No: _____
Delivery date: _____

Were the boxes good when delivery to you Yes / No
Upon receiving the product,were all theparts intact Yes / No

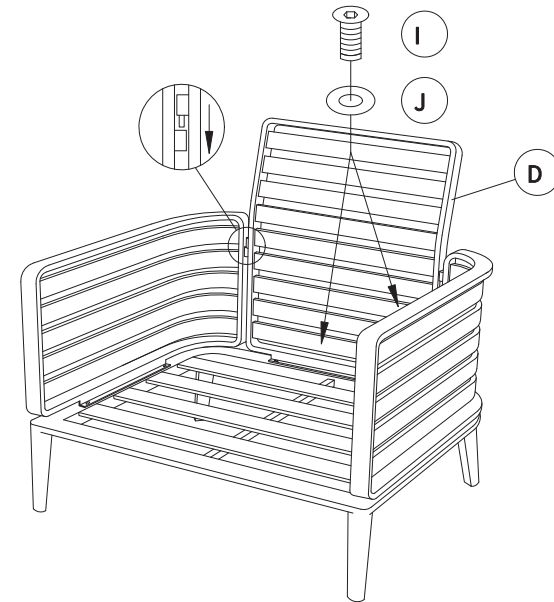
Name: _____
Address: _____

Tel: _____

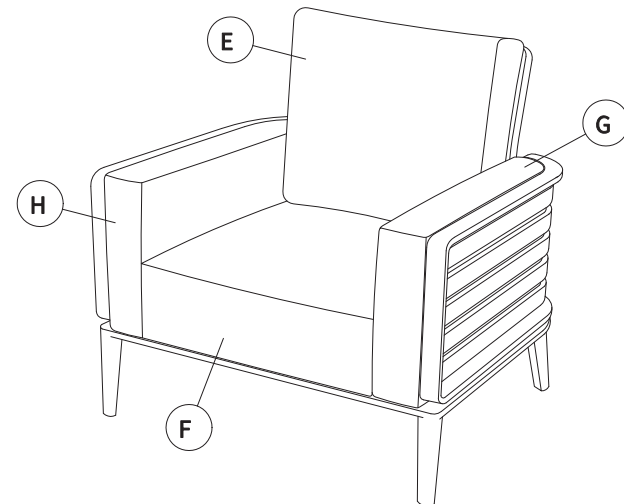
**If the product is found damaged after assembly,please provide
photo of the entire furniture set and all damaged areas.**

Part#	Qty	Description	Missing/Damaged
			M / D
			M / D
			M / D
			M / D

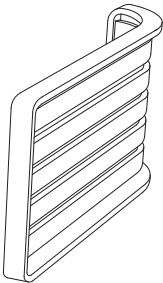
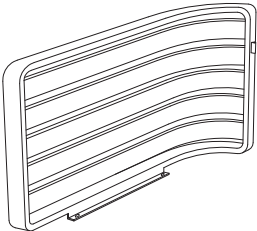
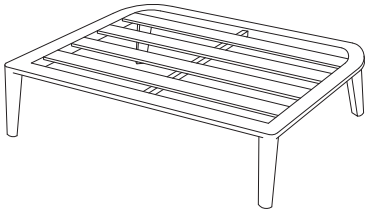
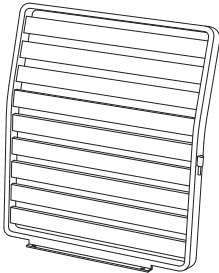
Assembly Instructions

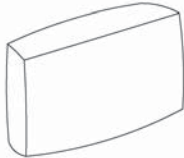
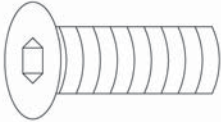



Step 2: Insert 1/4"x18mm bolt(I) and washer(J) through the holes in the back frame(D) and the seat frame(C). Repeat for the rest holes in the frame.

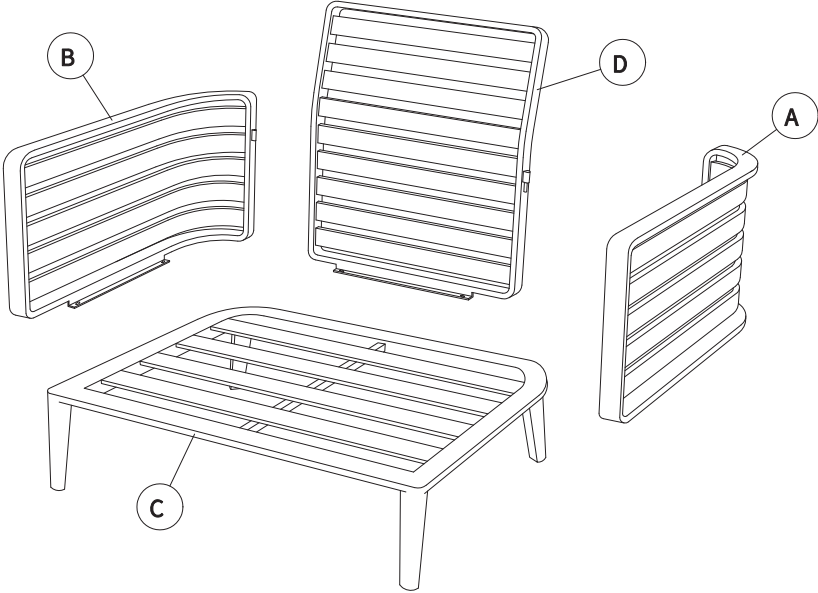
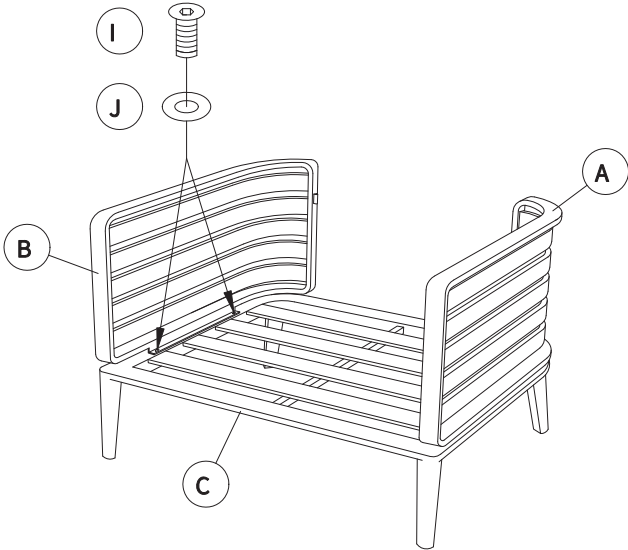


Step 3: Tighten all the bolts completely. Your chair should be ready for use.

Assembly Instructions			
No.	COMPONENT	DESCRIPTION	QTY
A		LEFT ARMREST	1
B		RIGHT ARMREST	1
C		SEAT FRAME	1
D		BACK FRAME	1

Assembly Instructions			
No.	COMPONENT	DESCRIPTION	QTY
E		BACK CUSHION	1
F		SEAT CUSHION	1
G		LEFT ARMREST CUSHION	1
H		RIGHT ARMREST CUSHION	1
I		1/4"x18 mm BOLT	6
J		Ø6.5x1.0 mm WASHER	6
K		HEX BOLT DRIVER	1

Assembly Instructions

Step 1: Insert 1/4"x18mm bolt(I) and washer(J) through the holes in the left & right armrest(A&B) and the seat frame(C). Repeat for the rest holes in the frame.