



INSTRUCTIONS

MAKEUP VANITY

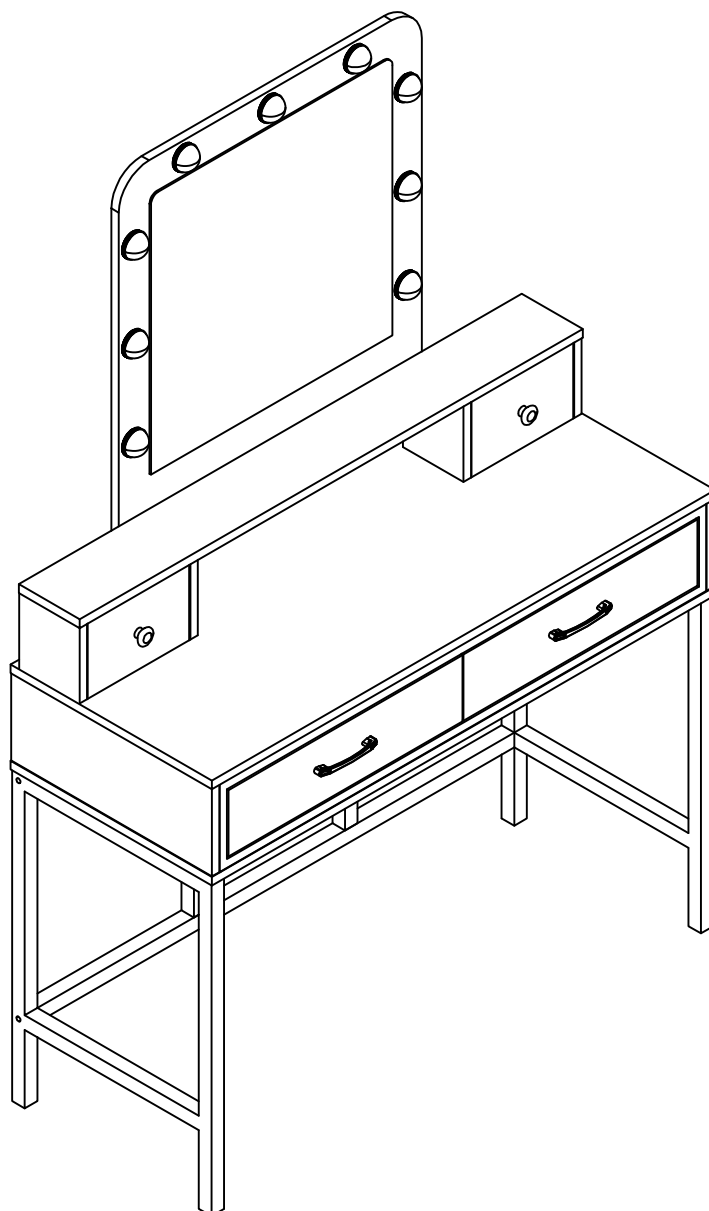

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Before You Start

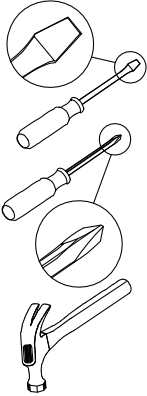

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, Please slow down or stop when the screw is tightened. Otherwise it may cause the screws to peel off.


Helpful Hints













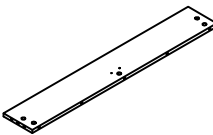
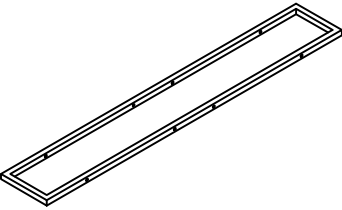
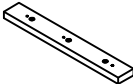
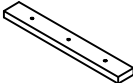
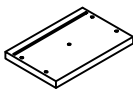
PEOPLE NEEDED FOR ASSEMBLY: 1-2



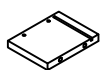

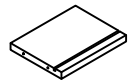
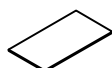
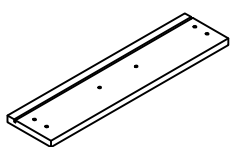
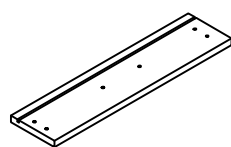
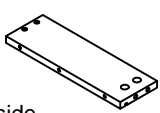
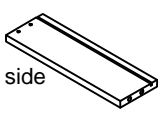
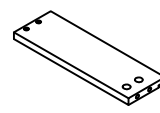
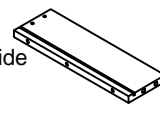
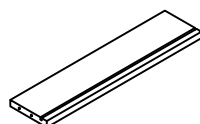
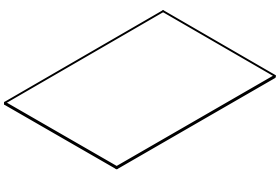
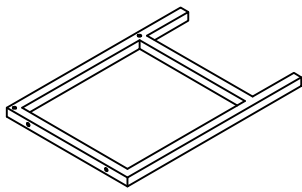
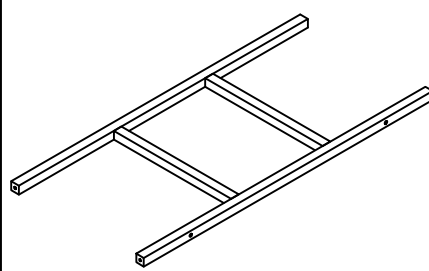
- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting to assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.


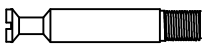

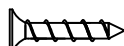
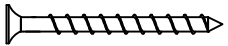
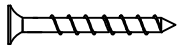




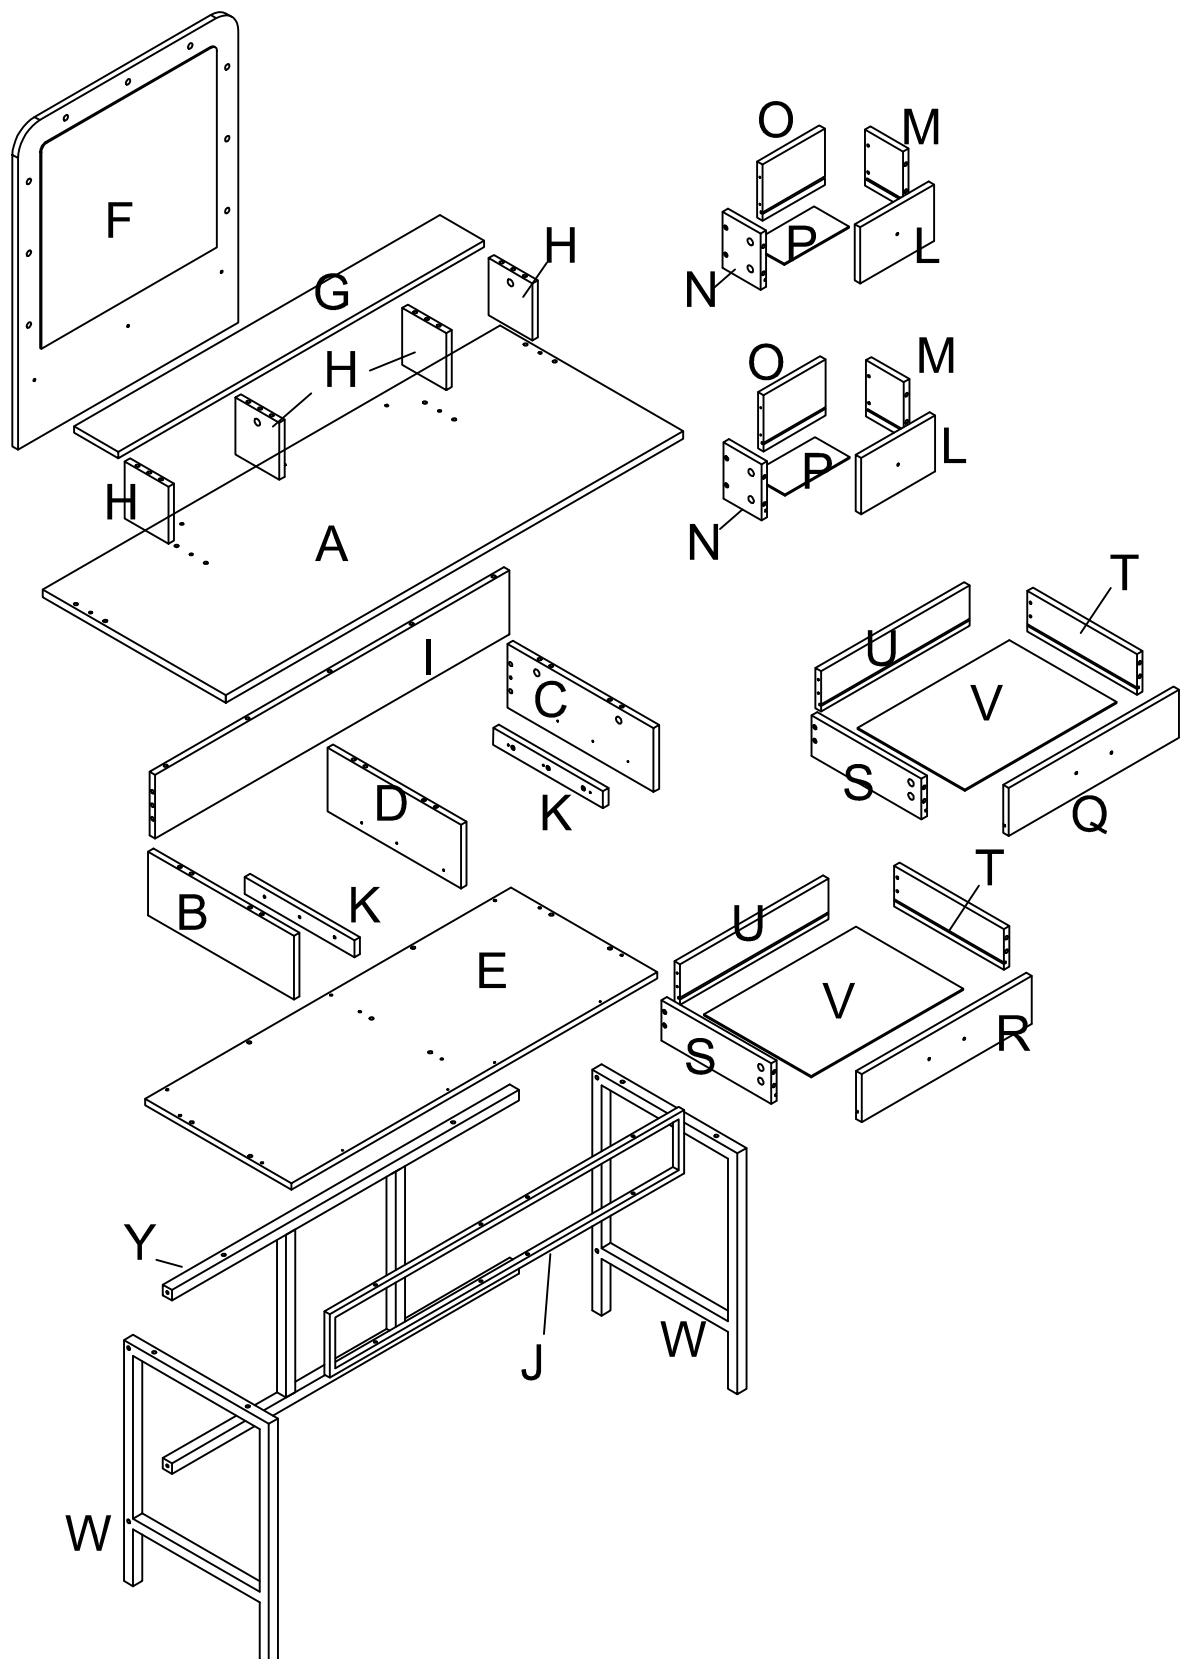

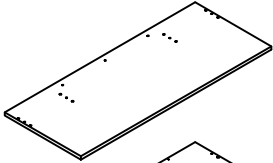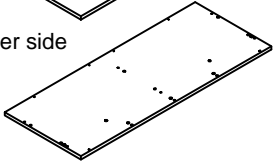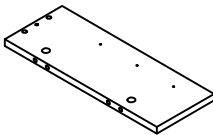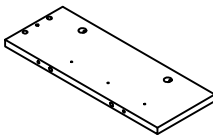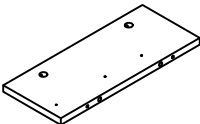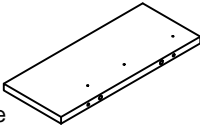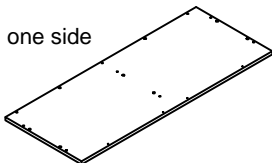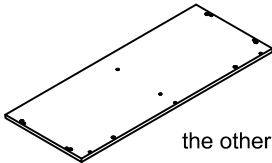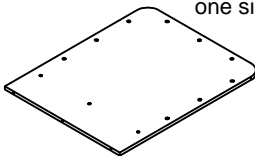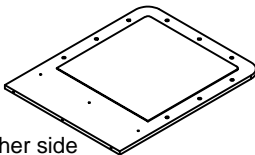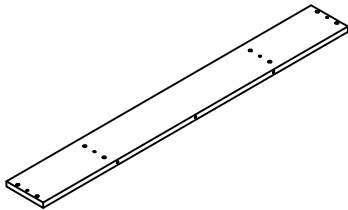


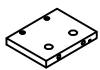

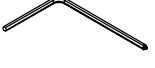




Board Identification




<p>① 1000*400mm</p> <p>one side</p>  <p>the other side</p>  <p>Panel</p>	<p>② 399*151mm</p>  <p>Left side panel</p>	<p>③ 399*151mm</p>  <p>Right side panel</p>
<p>④ 365*151mm</p> <p>one side</p>  <p>the other side</p>  <p>Median side plate panel</p>	<p>⑤ 1000*400mm</p> <p>one side</p>  <p>the other side</p>  <p>Bottom plate panel</p>	<p>⑥ 750*602mm</p> <p>one side</p>  <p>the other side</p>  <p>Mirror board panel</p>
<p>⑦ 1000*121mm</p>  <p>Upper plate panel</p>	<p>⑧ 135*120mm</p>  <p>X4</p> <p>Upper vertical plate panel</p>	<p>⑨ 968*151mm</p>  <p>Postnotum panel</p>
<p>⑩ 968*150mm</p>  <p>Front iron frame</p>	<p>⑪ 300*40mm</p> <p>one side</p>  <p>the other side</p>  <p>X2</p> <p>Drawer pad panel</p>	<p>⑫ 202*133mm</p>  <p>X2</p> <p>Small drawer panel</p>


<p>(M) 133*104mm</p> <p>one side</p>  <p>X2</p> <p>the other side</p>  <p>Small drawer right side panel</p>	<p>(N) 133*104mm</p> <p>one side</p>  <p>X2</p> <p>the other side</p>  <p>Small drawer left side panel</p>	<p>(O) 170*133mm</p>  <p>X2</p> <p>Small drawer back panel</p>
<p>(P) 177*95mm</p>  <p>X2</p> <p>Small drawer bottom panel</p>	<p>(Q) 465*114mm</p>  <p>Drawer right panel</p>	<p>(R) 465*114mm</p>  <p>Drawer left panel</p>
<p>(S) 300*96mm</p> <p>one side</p>  <p>X2</p> <p>the other side</p>  <p>Drawer left side panel</p>	<p>(T) 300*96mm</p> <p>one side</p>  <p>X2</p> <p>the other side</p>  <p>Drawer right side panel</p>	<p>(U) 406*96mm</p>  <p>X2</p> <p>Drawer back panel</p>
<p>(V) 415*293mm</p>  <p>X2</p> <p>Drawer bottom panel</p>	<p>(W) 570*396mm</p>  <p>X2</p> <p>Left and right lower frame</p>	<p>(X) 948*435mm</p>  <p>Rear iron frame</p>

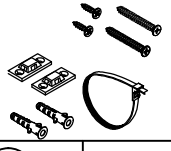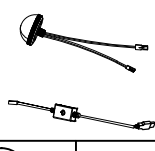 Ø15X9.5mm ① X31+3	 Ø6X35mm ② X31+3	 Ø8X30mm ③ X36+3	 Ø3.5X14mm ④ X24+2
 Ø4X35mm ⑤ X35+3	 Ø4*25mm ⑥ X14+1	 12" 300mm 7CL X2	 12" 300mm 7CR X2
 12" 300mm 7DL X2	 12" 300mm 7DR X2	 M4*18 ⑧ X6	 130*14*21mm ⑨ X2
 Ø23*20mm ⑩ X2	 M6*40 ⑪ X4	 ⑫ X1set	 ⑬ X10
 ⑭ X31+3	 Ø4X100(60)mm ⑮ X1	 M6*25 ⑯ X4	 M6*35 ⑰ X6


CAM BOLT INSTALLATION AS BELOW:

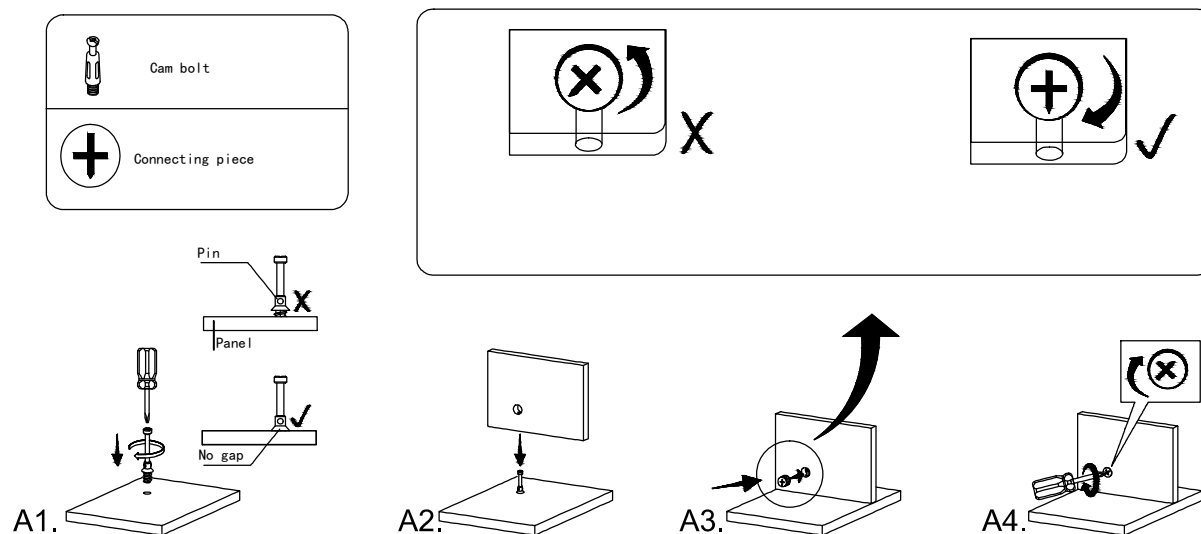





STEP1

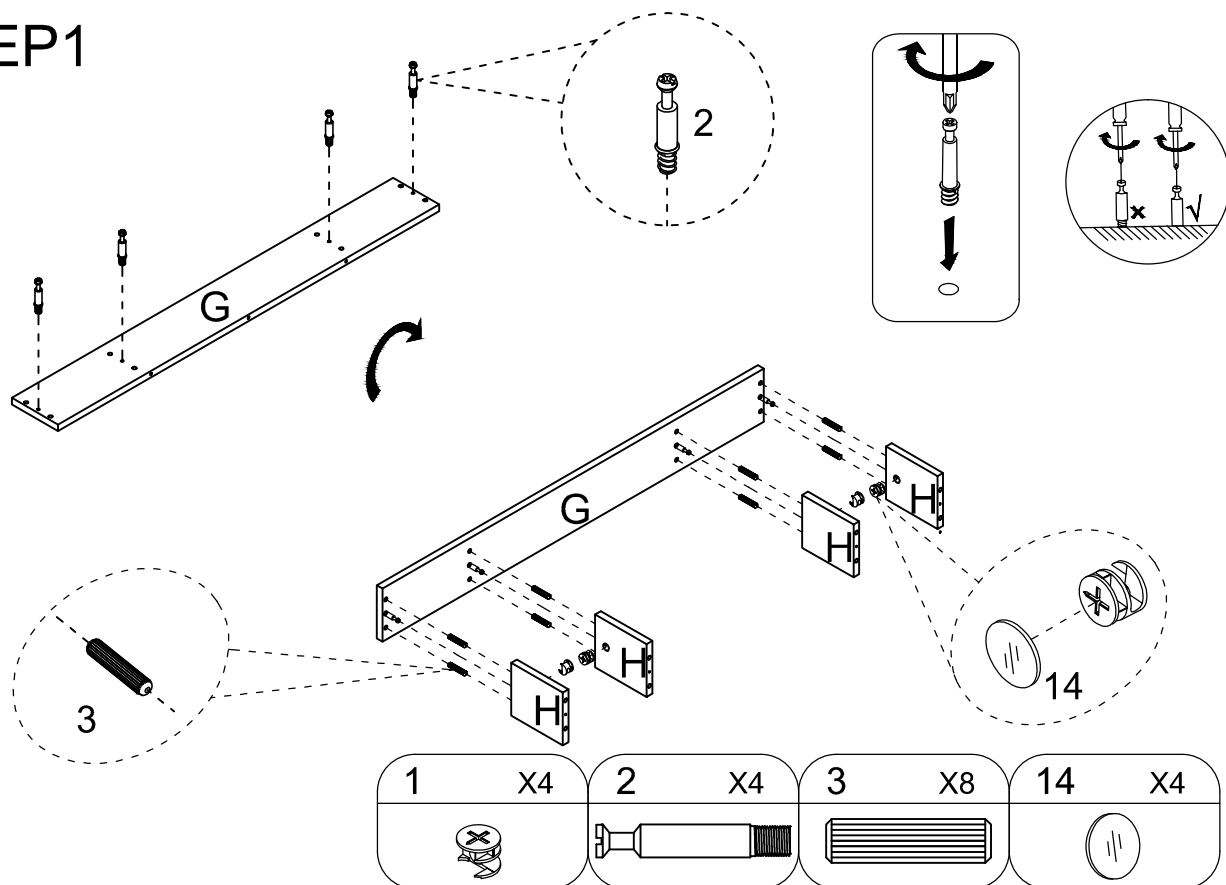



STEP2

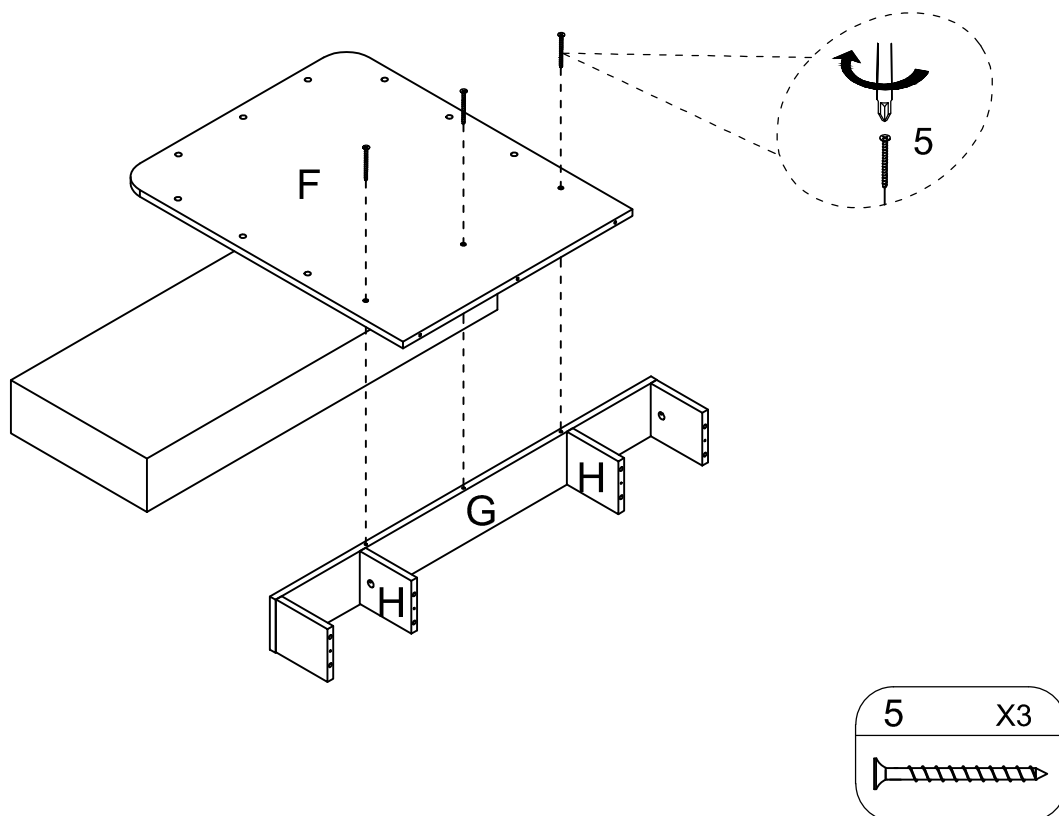


STEP3

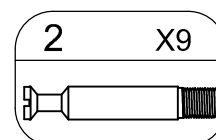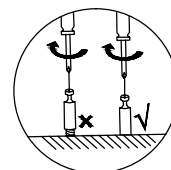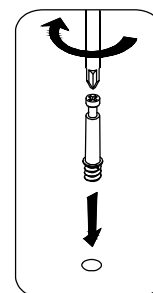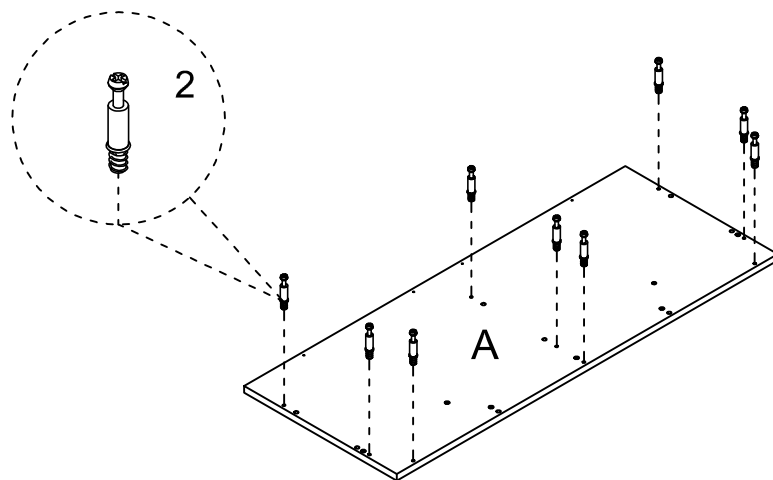


STEP4

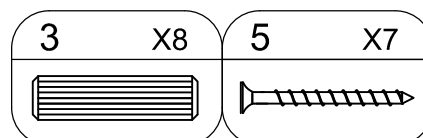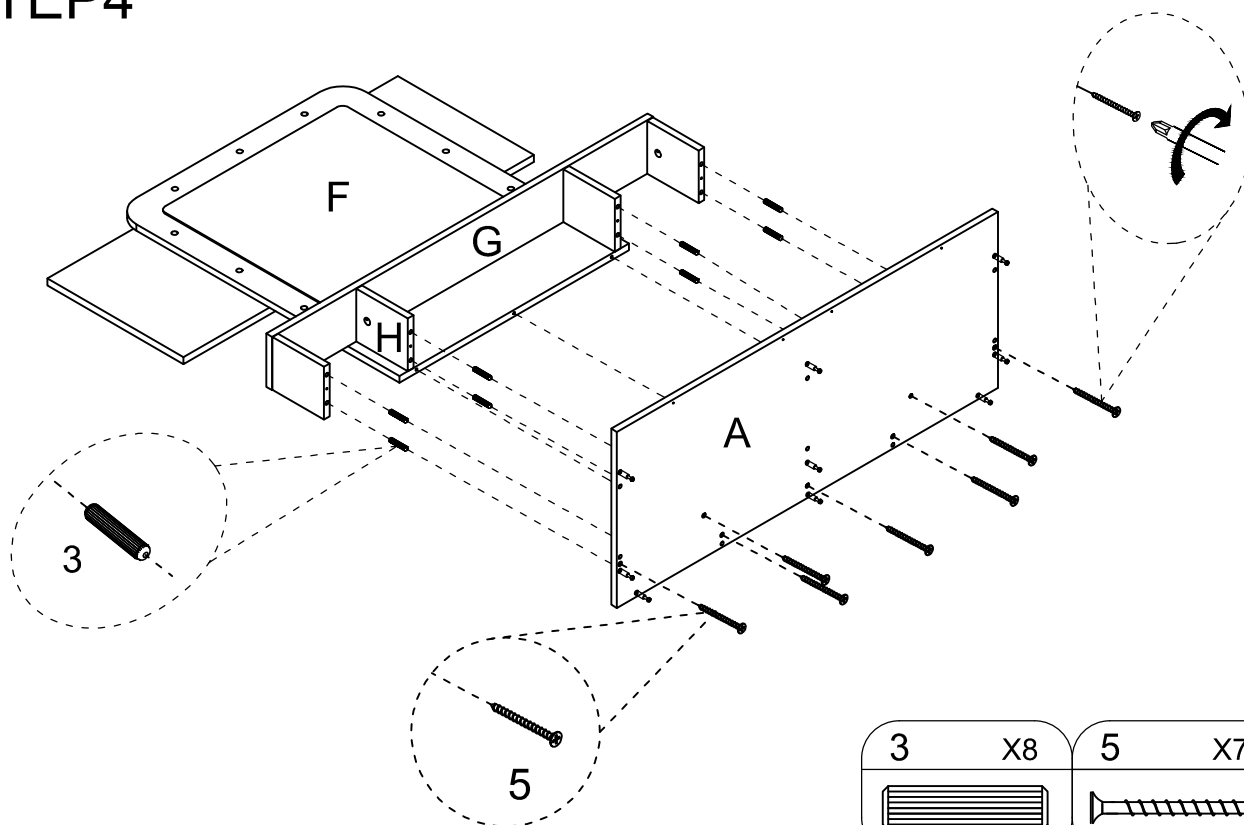


STEP5

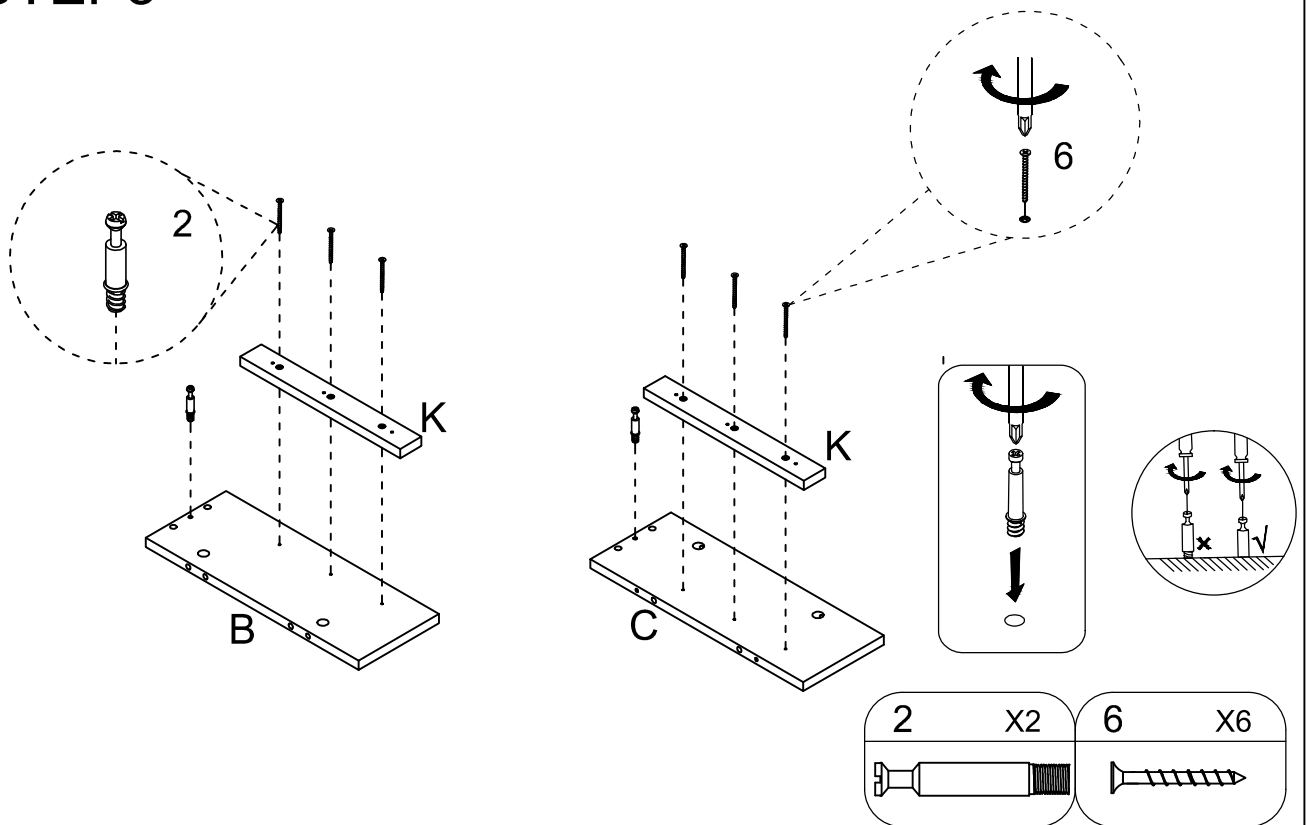


STEP6

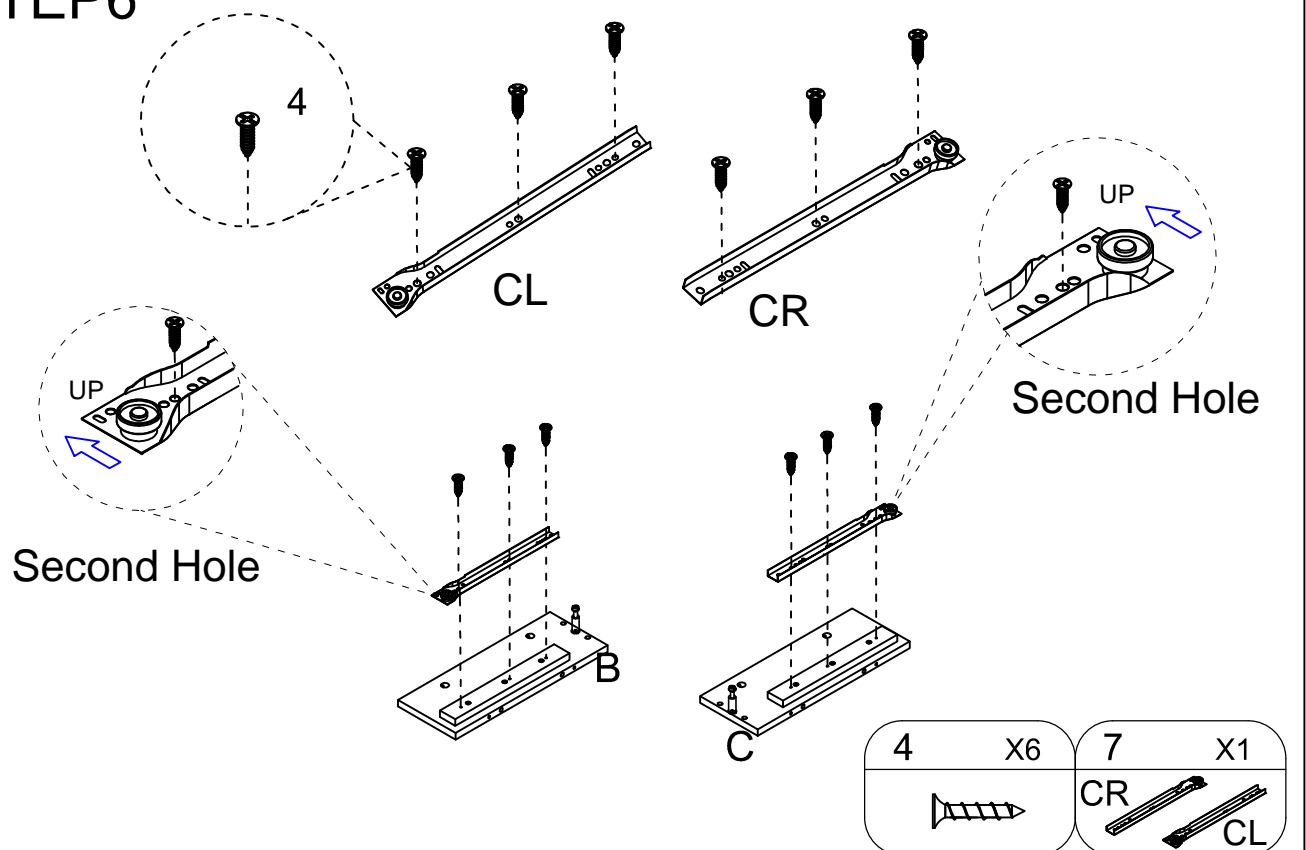


STEP7

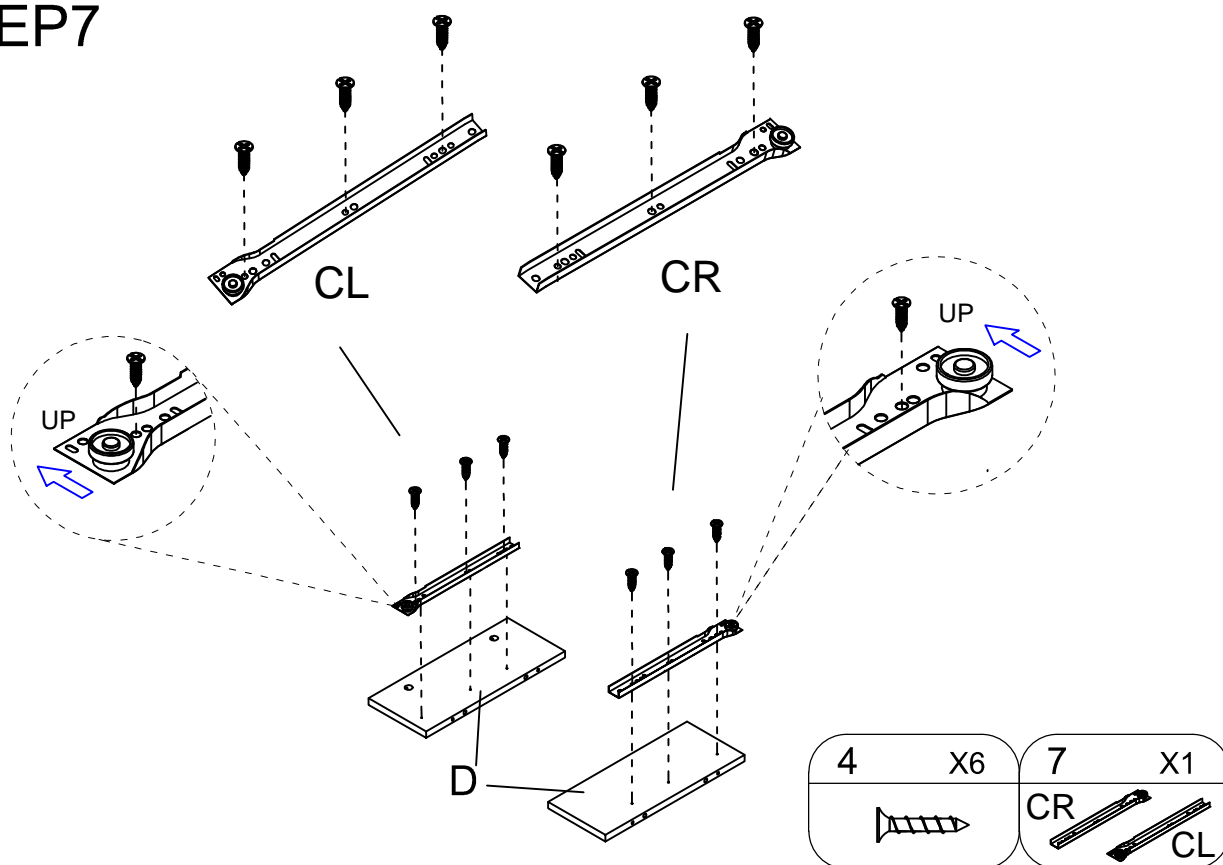

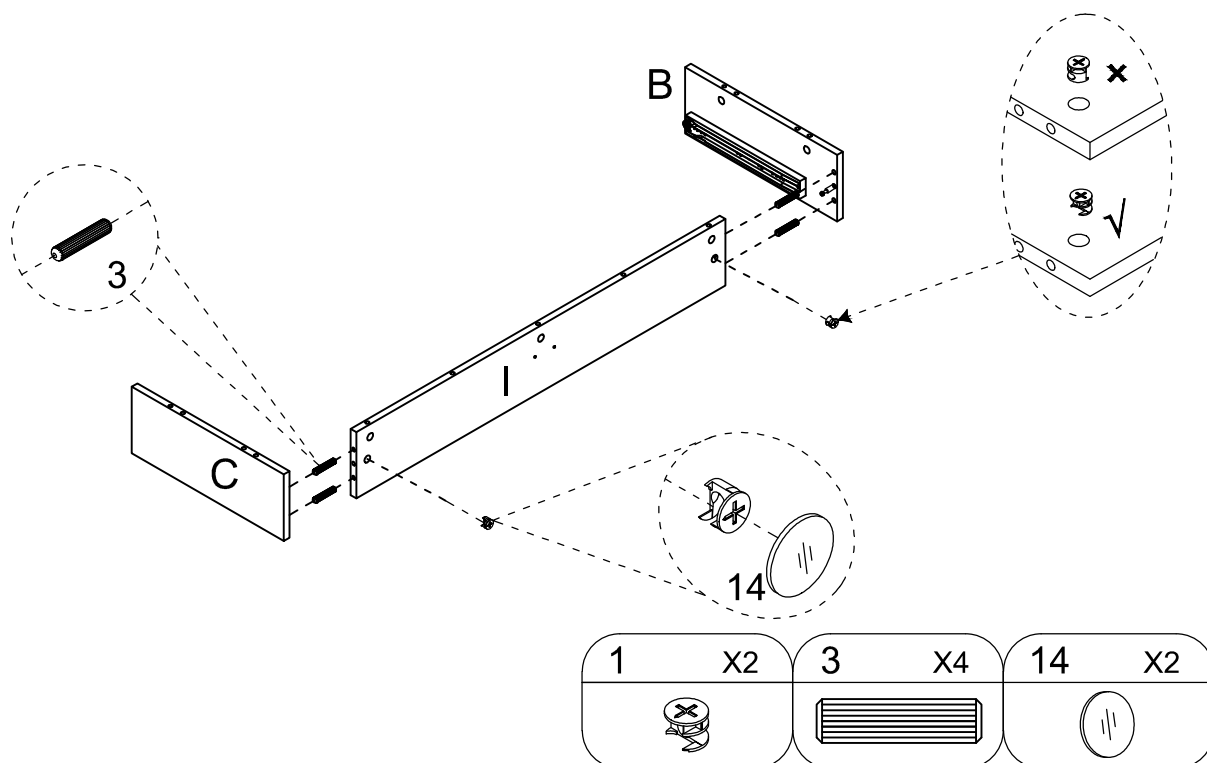


STEP8




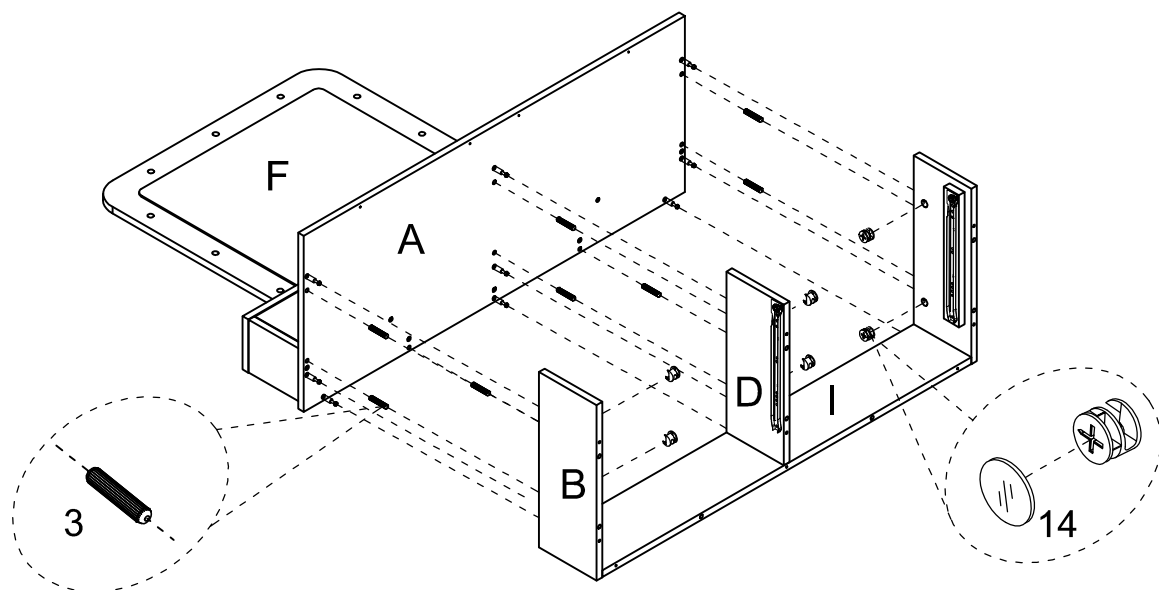

STEP9




1	X6	3	X8	14	X6
					

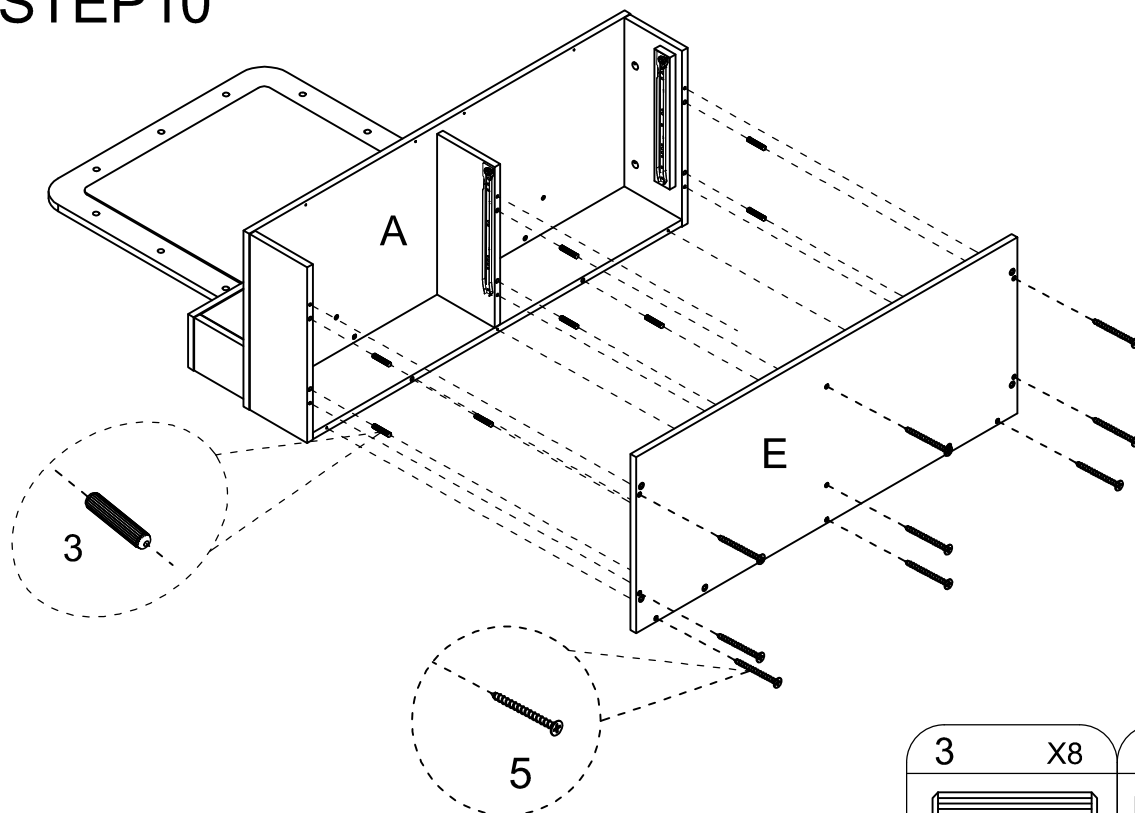STEP10




3	X8	5	X9
			


STEP11

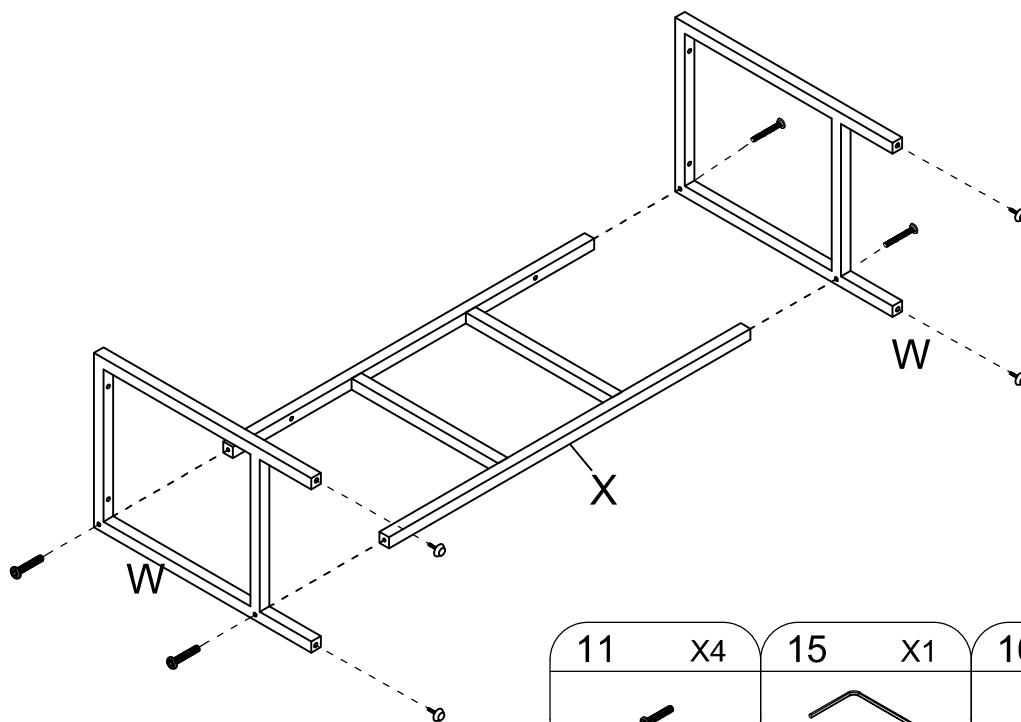

STEP12

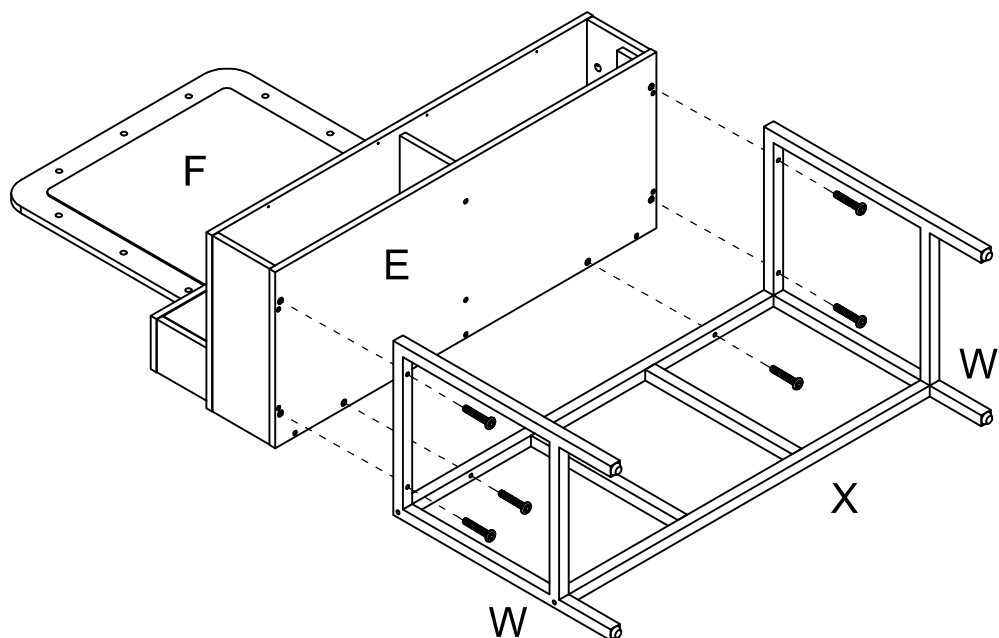


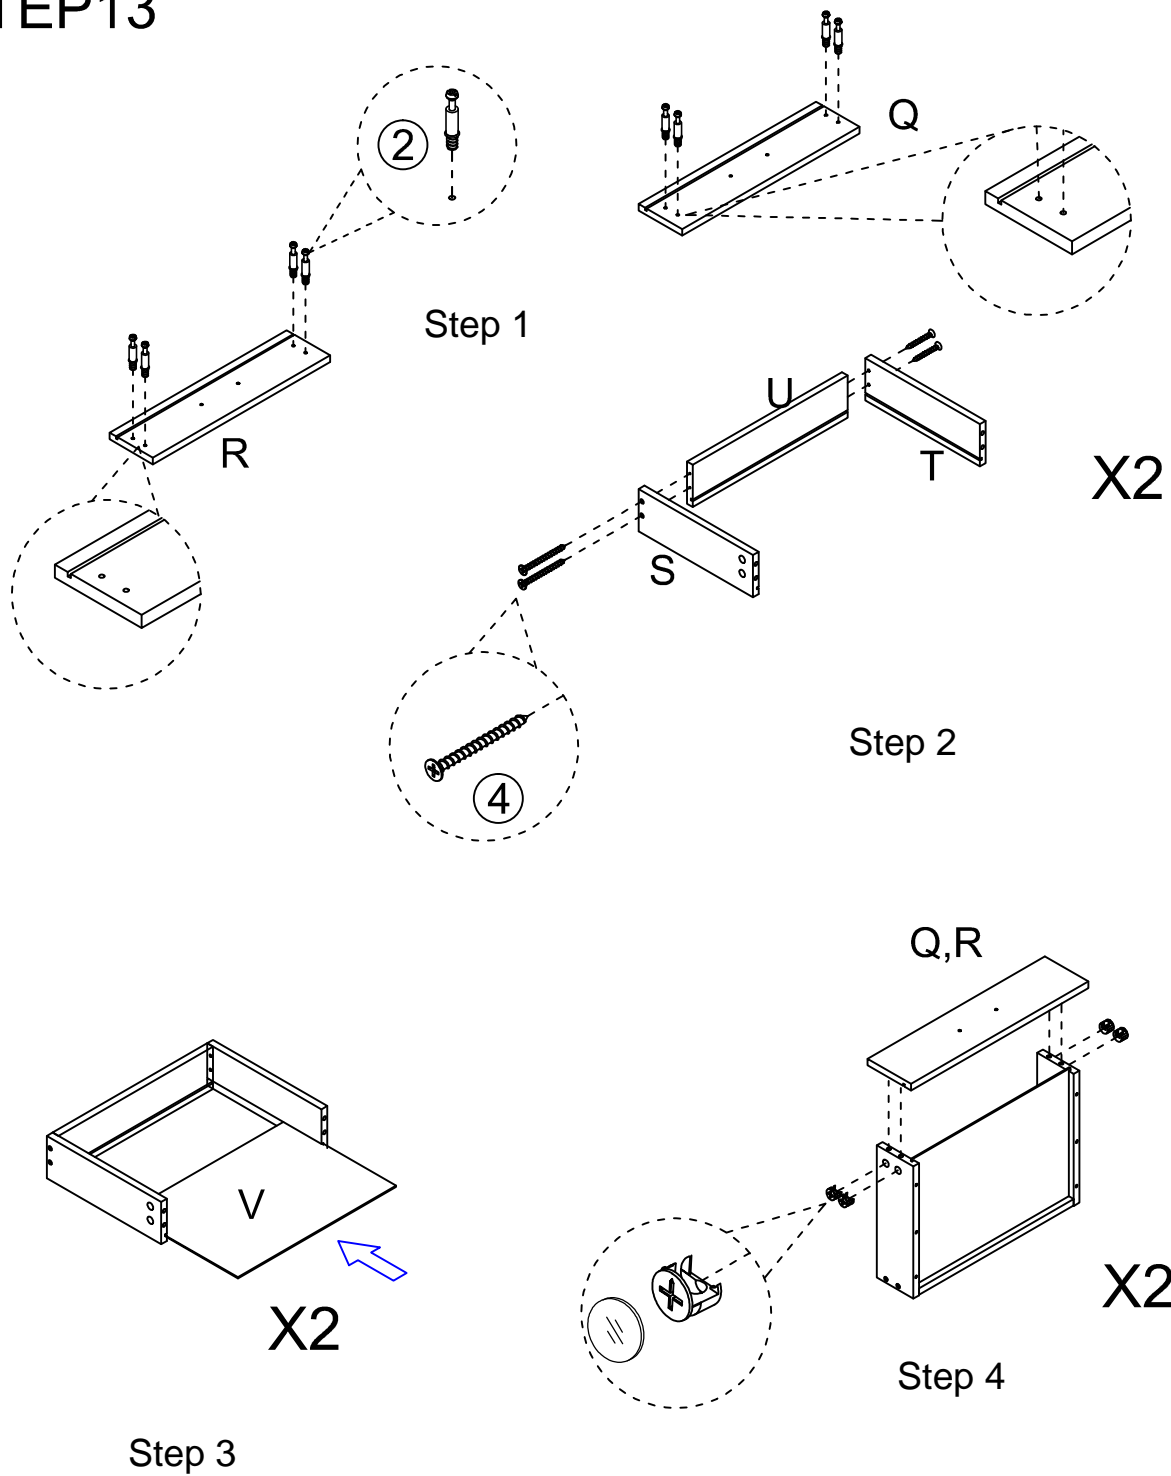


STEP13




1	X8	2	X8	5	X8	14	X8

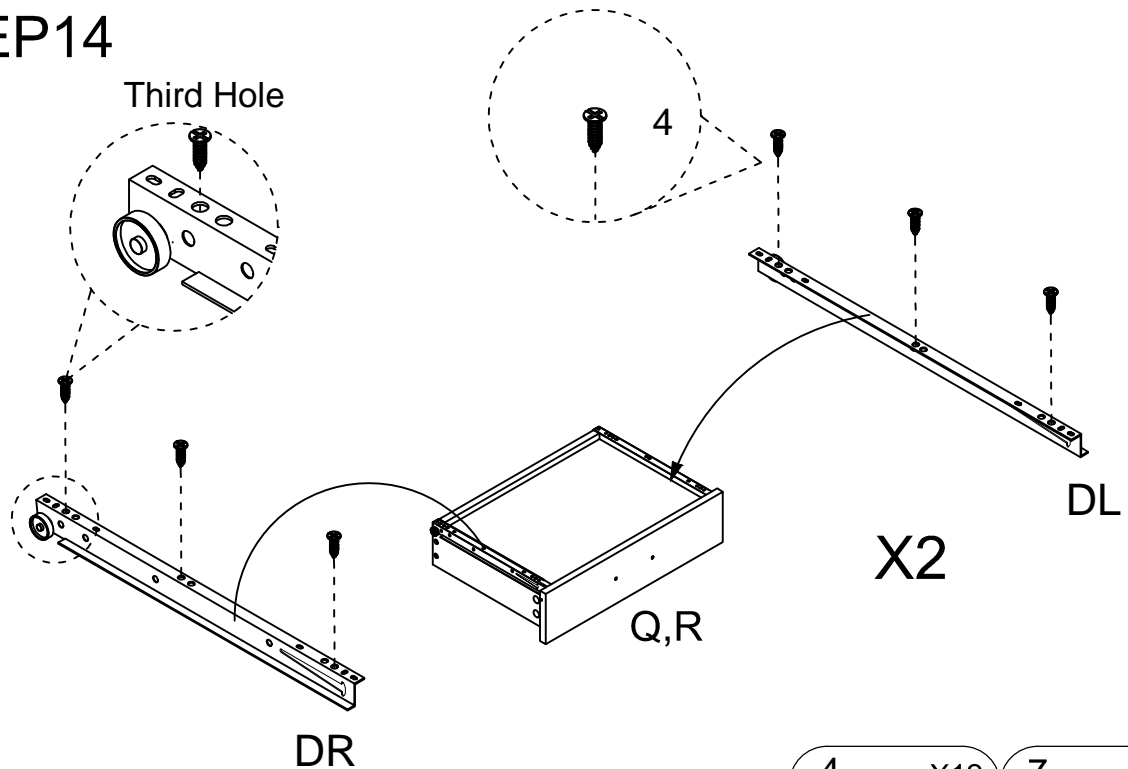
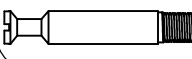
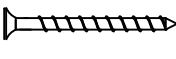

STEP14

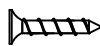


4	X12	7	X2
			

STEP15

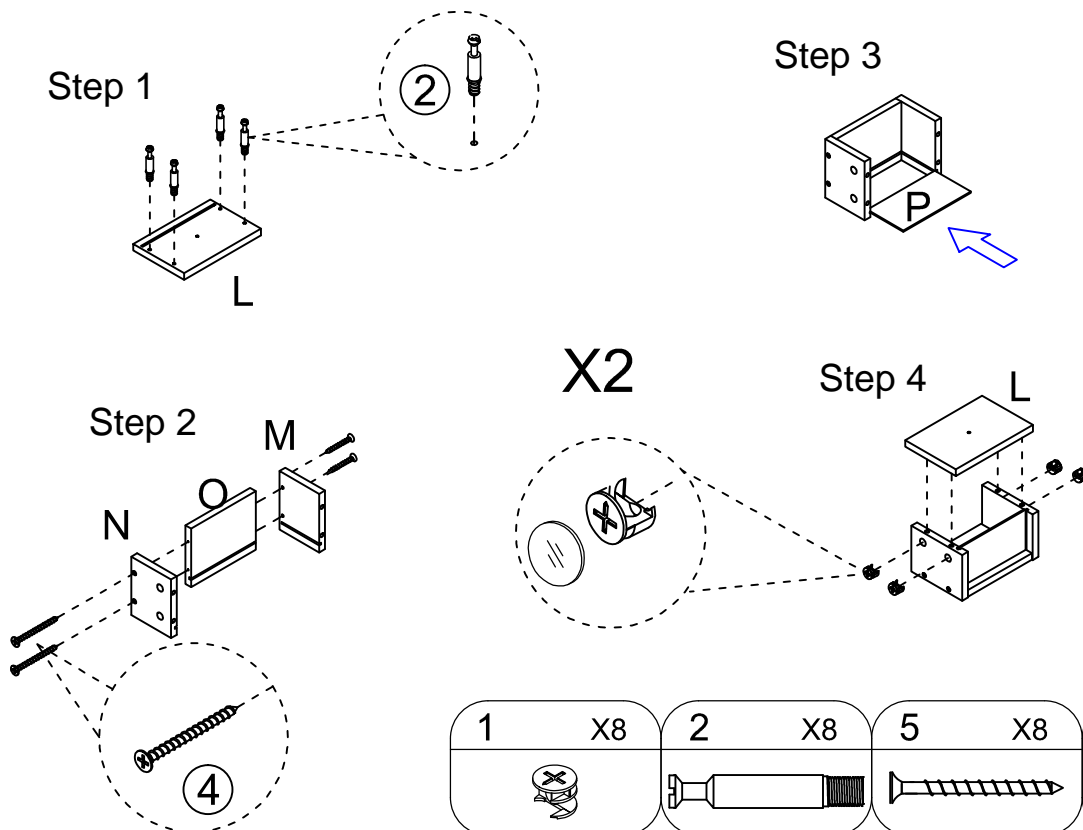


1	X8	2	X8	5	X8	14	X8
							

STEP16

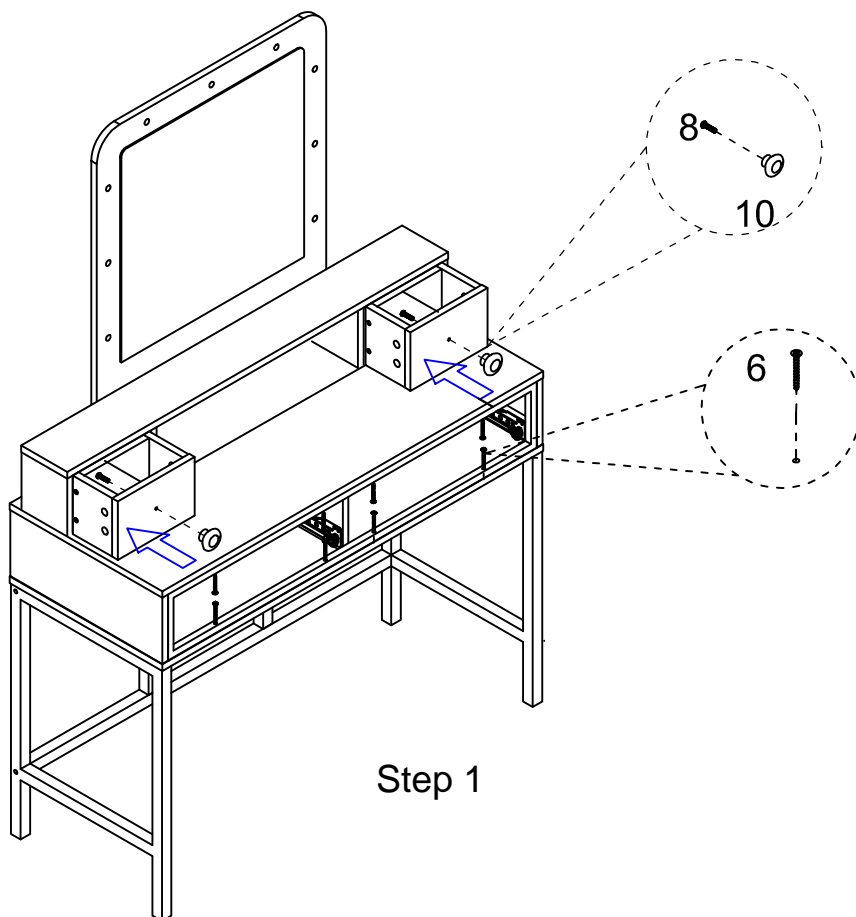

Step 1

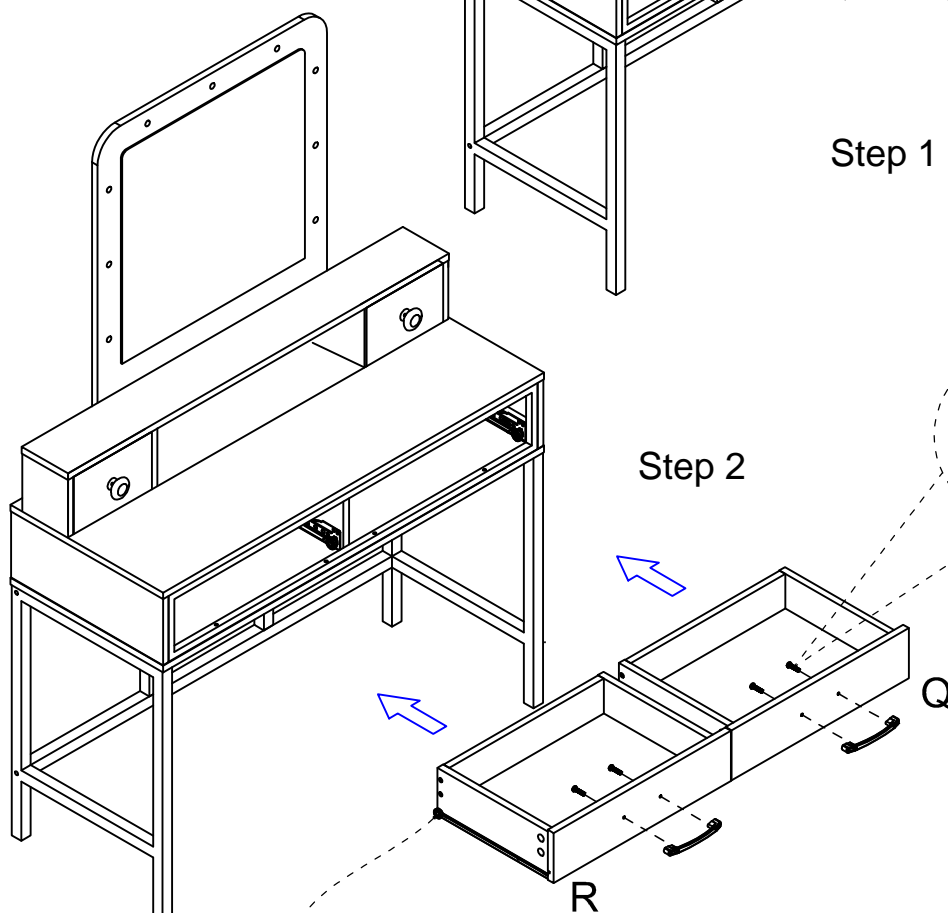

Step 2


Cabinet Slide

Drawer Slide


6	X8	8	X6	9	X2	10	X2

STEP17

Thread the light bulb lead through the pre-punched plate before passing through the plastic nut to secure it to the plate and tighten the plastic nut

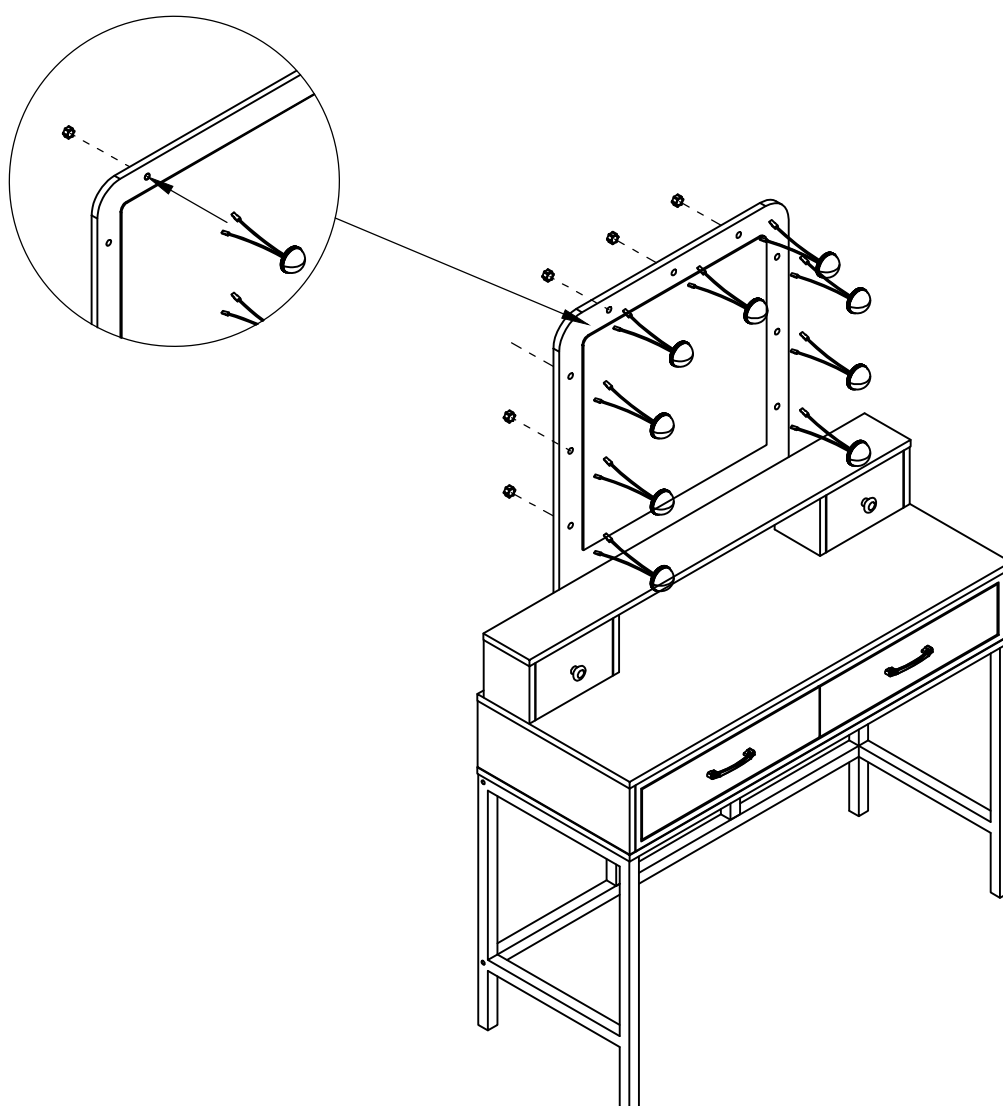

13 X9








STEP18

Pass the bulb wire through the pre punched plate, and then connect the adjacent bulbs successively through the wire head slot on the opposite side (corresponding to the line of the same color).

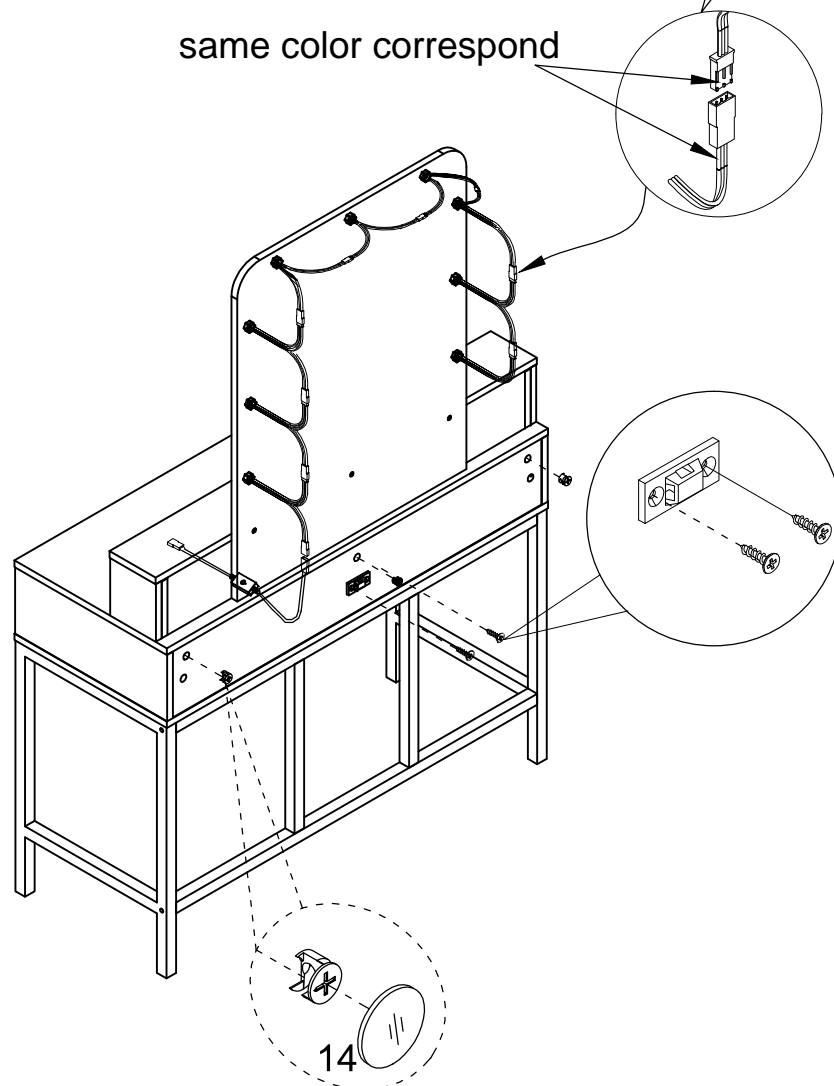When connecting the interface, please note that the colors of the wires at both ends correspond one by one.


same color correspond




1	X3	12	X1	14	X3
					

STEP19


Install the tipping restraint hard ware

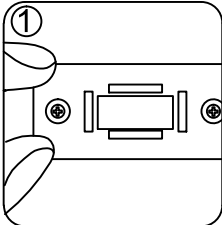


1. make mark on the wall

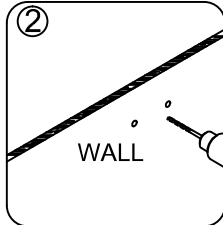


2. drill two Ø6 holes on the wall

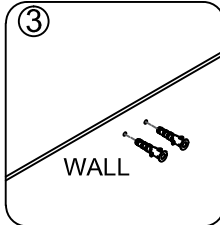

3. put two anchors in the holes

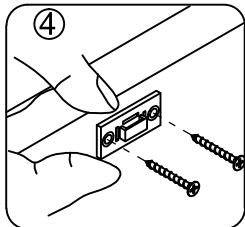

4. fix the device on the wall by the long screws

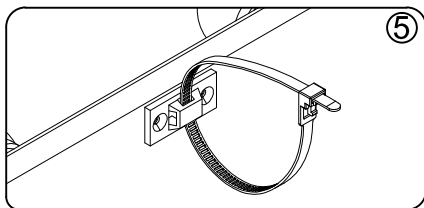

5. Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

