



ACCESSORIES LIST (New Version)

Check all parts:




Left Support A*1



Right Support B*1


Positioning
Dowel Holes

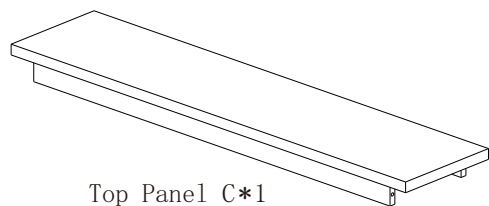

Top Panel C*1



Positioning Dowel F*2

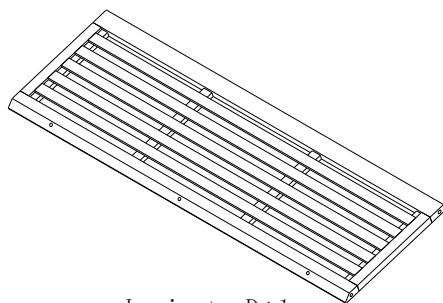


Laminate D*1




No. 1 Screws



No. 2 Screws

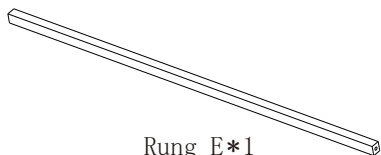


Rung E*1

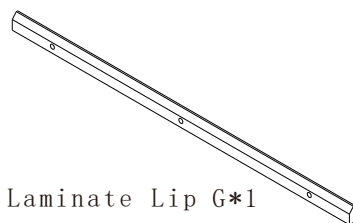

Laminate Lip G*1


INSTRUCTION

1

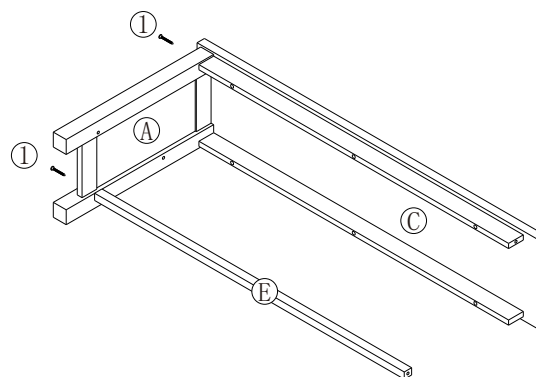


Fix C and E onto the left support with No. 1 screws.

2

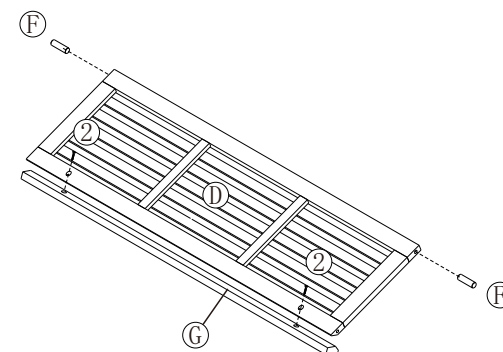


Fix G onto D with No. 2 screws, and insert the positioning dowels as the prototype shown above.

3

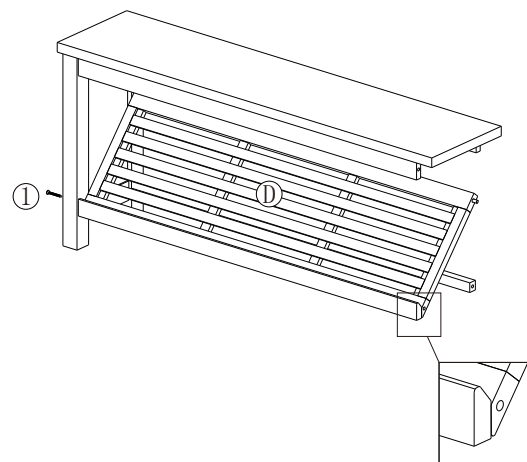

Place the dowel of the laminate D into the positioning dowel hole of the left support A. Then fix D onto A with NO.1 screws as shown above.

4

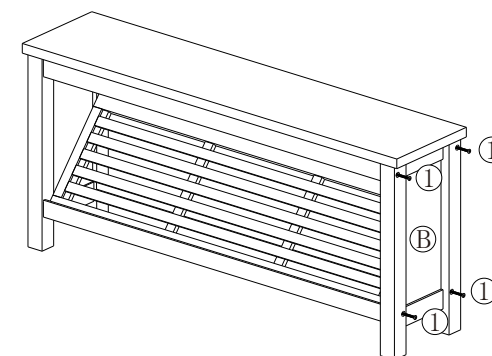

Place the dowel of the laminate D into the positioning dowel hole of the right support B. Fix the other support B with No.1 screws and it's all set.