




# ALUMINUM SOFA SET INSTALLATION MANUAL

# Corner Sofa

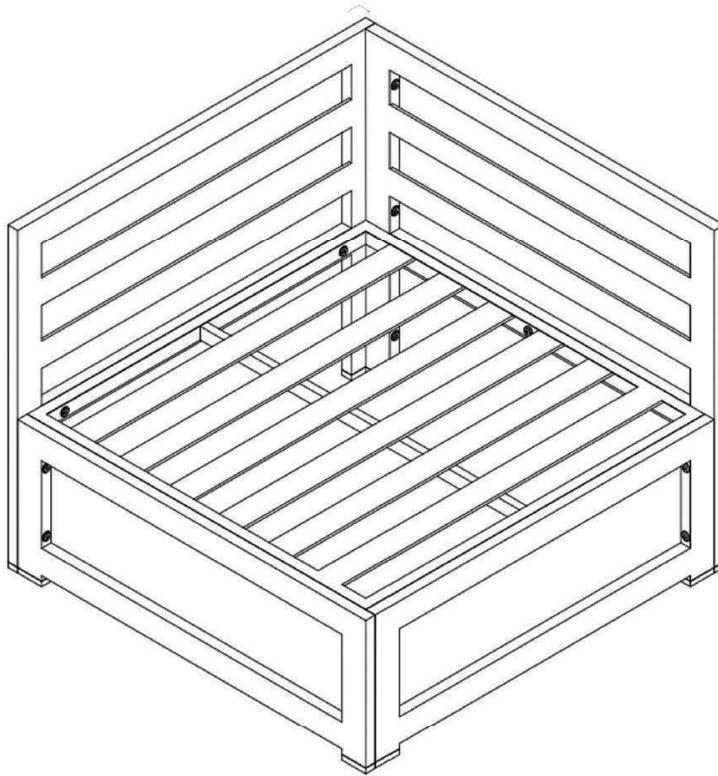

## READ BEFORE INSTALLATION

1. If you encounter any problems, such as missing accessories or damaged parts, please contact us and send us pictures in time, our after-sales team will reply to you within 24 hours.
2. 2 persons needed for assembly.
3. Using an electric drill in slow mode, our Allen wrench is preferred.
4. DO NOT tighten the screws completely until aligning all the screws with the holes.

### Back cushion NOTE

1. The back cushion is vacuumed sealed. After opening the bag, some time and fluffing will be required for the cushion to return to the original thickness.
2. Rub and flap the cushion to original thickness before use.

## Hardware **1 SETS IN BOX**




#1  
6x30mm  
x 6



#2  
6x65mm  
x 9




#3  
Washer  
x 15




#4  
Allen key  
x 1


## Parts **1 SETS IN BOX**

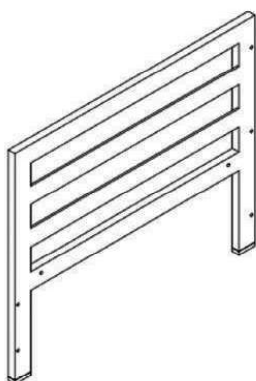


#A  
75cm / 29.5in  
x 1

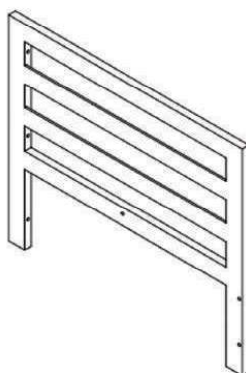


#B  
73cm / 28.7in  
x 1

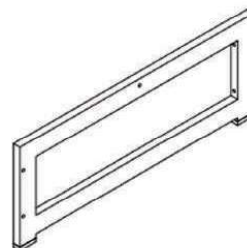

#C  
73cm / 28.7in  
x 1


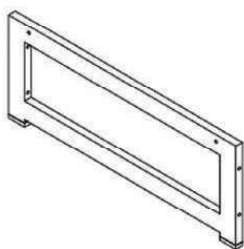




#D  
71cm / 27.9in  
x 1

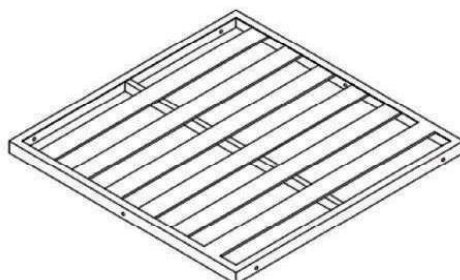



#E  
x 1

STEP 1

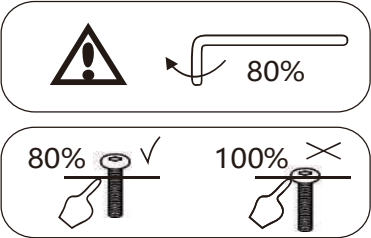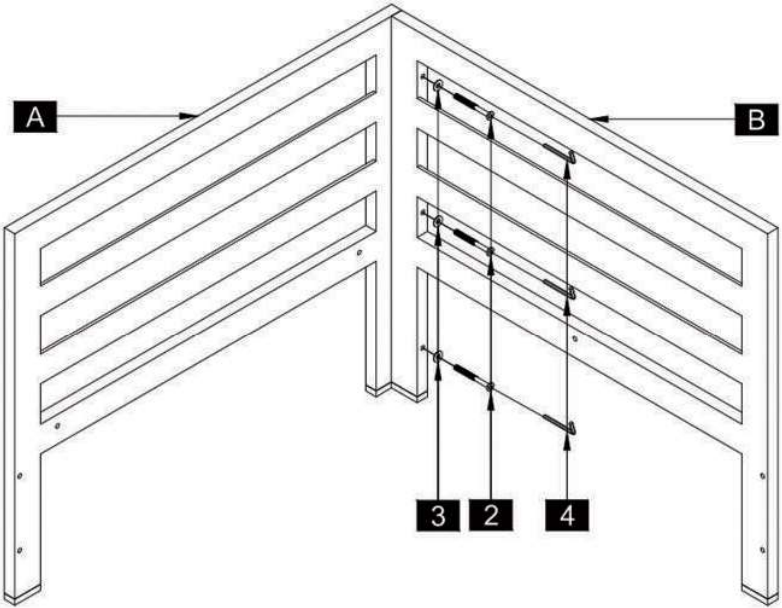

| A*1PC                                                                               | B*1PC                                                                                | 2*3PCS (M6*65)                                                                       | 3*3PCS                                                                               |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|  |  |  |  |



STEP 2

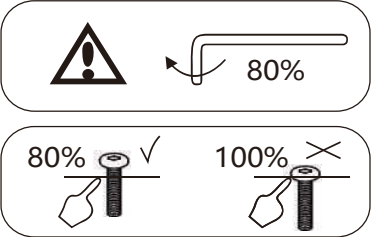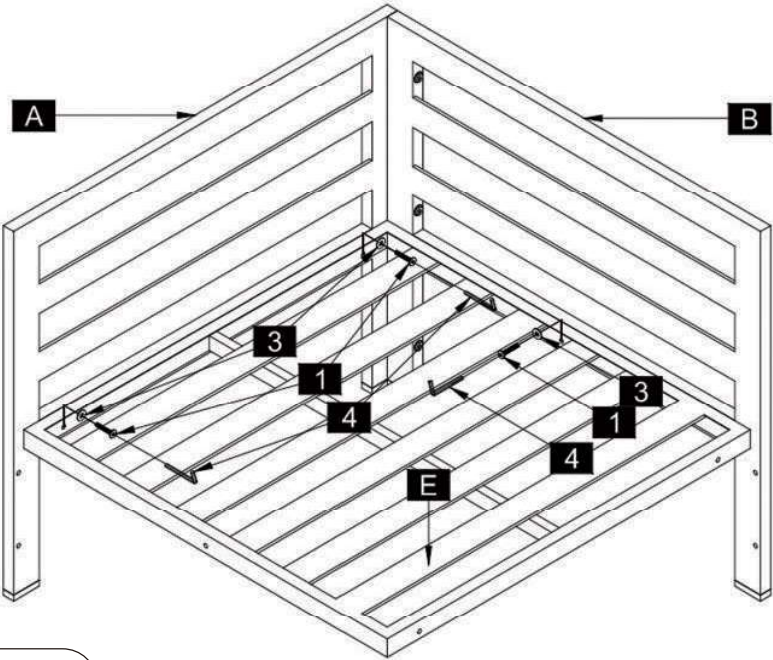

| E*1PC                                                                               | 1*3PCS (M6*30)                                                                      | 3*3PCS                                                                              |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |





STEP 3

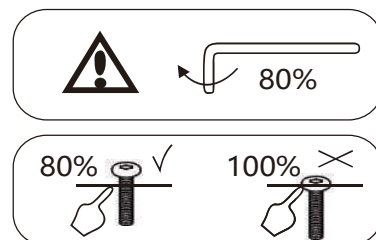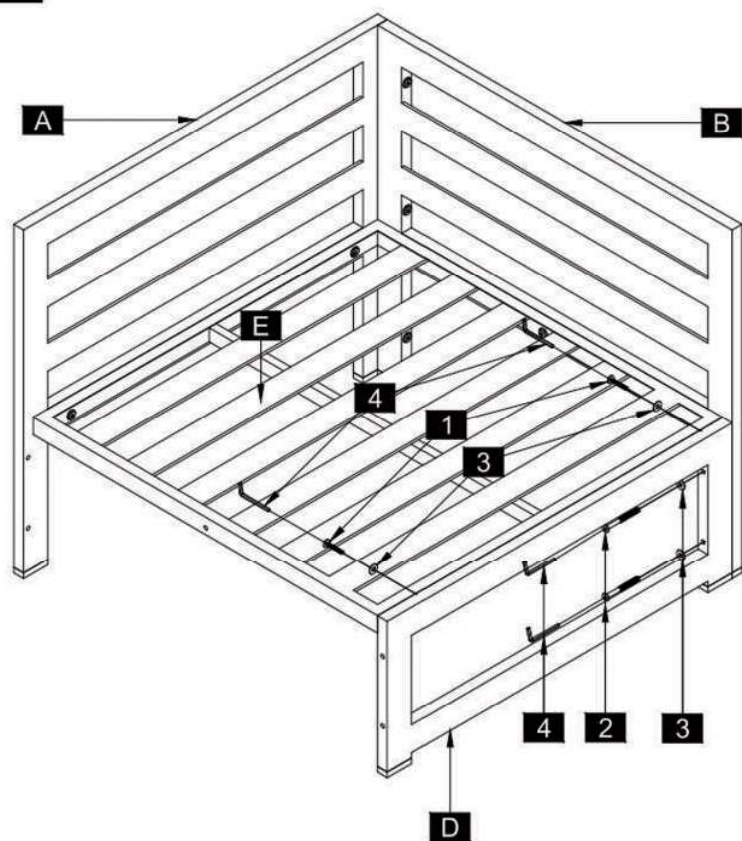



| D*1PC | 1*2PCS (M6*30) | 2*2PCS (M6*65) | 3*4PCS |
|-------|----------------|----------------|--------|
|       |                |                |        |

STEP 4

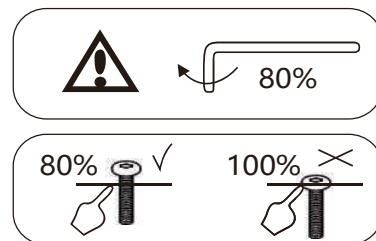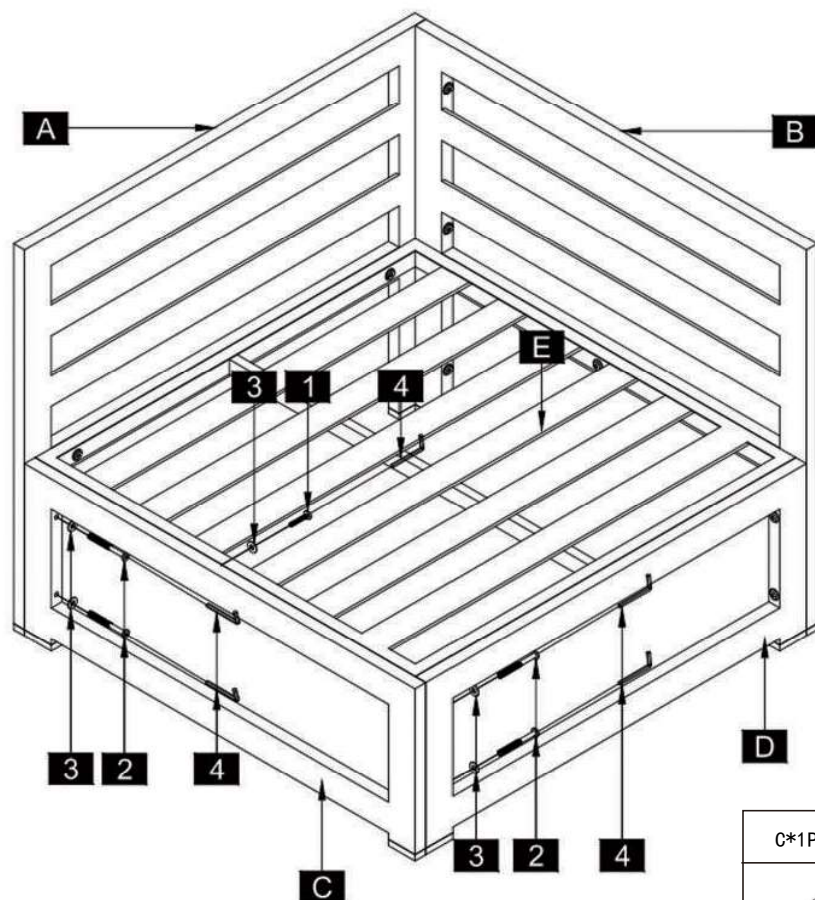


| C*1PC | 2*4PCS (M6*65) | 1*1PC (M6*30) | 3*5PCS |
|-------|----------------|---------------|--------|
|       |                |               |        |

STEP 5

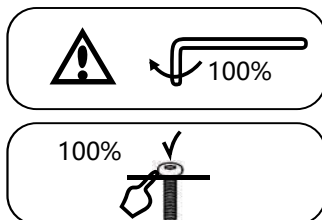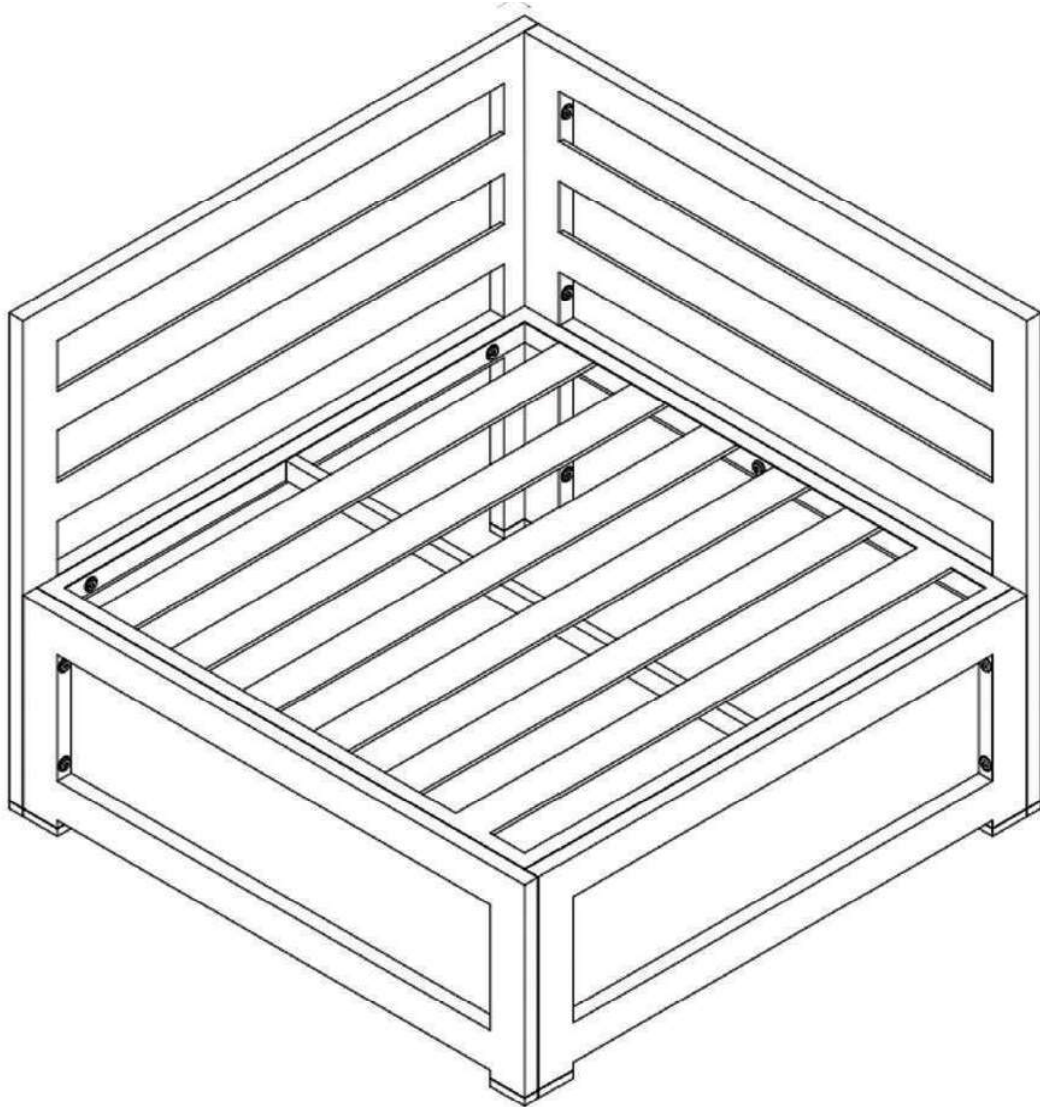

Ensure all screws are tightened before using

# Armless Sofa

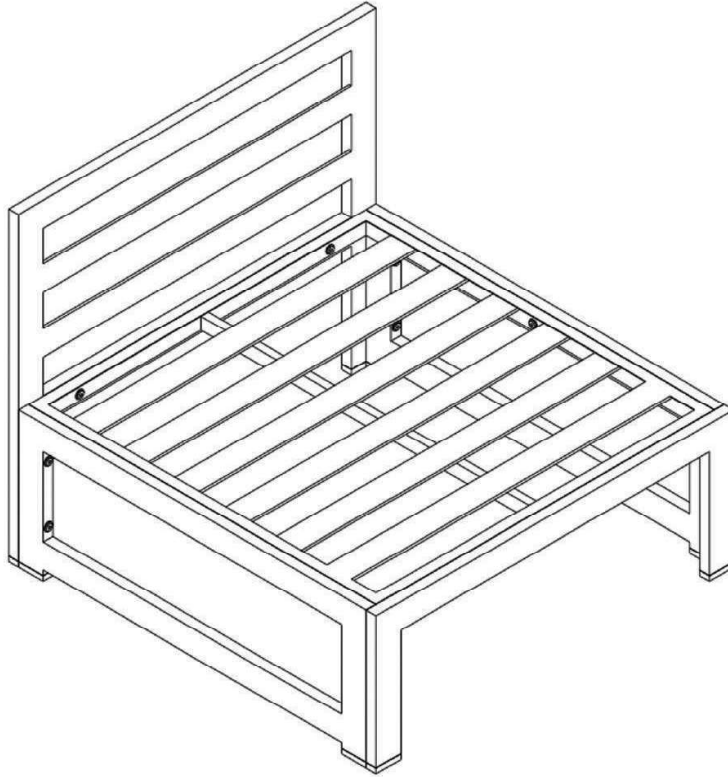

## READ BEFORE INSTALLATION

1. If you encounter any problems, such as missing accessories or damaged parts, please contact us and send us pictures in time, our after-sales team will reply to you within 24 hours.
2. 2 persons needed for assembly.
3. Using an electric drill in slow mode, our Allen wrench is preferred.
4. DO NOT tighten the screws completely until aligning all the screws with the holes.

### Back cushion NOTE

1. The back cushion is vacuumed sealed. After opening the bag, some time and fluffing will be required for the cushion to return to the original thickness.
2. Rub and flap the cushion to original thickness before use.

# Hardware

2 SETS IN BOX



#1  
6x30mm  
X12



#2  
6x65mm  
X16




#3  
Washer  
X28




#4  
Allen key  
X2

# Parts


2 SETS IN BOX

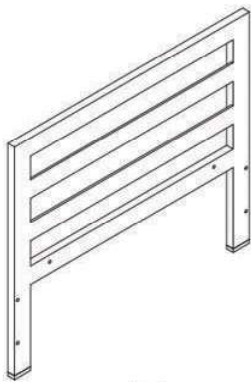


#F  
73cm / 28.7in  
X2

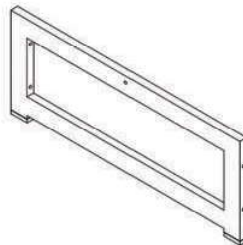

#G  
71cm / 27.9in  
X4

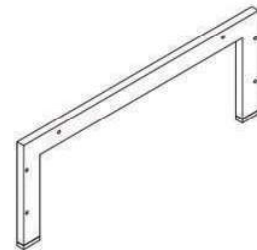


#H  
73cm / 28.7in  
X2

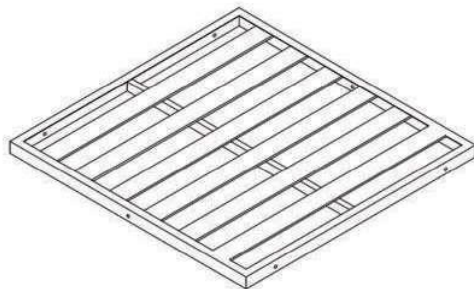

#I  
X2




# STEP 1

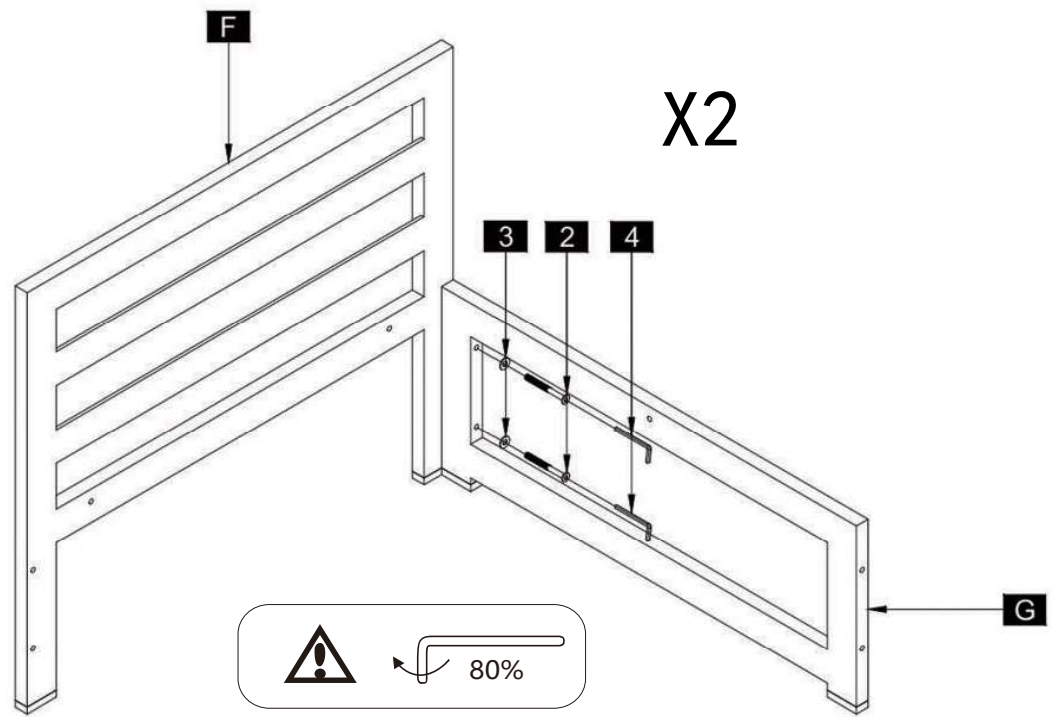




| F*1PC | G*1PC | 2*2PCS (M6*65) | 3*2PCS |
|-------|-------|----------------|--------|
|       |       |                |        |

# STEP 2

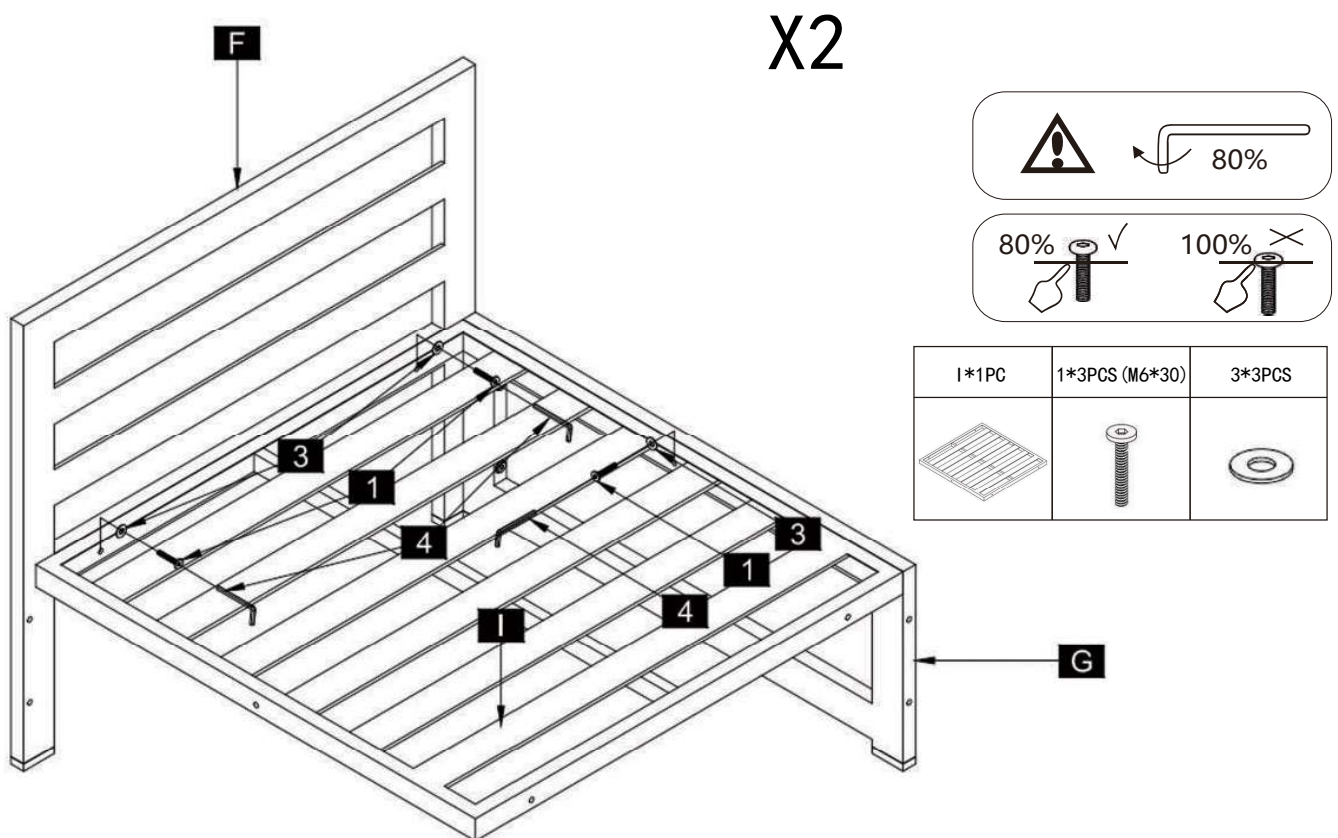




| I*1PC | 1*3PCS (M6*30) | 3*3PCS |
|-------|----------------|--------|
|       |                |        |

### STEP 3

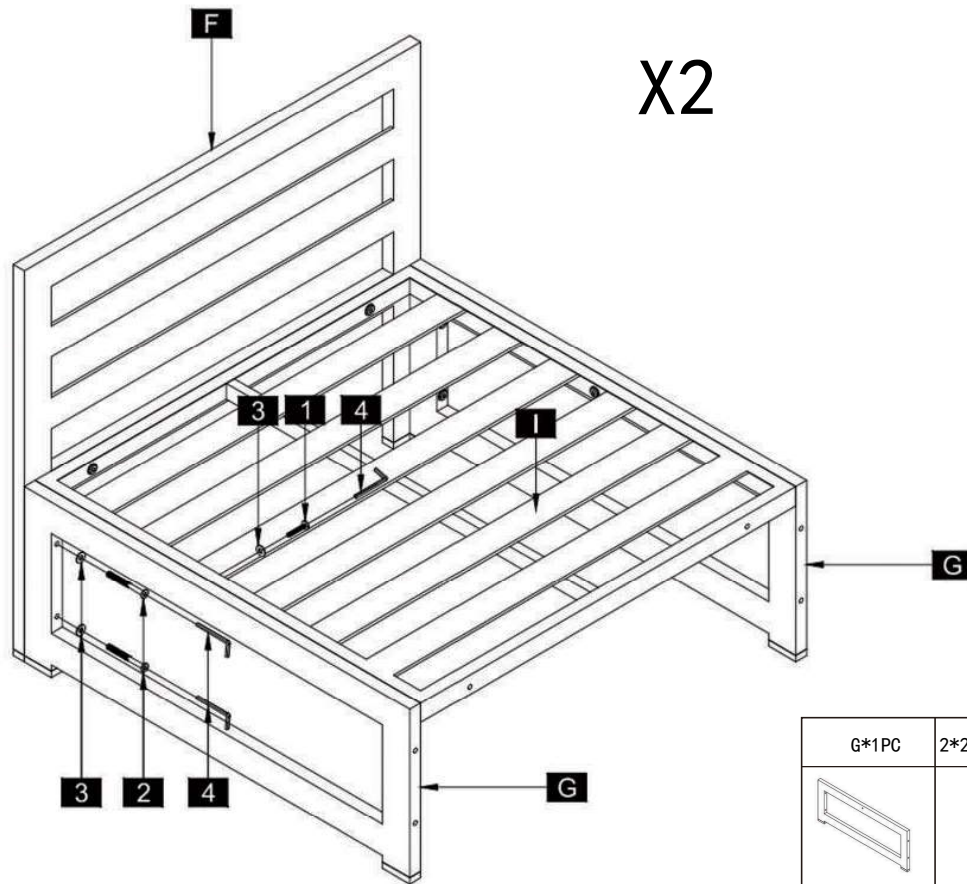

| G*1PC | 2*2PCS (M6*65) | 1*1PC (M6*30) | 3*3PCS |
|-------|----------------|---------------|--------|
|       |                |               |        |




### STEP 4

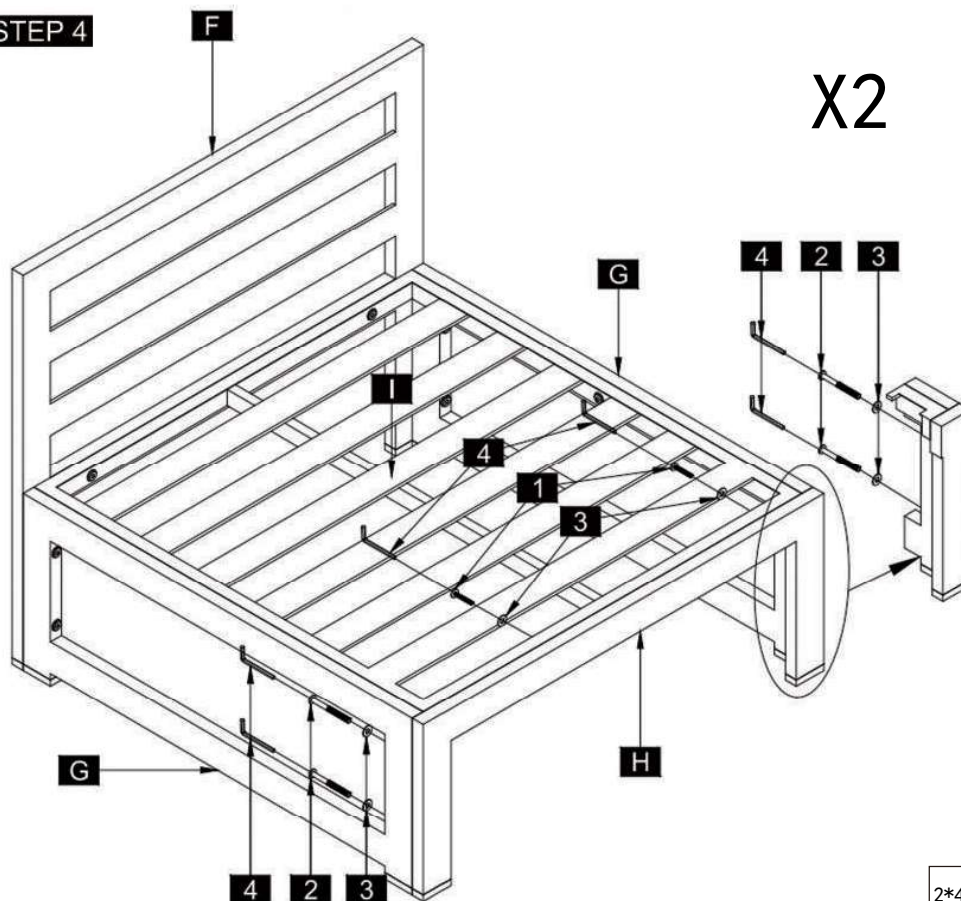

| 2*4PCS (M6*65) | 1*2PCS (M6*30) | 3*6PCS |
|----------------|----------------|--------|
|                |                |        |

STEP 5

X2

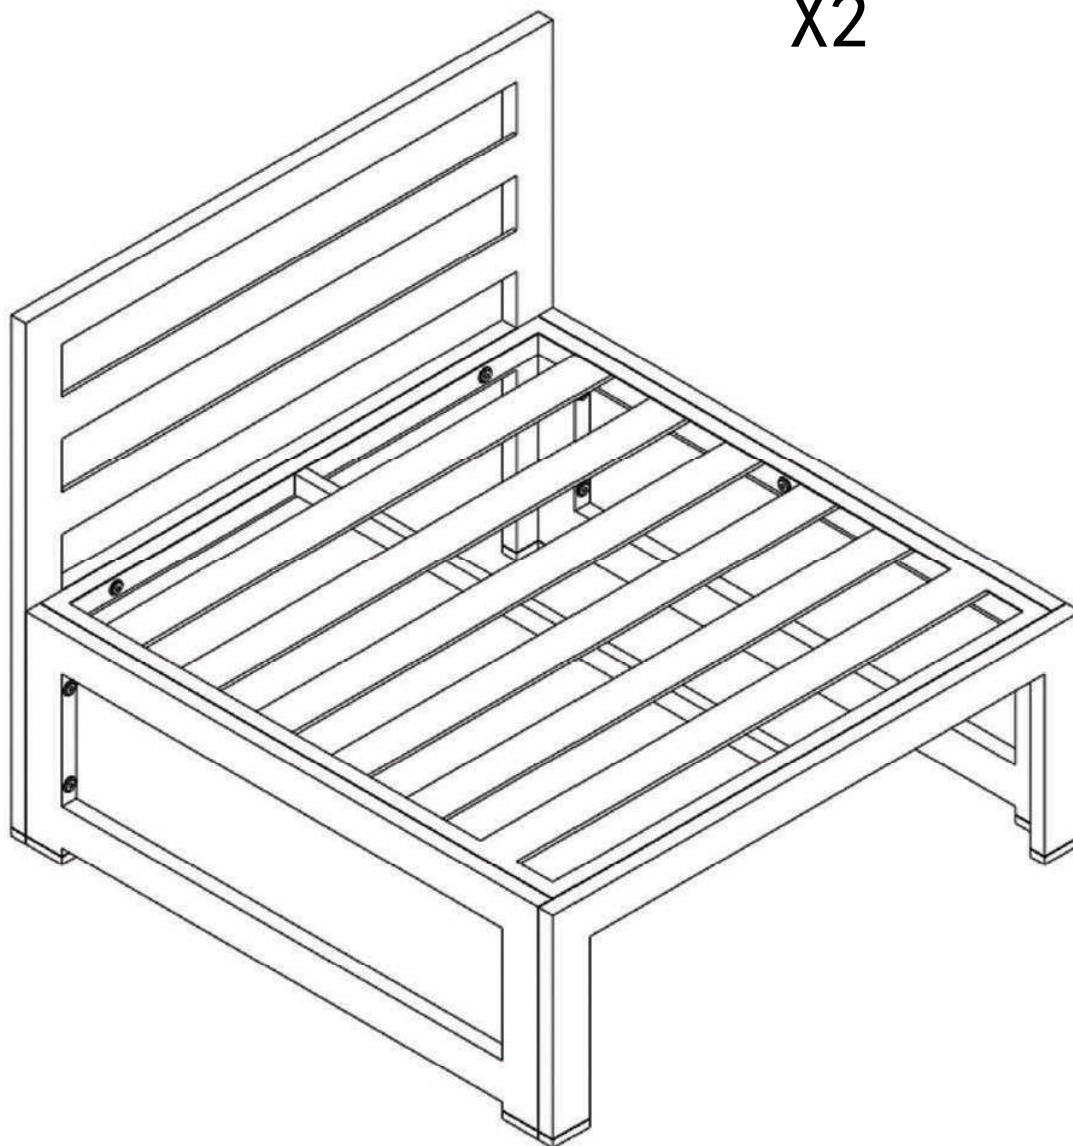


Ensure all screws are tightened before using

# Assembly Instruction


## Coffee Table

- Please make sure you have all of parts listed, Before you begin to assemble it.
- Please follow our instruction step by step, or follow our video.
- Manually install table with our tools is highly recommended, please use the LOW SPEED when using electrical tools
- DO NOT tighten the screws completely until all screws are aligned with the holes

### Hardware

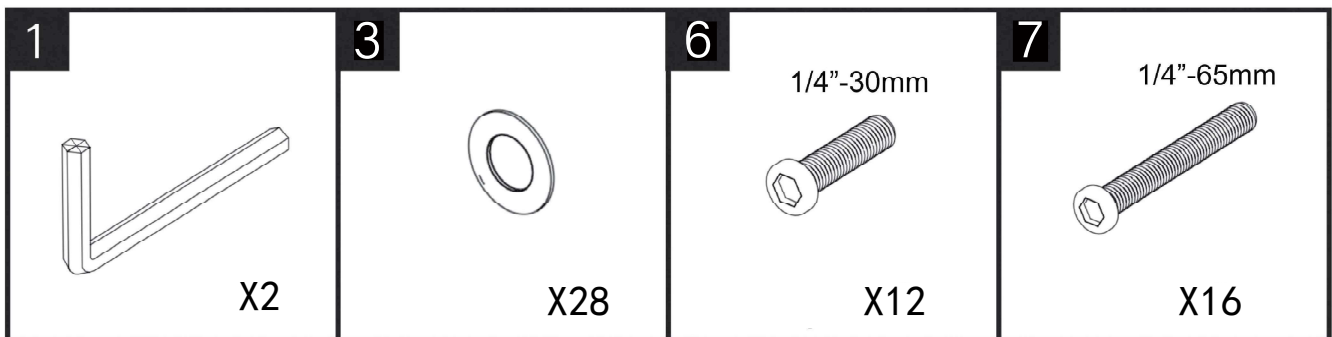


### Parts

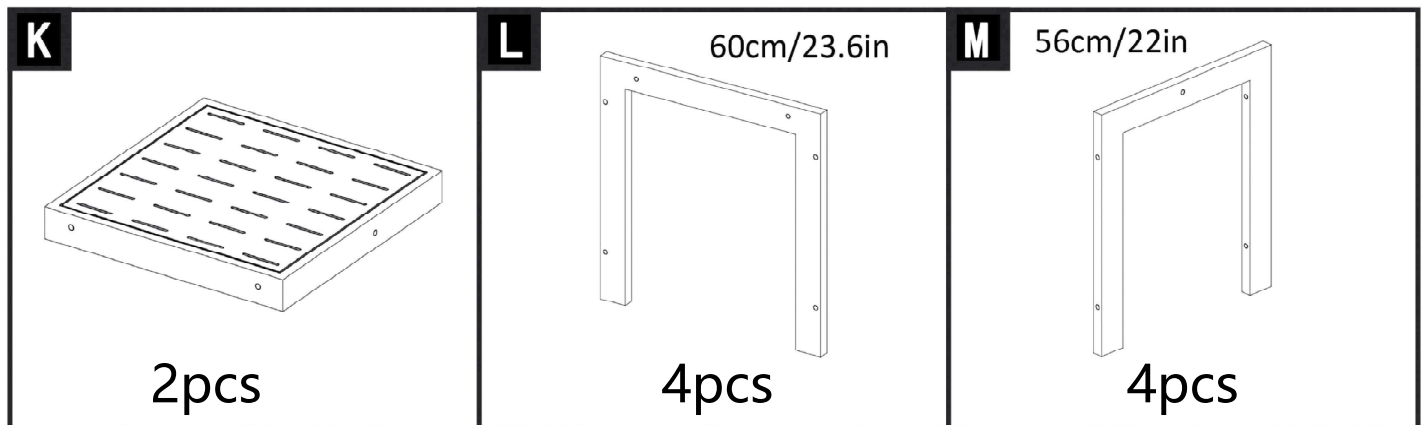




1

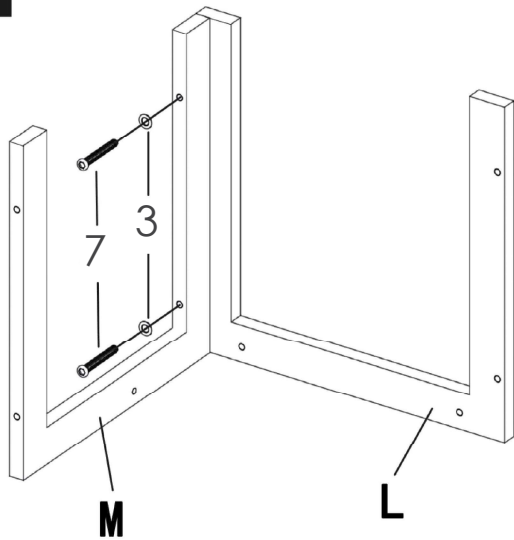


X2

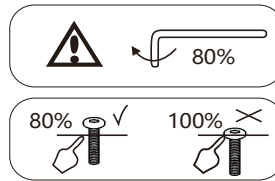


| 7*2PCS (M6*65) | M*1PC     | L*1PC       | 3*2PCS |
|----------------|-----------|-------------|--------|
| 1/4"-65mm      | 56cm/22in | 60cm/23.6in |        |
|                |           |             |        |

X2

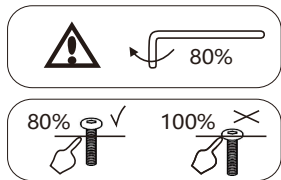



| K*1PC | 6*3PCS (M6*30) | 3*3PCS |
|-------|----------------|--------|
|       | 1/4"-30mm      |        |
|       |                |        |

2

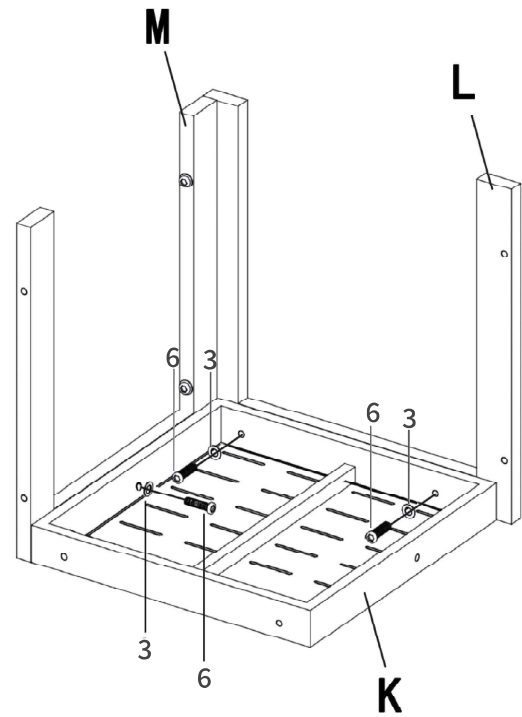



X2

3

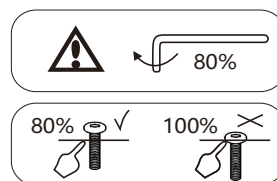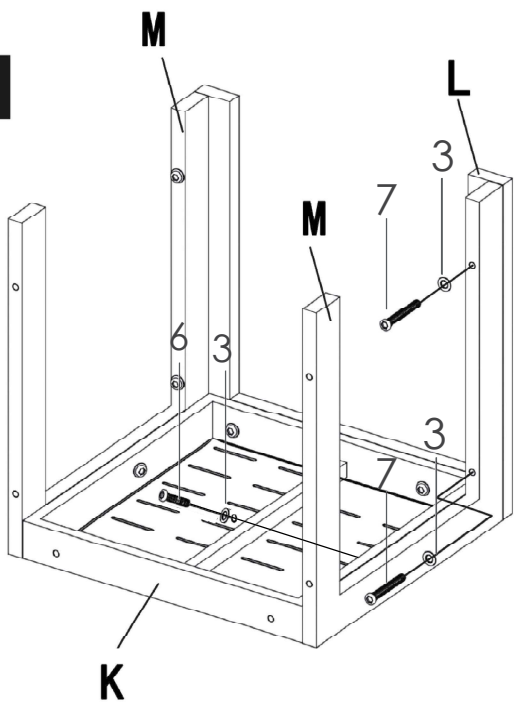




| 7*2PCS (M6*65) | 6*1PC (M6*30) | M*1PC     | 3*3PCS |
|----------------|---------------|-----------|--------|
| 1/4"-65mm      | 1/4"-30mm     | 56cm/22in |        |
|                |               |           |        |

4

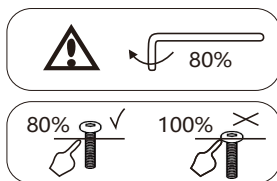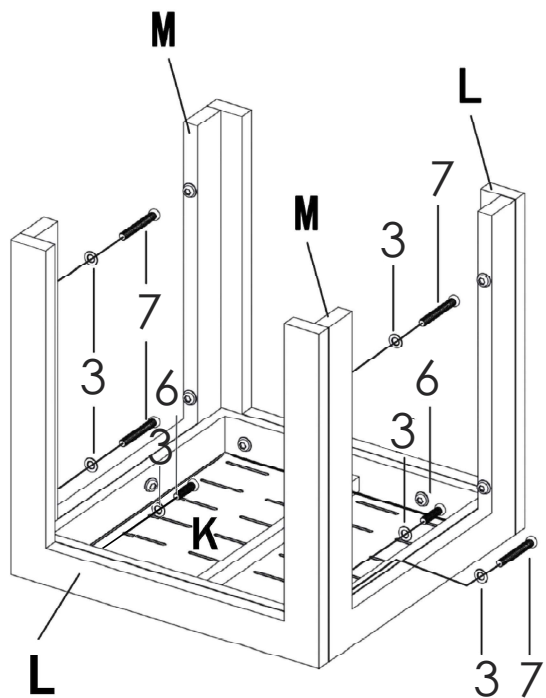

| 7*4PCS (M6*65) | 6*2PCS (M6*30) | L*1PC       | 3*6PCS |
|----------------|----------------|-------------|--------|
| 1/4"-65mm      | 1/4"-30mm      | 60cm/23.6in |        |
|                |                |             |        |

5

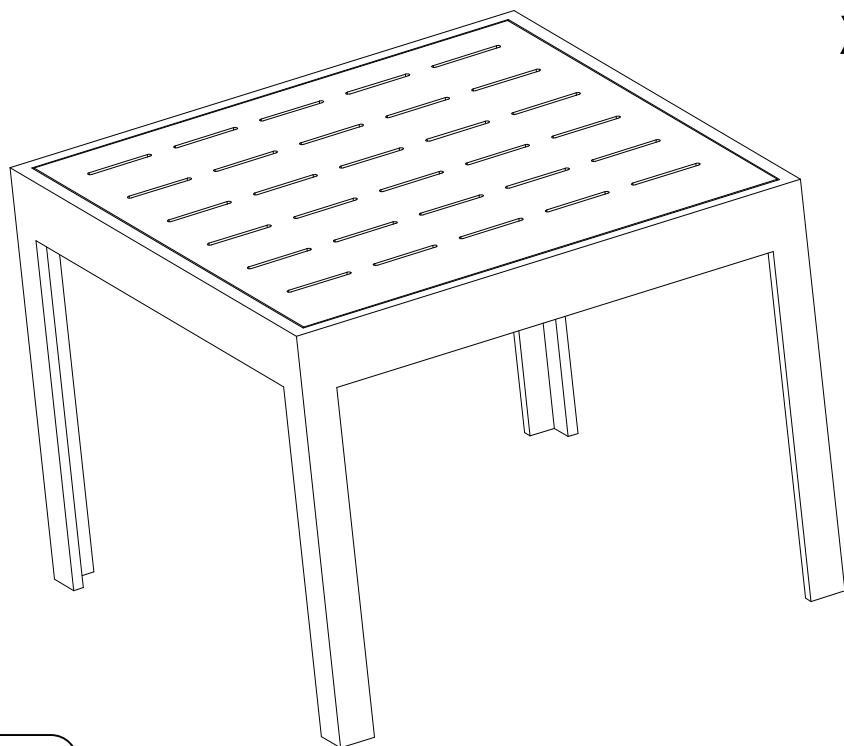

Ensure all screws are tightened before using