


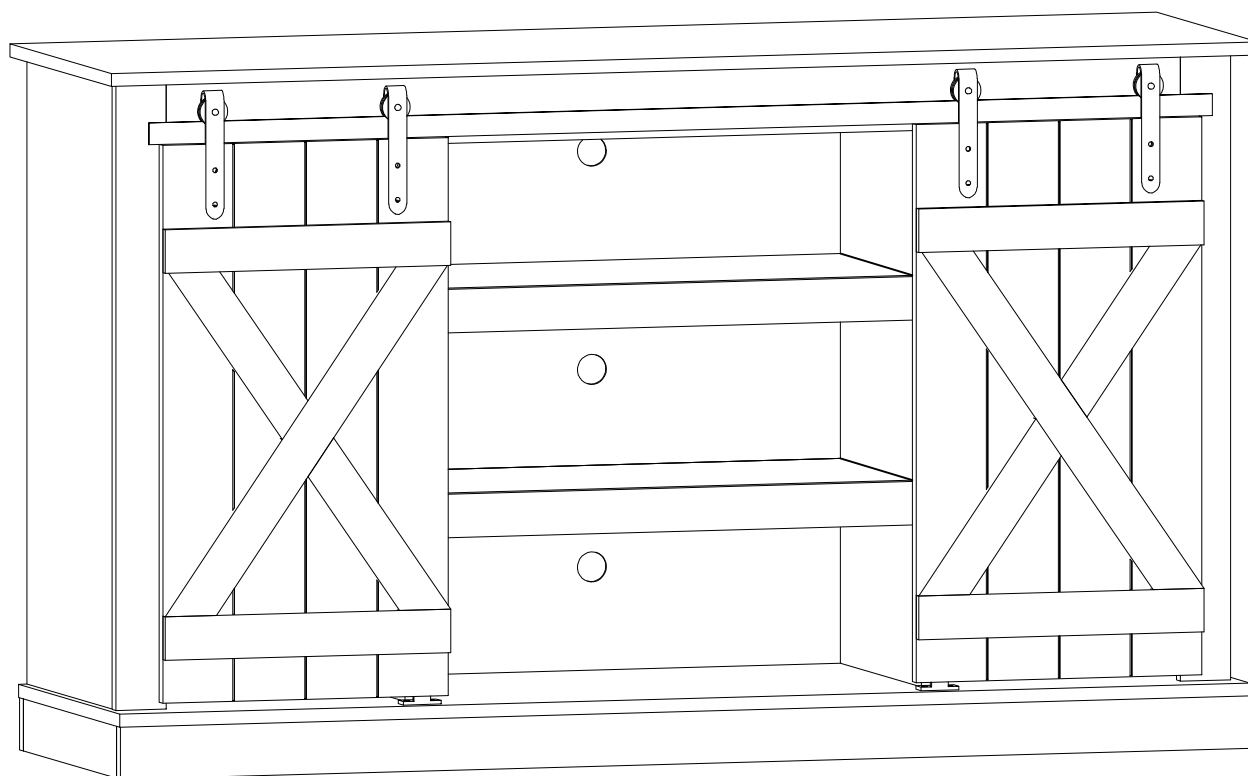
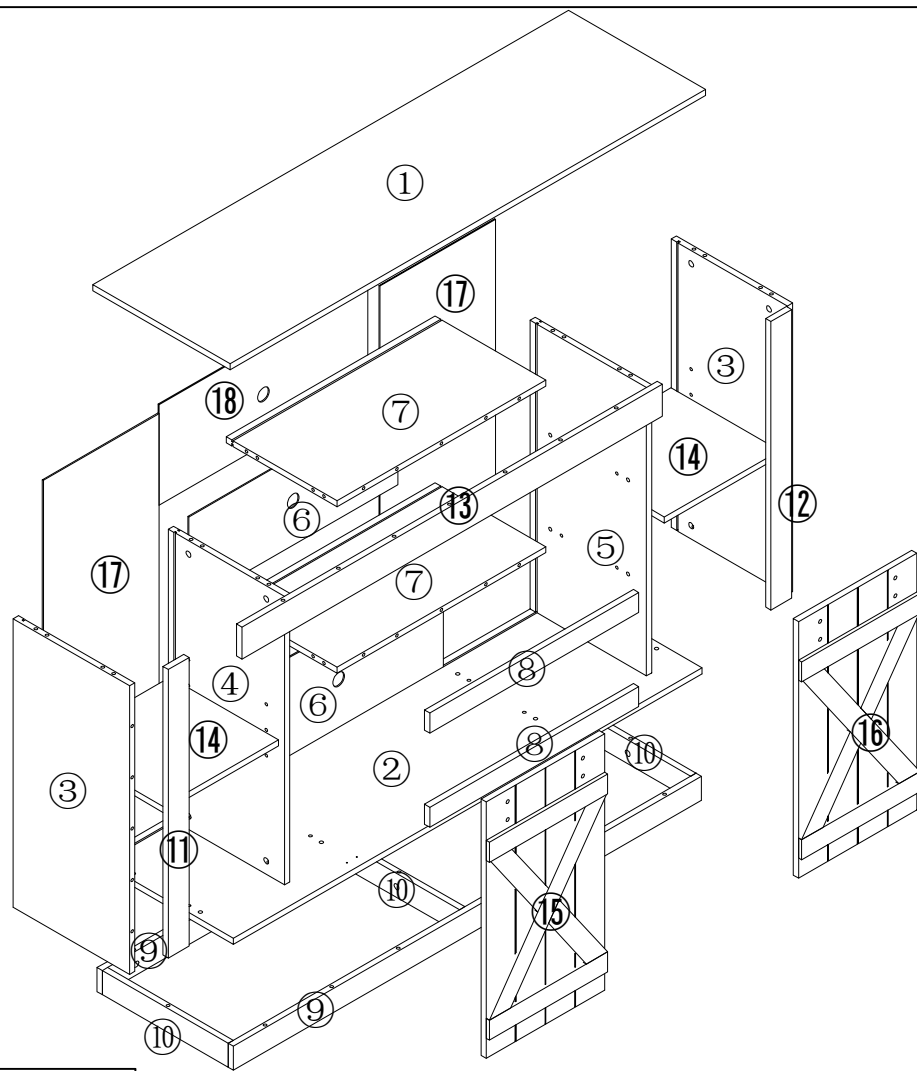


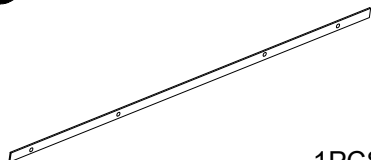
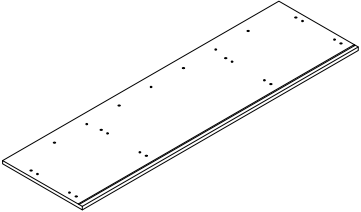
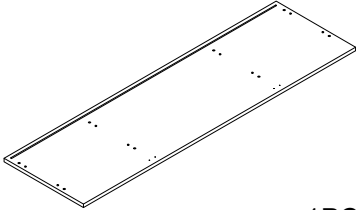
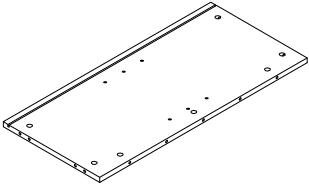
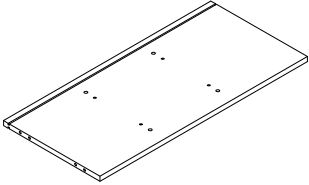
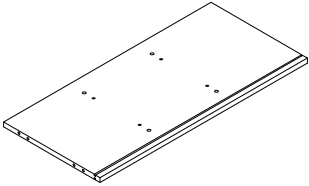
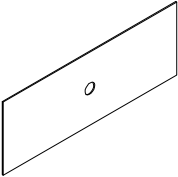
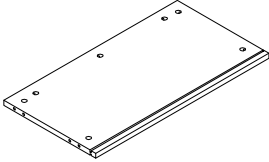

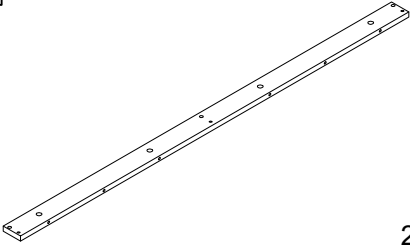

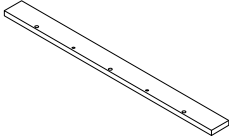
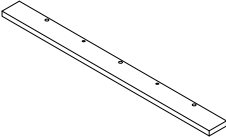
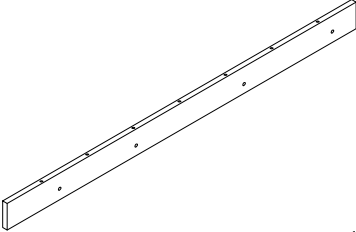







J  4PCS	K 6*35  4PCS	L  35PCS	M 3*12  35PCS					
A  57PCS	B  57PCS	C 8*40  47PCS	D 6*10  8PCS	E 3.5*14  4PCS	F  8PCS	G  1PCS	H  4PCS	I  2PCS


1	1370*395	2	1350*395	3	720*335	4	720*335
	1PCS		1PCS		2PCS		1PCS
5	720*335	6	610*228	7	602*319	8	602*50
	1PCS		2PCS		2PCS		2PCS
9	1348*60	10	363*60	11	720*60	12	720*60
	2PCS		3PCS		1PCS		1PCS
13	1212*80	14	332*313	15	639*341	16	639*341
	1PCS		2PCS		1PCS		1PCS
17	730*343	18	610*260				
	2PCS		1PCS				

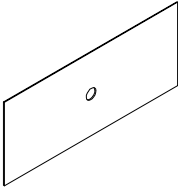


Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

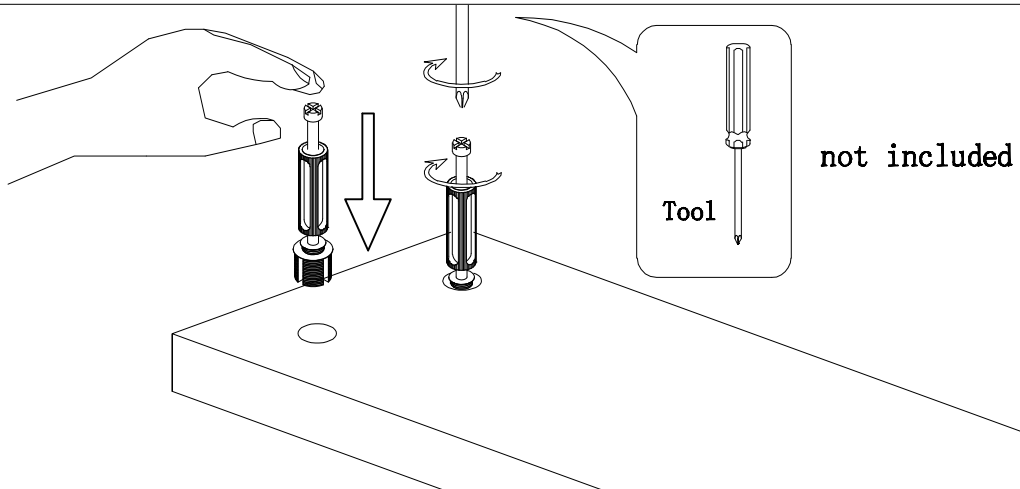


II

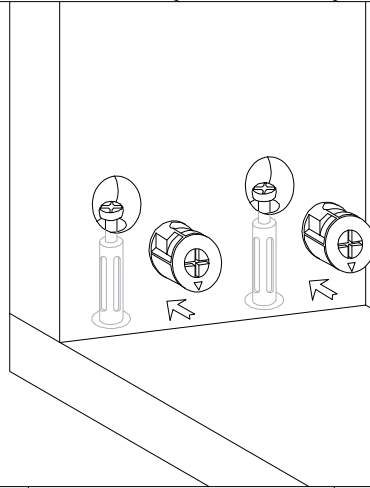

III

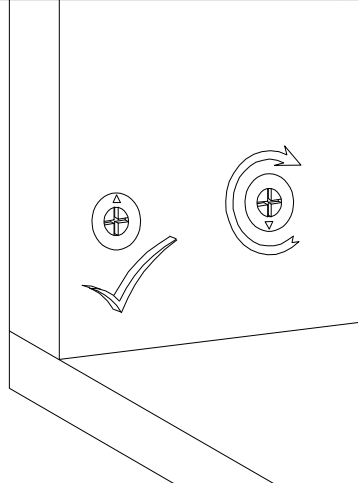

1

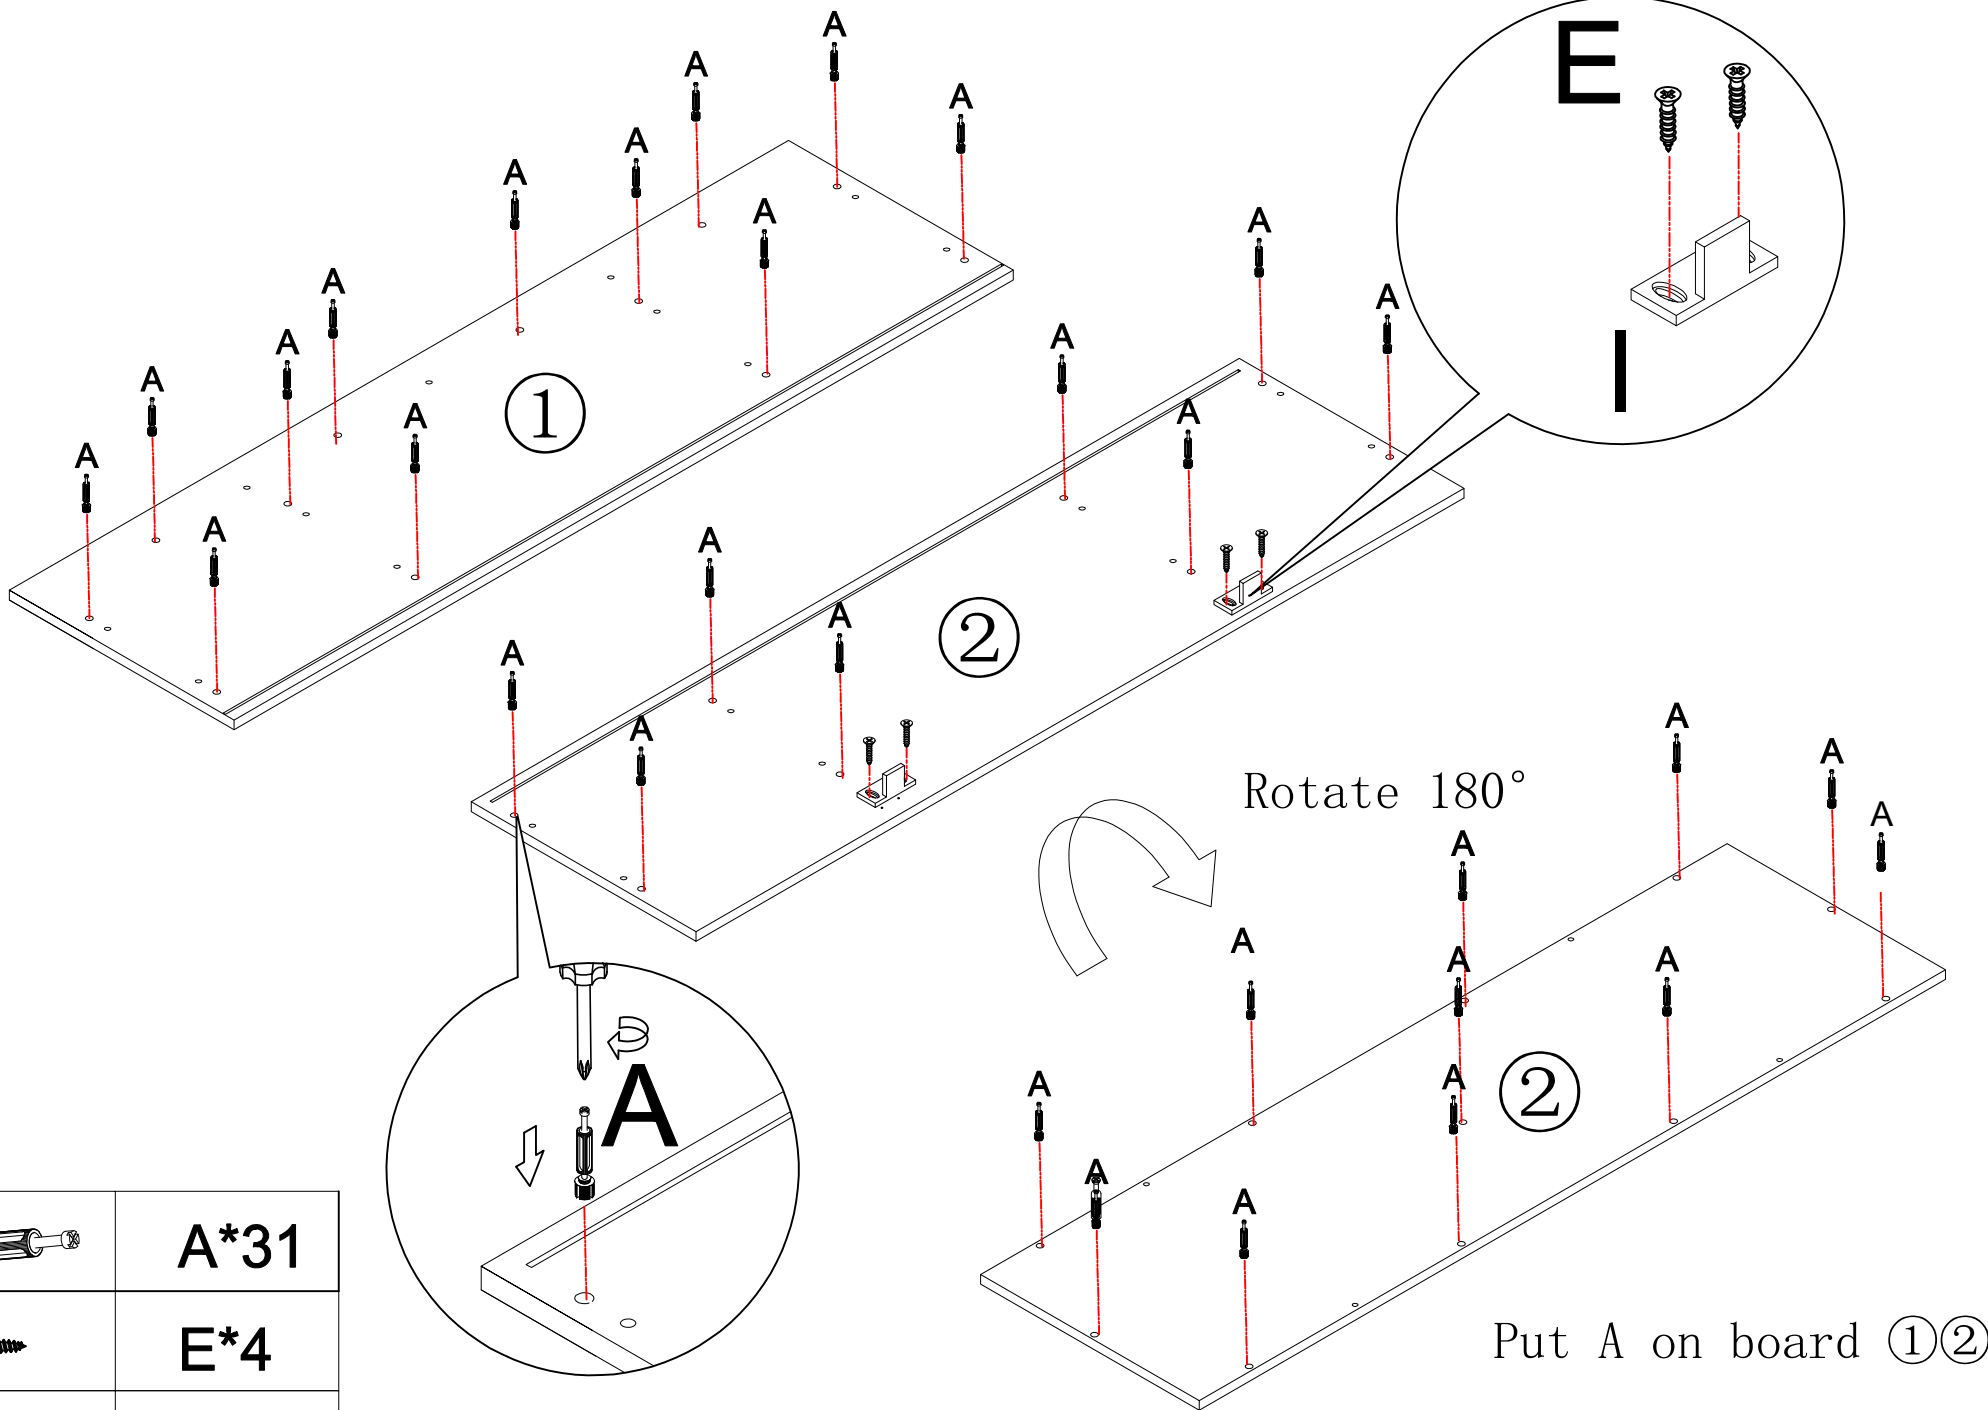

A*31




E*4



I*2

2

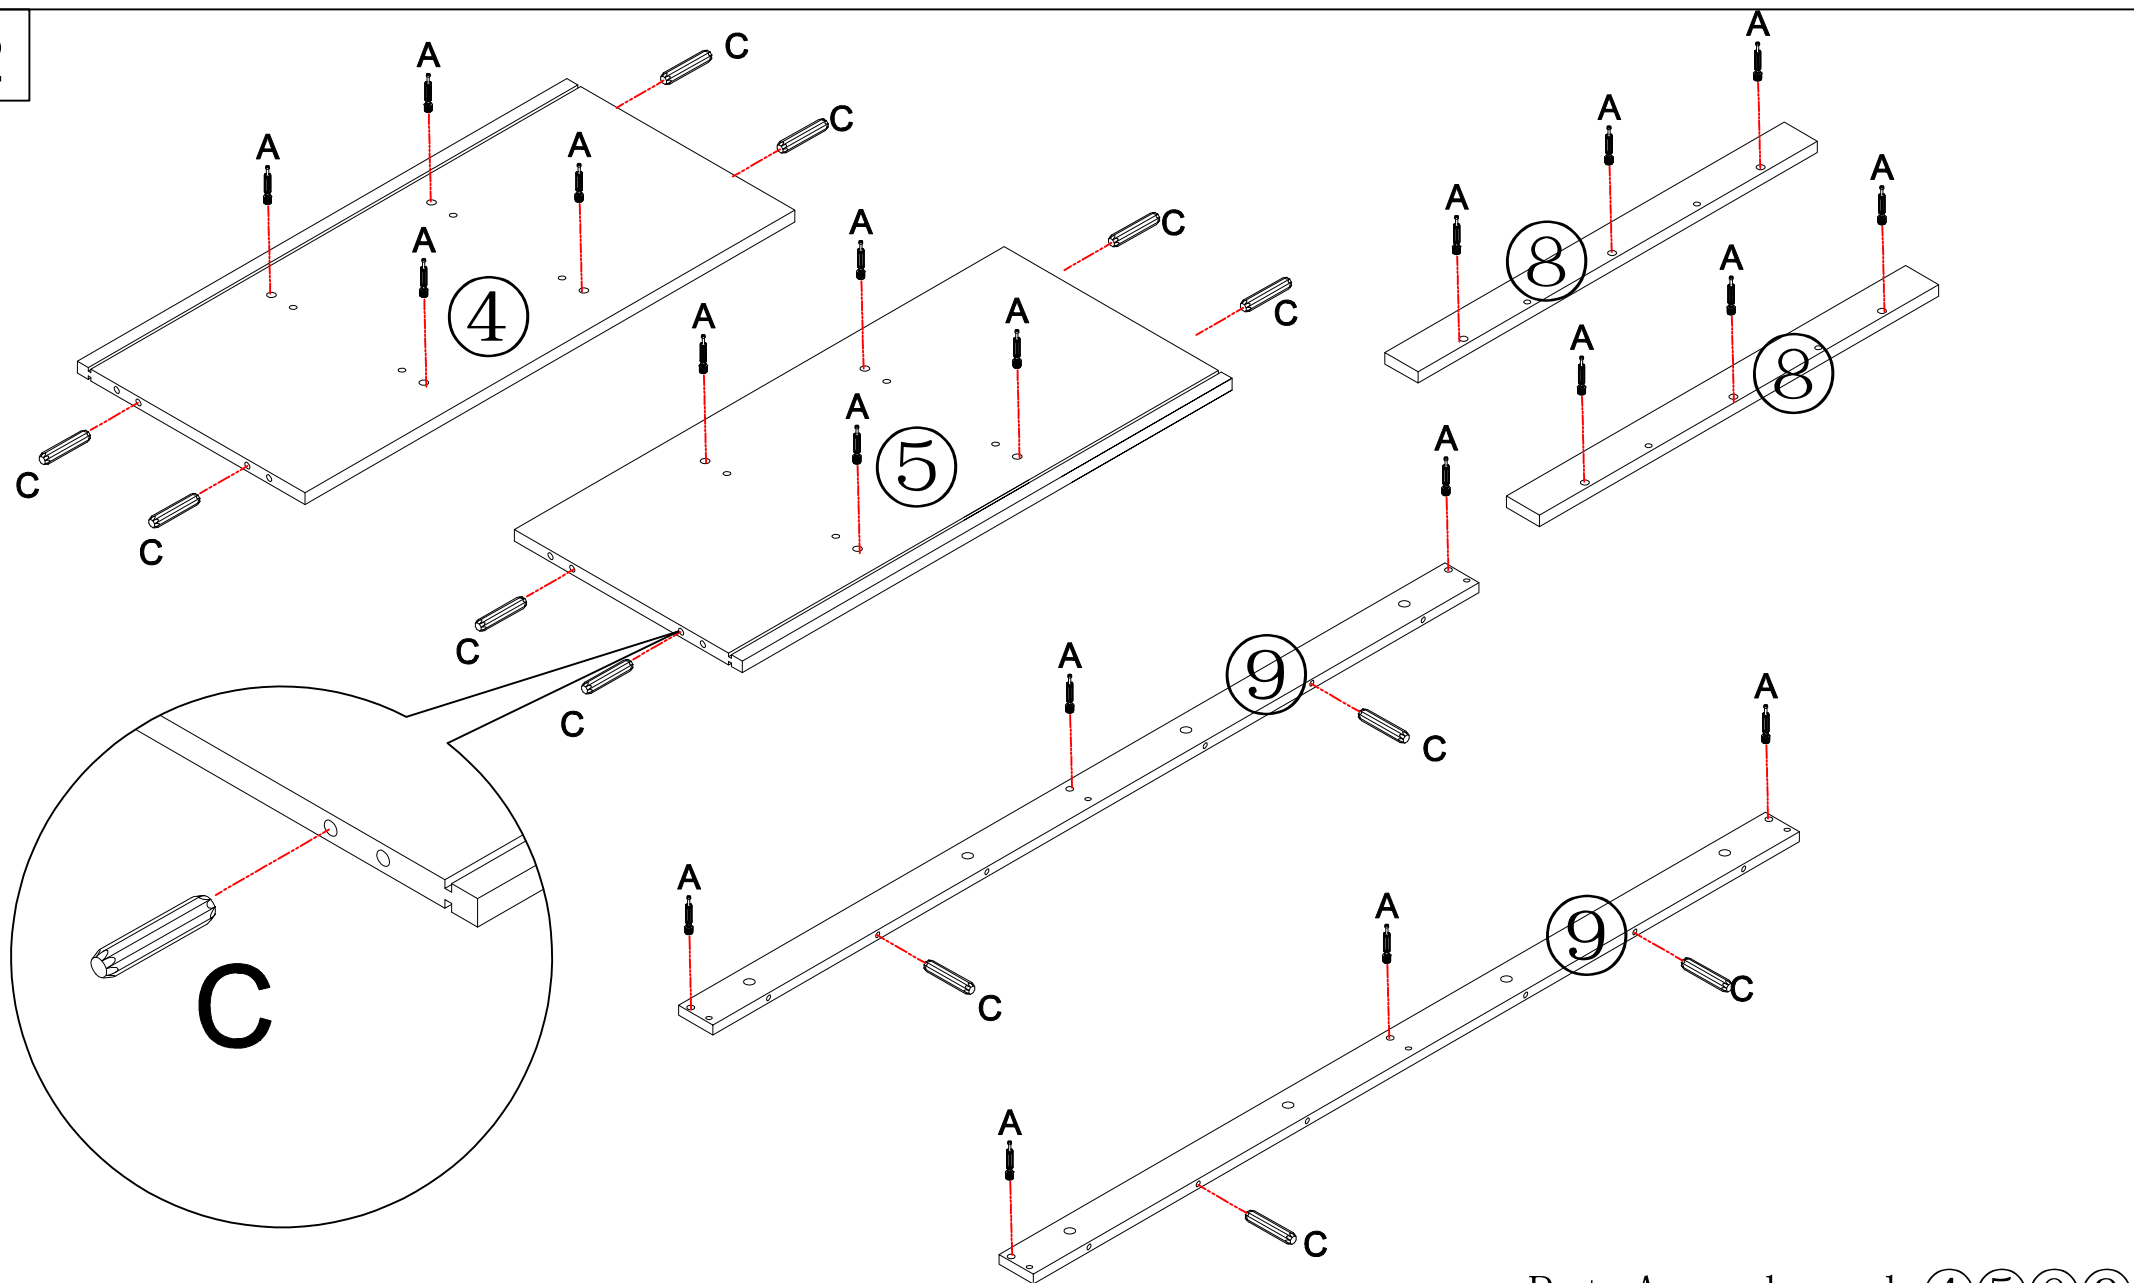


A*20



C*12

Put A on board ④⑤⑧⑨


Put C on board ④⑤⑨

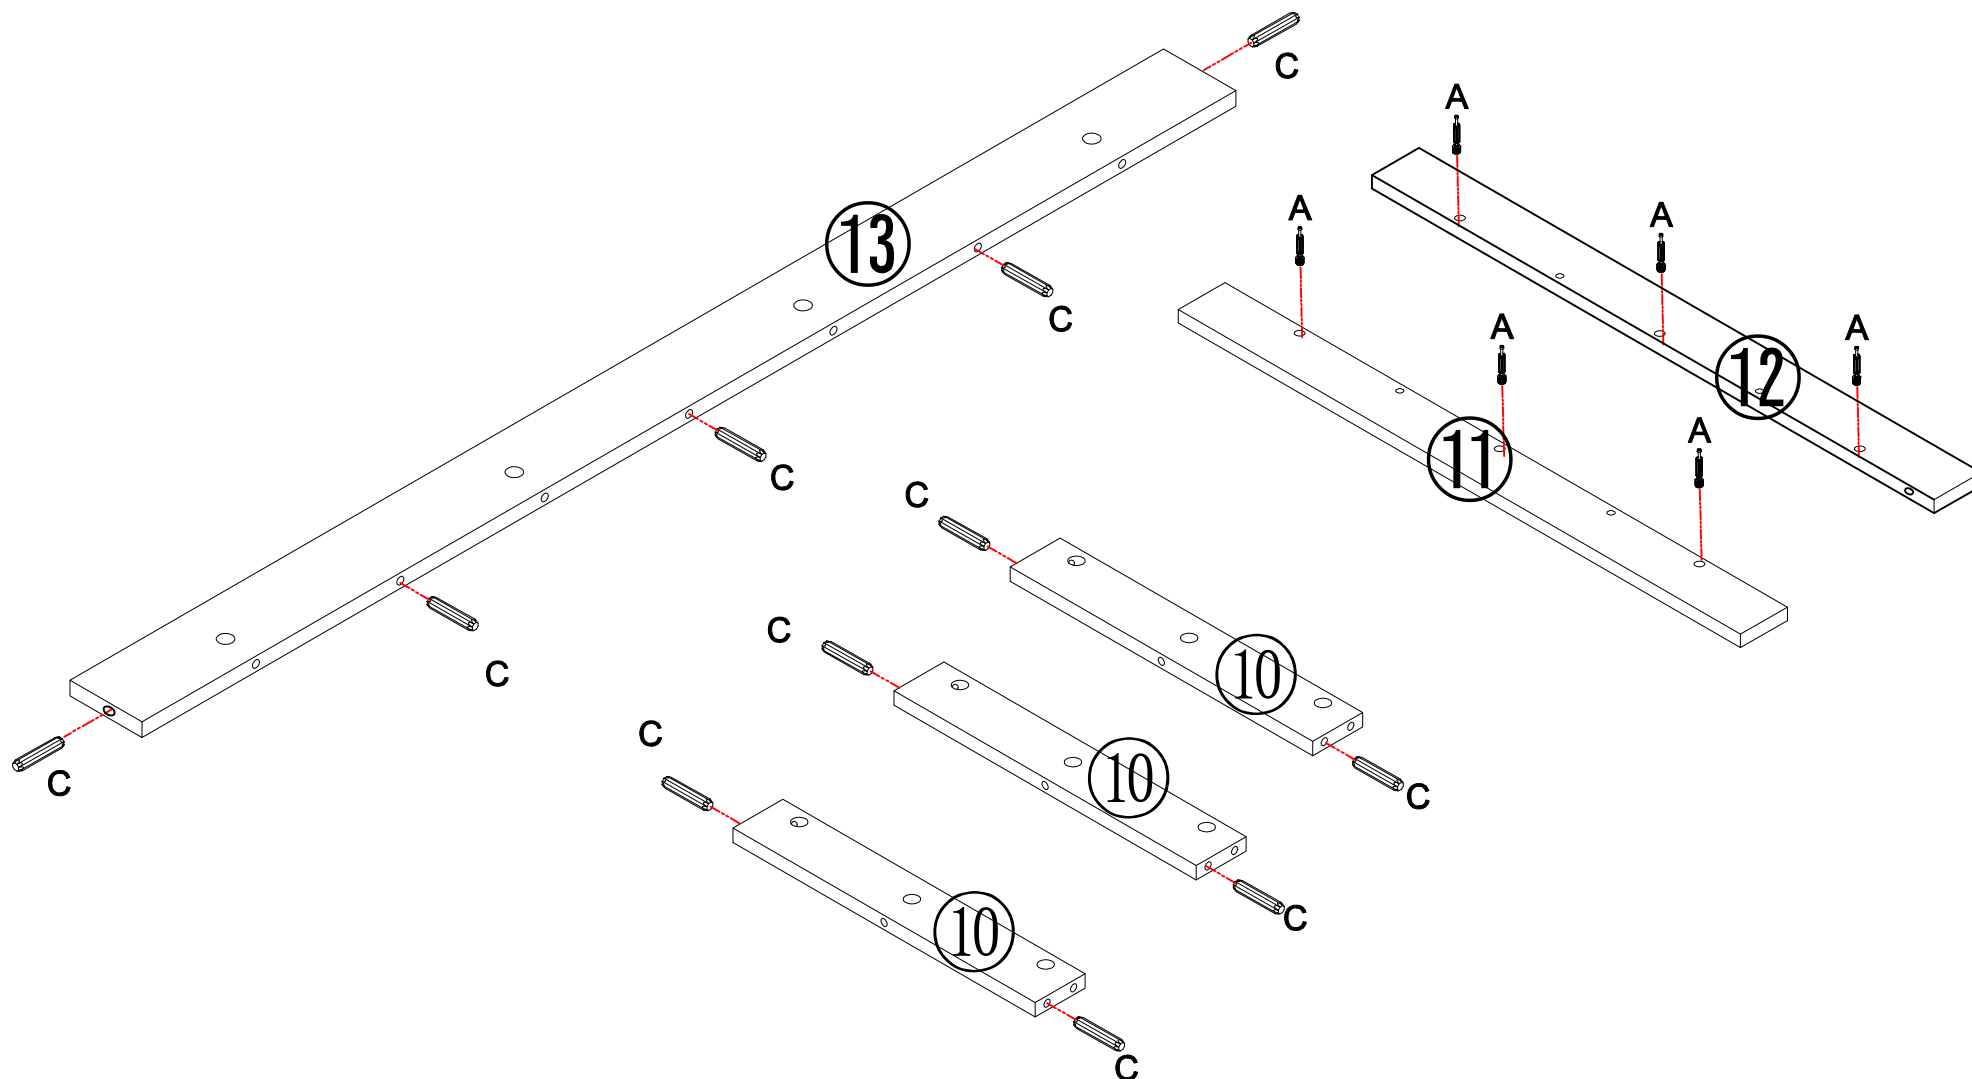**A*6****C*11**


Put A on board ⑪ ⑫

Put C on board ⑩ ⑬

4

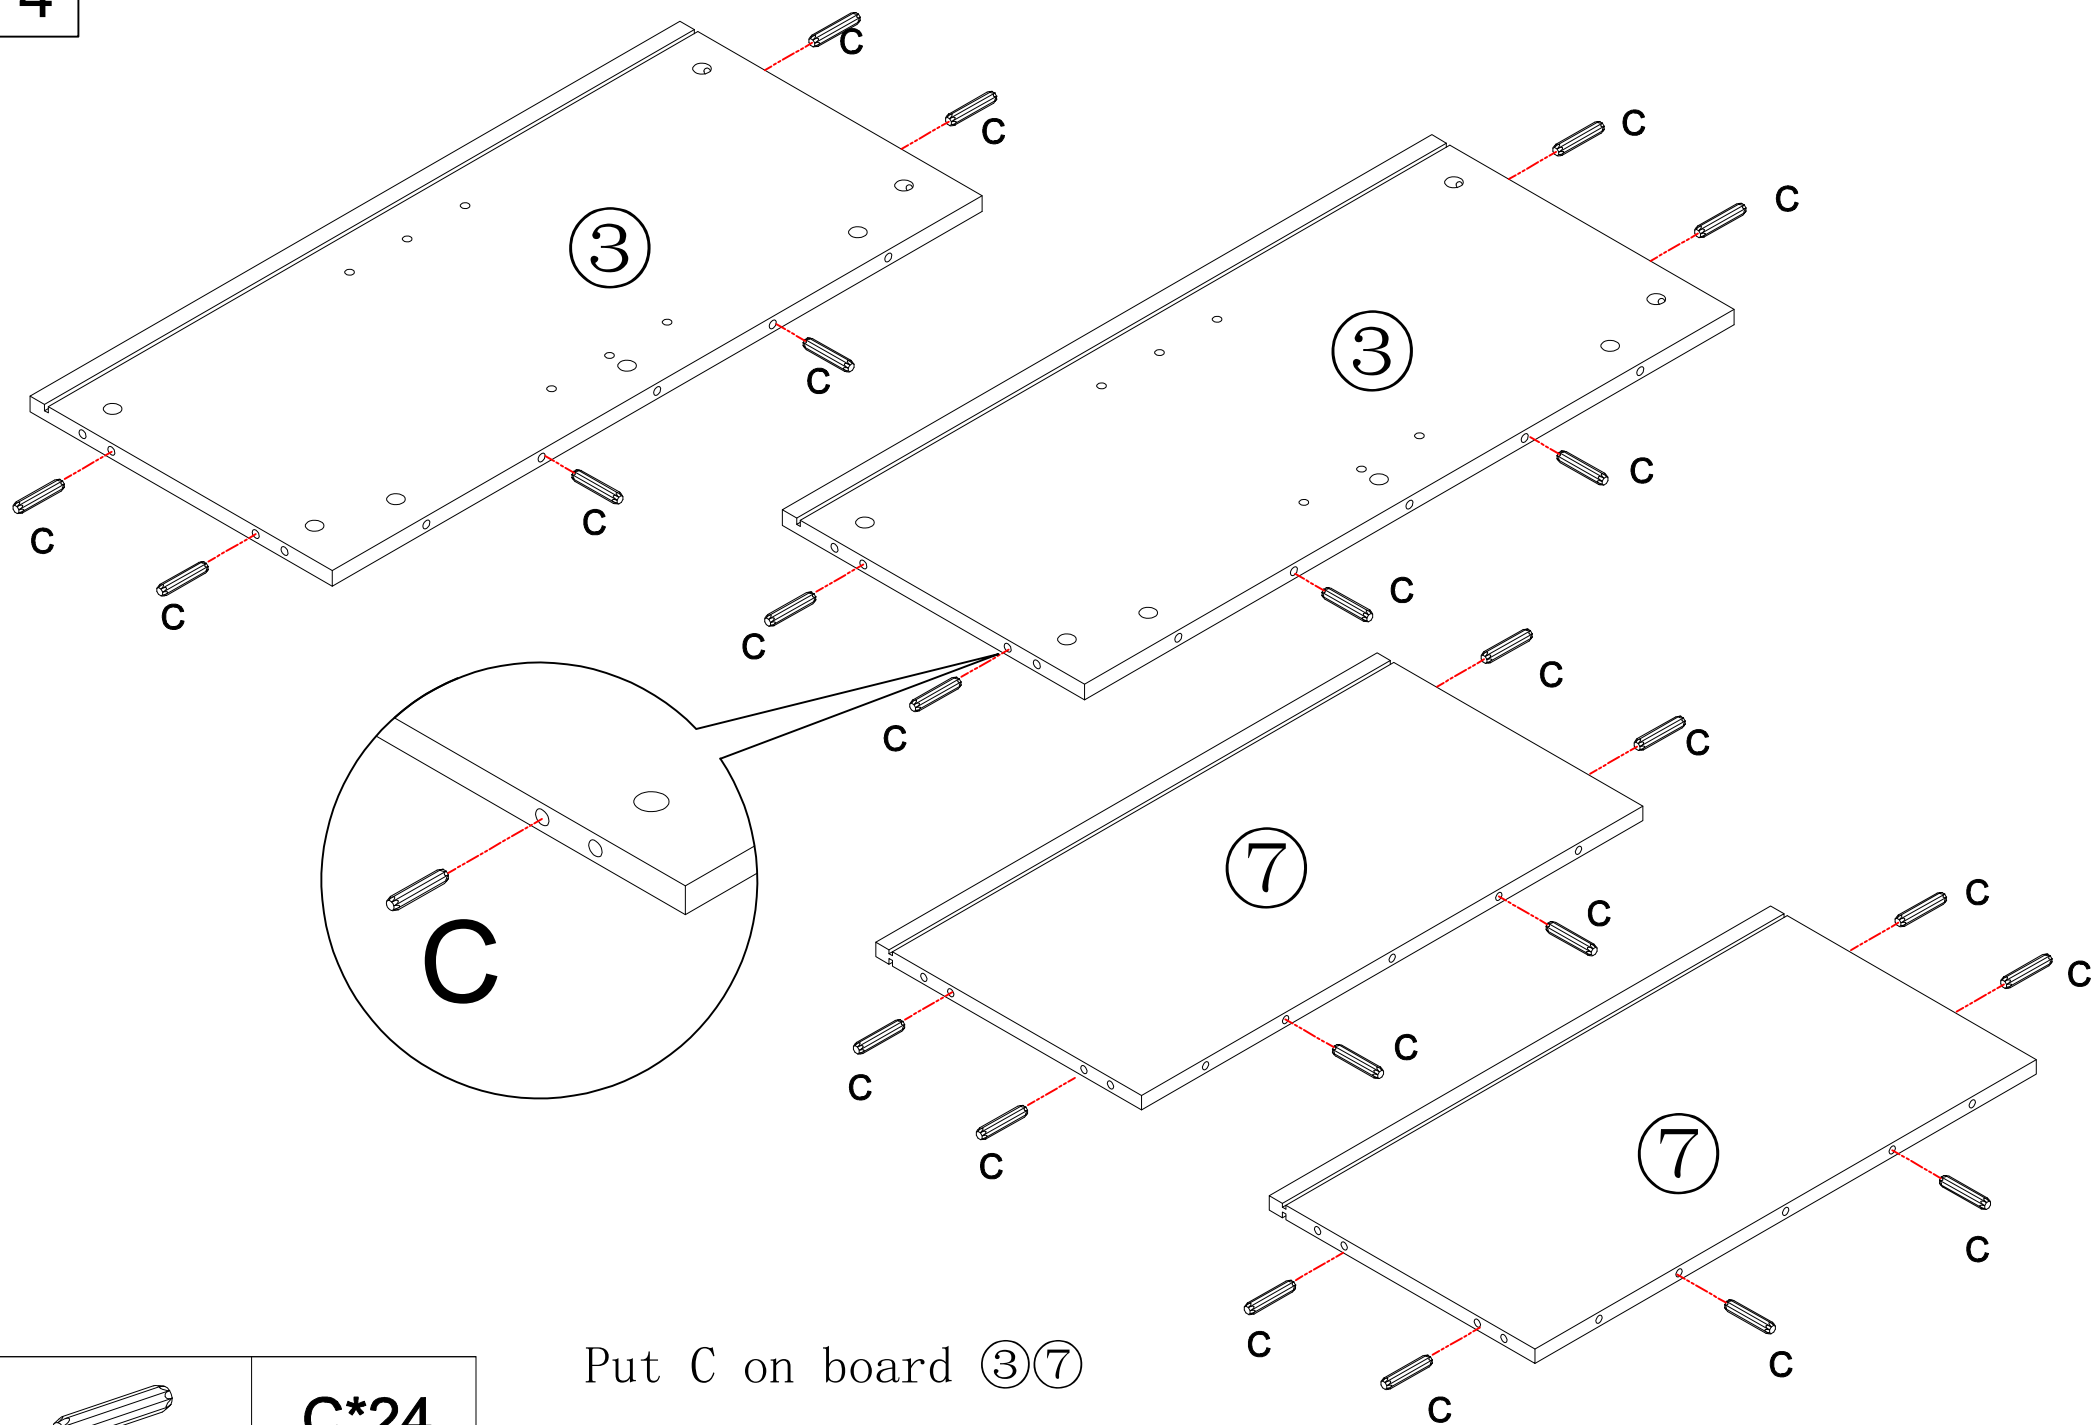


Make sure the arrow on the screw align to the hole on the side

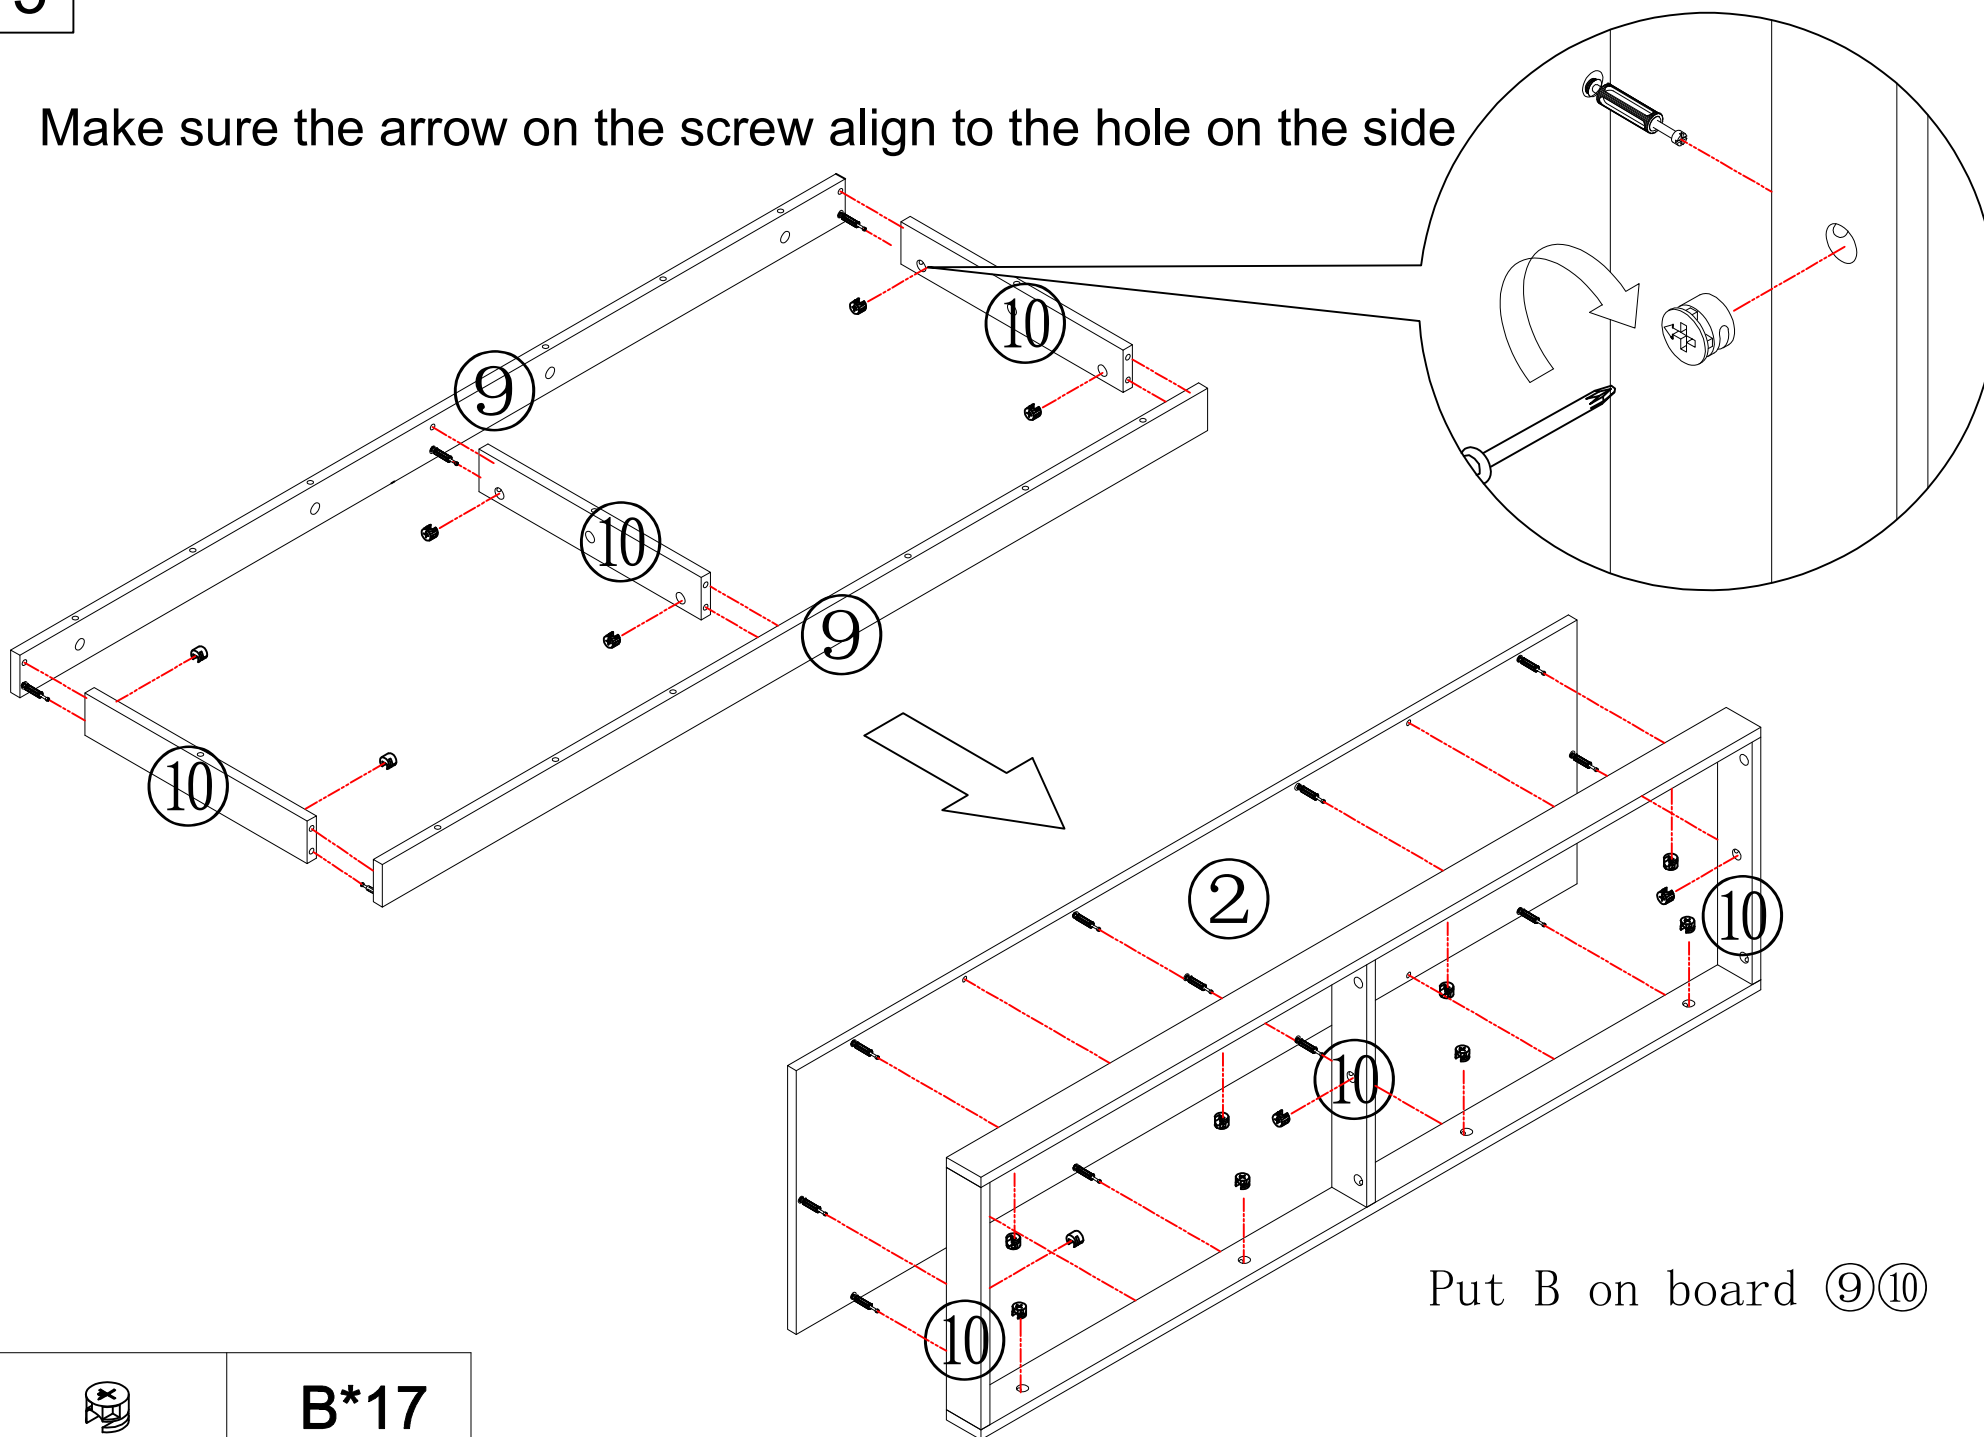

B*17

6



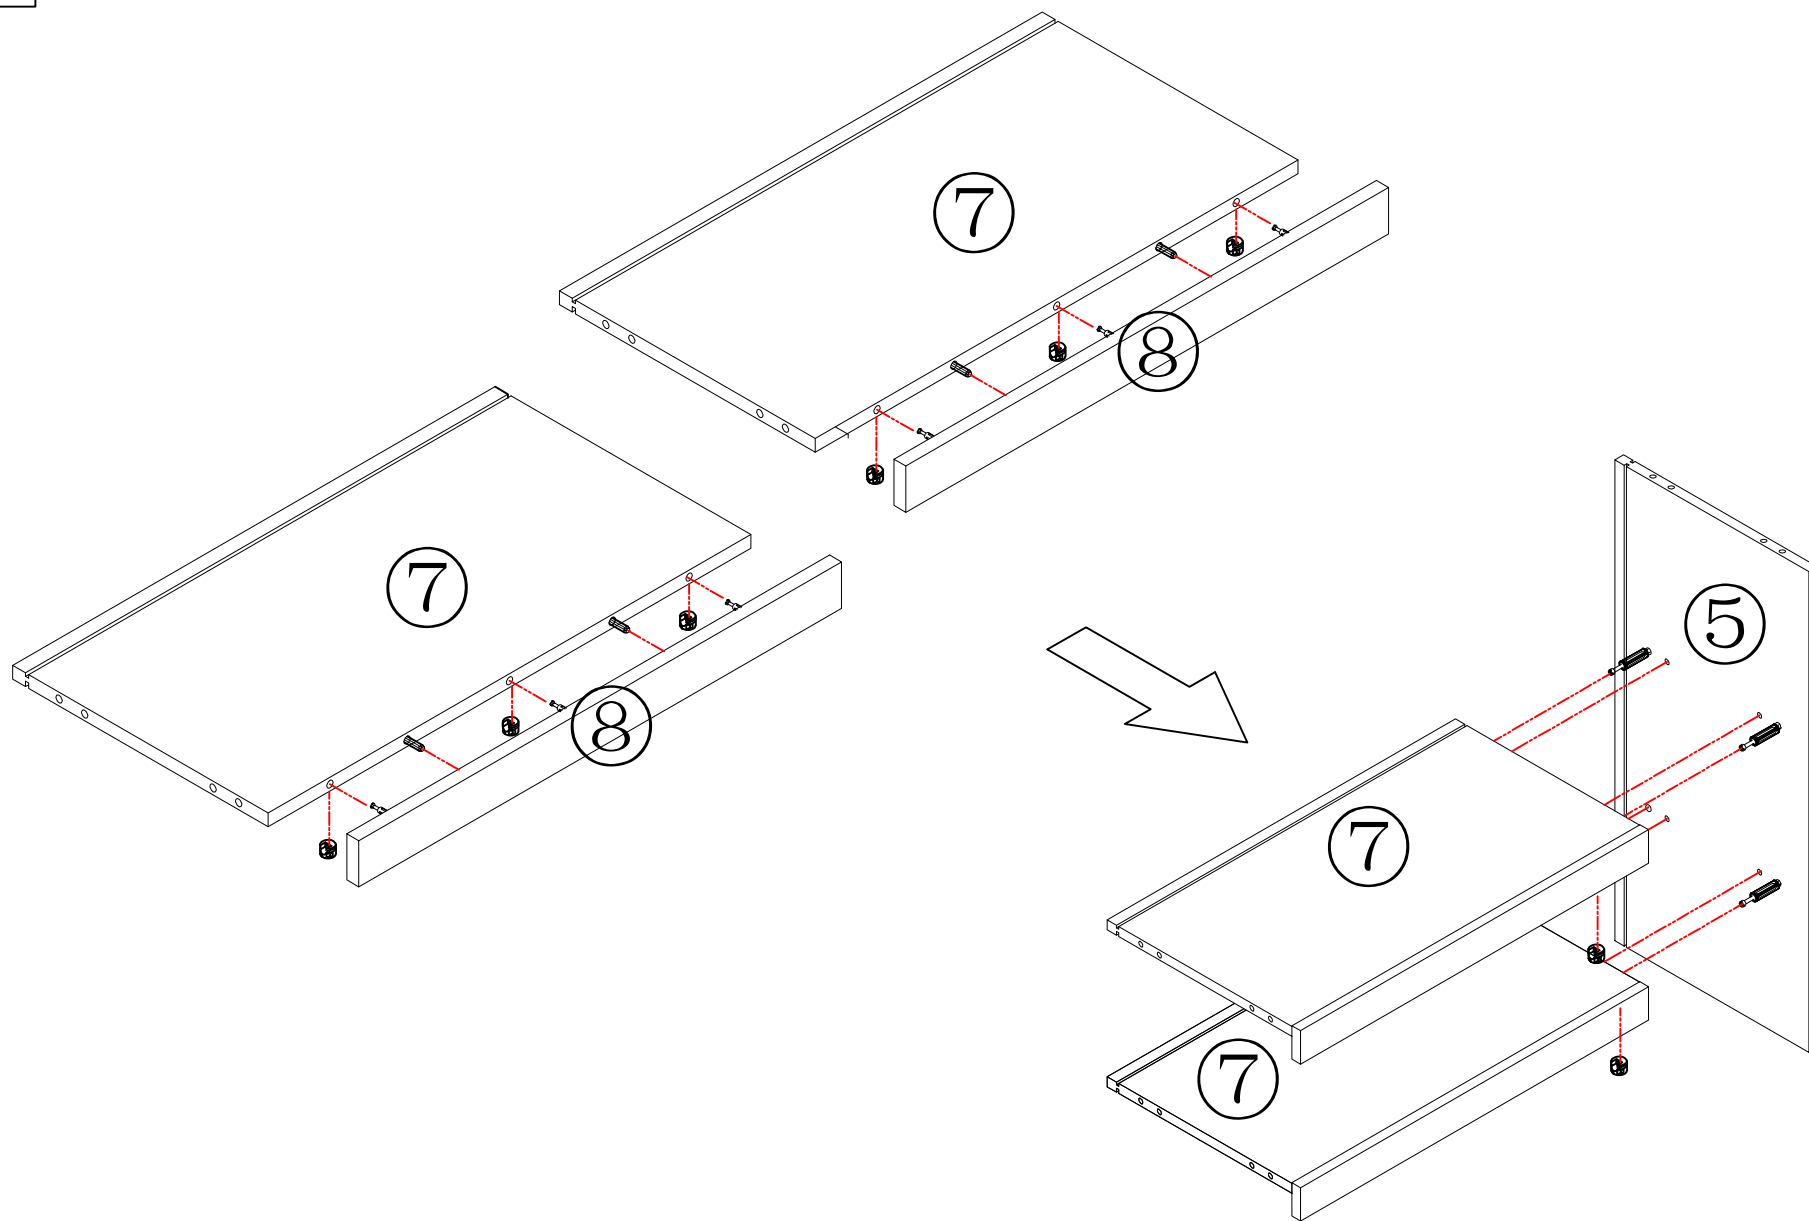


Put B on board ⑦



B*10


7

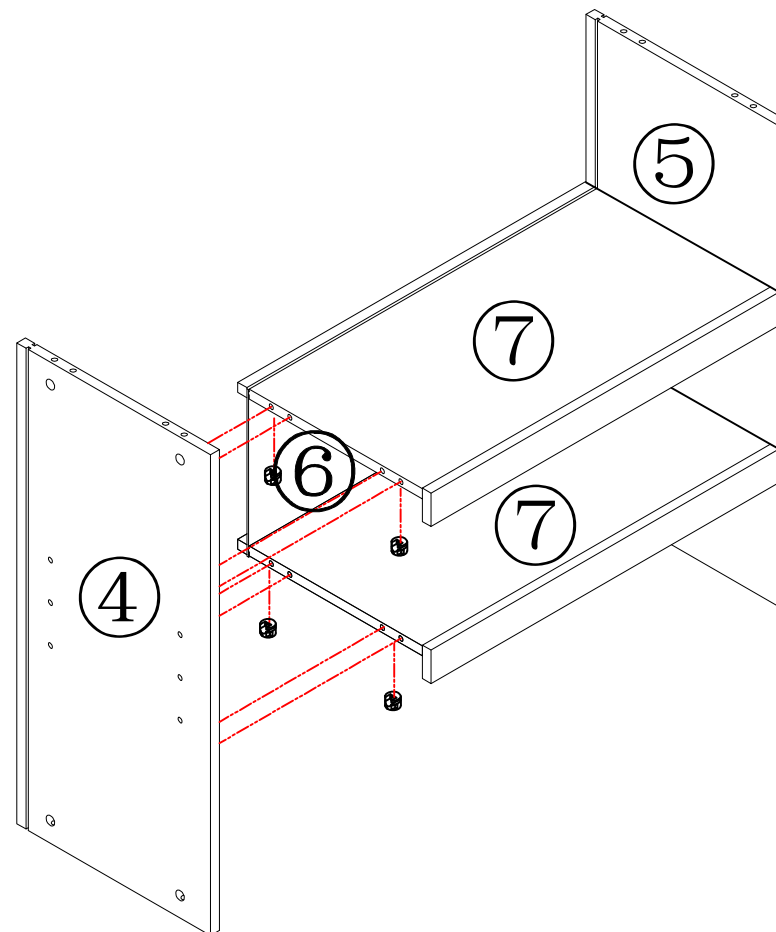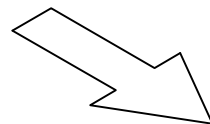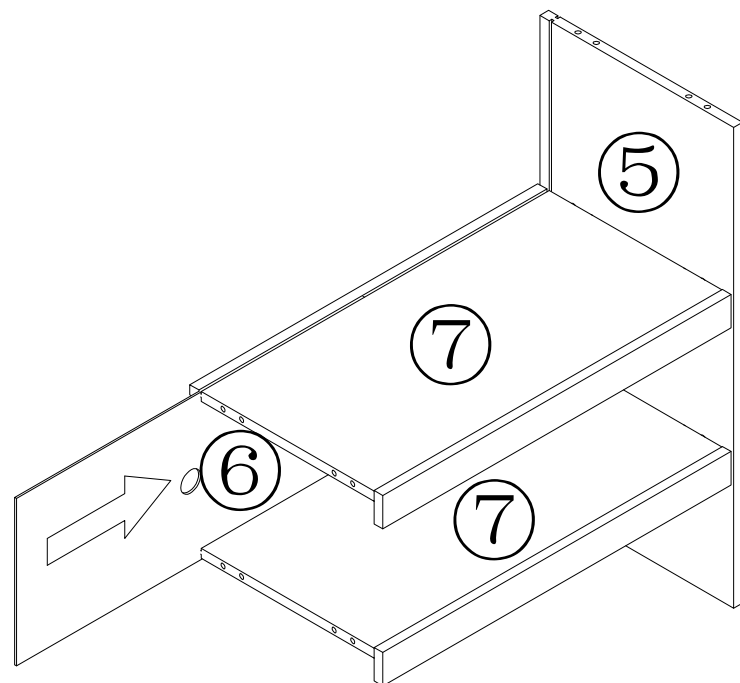

Put B on board ⑦




B*4

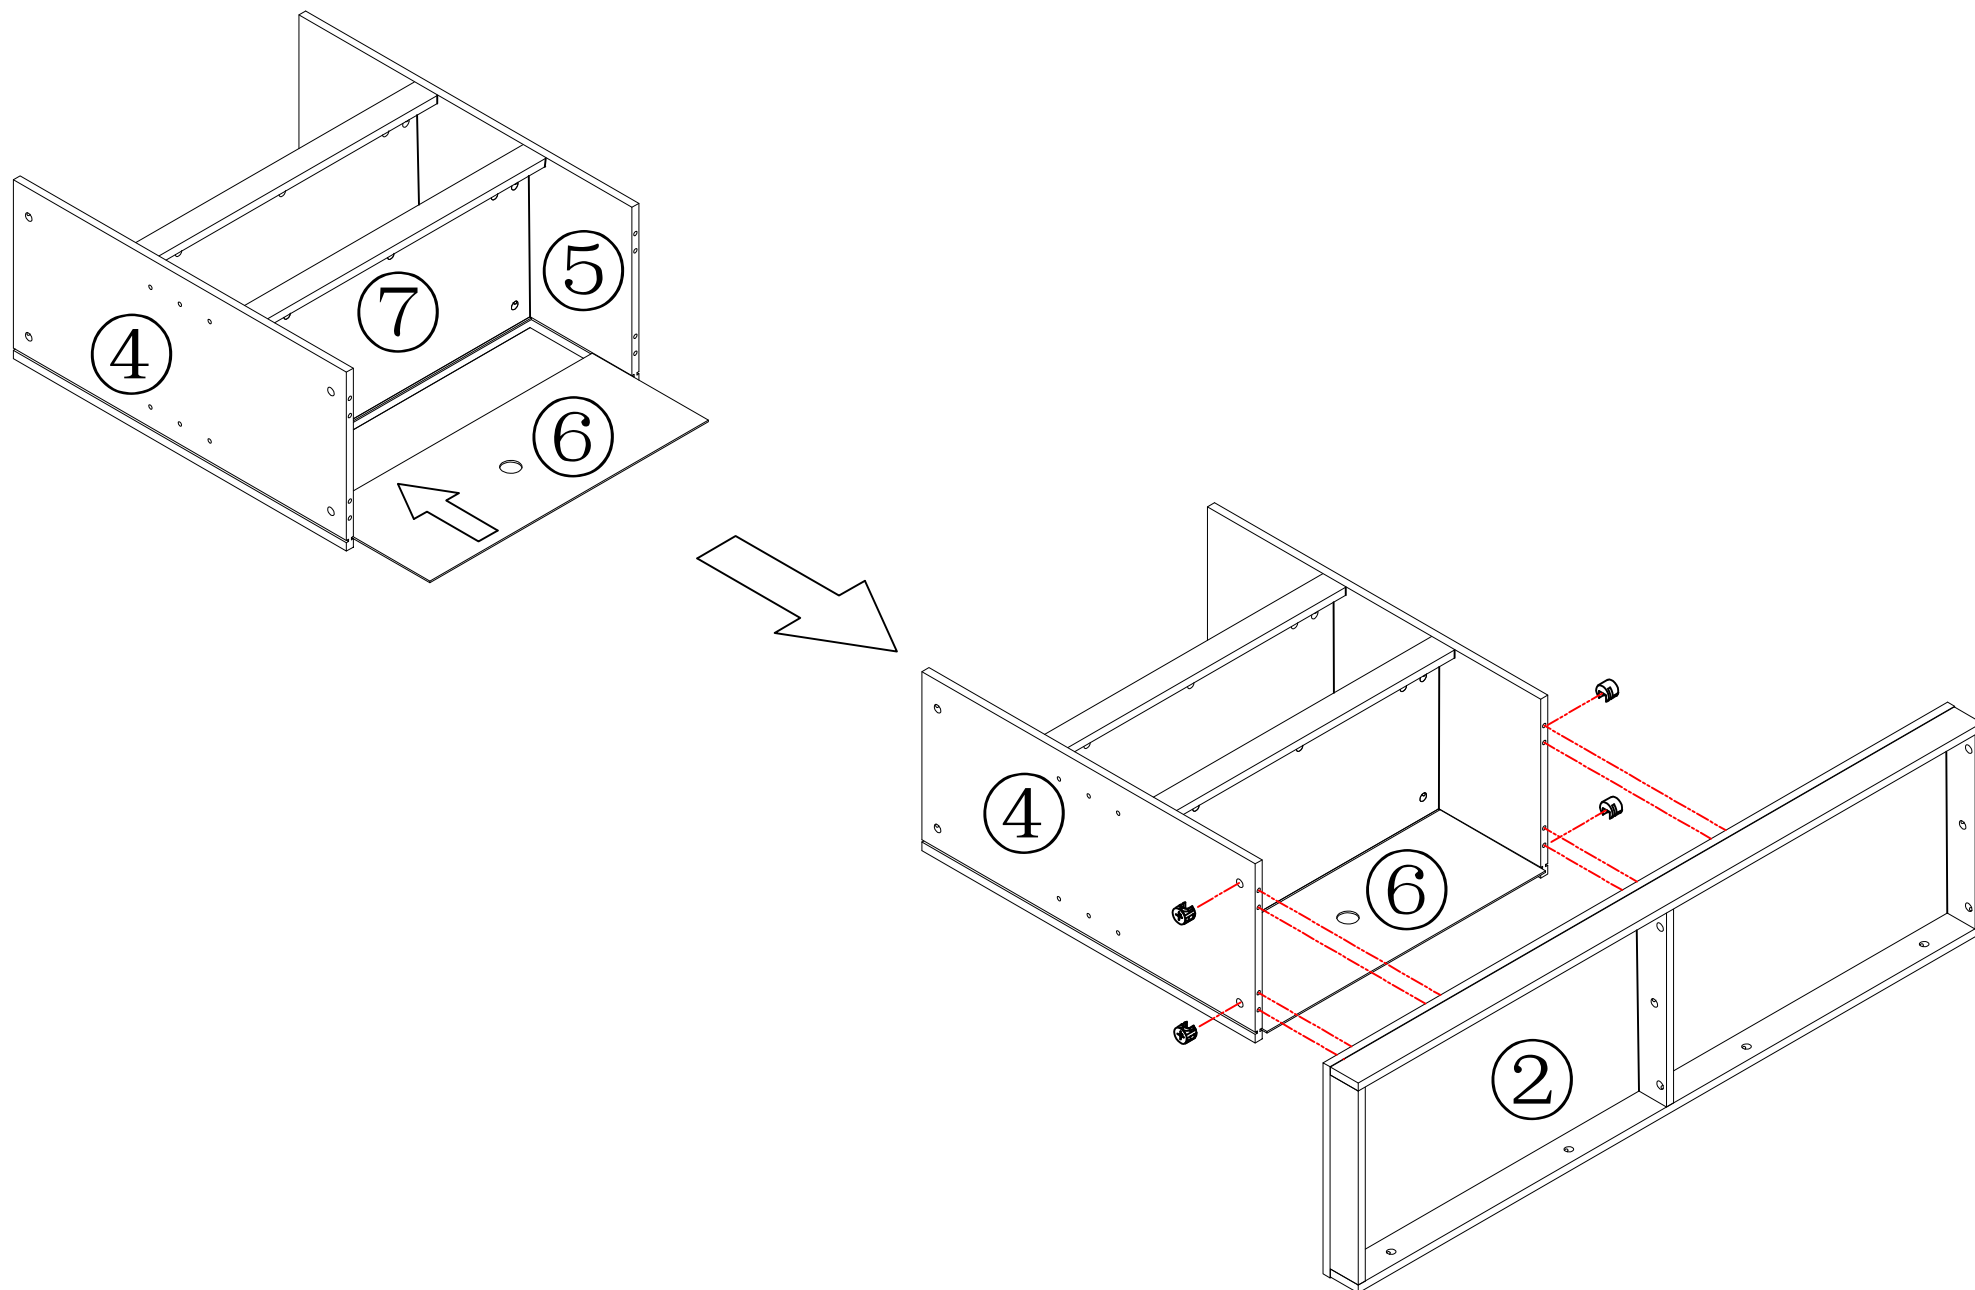**B*4**

Put B on board ④⑤



9

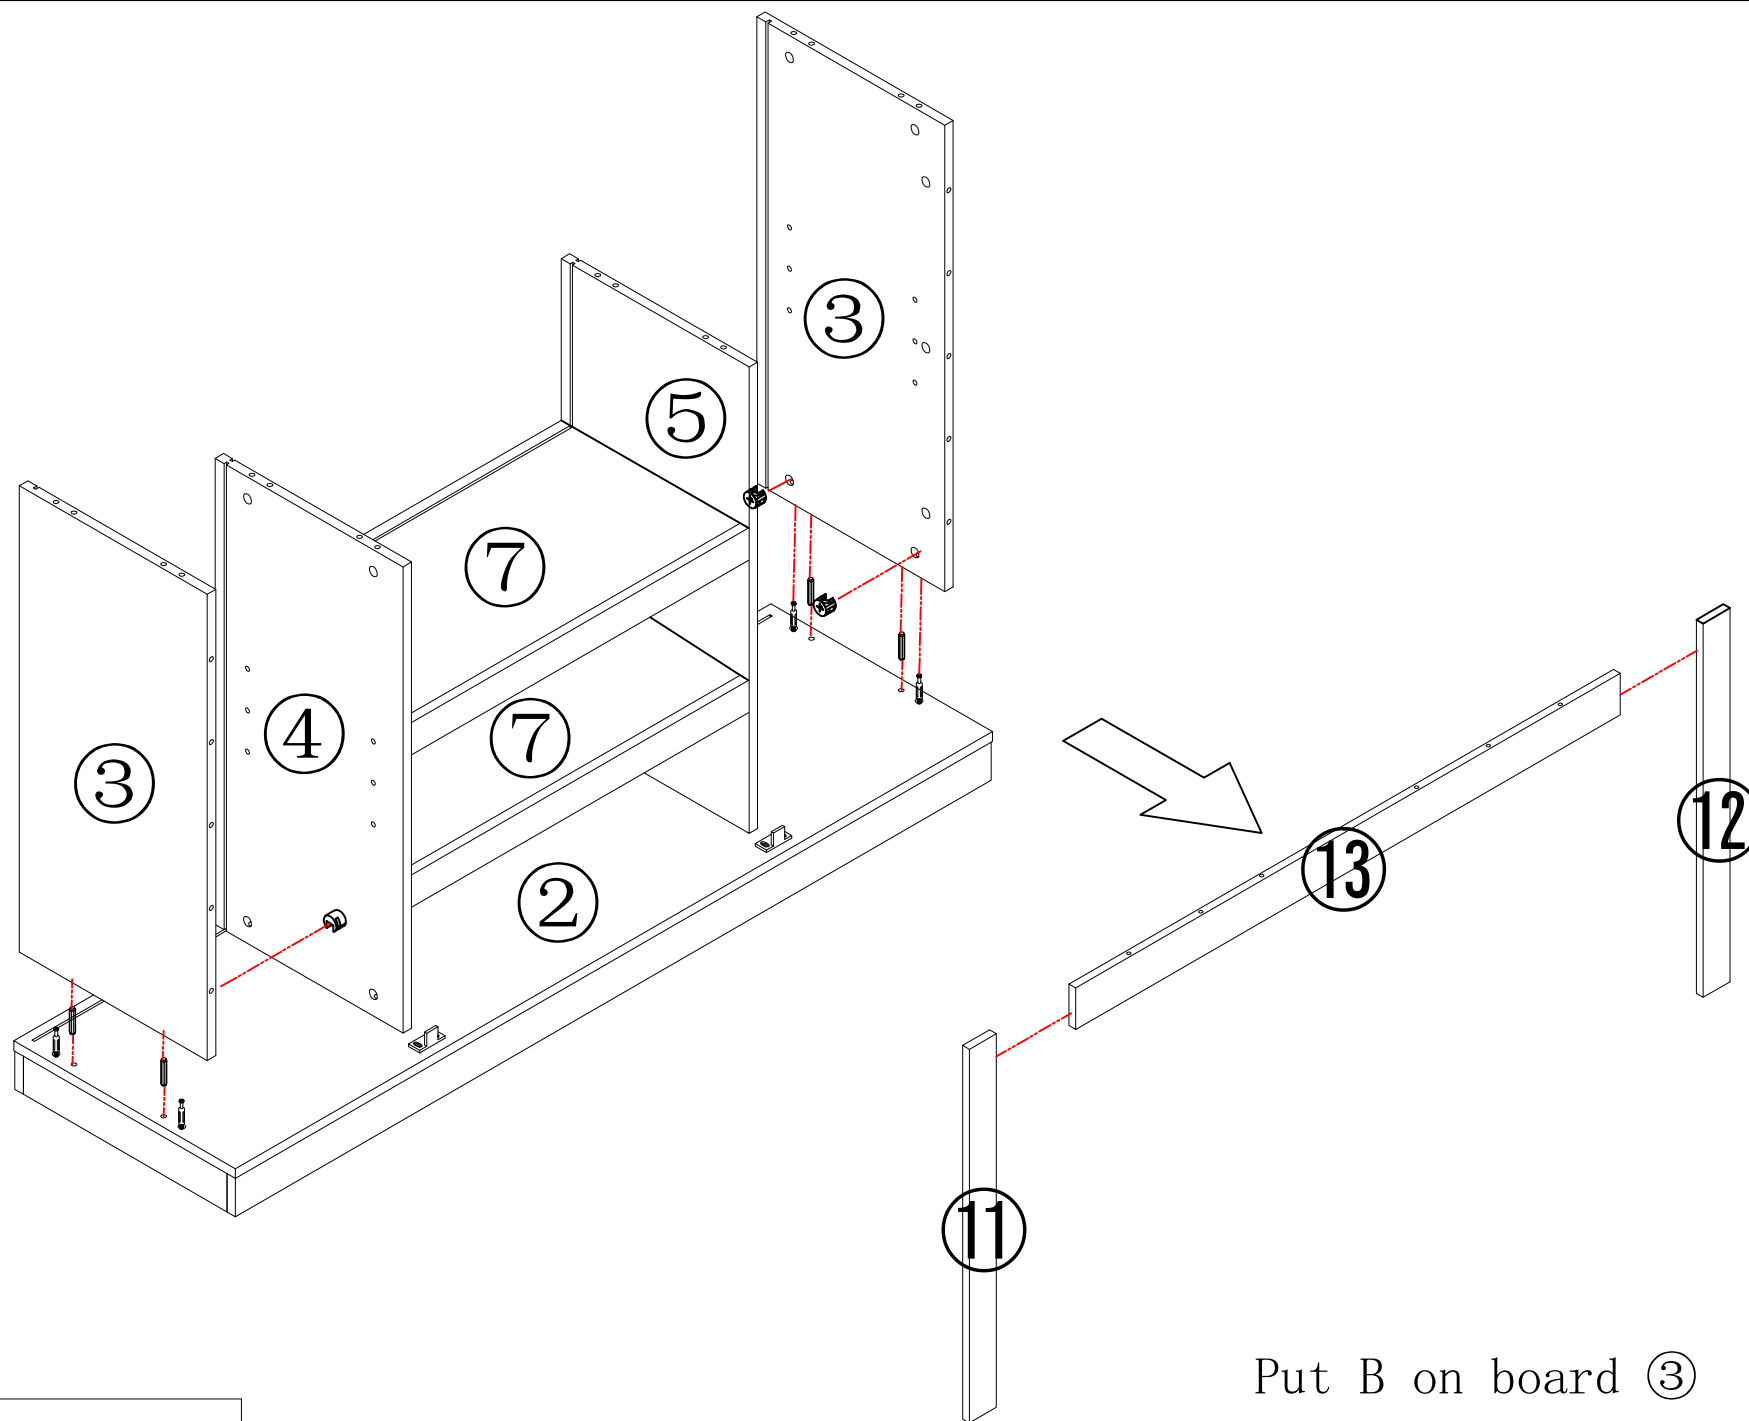

Put B on board ③





B*4

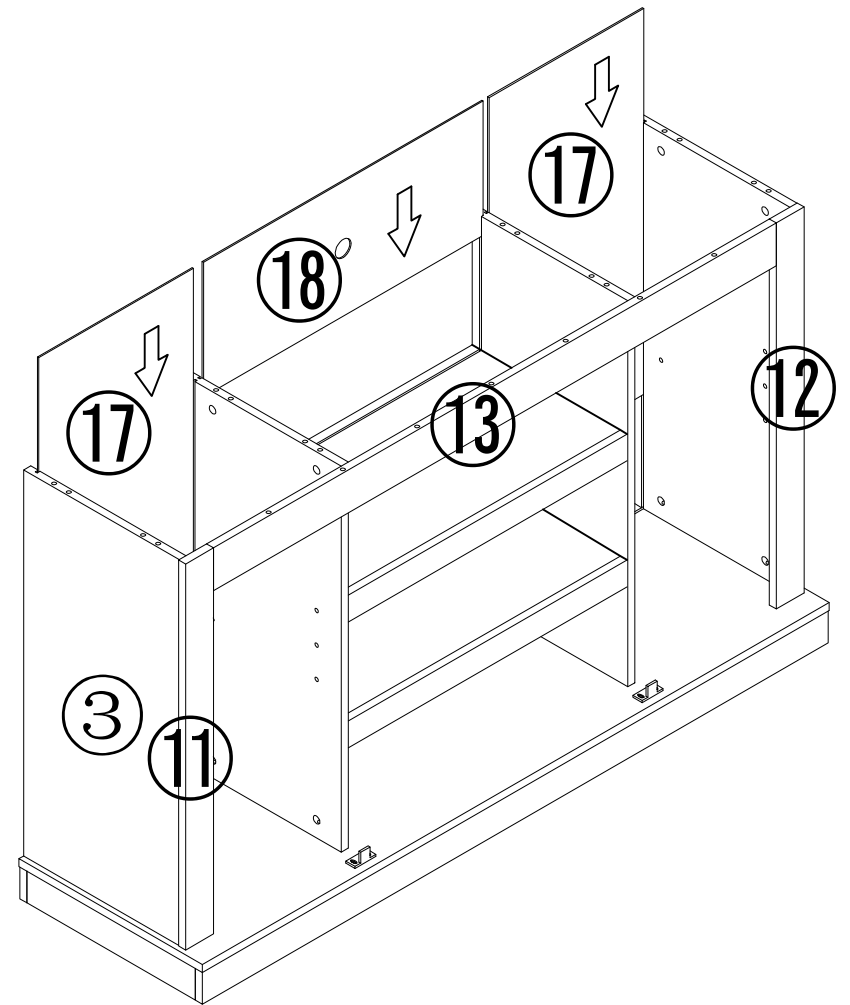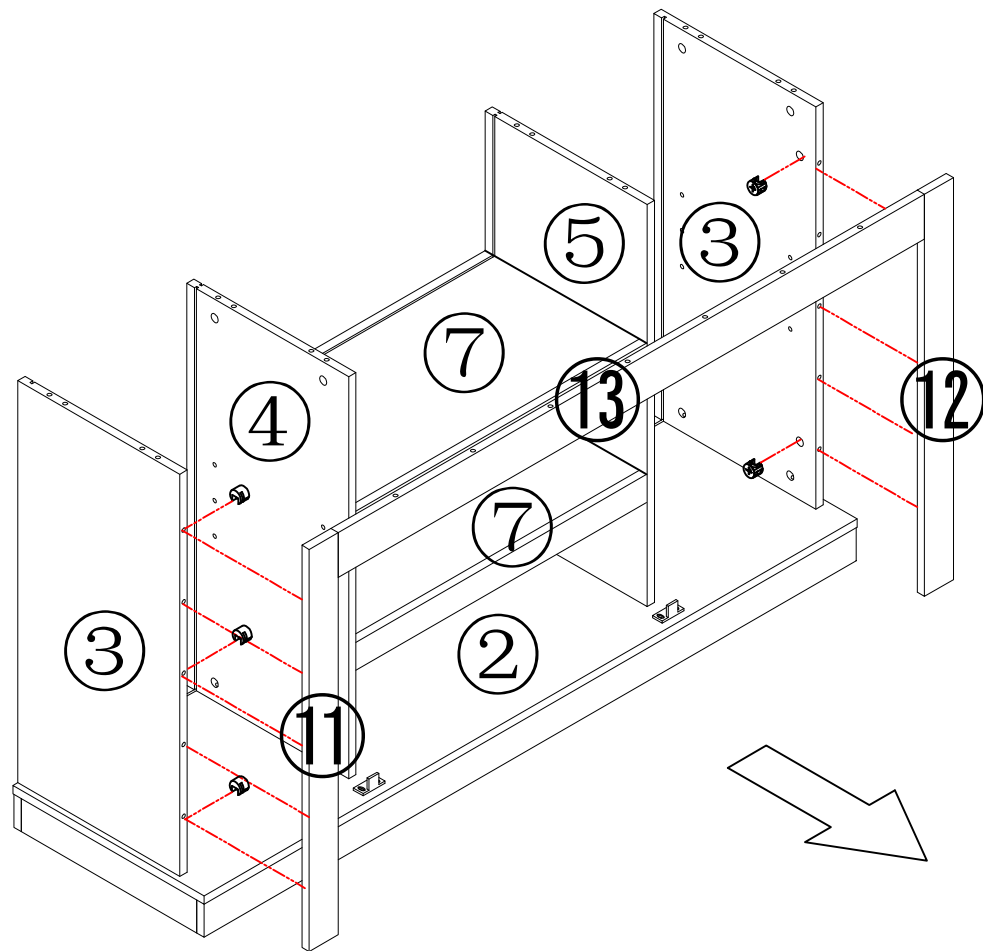


Put B on board ③





B*6

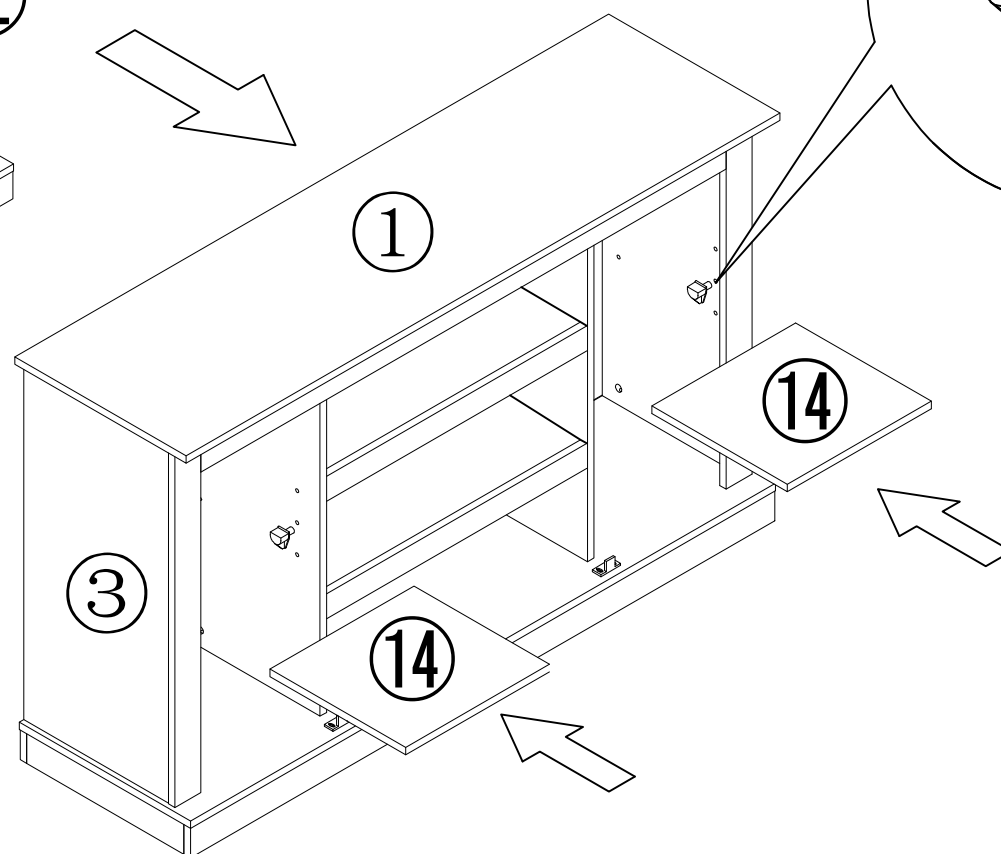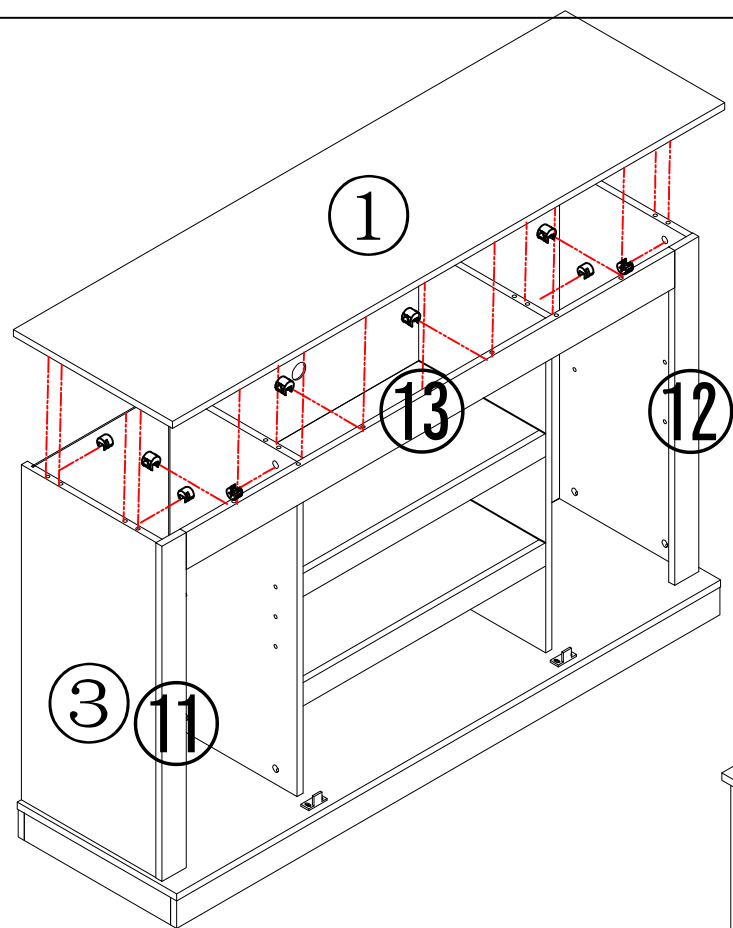**B*12****F*8**


Put B on board ③④⑤⑬

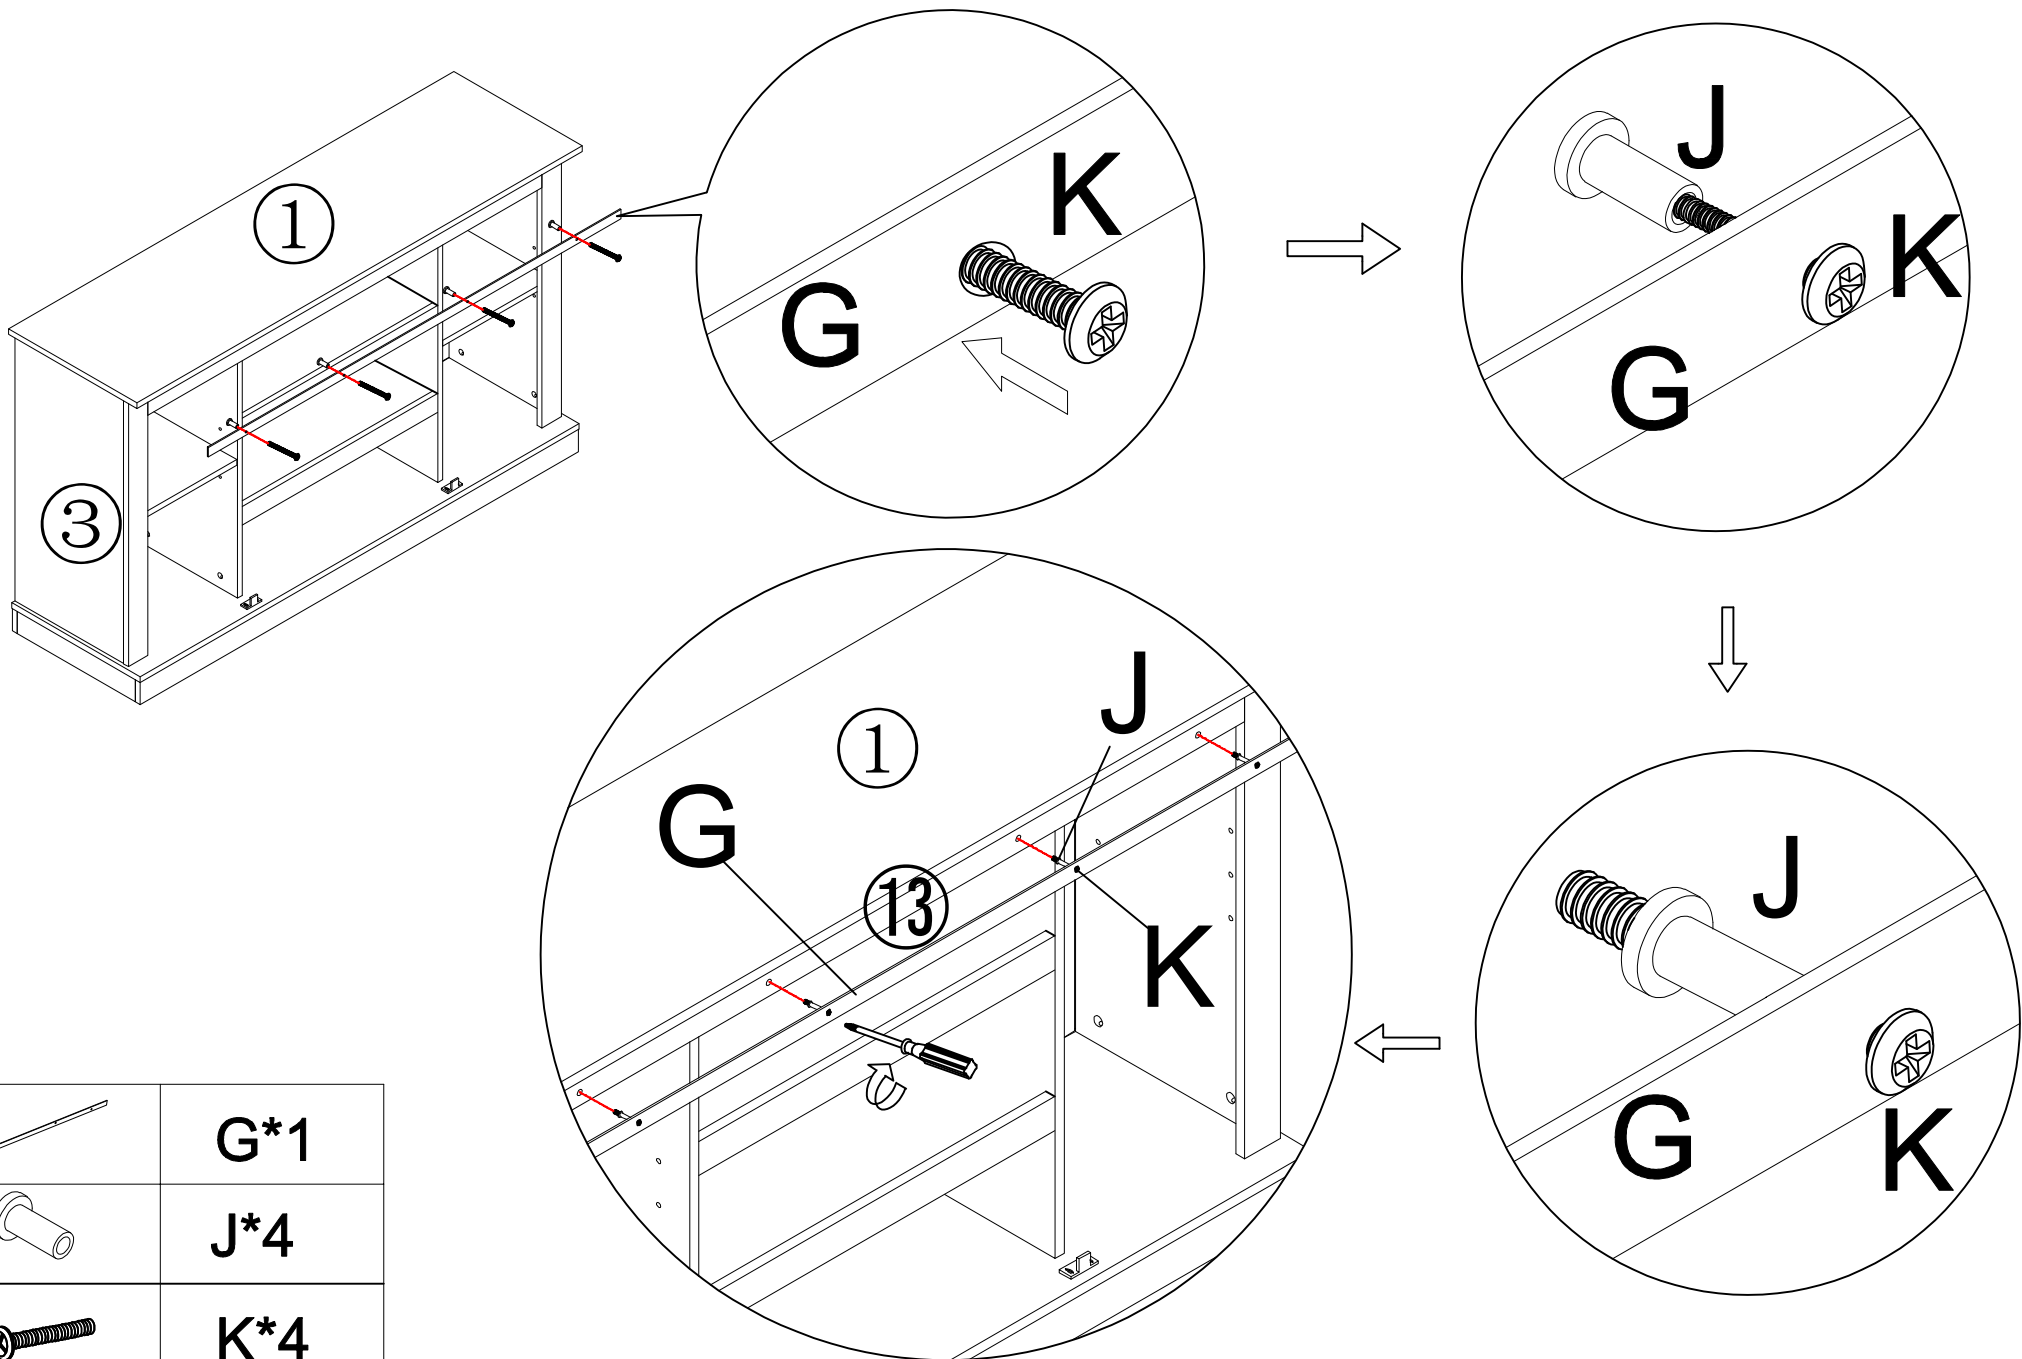

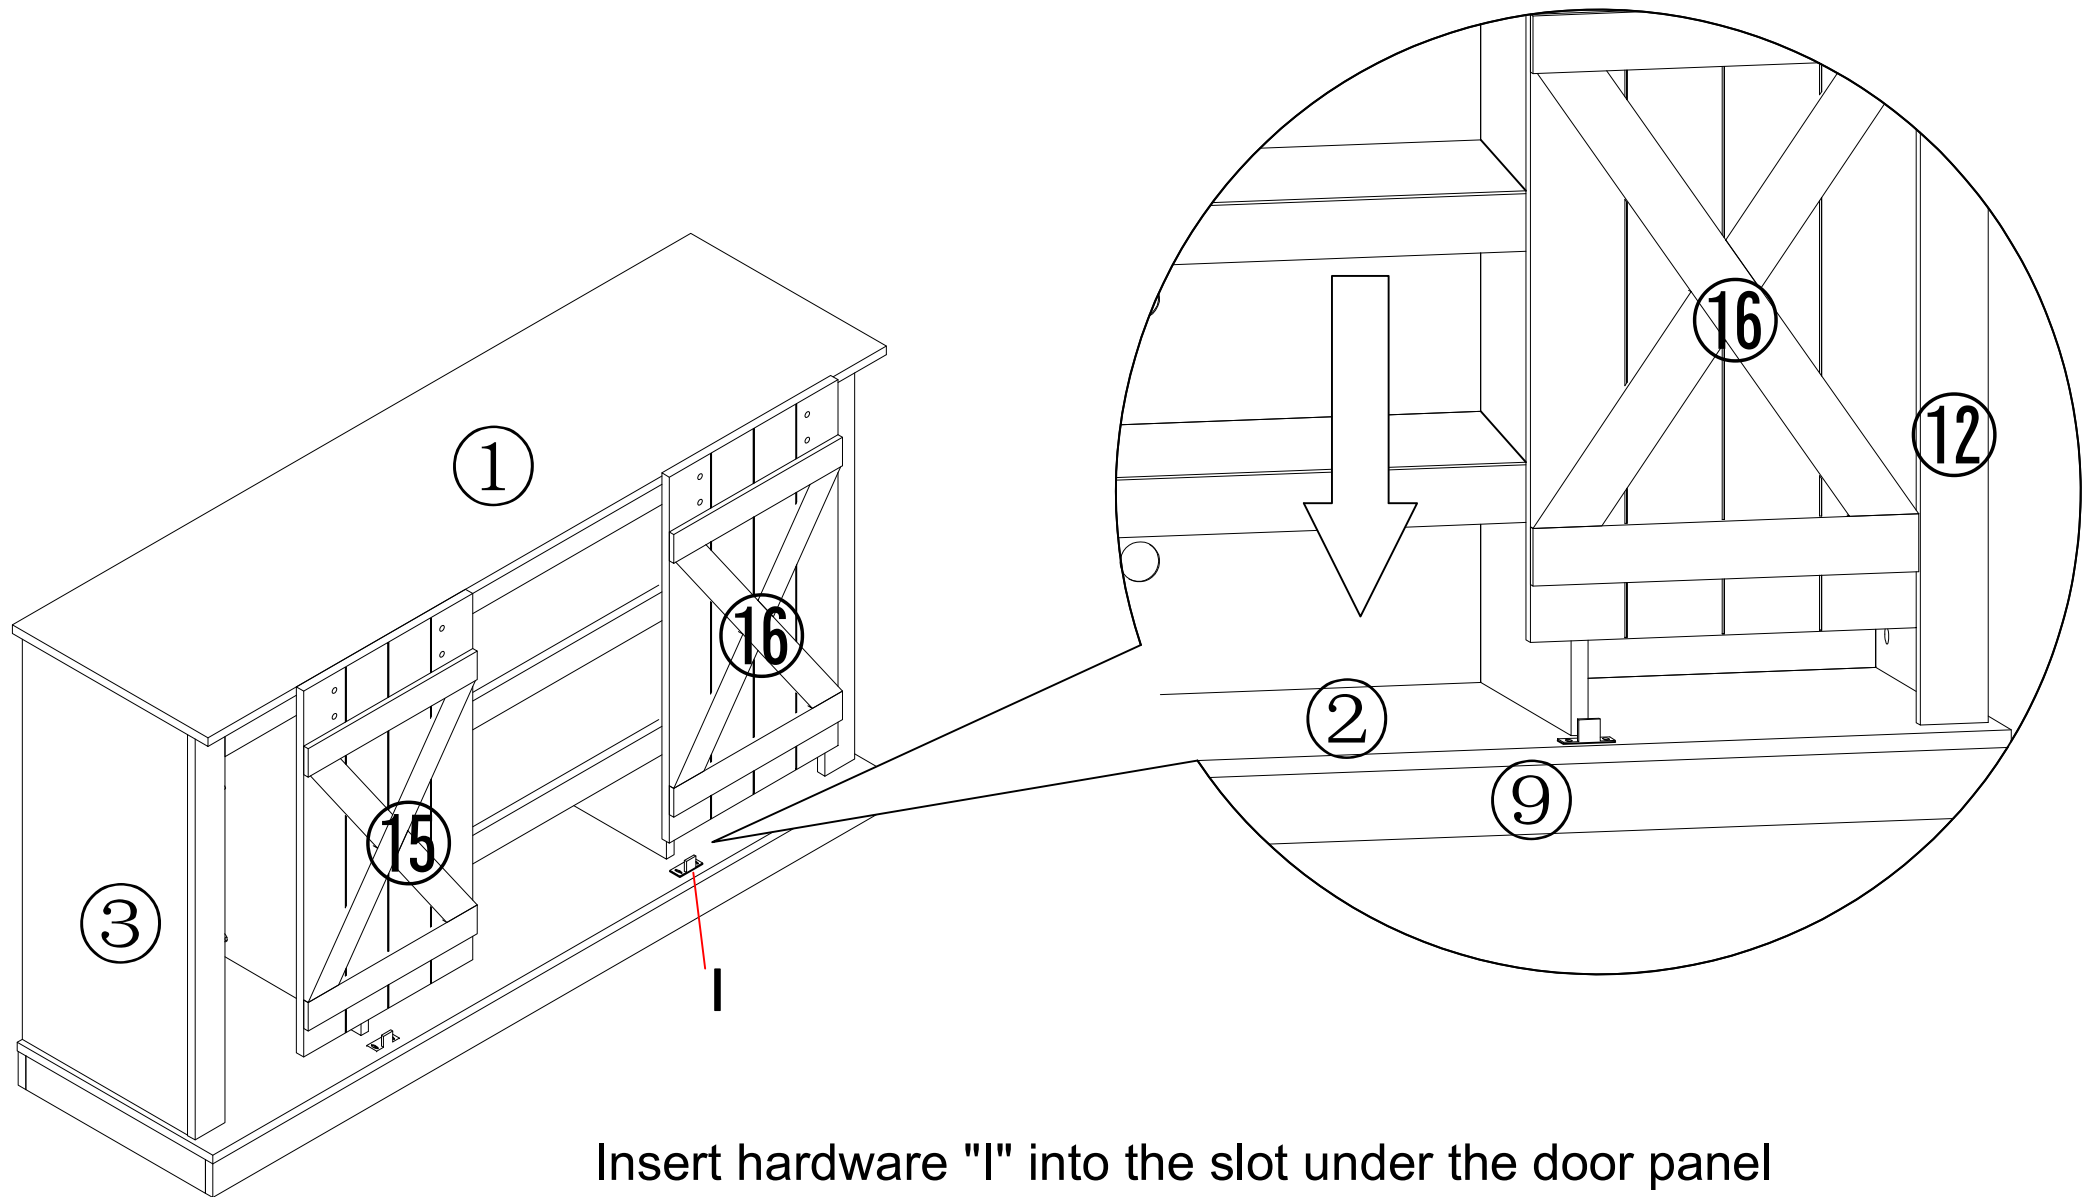

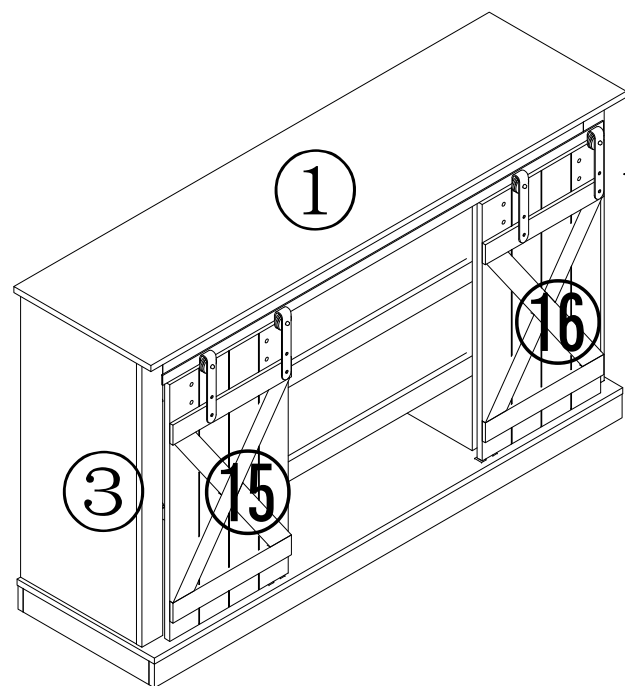


16 Door panel

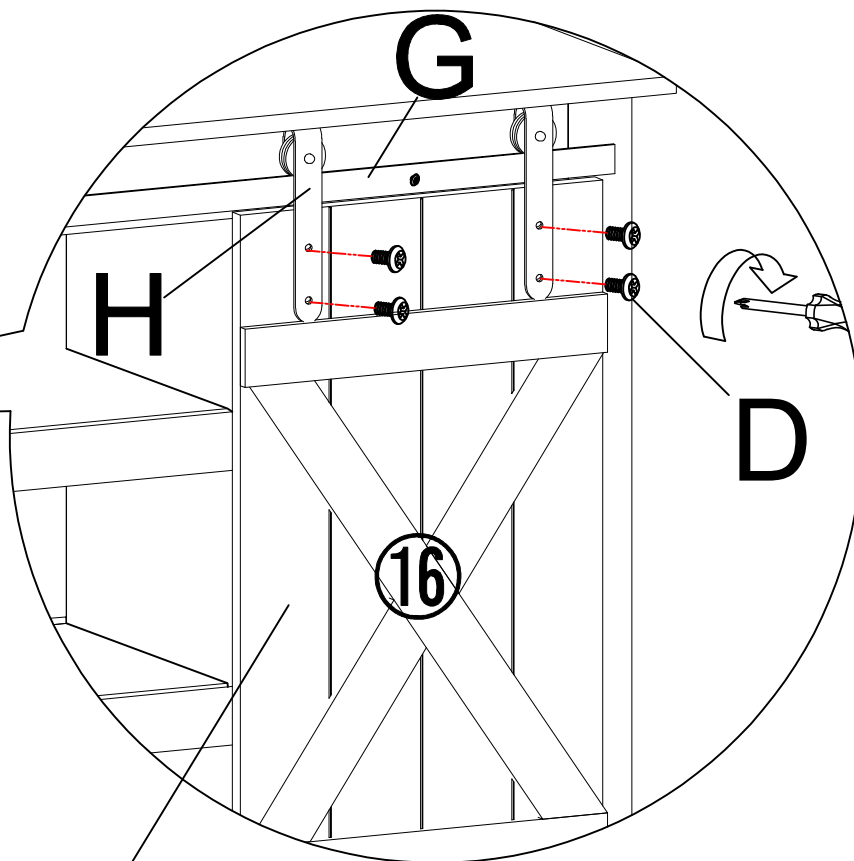

D*8



H*4

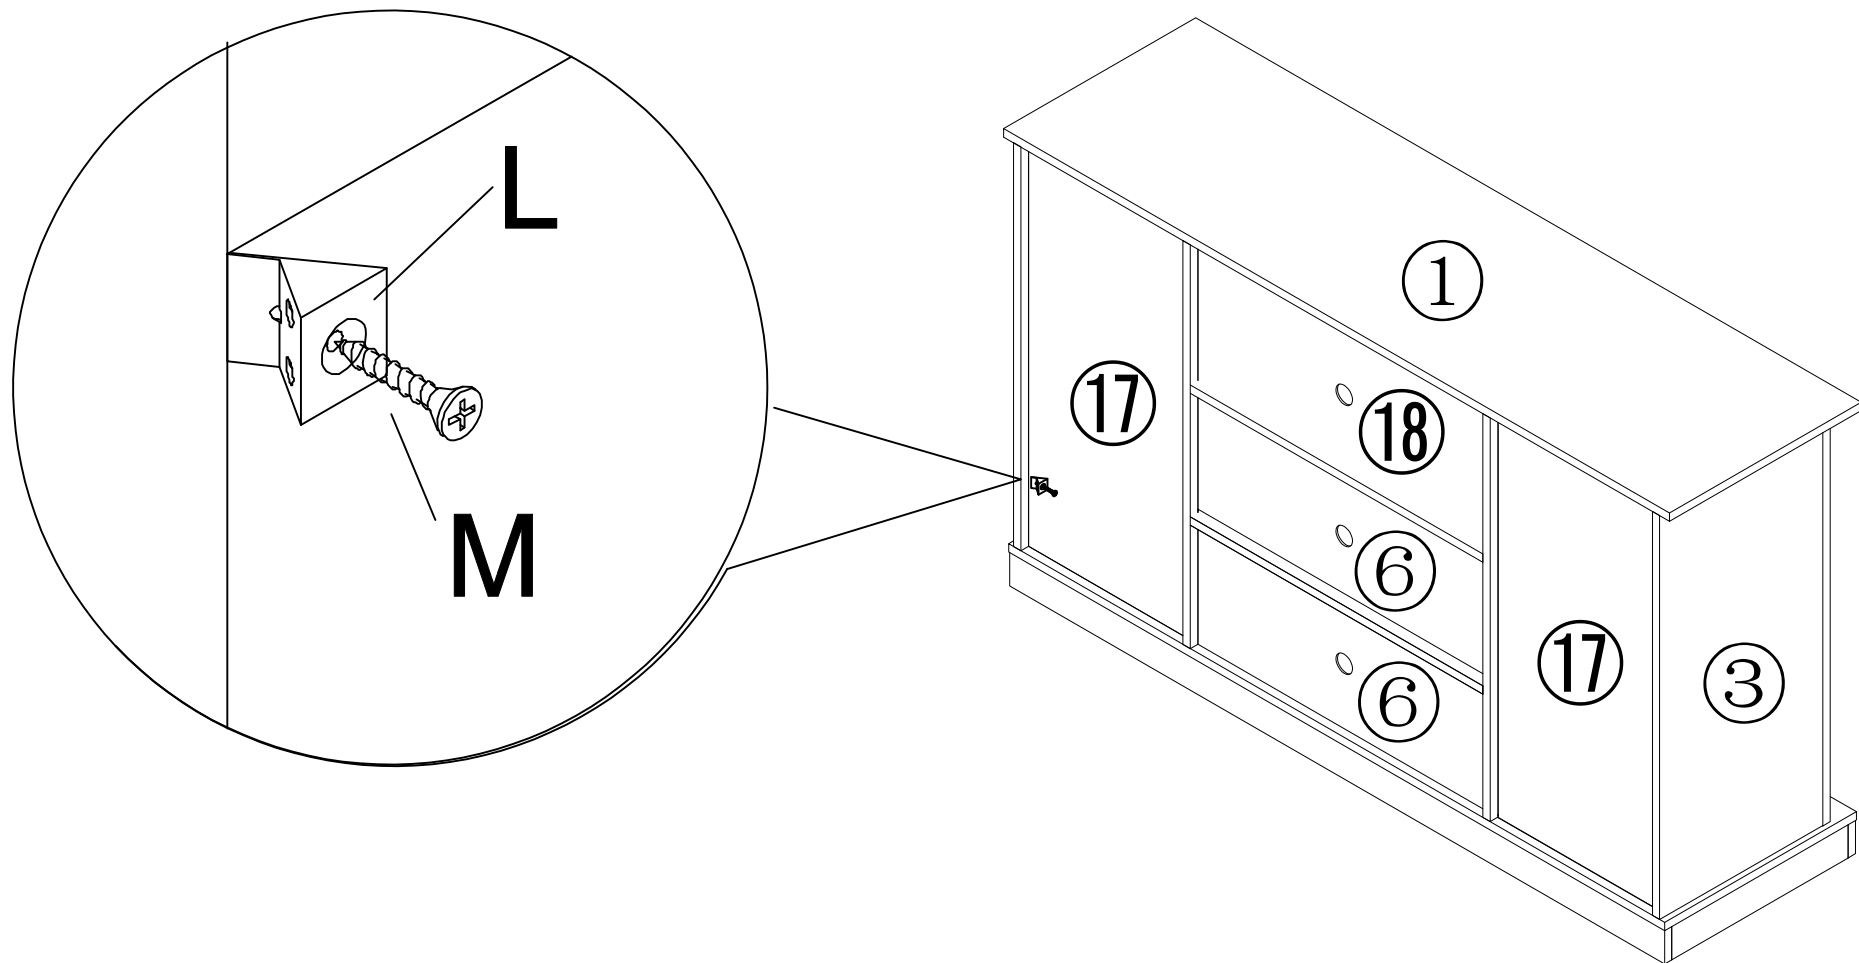

L*35



M*35

