
LAKELYN CHENILLE WINGBACK QUEEN BED

DESIGN # SFV4888-Q

Assembly Instructions

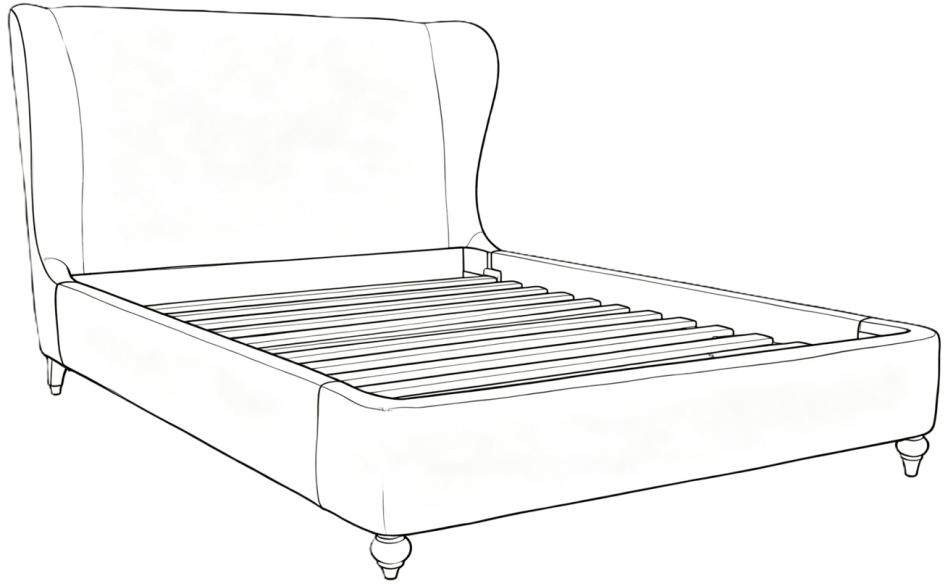

Need help?
Feel free to contact us via email or call
if you have any specific questions!
contact us:
cs@safavieh.com
866-422-9070


SAFAVIEH
COUTURE

Thanks for bringing Safavieh Couture into your home

Every thing we make is incredibly simple to set up, including your new bed. You won't need any additional tools.

Parts List


A x 1
HEADBOARD

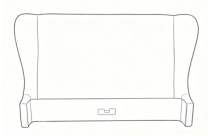


B x 1
FOOTBOARD




C x 2
SIDEBOARD



D x 4
BED LEGS



E x 1
SLAT



F x 1
CROSS SLAT




G x 2
SUPPORT LEG FOR CROSS SLAT



Hardware List

HW1 x 13
Phillips Screws 4*2*40mm



HW2 x 1
Wrench




HW3 x 1
Allen Key



1

Screw 2 of legs (D) in a clockwise direction into the headboard (A).

A

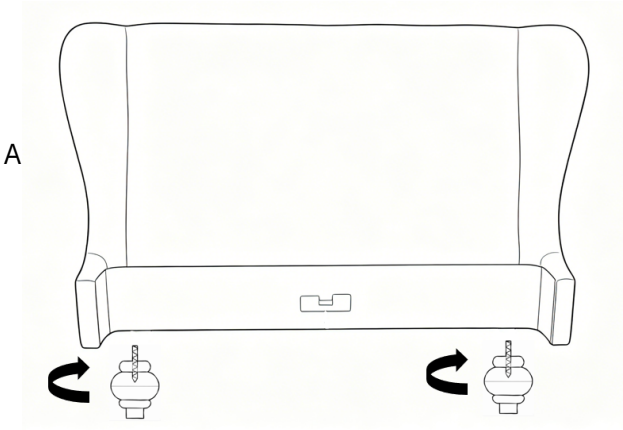


D

2

Screw 2 of legs (D) in a clockwise direction into the footboard (B).


B

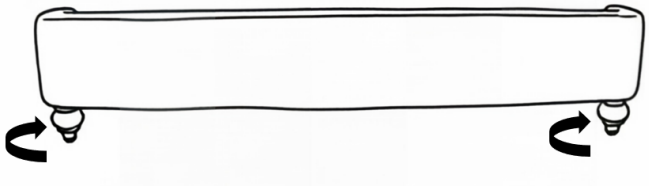

D


3

Attach the 2 siderails (C) to the headboard (A) and footboard (B) by sliding the metal plates on the siderails onto the screws as shown. If its hard to install, you can unscrew the screws to attach the metal plates, then use the wrench (HW3) to completely screw in the screws.

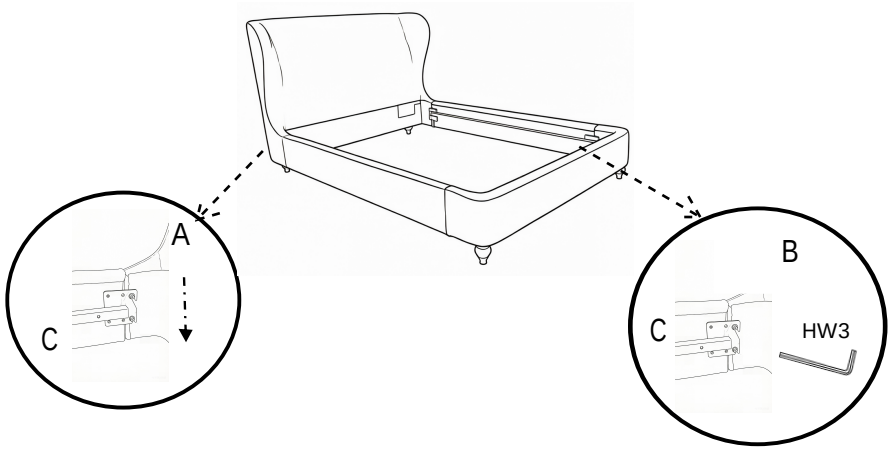


4

Screw the support legs (G) into the cross slats (F). Place them in the center of the bed.
Place the slats (E) on top of the support legs as shown.

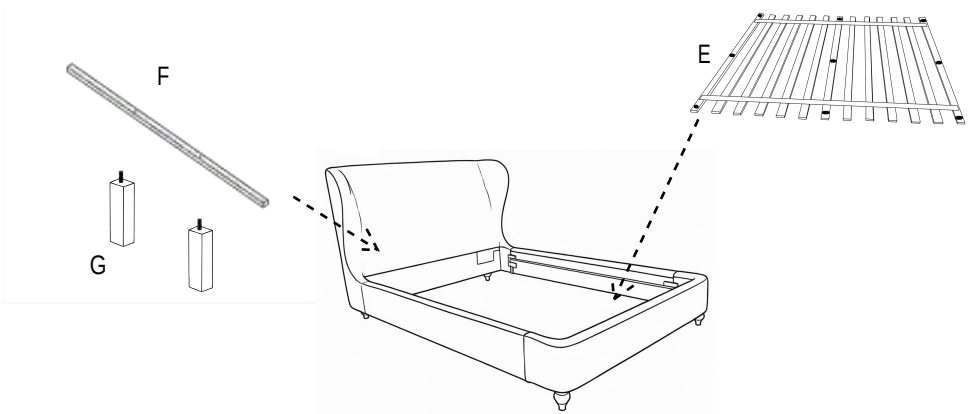

5

Attach the slats (E) to the bed by using the wrench (HW2) to screw in the 9 screws (HW1) in the 9 spots shown in step 4.
Secure the siderails(C) to the headboard(A) and footboard(B)by using wrench(HW2) to screw in the 4 remaining screw(HW1) into the spots on the each side of the headboard/footboard.

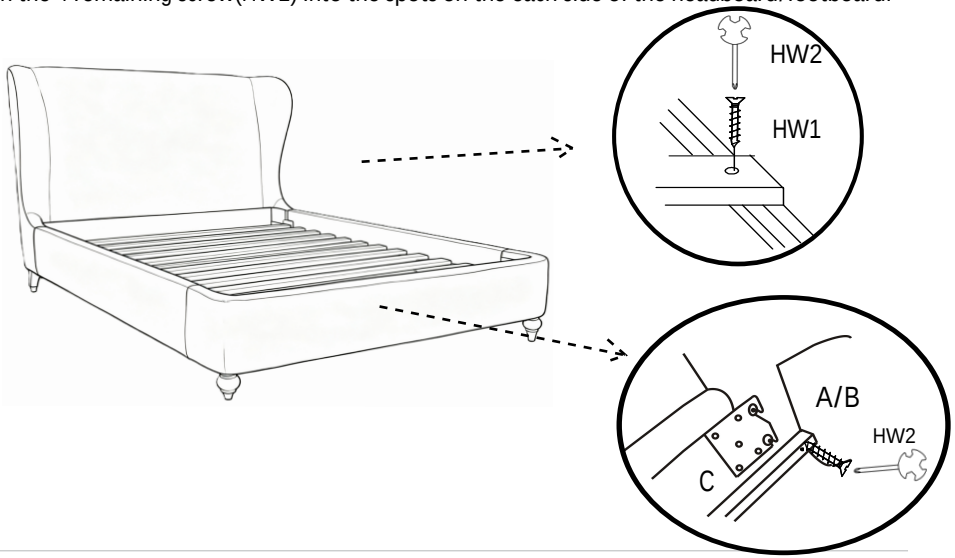

6

Place the bed in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

