









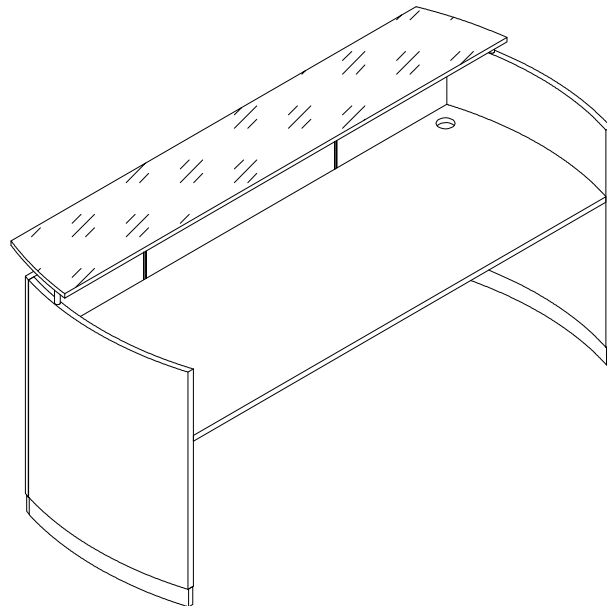



Reception Desk & Glass Counter



ASSEMBLY INSTRUCTIONS









PARTS LIST

Name	Part	Qty.	Spare Qty	Name	Part	Qty.	Spare Qty
A	 S004 Wood Dowel	10	1	G	 S086 Stand-off	5	
B	 S003 Cam Post	25	1	H	 S087 Grommet	2	
C	 S001 Cam Lock	41	1	I	 S429 Leveler	8	
D	 S102** Cam Sticker	41	1	J	 S430 Double Cam Post	8	
E	 S088 Mntg Bracket	8			 HARDWARE		
F	 S267 Ø4 x 20mm Black	32	1				

Items with HB are in hardware box.

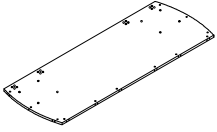**Denotes Color Code

PARTS LIST

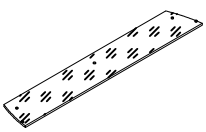Name	Part	Qty.	Name	Part	Qty.
K	 Top	1	O	 Metal Spacers	2
L	 Left Modesty Panel	1	P	 Left Side Panel	1
M	 Center Modesty Panel	1	Q	 Right Side Panel	1
N	 Right Modesty Panel	1	R	 Glass Counter	1

NOTE:


1. Reception Top & Modesty Panels packed in one carton
2. Reception End Panels packed in one carton
3. Reception Counter packed in one carton

**Denotes Color Code


IMPORTANT!

Review ALL instructions before beginning assembly. These instructions are provided to avoid problems that may occur from improper assembly or installation. We and/or our distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.

- 1** Install Cam Posts (B) into Side Panels (P & Q). Insert Cams (C) to inside of the Side Panels (P & Q). Insert Cams (C) in the underside of the Top (K). Install Levelers (I) into threaded inserts in underside of Side Panels (P & Q).

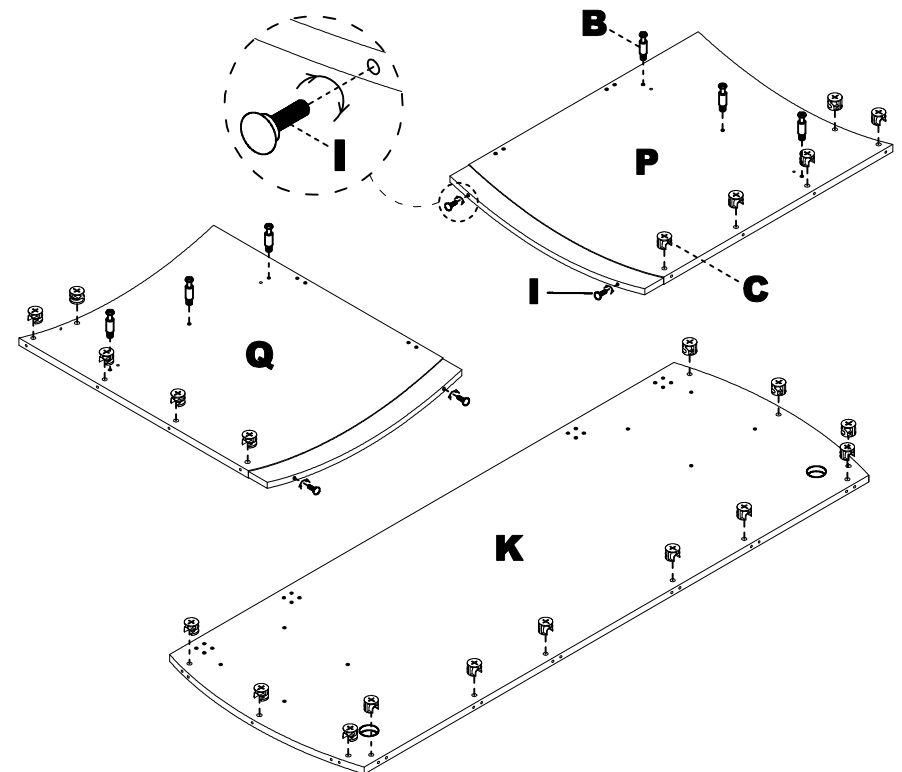


- 2** Insert Wood Dowels (A) into Top (K). Insert Cams (C) in the underside of the Top (K). Install Cam Posts (B) to the inside of the Side Panels (P & Q). Attach Top (K) and Side Panels (P & Q) by turning Cams (C). Apply Cam Stickers (D) to Cams (C) of Top (K).

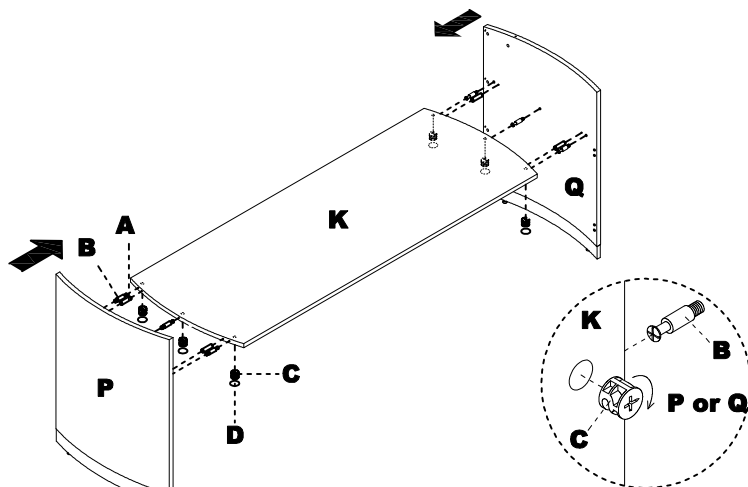

NOTE: The arrow on the face of the Cam (C) should point towards the Cam Post (B) for proper alignment.

4


- 3** Install Double Cam Posts (J) into Metal Spacers (O). Attach Modesty Panels (L & M & N) and Metal Spacers (O) by turning Cams (C). Apply Cam Stickers (D) to Cams (C) of Modesty Panels (L & M & N). Install Levelers (I) into threaded inserts in underside of Modesty Panels (L & M & N).

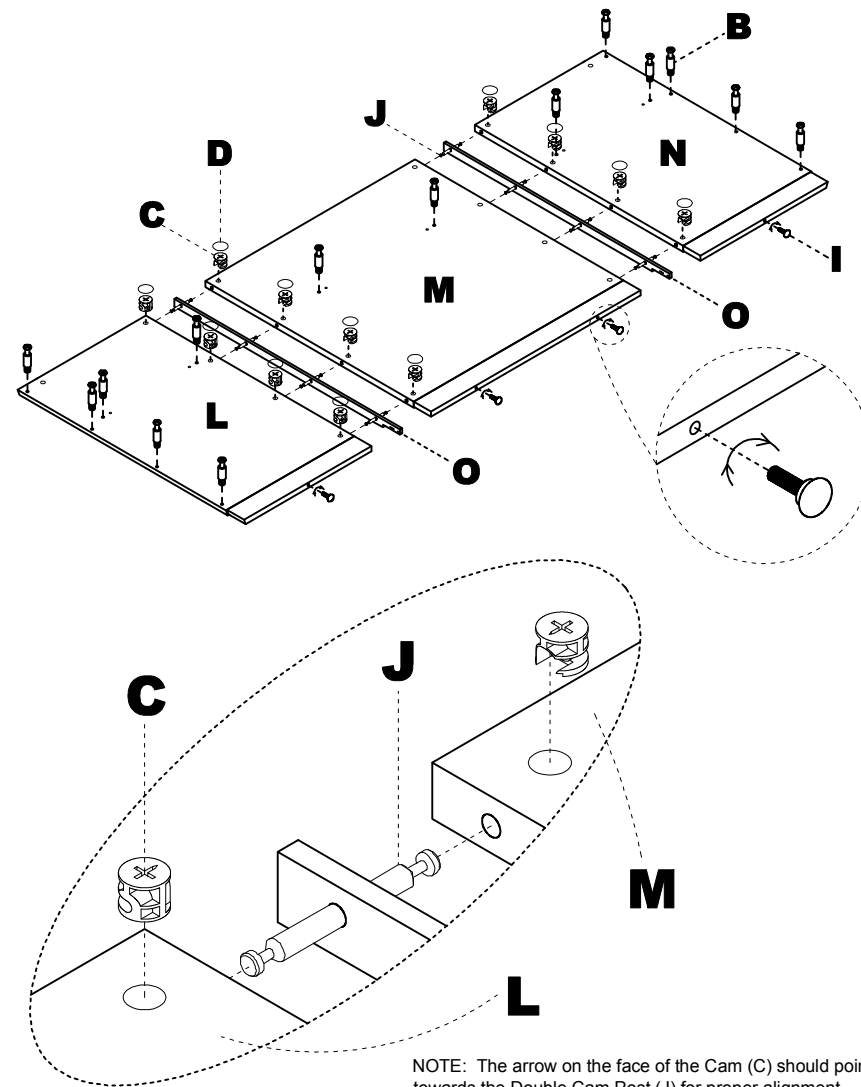


NOTE: The arrow on the face of the Cam (C) should point towards the Double Cam Post (J) for proper alignment.

5

- 4** Attach Top (K) and Side Panels (P & Q) and Modesty Panels (L & M & N) by turning Cams (C). Apply Cam Stickers (D) to Cams (C) of Top (K) and Side Panels (P & Q).

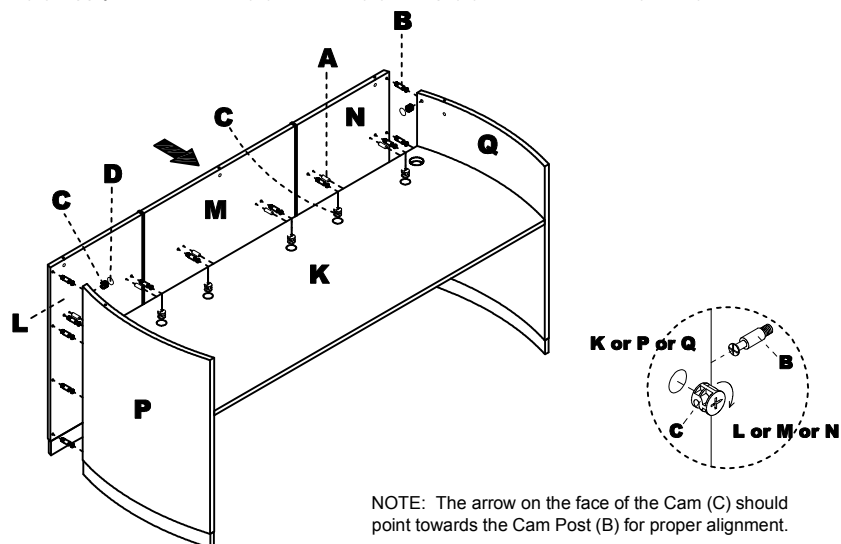


- 5** Attach Mntg Bracket (E) to the Top (K) and Side Panels (P & Q) & Modesty Panels (L & M & N) using Screws (F).

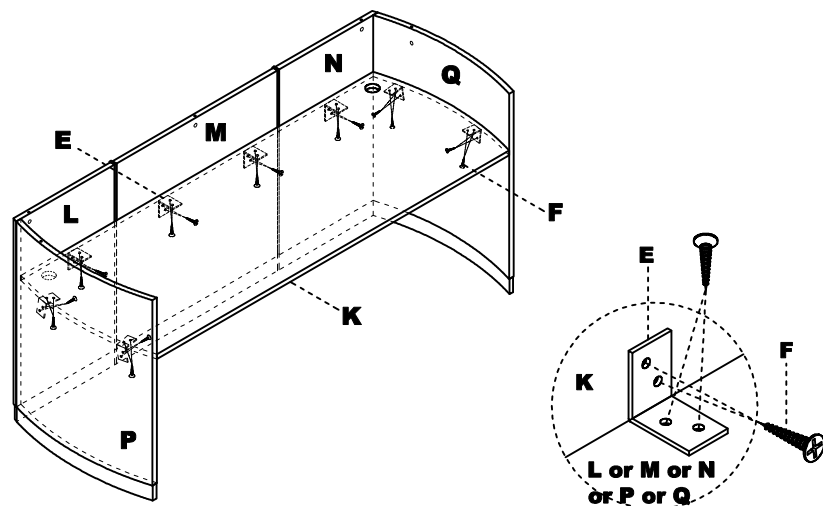


6

- 6** Install Cam Posts (B) to inside of the Glass Counter (R). Place Glass Counter (R) onto Side Panels (P & Q) and Modesty Panels (L & M & N) and lock in place by turning Cams (C). Apply Cam Stickers (D) onto Cams (C) of Side Panels (P & Q) and Modesty Panels (L & M & N). Insert Grommets (H) into Top holes.

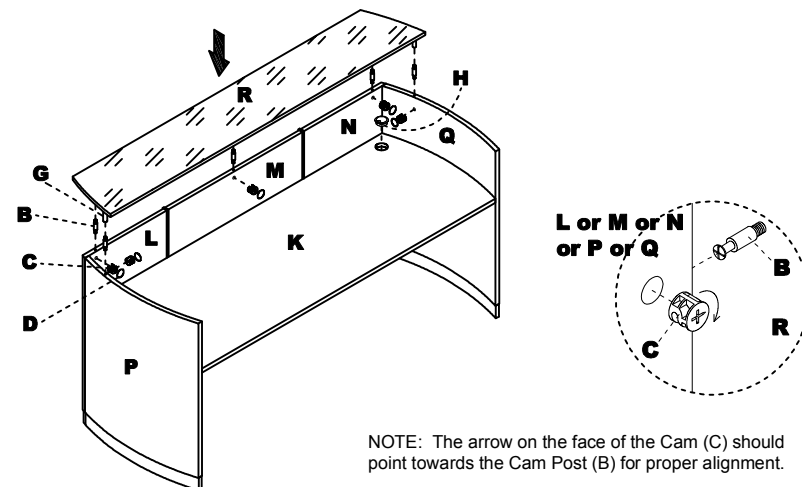

- 7** Finished the assembly of the Reception Desk.

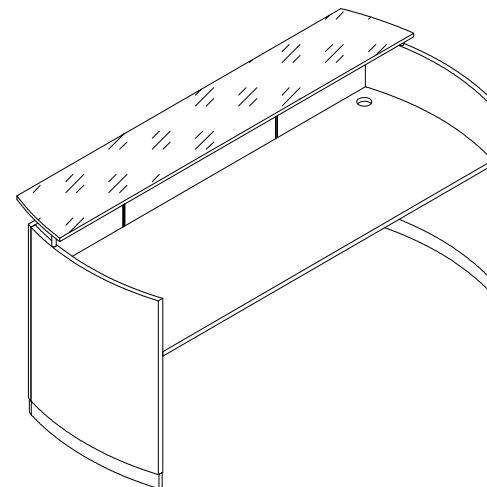

7

- 8** Attach MNRRHB to the Reception and Reception Return using Screws.

