

# Assembly Instruction

N719P446783/N719P446784

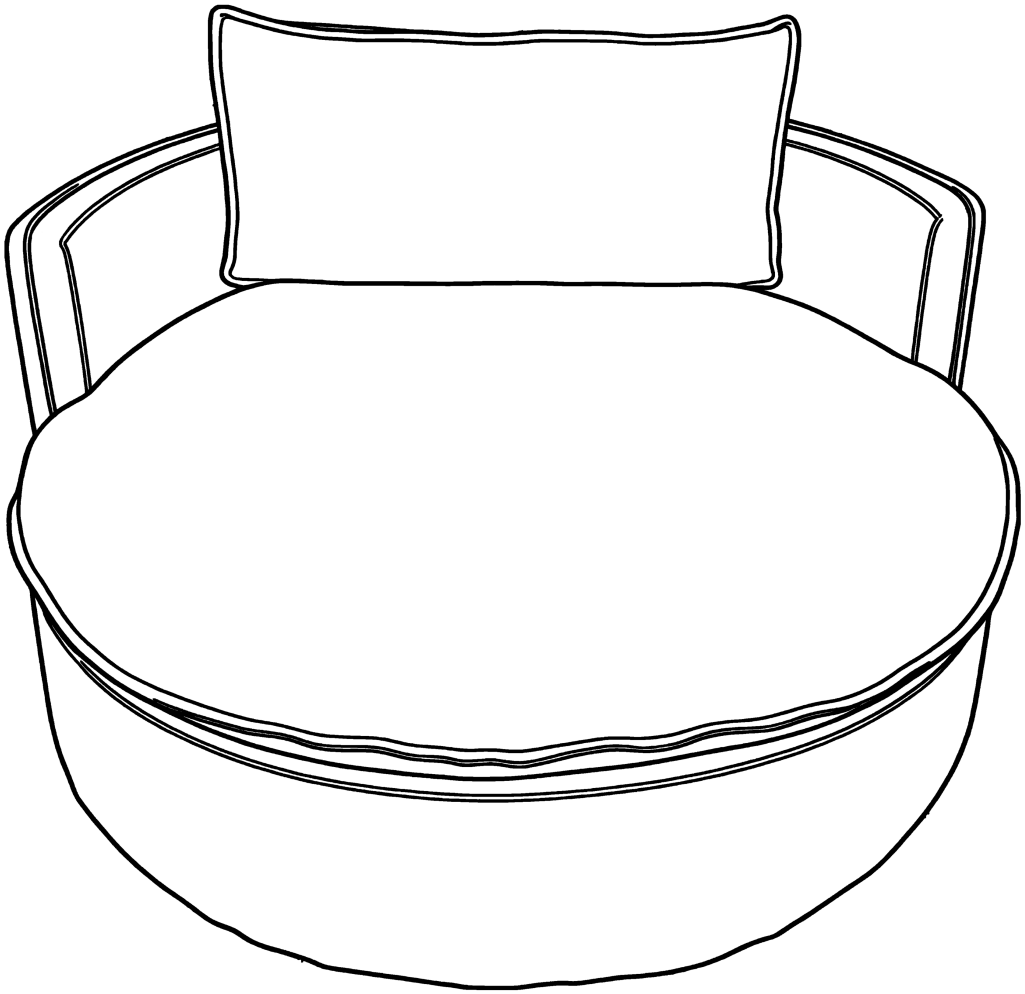

# TIPS:


1. The sectional sofa comes in 2 separate boxes, might be delivered at different times. Please wait several days patiently.
2. Due to differences of light effects, the actual color of the materials might be slightly different from the pictures.
3. Due to package compression for better shipment, the fabric may have wrinkles.
4. Please take all packages out and pat every part to make it rebound better and fluffy, so that it can restore to picture-like status.
5. Please keep children away from the plastic bags.

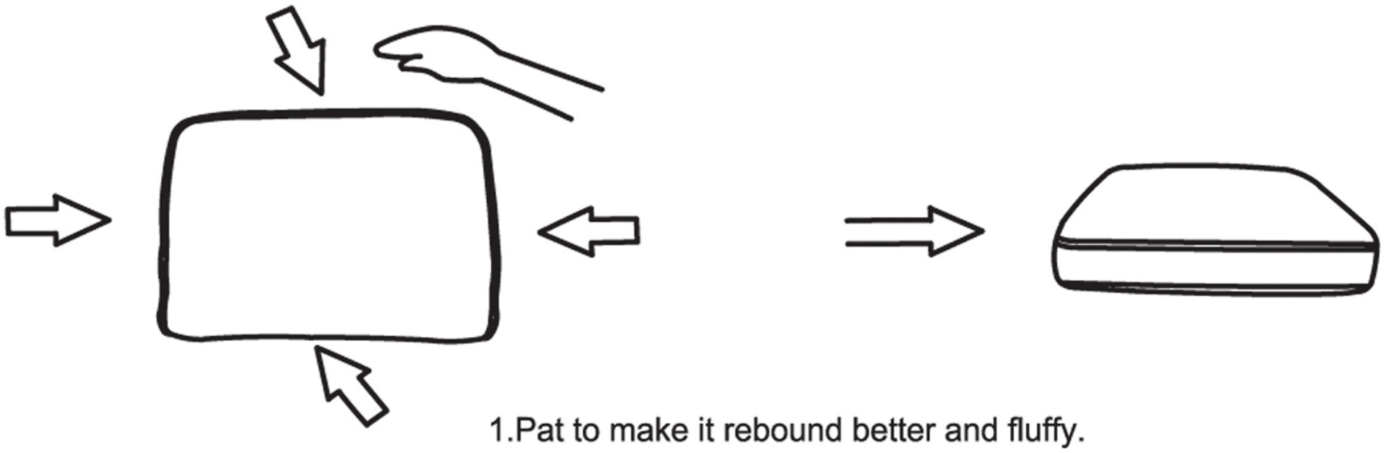

1.Pat to make it rebound better and fluffy.


2.Knead your cushion like giving your cushion a

massage while allowing the air to flow through the foam.

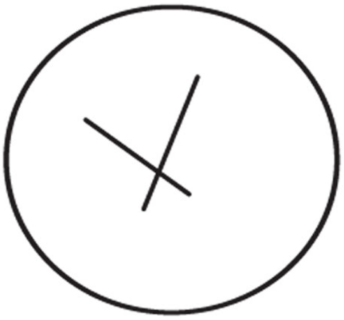




72h



It might take up to 72 hours.

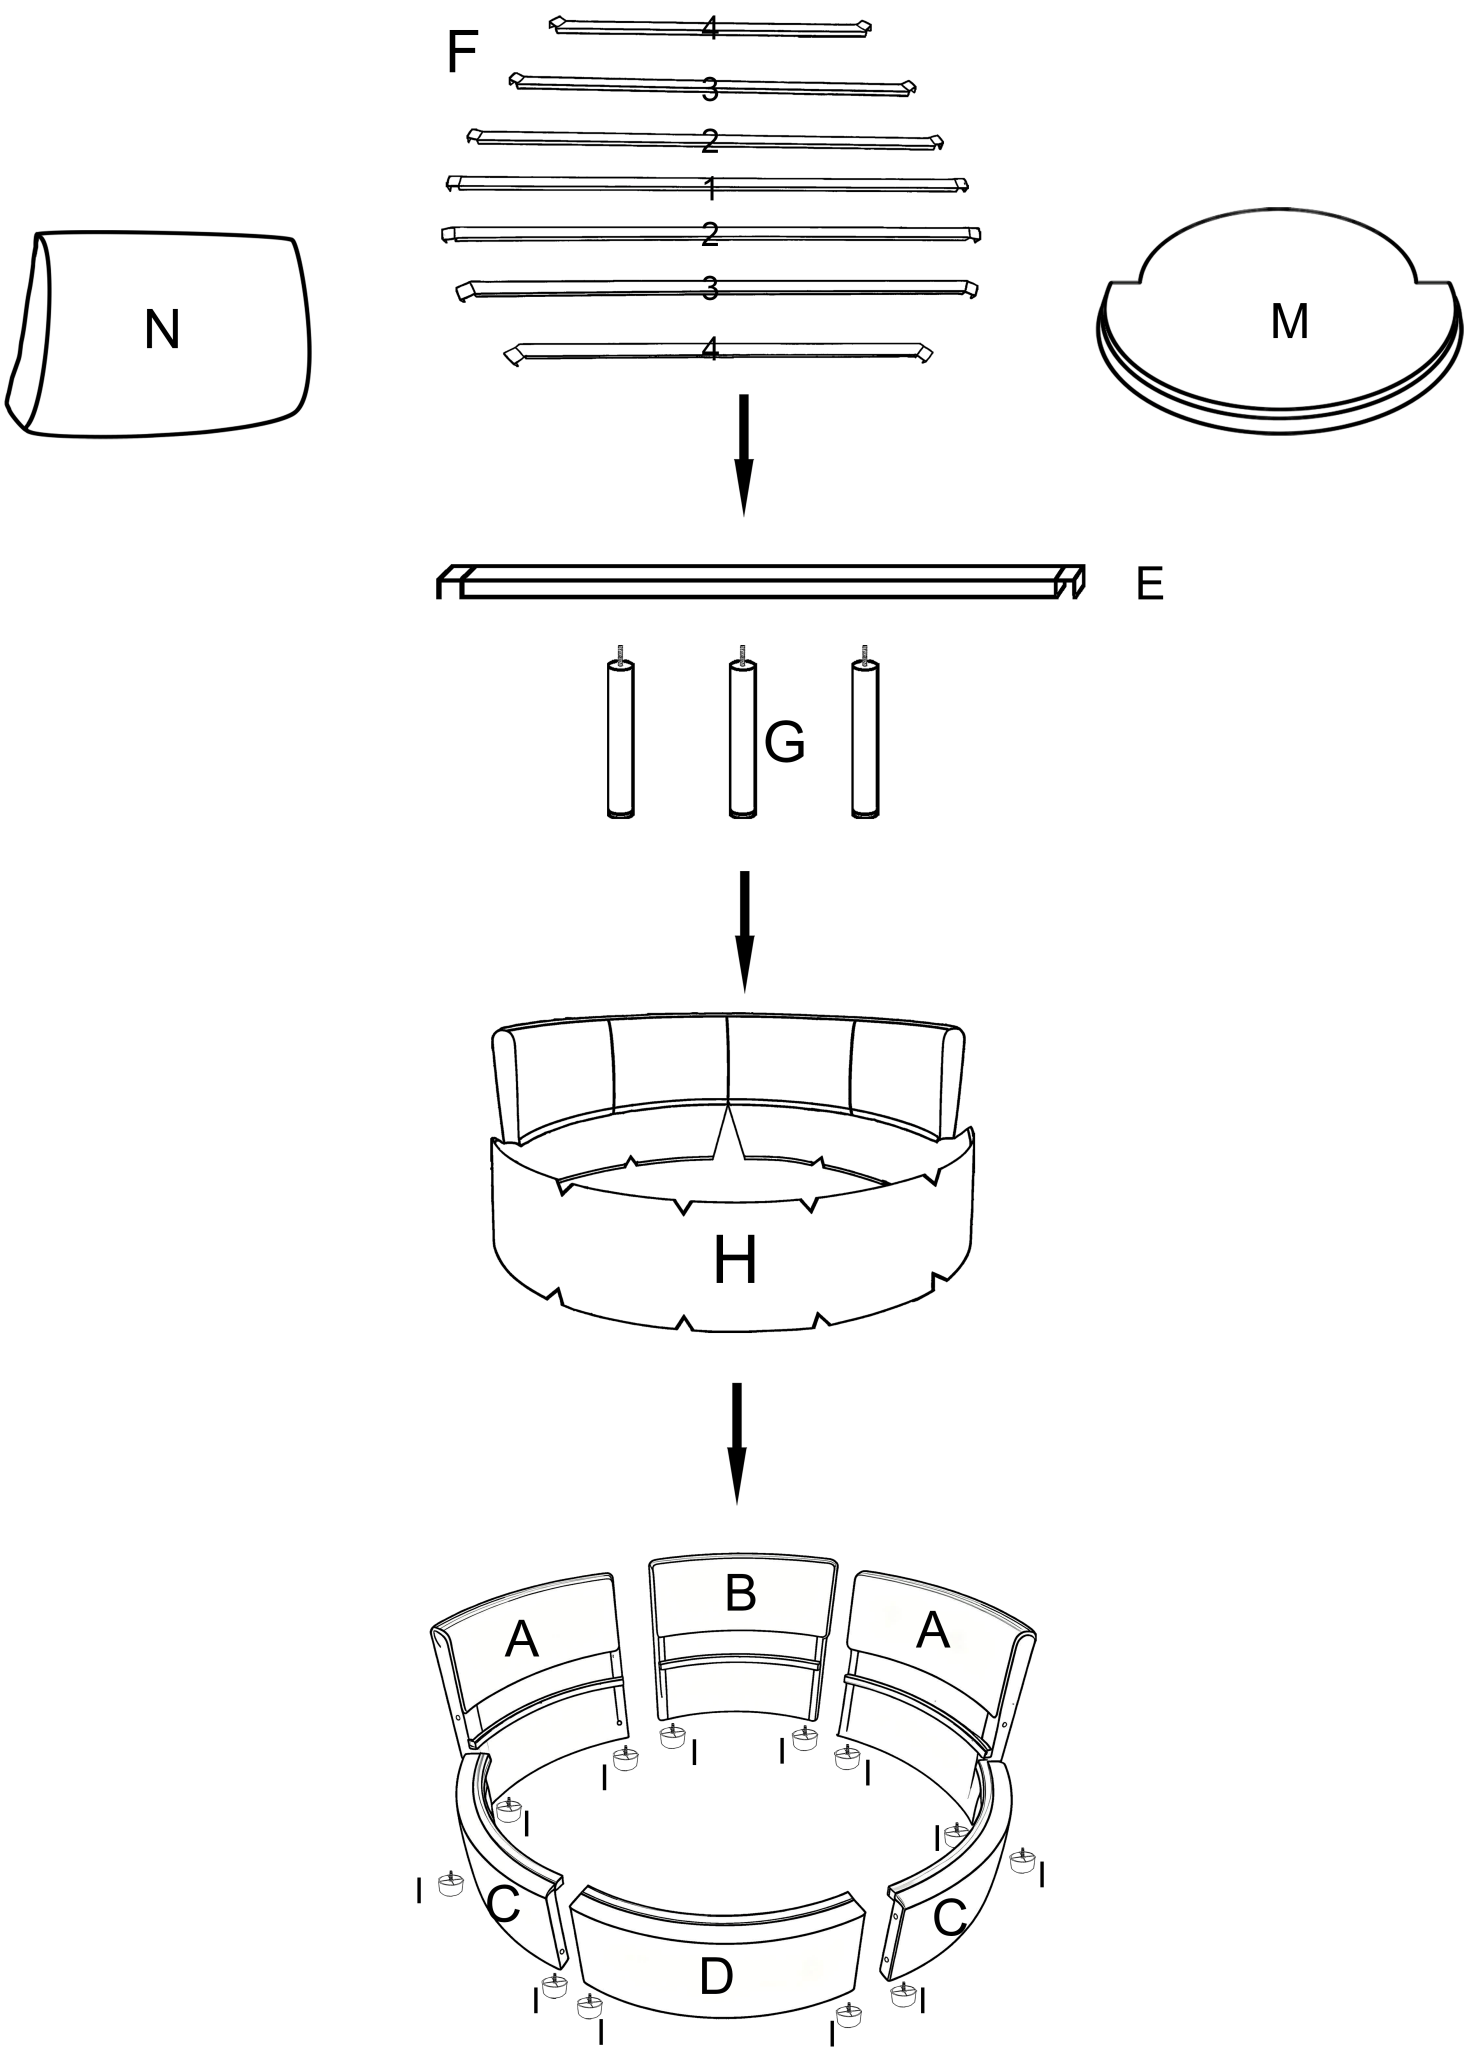

F
4
3
2
1
2
3
4
N
M
E
G
H
A
B
A
C
C
D



# PARTS LIST


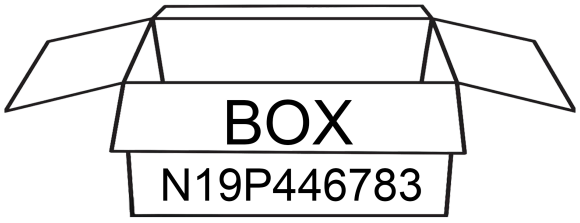


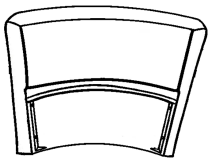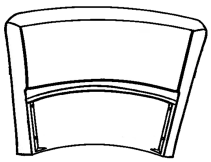
| | | | |
|---|---|---|---|
| A |  | Wooden board | 2PCS |
| B |  | Middle wooden board | 1PC |
| C |  | Wooden board | 2PCS |
| D |  | Middle wooden board | 1PC |
| G |  | Metal leg | 3PCS |

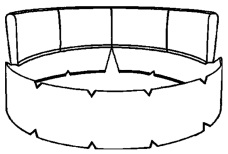
| | | | |
|---|---|---|---|
| H |  | Fabric cover | 1PC |
| I |  | Plastic leg | 12PCS |
| J |  | Screw | 12PCS |
| K |  | Nut | 12PCS |
| L |  | Wrench | 1PC |
| O |  | Allen key | 1PC |

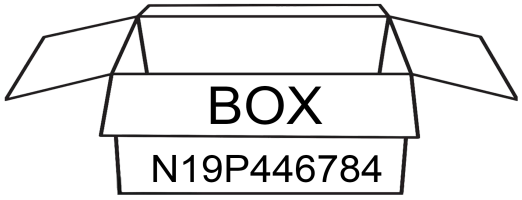

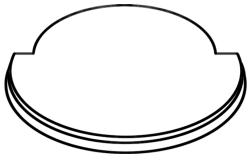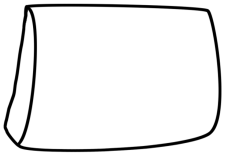

| | | | |
|---|---|---|---|
| M |  | Seat cushion | 1PC |
| N |  | Back cushion | 1PC |
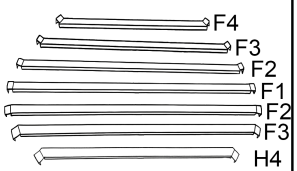
| | | | |
|---|---|---|---|
| E |  | Iron rod | 1PC |
| F |   | Iron rod | 7PCS |


Sept1: Attach the plastic legs to the undersides of wooden boards A, B, C, and D.

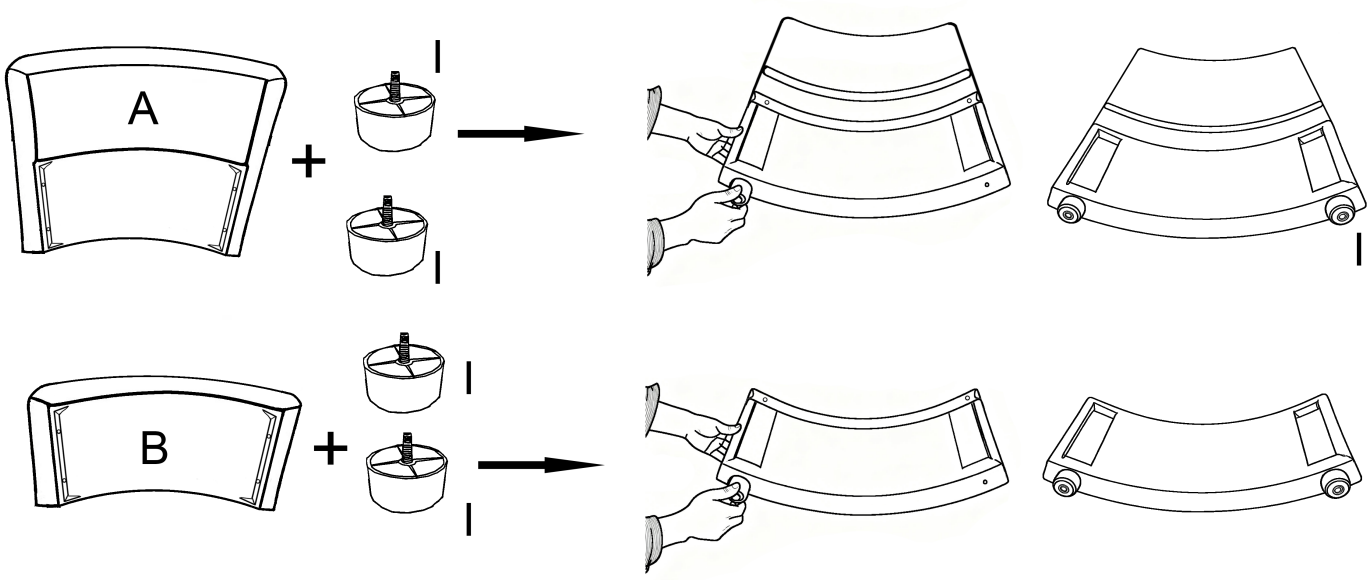



Step 2: Assemble wooden boards A, B, C, and D in accordance with the provided diagram, then secure them permanently using appropriate screws.

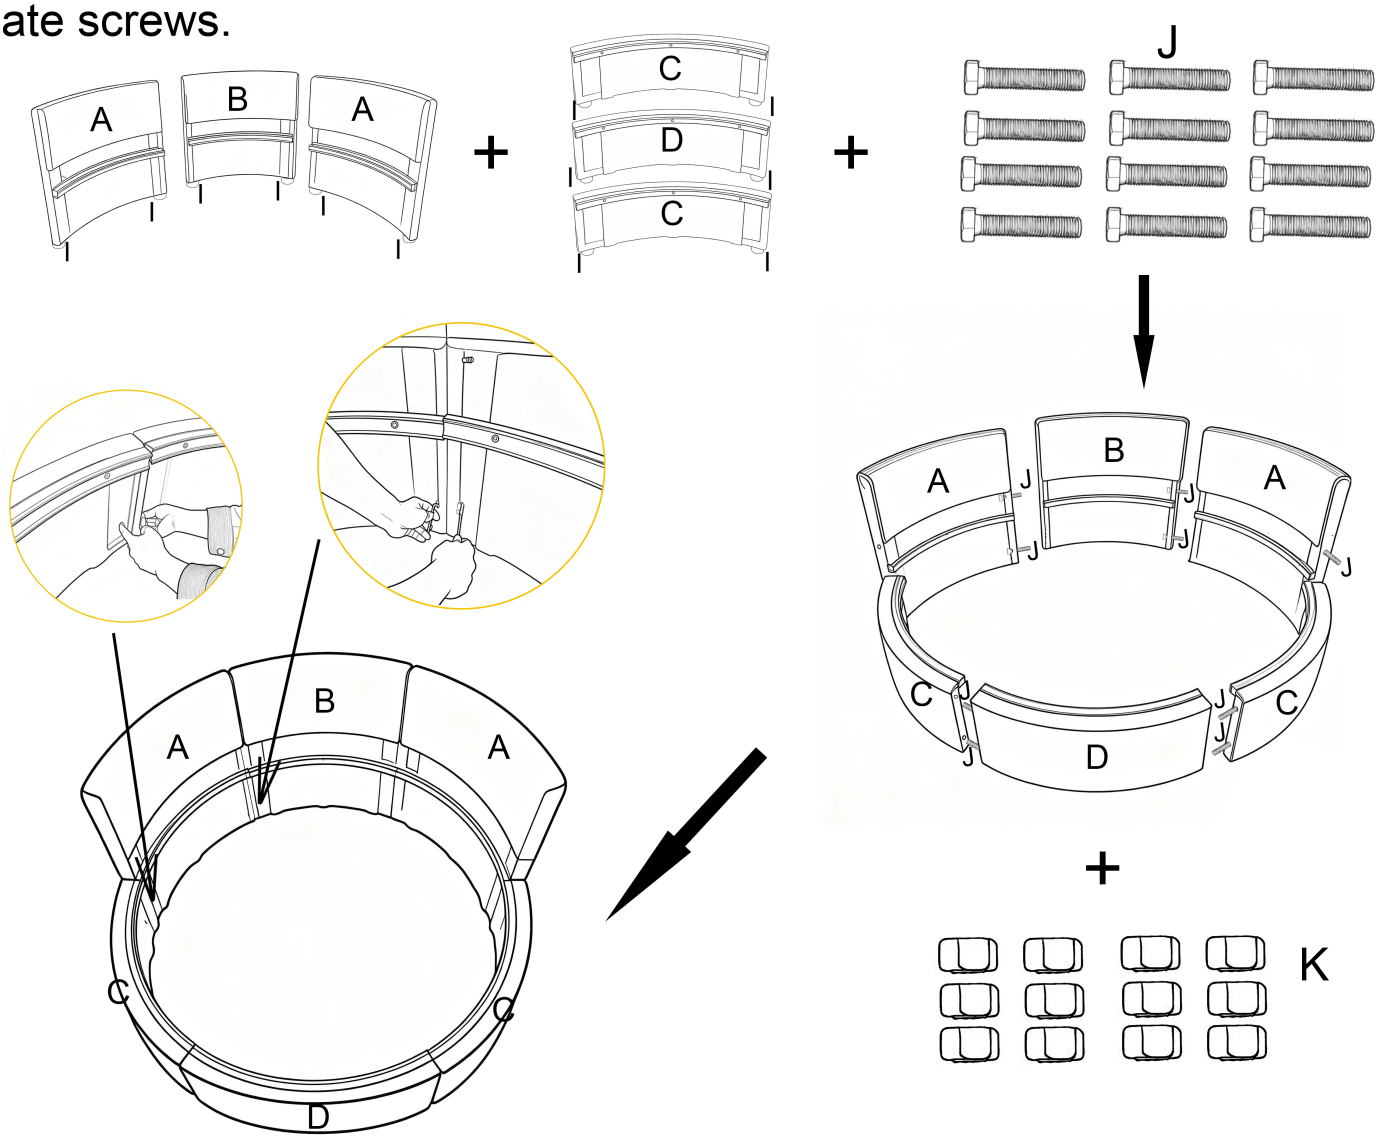

Sept3: Drape the fabric cover the fully assembled wooden frame and fasten it securely using the integrated velcro straps.

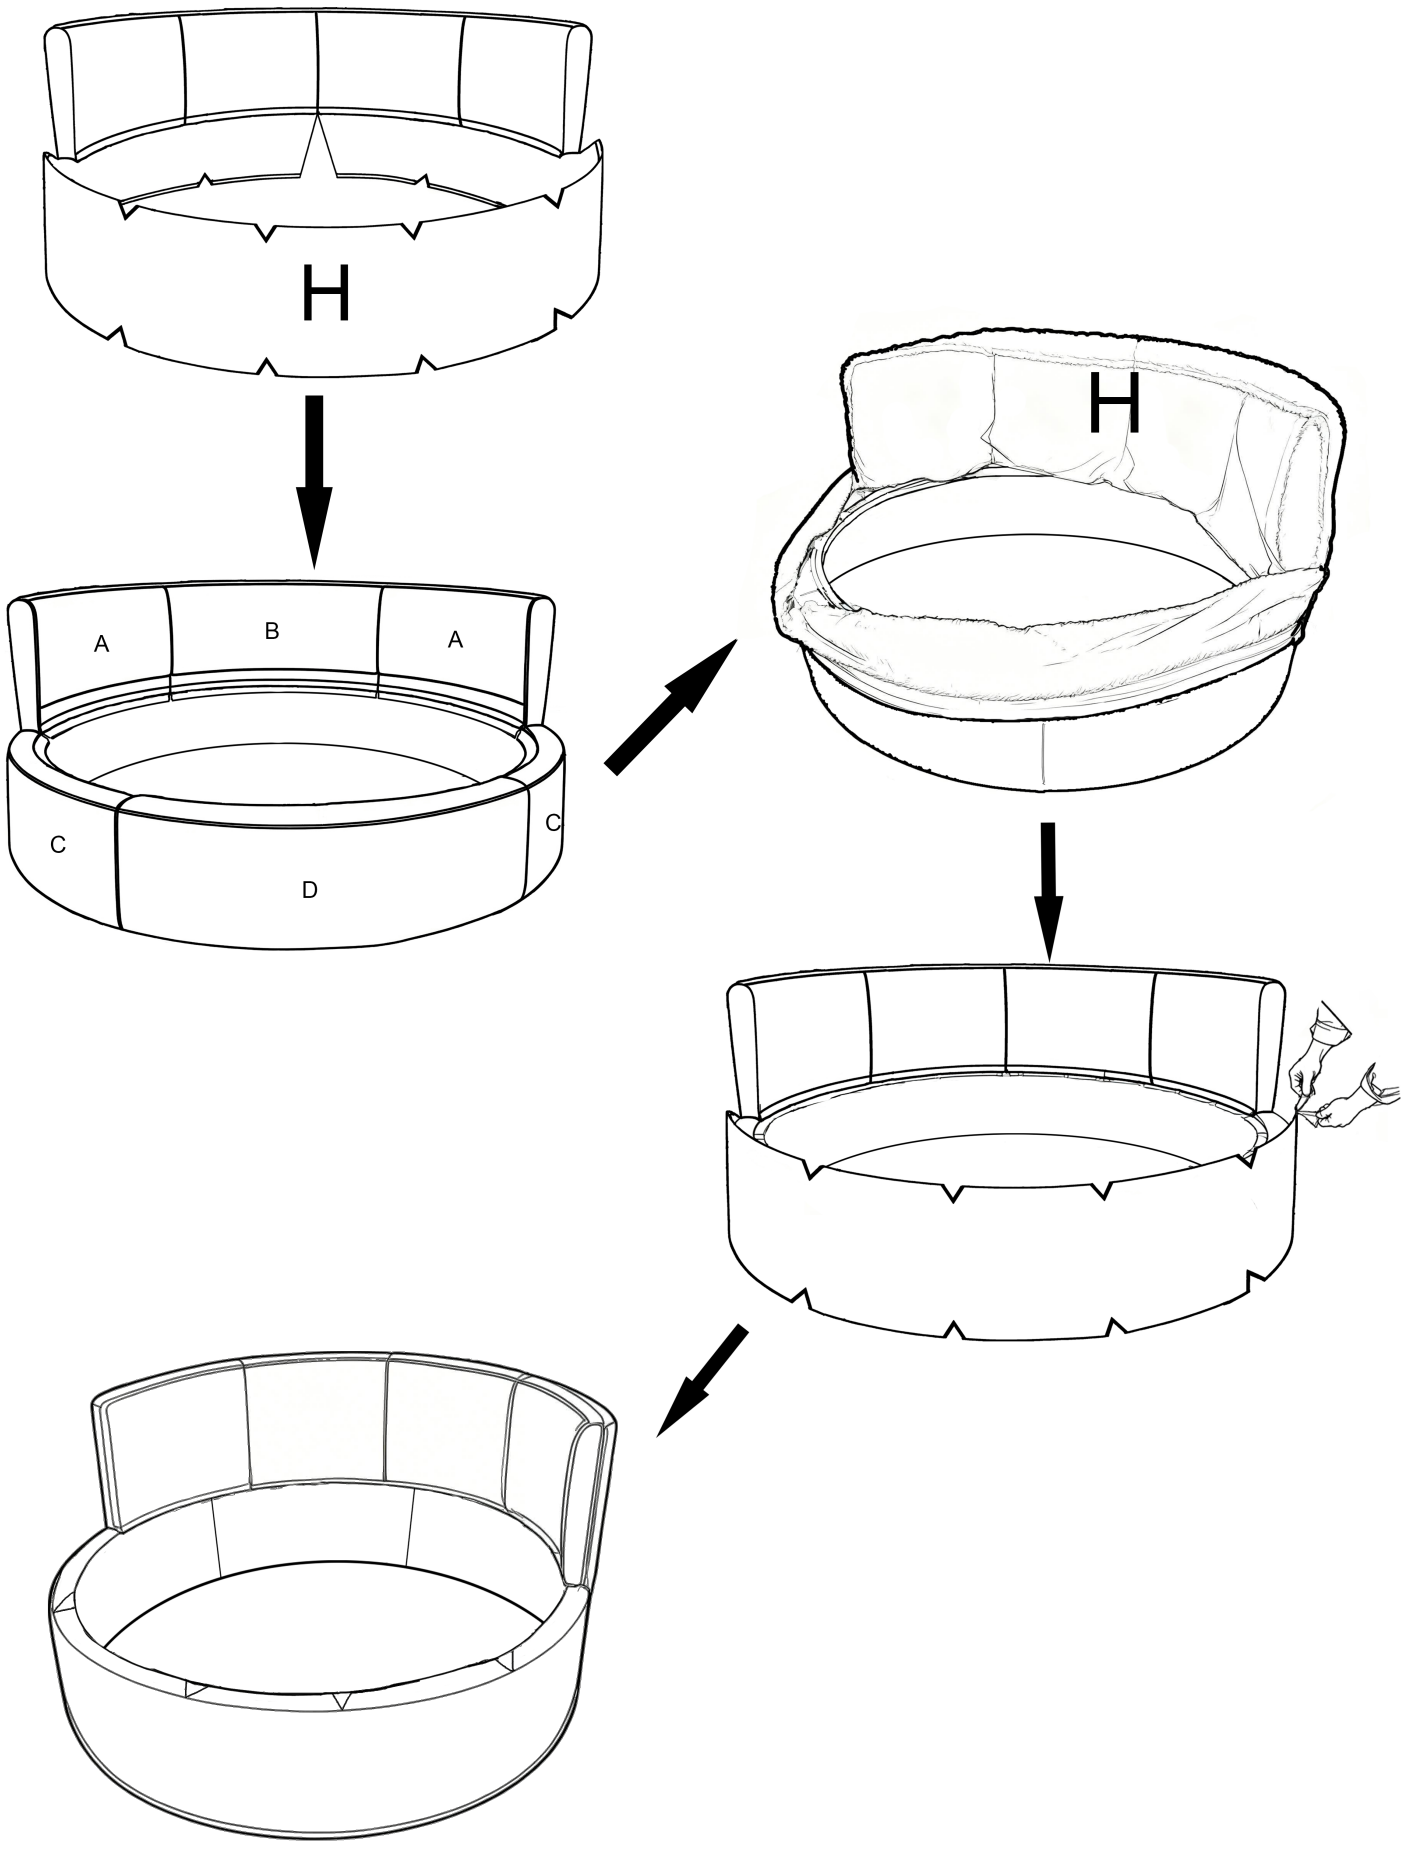

Sept4: Mount 3 elongated metal legs onto iron rod E; subsequently, install rod E onto the designated iron mounting bracket of the wooden frame, as illustrated in the diagram. Thereafter, affix iron rods 1, 2, 3, and 4 in sequence, following the spatial configuration specified in the diagram. Caution: Exercise care during installation to avoid contact with the fabric cover, thereby preventing potential abrasion or tearing.

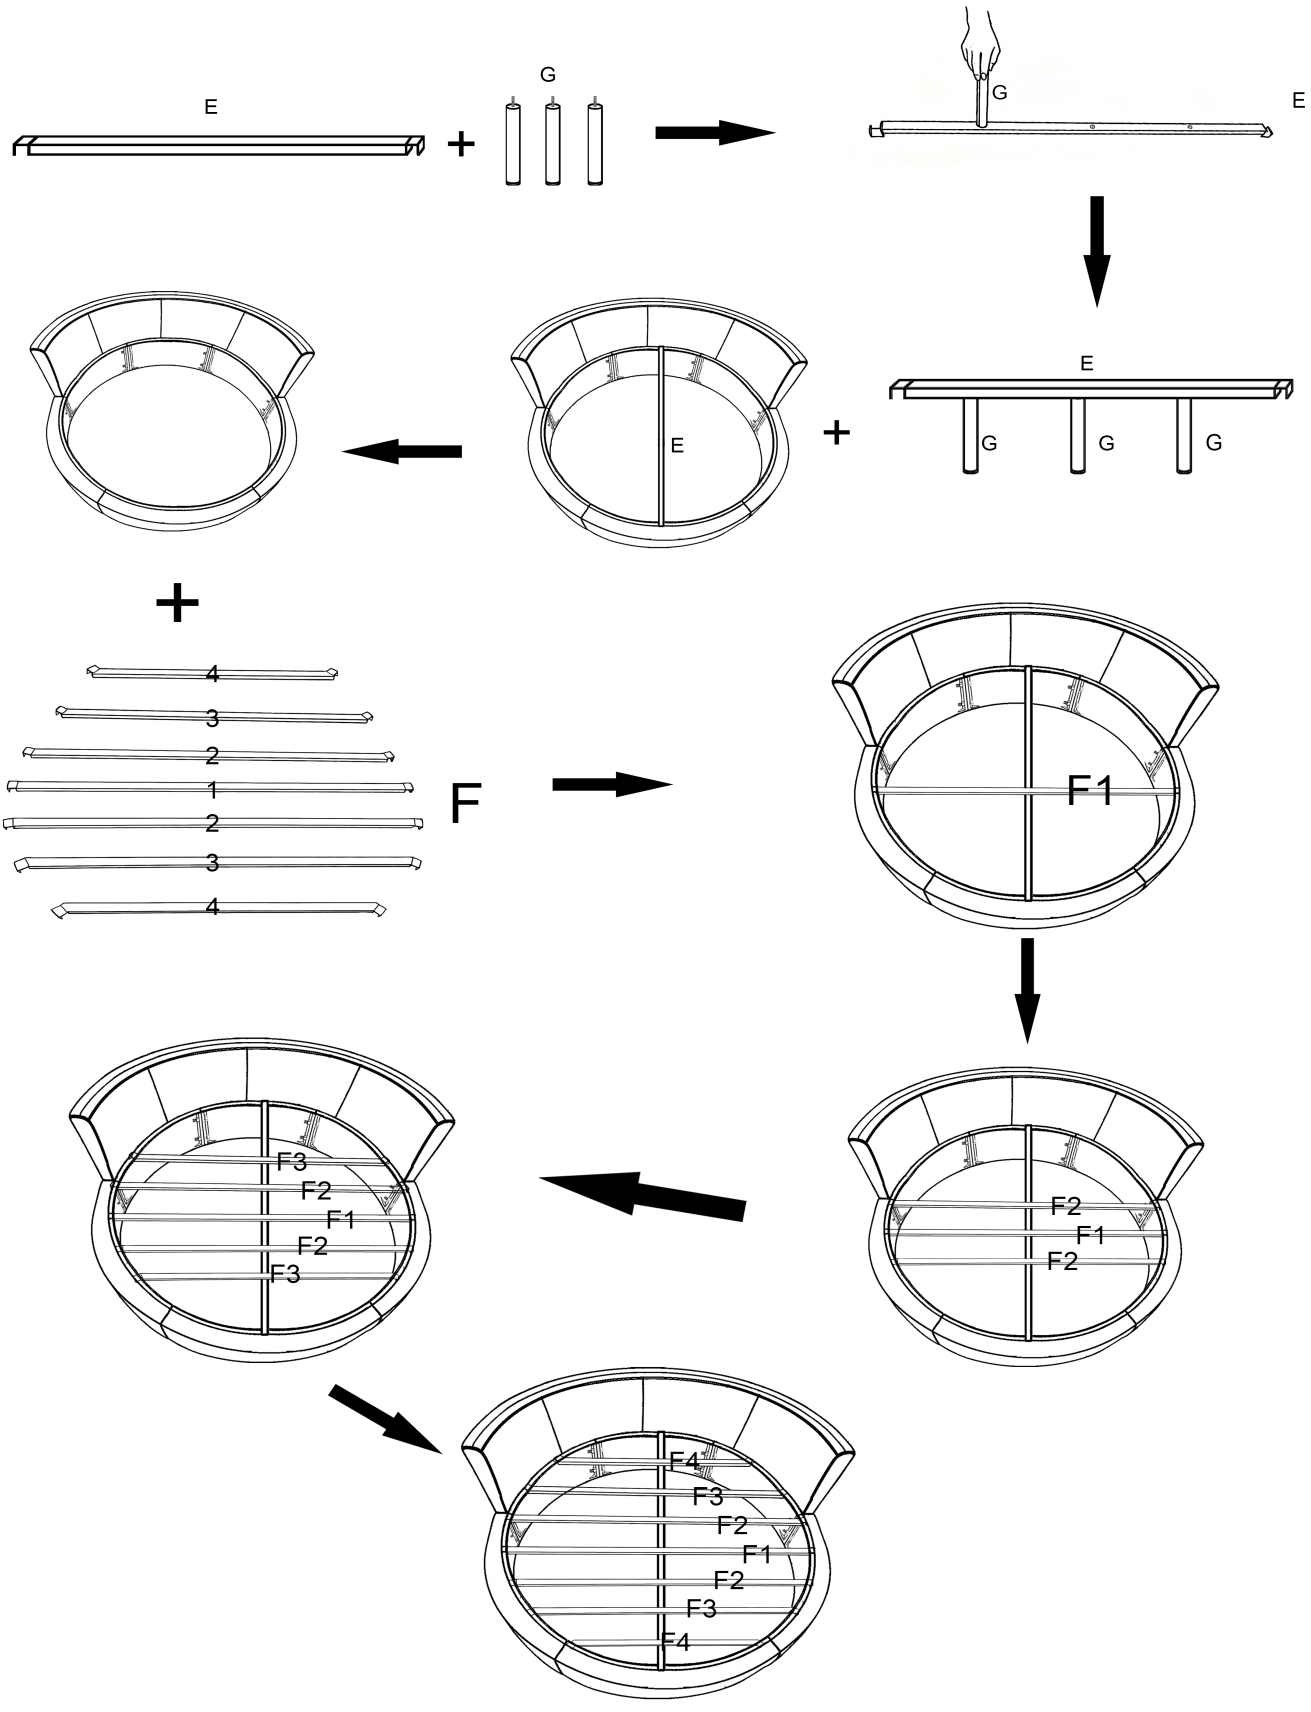

Step 5: Carefully remove the seat cushion and back cushion from their compressed packaging. Gently fluff and reshape both components by hand to facilitate full expansion, then position them as illustrated in the accompanying diagram.

Disclaimer: Compressed foam products require a minimum of 72 hours to fully recover their original dimensions and resilience after unpacking. To facilitate quality assessment, customers reporting concerns regarding incomplete expansion must submit two dated visual records—one captured no earlier than 24 hours and another no earlier than 72 hours post-unpacking. Claims lacking both required images or videos will not be considered valid for quality evaluation.

