







ASSEMBLY INSTRUCTION







Wicker Rocking Daybed with Cushion

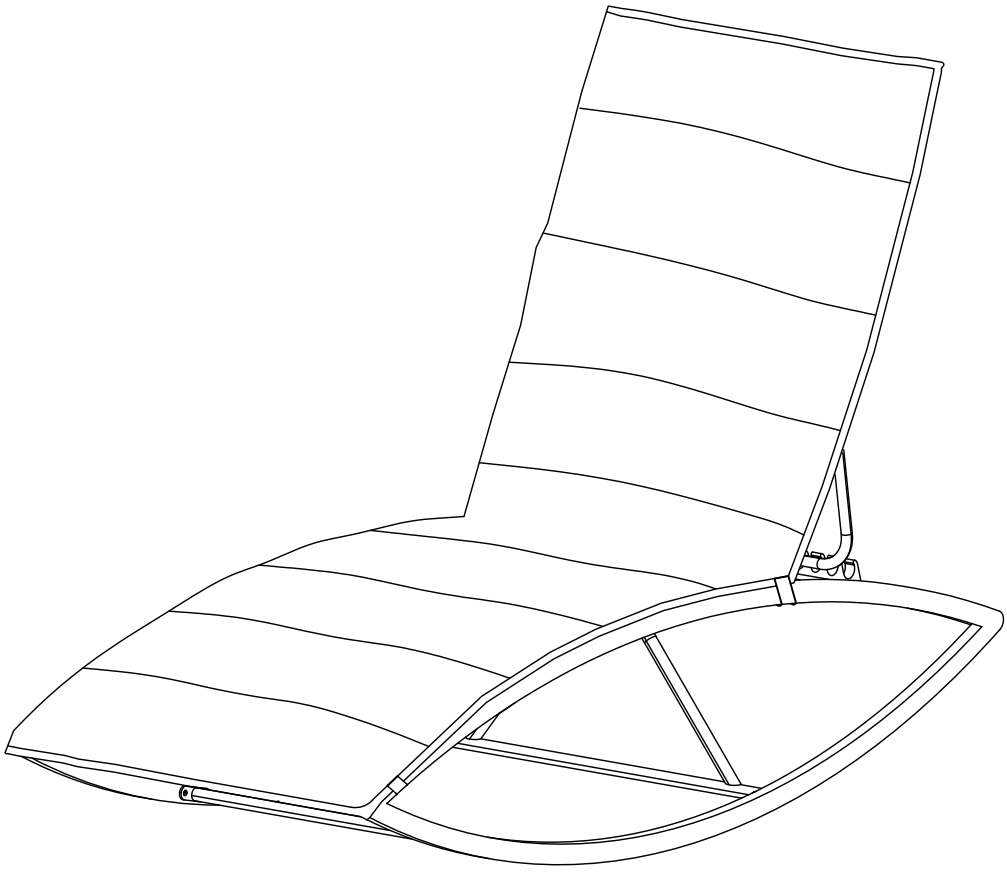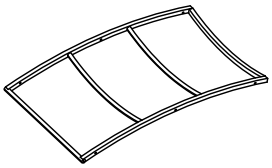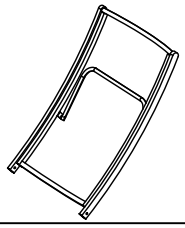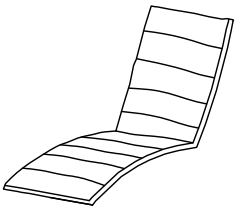

Component List


LABEL	As shown in figure	DESCRIPTION	QTY
A		Left leg	1
B		Right leg	1
C		Seat frame	1
D		Leg tube	1
E		Leg tube	1
F		Back panel	1
G		Bracket	1
H		Cotton pad	1


Hardware List

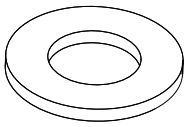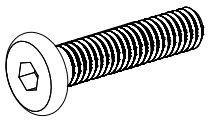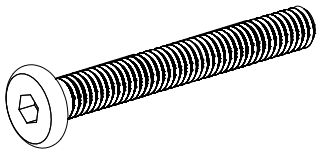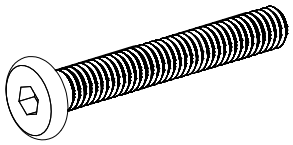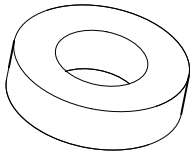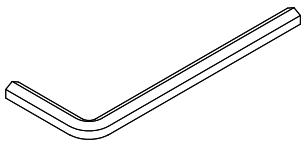LABEL	As shown in figure	DESCRIPTION	QTY
1		Washer M6	21 +1 SPARE
2		Bolt M6*18	8 +1 SPARE
3		Bolt M6*40	8 +1 SPARE
4		Bolt M6*35	5
5		Buffer gasket	2
6		Allen wrench M6	1


ATTENTION:
DO NOT tighten screws completely until assembly is completed;


1

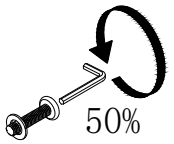③ x 3PCS	① x 3PCS	
		
M6*40(MM)	M6(MM)	50%

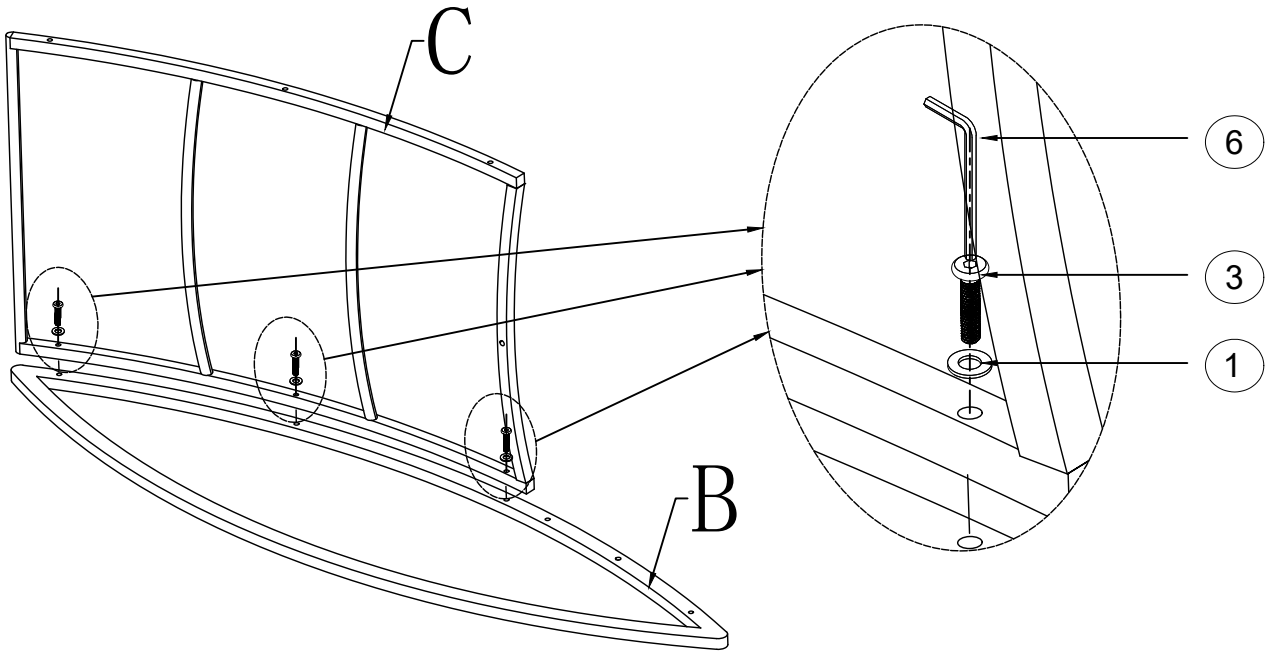

2

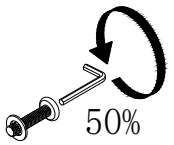
③ x 3PCS	① x 3PCS	
		
M6*40(MM)	M6(MM)	50%

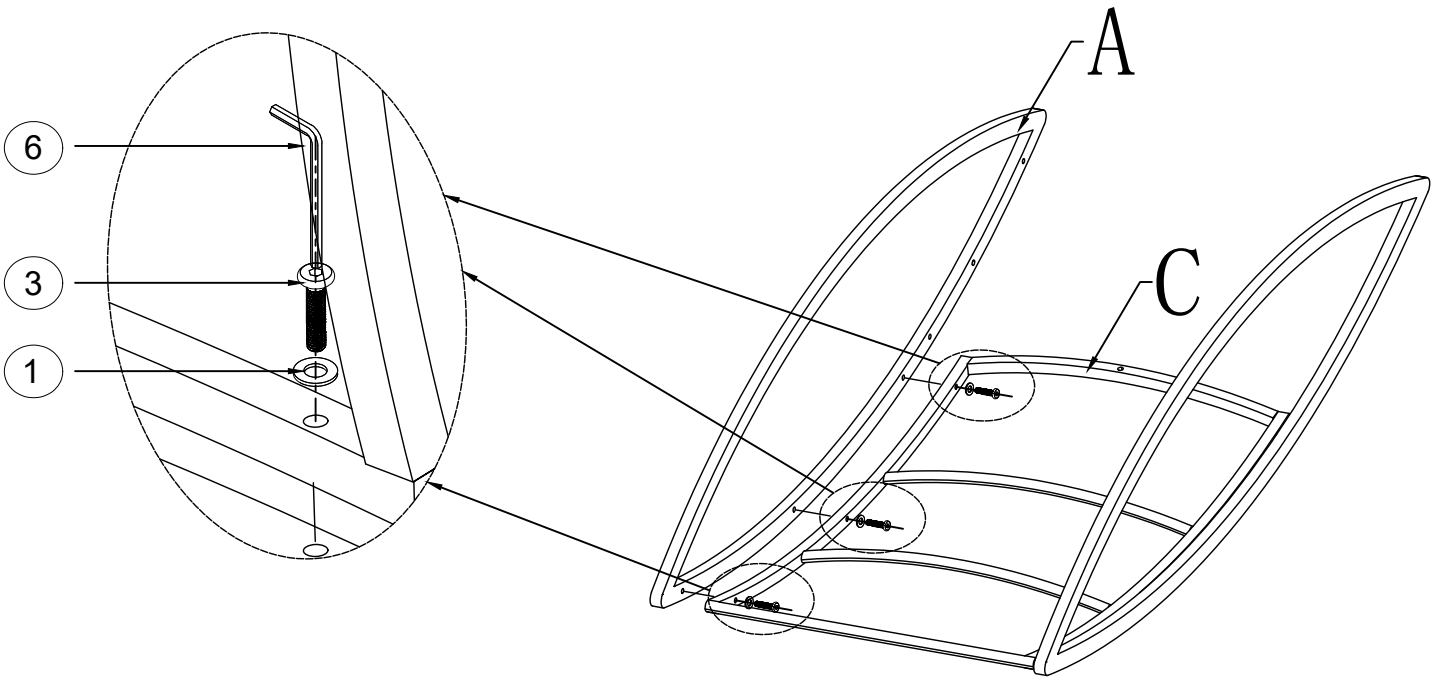

ATTENTION:
DO NOT tighten screws completely until assembly is completed;


3

② x 4PCS	① x 4PCS	
M6*18(MM)	M6(MM)	50%

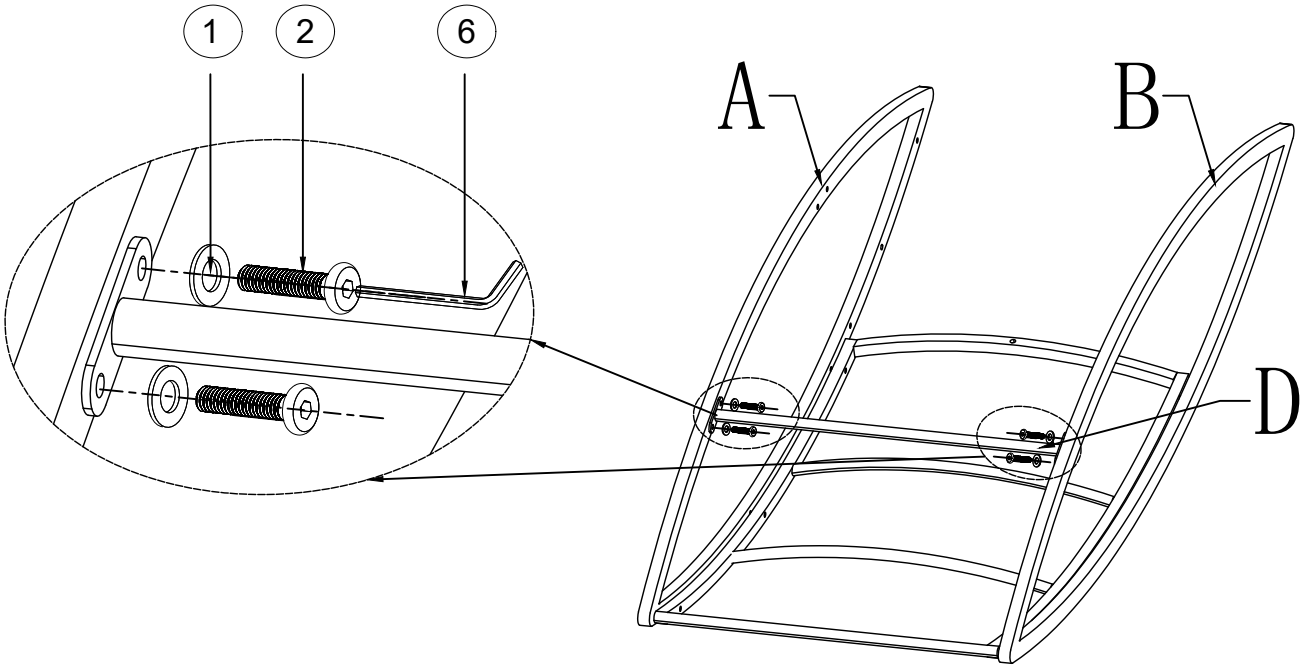

4


④ x 1PCS	② x 4PCS	① x 5PCS	
M6*35(MM)	M6*18(MM)	M6(MM)	50%

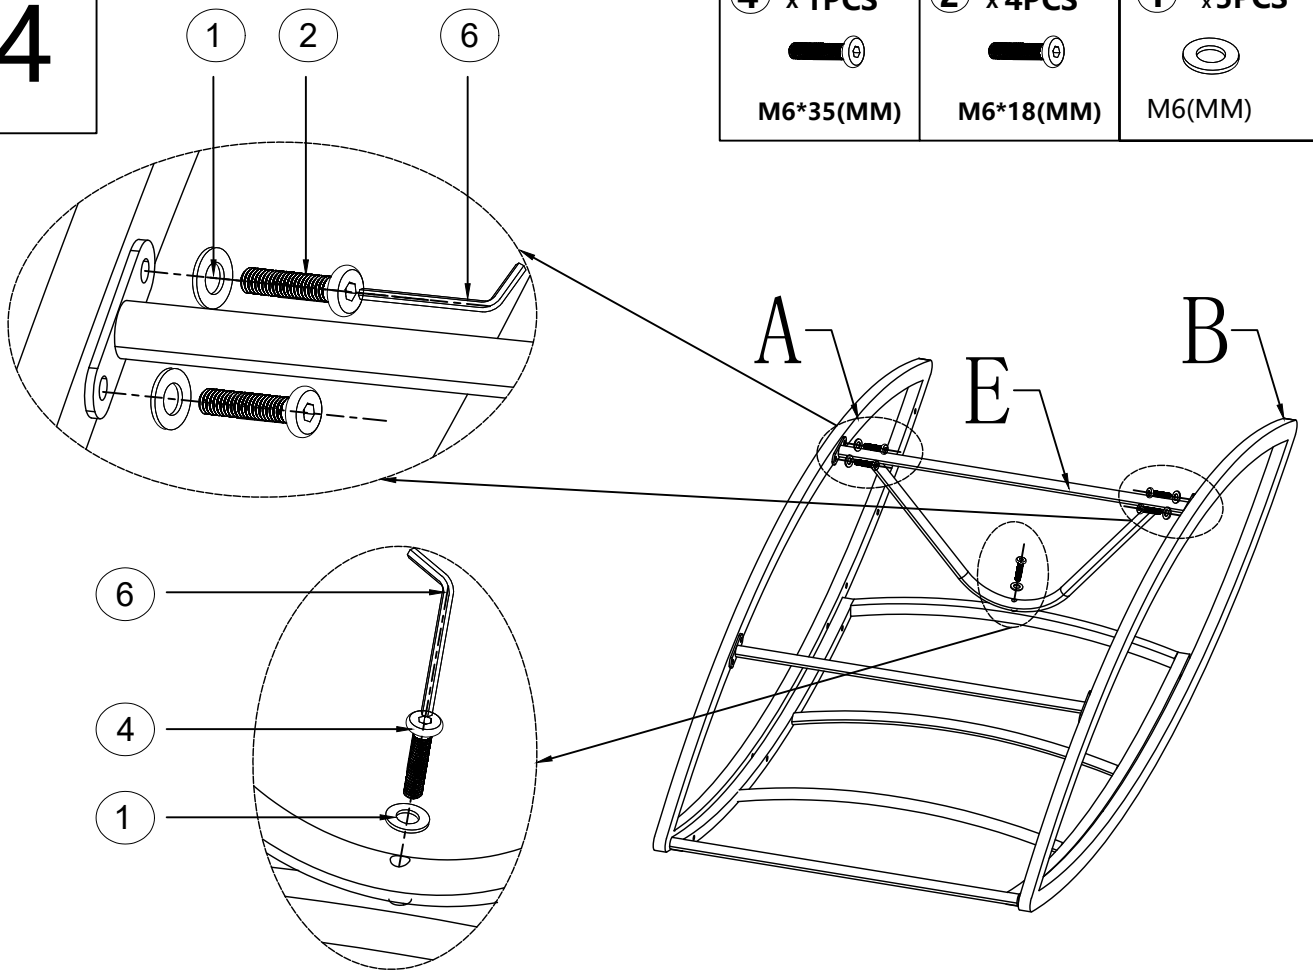


ATTENTION:
DO NOT tighten screws completely until assembly is completed;


5

Lay the seat frame on its side and prepare Back Frame F.

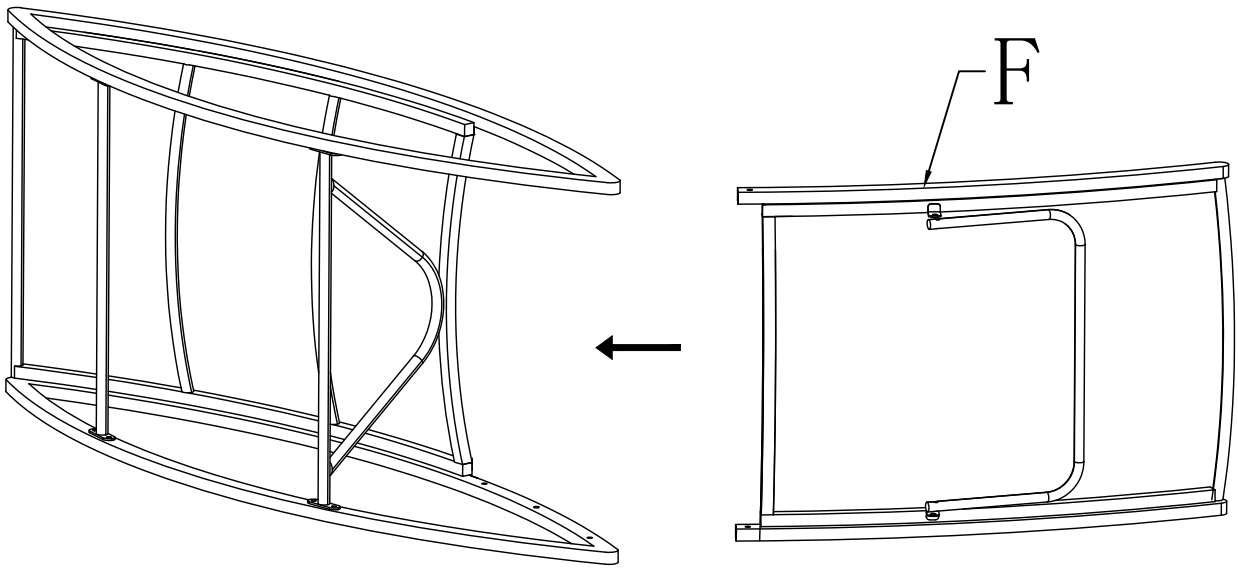

6

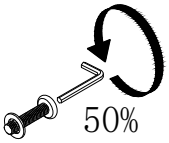
⑤ x2PCS	③ x 2PCS	① x2PCS	
			
M6(MM)	**M6*40(MM)**	M6(MM)	50%

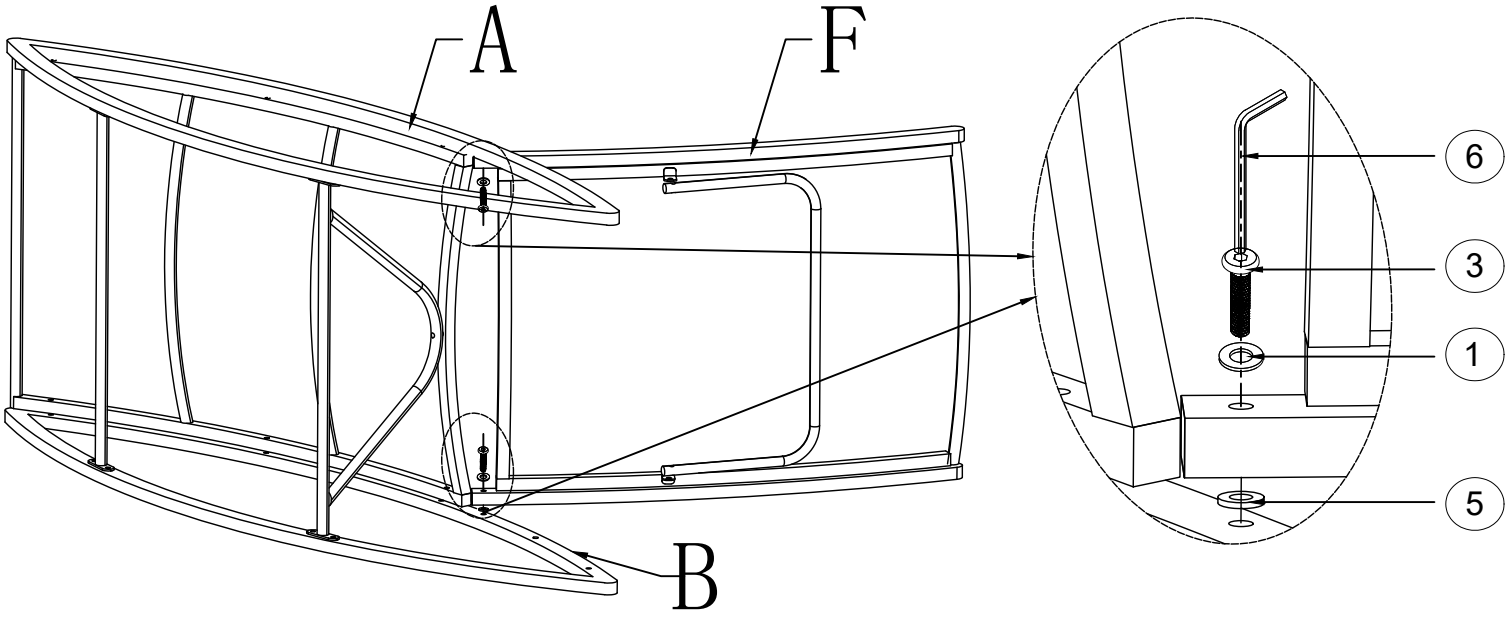

ATTENTION:
DO NOT tighten screws completely until assembly is completed;


7

Adjust folding back frame F to a proper angle to install the backrest adjustment bracket easily.

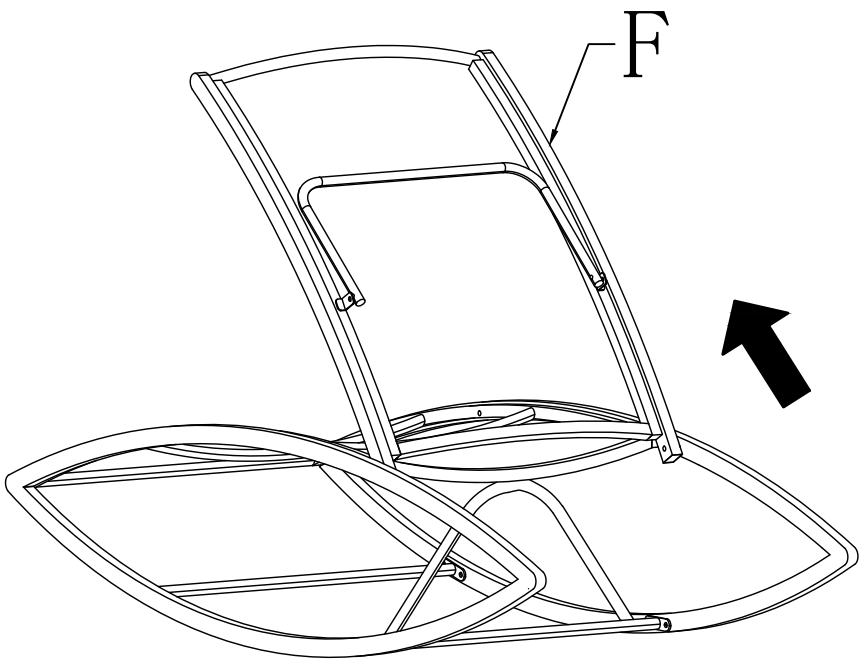


8

④ x 4PCS	① x 4PCS	
M6*35(MM)	M6(MM)	100%

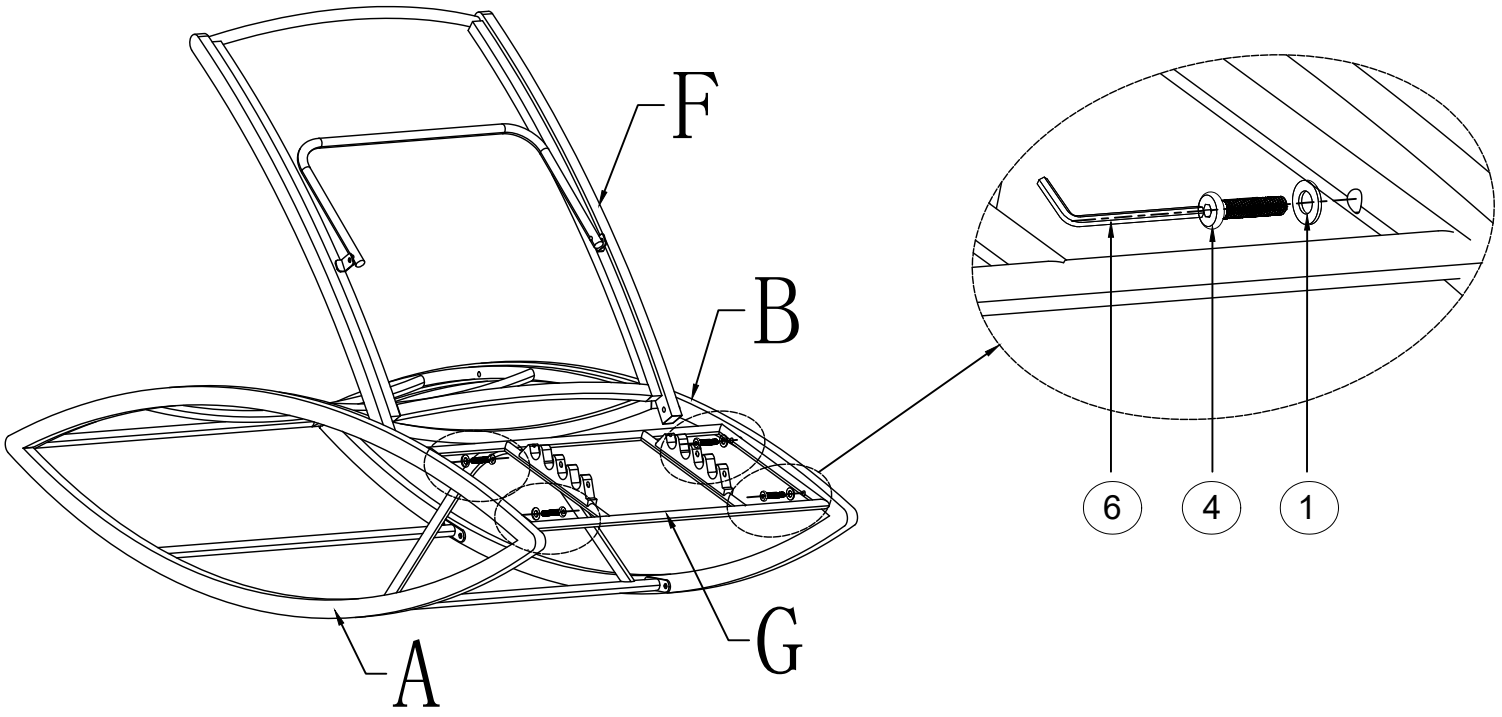


9

After assembly, lower the rear back support tube, insert it into the adjusting slot and adjust the gear as required.

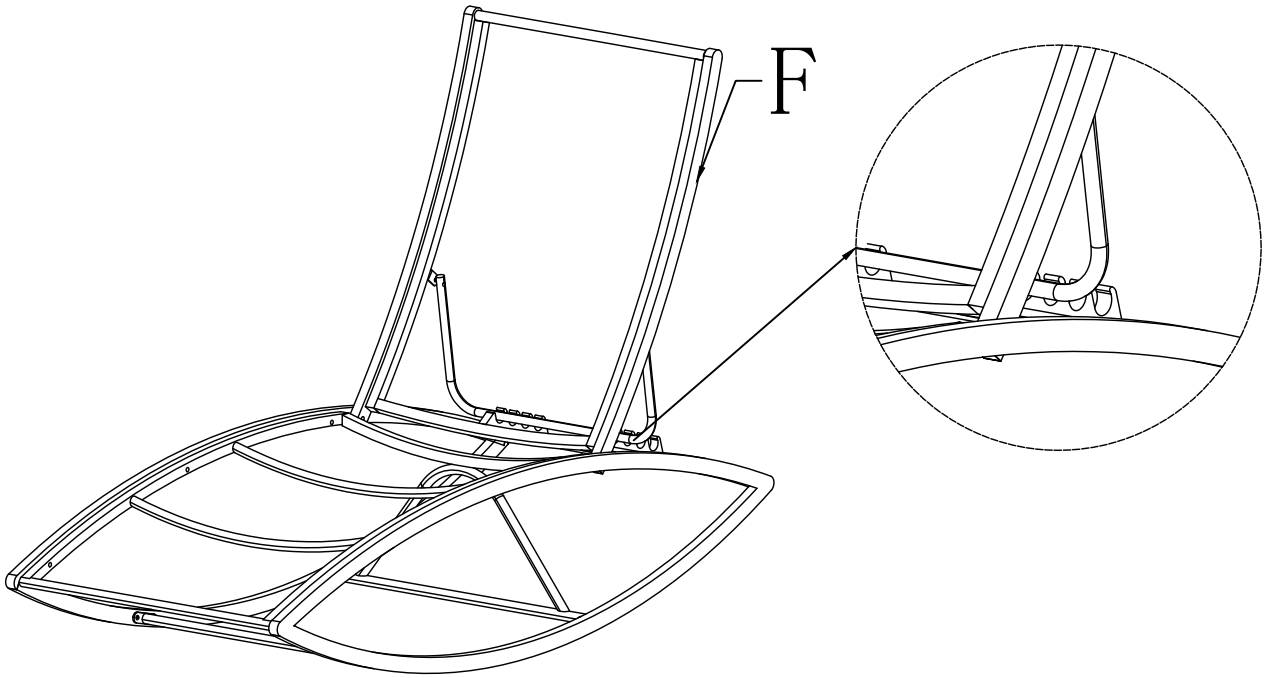

10

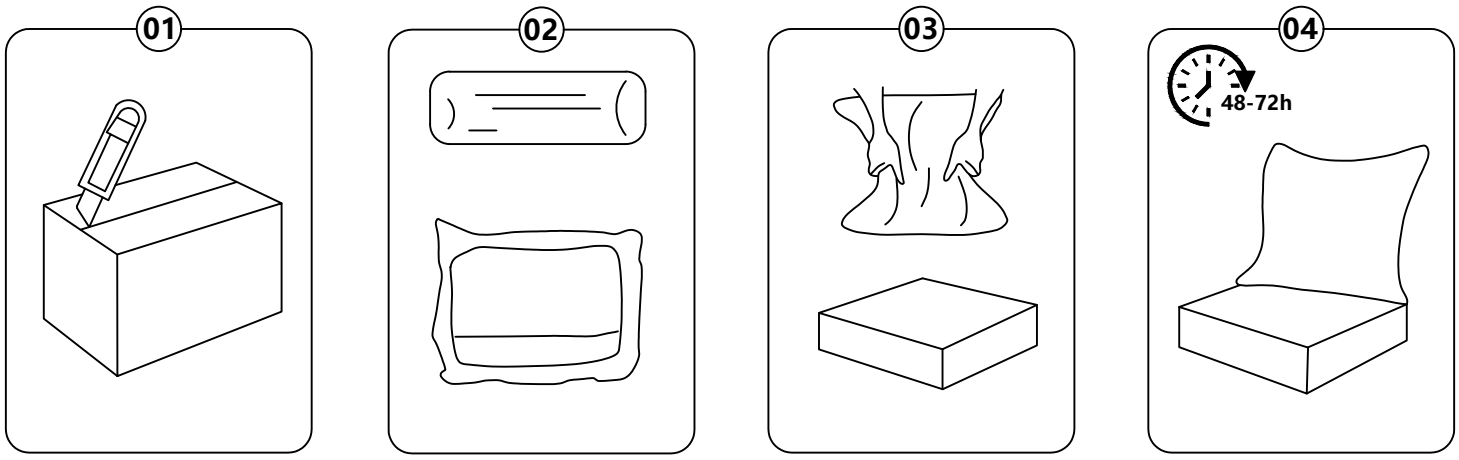

Unpack the Box
Carefully remove the cushion bag from the box.

Open the Vacuum Bag
Release the cushion from the vacuum bag.

Pat and Pinch
Gently pat and pinch the cushion to restore shape.

Allow Time to Restore
It takes about 48-72 hours to regain fullness.

11

Tighten all screws fully, then attach the cotton pad and fasten the Velcro straps for use.

