




MODERN EMBER

Patton

Linear Mantel

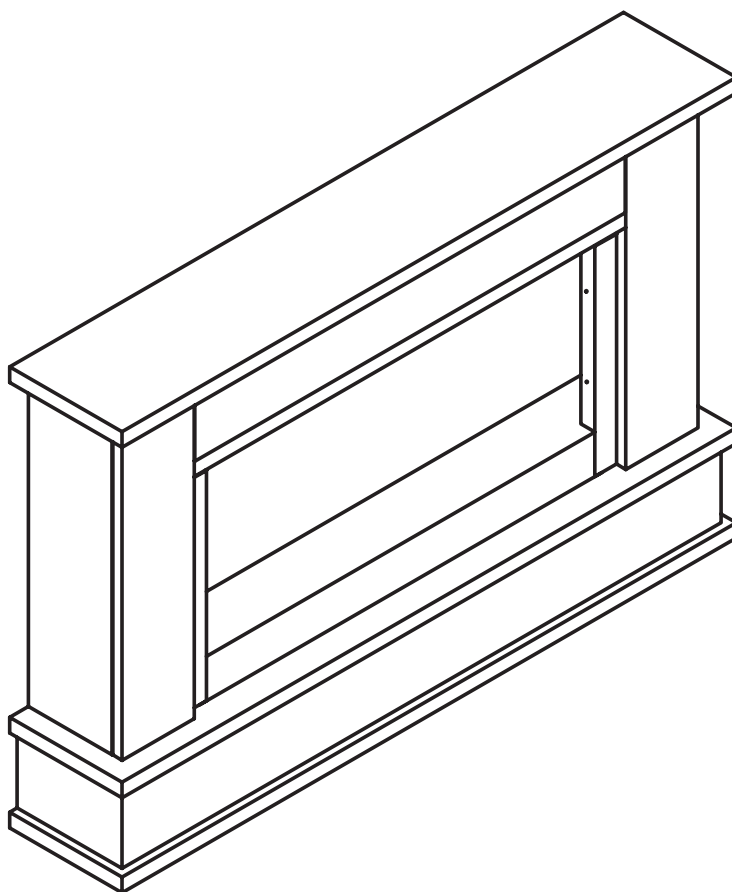

Models:

ME-PATTON-CAB-BLK-1BOX

ME-PATTON-CAB-WHT-1BOX

OWNER'S MANUAL

Important Safety Instructions

Read and understand the entire manual before attempting to assemble, install, or operate the product.

⚠ WARNING

Two people required for some steps.

⚠ WARNING

DO NOT use more than the maximum load as shown in the diagram. The use of TVs or loads heavier than the maximum weights specified may result in instability, causing tip over, which could result in serious injury or death.

⚠ CAUTION


Before assembly and installation, carefully unwrap all parts. Locate and set aside the hardware kit before disposing of the packaging.

⚠ CAUTION

Use care when assembling the product. Take your time and follow the instructions closely.


Maximum Load

MAXIMUM LOAD 99 LBS. (45 KG)

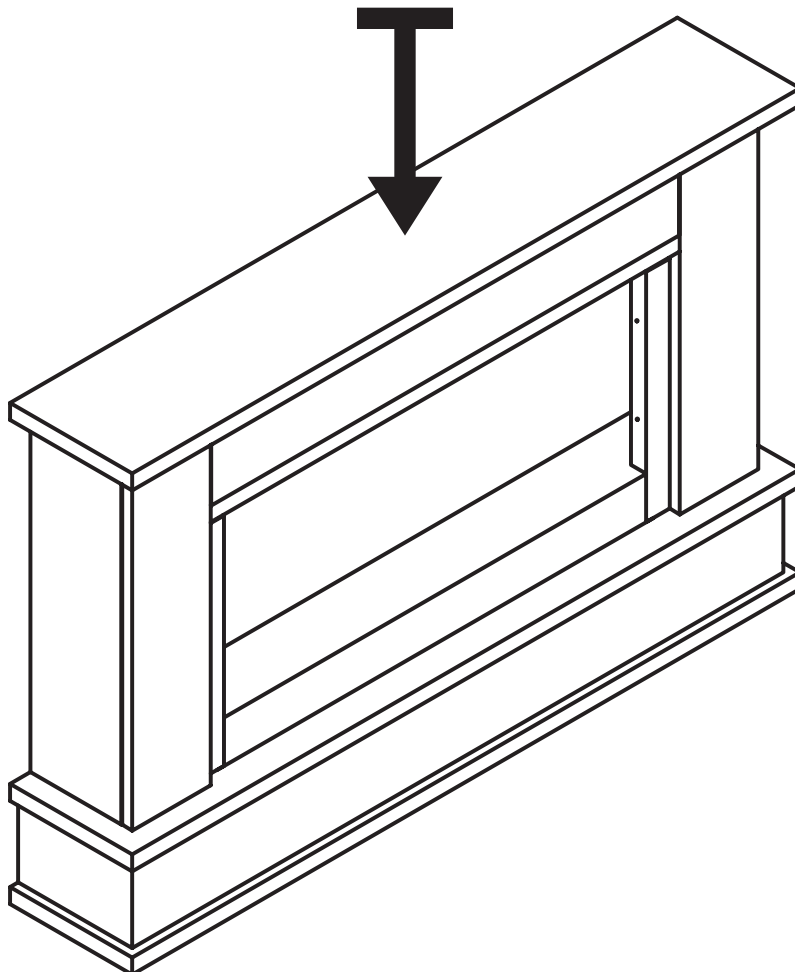

SAVE THESE INSTRUCTIONS FOR FUTURE USE.

Tools Required

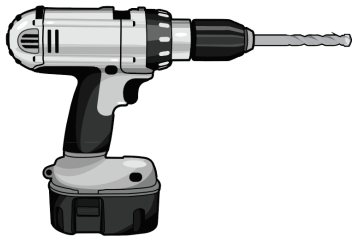

DRILL
(Not Included)




PHILLIPS HEAD SCREWDRIVER
(Not Included)

Parts & Hardware





PREPARATION NOTES

- Before you begin, locate the parts and hardware.
Be sure all parts and hardware are present and can be identified.
- To avoid scratching the finish, assemble the product on a soft, non-abrasive surface such as carpet, thick bedding, or a large blanket.


HARDWARE

PART NO.	DESCRIPTION	QTY
A	 Cam Bolt	26
B	 Cam Lock	26
C	 Screw #8 x 25mm	4
D	 Screw 3.5 x 25mm	4

SAFETY STRAP KIT

PART NO.	DESCRIPTION	QTY
E	 Bracket	2
F	 Nylon Strap 260mm	1
G	 Screw 4 x 50 mm	1
H	 Screw 4 x 16 mm	1

PARTS

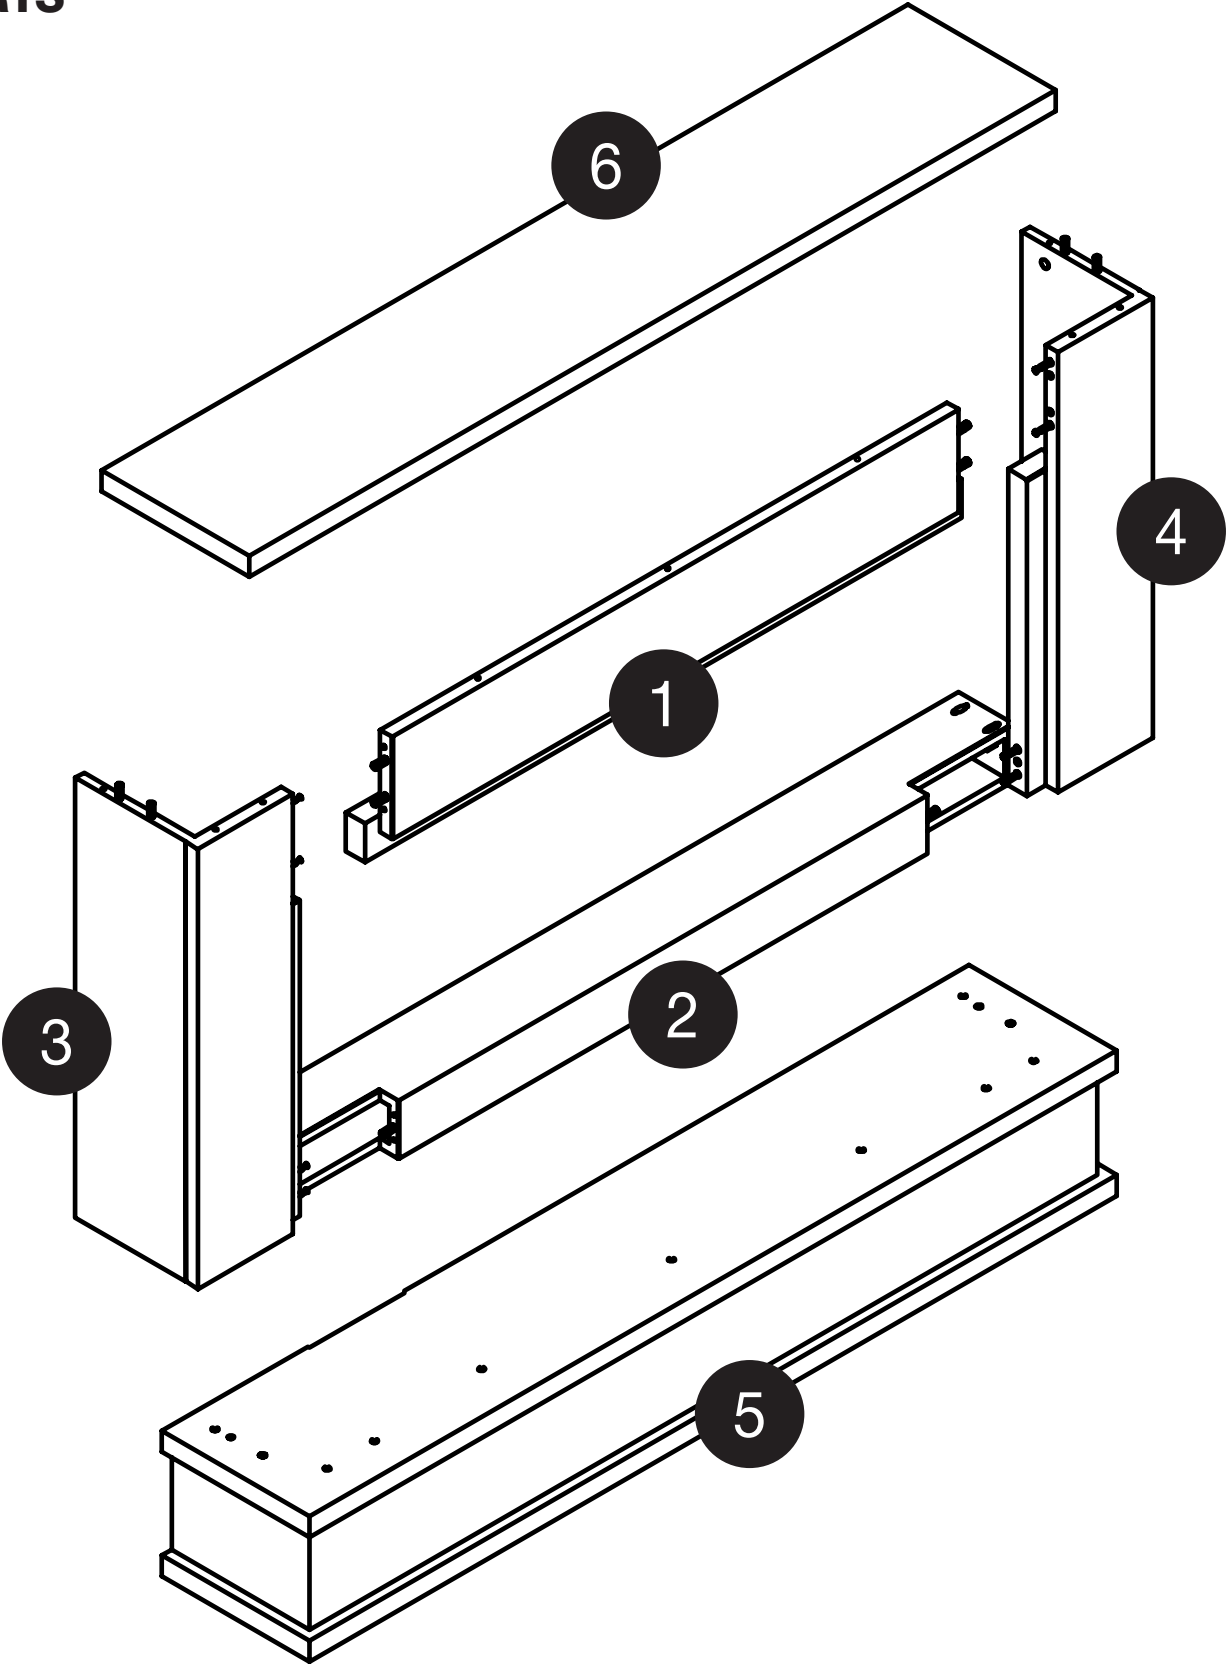


PART NO.	DESCRIPTION	QTY
1	Top Panel	1
2	Bottom Panel	1

PART NO.	DESCRIPTION	QTY
3	Left Leg	1
4	Right Leg	1

PART NO.	DESCRIPTION	QTY
5	Base	1
6	Mantel Top	1

Assembly Instructions

STEP 1




A | Cam Bolt | x8



B | Cam Lock | x8




C | Screw #8 x 25mm | x4

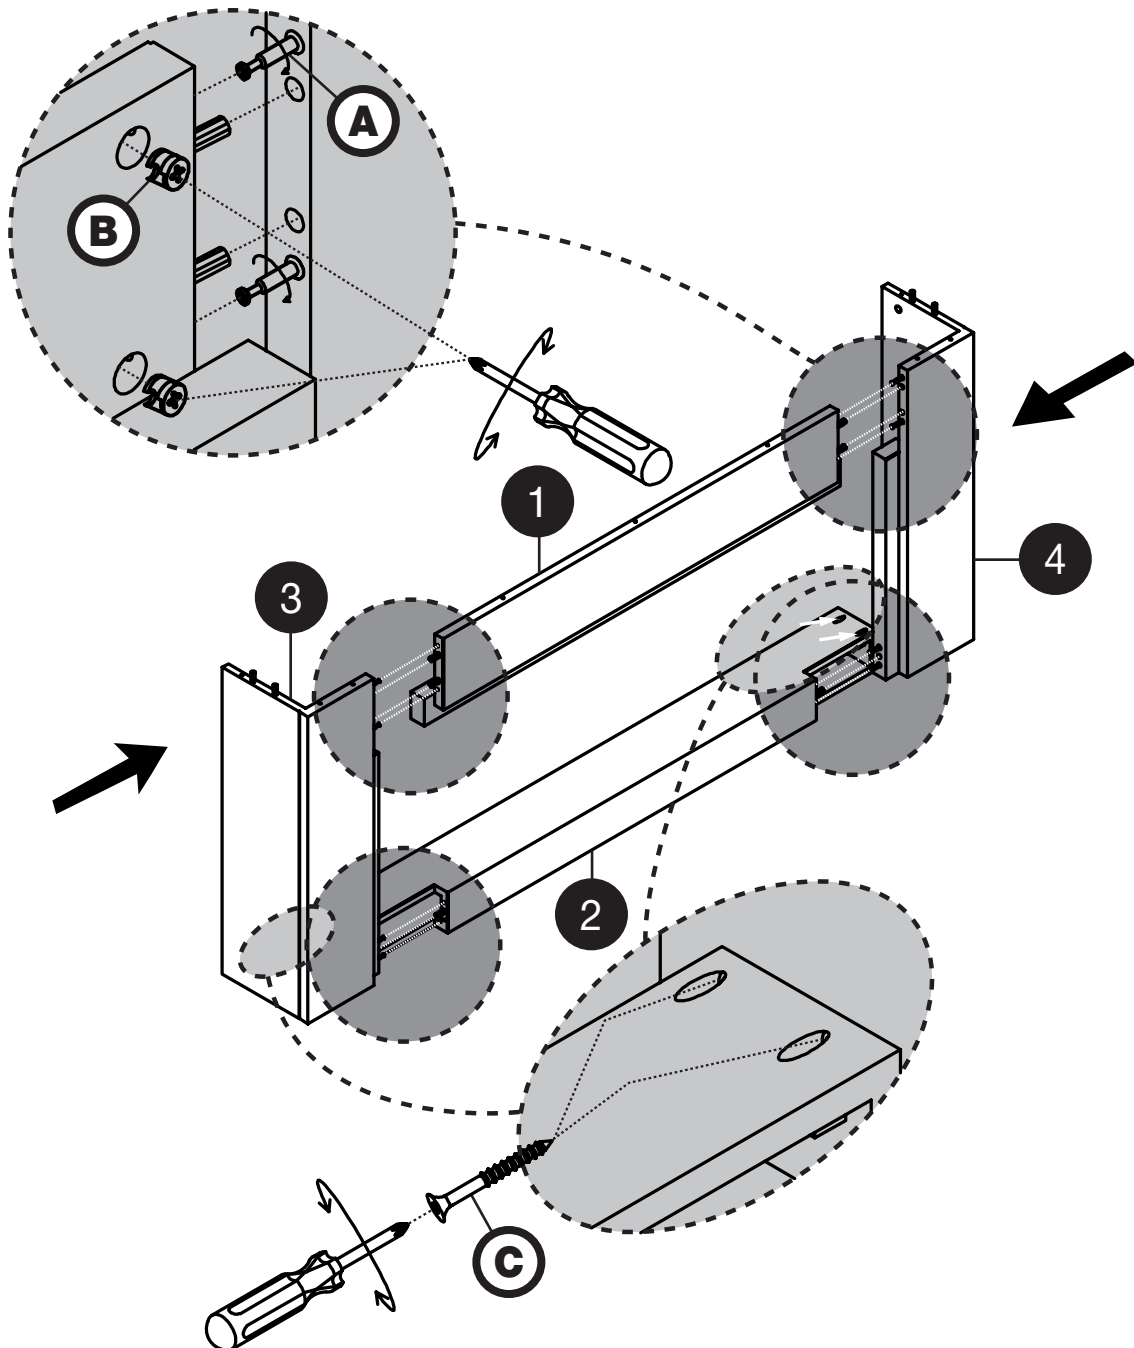

1. Add Cam Bolts **(A)** to Left Leg **(3)** and Right Leg **(4)**.
2. Align the holes of the Left Leg **(3)** and Right Leg **(4)** to the Top Panel **(1)** and Bottom Panel **(2)** and tighten together using Cam Locks **(B)**.
3. Attach Bottom Panel **(2)** further using Screws **(C)** at illustrated locations.

Assembly Instructions


STEP 2



A | Cam Bolt | x9




B | Cam Lock | x9

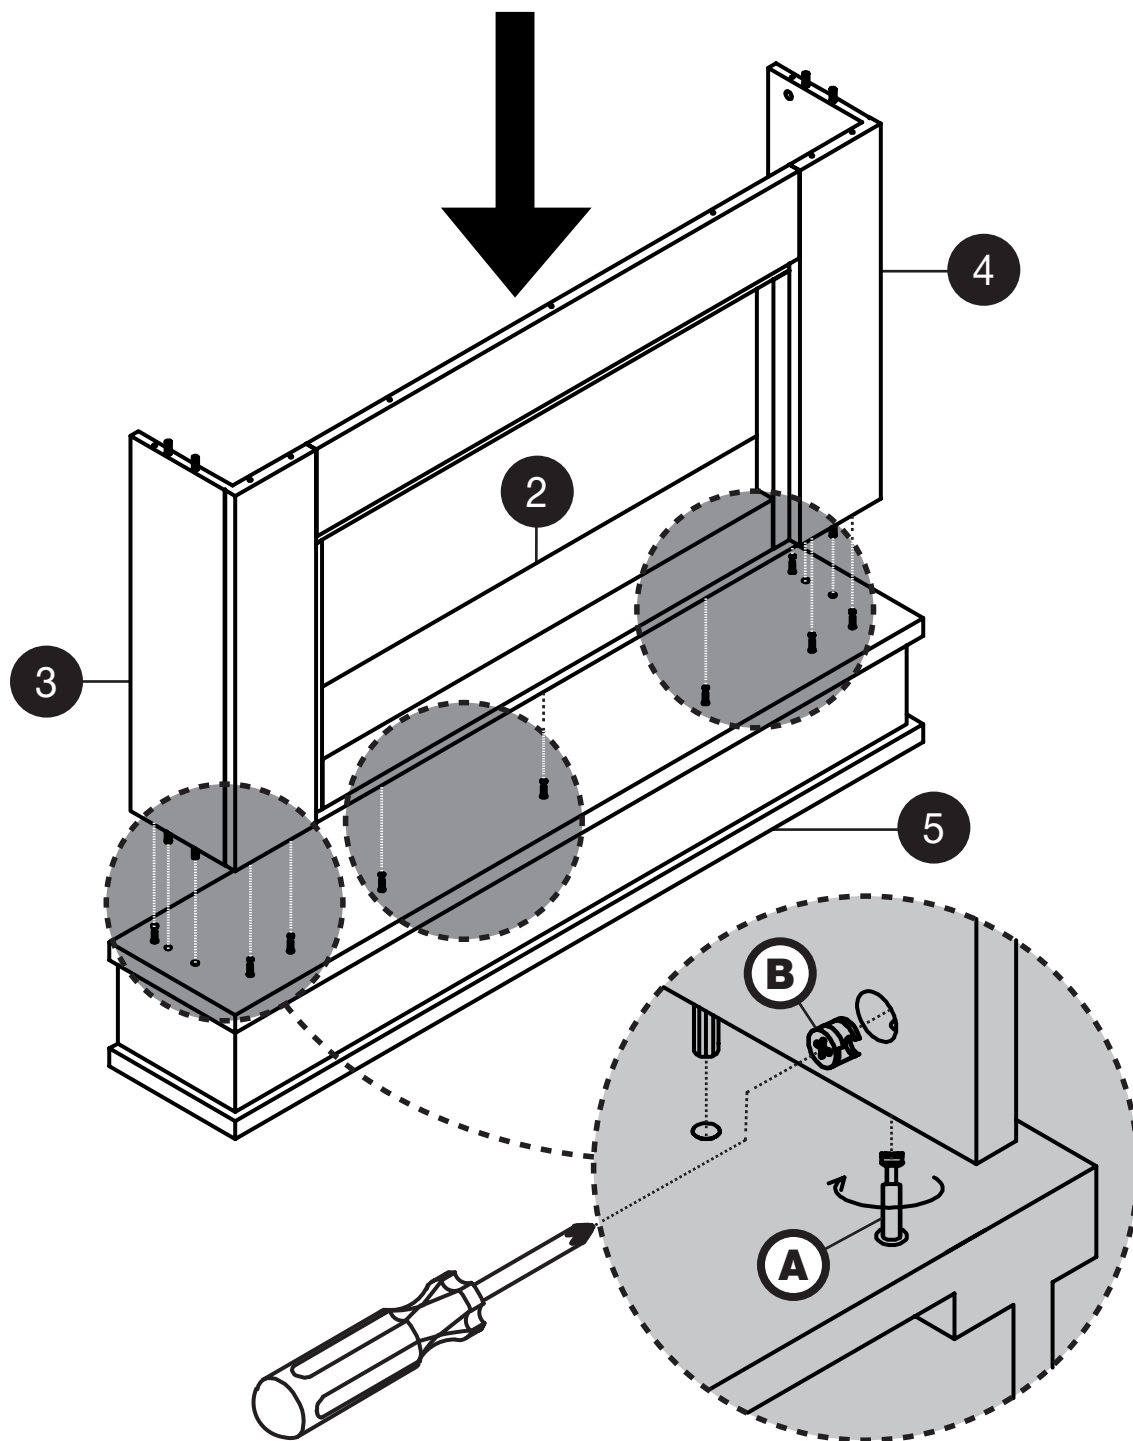

1. Add Cam Bolts **(A)** to Base **(5)**.
2. Align the holes of the Left Leg **(3)**, Right Leg **(4)**, and Bottom Panel **(2)** to the Base **(5)** and tighten together using Cam Locks **(B)**.

Assembly Instructions


STEP 3



A | Cam Bolt | x9



B | Cam Lock | x9

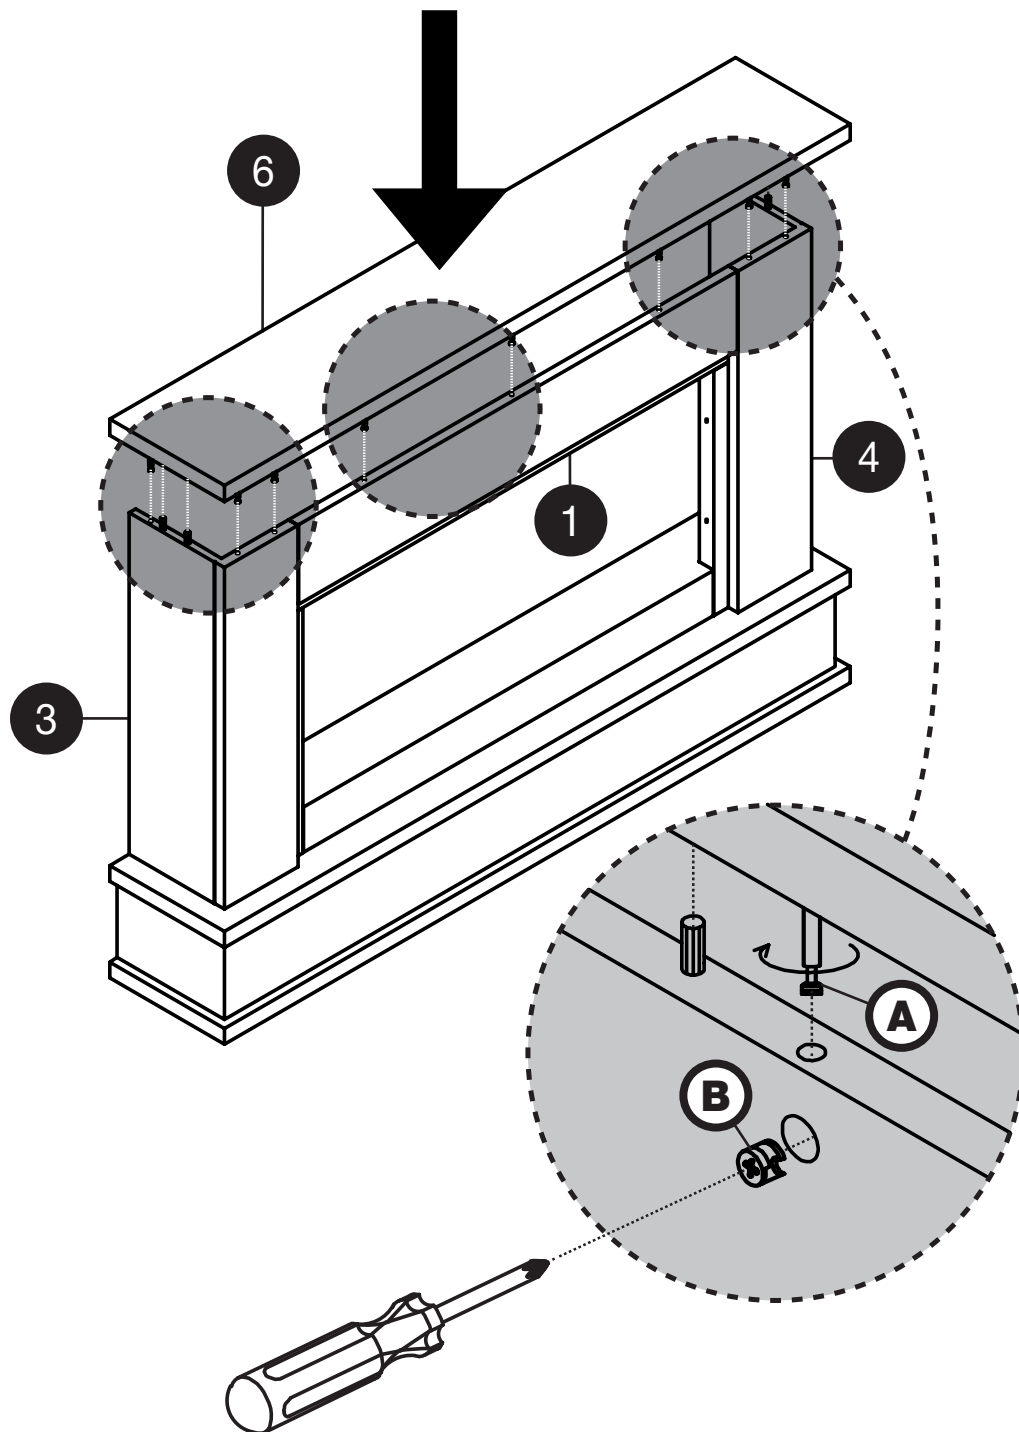


1. Add Cam Bolts **(A)** to Mantel Top **(6)**.
2. Align the holes of the Left Leg **(3)**, Right Leg **(4)**, and Top Panel **(1)** to the Mantel Top **(6)** and tighten together using Cam Locks **(B)**.

Assembly Instructions

STEP 4







D | Screw 3.5 x 25mm | x4

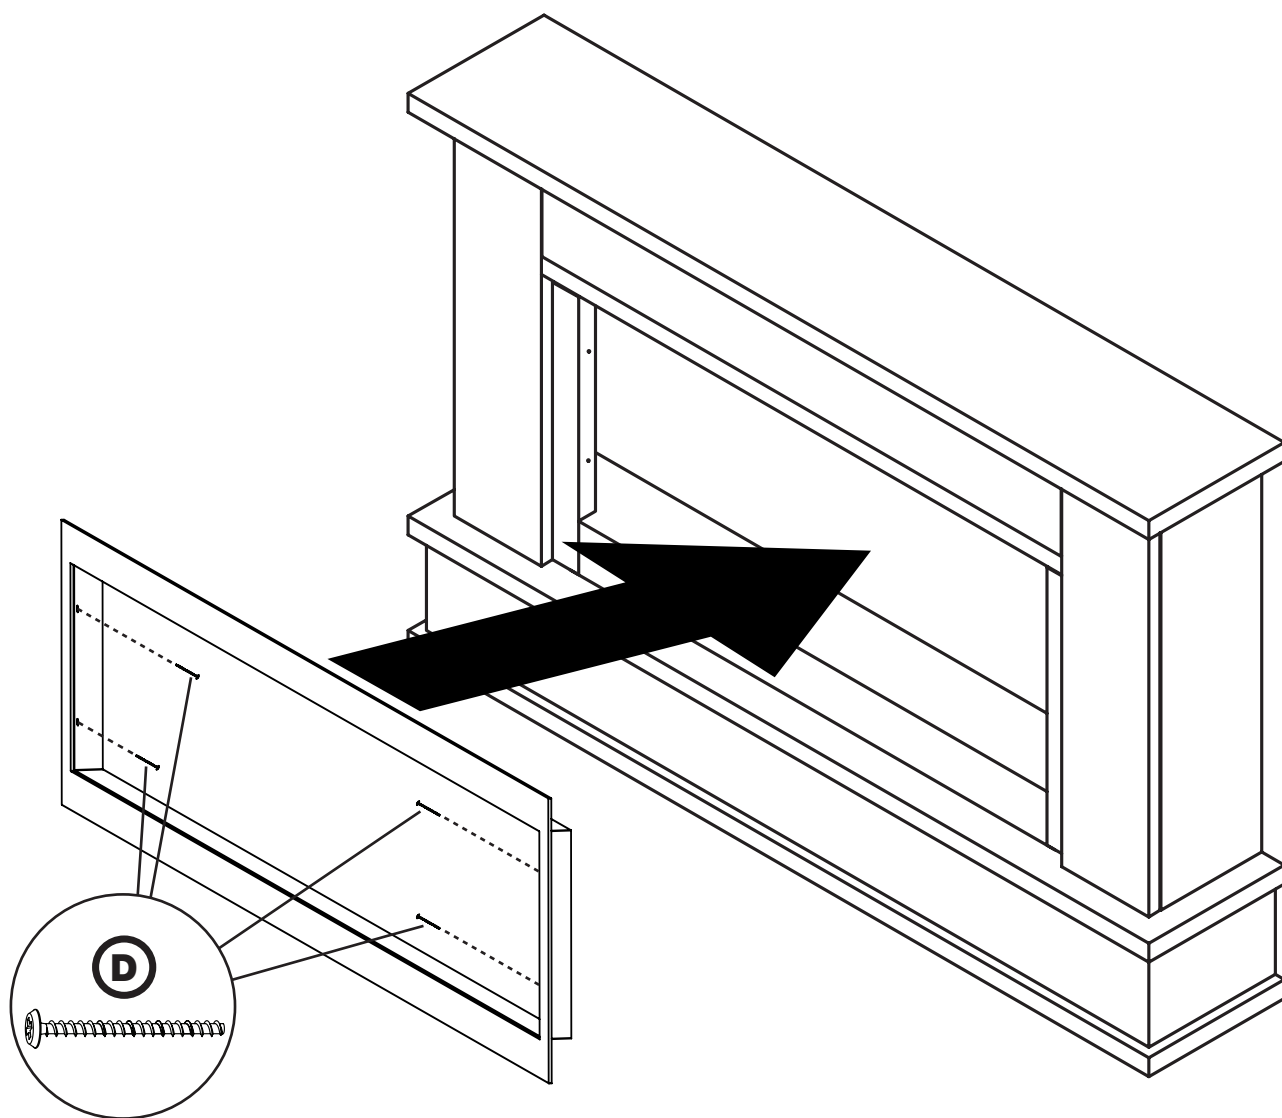

1. Following the instructions in the insert manual, remove the front glass of the fireplace.
2. From the front of the mantel, carefully place the electric fireplace onto the base of the mantel. Make sure it is centered in the opening.
3. Using a screwdriver, secure the fireplace insert to the mantel with the included Screws **(D)**.
4. Add your fireplace media and re-install the glass front according to the electric fireplace manual.

Assembly Instructions

STEP 5

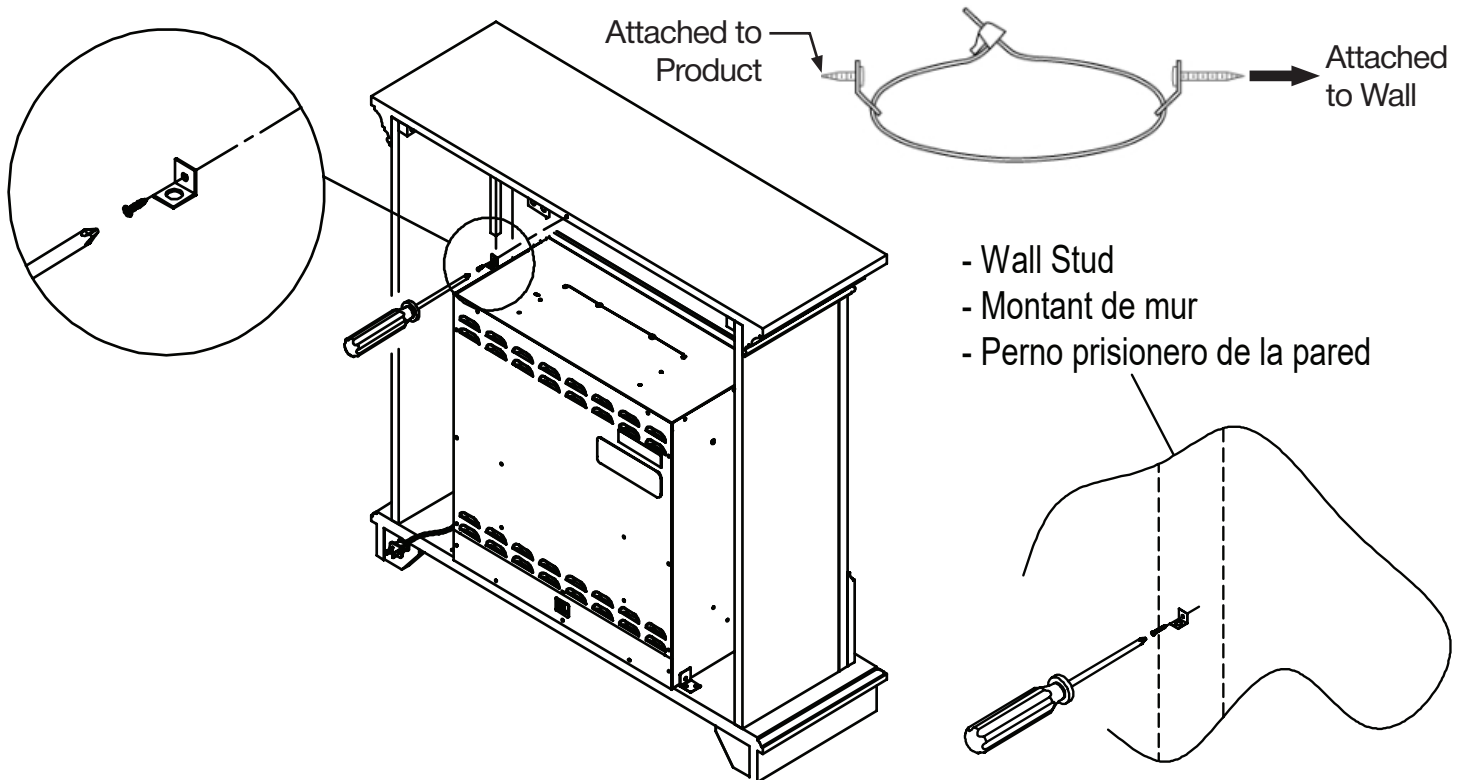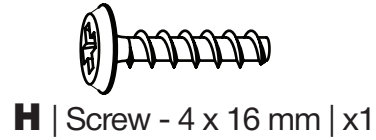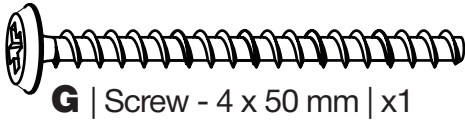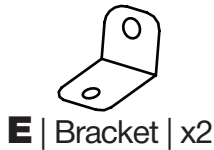

WARNING: This tip restraint must be attached to a wall stud using the 50mm screw (G) enclosed.

- Attach one bracket (E) securely to the back top wood panel of the mantel using the 16mm screw (H) through the smaller hole of the bracket. It is highly recommended to pre-drill a 1/16" hole into the wood mantel to prevent splitting.
- Position the other bracket (E) on the wall over a wall stud 2 inches below the bracket secured to the back of the mantel. Attach to the wall stud using the 50mm screw (G) through the smaller hole of the bracket.
- Place the mantel into position so both brackets are in line vertically.
- Lace the end of the restraint strap (F) through the larger hole in each bracket. Bring both ends together and slide the flat end through the locking end. Pull it through until all slack is removed.
- Confirm that the strap is securely laced and locked.

AVERTISSEMENT! Ce dispositif

- de retenue de pointe doit être fixé à un montant mural à l'aide de la vis de 50 mm (G) fournie.
- Fixez solidement un support (E) à l'arrière panneau de bois supérieur de la cheminée en utilisant le 16 mm vissez (H) dans le petit trou du support. Il est fortement recommandé de pré-percer un trou de 1/16" dans le manteau en bois pour éviter les fissures.
 - Positionnez l'autre support (E) sur le mur au-dessus un montant mural à 2 pouces sous le support fixé à l'arrière de la cheminée. Fixer au montant du mur en utilisant la vis de 50 mm (G) à travers le plus petit trou du support.
 - Placez le manteau en position de manière à ce que les deux supports sont alignés verticalement.
 - Enfilez l'extrémité de la sangle de retenue (F) à travers le plus grand trou dans chaque support. Apportez les deux extrémités ensemble et faites glisser l'extrémité plate à travers le verrouillage fin. Tirez-le jusqu'à ce que tout le jeu soit éliminé.
 - Vérifiez que la sangle est bien lacée et verrouillée.

¡ADVERTENCIA! Esta sujeción de

- punta debe fijarse a un montante de pared utilizando el tornillo de 50 mm (G) adjunto.
- Fije un soporte (E) de forma segura a la parte posterior panel de madera superior de la repisa usando el 16 mm atornille (H) a través del orificio más pequeño del soporte. Se recomienda perforar previamente un orificio de 1/16" en la repisa de madera para evitar que se parta.
 - Coloque el otro soporte (E) en la pared sobre un montante de pared a 2 pulgadas debajo del soporte asegurado hasta la parte trasera de la repisa. Fijar al montante de la pared usando el tornillo de 50 mm (G) a través del orificio más pequeño agujero del soporte.
 - Coloque la repisa en su posición de modo que ambos soportes están alineados verticalmente.
 - Pase el extremo de la correa de sujeción (F) a través el agujero más grande en cada soporte. Trae ambos extremos juntos y deslice el extremo plano a través del bloqueo fin. Tire de él hasta eliminar toda la holgura.
 - Confirme que la correa esté bien atada y bloqueado.



MODERN EMBER

Thank you for purchasing our Patton Linear Mantel!

Each unit has been manufactured to ensure safety and reliability.
Before first use, read the instructions carefully and keep it for further reference.

Questions, problems, missing parts?
Before returning to store, call Customer Service:

8am-5pm CST, Monday - Friday

Phone: 877-430-0703

Email: resolutions@electricfireplacesdirect.com

Retain this manual for future use.

Don't forget to tag us!
#electricfireplacesdirect
#modernember

