


JDZ9635A
ASSEMBLY INSTRUCTION

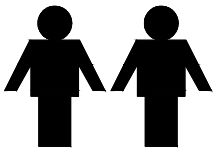



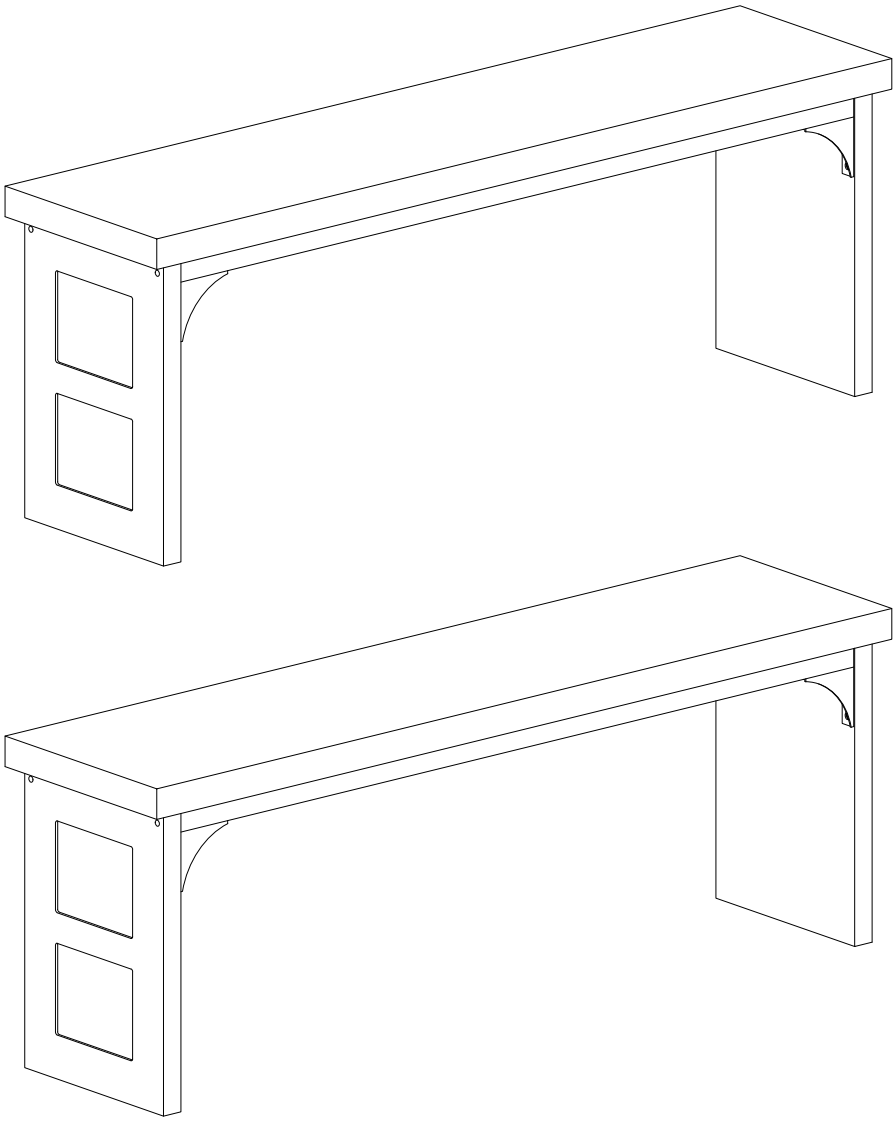





Notes: Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

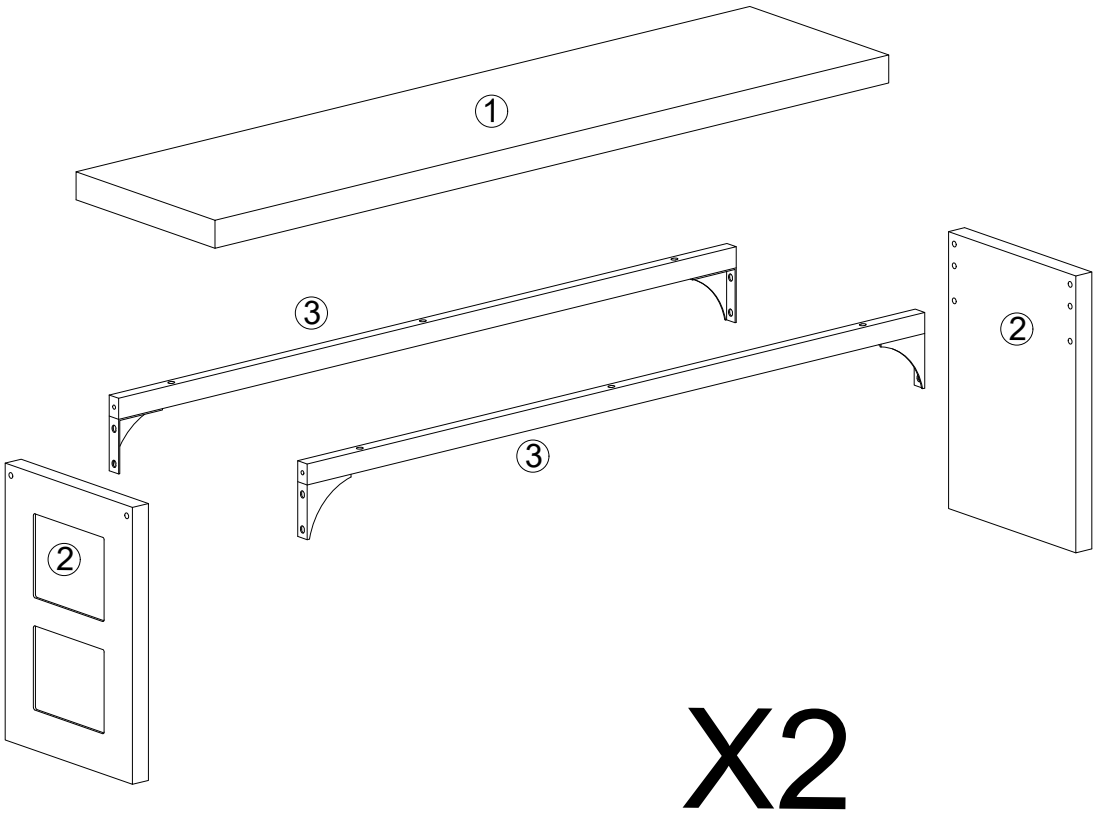

X2


A	X16+1	B	X12+1	C	X8+1	D	X1
							
M6X15mm		M6X45mm		M6X50mm		M4X55mm	

STEP 1

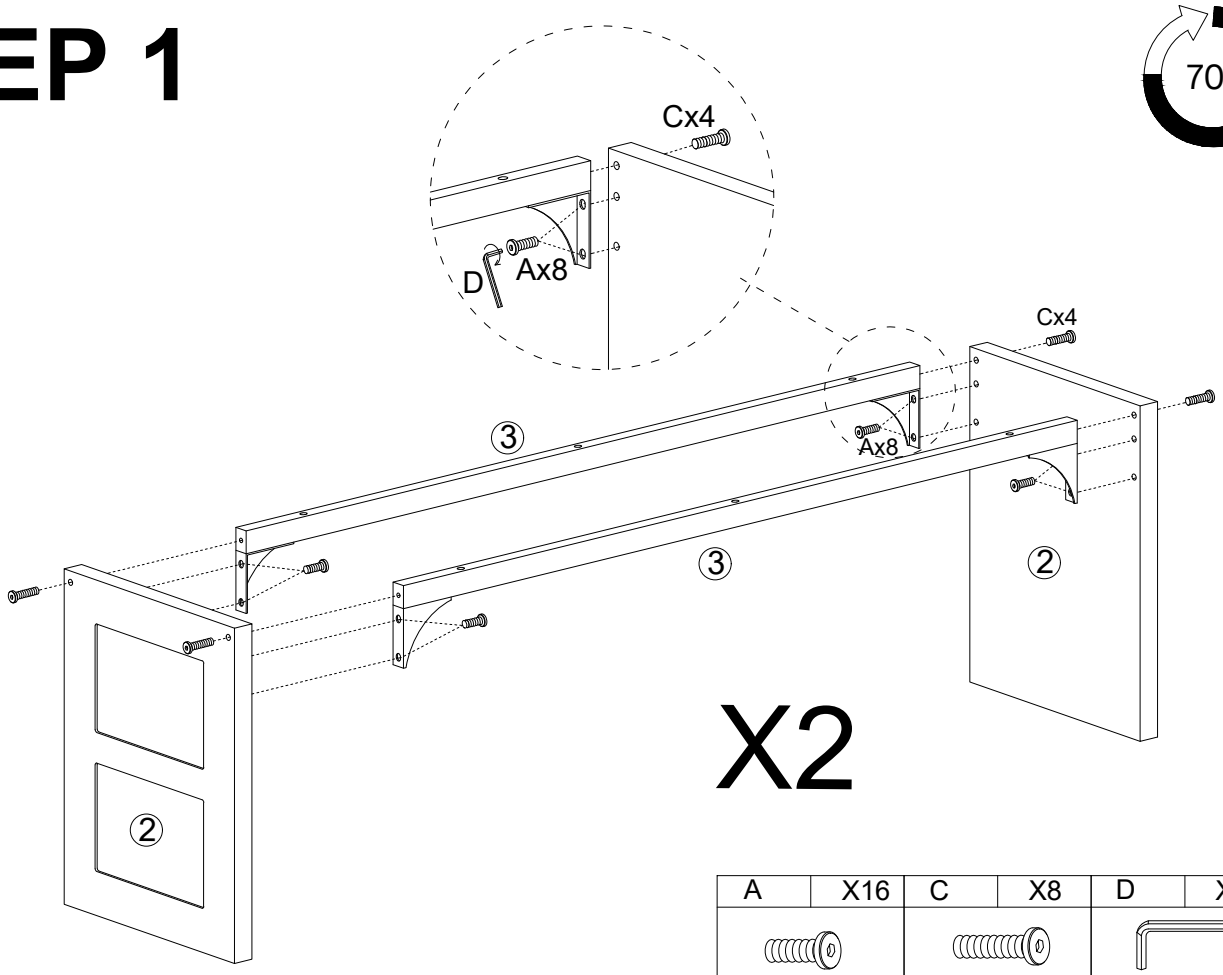

A	X16	C	X8	D	X1
M6X15mm		M6X50mm		M4X55mm	

STEP 2

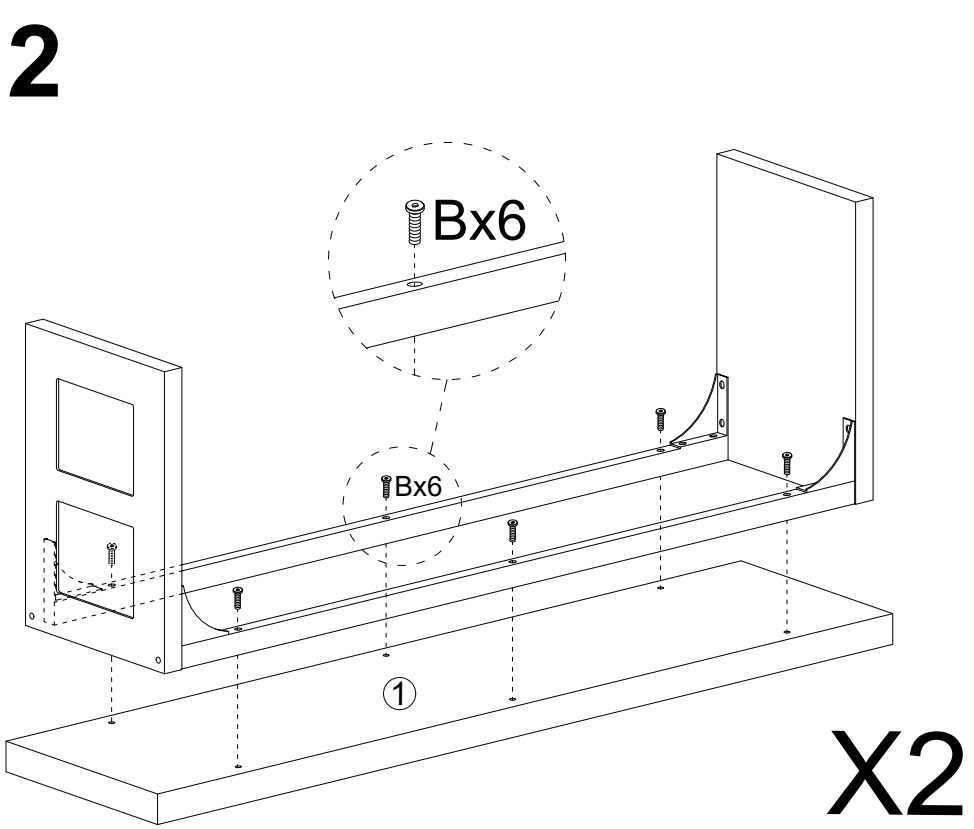

B	X12
M6X45mm	

STEP 3

