
# Vanity Table

## Assembly Instructions -Please keep for future reference


N844P547134

Side cabinet installable on left or right

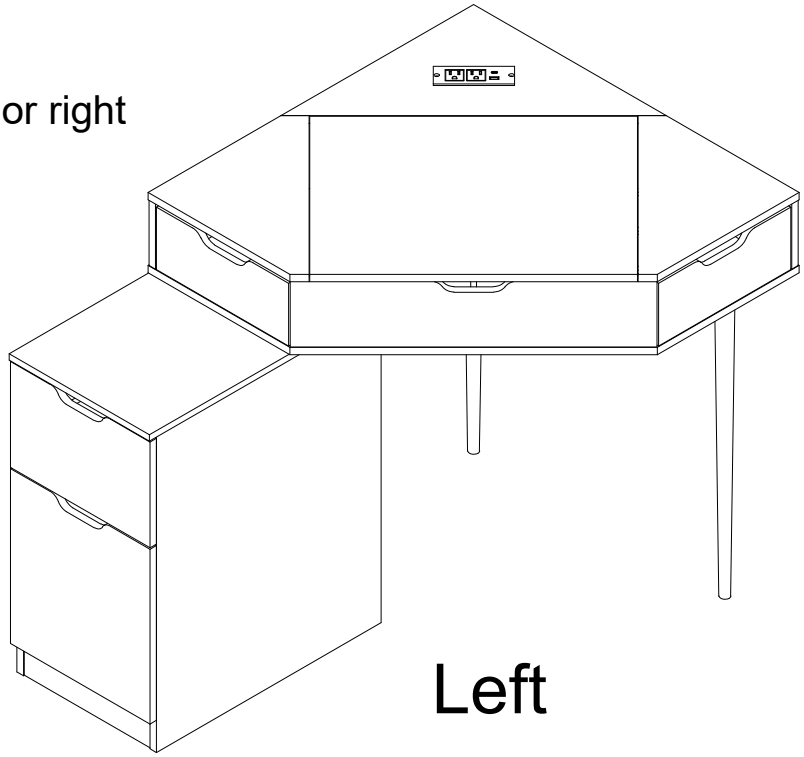

Left

Or

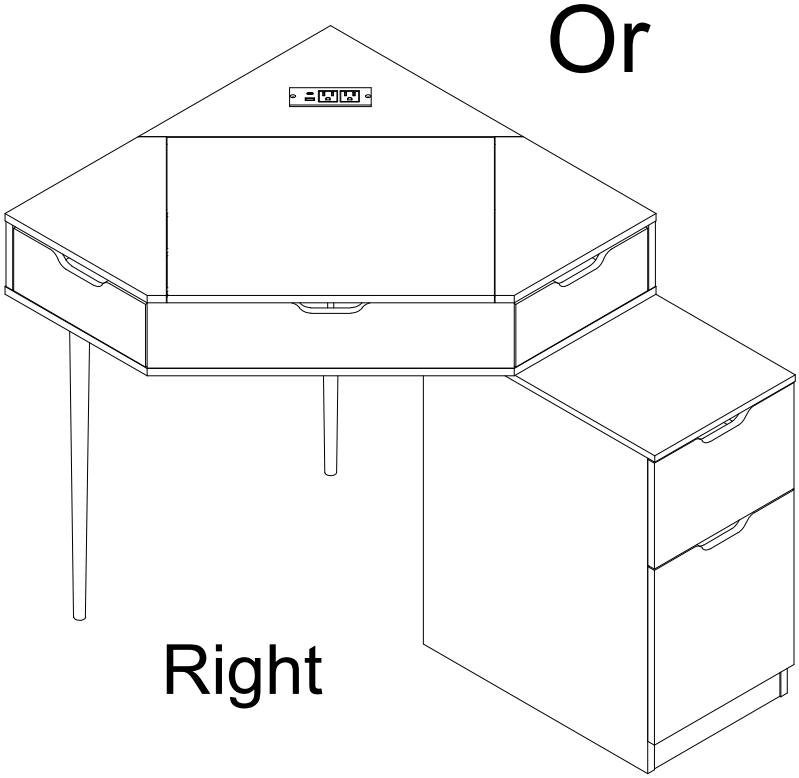

Right

**WARNING**




This product is NOT a Clothing Storage Unit (CSU).

DO NOT use it for clothing storage.

Improper use may cause furniture tipover.


## Important - Please read these Instructions fully before starting assembly

# Safety and Care Advice

## Important - Please read these instructions fully before starting assembly

. Check you have all the components and tools listed on the following pages.
. Remove all fittings from the plastic bags and separate them into their groups.
. Keep children and animals away from the work area, small parts could choke if swallowed.
. Make sure you have enough space to layout the parts before starting.

. During assembly do not stand or put weight on the product, this could cause damage.
. Assemble the item as close to its final position (in the same room) as possible.
. Assemble on a soft level surface to avoid damaging the unit or your floor.
. Parts of the assembly will be easier with 2 people.

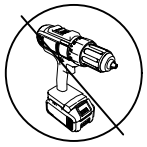

. To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and malntenance

. Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

. From time to time check that there are no loose screws on this unit.

.This product should not be discarded with household waste. Take to your local authorlty waste disposal centre.

## Handy Hints

. Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

. Regularly check and ensure That all bolts and fittings are tightend properly.

**WARNING**
In order to help prevent overturning -
please follow these Instructlons

To help prevent product toppling over please follow the below steps:-











Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type


# Components -Fittings

## Please check you have all the panels llsted below

Note:The quantities below are the correct amount to complete the assembly. in some cases, more fittings may be supplied than are required.
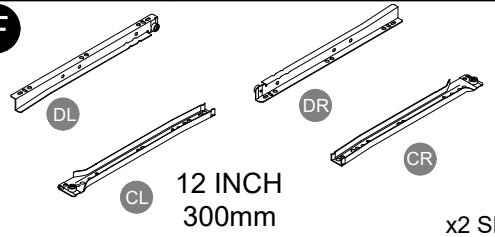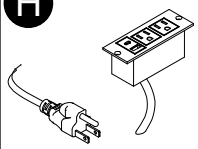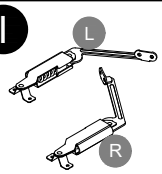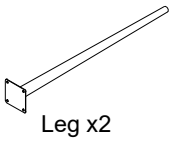
| | | | | | |
|---|---|---|---|---|---|
| A  Cam bolt x 46+2 | B  Cam lock x 46+2 | C  Ø6*30mm Dowel x 34+5 | D  M4*35mm Screw x 23+2 | E  M4*20mm Screw x 2 | G  M3.5*14mm Screw x 70+2 |
| F   12 INCH 300mm x2 SET | H  Power Outlet 1500mm x 6 | I   Cabinet lift-up stay x 1 pair | J  Hinge x 6 | | |
| K  Nail x 8 | L  M3*16mm Screw x 8 | M  Nail Leg x4+1 | N  Bolt x10+1 | O  Nuts x8 | P  Open-end wrench x1 |
| Q  Leg x2 | R  Door stop x2 | S  S1 L Bracket x 2  S2 M4*12mm Screw x 2  S3 Wall plug x 2  S4 M4*35mm Screw x 2 | T  Sticker x30 | | |
| U  Small Phillips screwdriver x 1 | | | | | |


## Tools required

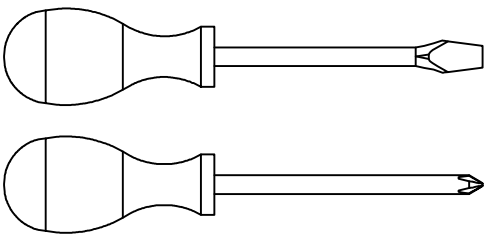


Not included in package
medium and large
Phillips screwdriver

# Using Camlocks


| Step 1 |
| --- |
| Connect the male camlockas diected in the assemblyinstructions using a scewdriver. |

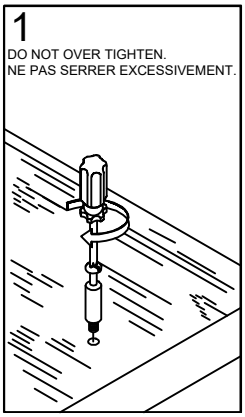



| Step 2 |
| --- |
| Push the male camlockinto the entry hole. |

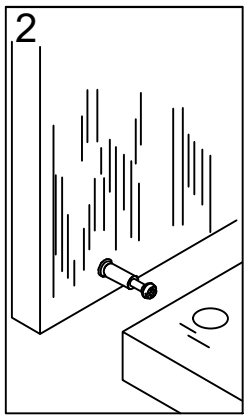


| Step 3 |
| --- |
| Insert the female camlock asshown in the instruction.<br><br>Note:ensure that the arowon the top of the camlock<br>points towards the entry holefor the male camlock. |

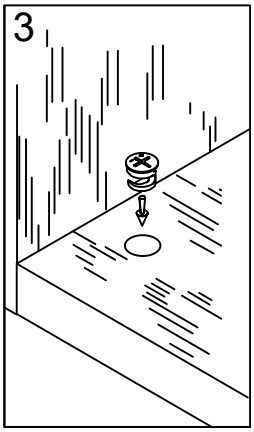

















| Step 4 |
| --- |
| Turn the female camlock clockwise with a screwdriver.<br><br>You should feel a click when the camlock is locked in place<br><br>The joint is now secure |

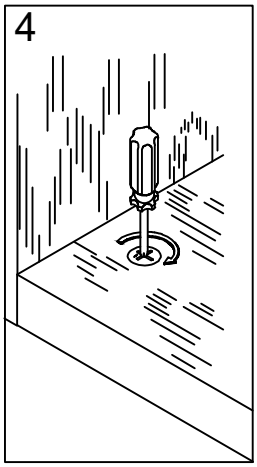

# Components - Parts

Please check you have all the panels listed below.Please note that there are 1 boxes of this product.















N844P547134
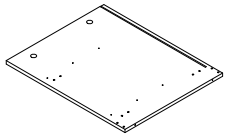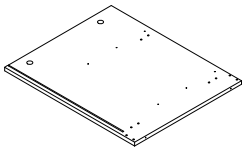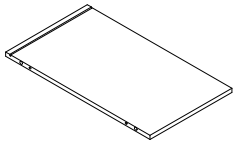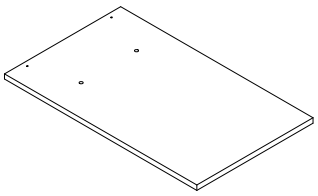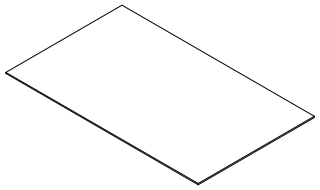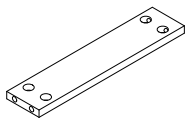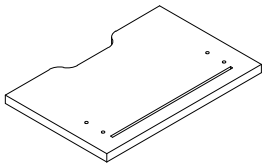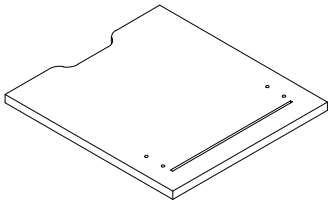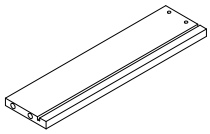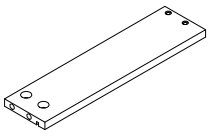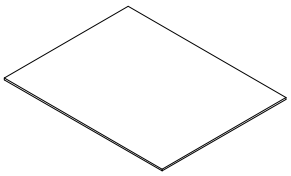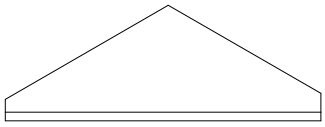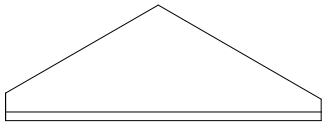
| | | |
|---|---|---|
| 1  1PC | 2  1PC | 3  1PC |
| 4  1PC | 5  1PC | 6  3PCS |
| 7  1PC | 8  1PC | 9  2PCS |
| 10  2PCS | 11  2PCS | 12  2PCS |
| 13  1PC | 14  1PC | 15  1PC |


# Components - Parts

Please check you have all the panels listed below.Please note that there are 1 boxes of this product.


N844P547134

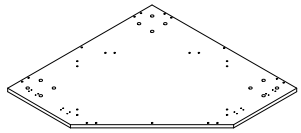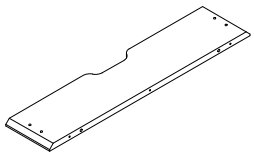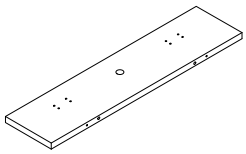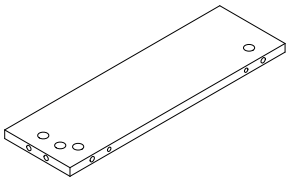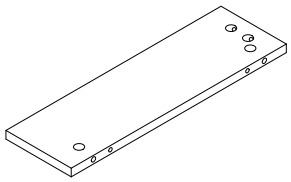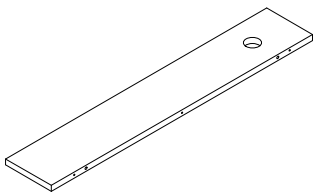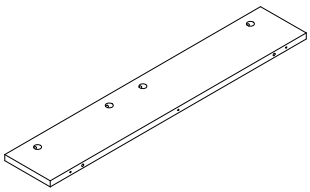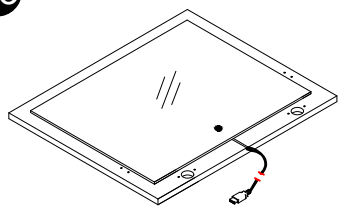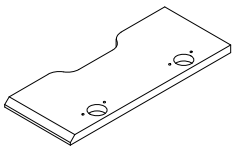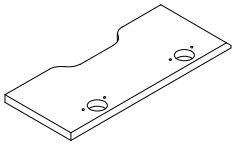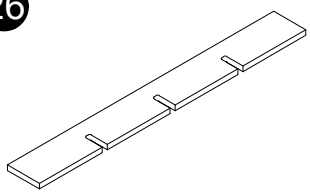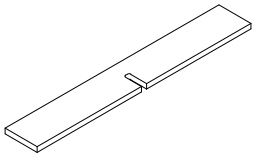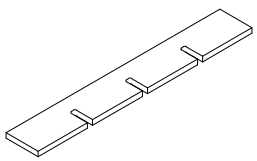
| | | |
|---|---|---|
| 16  1PC | 17  1PC | 18  1PC |
| 19  1PC | 20  1PC | 21  1PC |
| 22  1PC | 23  1PC | 24  1PC |
| 25  1PC | 26  1PC | 27  2PCS |
| 28  2PCS | 29  1PC | |



# Assembly Instructions

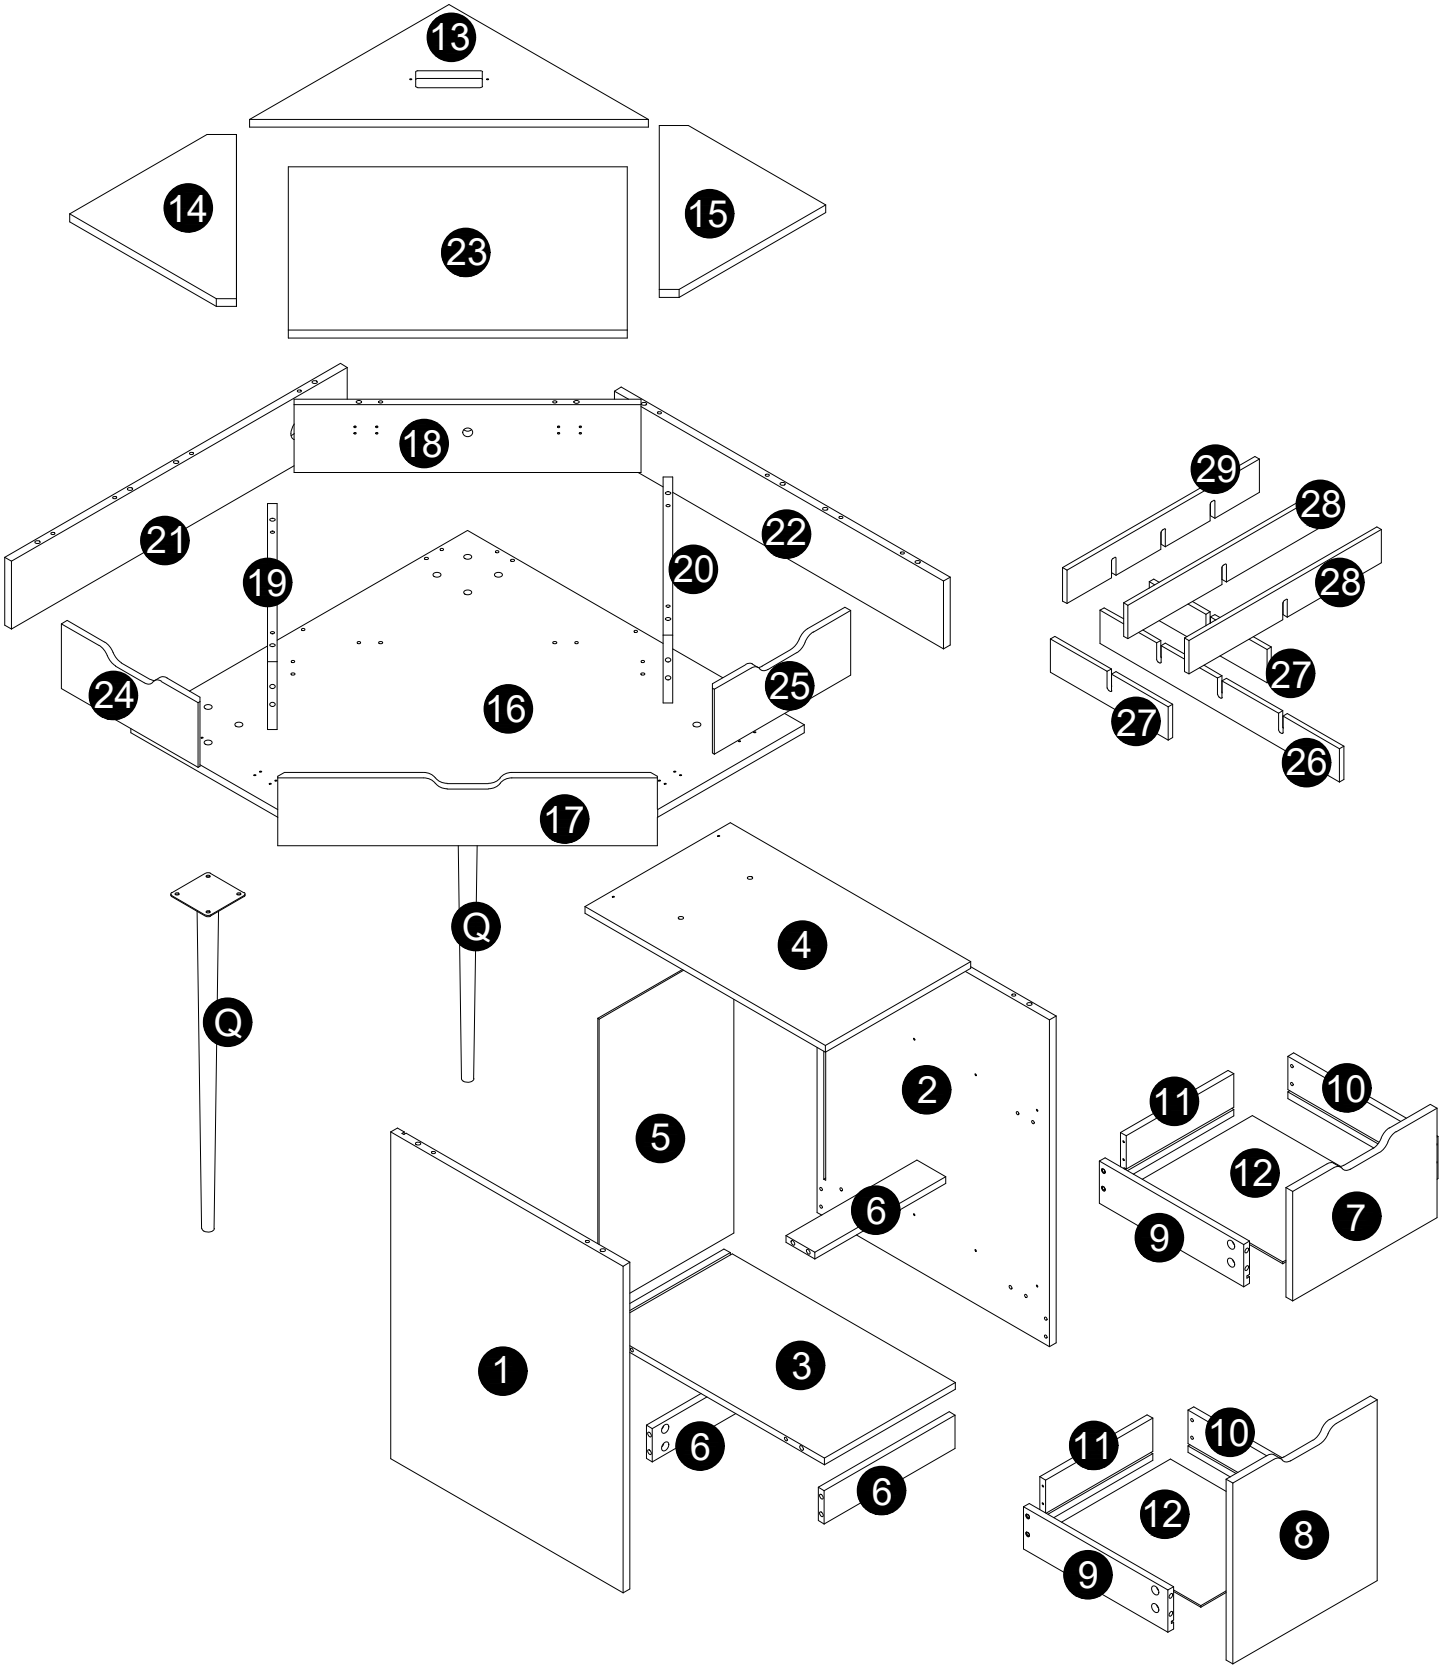


## Step 1

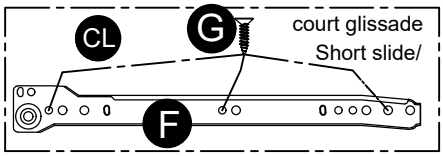



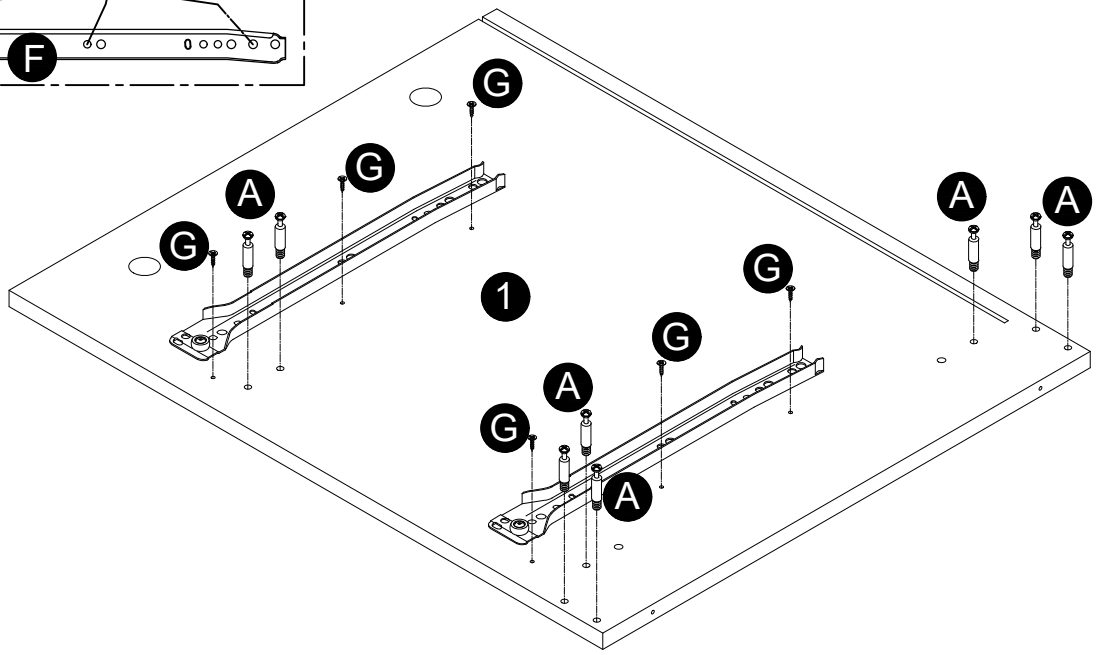


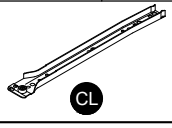

| A | x8 | F | x2 | G | x6 |
|---|---|---|---|---|---|
|  | |  | |  | |

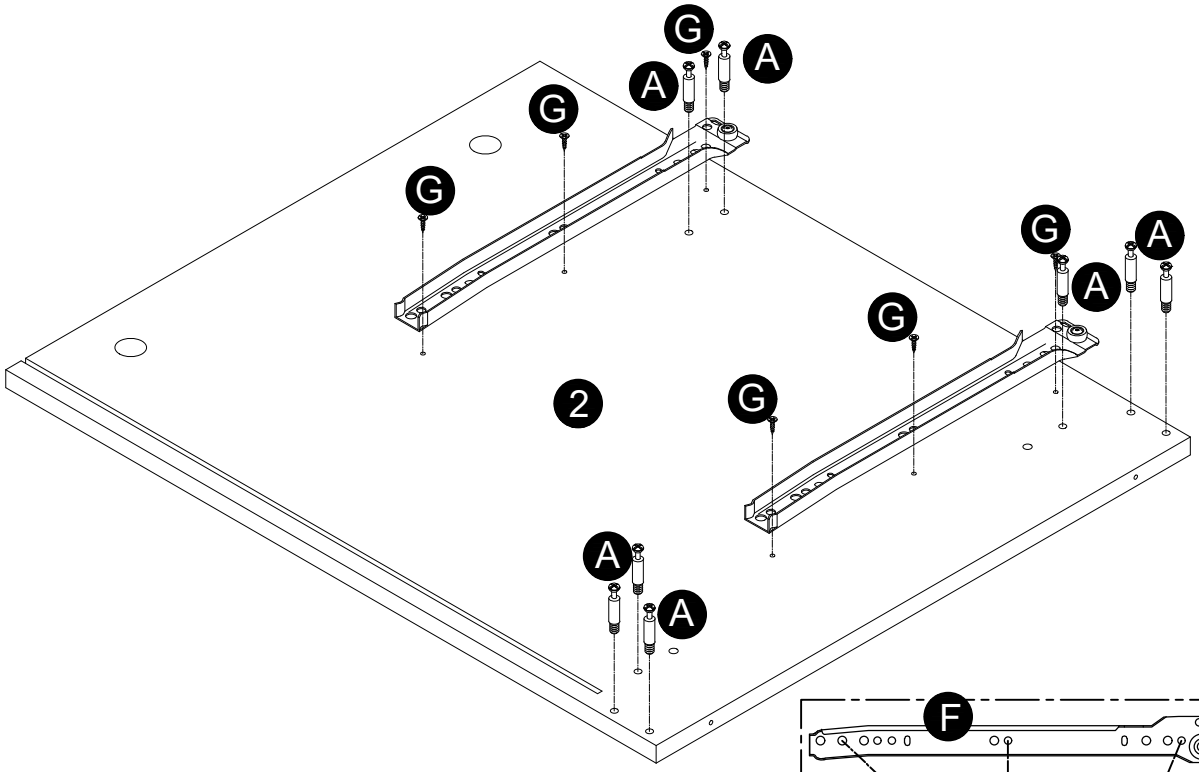
## Step 2

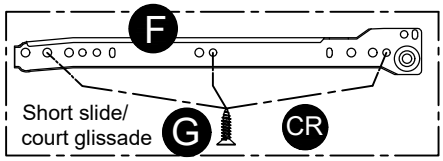

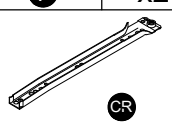

| A | x8 | F | x2 | G | x6 |
|---|---|---|---|---|---|
|  | |  | |  | |

Step 3

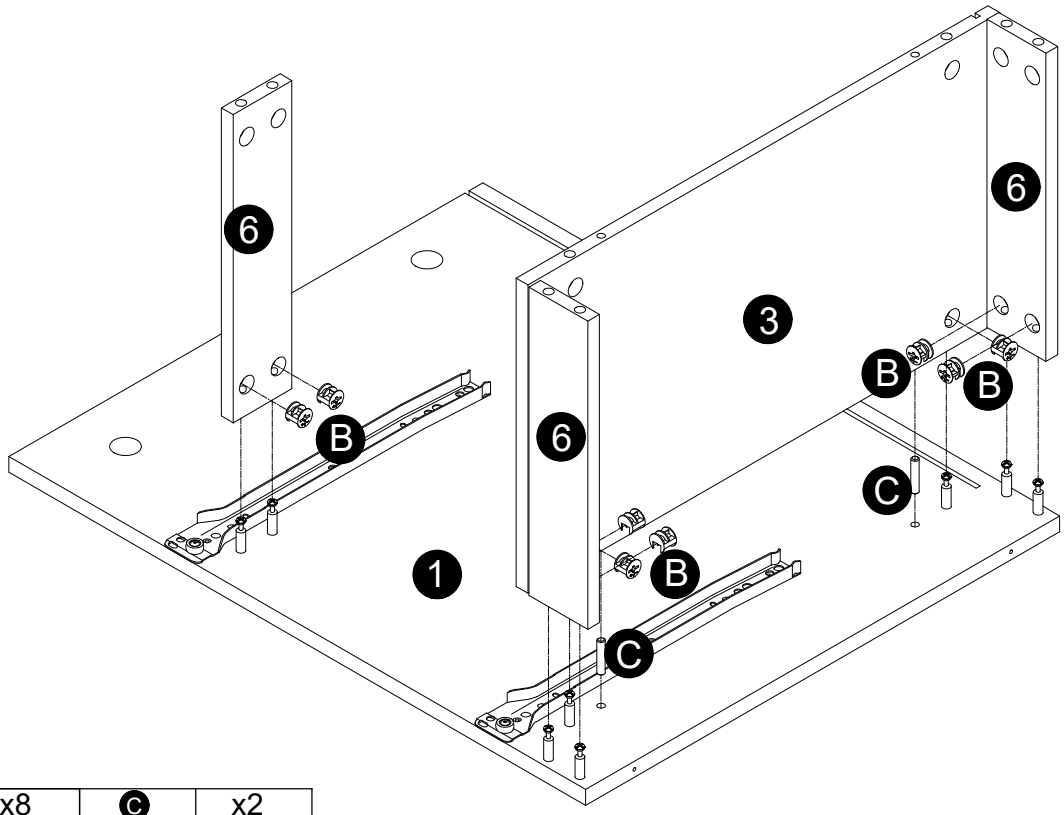


| B | x8 | C | x2 |
|---|---|---|---|
|  | |  | |


Step 4

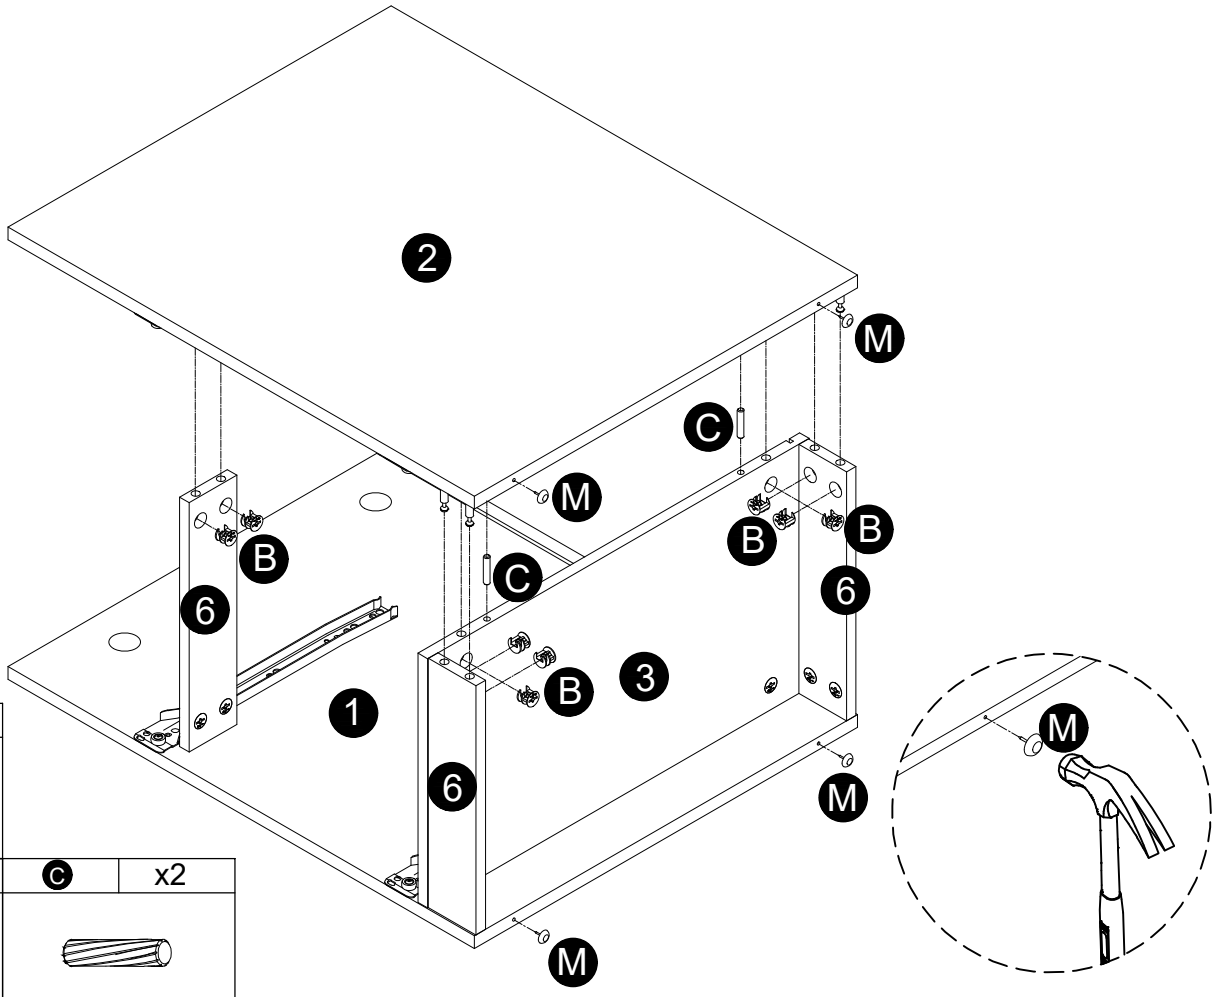



| M | x4 |
|---|---|
|  | |

| B | x8 | C | x2 |
|---|---|---|---|
|  | |  | |


Step 5

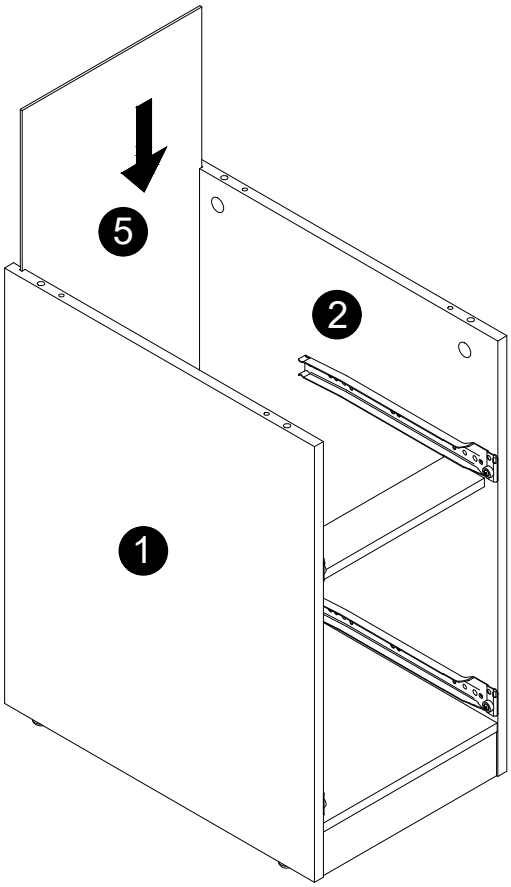



Step 6

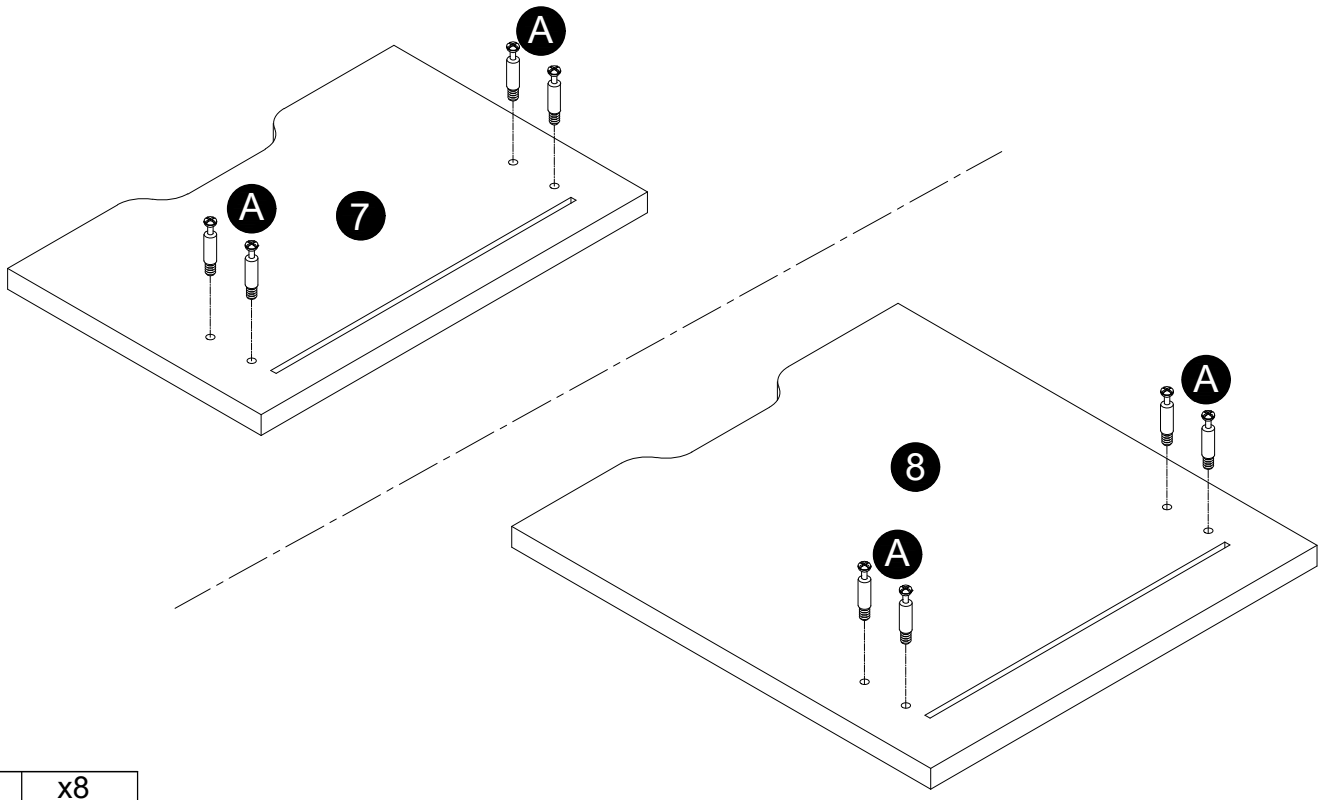



| A | x8 |
|---|---|




Step 7

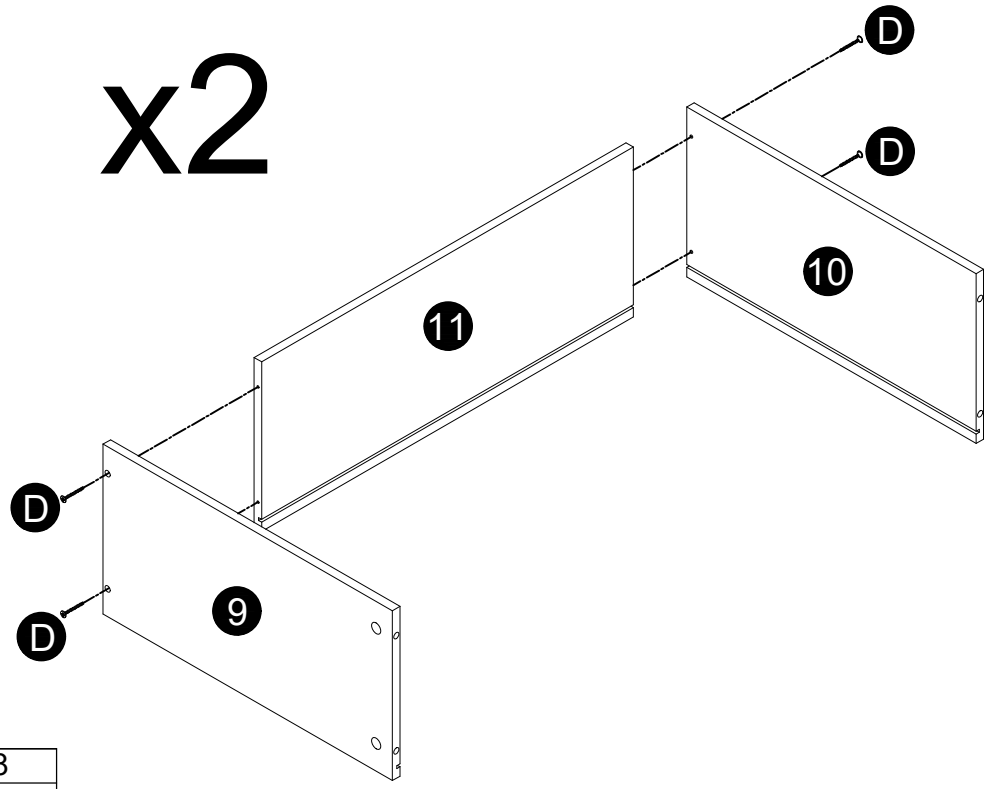



| D | x8 |
|---|---|
|  | |

Step 8

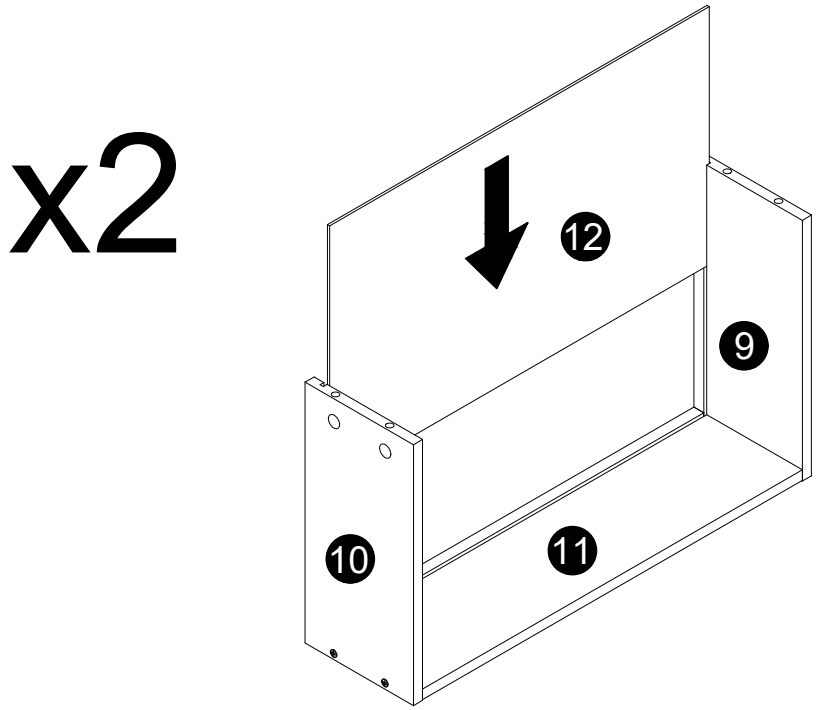


## Step 9

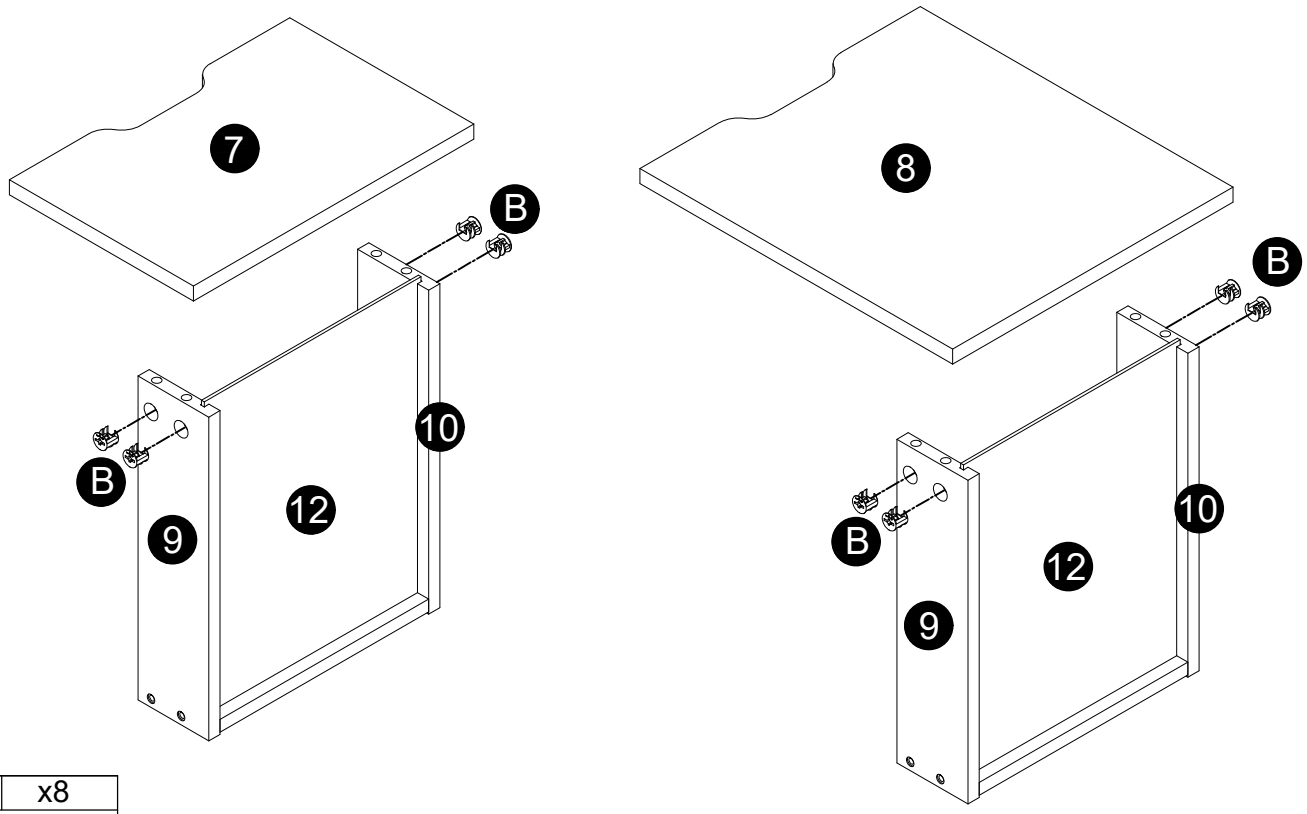



| B | x8 |
|---|---|




## Step 10


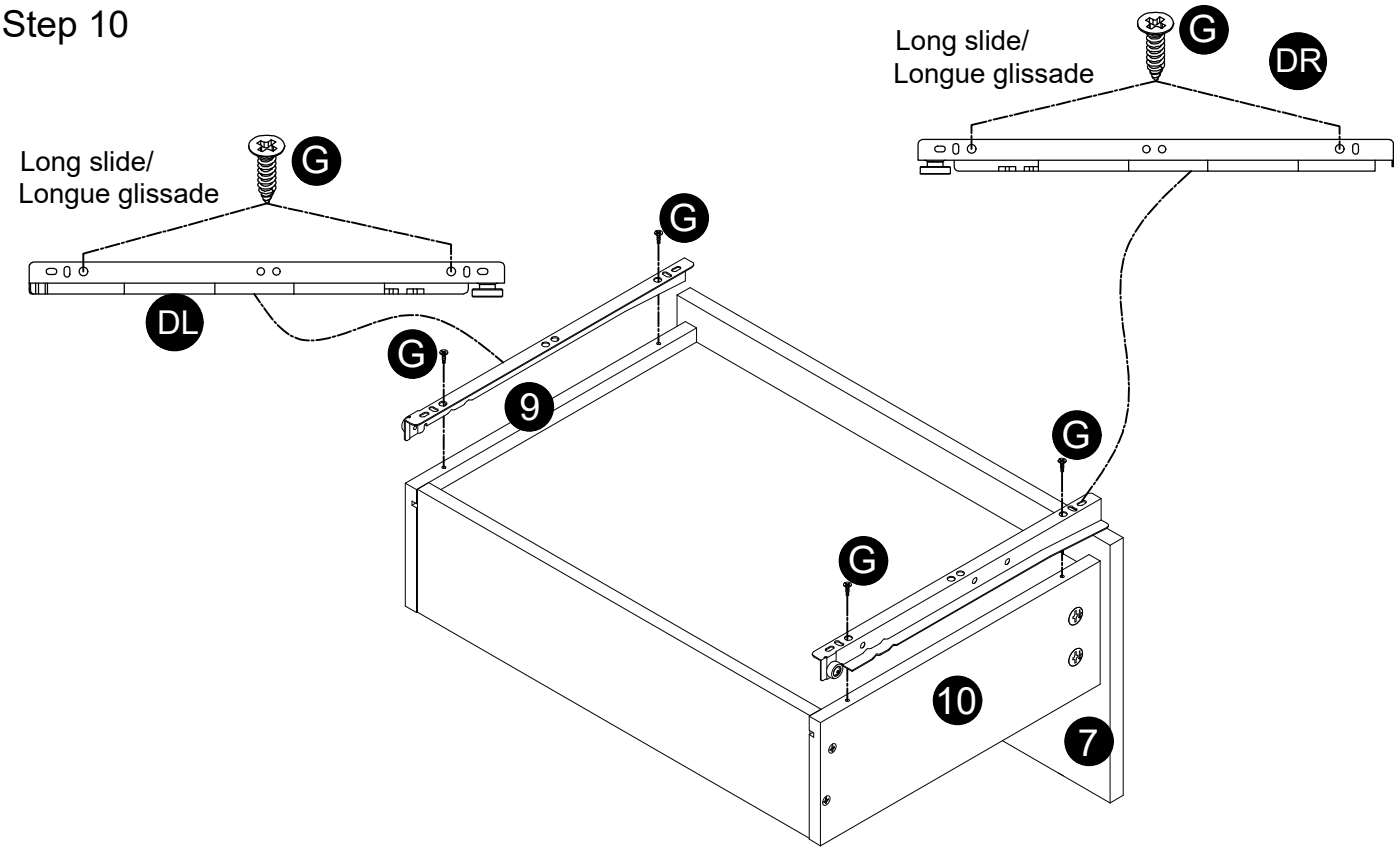



| G | x4 | F | x1 | F | x1 |
|---|---|---|---|---|---|

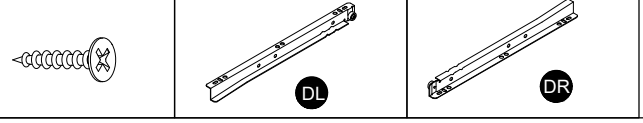



## Step 11

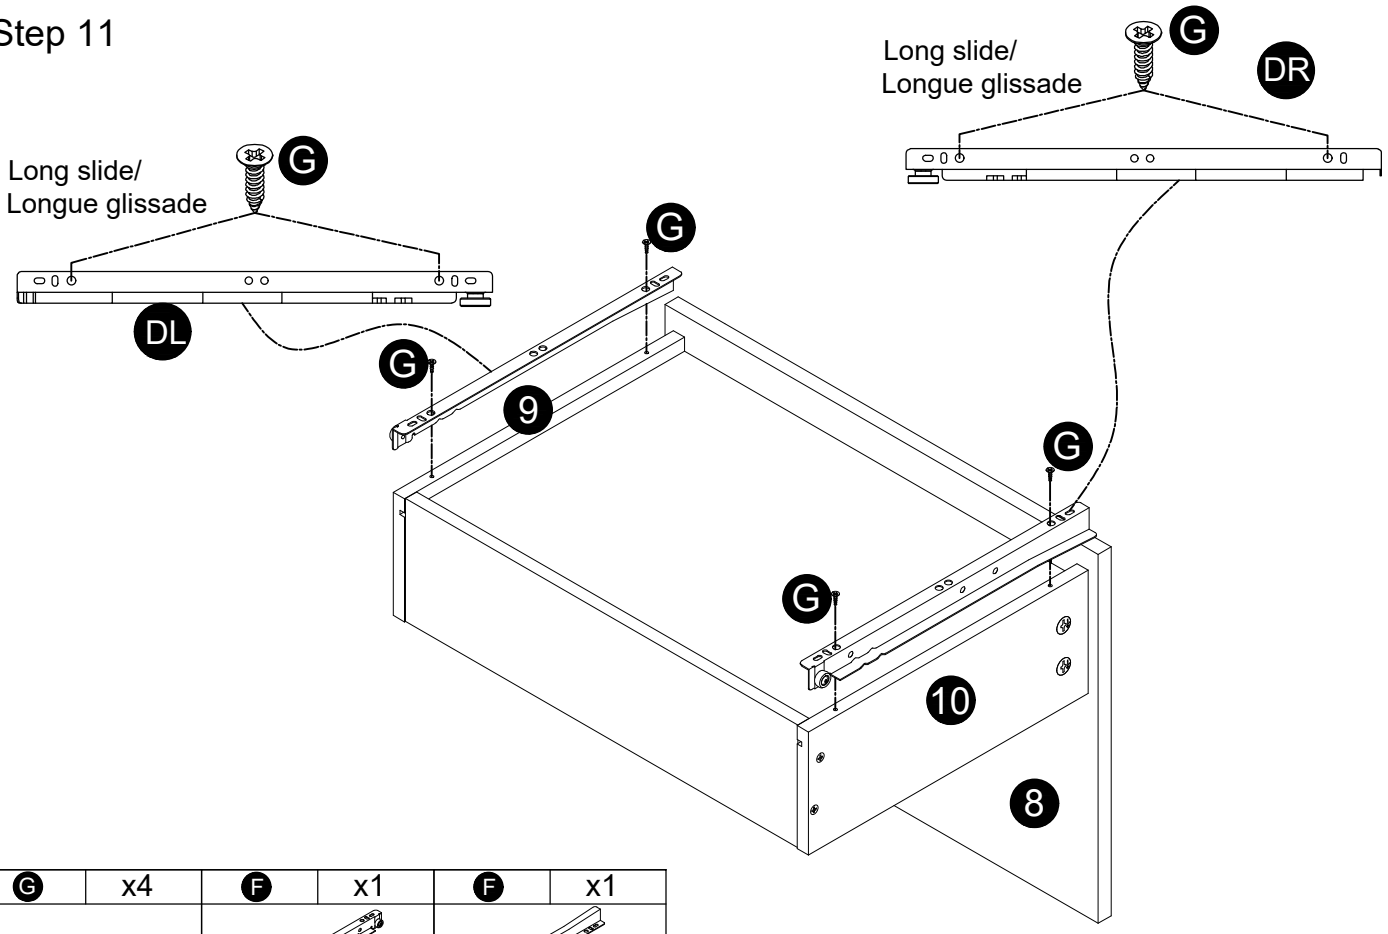



| G | x4 | F | x1 | F | x1 |
|---|---|---|---|---|---|
|  | |  | |  | |


## Step 12

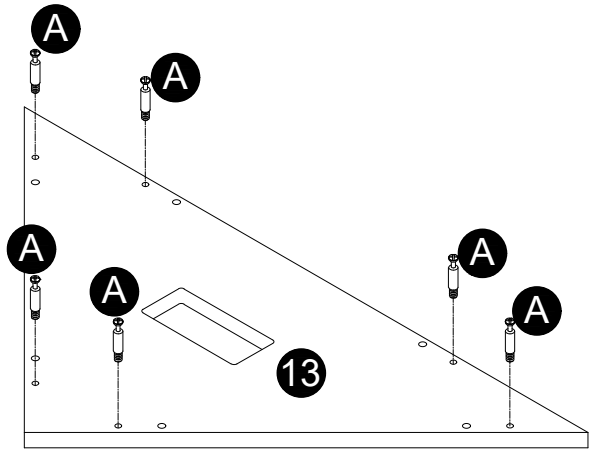


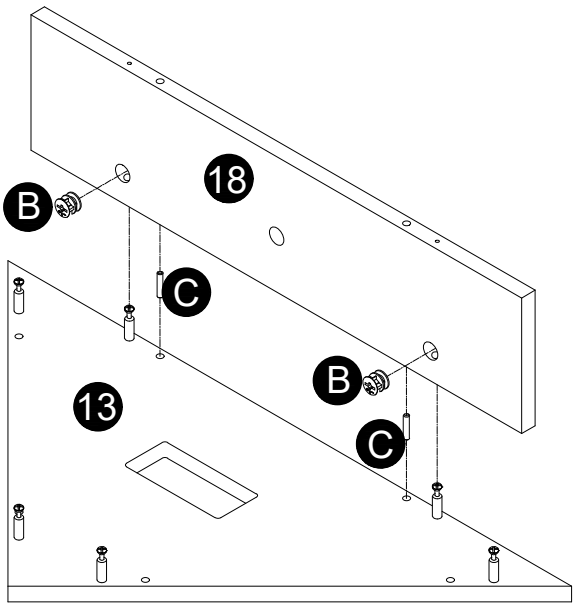




| A | x6 | B | x2 | C | x2 |
|---|---|---|---|---|---|
|  | |  | |  | |

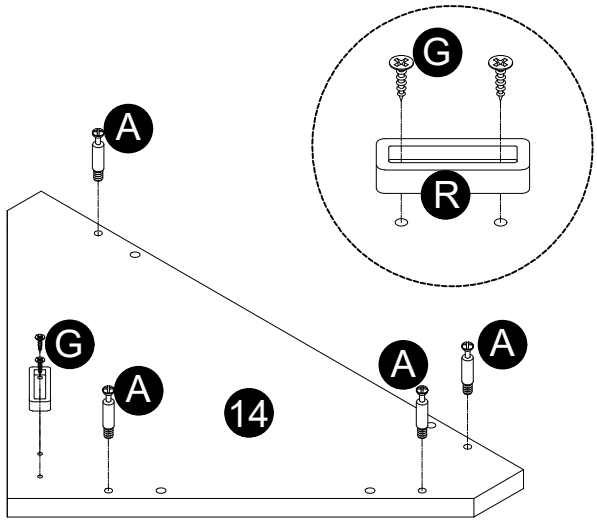
## Step 13

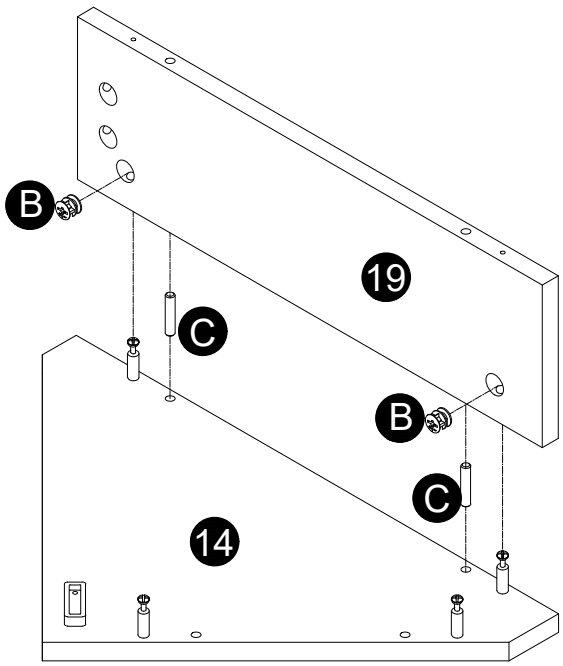








| A | x4 | B | x2 | C | x2 | R | x1 | G | x2 |
|---|---|---|---|---|---|---|---|---|---|
|  | |  | |  | |  | |  | |

## Step 14

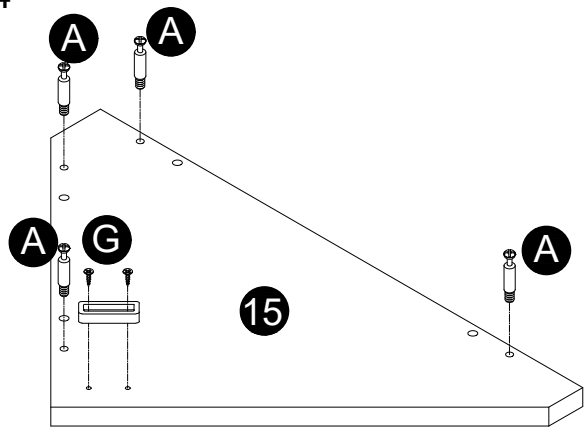


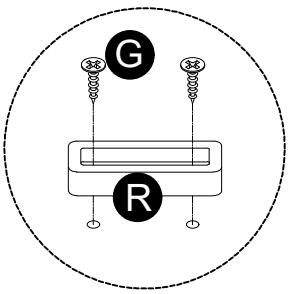


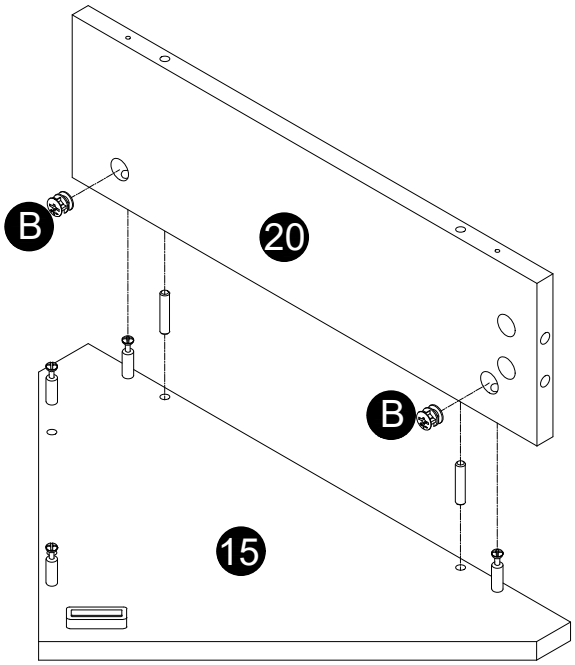

| A | x4 | B | x2 | C | x2 | R | x1 | G | x2 |
|---|---|---|---|---|---|---|---|---|---|
|  | |  | |  | |  | |  | |


Step 15

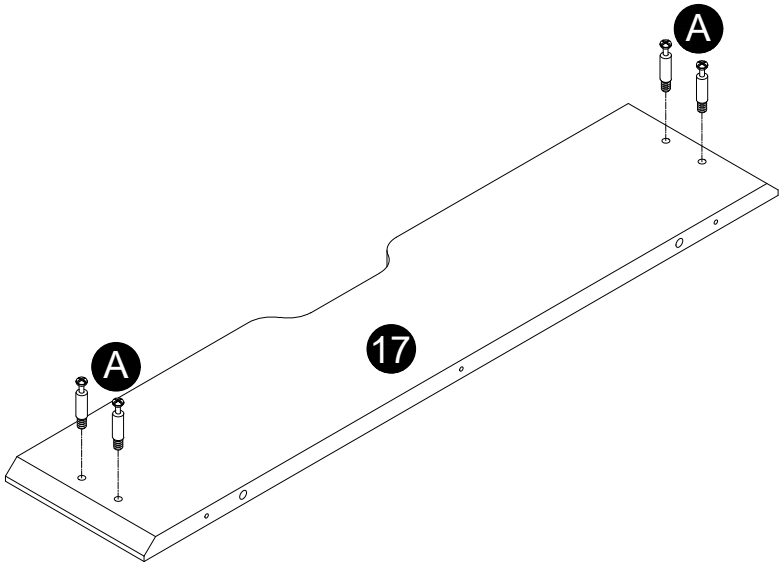


| A | x4 |
|---|---|




Step 16

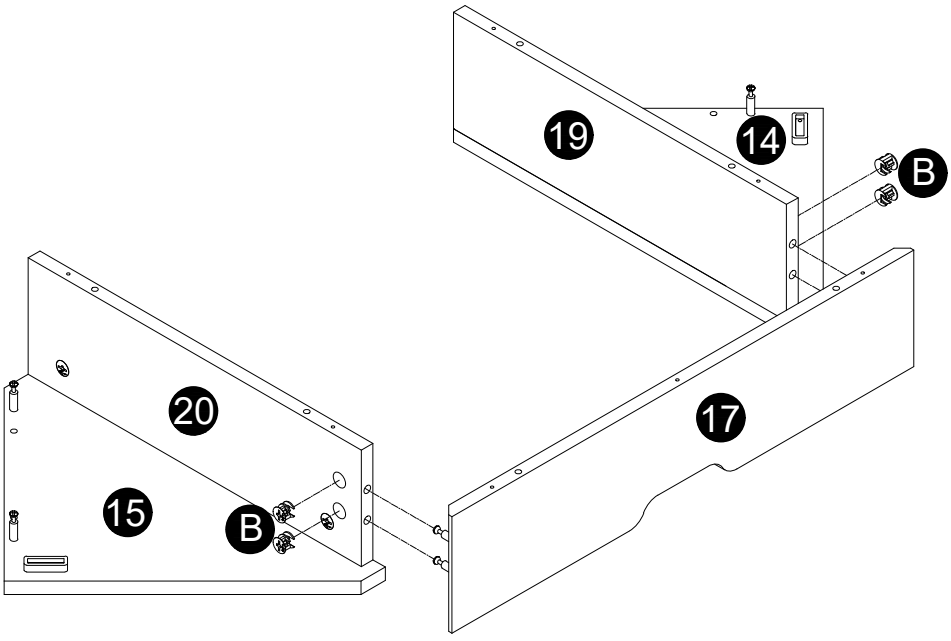


| B | x4 |
|---|---|





Step 17

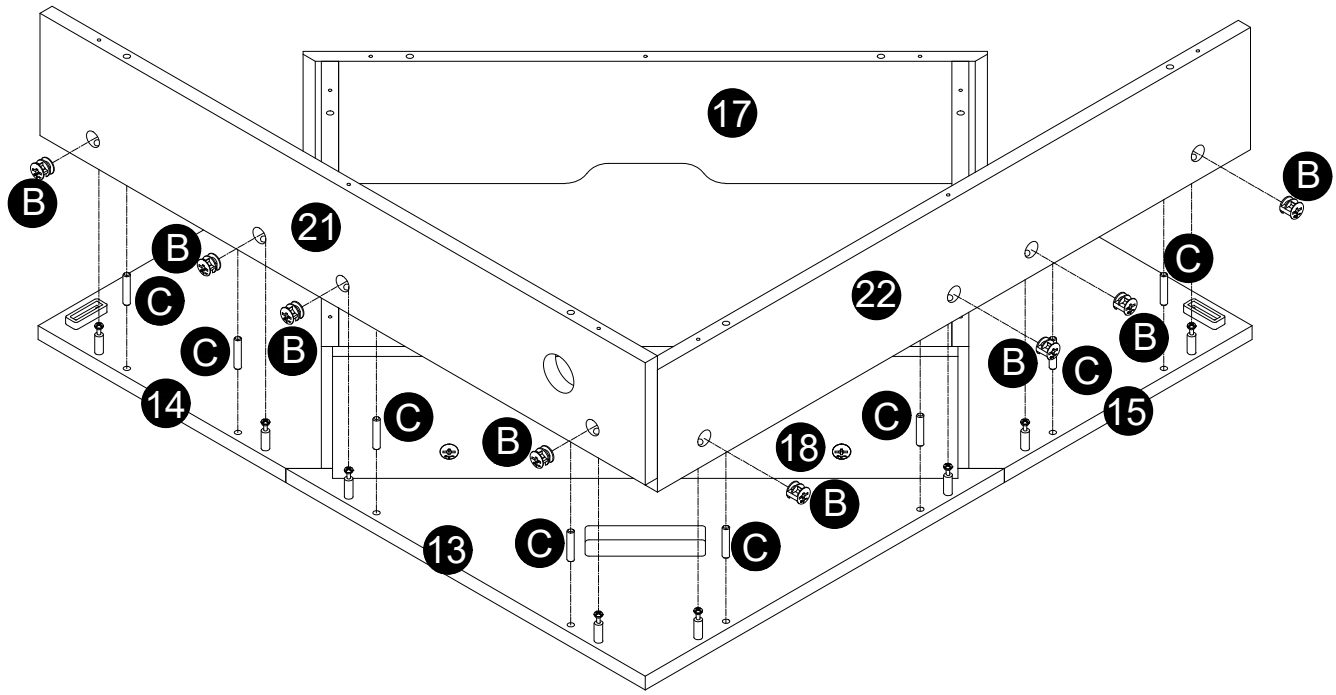



| B | x8 | C | x8 |
|---|---|---|---|
|  | |  | |


Step 18

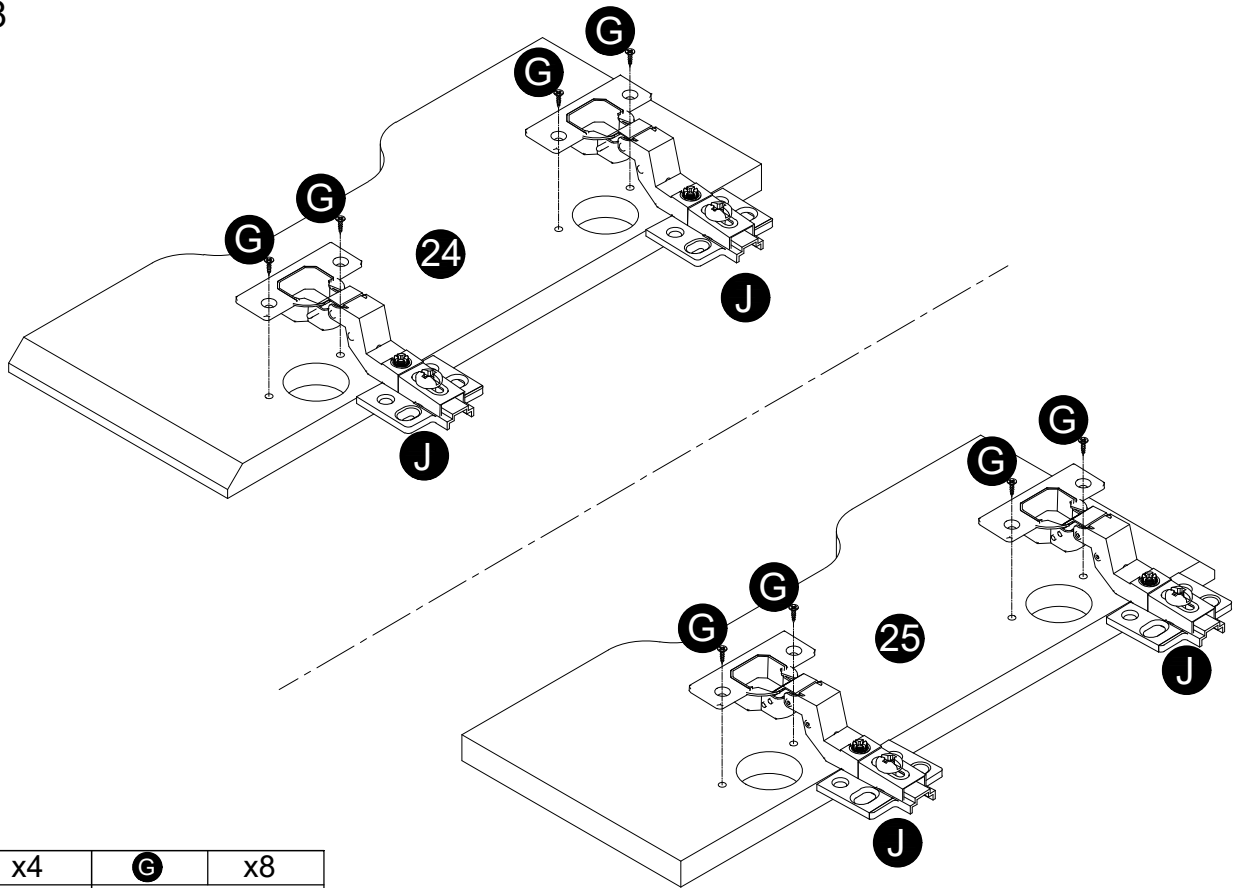



| J | x4 | G | x8 |
|---|---|---|---|
|  | |  | |




Step 19

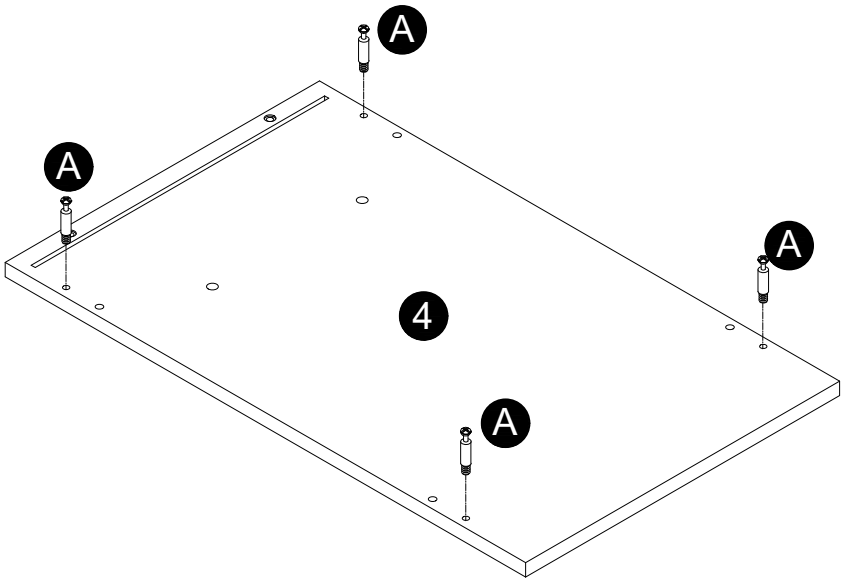


| A | x4 |
|---|---|
|  | |


Step 20

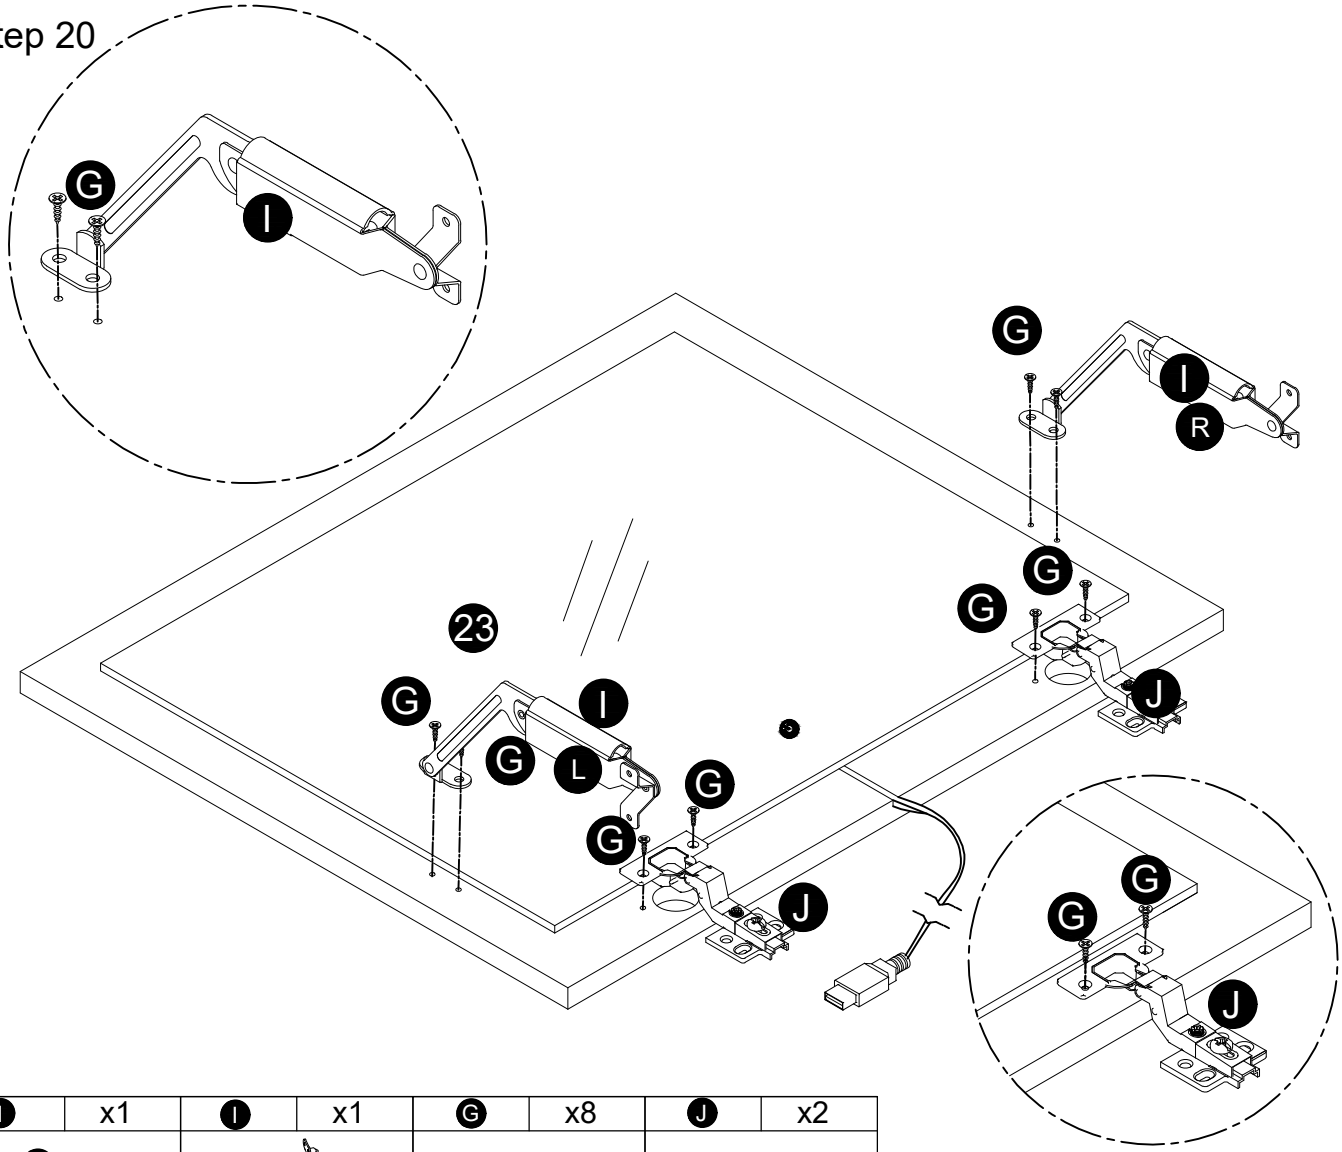



| I | x1 | I | x1 | G | x8 | J | x2 |
|---|---|---|---|---|---|---|---|
|  | |  | |  | |  | |


Step 21


Note: Choose left-hand or right-hand cabinet assembly as required:
If you choose to assembly the left-hand, please refer to the instructions on pages 17-24.
If you choose to assembly the right-hand, please refer to the instructions on pages 25-32.

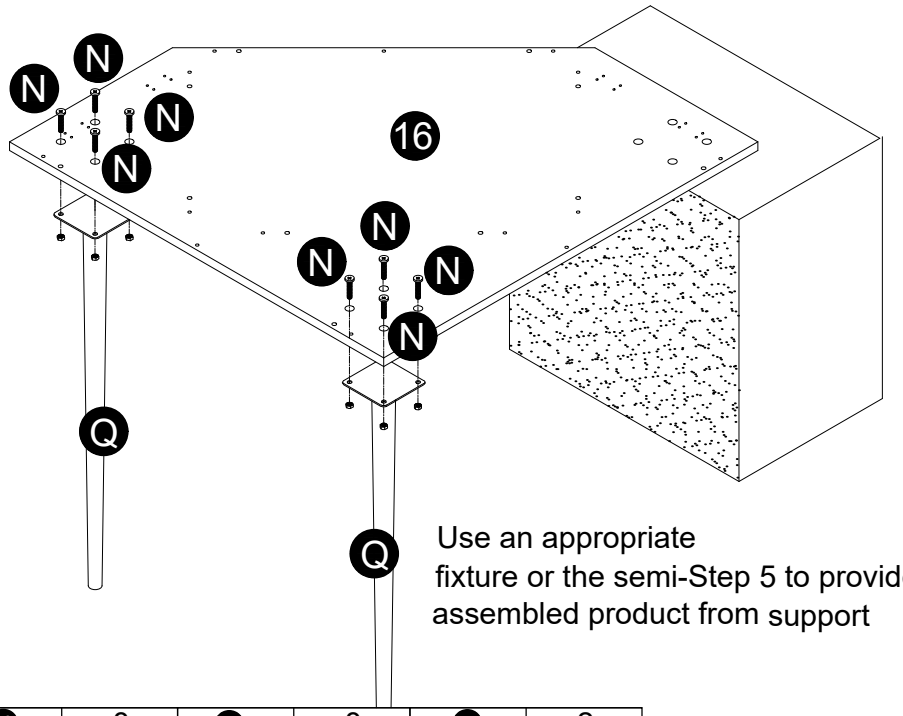

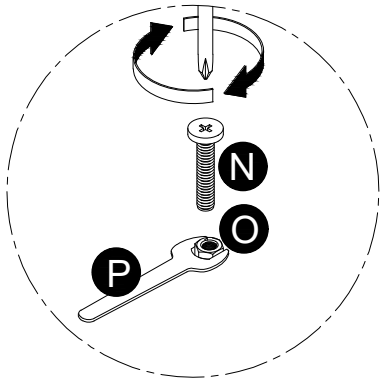


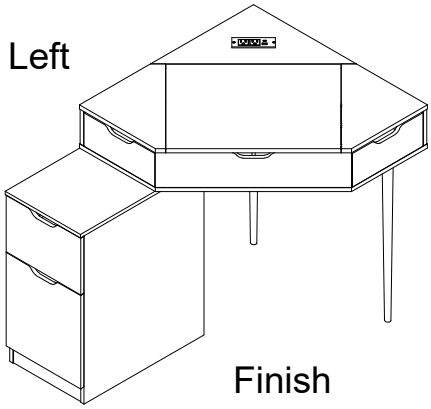

Use an appropriate fixture or the semi-Step 5 to provide assembled product from support

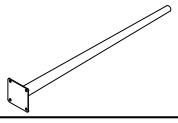


| N | x8 | O | x8 | Q | x2 |
|---|---|---|---|---|---|
|  | |  | |  | |

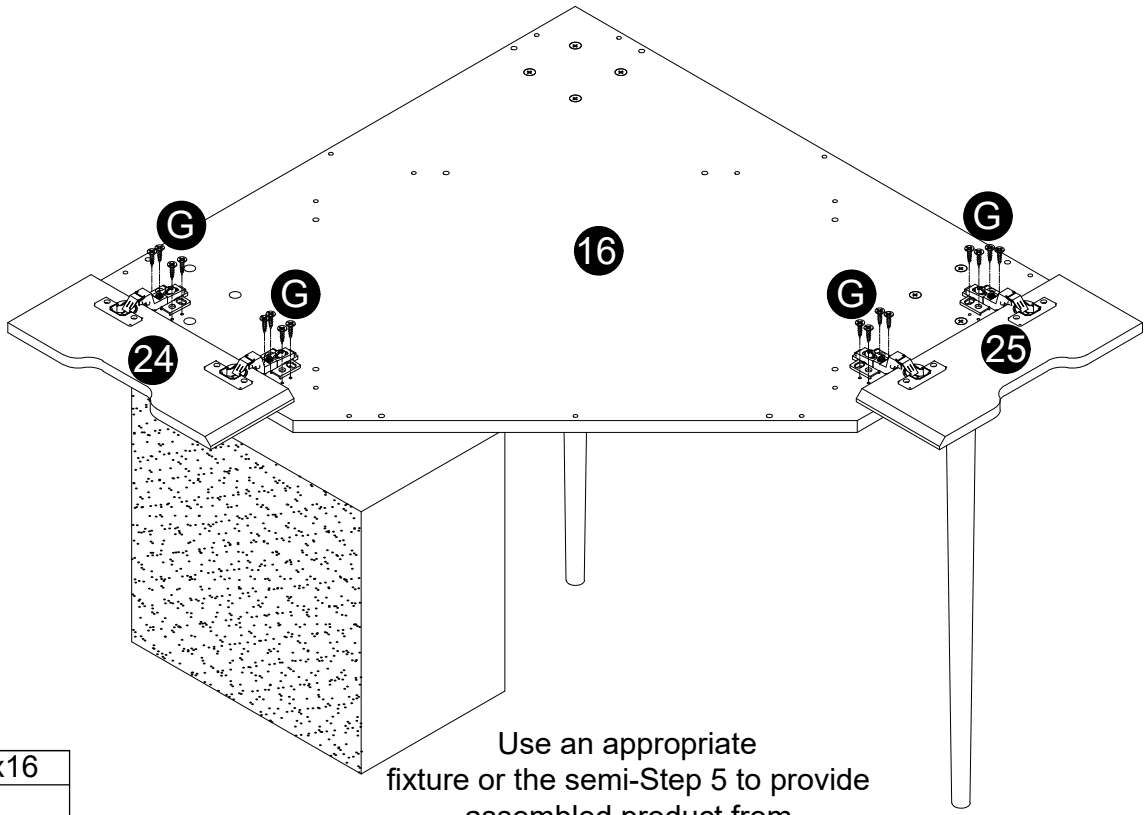
Step 22





Use an appropriate fixture or the semi-Step 5 to provide assembled product from support


| G | x16 |
|---|---|
|  | |



Step 23

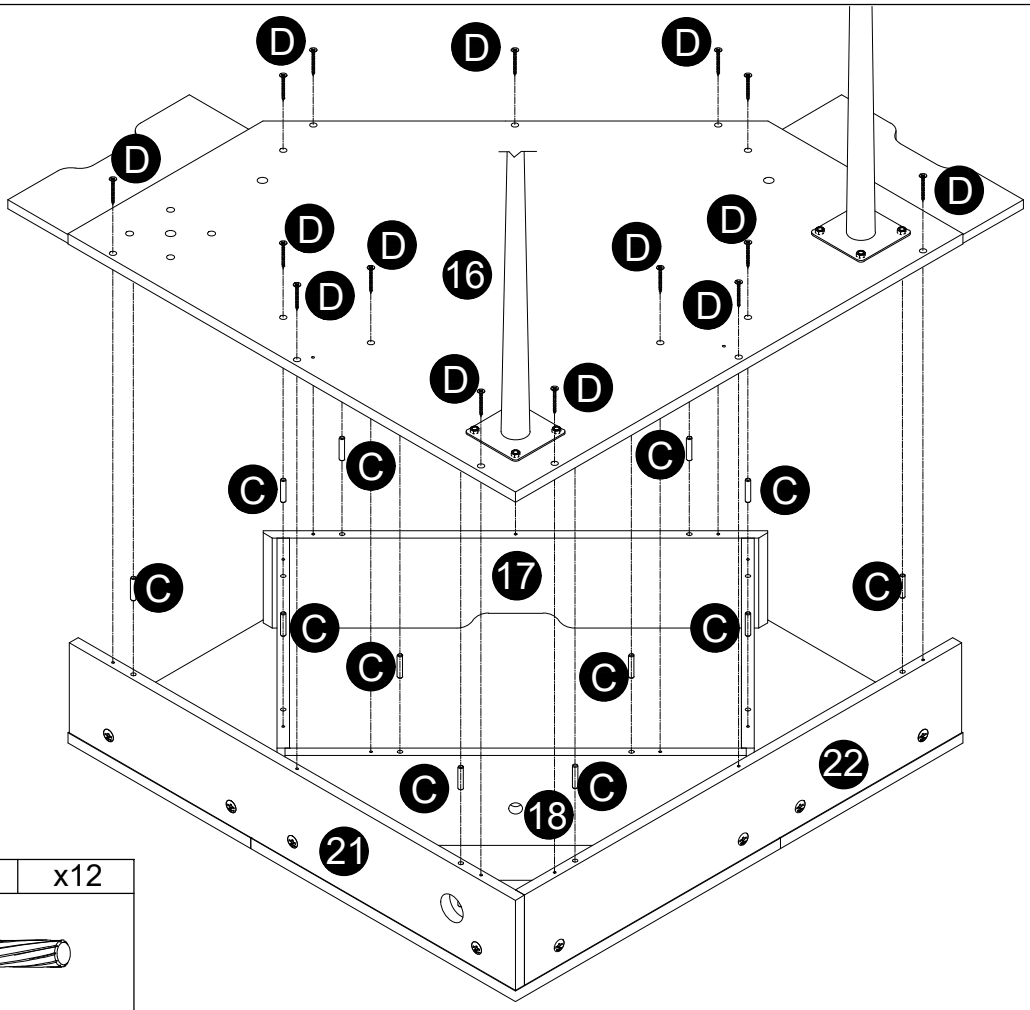



| D | x15 | C | x12 |
|---|---|---|---|
|  | |  | |

Step 24

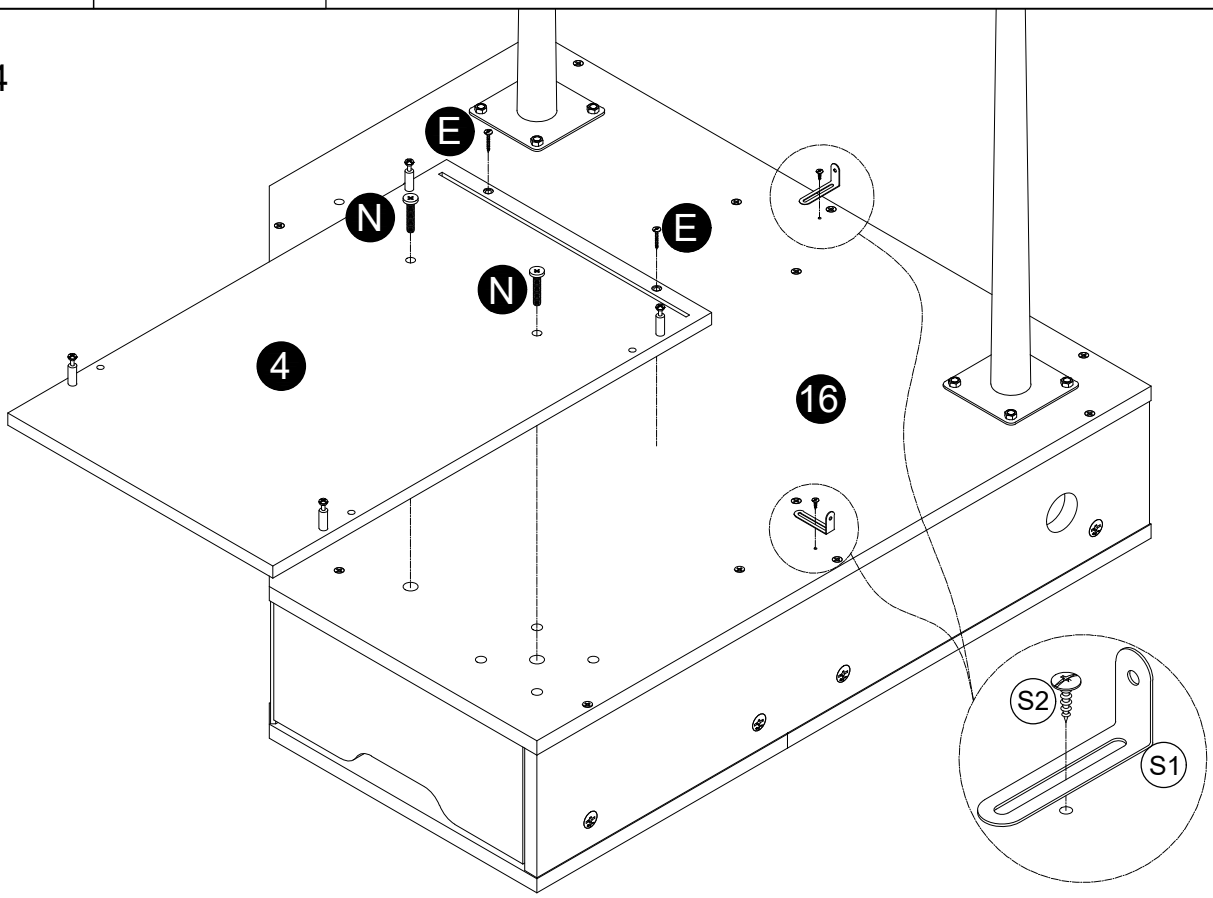



| N | x2 | E | x2 | S | x2 | S | x2 |
|---|---|---|---|---|---|---|---|
|  | |  | |  | |  | |


Step 25

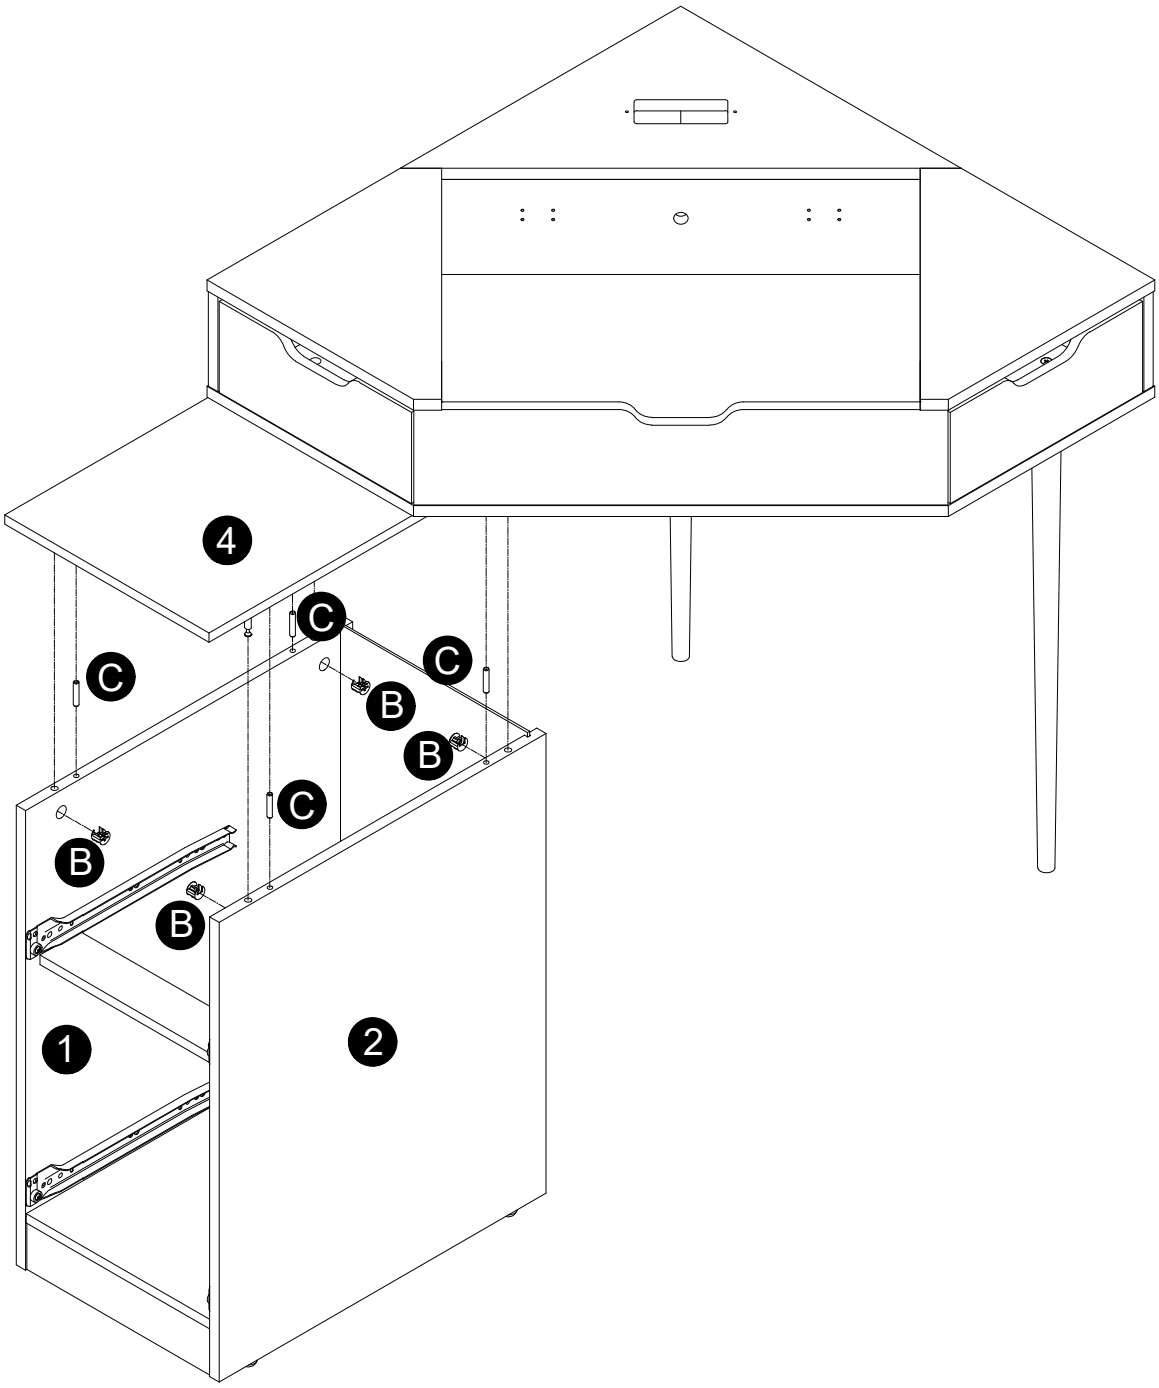



| B | x4 | C | x4 |
|---|---|---|---|
|  | |  | |

Step 26

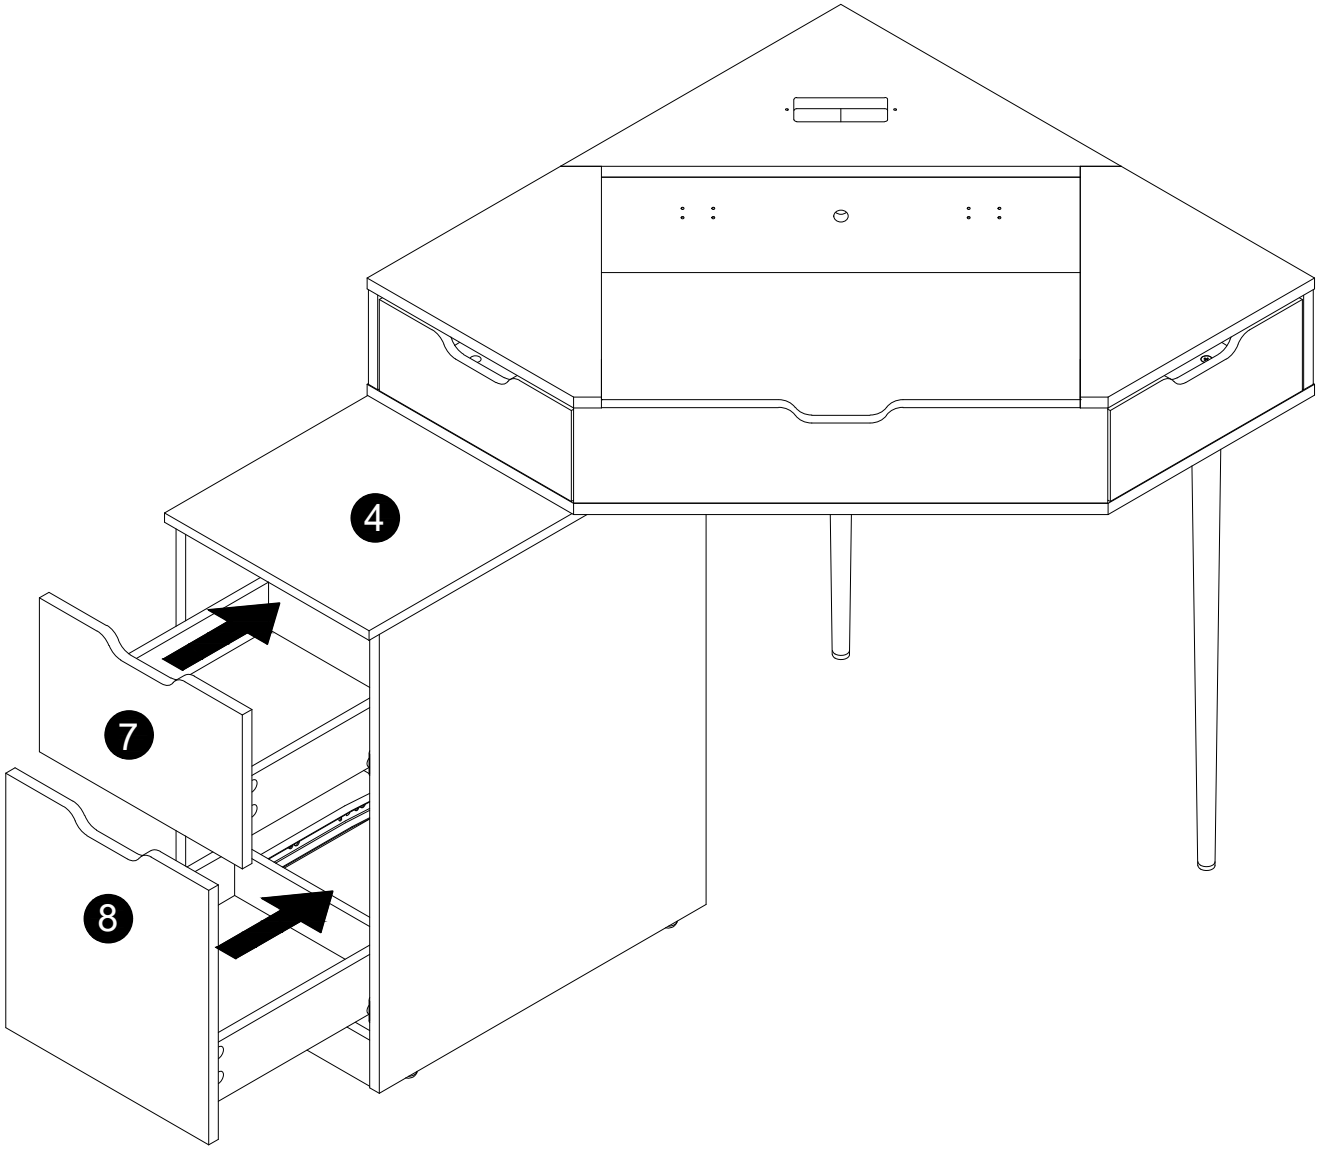

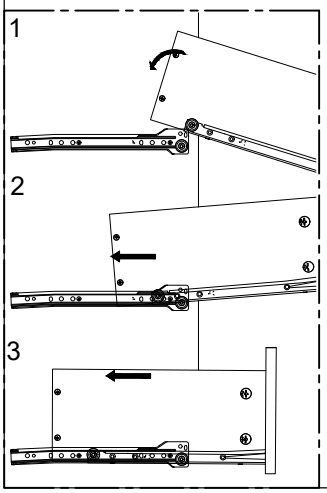



Step 27

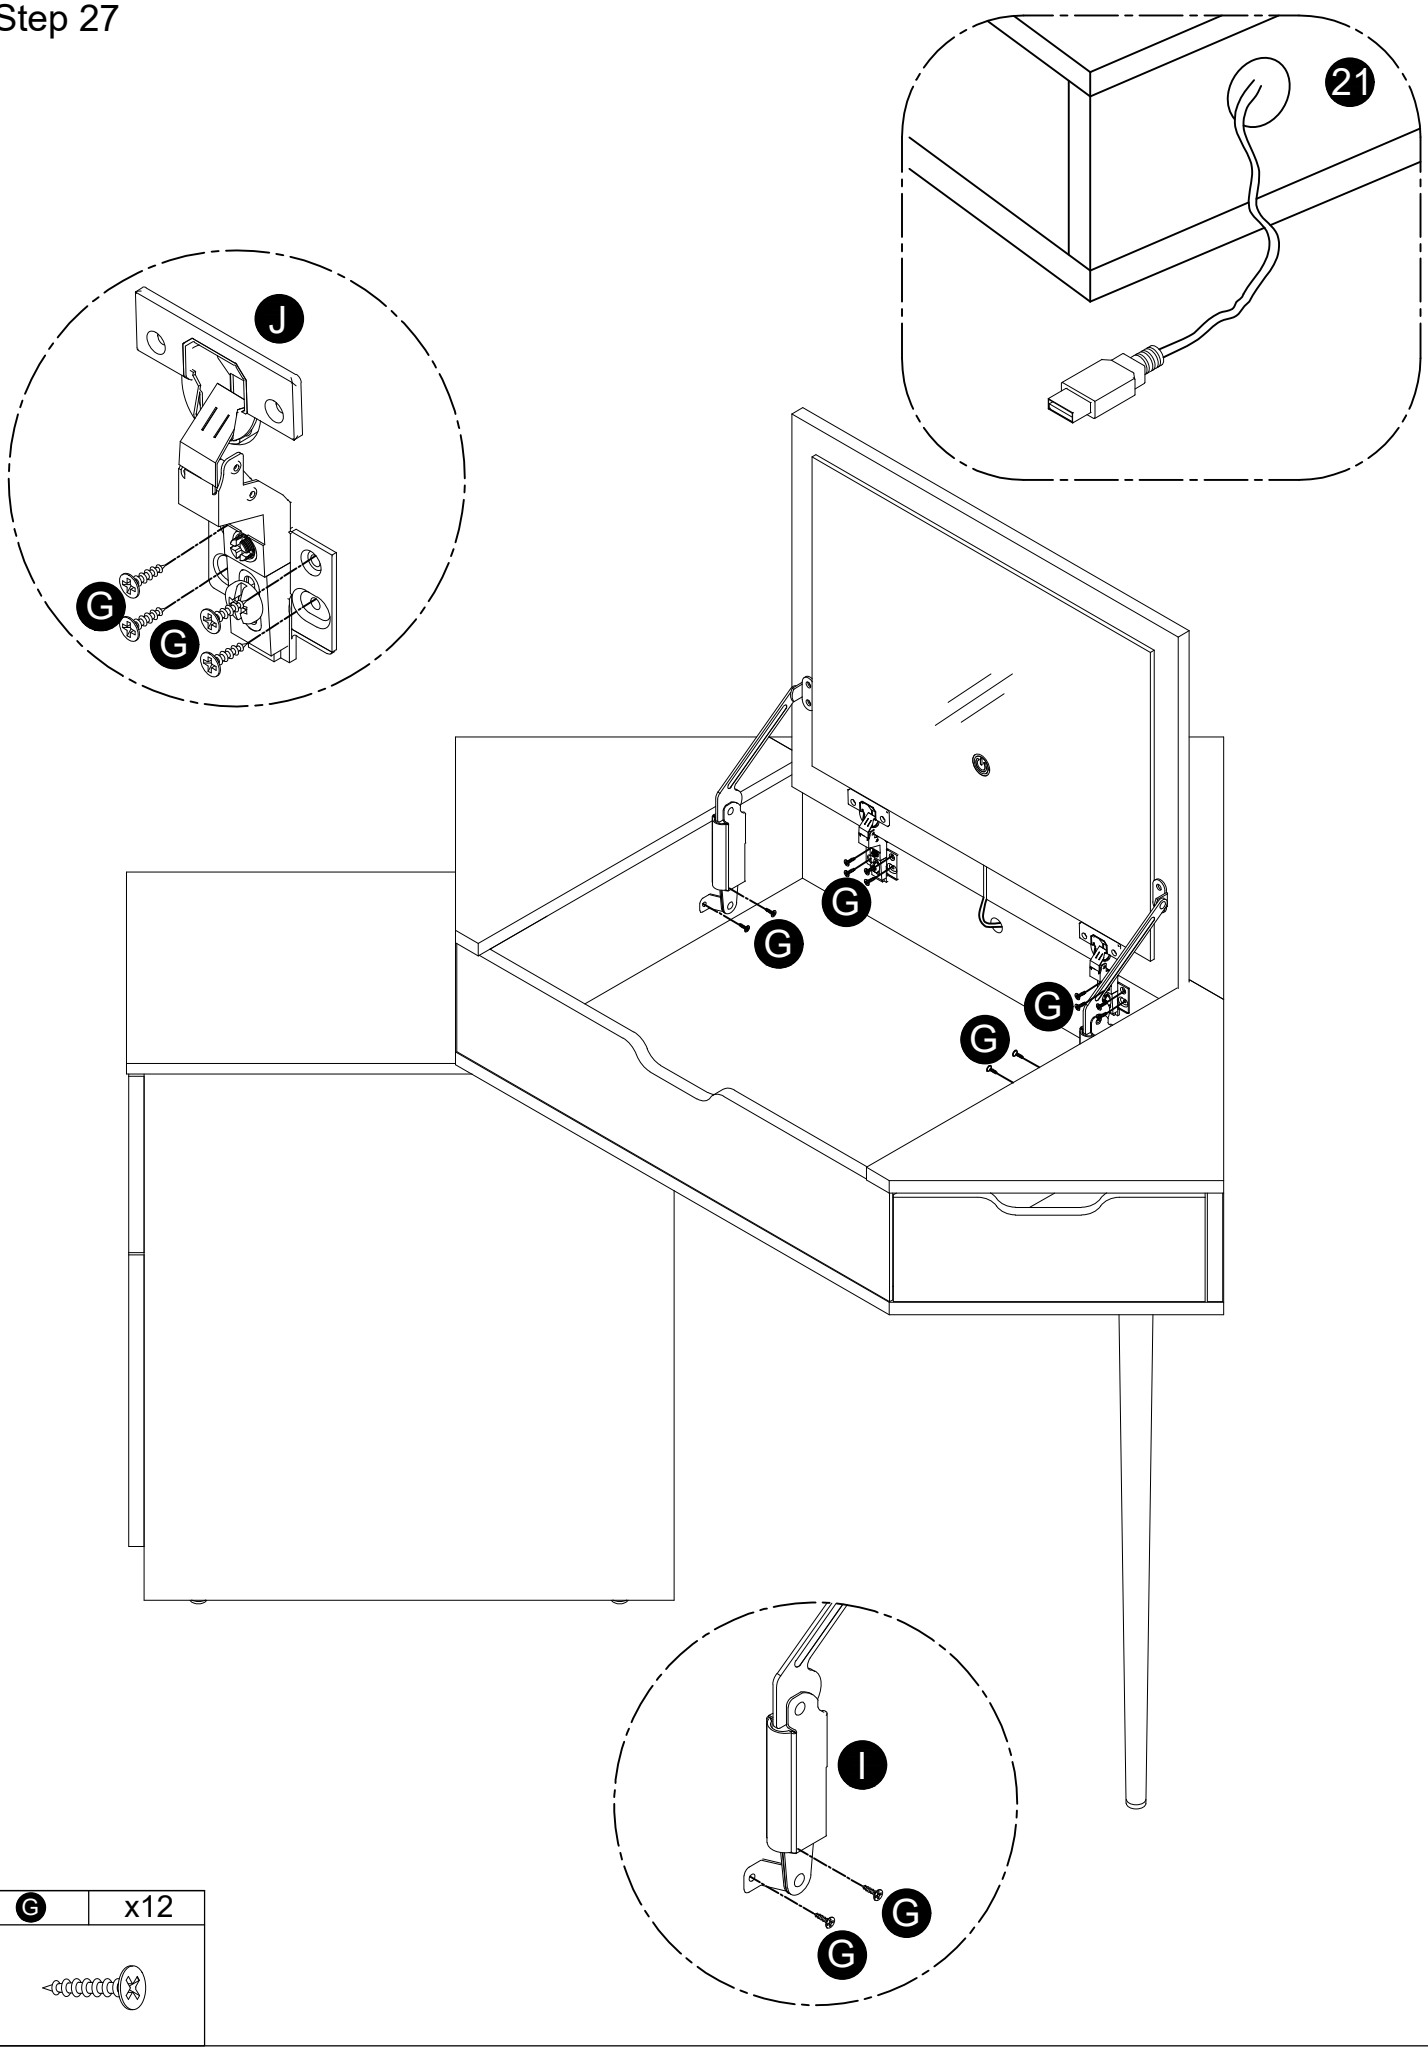




| G | x12 |
|---|---|
|  | |

Step 28

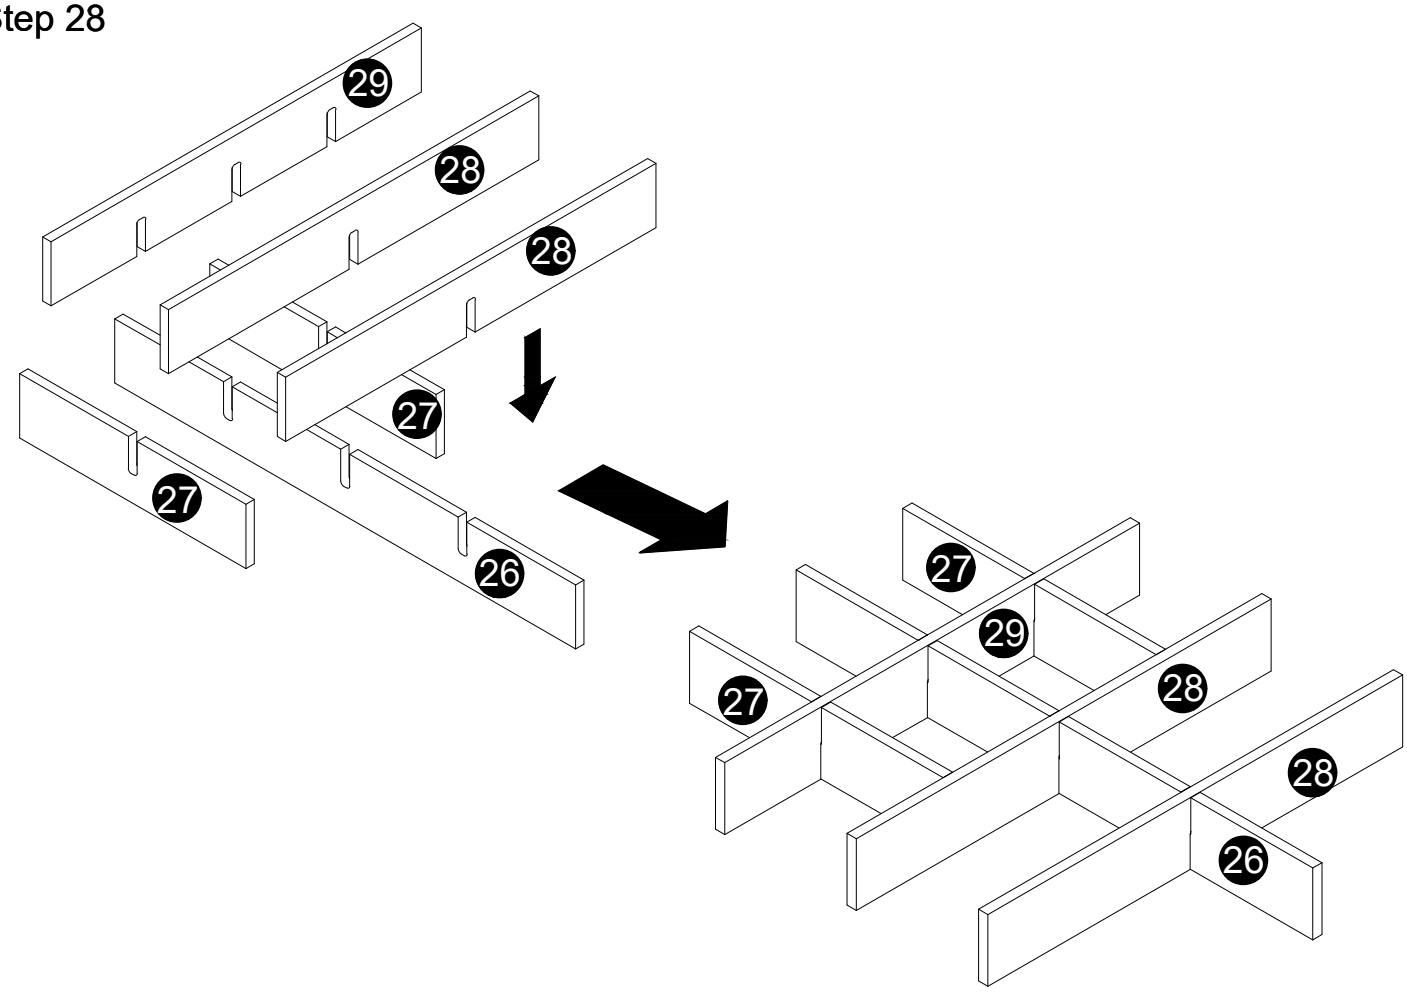



Step 29

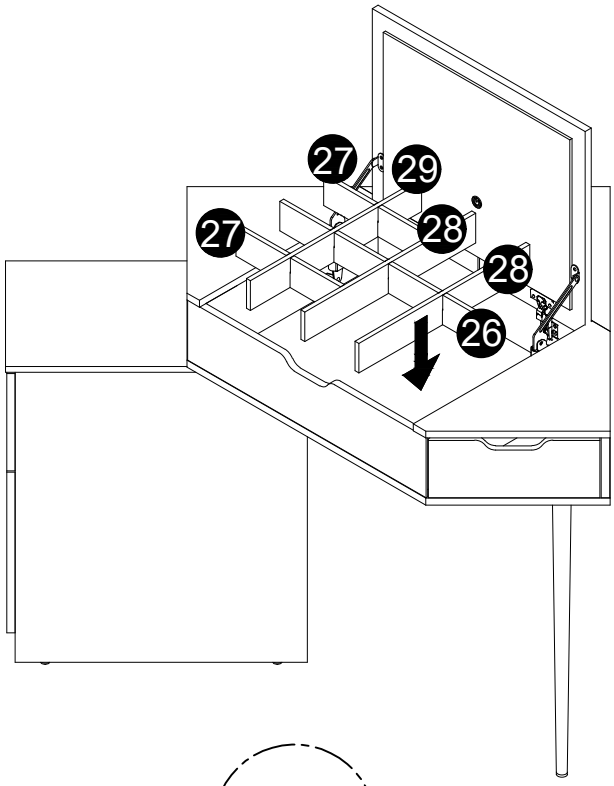

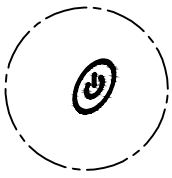



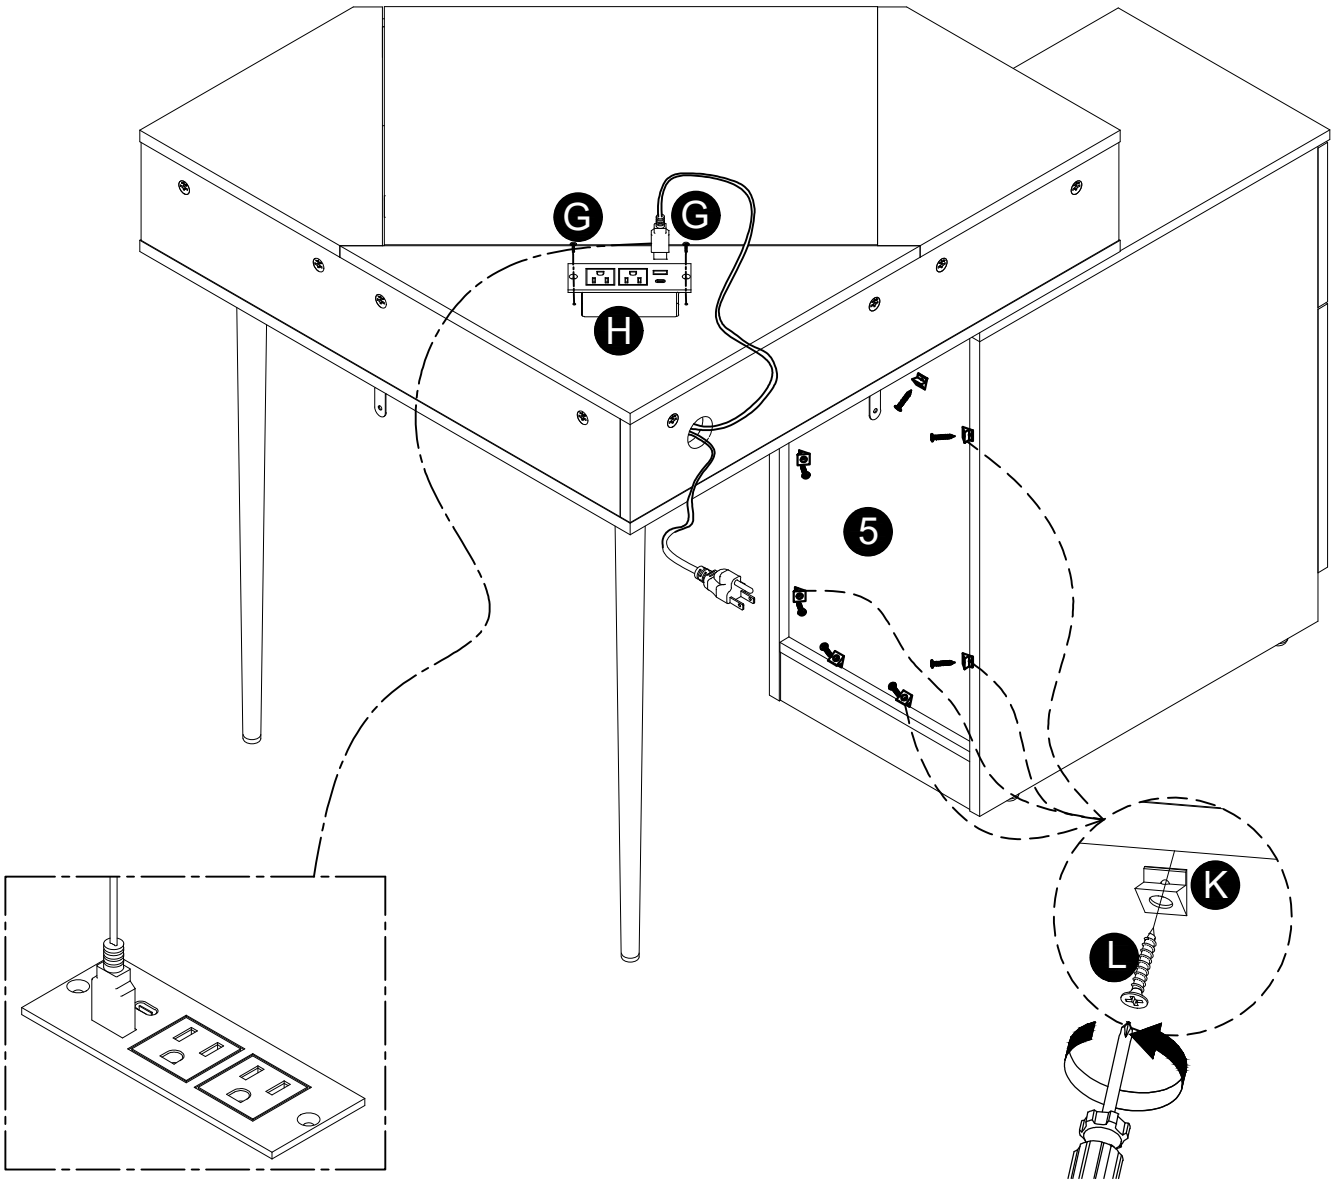
Touch-Control Switch
for Mirror Light


Step 30

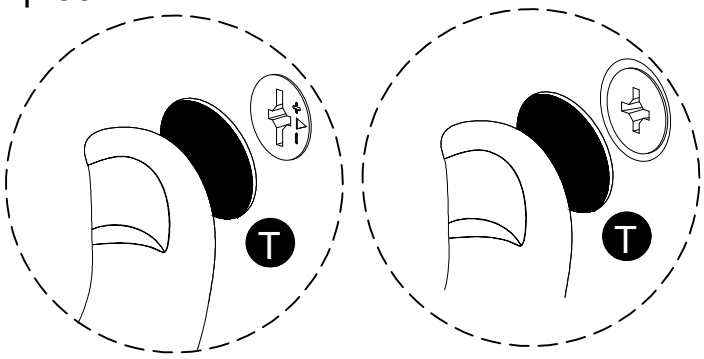



Use Perfect Sticker (T) to cover the Camlock's and Bolt holes if necessary !

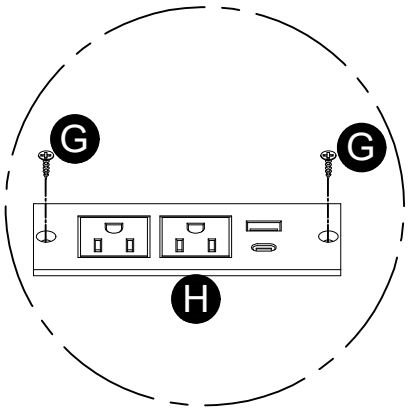


| K | x8 | L | x8 | H | x1 | G | x2 | T | 28 |
|---|---|---|---|---|---|---|---|---|---|
|  | |  | |  | |  | |  | |

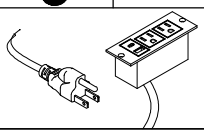
Step 31

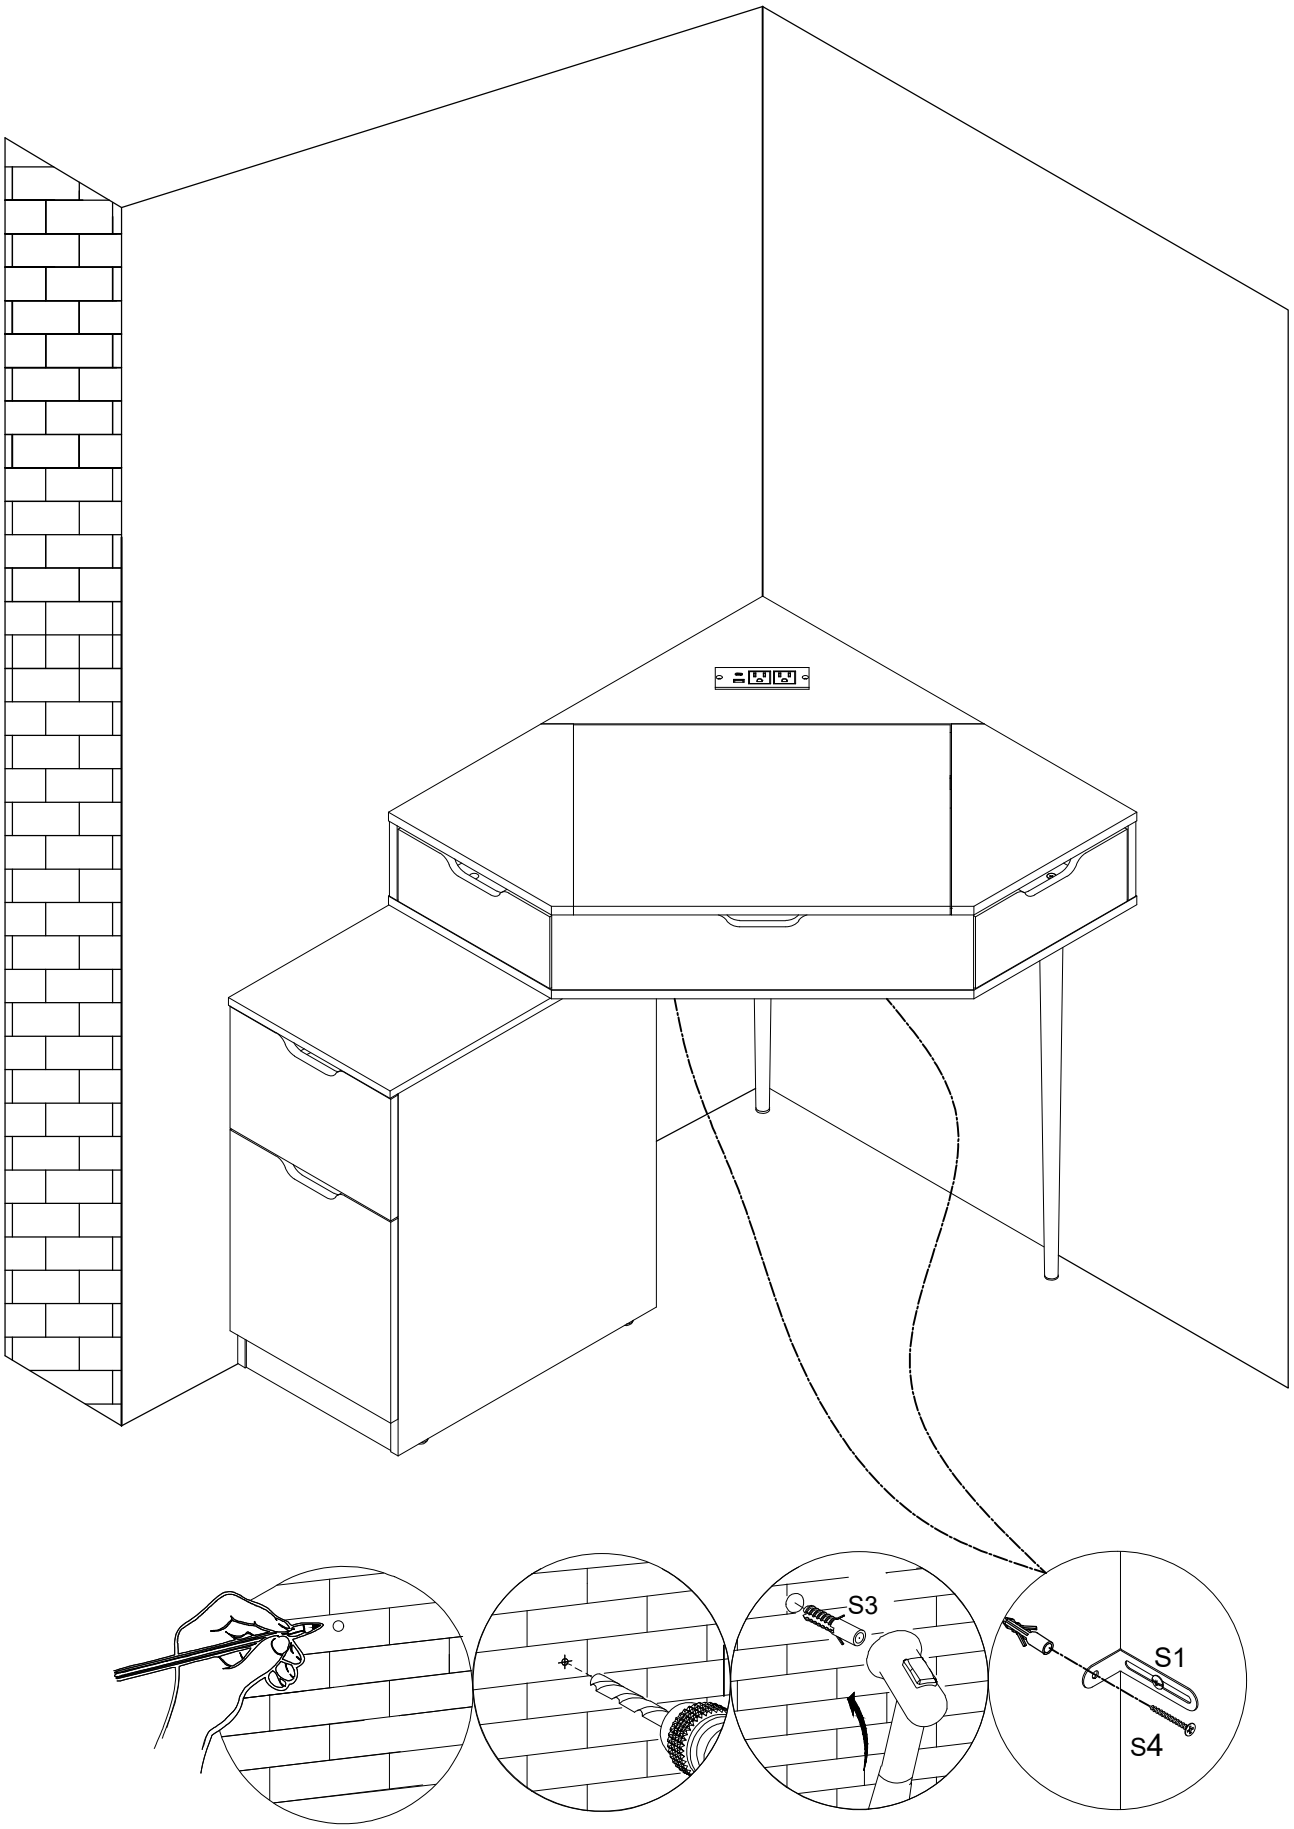



| S | x2 | S | x2 |
|---|---|---|---|
|  S3 Wall plug x 2 | |  S4 M4*35mm x 2 | |


## Step 21



Note: Choose left-hand or right-hand cabinet assembly as required:
If you choose to assembly the left-hand, please refer to the instructions on pages 17-24.
If you choose to assembly the right-hand, please refer to the instructions on pages 25-32.

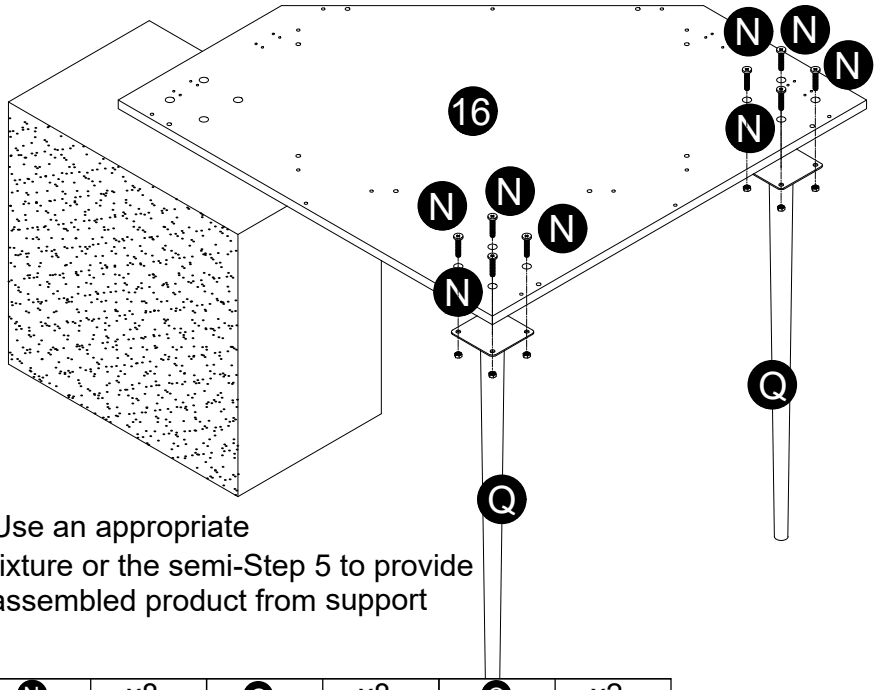

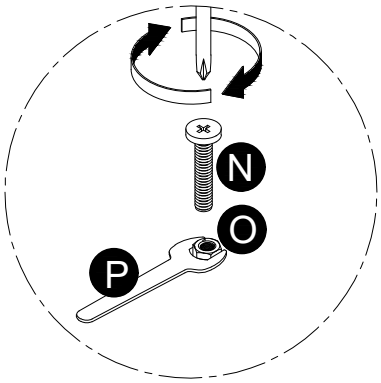


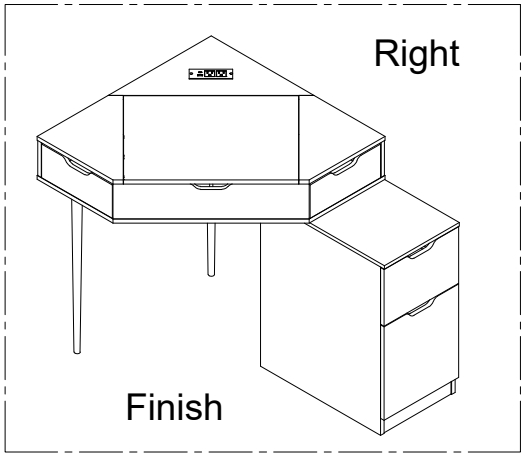

Use an appropriate fixture or the semi-Step 5 to provide assembled product from support

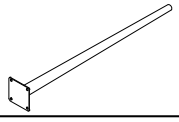



| N | x8 | O | x8 | Q | x2 |
|---|---|---|---|---|---|
|  | |  | |  | |

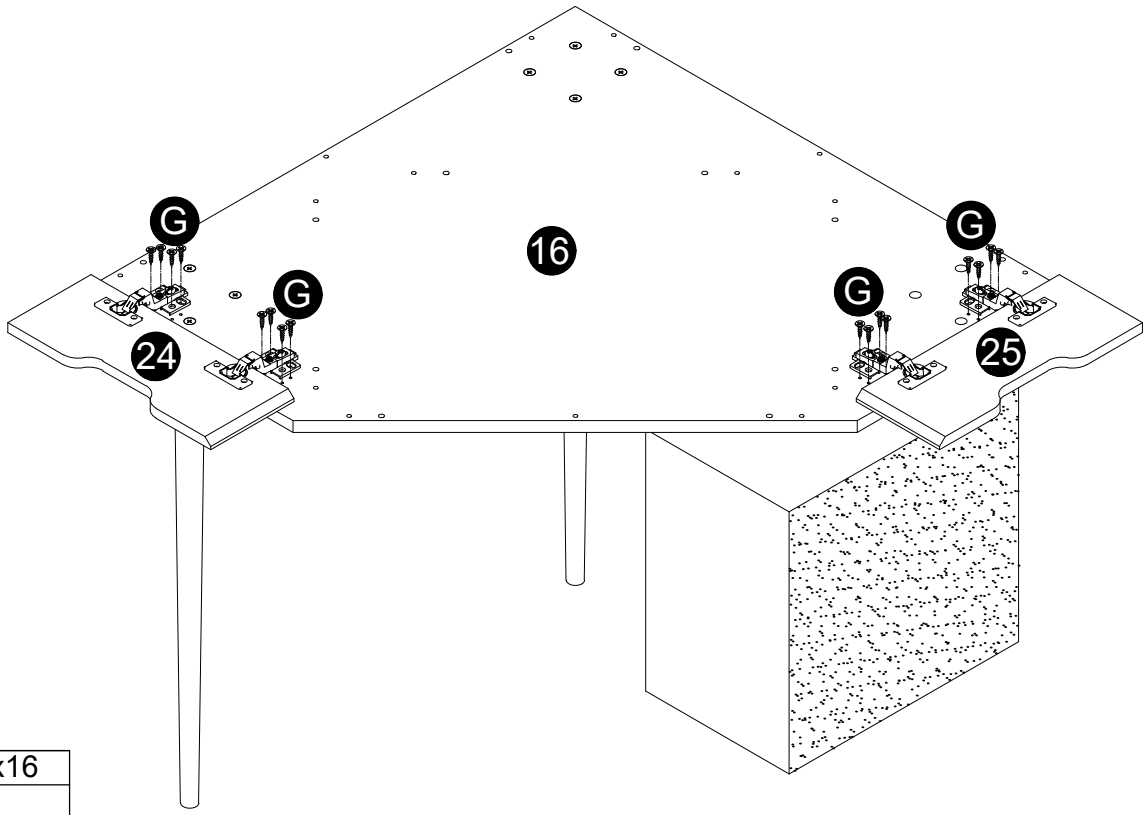
## Step 22





| G | x16 |
|---|---|
|  | |




Step 23

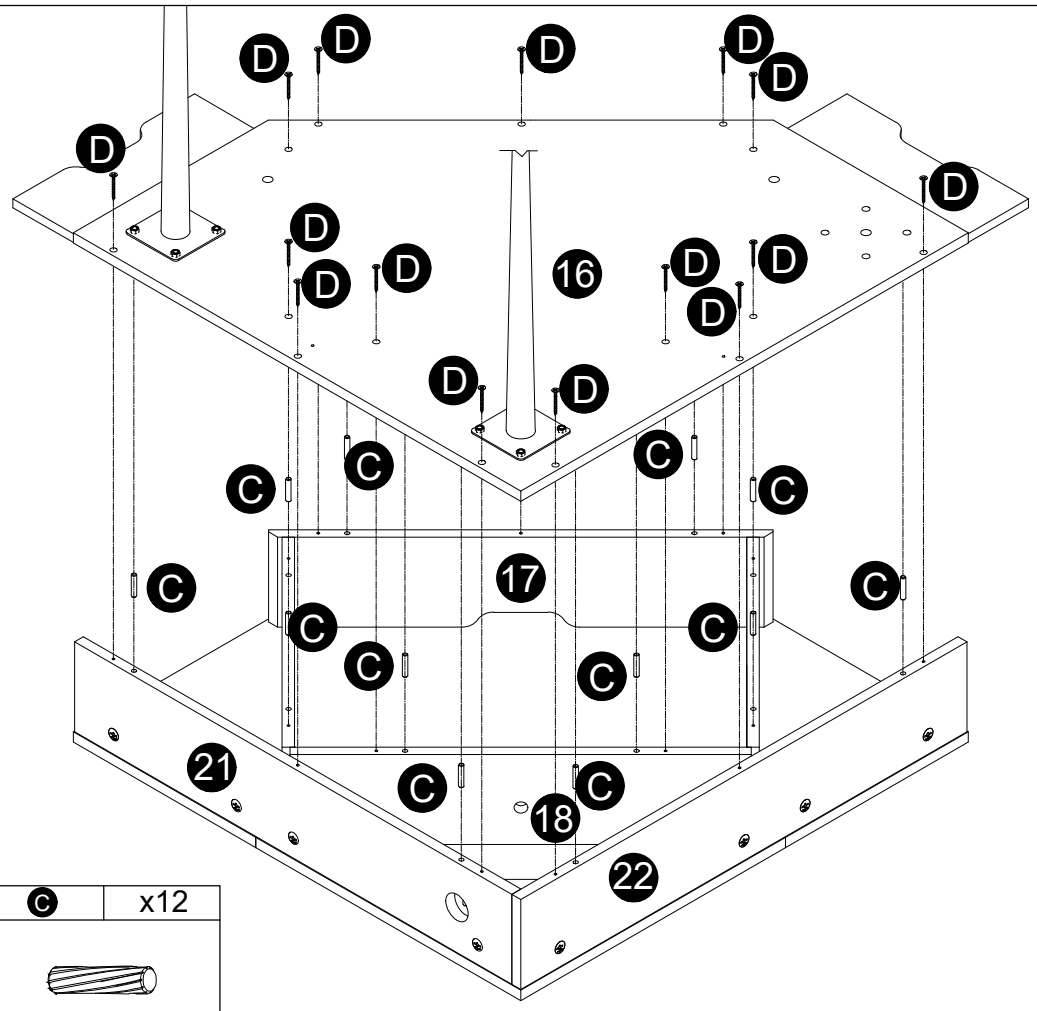



| D | x15 | C | x12 |
|---|---|---|---|
|  | |  | |

Step 24

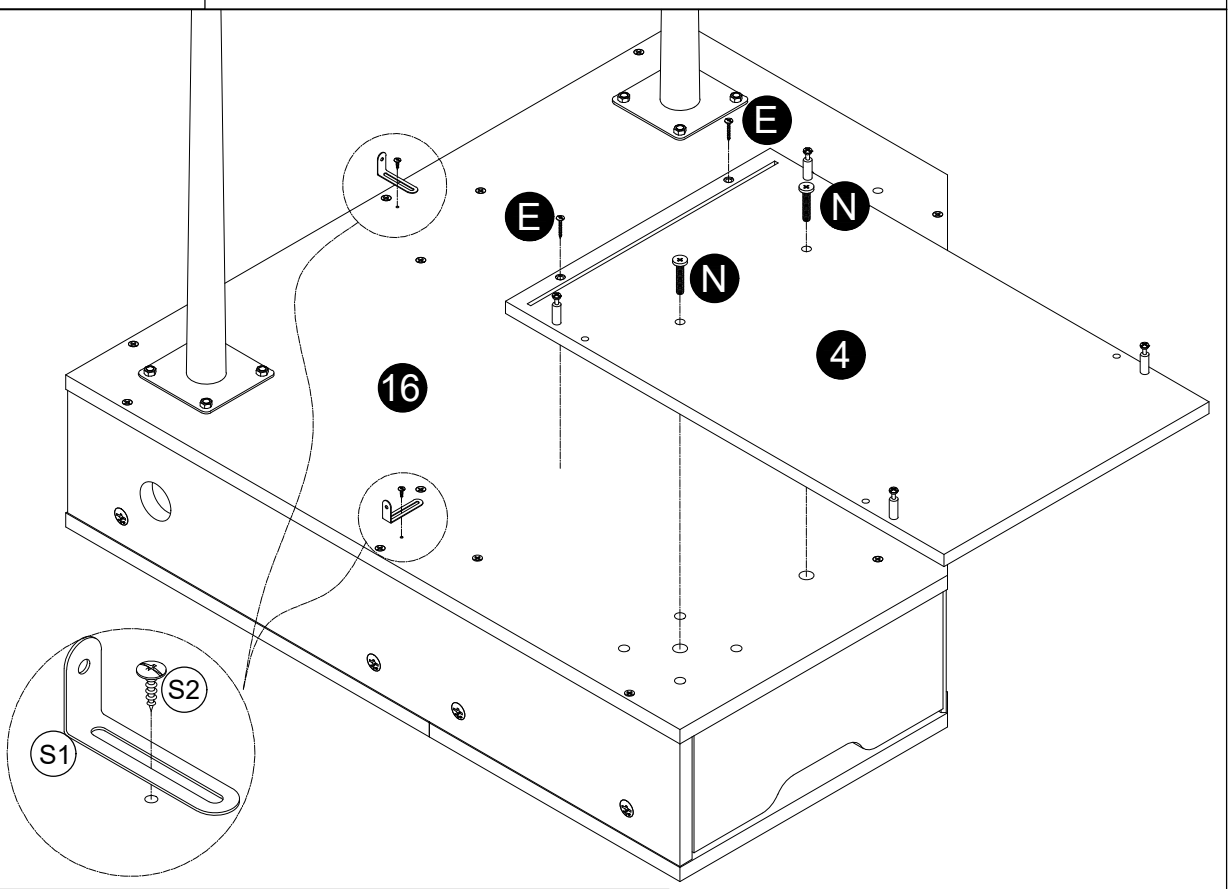



| N | x2 | E | x2 | S | x2 | S | x2 |
|---|---|---|---|---|---|---|---|
|  | |  | |  | |  | |


Step 25

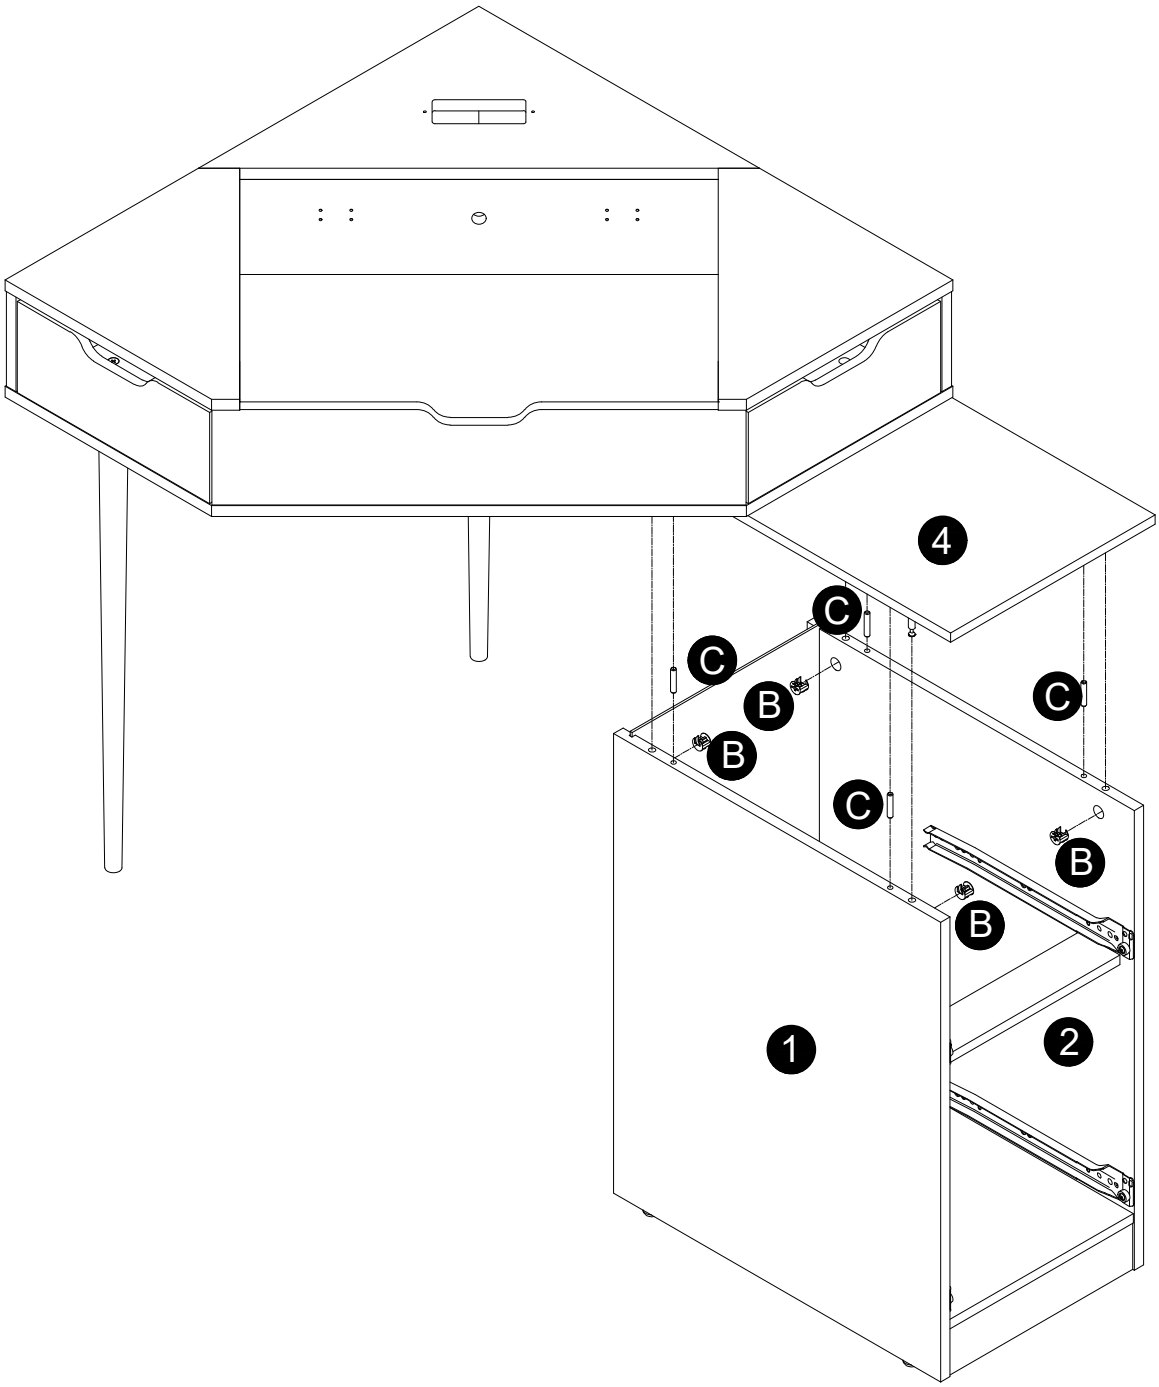



| B | x4 | C | x4 |
|---|---|---|---|
|  | |  | |


Step 26

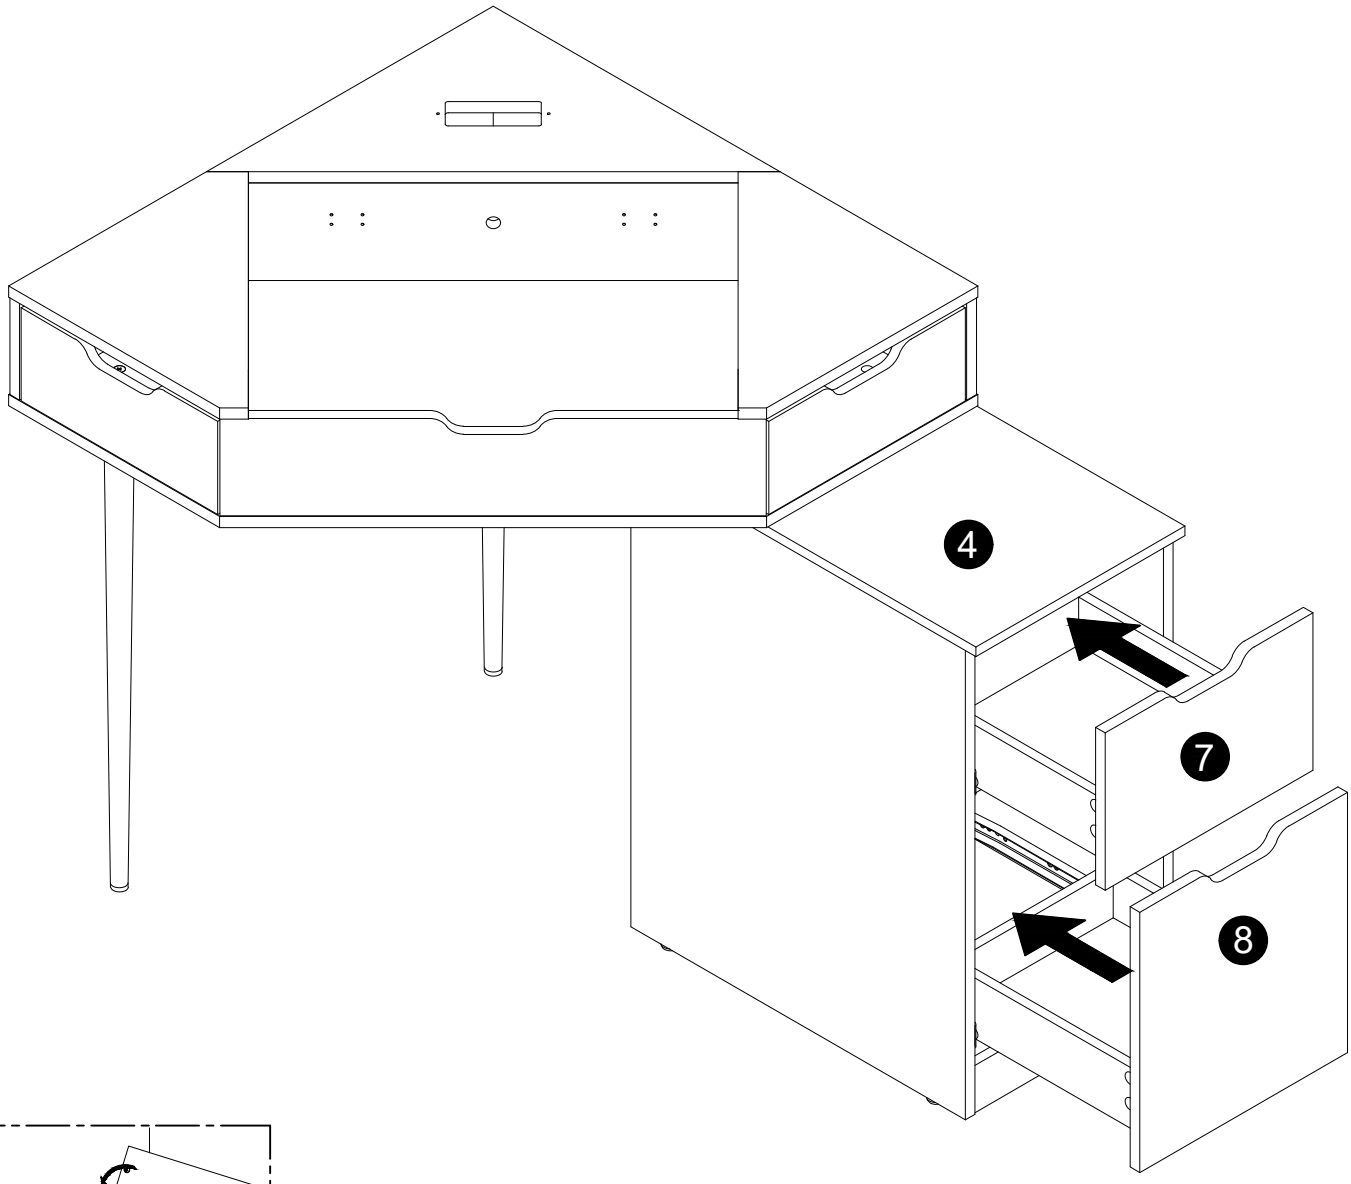


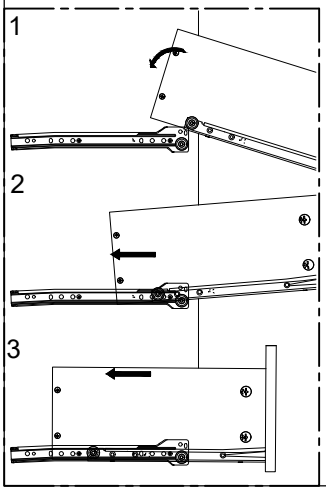Step 27



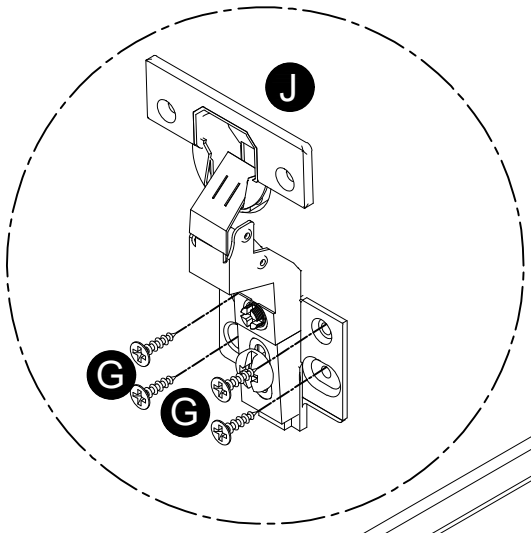


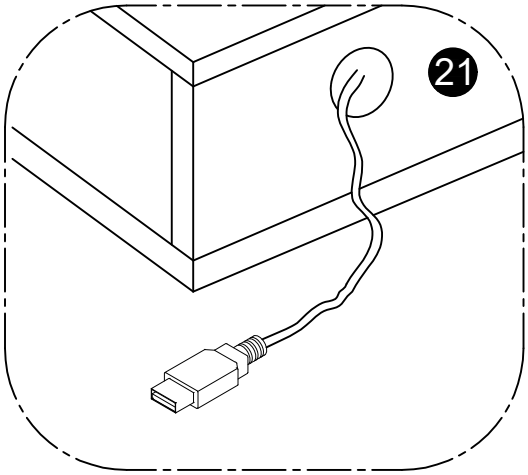

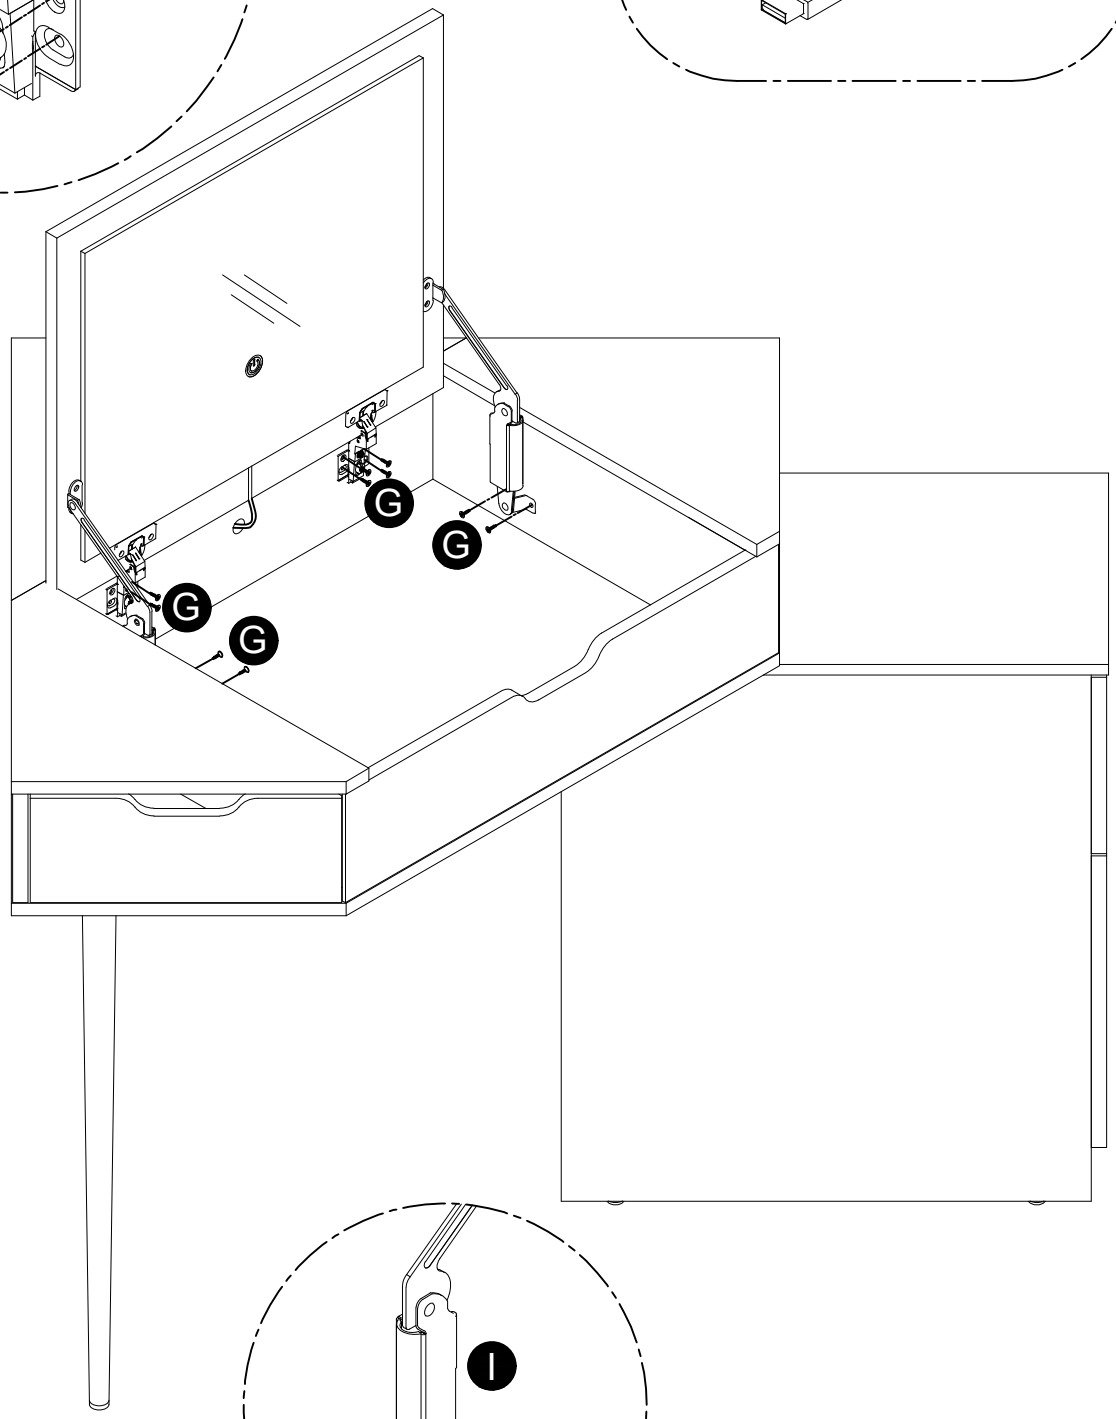
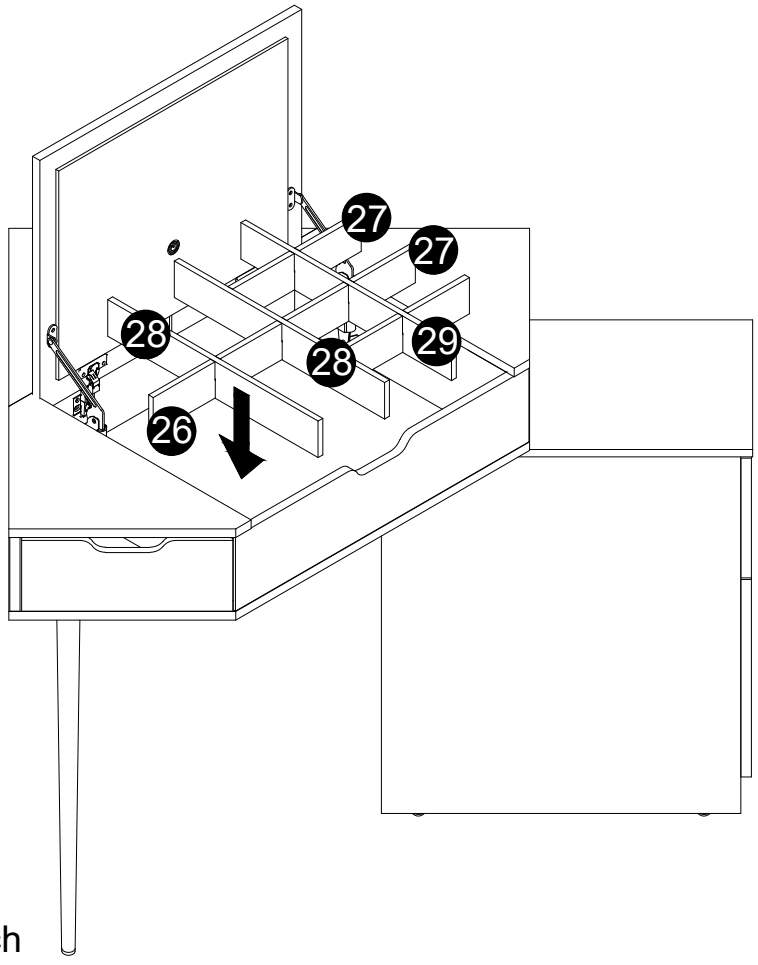



| G | x12 |
|---|---|
|  | |

Step 28

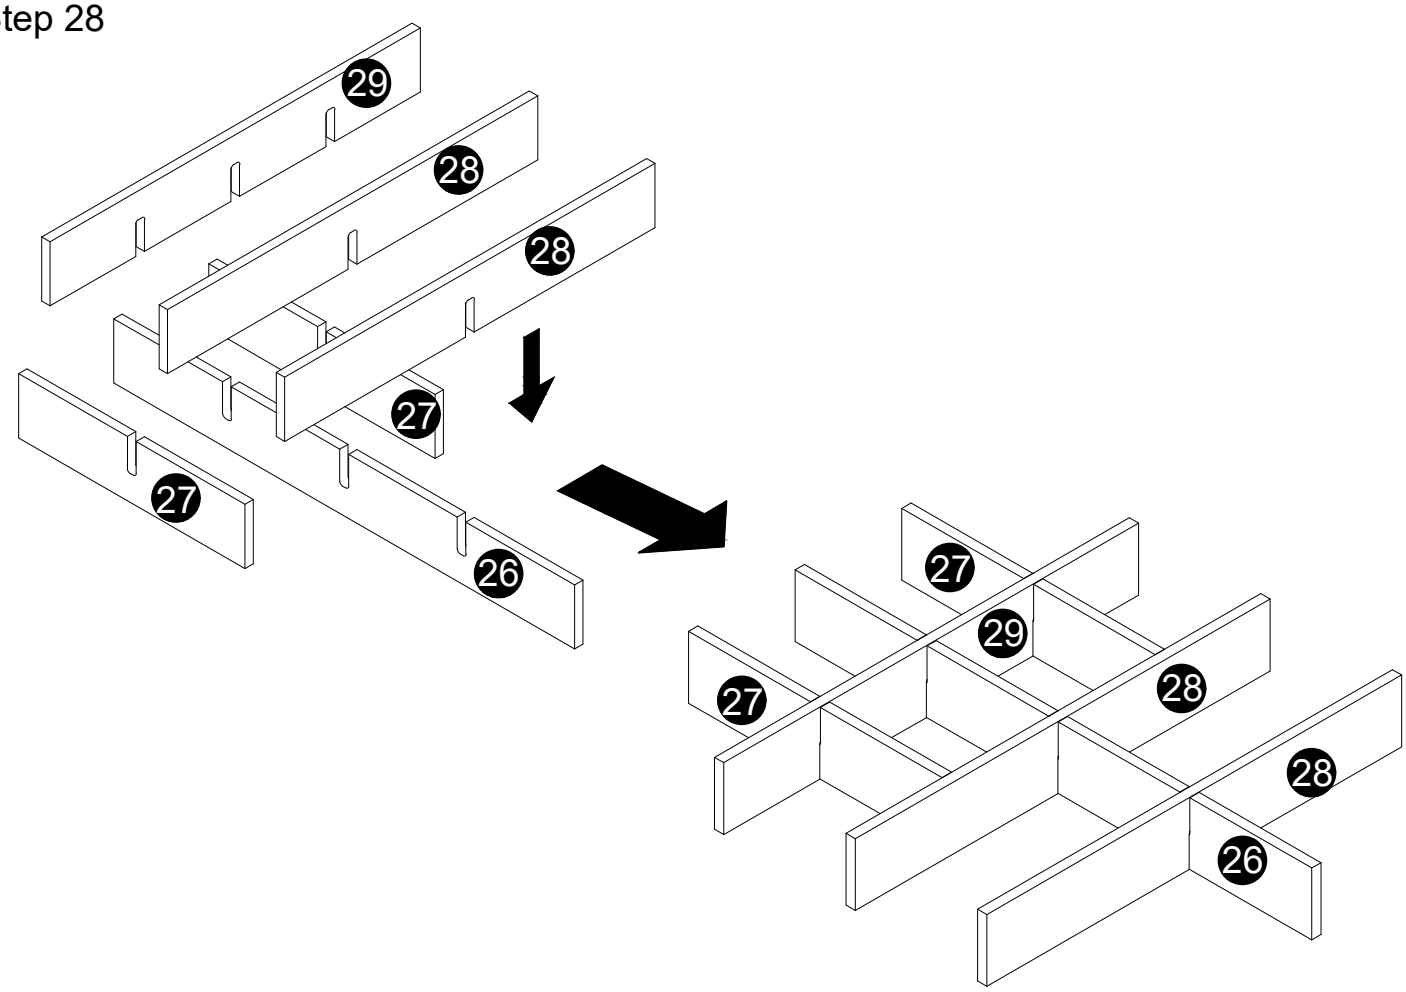



Step 29



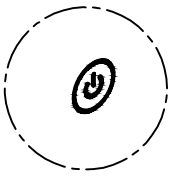



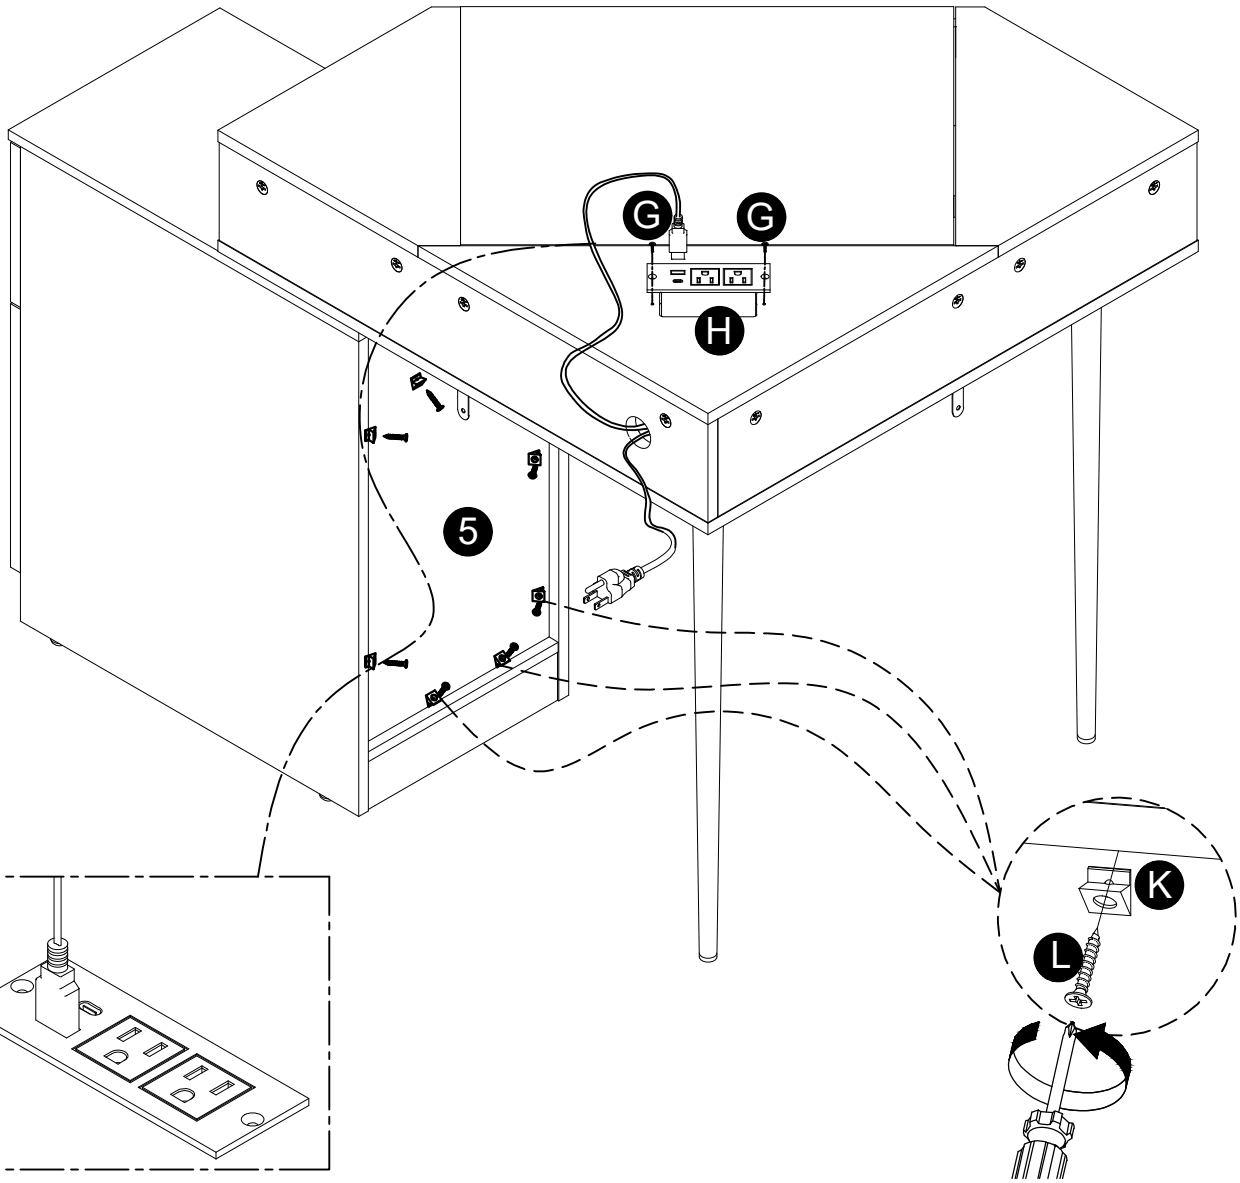
Touch-Control Switch
for Mirror Light


Step 30

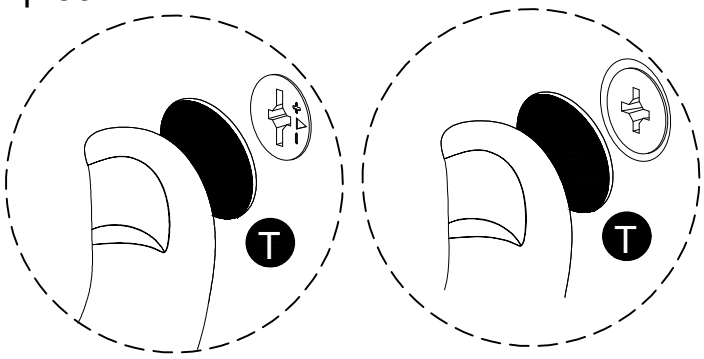



Use Perfect Sticker (T) to cover the Camlock's and Bolt holes on the all position we can see !

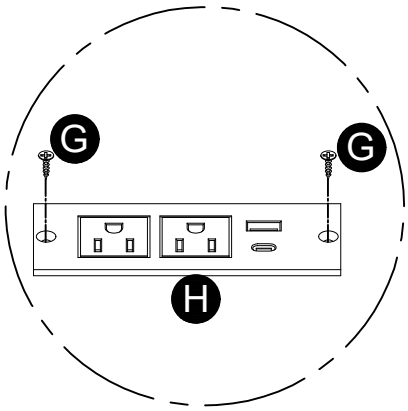



| K | x8 | L | x8 | H | x1 | G | x2 | T | 28 |
|---|---|---|---|---|---|---|---|---|---|
|  | |  | |  | |  | |  | |

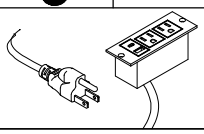Step 31

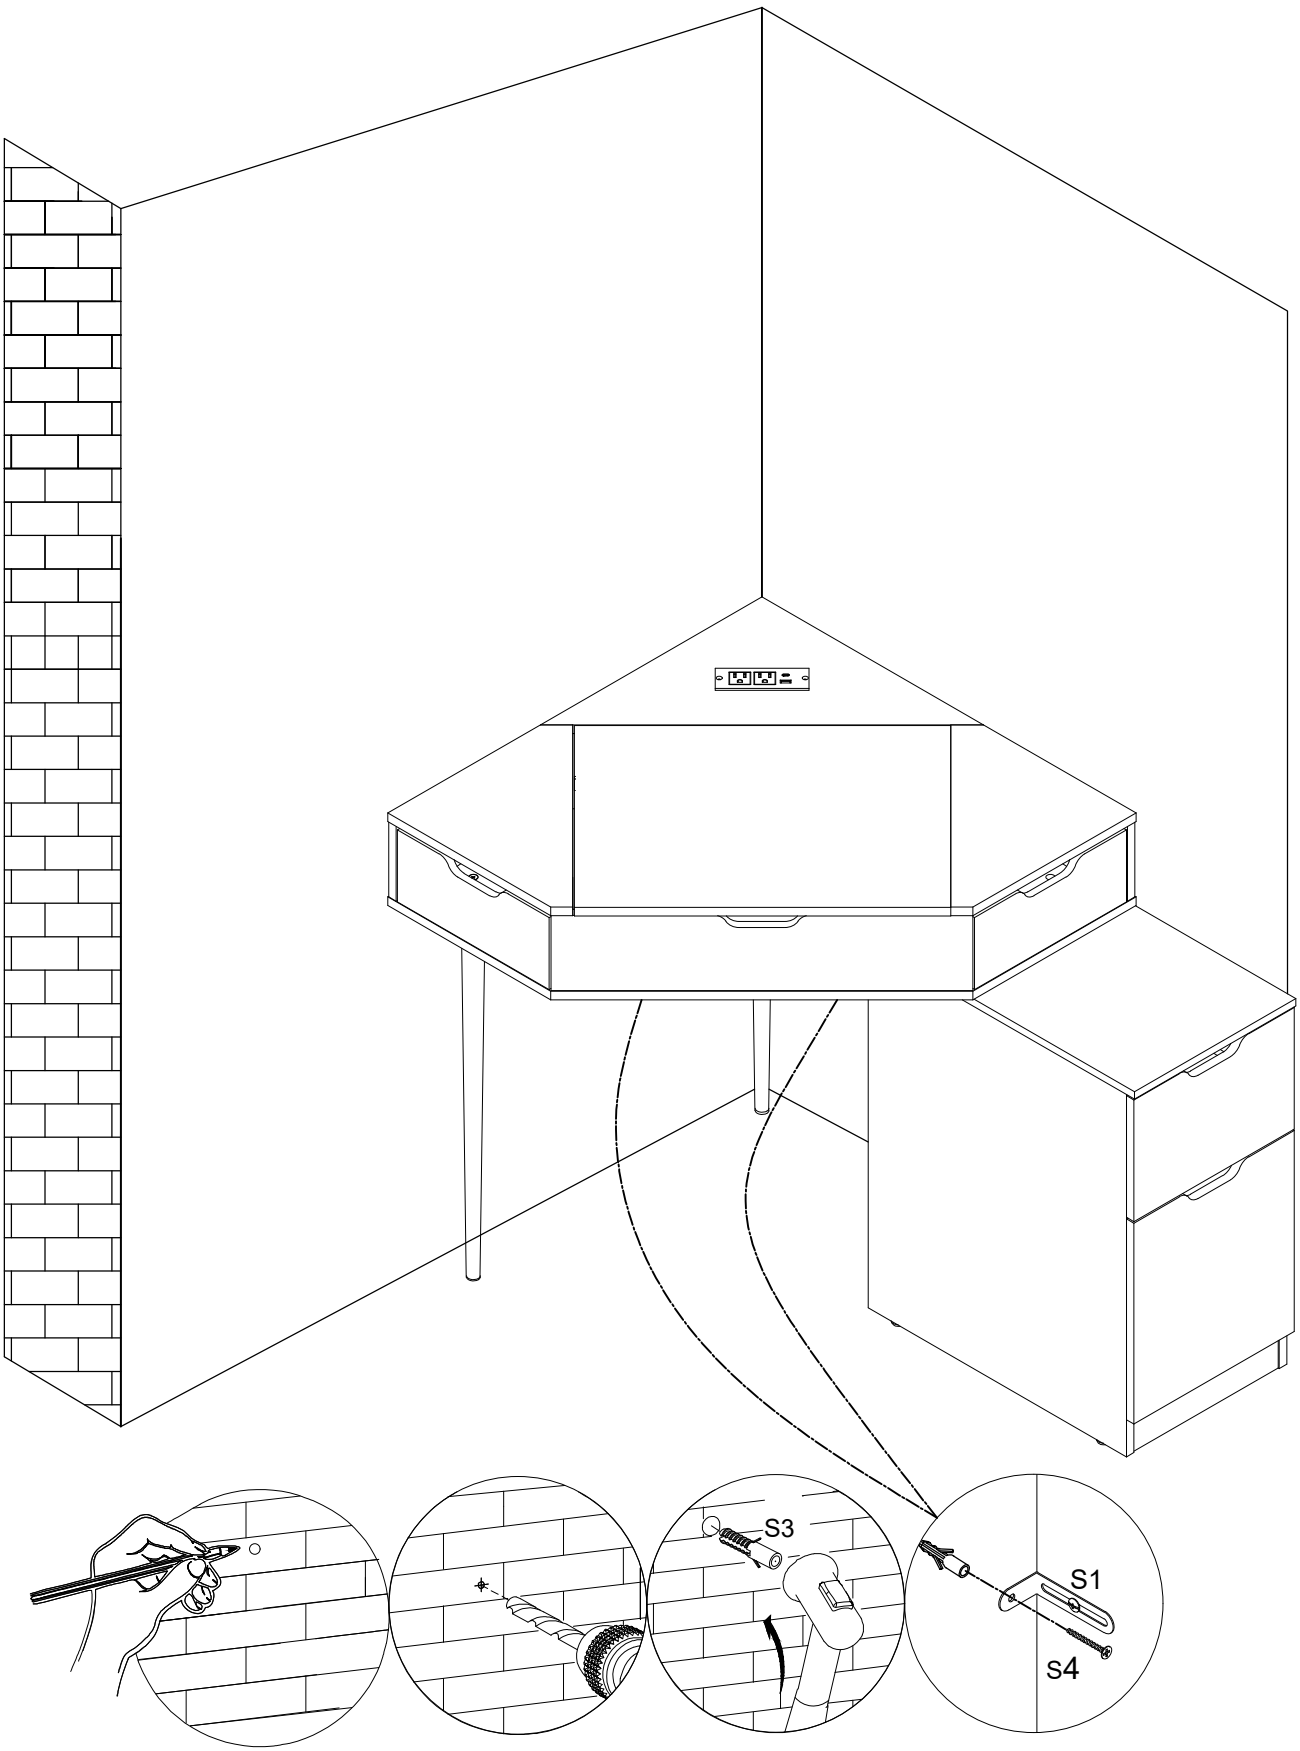



| S | x2 | S | x2 |
|---|---|---|---|
|  S3 Wall plug x 2 | |  S4 M4*35mm x 2 | |

# FINISH

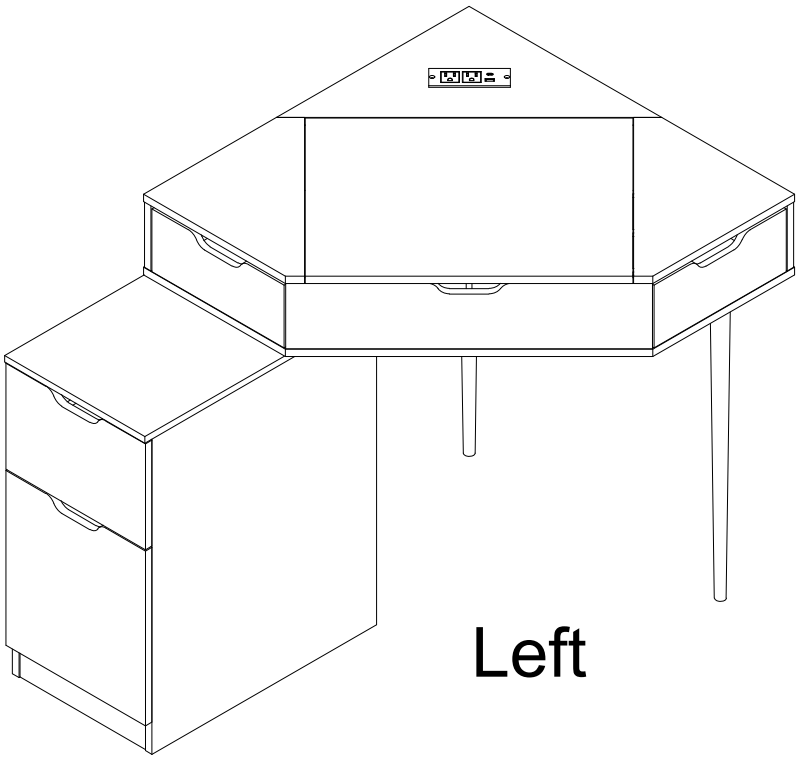

Left

Or

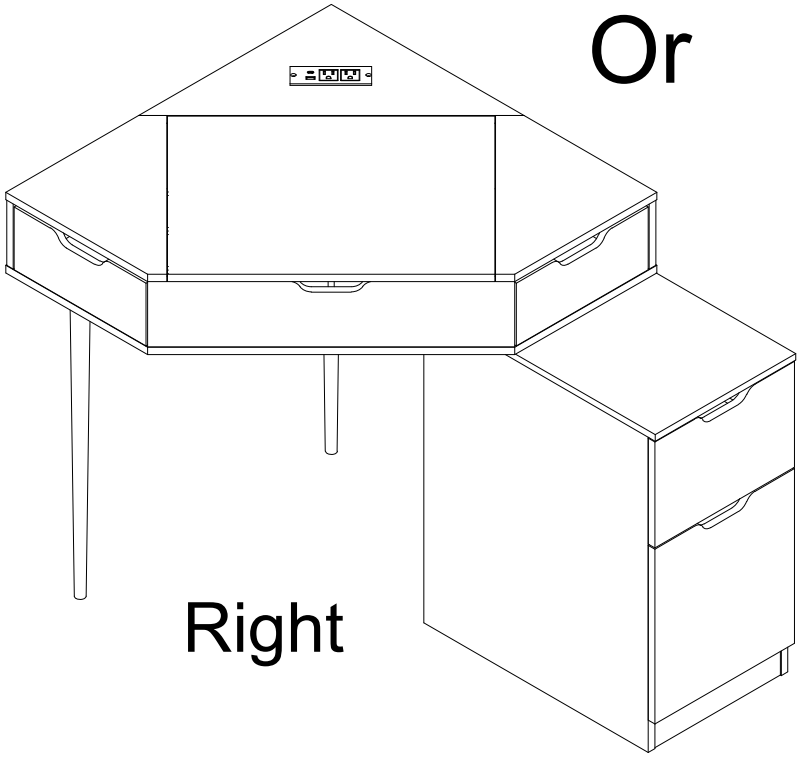

Right

Made in Viet Nam