

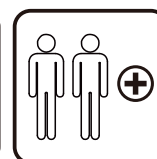
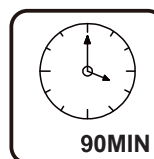
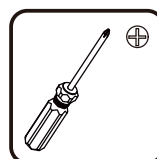


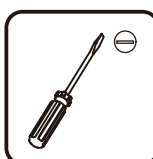


Please note: Items cannot be returned once assembled.


Installation & Assembly

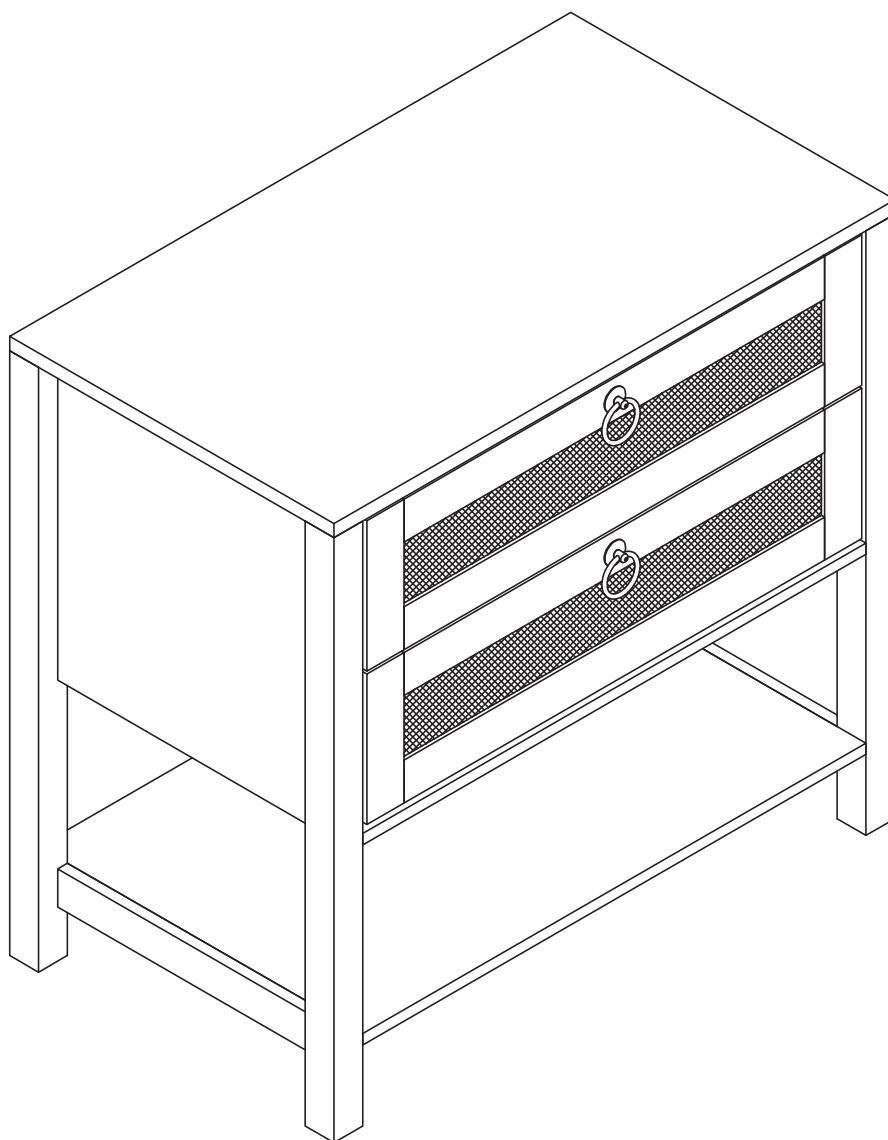


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

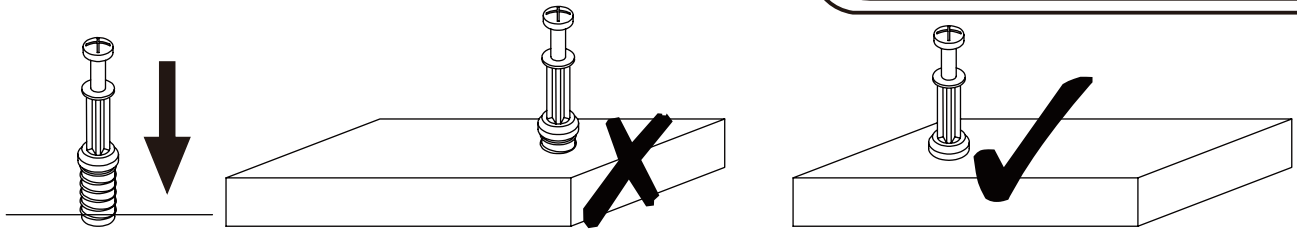


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

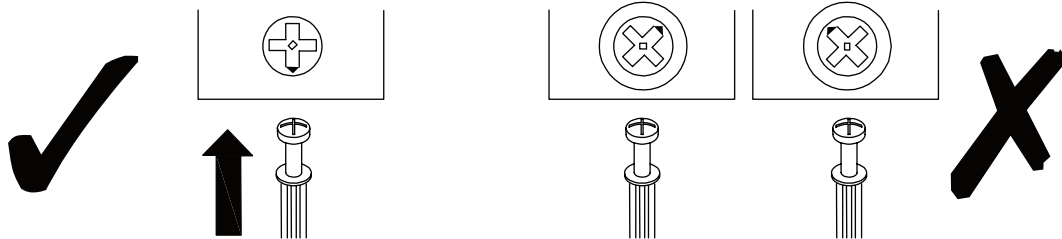

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.











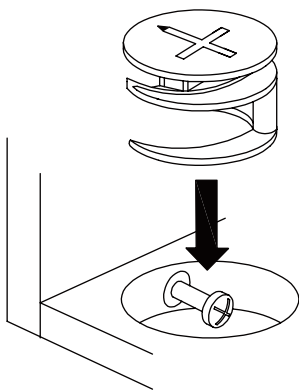


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.


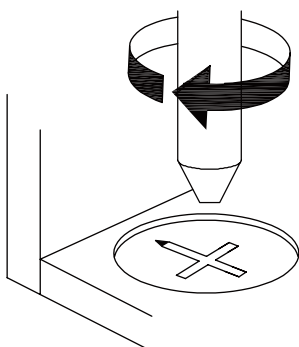


EN_Turn cam lock clockwise to tighten.

PACKING DELALS

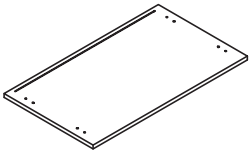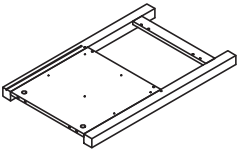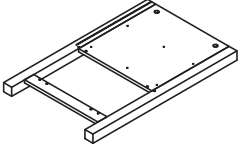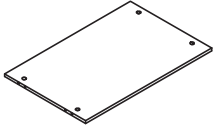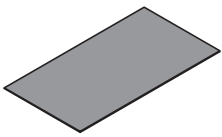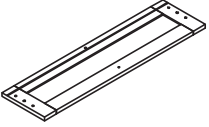NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x2	
⑨		x2	
⑩		x2	
⑪		x2	


[illegible]

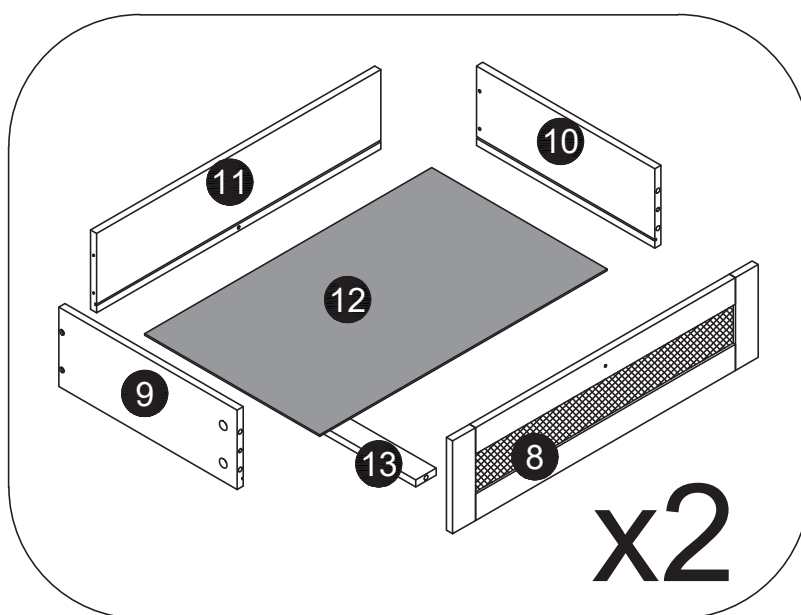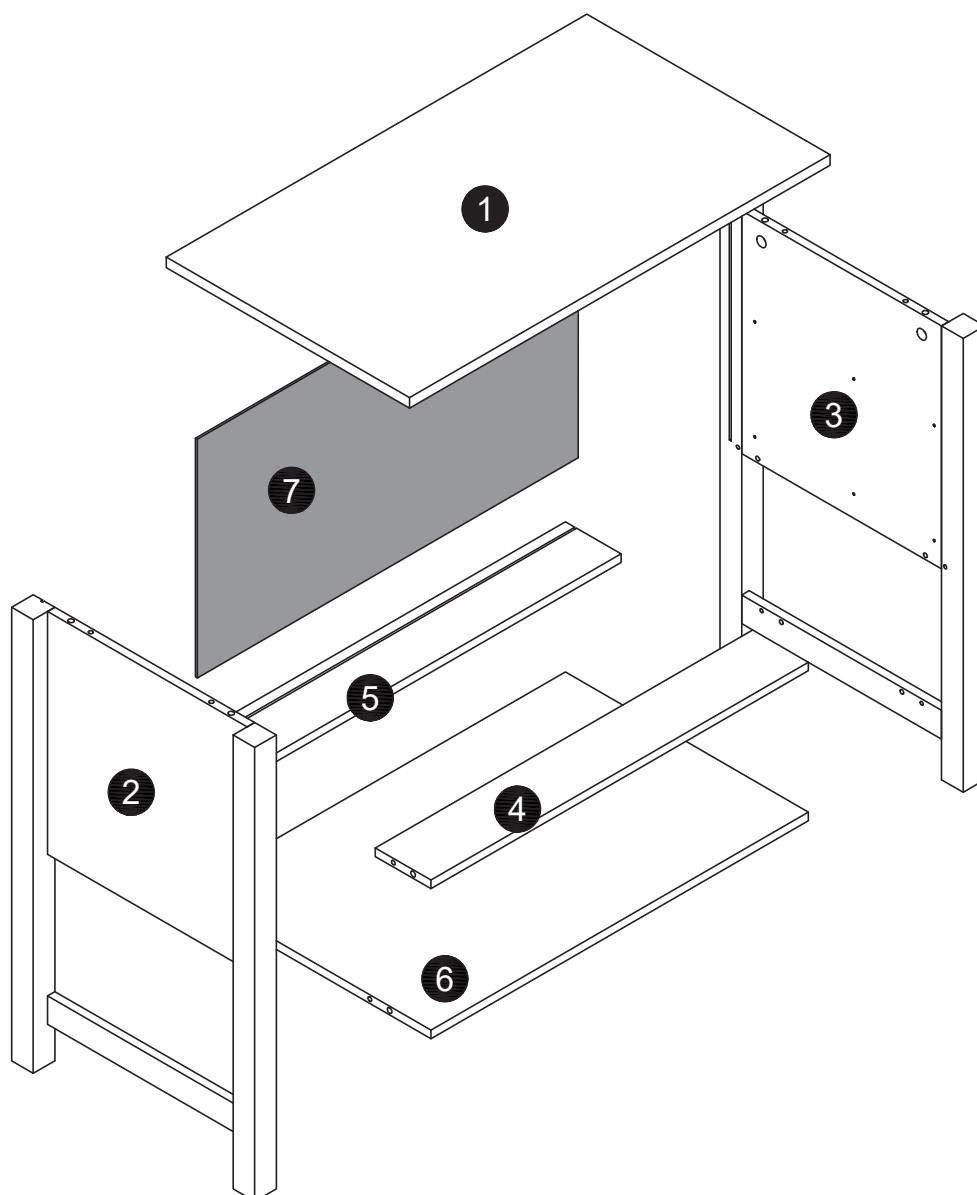

A x22 Ø6x35mm +2(spare)	B x22 Ø15x10mm +2(spare)	C x16 Ø6x30mm +1(spare)	D x12 Ø4x35mm +1(spare)	E x24 Ø3.5x12mm +2(spare)	F x2
G x2	H x4	I x2	J x4 Ø3x16mm +1(spare) J-1 J-2	K x2 Ø4x14mm K-1 K-2 K-3	
CL x2 L350mm	CR x2 L350mm	DL x2 L350mm	DR x2 L350mm		

A x10	B x10	C x4	D x10
--------------	--------------	-------------	--------------

01

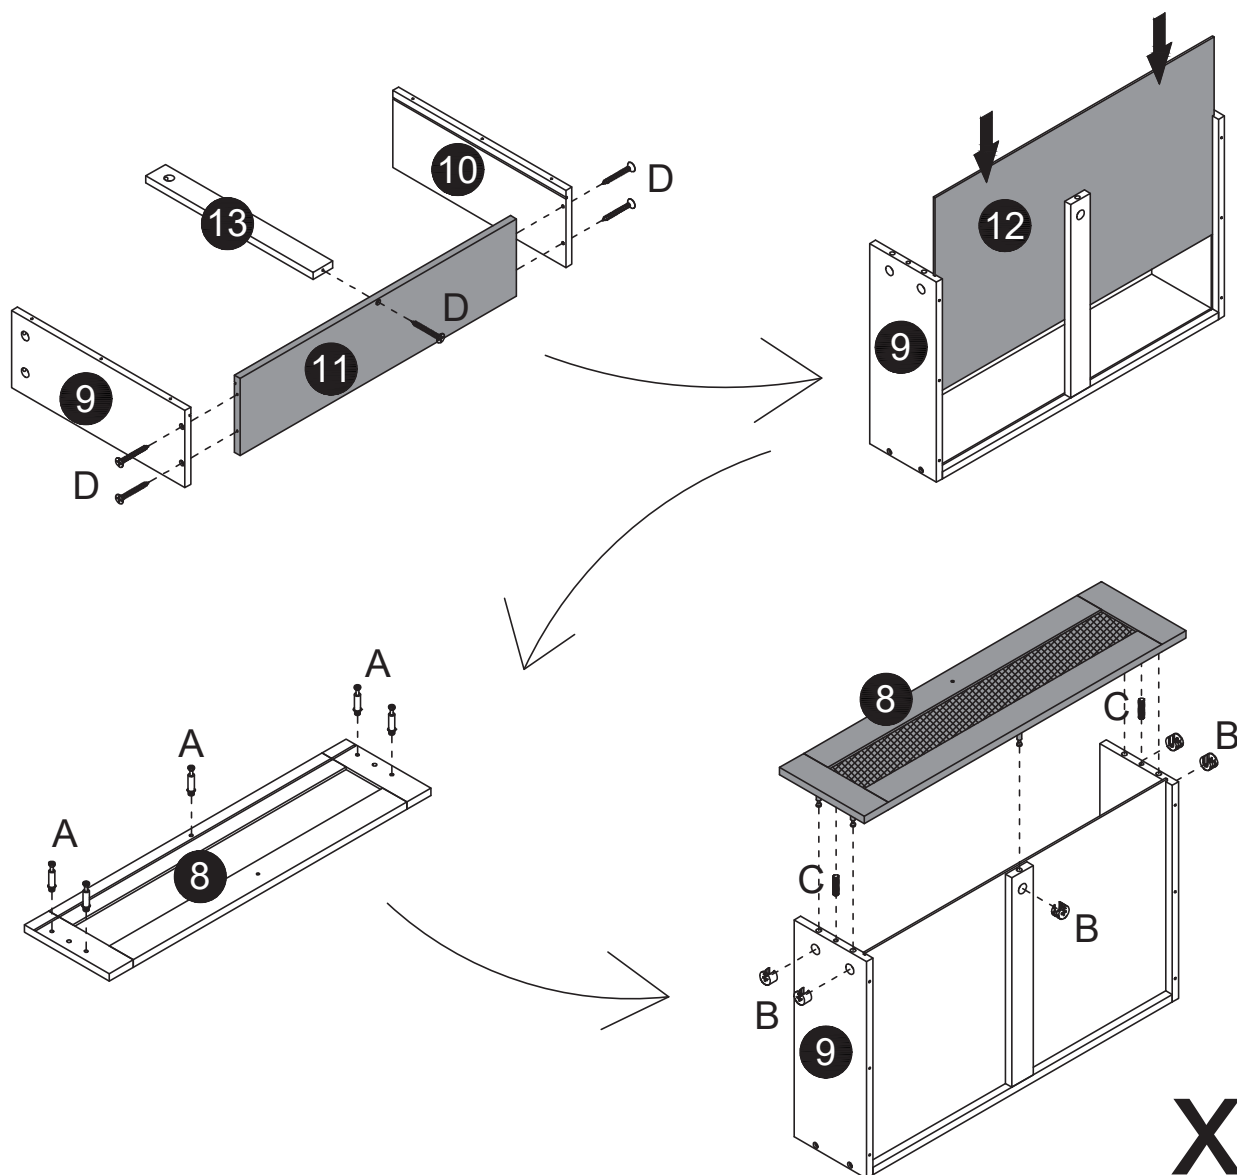

02



E x12



DL x2



DR x2

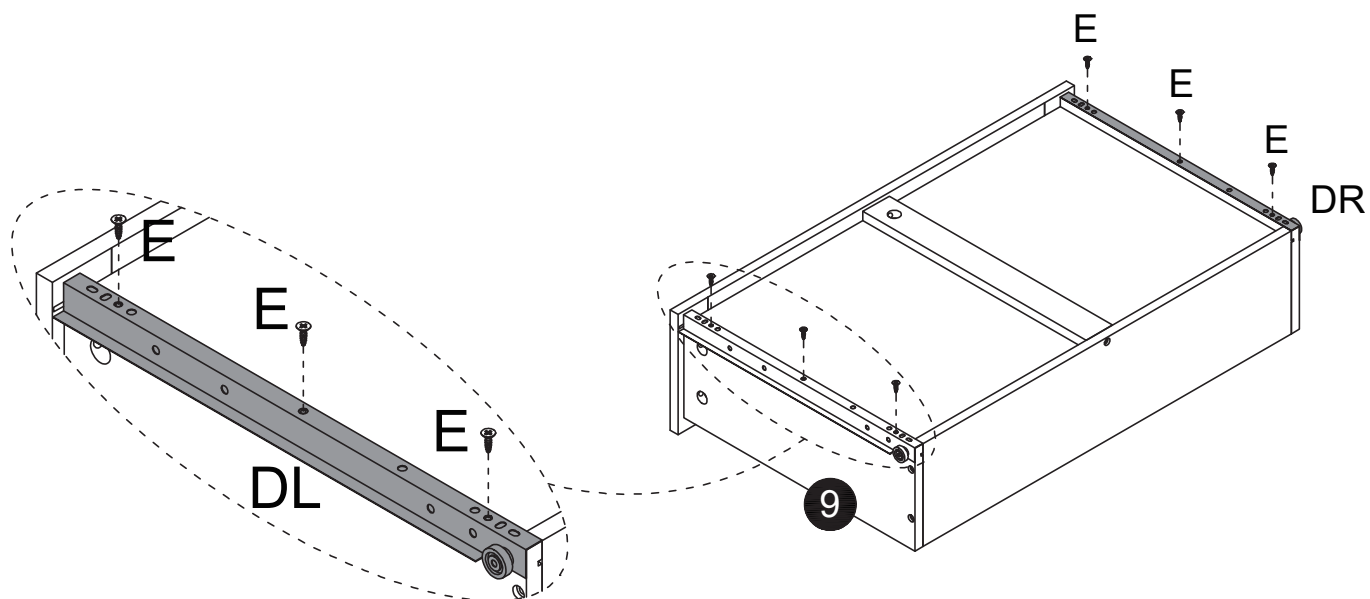


x2

03

F x2



G x2


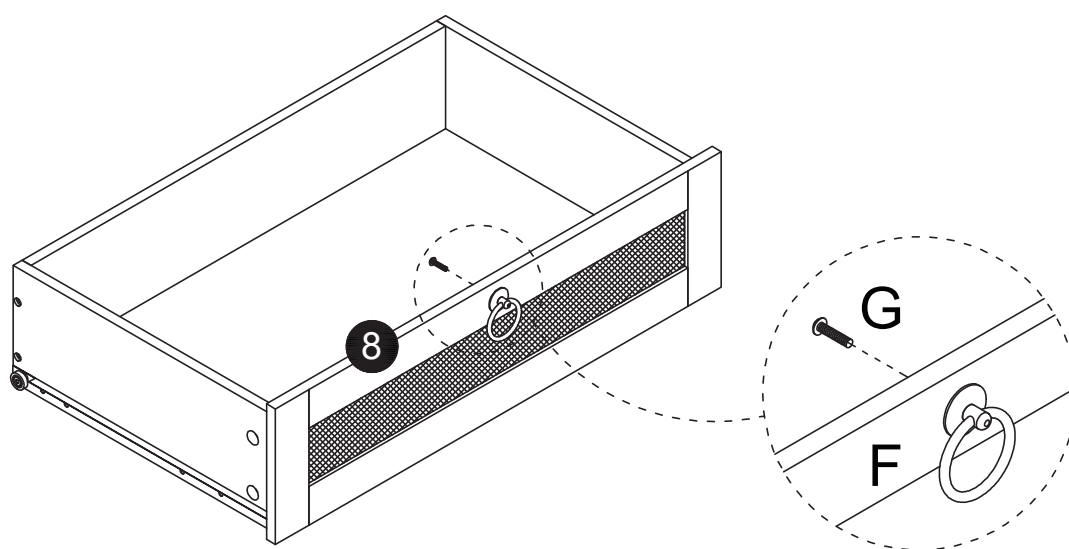


x2



E x12

CL x2

CR x2


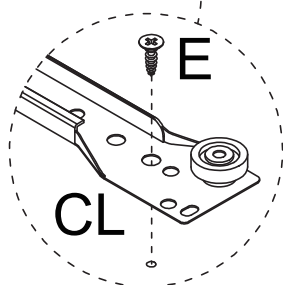
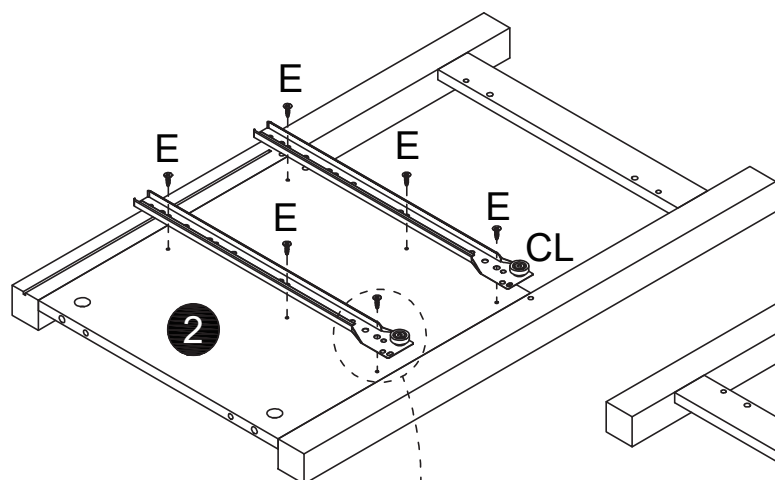


Second Hole

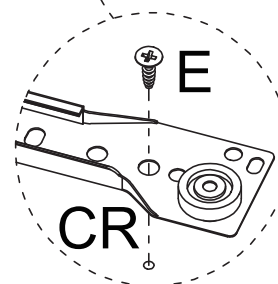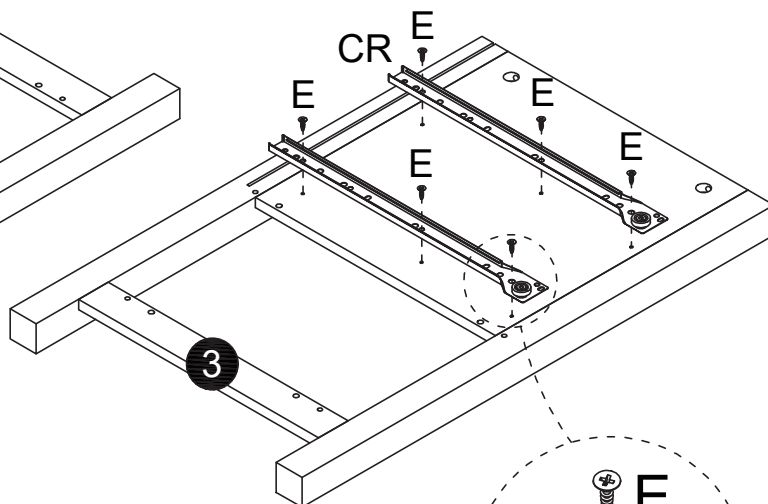


Second Hole

A x8

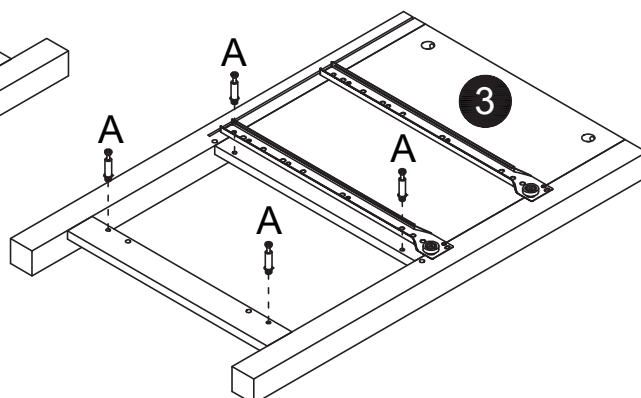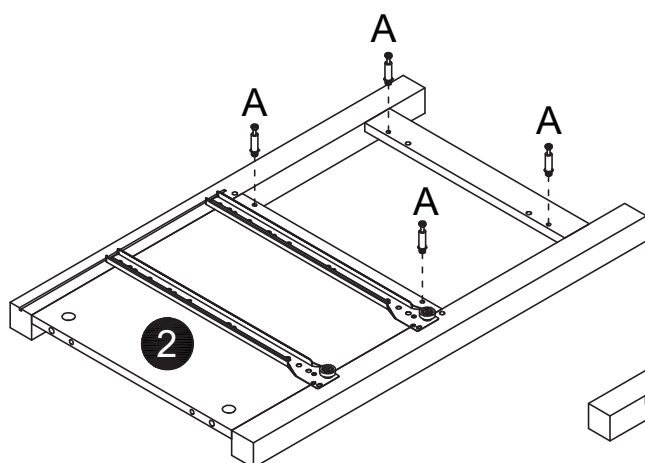


B x2

C x2

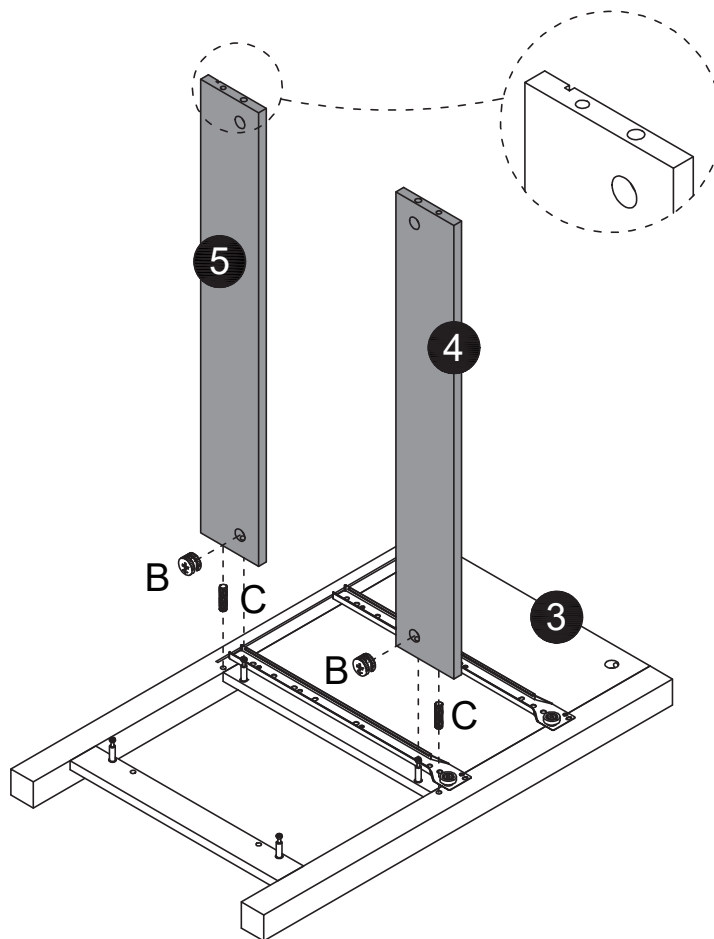

B x2


C x2

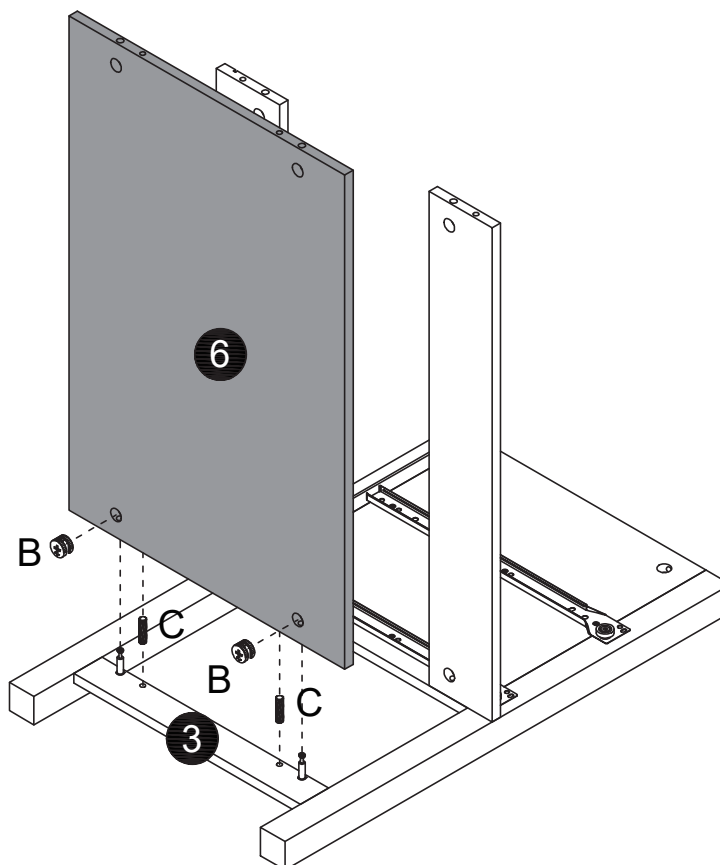



B x4




C x4


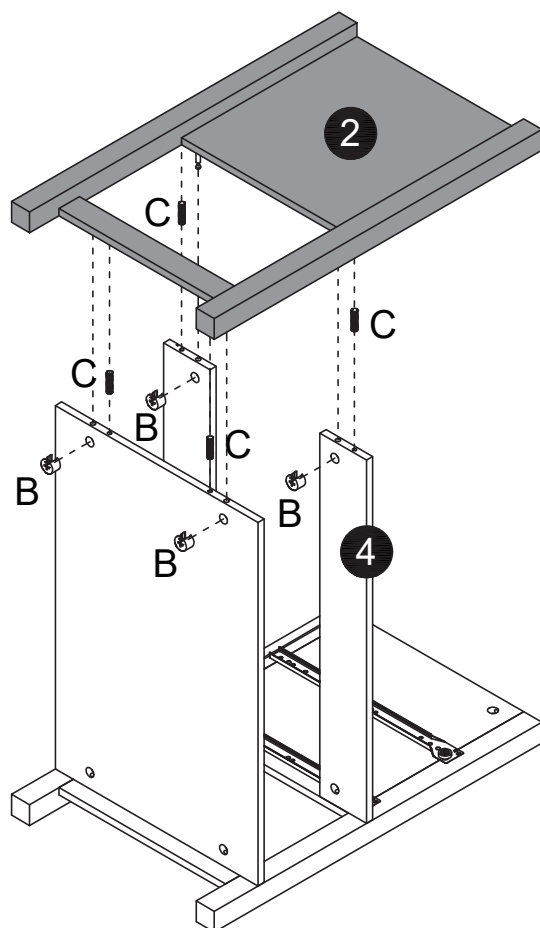


H x4

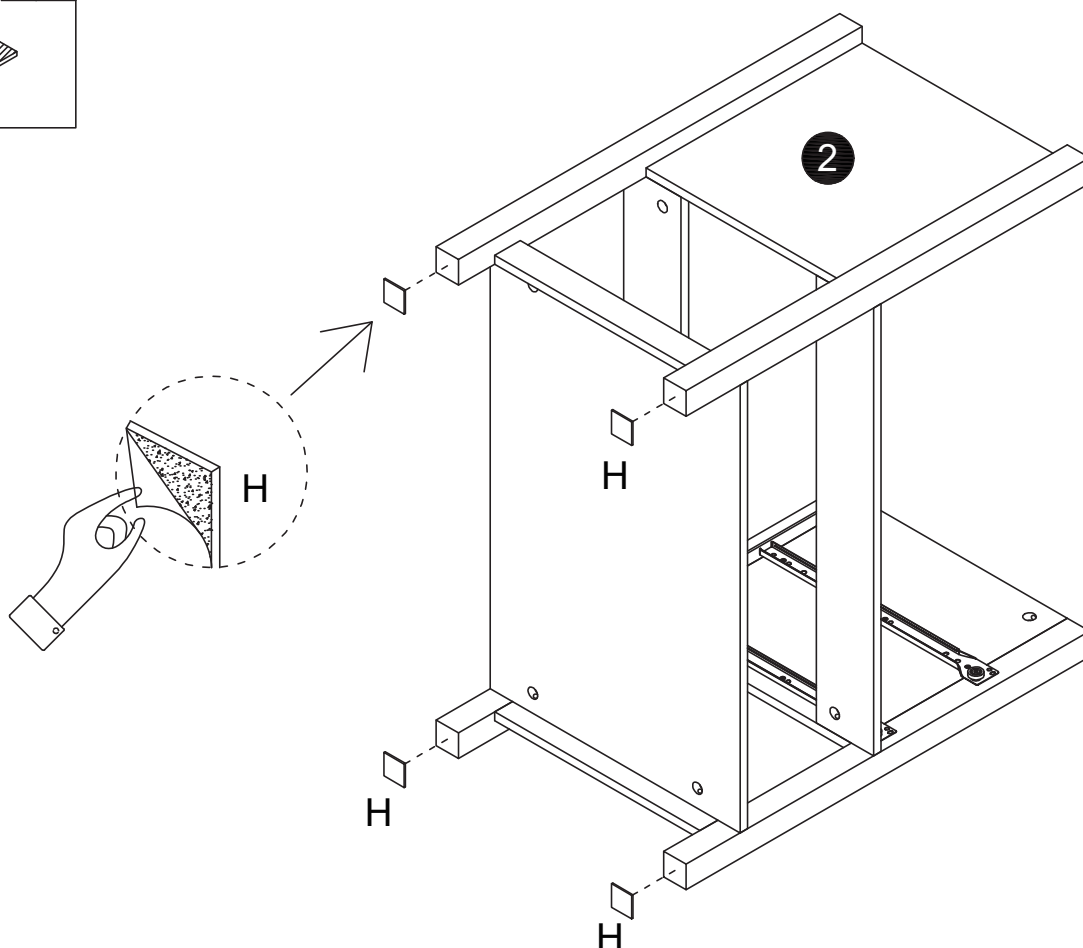

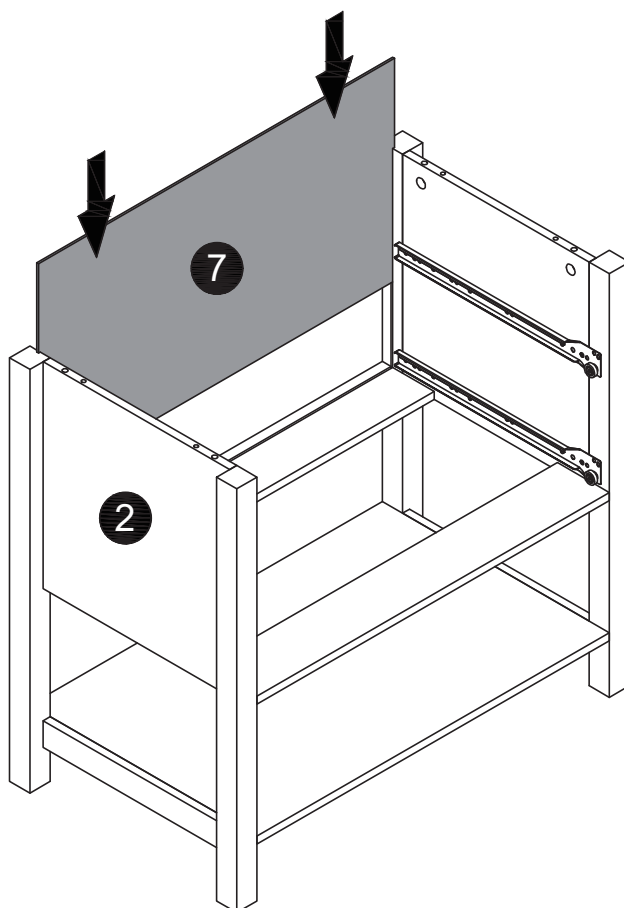


A x4

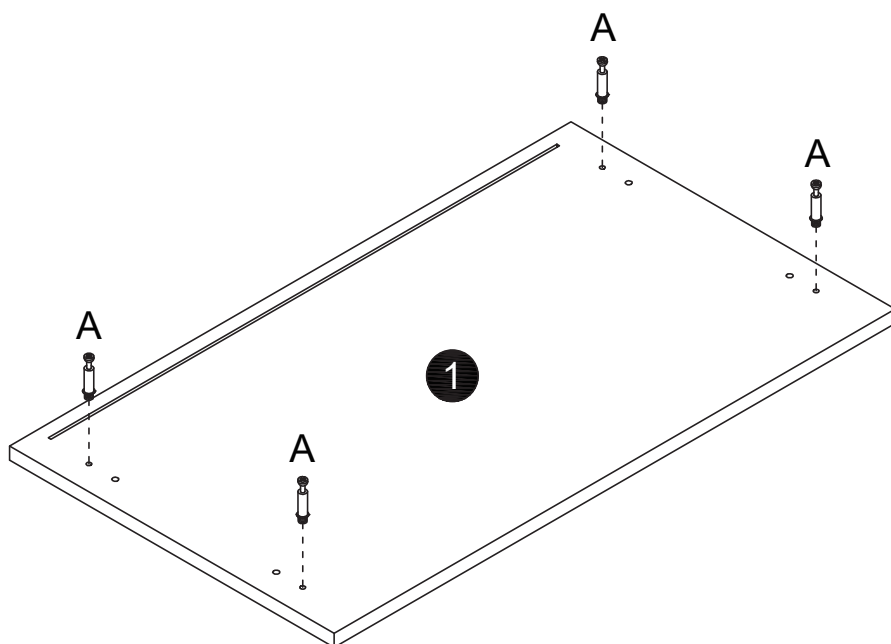

B x4



C x4

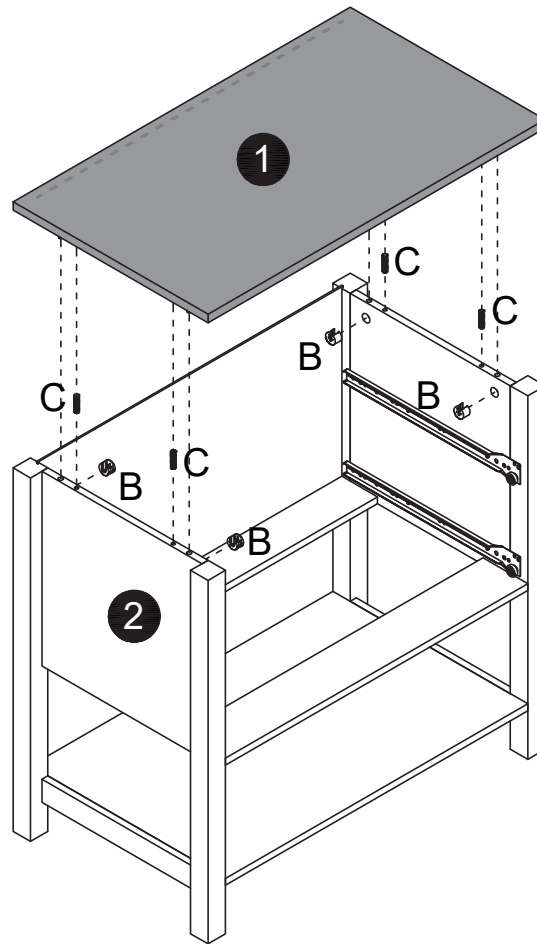




J x4





J-1




J-2

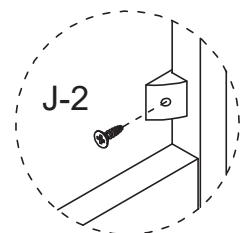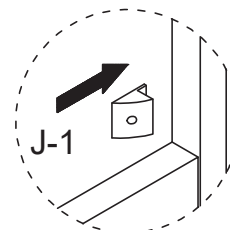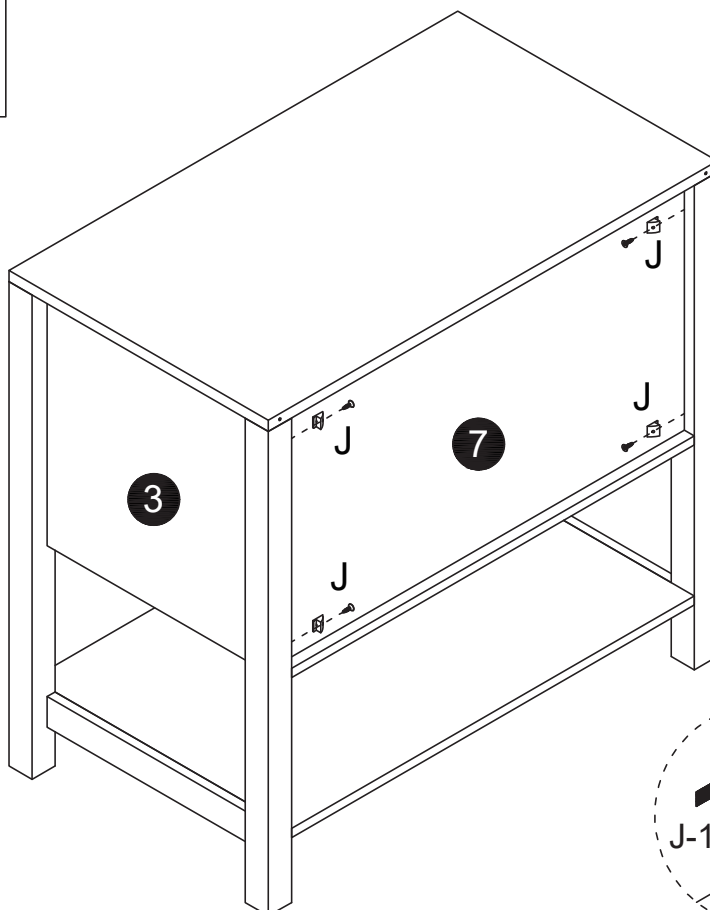


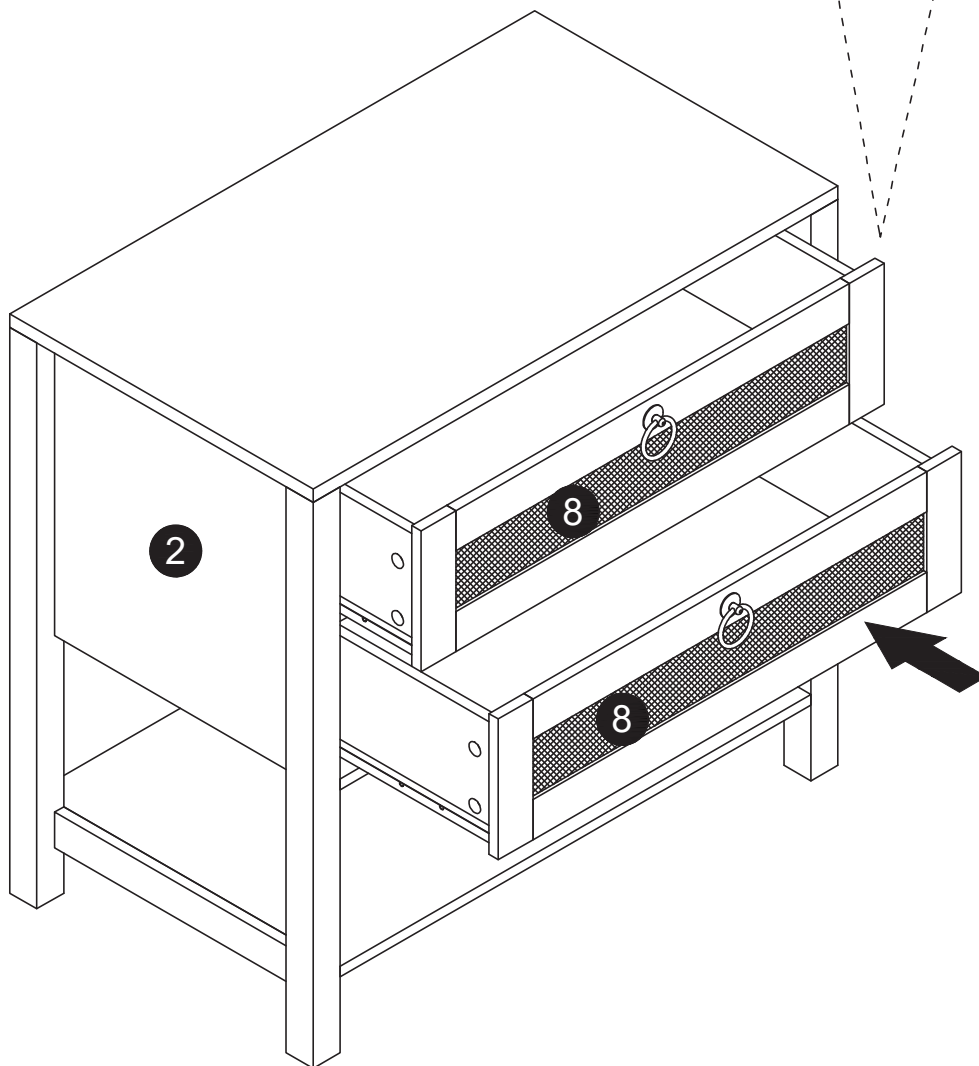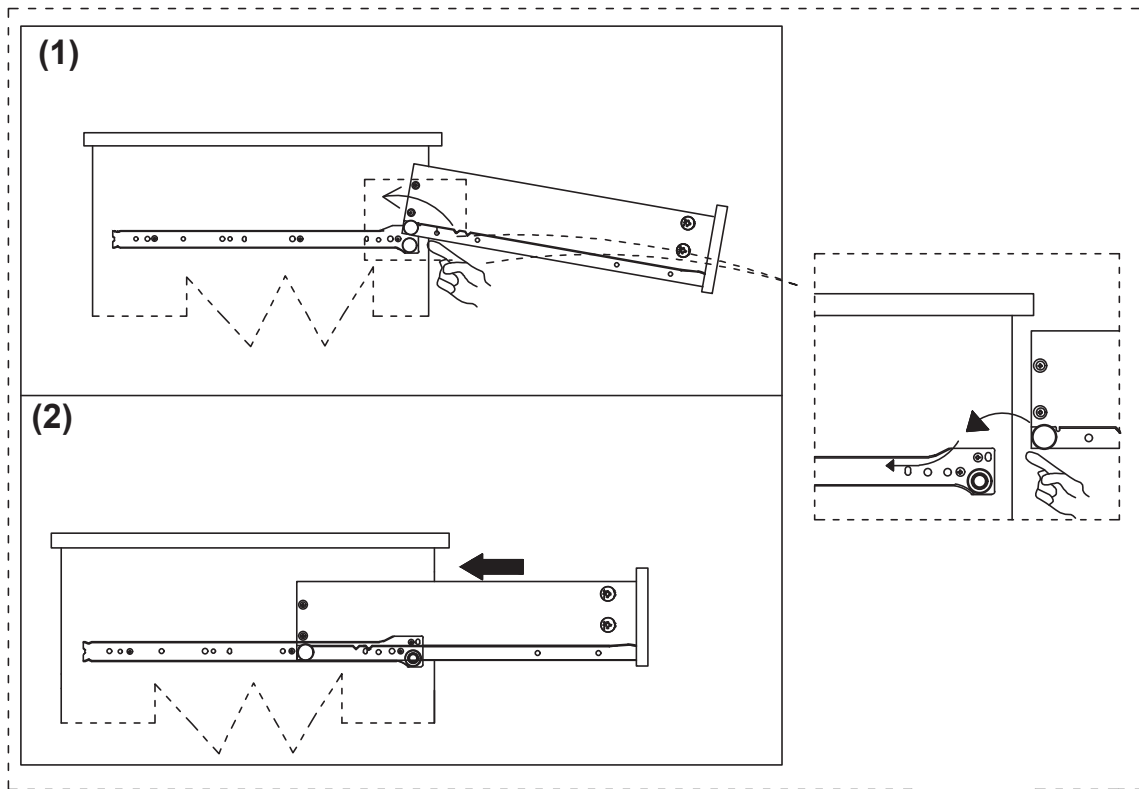


D x2



I x2




K x2




K-1

K-2


K-3

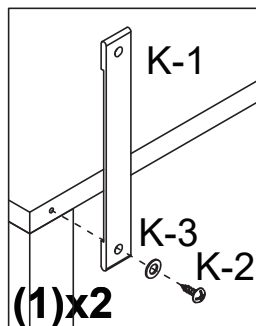


First fix the anti-rewind screw in the reserved hole of the product.

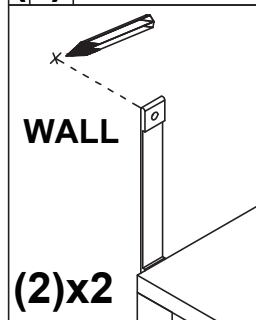


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

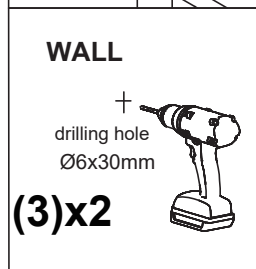

Then use a tape drill to make holes in the wall that are suitable for the product screws.

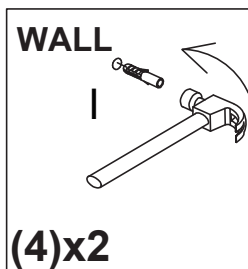

Then, put the expansion bolt into the hole

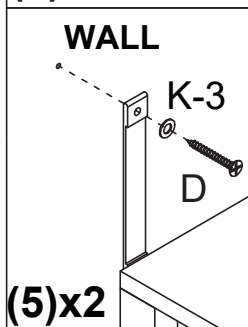

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

